



中文

ENGLISH

# 使用说明书

使用前请仔细阅读说明书，阅读完后  
请妥善保管以备需要时查阅。

中文 → 1-23页  
English → Page 24-53

VC23\*\*\*N\*\*\*  
VC33\*\*\*N\*\*\*  
VC33\*\*\*H\*\*\*

售后服务电话




MFL67892738


# 目 录

产品规格 .....	3
使用前注意事项 .....	4-6
吸尘器的组装与吸力调节 .....	7-8
部品名称和连接方法	
附件	
各种附件刷头的使用及清洁方法 .....	9
注：以下附件根据您所购买的型号会有所不同	
毛刷、尖吸嘴、鸭嘴的使用	
角落刷头使用及清洁方法	
各型号吸尘器刷头配置表格 .....	10
震动刷头使用方法与清洗方法 .....	11-12
抹布/抹布刷头的使用方法 .....	13-14
地板刷头的使用方法 .....	15
地板地毯刷头的使用方法 .....	16
集尘桶/电机保护过滤海绵的拆卸、清洗及安装方法 .....	17
排气过滤器的拆卸 / 清洁 / 安装方法 .....	18
拆卸方法	
清洗方法	
安装方法	
故障通告前需确认事项 .....	19-21
故障通告前请先确认	
装箱单 .....	22-23


## 产品规格

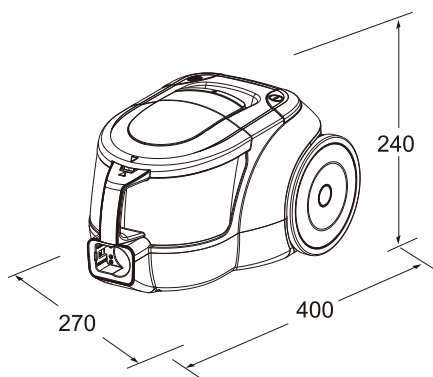

型号: VC23\*\*\*N\*\*\*

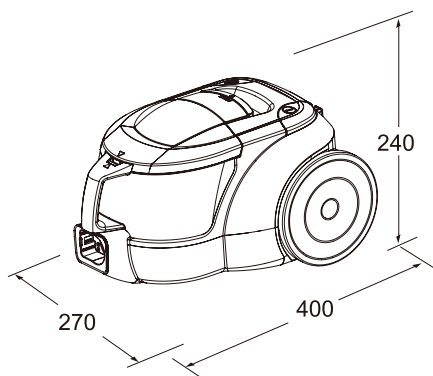

型号: VC33\*\*\*N\*\*\*

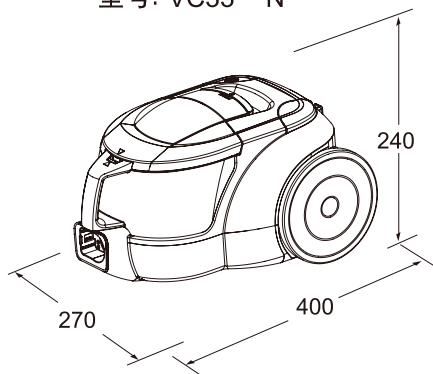

型号: VC33\*\*\*H\*\*\*

额定电压: 220V~ 50Hz

额定功率: 1400W

最大功率: 1600W

净重: 4.7Kg

集尘容量: 1.2L

外形尺寸: 270mmX400mmX240mm

本产品执行标准: GB4706.1-2005

GB4706.7-2004

GB17625.1-2003




GB4343.1-2009

※ 为了提高产品质量而进行的外观及设计规格上的变更将不再另行通知。

## 使用前注意事项

### 使用前注意事项

忽视说明而导致的错误操作将会对您造成不同程度的损害，请认真阅读以下提示说明。


-  **危险** 此标识表明违反标记事项时，会立刻发生严重伤害或死亡现象。
-  **警告** 此标识表明违反标记事项时，有可能发生严重伤害或死亡现象。
-  **注意** 此标识表明违反此标记事项时，有可能发生财产损失或轻微伤害。

#### 危险

请不要在易燃液体附近使用吸尘器，以免发生火灾。




插拔电源插头时，请先关闭电源开关，以免发生火灾或触电的危险。请不要用湿手触摸电源插头，以防触电。（不要在220V以外的电源上使用产品）

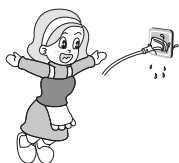


#### 警告

请不要让大头钉等金属物存留在软管、机体延长管内，否则会造成短路故障。

请不要吸入头发团、大纸团等物品，否则容易堵塞软管，如有堵管现象，请及时清理。

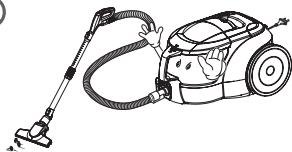

为避免发生火灾或触电的危险，在清扫时，注意不要让机体吸入液体、刀片、火种以及水泥、石膏粉等小微粒。

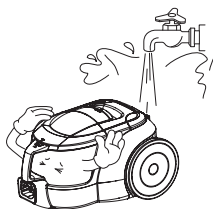


## 使用前注意事项

### 使用前注意事项




警告

15A以上的电流请单独使用插线板，在一个插线板上同时使用多种电器可能会引发火灾。建议不要使用电源线延长线，以免引起不必要的危险。

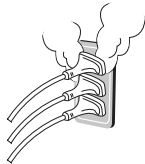


请不要让电源线与吸尘器接近电暖器等热源，以免使机体变形或发生火灾。请您不要使用破损的电源和插头，如有破损，必须由指定维修站更换。

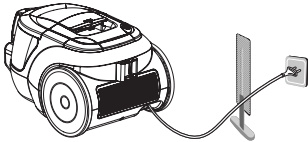


请不要让儿童把吸尘器及组件，如延长管等当做玩具，以防止意外。




长时间不使用电器时，请记住拔掉电源插头；正处于通电时，请您不要离开。

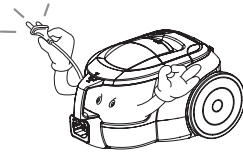

请不要在吸入口和排气口堵塞时，继续长时间运作，否则可能造成机体变形或损坏。

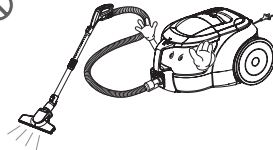


使用过程中，延长管和机体会产生静电的可能，请您使用时注意。

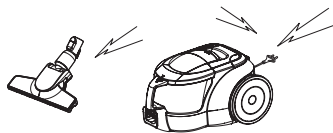


## 使用前注意事项

### ⚠ 注意


非专业维修人员请勿开机修理。

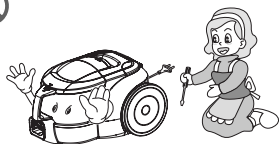


请不要弯曲、践踏、拉拽软管，如软管受损，请不要继续使用。请不要用重物或尖刃物压线。

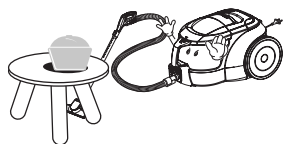


注意不要使电源线夹在门缝里或用电源线提拉吸尘器，防止电源线受损。

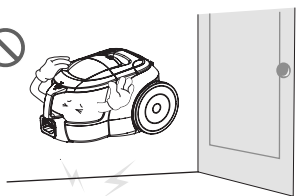


集尘筒集满时，请您正确开启集尘筒清理。请您注意不要在没安装集尘筒或过滤网时使用吸尘器。

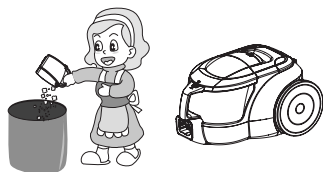

收卷电线时，请拿住电源插头后再按动卷线器按钮。请不要将电源线拉至红色警告线以外，否则可能损坏电源线或不能回卷。收线时请注意插头，以免损坏周围物品。

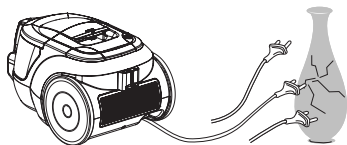


请您注意保护自身安全，使身体各部位远离吸尘器吸口或活动部位。

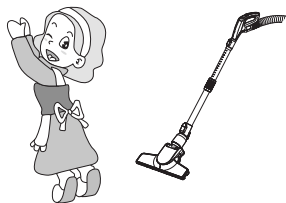


## 吸尘器的组装与吸力调节 (适用VC33\*\*\*H\*\*\*型号)

### 部品名称和连接方法

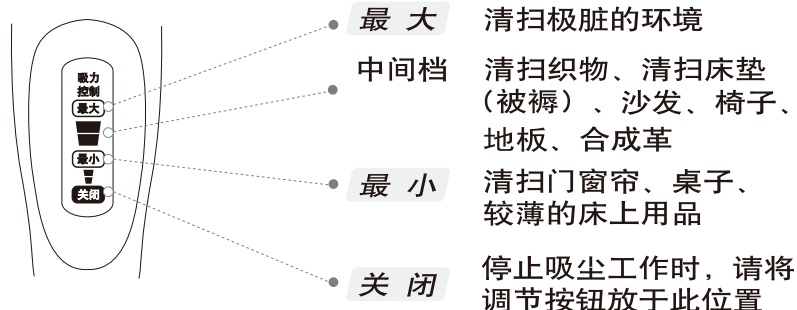

在不同环境下吸尘时, 请按实际需要调节吸力。  
根据地面情况和吸入量可以自主调节吸力。

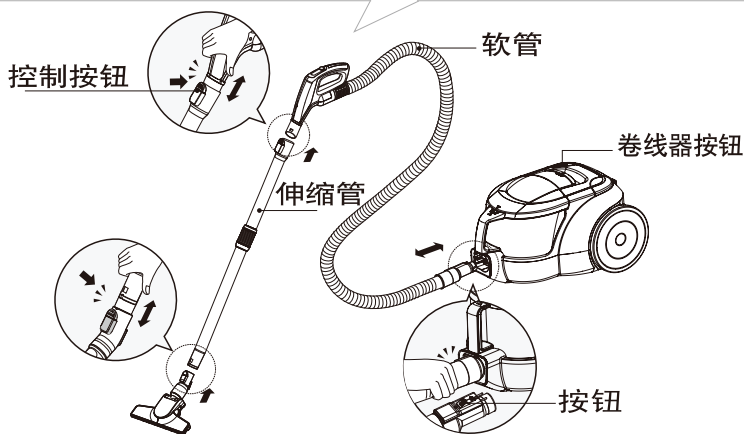


注: 以下附件根据您所购买的型号会有所不同

附件					

# 吸尘器的组装及吸力调节 (适用VC23\*\*\*N\*\*\*、VC33\*\*\*N\*\*\*型号)

## 部品名称和连接方法

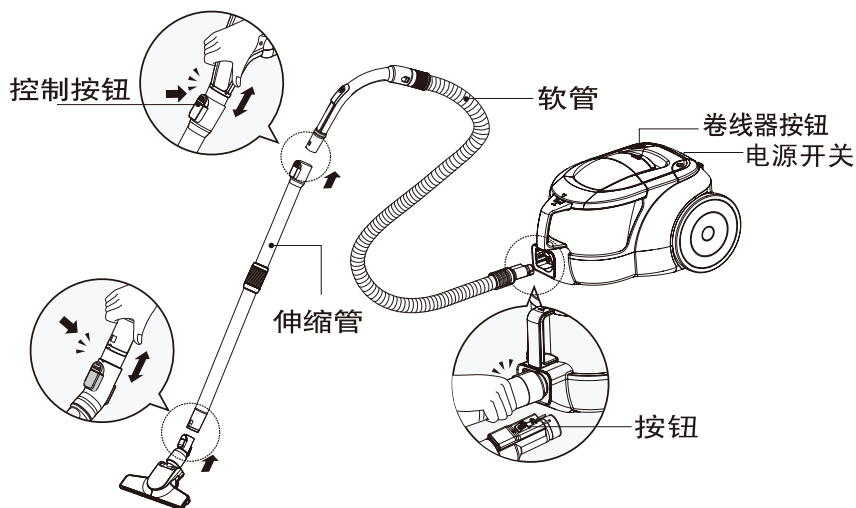

注：以下附件根据您所购买的型号会有所不同

附件					

## 吸力调节

请按图示使用



软管手柄处有一个手动的气流控制扭，使您可以简单方便的调节吸力大小。




## 各种附件刷头的使用及清洁方法

### 毛刷、尖吸嘴、鸭嘴的使用

- ▶ 打开附件袋，取出附件。

请按图示使用

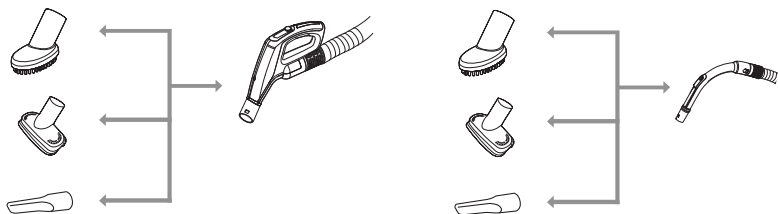

- ▶ 毛刷用于吸扫画框、家具边沿、书籍和其它不规则的表面。
- ▶ 鸭嘴是用来对饰物、床垫等物品进行吸除的。
- ▶ 尖吸嘴可以用来清理房间角落等不易清理到的地方。


使用方法



### 角落刷头的使用


组合

- ▶ 角落刷头可以清洁普通地面，也可以折叠成直角来清洁墙角。

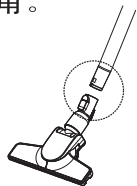


使用

- ▶ 不用再为清扫角落和窄小空间发愁，角落刷头会给您带来更多便利。

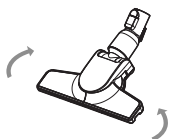





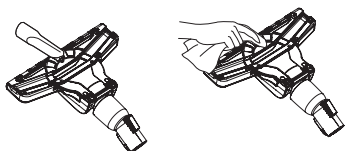



清洁

- ① 用尖吸嘴清洁
- ② 用棉质抹布擦拭



各型号吸尘器刷头配置表格


VC2316GNT	鸭嘴	毛刷	尖吸嘴
			
	角落刷头		
			
VC3316GNT	鸭嘴	毛刷	尖吸嘴
			
	角落刷头	地毯/地板刷头	
			
VC2316GNTMY VC3316GHTMY	鸭嘴	毛刷	尖吸嘴
			
	角落刷头	震动刷头	抹布刷头
			
VC3316GHTQY	鸭嘴	毛刷	尖吸嘴
			
	角落刷头	震动刷头	地板刷头
			
VC3316GHTY	鸭嘴	毛刷	尖吸嘴
			
	角落刷头	震动刷头	
			

# 震动刷头使用方法与清洗方法

## 震动刷头使用方法


请按图示使用

组合

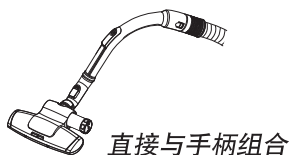


最佳效果清扫方法

• 床、床褥、厚棉被

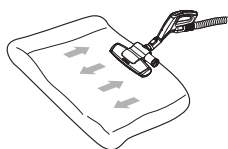

• 薄被、毛毯

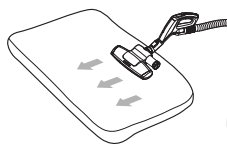

清扫薄被时，下面垫一个厚被，效果更理想！

- 若震动拍不运作，可轻轻向地面敲打刷头后再使用。
- 如还不震动，检查一下振动拍是否被棉絮卡住或需要调大吸力。
- 集尘筒集满灰尘或吸力减小，震动幅度相应减小时，应注意及时清理滤芯。

## 震动刷头清洗方法

▶ 用水清洗吸入口，有可能导致振动器故障。



 
❶ 清洁过程中，向左旋转集尘瓶外侧旋钮，可以进行清洁。（可彻底清除灰尘）



❷ 清洁结束后集尘瓶内灰尘较多时，握住集尘瓶向逆时针方向转动拆卸。




❸ 倒掉集尘瓶内的灰尘。



❹ 握住集尘瓶，对准凸起部，按顺时针方向转动安装。

## 震动刷头使用方法与清洗方法

### 震动刷头清洗方法

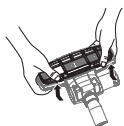


- 5 按下吸入口背面的按钮,卸下底板。



- 6 用抹布擦拭吸入口的污染面。



- 7 用水冲洗卸下的底板后,置于阴凉处晾干。

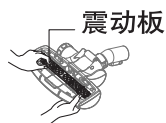

- 8 整齐地放置底板的振动板的振动板。



- 9 将突起部插入凹槽部内。




- 10 向下按,确保底板安装正确。

## 抹布 / 抹布刷头的使用方法

### 抹布的使用方法

- ▶ 使用抹布时, 请拧干抹布。
- ▶ 请使用LG专用抹布。
- ▶ 请把抹布的白色表面朝上, 安装在吸嘴上使用。
- ▶ 用洗衣机甩干抹布时, 请用最低档。
- ▶ 不放抹布使用刷头时, 抹布板正反两面均可安装后使用, 安装方法详见右图。

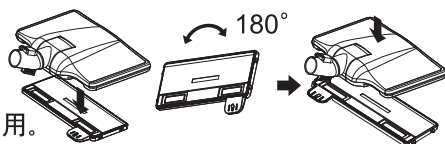

- 注意:**
- 使用抹布刷头时, 若不拧干抹布, 可能因为通电而导致机体损伤。
  - 抹布脱离了粘贴部, 则无法固定。
  - 安装抹布时, 请注意不要堵住吸入口。


### 抹布刷头的使用方法

- ▶ 请根据清扫用途, 结合/分离抹布。

#### 结合方法

1. 在抹布板上将抹布包裹后进行粘贴。


\*抹布粘贴时白色尼龙粘扣和抹布板尼龙粘扣正确粘贴才能固定住。

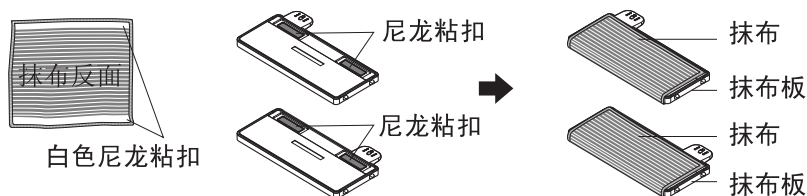


\* 正反两方向都可进行组装

2. 刷头和抹布板放置吻合后, 按压刷头上部。

\*听到咔嚓声响后抹布板与刷头完全结合。

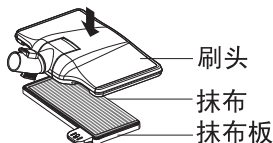

3. 清扫过程中, 抹布有一面变脏时按压抹布板的脚踏板可以使抹布与抹布板分离, 将抹布反面与抹布板结合后可以继续使用。

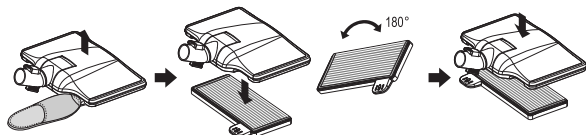


## 抹布 / 抹布刷头的使用方法

### 抹布刷头的使用方法


#### 分离方法

1. 清扫后按压抹布板的脚踏板使抹布与抹布板分离。  
分离后可以取用过的抹布。

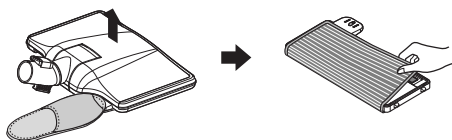

#### 清理方法

1. 清扫结束后，刷头吸入口上有纸屑或牙签等异物堵塞时请将刷头上的透明盖取下后进行清理。

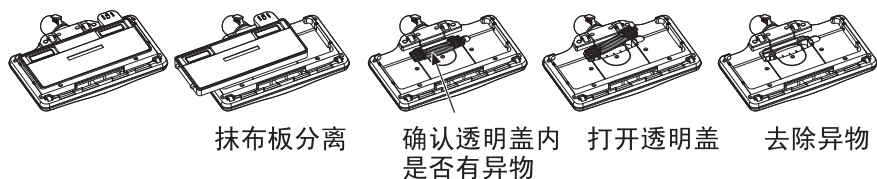


- \* 透明盖没有组装时，吸力会减弱并且抹布板上的抹布会被吸进刷头吸入口，使用前请务必检查透明盖是否正确组装，正确组装后再进行使用。

## 地板刷头的使用方法

### 地板刷头的使用


#### 组合

- ▶ 地板刷头可以清洁普通地面。

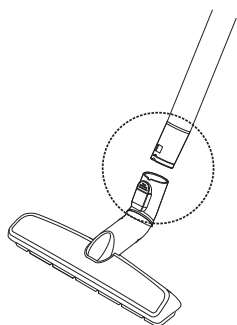

#### 使用

- ▶ 不用再为清扫地板发愁，此刷头会给您带来更多便利。

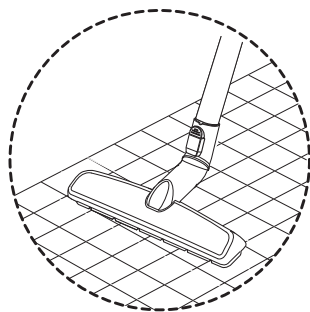

## 地板地毯刷头使用方法

### 地板地毯刷头使用方法

► 一般情况下使用

### 适用性


- 适用于瓷砖，木地板等硬地环境和地毯，毯子等软物质环境。

### 使用方法


- 根据清洁地板类型，改变刷头踏板位置，满足您的不同需要，给您带来更多方便。

⚠ 注意：当在硬地板（瓷砖，水泥地，木地板等）上使用时，请务必按下踏板，放出刷子，当在地毯上使用时，收回刷子即可。

组合

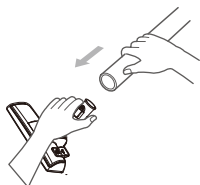

使用

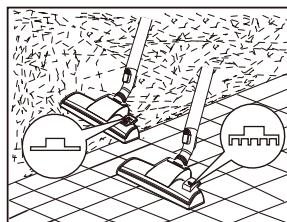




## 集尘桶/电机保护过滤海绵的拆卸、清洗及安装方法


当吸尘器设在最大功率时，如吸嘴不能正常工作，则需要清理集尘桶，并清洗电机保护过滤海绵。

### 集尘桶的拆装及清洗方法

- ▶ 关闭电源，拔下插头，按下机体上的“PUSH”按键，同时手提集尘桶手柄，从机体内取出集尘桶。
- ▶ 按照下图，打开集尘桶盖。

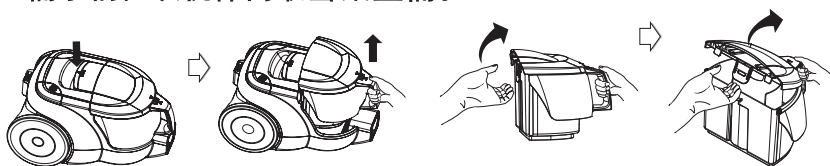

- ▶ 倾倒入集尘桶里面的灰尘后，用冷水清洗集尘桶，打开桶盖放置在阴凉处风干。扣好集尘桶盖后，如箭头所示方向装入机体。

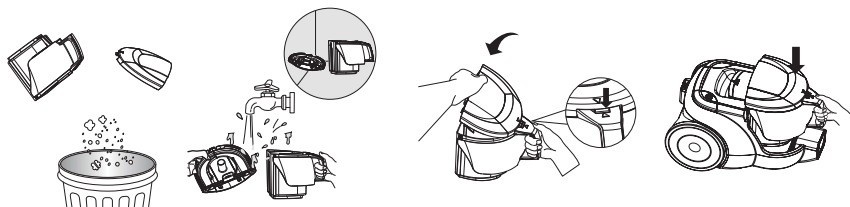

### 电机保护过滤海绵的拆装及清洗方法

- ▶ 按照箭头所示方向从机体内取出电机保护过滤海绵。请至少每月清洗一次，或根据使用频率酌情处理。每次清洁集尘桶的同时，建议同时清洗过滤海绵，并放置在阴凉处风干后装入机体。




**注意：**再次使用吸尘器前，请确认海绵盒已经安装好

## 排气过滤器的拆卸/清洁/安装方法

### 拆卸方法

- ▶ 排气过滤器至少半年清洗一次或根据使用频率酌情清理。

排气过滤器按钮

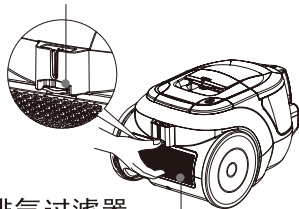


排气过滤器

### 清洁方法



- 1 抖动排气过滤器进行清洁。

### 安装方法


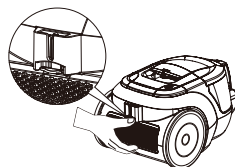


- 2 放入排气过滤器，按钮处有“咯哒”声时，表示排气过滤器安装准确。



### 使用吸尘器后的保管方法

卷线器按钮

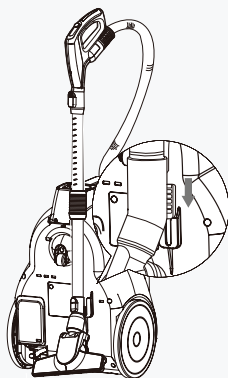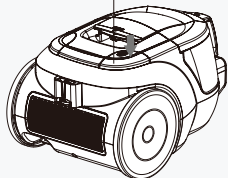

集尘盒  
手柄



机体  
手柄

- 按下卷线器按钮时吸尘器电线自动被卷入。
- 吸入口的突起部插入主机背面的凹槽后进行保管。

## 故障通告前需确认事项

### 故障通告前请先确认

- ▶ 如果您怀疑产品发生故障，请先确认故障发生原因，再与售后服务中心或代理商联系，以确保检修的效率。

现象:

噪音加大  
软管收缩



吸力忽然  
下降

吸尘器求助:

请检查集尘筒  
和吸入口



### 处理要领

- ① 查看集尘筒灰尘是否集满(到达MAX处),如果是,请及时清理集尘筒。

已经满了吗?请及时清理集尘筒哦!



- ② 请确认集尘筒滤芯是否堵塞过滤器堵塞时会发出异常声,请及时清洗。

滤芯有问题吗?那么检查一下吸入口。



- ③ 检查吸入口时,需将吸力调节到最大。

#### 第一步

将伸缩管与刷头分离后,检查有无阻塞,如发现问题请立即清理。

如果还有问题,请进行第二步。



#### 第二步

分离手柄与伸缩管,检查有无阻塞,如有阻塞,请将伸缩管收短,清除异物。

如果还有问题,请进行第三步。



#### 第三步

检查软管是否阻塞,将吸力调至最强,用手堵放管口,反复几次。

如果还有问题,请清理一下滤芯。



## 故障通告前需确认事项

### 故障通告前请先确认

▶ 如果您怀疑产品发生故障，请先确认故障发生原因，再与售后服务中心或代理商联系，以确保检修的效率。

#### 故障

吸尘器为何不能工作？




#### 检查

- 电源插头是否插上？
- 电源插座有电吗？
- 软管是否插上？
- 电机热保护处于开启期间。

#### 措施

- 请将电源插牢 (本产品适用于220V电压)。
- 确认插座是否有电。
- 将软管插牢。
- 2小时后重新启动。

机体内有噪音。

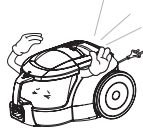

- 吸尘器吸力过大或电机高速运转时所发出的声音，不属于异常情况，请正常使用。
- 如果不是正常的电机响声，而是异常的噪音，请打电话与维修中心联系。

- 集尘筒已满。
- 集尘筒滤芯堵塞。
- 吸入口阻塞。
- 伸缩管阻塞。
- 软管阻塞。
- 清理集尘筒。
- 用软毛刷轻刷滤芯，用水冲洗后放置于阴凉处风干一天。
- 将吸入的异物取出再使用。
- 将伸缩管内异物取出后再使用。
- 将软管内异物取出后再使用。


机体出现异味。



- 电机运作时，用于固定电机的橡胶圈会受热而产生少量气味，不会影响运作或使机器发生损坏。
- 机器不小心吸入一些水或集尘筒长期不清理时，会有一些异味排出，此时应及时清理集尘筒。

## 故障通告前需确认事项

 电源线不能全部卷入机体, 电源线不能全部拉出。



- 将电源线拉出一部分后重新卷入。
- 请用力将电源线拉出, 不会损坏电源线。
- 由于线在内部互相缠绕或夏季周围温度过高所致。
- 由于线在内部折曲或未缠在卷线器上, 启动卷线器后, 能正常运作。

机体或排出的气体过热。



• 吸力是否正常?

• 从机体内排出的热气, 是由电机导热产生的热量所致, 属正常温度, 请继续使用。

软管内壁过脏。

• 请勿将水吸入, 水与灰尘混合吸入后, 有可能弄脏管壁。

# 装箱单

	VC2316GNT	VC2316GNTMY	VC3316GNT
吸尘器	一台	一台	一台
说明书	一本	一本	一本
保修卡	一份	一份	一份
鸭嘴	一个	一个	一个
毛刷	一个	一个	一个
尖吸嘴	一个	一个	一个
软管	一根	一根	一根
伸缩管	一根	一根	一根
角落刷头	一个	一个	一个
震动刷头	无	一个	无
抹布刷头	无	一个	无
地板刷头	无	无	无
地板/地毯刷头	无	无	一个
抹布	无	三块	无

# 装箱单

	VC3316GHTMY	VC3316GHTQY	VC3316GHTY
吸尘器	一台	一台	一台
说明书	一本	一本	一本
保修卡	一份	一份	一份
鸭嘴	一个	一个	一个
毛刷	一个	一个	一个
尖吸嘴	一个	一个	一个
软管	一根	一根	一根
伸缩管	一根	一根	一根
角落刷头	一个	一个	一个
震动刷头	一个	一个	一个
抹布刷头	一个	无	无
地板刷头	无	一个	无
地板/地毯刷头	无	无	无
抹布	三块	无	无


## ***Table of contents***

Product specifications .....	25
Attention before using the appliance .....	26-30
Parts description and assembly .....	31-33
Accessories	
Using and cleaning method of all the accessory nozzles .....	34-35
* These parts are according to the buyer's request	
How to use crevice tool, upholstery nozzle and dust brush	
How to use and clean corner nozzle	
Nozzles combinations list .....	36
Using and cleaning the sani punch .....	37-39
Using the mop and mop nozzle .....	40-42
Using hard floor nozzle .....	43
Using floor-carpet nozzle .....	44
How to separate, clean and assembly the dust tank and the motor protection filter .....	45
How to separate, clean and assemble exhaust filter .....	46
Disassembling	
Cleansing	
Assembling	
Check before reporting the trouble .....	47-48
If you have a problem .....	49-51
Packing List .....	52-53




# Product specifications


## Product specifications

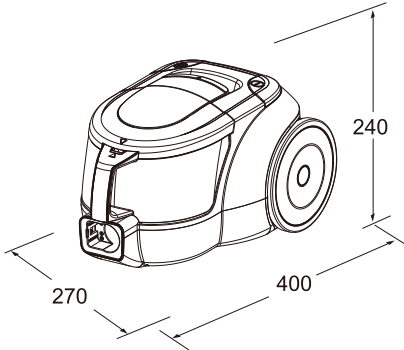

Model: VC23\*\*\*N\*\*\*

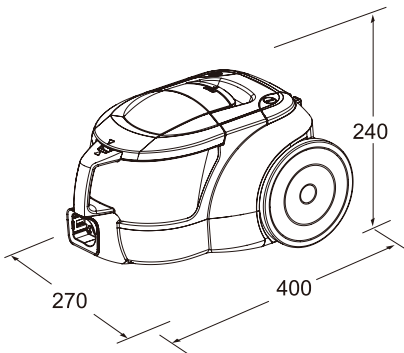

Model: VC33\*\*\*N\*\*\*

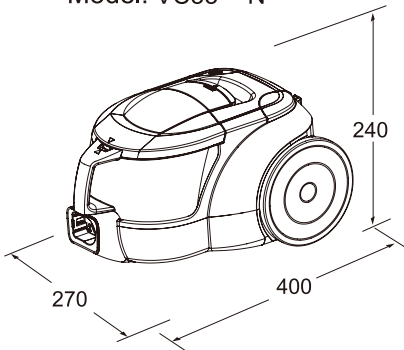

Model: VC33\*\*\*H\*\*\*

220V~ 50Hz  
IEC: 1400W  
MAX: 1600W  
Net Weight: 4.7Kg  
Dust Capacity: 1.2L  
Dimension:

270mmX400mmX240mm

This appliance complies with the following GB Directives:

GB4706.1-2005

GB4706.7-2004

GB17625.1-2003

GB4343.1-2009

※ You will not be informed otherwise of any changes in appearance and standard deriving for improvement of product quality.


# Attention before using the appliance

Please read all the following information, which contains important instructions for the safety, the use of the appliance.


- ⚠ DANGER** May immediately cause serious injury or death.
- ⚠ WARNING** May possibly cause serious injury or death.
- ⚠ ATTENTION** May possibly cause losses of property or light injury

## ⚠ DANGER

Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.

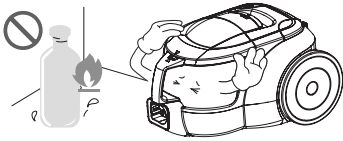


Please turn off the power before pulling out the plug to prevent fire or electric shock. Never handle plug or appliance with wet hands. (Do not use the appliance on the power above 220V.)

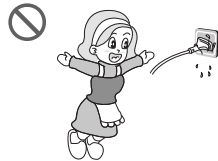


# Attention before using the appliance

## WARNING


Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner and the tank. Do not vacuum the objects like hair ball or big paper ball, otherwise the hose is possibly blocked up. Please clear the hose in time when it is blocked.

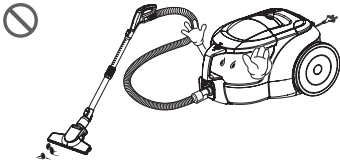

Independently use a socket when the current is  $\geq 15A$ . It may cause fire when many electric appliances share one socket. In order to avoid the needless danger, you had better not use the prolonged thread of power cord.

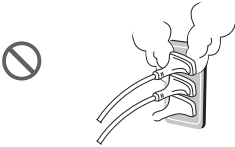

To avoid the danger of fire or electric shock, do not vacuum liquid, blade, flammable substances, or small particles like cement and gesso in cleaning.

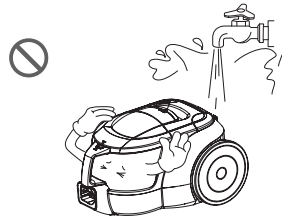


Unplug cleaner when not in use. Turn off all controls before unplugging.




# Attention before using the appliance

## WARNING


Do not let the power cord near the electric heater or other heat source, lest that the cleaner should be deformed or it should cause fire. Do not use the appliance when the power cord or plug is damaged. The damaged power cord or plug must be replaced in the approved service station.

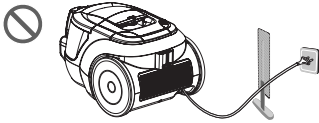


Close supervision is necessary when any appliance is used by or near children. Do not allow vacuum cleaner to be used as a toy or to run unattended at any time.

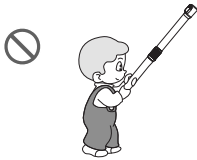

Do not operate the appliance for long when the nozzle inlet or nozzle outlet is blocked, which may have it deformed or damaged.

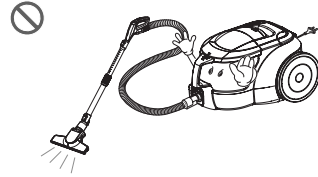


In using the appliance, pay attention to the electrostatic effect generated on the telescopic tube and cleaner body.

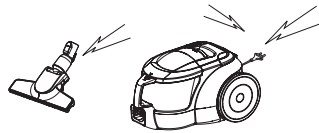


# Attention before using the appliance

## ATTENTION

Do not allow the non-professional maintenance people to repair.

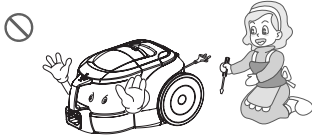

Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

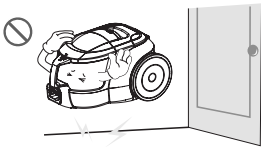


Do not bend, stamp on, or drag the hose. Do not continue to use the hose if it is damaged.

Do not use any heavy or sharp object to press the power cord.



Do not use without dust tank or filters in place. Change tank frequently when picking up very fine materials such as powder.


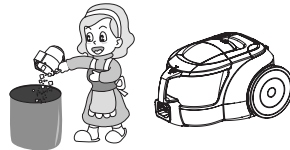


# Attention before using the appliance

## ATTENTION


In winding the power cord, hold the plug before pressing the button of the cord reel. Do not pull the power cord beyond the red warning line, otherwise the power cord may be damaged or unable to be wound up. Pay attention to the plug in winding the cord to avoid damaging the surrounding objects.

Keep hair, loose clothing, fingers, feet and all parts of body away from the nozzle or movable portion.

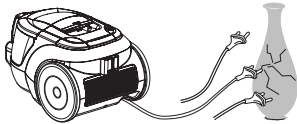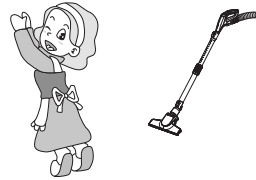





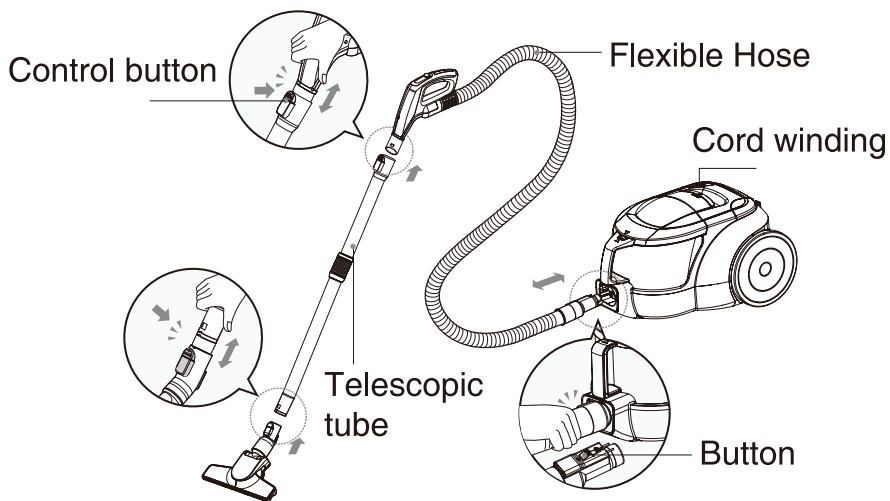





## Parts description and assembly


Applied to VC33\*\*\*H\*\*\*



Ps: These parts are according to the buyer's request

Accessories					
	• Nozzle	• Brush	• Crevice tool	• Corner Nozzle	• Sani Punch
					
	• Telescopic tube	• Hose	• Mop Nozzle	• Hard Floor Nozzle	• Floor/ Carpet Nozzle

## Parts description and assembly

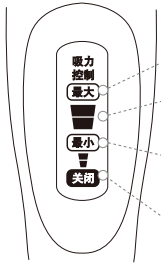


- **最大** Cleaning the dirtiest environment.
- Middle Cleaning fabrics and mattress (bedding), sofa, chair, floor.
- **最小** Cleaning door and window curtain, table, and light blanket.
- **关闭** Adjusting to“关闭” when you stop operating the appliance.

*When cleaning under different environment, adjust the suction level according to practical need.*



# Parts description and assembly

Applied to VC23\*\*\*N\*\*\*, VC33\*\*\*N\*\*\*

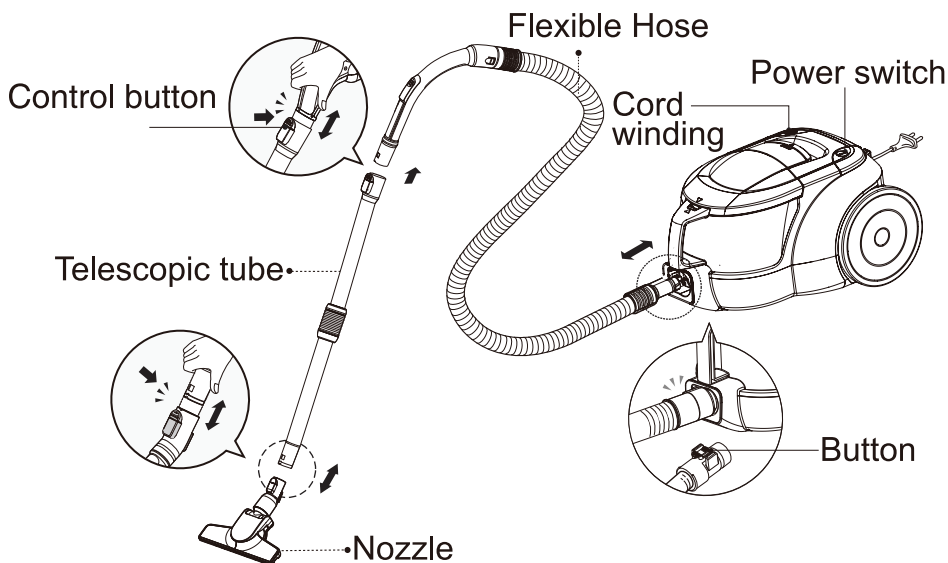

Ps: These parts are according to the buyer's request

<b>Accessories</b>					
	• Nozzle	• Brush	• Crevice tool	• Corner Nozzle	• Sani Punch
	• Telescopic tube	• Hose	• Mop Nozzle	• Hard Floor Nozzle	• Floor/ Carpet Nozzle

## Adjusting the Cleaner

**Use it as shown in the diagram**

The flexible hose handle has a manual air flow regulator which allows you to briefly reduce the suction level.




## Using and cleaning method of all the accessory nozzles

### Using Upholstery Nozzle & Dust Brush & Crevice Tool




- ▶ Tear the vinyl bag and pull out accessories.

*Use it as shown in the diagram*

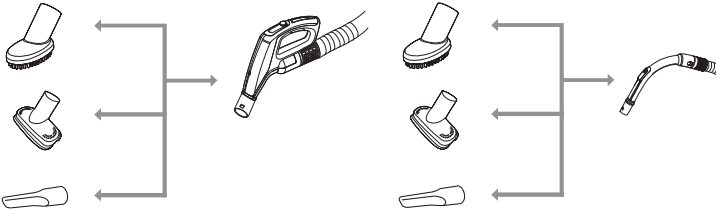

- ▶ Dust brush can be used to clean the picture frame, furniture brim, book and other irregular surface.
- ▶ Upholstery nozzle can be used to clean upholstery, mattresses, etc.
- ▶ Crevice tool can be used to clean the gap of sofa cushion or the place with cobweb and other place hard to reach.

### Using method

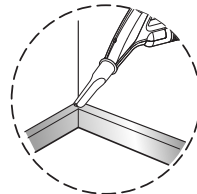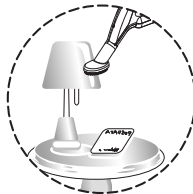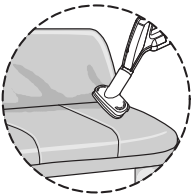


## Using and cleaning method of all the accessory nozzles

### Using and cleaning the corner nozzle


#### Assembling

- ▶ Corner nozzle can be used to clean common floor, also can be used to clean corner when be puckered.

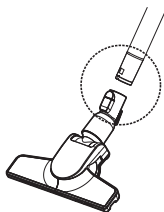



#### Using

- ▶ Corner nozzle makes you more convenient to clean corner and small space.

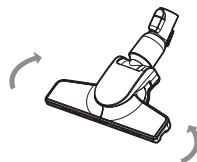





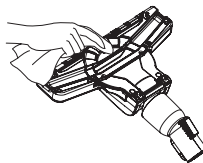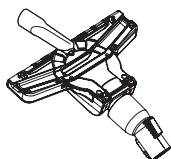





















#### Cleaning

- 1 Use crevice tool to clean.
- 2 Use calico dishcloth to clean.



# Nozzles combinations list


VC2316GNT	Nozzle	Brush	Crevice tool
			
	Corner Nozzle		
			
VC3316GNT	Nozzle	Brush	Crevice tool
			
	Corner Nozzle	Floor/Carpet Nozzle	
			
VC2316GNTMY VC3316GHTMY	Nozzle	Brush	Crevice tool
			
	Corner Nozzle	Sani Punch	Mop Nozzle
			
VC3316GHTQY	Nozzle	Brush	Crevice tool
			
	Corner Nozzle	Sani Punch	Floor Nozzle
			
VC3316GHTY	Nozzle	Brush	Crevice tool
			
	Corner Nozzle	Sani Punch	
			

# Using and cleaning the Sani Punch


## Using the Sani Punch

Use it as shown  
in the diagram

### Assembling

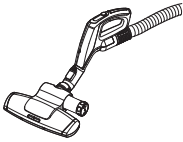



Connect to Hose

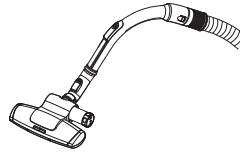

Connect to Hose

### Effective cleaning

- bed, bedding, heavy blanket
- Light blanket & sheet

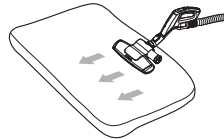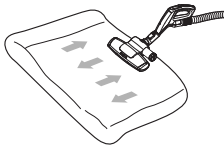

To increase cleaning  
efficiency for light  
blankets, lay on top  
of a bulky blanket  
and then clean.

## Using and cleaning the Sani Punch

 
- If the punch bar does not move, lift the nozzle slightly off the surface.
- If it does not move, even after doing this, check if the suction power is too low or if the nozzle base is clogged with a foreign object.
- This Sani Punch nozzle is for effective cleaning of beds and blankets to remove mites and dust.

### Cleaning the Sani Punch

- ▶ The vibrator may break down due to the cleansing of the inhaler with water.



- 1 Turn the button 2~3 times when the dust is filled in the dustbin while cleaning. (the dust can be cleaned up)




- 2 After the cleaning, if there are lots of dusts in the box from the inhaler by turning it anticlockwise.



- 3 Empty the box.

 Joining spiral



- 4 Aim at the Spiral, Fix the box into the inhaler by turning it clockwise.


# Using and cleaning the Sani Punch




- 5 Separate the bottom plate by pressing the buttons in the back.




- 6 Clean the dirty body of the inhaler carefully with a cloth.

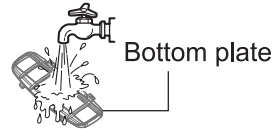


- 7 Wash the separated bottom plate and dry it in the shade.

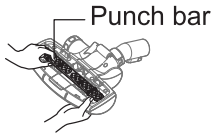

- 8 Arrange the vibrator in order.

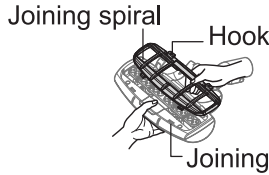

 - 9 Insert the joining spiral into the groove.




- 10 Attach the bottom plate properly by pressing down.

## Using the Mop and Mop Nozzle

### Using the Mop

- ▶ When using the mop nozzle, please dry it first.
- ▶ Always using special mop of LG.
- ▶ Attach the mop to the bottom of the nozzle with the white surface upturned.
- ▶ When drying the mop in washing machine, set it to the weakest mode.
- ▶ When using the Mop Nozzle without mop, the mop board both sides can be fixed to use, the assembly method as shown in the right.

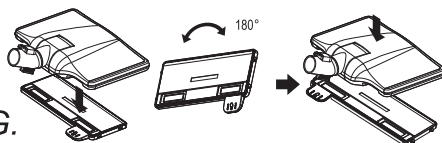

- NOTE:**
- It will be electrical danger when using the mop with excess moisture, and will be harmful to the cleaner.
  - The mop can not be fixed when it deviates from the fixing place.
  - Mind that do not block the dust suction inlet when fixing the mop.

### Using the Mop Nozzle

- ▶ Depending on different condition, connect or disconnect the mop.


#### Connecting method

1. Paste the microfiber cloth after it wrapped in the microfiber cloth board.

When the nylon fastening of microfiber cloth is fix to the nylon fastening of mop board, the microfiber cloth is fixed.




## Using the Mop and Mop Nozzle

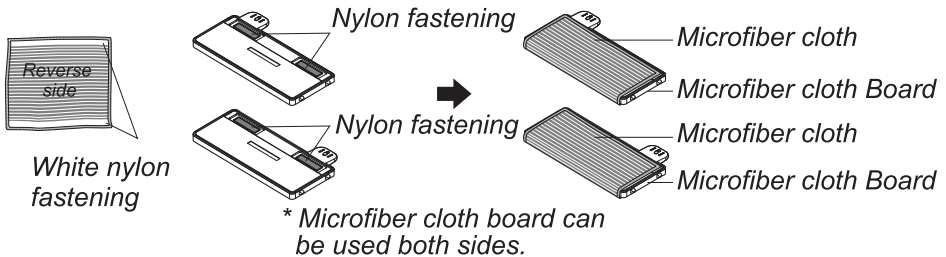


2. Push the top of nozzle after microfiber cloth fix to the microfiber cloth board .

\*When heard the “click” the microfiber cloth is fixed to the board completely .

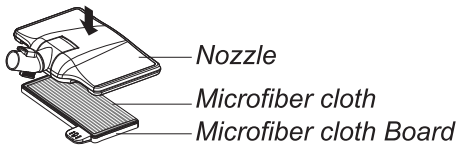

3. In the process of cleaning, One side of microfiber cloth is dirty, you can disassembling the mop from mop board by push the treadle, then you can continue using after change another side of mop.

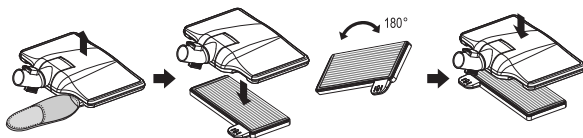


## Using the Mop and Mop Nozzle

### Using the Mop

#### Disconnecting method


1. After cleaning press the treadle of mop board to separate the mop and mop board.

Then you can take off the dirty mop.

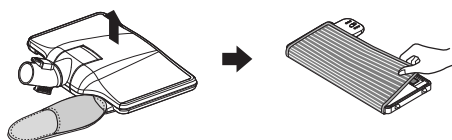

#### Cleaning method

 1. After cleaning, if the suction inlet blocked by scraps of paper, toothpicks or other foreign matter, please open the transparent cover then clean the nozzle.



Separate the  
mop board

Check whether  
anything under  
the transparent  
cover

Open the  
transparent  
cover

Cleaning


\*Assembly without transparent cover, the suction power will reduce and the mop may suction into the suction inlet. Please check the transparent cover is fixed correctly before using .

## Using hard floor nozzle

### Using hard floor nozzle


#### Assembling

- ▶ Hard floor nozzle can be used to clean common floor.

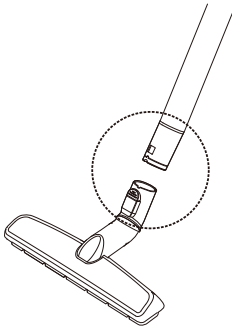

#### Using

- ▶ Hard floor nozzle makes you more convenient to clean floor.

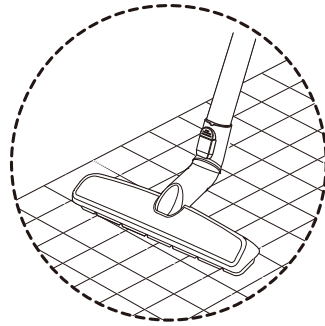

## Using floor-carpet nozzle

### Using method floor-carpet nozzle

- ▶ Using generally

#### Applicability


- Floor-carpet nozzle can be used to tile, wood floor , and other hard floor , carpet and other soft floor.

#### Using


- According to cleaning the type of floor, change the place of the nozzle pedal to satisfied your different requirements and give you many convenience .

- ⚠ Attention: Using on the hard floor( tile, concrete floor, wood floor), please must be push the nozzle pedal, put out the nozzle Using on the carpet, please take back the nozzle.

#### Assembling

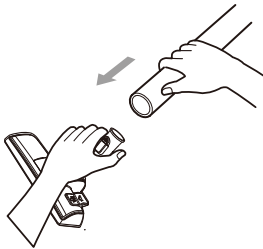


#### Using

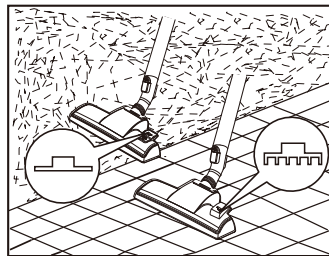


# How to separate, clean and assembly the dust tank and the motor protection filter

## How to separate, clean and assembly the dust tank

- ▶ After turning off the appliance and unplug it, Press the 'PUSH' button and hold the tank handle , then raise the tank.
- ▶ Please pull the hook behind the tank, then open the tank cover.

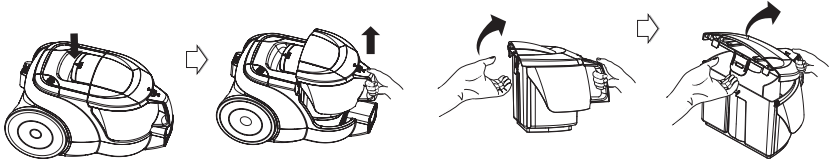

- ▶ Washing dust tank with cold water after emptying the dust. dry it fully in shade so that moisture is removed entirely.

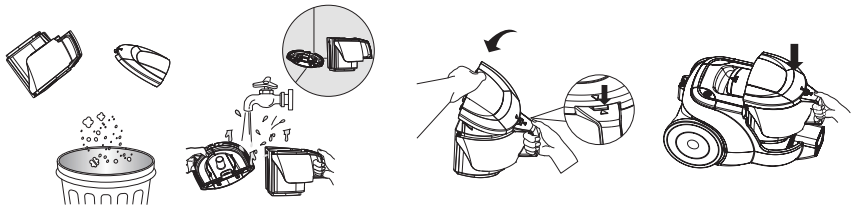

## How to separate, clean and assembly the motor protection filter

- ▶ Take out the motor protection filter from the appliance along the arrow direction. Please clean it at least once month or based on the using frequency. Suggest cleaning the motor protection filter and dry it fully in shade so that moisture is removed entirely.




**Warning: Please check the assembling of the protection filter before using the cleaner again**

# How to separate, clean and assemble exhaust filter

## Disassembling

- ▶ The exhaust filter should be cleaned at least once half a year. Allow exhaust filter to dry in a shaded location for a dry.

Button of the exhaust filter

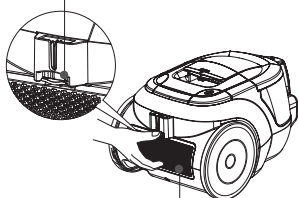


The exhaust filter

## Cleaning



- 1 Shake off the exhaust filter.

## Assembling


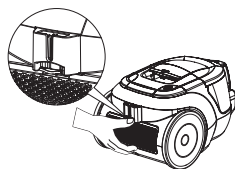


- 2 Insert the exhaust filter and join it properly until you hear the click of the button.



## How to keep the cleaner after using

Cord winding button

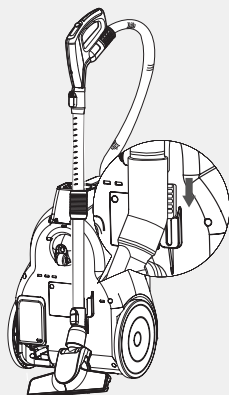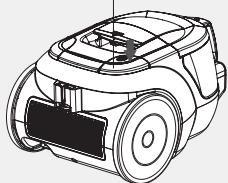

Tank handle



Carrier handle

- The cord winds up when you press the button.
- Insert the spiral of the inhaler into the groove in the back or at the bottom of the body.

# Check before reporting the trouble


## If you have a problem

- ▶ If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the check list below.

Problem:

The noise increases and the hose shrink.

Suction power is abruptly weakened.

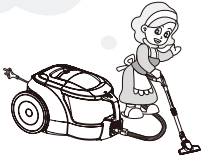

Help:

Check the dust tank and suction inlet.



## Solution

- 1 Dust tank full.  
(Arrive at MAX line)  
Empty dust tank.



Is it full? Empty the dust tank in time!

- 2 Motor filter dirty.  
Clean the motor filter with brush and water, allow to dry and replace in cleaner.



Is the filter OK? Then check the suction inlet.

# Check before reporting the trouble


## Solution

- ③ When checking the suction inlet, adjust the suction level to the maximum.

### First step

Turn cleaner off and disconnect from electrical outlet, then disconnect nozzle from telescopic tube. Check if it is blocked, and remove any blockages.

If there is still a problem, proceed the second step.

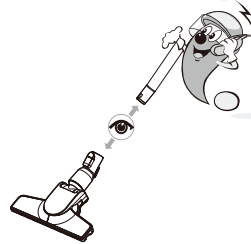

### Second step

Disconnect the telescopic tube from hose. Check if it is blocked, and remove any blockages.

 
If there is still a problem, proceed the third step.



### Third step

Plug cleaner in, turn on, and check hose end for suction. Remove any obstructions.

If there is also a problem, clean the filter.







## If you have a problem

### Please check before notifying malfunction

 - ▶ If you doubt the product meets with malfunction, please check the cause of such malfunction before contacting with the after-sales service center or agent, so as to ensure efficiency of repair.

Malfunction	Check	Troubleshooting
<p>The vacuum does not work?</p> 	<ul style="list-style-type: none"><li>• Is the plug inserted?</li><li>• Is the socket powered on?</li><li>• If the hose inserted?</li><li>• If the motor heat protection opened?</li></ul>	<ul style="list-style-type: none"><li>• Insert the plug tight (This product is applicable for 220V)</li><li>• Verify the power of socket is on</li><li>• Insert the hose tight</li><li>• Restart in 2 hours</li></ul>
<p>The vacuum does not work?</p> 	<ul style="list-style-type: none"><li>• When the vacuum cleaner's suction is too large or the motor is under high speed running, they do not belong to the abnormal conditions. So, please use the vacuum cleaner properly.</li><li>• If it is the noise rather than the normal motor sound, please phone the repair center.</li><li>• The duster collector is filled up.</li><li>• The filter is clogged.</li><li>• Suction inlet is jammed.</li><li>• Drawtube is clogged.</li><li>• Hose is clogged.</li></ul>	

## ***If you have a problem***

### **Malfunction**

### **Check**

### **Troubleshooting**

- Clean out the dust collector.
- Purge the sponge filter with water and air-dry in the shady and cool place for one day.
- Take out the sucked objects before use.
- Take out the objects inside the drawtube before use.
- Take out the objects in side the hose before use.

Peculiar smell exists inside the vacuum cleaner



- When the motor is running, the rubber band used for fixing the motor will produce a little smell due to the heat, but it will not affect the operation or damage the machine.
- When the machine sucks some water accidentally or the dust collector is not cleaned for a long period of time, the peculiar smell will be produced. So, clean up the dust collector timely.

The power cord can not be scrolled thoroughly into the vacuum cleaner, or the power cord can not be fully pulled.



- Pull out part of the power cord and then re-scroll it.
- Please put forth your strength to pull out the power cord, which will not be damaged.

## ***If you have a problem***

### **Malfunction**

### **Check**

### **Troubleshooting**

The vacuum cleaner or the discharged air is too heat.



- The power cord entwined inside the machine or it is caused by high temperature in the summer.
- The cord is bended inside the machine or not coiled around the winder. After the winder is started, the normal operation could be realized.

• Is the suction normal?

• The heat air discharged from the machine is arising from the heat produced by motor. So, the temperature is normal, please use the machine continuously.

Inner wall of the hose is too dirt.

• Never suck the water because after mixing of the water and dust, the tube wall will be polluted and the motor will be damaged

# Packing List

	VC2316GNT	VC2316GNTMY	VC3316GNT
Vacuum Cleaner	1	1	1
Owner's Manual	1	1	1
Card, Service	1	1	1
Upholstery Nozzle	1	1	1
Dust Brush	1	1	1
Crevice tool	1	1	1
Hose	1	1	1
Telescopic tube	1	1	1
Corner Nozzle	1	1	1
Sani Punch	/	1	/
Mop Nozzle	/	1	/
Hard Floor Nozzle	/	/	/
Floor/Carpet Nozzle	/	/	1
Mop	/	3	/

# Packing List

	VC3316GHTMY	VC3316GHTQY	VC3316GHTY
Vacuum Cleaner	1	1	1
Owner's Manual	1	1	1
Card, Service	1	1	1
Upholstery Nozzle	1	1	1
Dust Brush	1	1	1
Crevice tool	1	1	1
Hose	1	1	1
Telescopic tube	1	1	1
Corner Nozzle	1	1	1
Sani Punch	1	1	1
Mop Nozzle	1	/	/
Hard Floor Nozzle	/	1	/
Floor/Carpet Nozzle	/	/	/
Mop	3	/	/

如有问题

瞬间感动 Moment Of Truth  
**LG** 售后

请打电话



**400-819-9999**

售后热线

**一号通**

**LG 电子 (天津) 电器有限公司**

地址: 中国·天津市北辰区津围公路9号

传真: 022-26903476

邮编: 300402

全国技术服务中心服务咨询电话: 400-819-9999



<http://www.lg.com/cn>



MFL67892738