



# OWNER'S MANUAL LED TV\*

\* LG LED TVs are LCD TVs with LED backlighting.

Please read this manual carefully before operating your TV and retain it for future reference.

29UT55V

# TABLE OF CONTENTS

## 3 LICENSES

---

## 3 OPEN SOURCE SOFTWARE NOTICE

---

## 4 ASSEMBLING AND PREPARING

---

- 4 Unpacking
- 6 Parts and buttons
  - 6 - Using the Joystick button
- 8 Lifting and moving the TV
- 10 Setting up the TV
  - 10 - Attaching the Stand
  - 11 - Detaching the Stand
- 13 - Mounting on a table
  - 14 - Tidying cables
- 15 Mounting on a wall

## 17 WATCHING TV

---

- 17 Turning the TV on for the first time
- 19 TV display (5:9 OSD)
  - 19 - Programme Guide
- 20 PIP function

## 22 MAKING CONNECTIONS

---

- 22 Connecting an antenna
- 23 Satellite connection
- 24 External Device Connections
  - 24 - HDMI connection
  - 25 - Component connection
  - 26 - Composite connection
  - 27 - Euro Scart connection
- 28 Headphone connection
- 29 Connecting a USB Device
- 30 CI module connection
- 31 Connecting to a wired network
- 32 Connecting to a PC
  - 33 - HDMI connection
  - 34 - Display Port connection

## 35 REMOTE CONTROL

---

## 36 INSTALLING LG MONITOR SOFTWARE

---

## 38 CUSTOMIZING SETTINGS

---

- 38 Accessing the Main Menu
- 38 - TV, Component, AV
- 55 - HDMI1, HDMI2, DisplayPort

## 63 MAINTENANCE

---

- 63 Cleaning Your TV
- 63 Screen and frame
- 63 Cabinet and stand
- 63 Power cord
- 64 Preventing "Image burn" or "Burn-in" on your TV screen

## 65 TROUBLESHOOTING

---

## 67 SPECIFICATIONS

---



### WARNING

- If you ignore the warning message, you may be seriously injured or there is a possibility of accident or death.



### CAUTION

- If you ignore the caution message, you may be slightly injured or the product may be damaged.



### NOTE

- The note helps you understand and use the product safely. Please read the note carefully before using the product.

# LICENSES

Supported licenses may differ by model. For more information of the licenses, visit [www.lg.com](http://www.lg.com).



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit [divx.com](http://divx.com) for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) for more information on how to complete your registration.

“DivX Certified® to play DivX® video up to HD 1080p, including premium content.”

“DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.”

“Covered by one or more of the following U.S. patents :  
7,295,673; 7,460,668; 7,515,710; 7,519,274”



VESA, VESA logo, Display Port Compliance Logo and Display Port Compliance Logo for dual-mode source are all registered trademarks of the Video Electronics Standards Association.



MaxxAudio and additional MAXX trademarks are trademarks and/or registered trademarks of Waves Audio Ltd.

# OPEN SOURCE SOFTWARE NOTICE

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

**NOTE**

- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.
- The TV can be placed in standby mode in order to reduce the power consumption. And the TV should be turned off if it will not be watched for some time, as this will reduce energy consumption.
- The energy consumed during use can be significantly reduced if the level of brightness of the picture is reduced, and this will reduce the overall running cost.

## ASSEMBLING AND PREPARING

### Unpacking



Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

**CAUTION**


- Do not use any pirated items to ensure the safety and product life span.
- Any damages or injuries by using pirated items are not covered by the warranty.

**NOTE**

- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 10 mm thick and 18 mm width. Use an extension cable that supports USB 2.0 if the USB cable or USB memory stick does not fit into your TV's USB port.

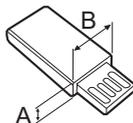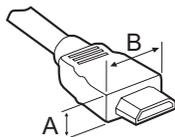

\*A 10 mm  
\*B 18 mm

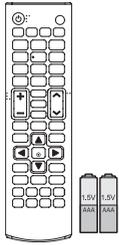 

**Remote control,  
Batteries (AAA)**  
(See p. 35)



**CD (Owner's Manual /  
Software) / Guides /  
Cards**



**Stand Body**  
(See p.10,11)



**Stand Base**  
(See p.11)



 
**Stand Screws**  
2 EA, M4 x L10  
(See p.10,12)



**Stand Screw cover**  
(See p.10,12)



**Power Cord**  
(See p. 13)

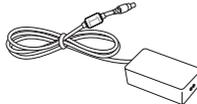

**AC-DC Adapter**  
(See p. 13)




**Cable Holder**  
(See p. 14)



**HDMI Cable**  
(See p. 24, 33)

## Parts and buttons

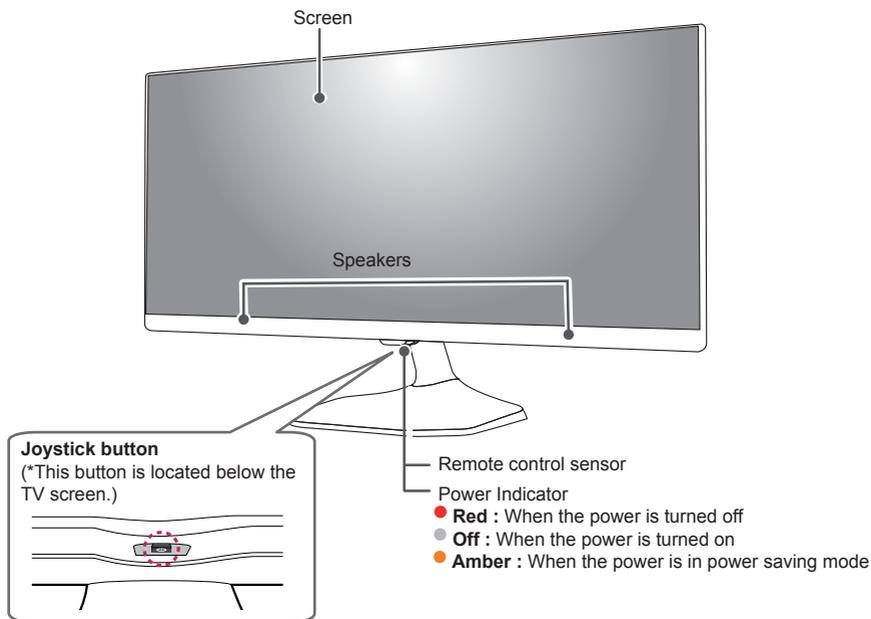

### ! NOTE

- You can set the power indicator light to on or off by selecting **OPTION** in the main menus.

## Using the Joystick button

You can simply operate the TV functions, pressing or moving the joystick button up, down, left or right.

### Basic Functions

|  |                    |   |
|--|--------------------|---|
|  | Power On           | When the TV is turned off, place your finger on the joystick button and press it once and release it.<br>(However, if the Menu button is on the screen, pressing the joystick button will let you exit the Menu.) |
|  | Power Off          | When the TV is turned on, place your finger on the joystick button and press it once for a few seconds and release it.  |
|  | Volume Control     | If you place your finger over the joystick button and move it left or right, you can adjust the volume level you want.  |
|  | Programmes Control | If you place your finger over the joystick button and move it up or down, you can scroll through the saved programmes what you want.  |


**NOTE**

- When your finger over the joystick button push it to the up, down, left or right, be careful not to press the joystick button. If you press the joystick button first, you can not adjust the volume level and saved programmes.

**Adjusting the Menu**

When the TV is turned on, press the joystick button one time.

You can adjust the Menu items (📺, 📺, 🔌, ☰, 📺) moving the joystick button up, down, left or right.
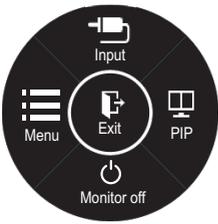
|   |   |                    |                               |
|---|---|--------------------|-------------------------------|
|  |  | <b>Input</b>       | Changes the input source.     |
|   |  | <b>PIP</b>         | Turns the PIP mode on or off. |
|   |  | <b>Monitor Off</b> | Turns the power off.          |
|   |  | <b>Menu</b>        | Configures the settings.      |
|   |  | <b>Exit</b>        | Exits the OSD menu.           |

## Lifting and moving the TV

Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.




### CAUTION

- Avoid touching the screen at all times, as this may result in damage to the screen.
- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to prevent the screen from scratches.



- Hold the top and bottom of the TV frame firmly. Make sure not to hold the transparent part.

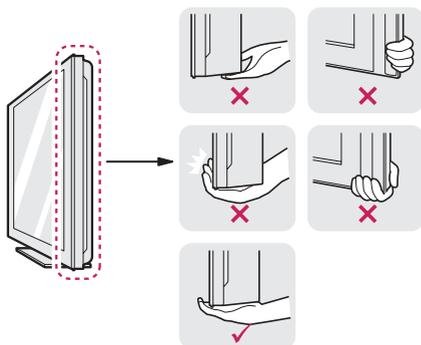

- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing / bending of frame chassis as it may damage screen.





### CAUTION

- When handling the TV, be careful not to damage the protruding joystick button.



**CAUTION**

- Do not carry the TV upside-down as this may cause it to fall off its stand, resulting in damage or injury.
- Do not carry the TV upside-down by holding the stand body as this may cause it to fall off, resulting in damage or injury.
- The illustration shows a general example of installation and may look different from the actual product.

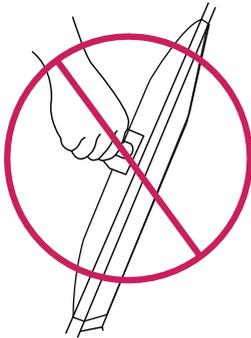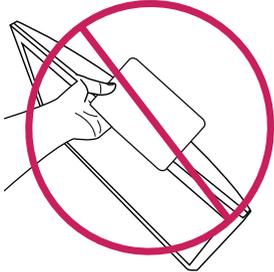


## Setting up the TV

### Attaching the Stand

1

Check the orientation (front and rear) of the stand base and mount the Stand Body to the Stand Hinge as shown in the figure.

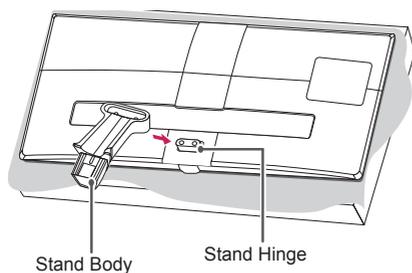


#### CAUTION

- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

2

Turn the screw to the right into the back of the stand body and close the Stand Screw Cover.

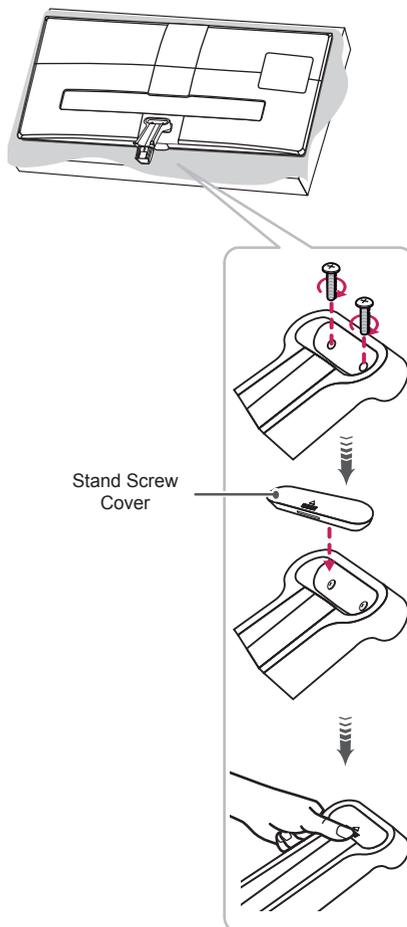


#### NOTE

- If you don't fasten the screw tightly, TV will fall down and get damaged.
- Tighten the screws firmly to prevent the TV from tilting forward. Do not over tighten.

**3**


Fix the Stand Base to the Stand Body and turn the screws on the Stand Base to the right.

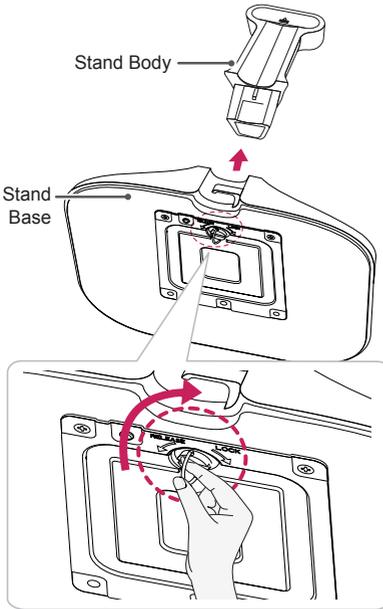

## Detaching the Stand


**1**

Turn the screw to the left, and then pull out the Stand Base from the Stand Body.

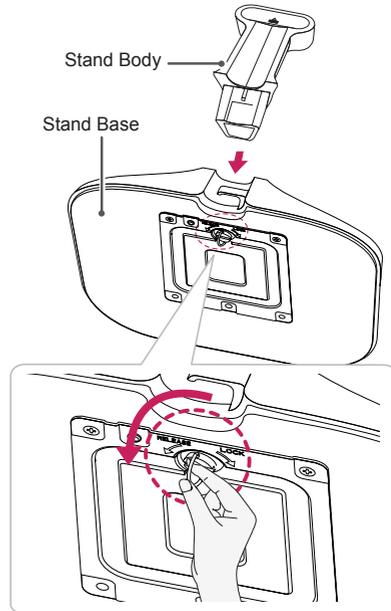


2

Open the Stand Screw Cover on the back of the Stand Body and turn the screws on the stand body to the left.

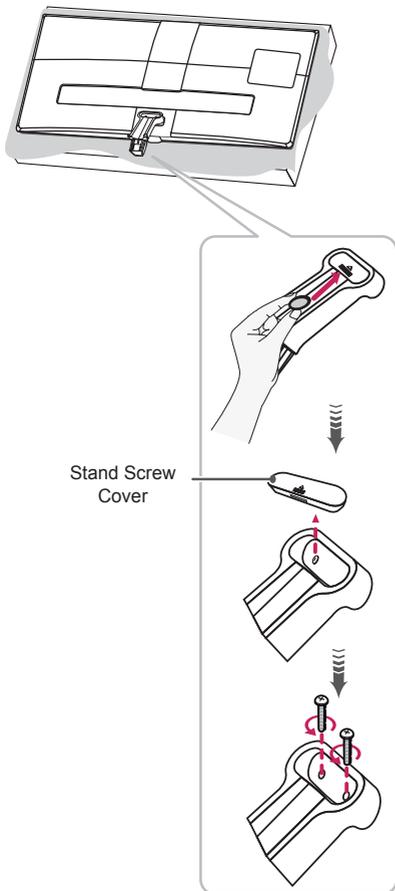

3

Detach the Stand Body from the TV.

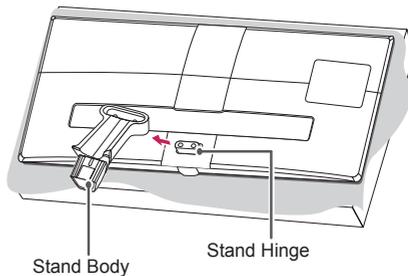

**CAUTION**

- When detaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.




**CAUTION**


- To remove the stand screw cover, use a screwdriver, coin or similar object.
- Removing the cover by hand may cause injury.

## Mounting on a table

- 1 Lift and tilt the TV into its upright position on a table. Leave a 10 cm (minimum) space from the wall for proper ventilation.

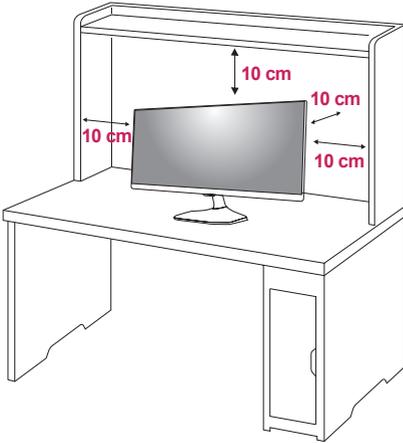

- 2 Connect the AC-DC Adapter and Power Cord to a wall outlet.

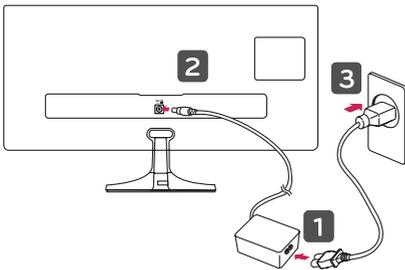


### CAUTION

- Do not place the TV near or on sources of heat, as this may result in fire or other damage.
- Disconnect the power cord first, and then move or install the TV. Otherwise electric shock may occur.


## Adjusting the angle of the TV to suit view

Tilt from -5° to +20° degrees up or down to adjust the angle of the TV to suit your view.

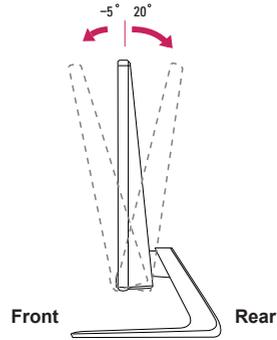


### WARNING

- When you adjust the angle, do not hold the button of the TV frame as shown on the following illustration, as may injure your fingers.

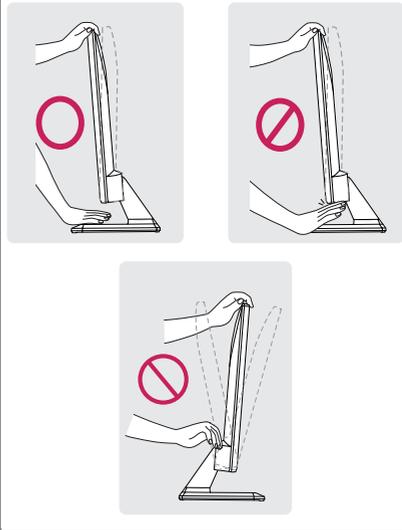


**CAUTION**


- Be careful not to touch or press the screen area when adjusting the angle of the TV.

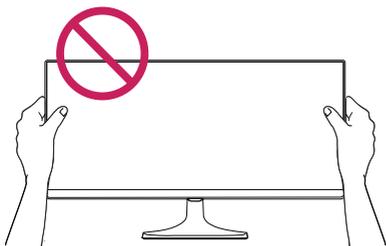


- Be careful not to press the screen with your fingers or palm.

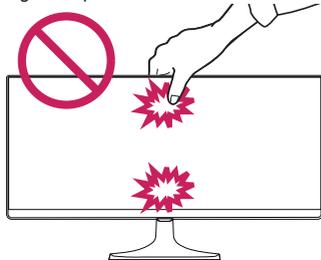**Tidying cables**


- 1 Gather and bind the cables with the supplied cable holder.
- 2 Place the cable on the hook located on the stand base.

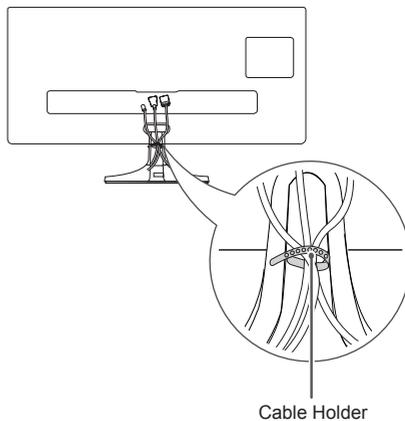

## Mounting on a wall

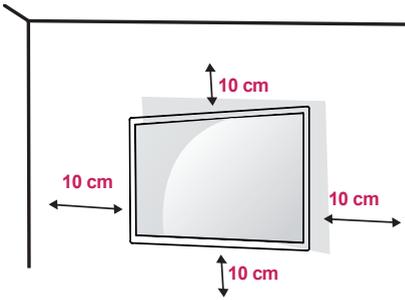


- Wall mount (A x B)

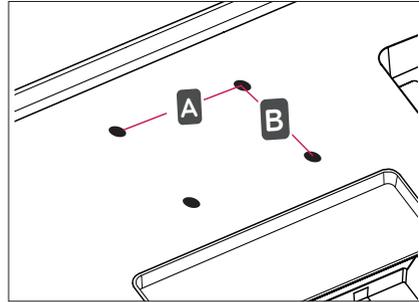

For proper ventilation, allow a clearance of 10 cm on each side and from the wall. Detailed installation instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.


If you intend to mount the TV to a wall, attach Wall mounting interface (optional parts) to the back of the TV.  
When you install the TV using the wall mounting interface (optional parts), attach it carefully so it will not drop.

 - 1 If you use screw longer than standard, the TV might be damaged internally.
- 2 If you use improper screw, the product might be damaged and drop from mounted position. In this case, LG Electronics is not responsible for it.
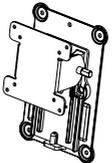
|                               |  |
|-------------------------------|--|
| Wall mount (A x B)            | 75 x 75  |
| Standard screw                | M4 X L10   |
| Number of screws              | 4  |
| Wall mount bracket (optional) | RW120<br> |

### ⚠ CAUTION


- Disconnect the power first, and then move or install the TV. Otherwise electric shock may occur.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- Use the screws and wall mounts that meet the VESA standard. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.
- Screw length from outer surface of back cover should be under 8mm.

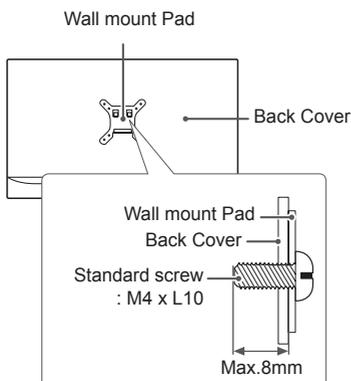

### Using the Kensington security system

The Kensington security system connector is located at the back of the TV. For more information of installation and using, refer to the manual supplied with the Kensington security system or visit <http://www.kensington.com>.

Connect the Kensington security system cable between the TV and a table.

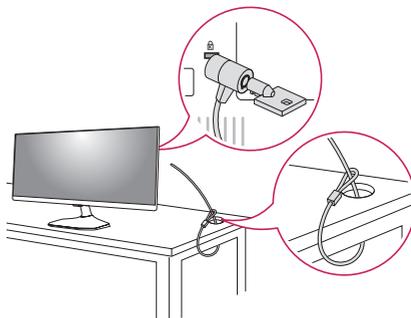

### ⚠ NOTE

- The Kensington security system is optional. You can obtain additional accessories from most electronics stores.

### ⚠ NOTE

- Use the screws that are listed on the VESA standard screw specifications.
- The wall mount kit includes an installation manual and necessary parts.
- The wall mount bracket is optional. You can obtain additional accessories from your local dealer.
- The length of screws may differ depending on the wall mount. Be sure to use the proper length.
- For more information, refer to the instructions supplied with the wall mount.

# WATCHING TV

## Turning the TV on for the first time

When you access the TV for the first time, the Factory Reset screen appears. Select a language and customize the basic settings.


- 1 Connect the power cord to a power outlet.
- 2 Standby Light is turned on. Set the joystick buttons on the TV or press the power, TV/PC,  $\wedge$  P  $\vee$ , INPUT, number buttons on the remote control to turn the TV on.  
The Standby Light is turned off.
- 3 The Factory Reset screen appears if you access the TV for the first time.



### NOTE

- If you do not operate the TV within 40 seconds when the setting menu screen appears, the setting menus will disappear.

- 4 Follow the on-screen instructions to customize your TV according to your preferences.

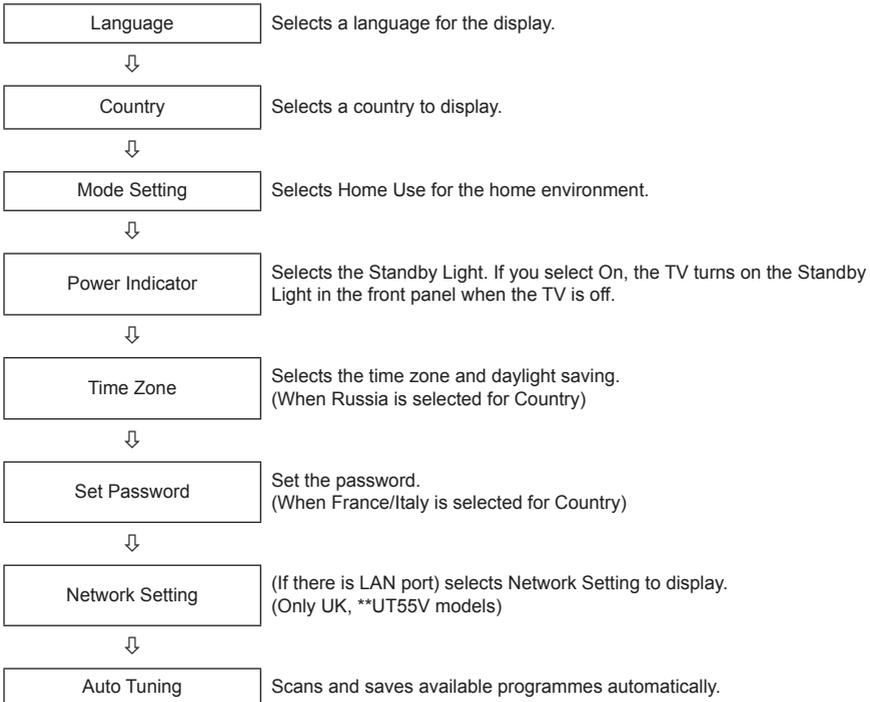

**NOTE**

- For those countries without confirmed DTV broadcasting standards, some DTV features might not work, depending on the DTV broadcasting environment.
- When France is selected for Country, the initial password is not '0', '0', '0' but '1', '2', '3', '4'.
- To display images in the best quality for your home environment, select Home Use mode.
- Store Demo mode is suitable for the retail environment.
- If you select Store Demo mode, the previously customized settings will switch to the default settings of Store Demo mode in 5 minutes.

- 5 When the basic settings are complete, press **OK** .

**NOTE**

- If you do not complete the Factory Reset, it will appear whenever you access the TV.

- 6 To turn the TV off, press the power button on the remote control or joystick button for a few second. The Standby Light is turned on.

**CAUTION**

- Disconnect the power cord from the power outlet when you do not use the TV for a long period of time.

**NOTE**



- You can also switch the TV from PC mode to TV mode, press TV/PC.
- You can also access Factory Reset by accessing **OPTION** in the main menus.

## TV display (5:9 OSD)

### Programme Guide

Press the **GUIDE** button on the remote control while you are watching TV.

- On the right-hand side (5:9 OSD) of the TV screen, the details of programme you are currently watching and the programme organization information are displayed.
- DTV channels are marked only in 'Other Channels' list.

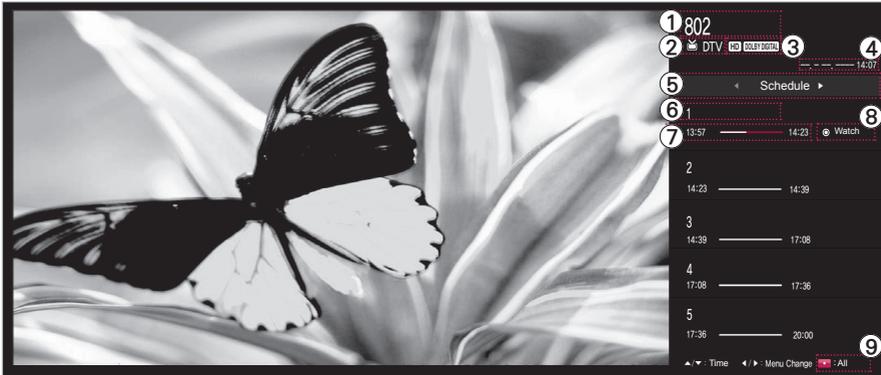
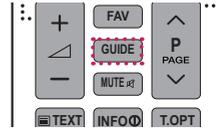


| NO. | Description   |
|-----|---|
| 1   | Displays the programme you are currently watching.  |
| 2   | Displays the broadcasting type of the programme you are currently watching.   |
| 3   | Displays the broadcasting type icon.<br>(e.g., HD, Dolby, Digital, etc.)  |
| 4   | Displays the current date and time.   |
| 5   | Displays the current programme schedule or the entire programme list.   |
| 6   | Displays the information of programme you are currently watching.   |
| 7   | Displays the running time of the programme.<br>- Displays the progress including start and end times of the programme.  |
| 8   | Displays the available functions.<br>- If the programme you are currently watching is focused, the Watch function is displayed.<br>- If the programme you are not currently watching is focused, the Remind function is displayed.<br>- If other channel guide is focused, the Watch function is displayed. |
| 9   | Displays the programme guide for all programmes.  |


## PIP function

 Press the **PIP** button on the remote control while you are watching HDMI1, 2, DisplayPort.

- Configured Sub screen is saved until change the Main screen.

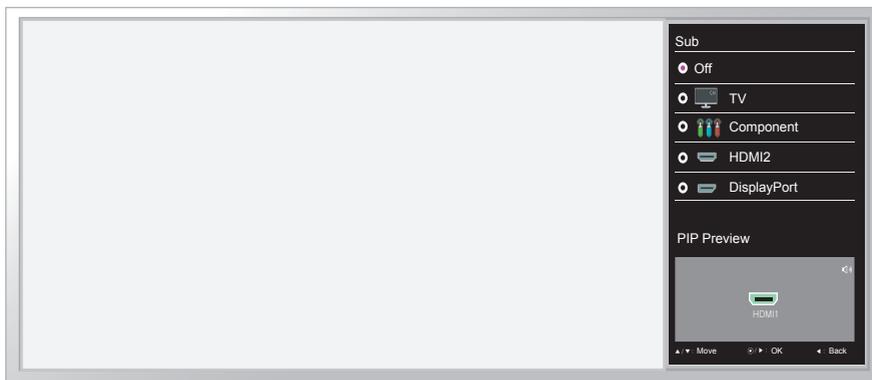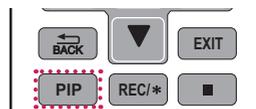

While watching PIP, press the **PIP SETTINGS** button on the remote control to display the Sub Menu.

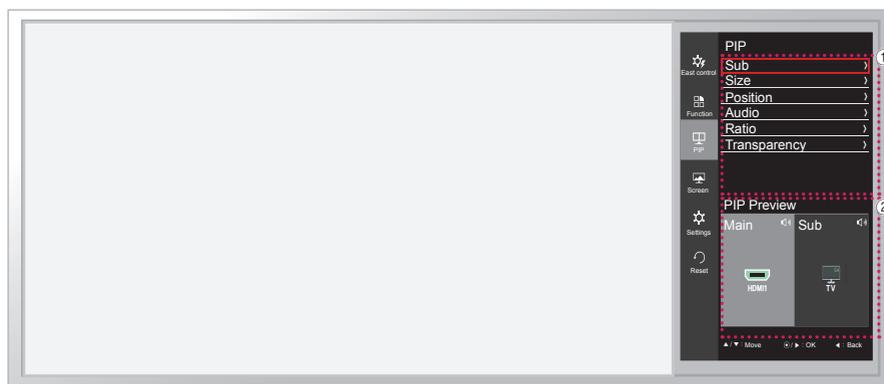

| NO.          | Description  |               |             |         |              |    |           |     |     |   |
|--------------|--|---------------|-------------|---------|--------------|----|-----------|-----|-----|---|
| 1            | Sub  | PIP Map       |             | PIP Sub |              |    |           |     |     |   |
|              |  | Current input | HDMI1       | HDMI2   | Display Port | TV | Component | AV1 | AV2 |   |
|              |  |               | HDMI2       | O       | X            | O  | O         | O   | X   | X |
|              |  |               | DisplayPort | O       | O            | X  | O         | O   | X   | X |
|              |  |               | TV          | X       | X            | X  | X         | X   | X   | X |
|              |  |               | Component   | X       | X            | X  | X         | X   | X   | X |
|              |  |               | AV1         | X       | X            | X  | X         | X   | X   | X |
| AV2          | X  | X             | X           | X       | X            | X  | X         |     |     |   |
| Size         | Sets the size of the PIP Sub window. (Small / Medium / Large / Balanced)   |               |             |         |              |    |           |     |     |   |
| Position     | Sets the position of the PIP Sub window.<br>(Bottom Right / Bottom Left / Top Left / Top Right)<br>* This function is disabled when the size is set to [Balanced]. |               |             |         |              |    |           |     |     |   |
| Audio        | Selects the audio input.<br>* Only the items that are available under the current combination are enabled (PIP Main / PIP Sub).                                    |               |             |         |              |    |           |     |     |   |
| Ratio        | Sets the aspect ratio of PIP Sub.<br>* This function is enabled when Size is set to [Balanced].  |               |             |         |              |    |           |     |     |   |
| Transparency | Sets the opacity of PIP.<br>(Off / 25 % / 50 % / 75 %)<br>* This function is disabled when Size is set to [Balanced].  |               |             |         |              |    |           |     |     |   |
| 2            | Displays the configured OSD icon and its name.   |               |             |         |              |    |           |     |     |   |

## MAKING CONNECTIONS

Connect various external devices to the TV and switch input modes to select an external device. For more information about an external device's connection, refer to the manual supplied with each device.

Available external devices are: HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, camcorders or cameras, gaming devices, and other external devices.




### NOTE

- If you record a TV program on a DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information about recording, refer to the manual supplied with the connected device.
- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.

## Connecting an antenna

Connect an antenna, cable or cable box to watch TV referring to the following. The illustrations may differ from the actual accessories and an RF cable is optional.

Connect the TV to a wall antenna socket with an RF cable (75 Ω).

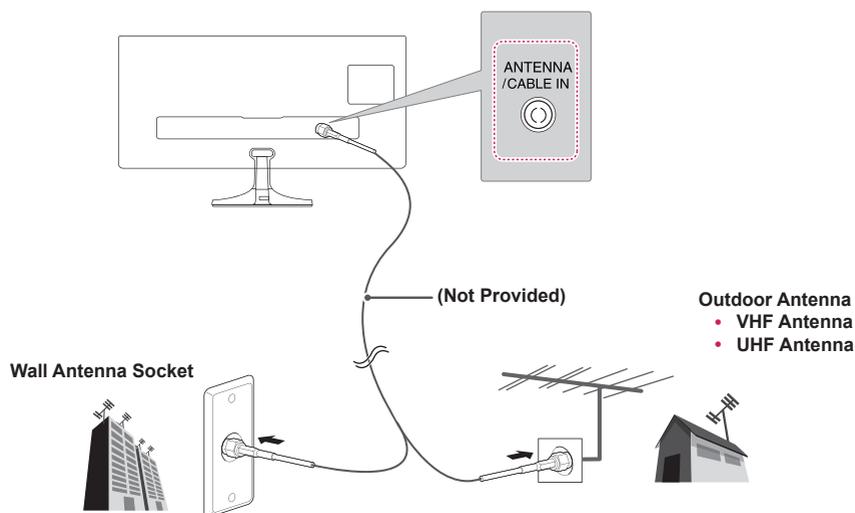

### NOTE

 
- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, aim the antenna to the proper direction.
- Visit <http://AntennaWeb.org> for more information about the antenna and cable connection.



### CAUTION

- Make sure not to bend the copper wire of the RF cable.


Copper wire

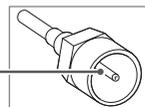

- Complete all connections instructions between devices, and then connect the power cord to the power outlet to prevent damages to your TV.

## Satellite connection

Connect the TV to a satellite dish to a satellite socket with a satellite RF cable (75  $\Omega$ ).

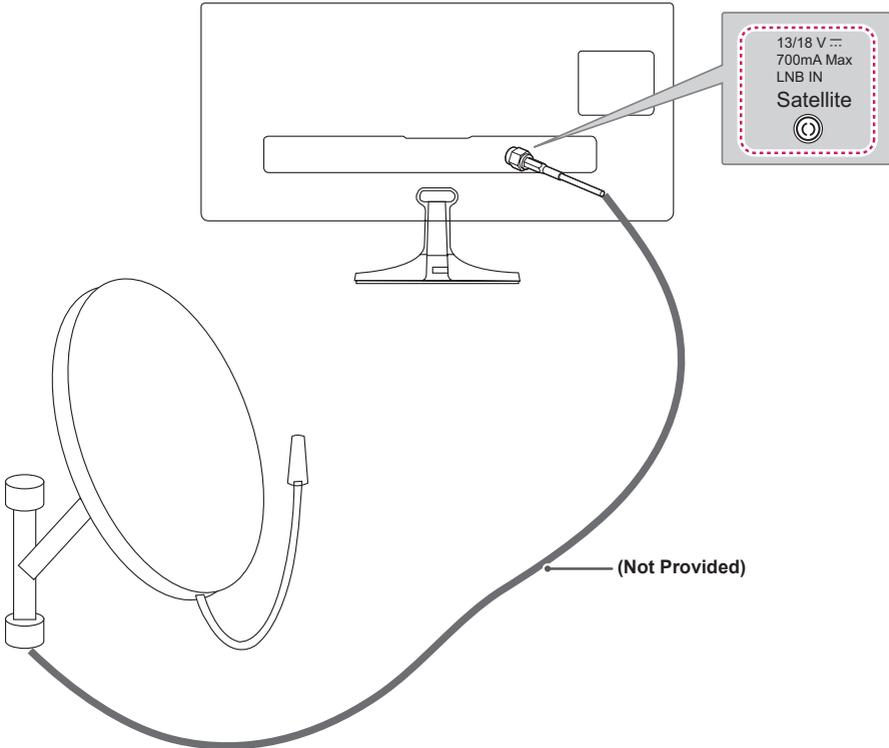

## External Device Connections

Connect a HD receiver, DVD Player, VCR or Gaming device to the TV and select an appropriate input mode.


### HDMI connection

**HDMI is the best way to connect a device.**

Transmits the digital video and audio signals from an external device to the TV. Connect the external device and the TV with the HDMI cable as shown on the following illustration.

#### NOTE

- HDMI cable to the HDMI input and a digital broadcast receiver, connect the HDMI output. Video, with sound output.
- Press the **INPUT** button on the remote control to select either HDMI IN 1 or HDMI IN 2.
- Dolby Digital and DTS are not supported. If no sound is coming out, set the audio output of the connected device to PCM.
- Using a non-standard HDMI cable may cause a problem with some of the functions. It is highly recommended to use a standard cable.

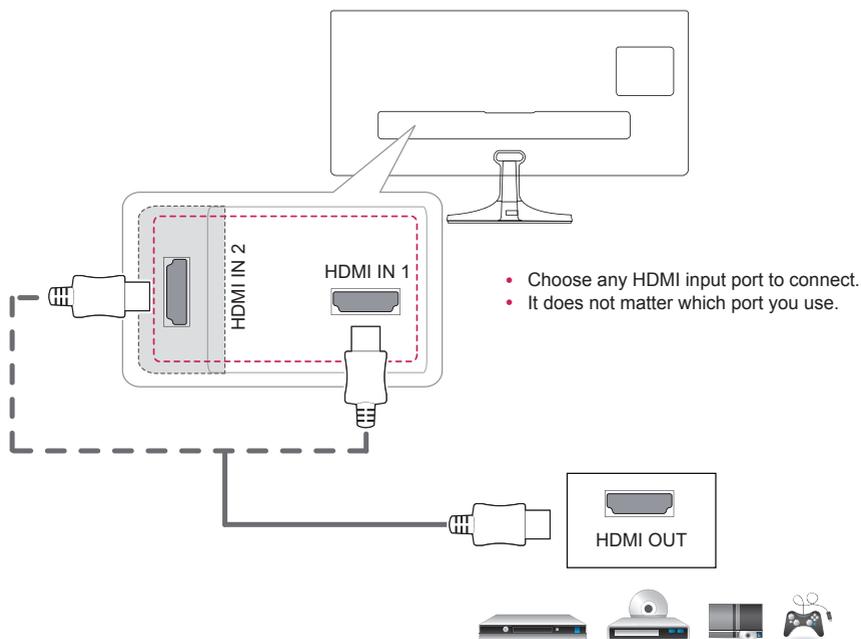

- Choose any HDMI input port to connect.
- It does not matter which port you use.


DVD / Blu-Ray / HD Cable Box /  
HD STB / Gaming device

### Component connection

Transmits the analogue video and audio signals from an external device to the TV. Connect the external device and the TV with the component cable as shown on the following illustration. To display images by using progressive scan, make sure to use a component cable.

**NOTE**

- If cables are installed incorrectly, image is displayed as black-and-white or abnormal colour.
- Check to ensure each cable is matched with the corresponding colour connection.
- Press the **INPUT** button on the remote control to select component.

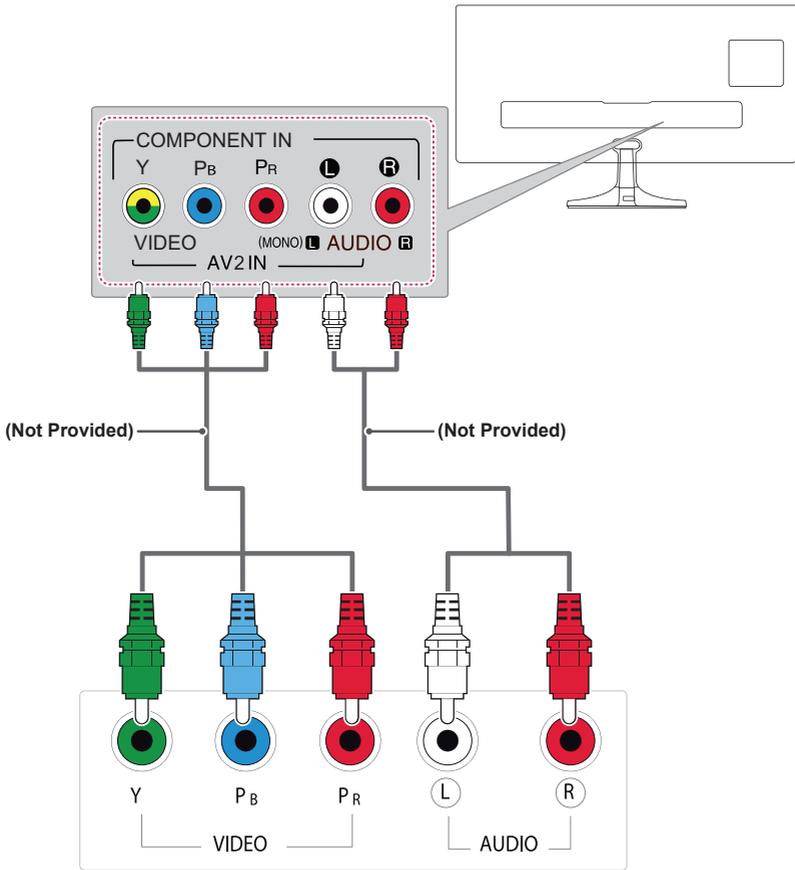


DVD / Blu-Ray / HD Cable Box /  
HD STB / Gaming device

### Composite connection

Transmits the analogue video and audio signals from an external device to the TV. Connect the external device and the TV with the composite cable as shown on the following illustration.

- NOTE**
- Check to ensure each cable is matched with the corresponding colour connection.
  - Press the **INPUT** button on the remote control to select AV2.

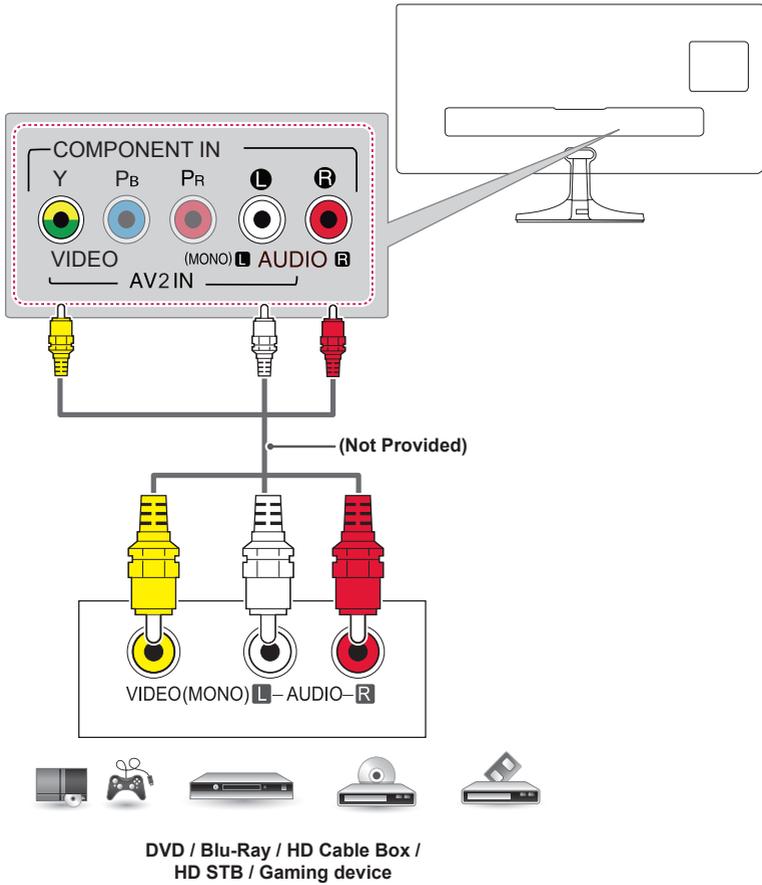

### Euro Scart connection


Transmits the video and audio signals from an external device to the TV. Connect the external device and the TV with the Euro Scart cable as shown on the following illustration.

| Current input mode \ Output Type | AV1 (TV Out <sup>1</sup> ) |
|----------------------------------|----------------------------|
| Digital TV                       | Digital TV                 |
| Analogue TV                      | Analogue TV                |
| Component, AV, HDMI              | Analogue TV                |

1 TV Out : Outputs Analogue TV or Digital TV signals.

**NOTE**

- Any Euro cable used must be shielded for signal quality.

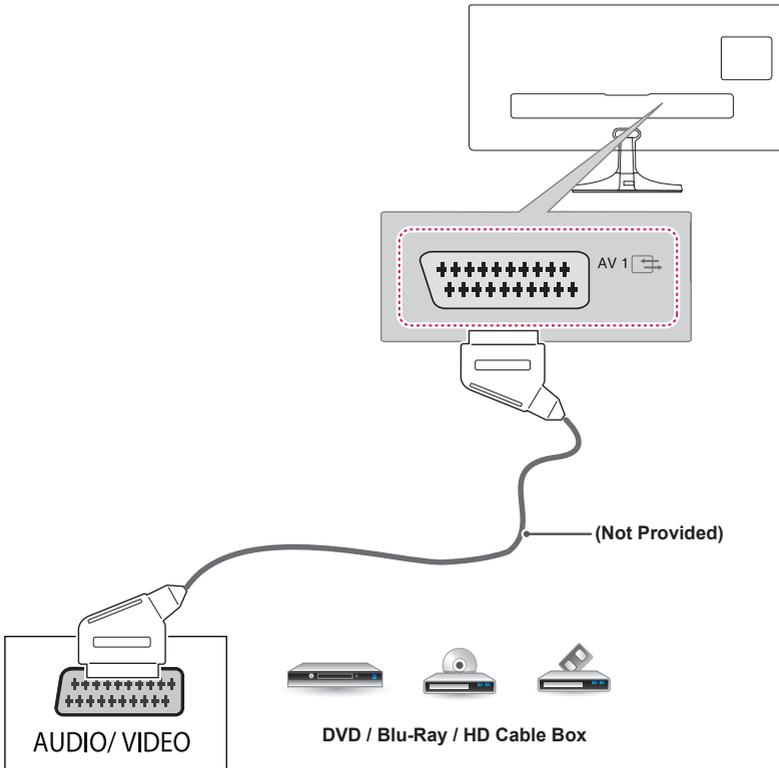


## Headphone connection

Transmits the headphone signal from the TV to an external device. Connect the TV with the headphone as shown on the following illustration.



### NOTE

- AUDIO menu items are disabled when connecting a headphone.
- Headphone impedance:  $16 \Omega$
- Max audio output of headphone: 2.5 mW to 5.5 mW
- Headphone jack size: 0.35 cm

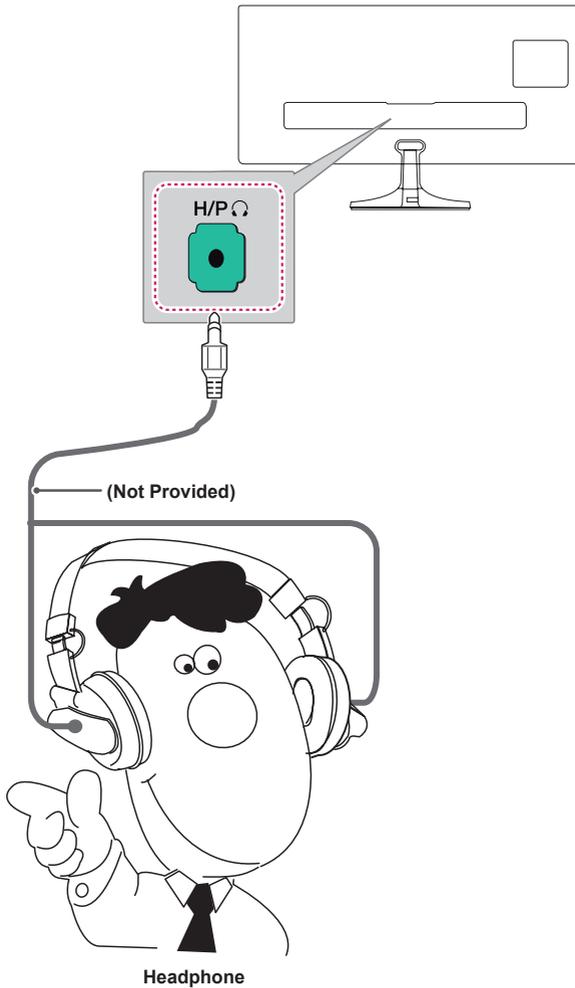


## Connecting a USB Device

Connect a USB storage device such as a USB flash memory, external hard drive, MP3 player or a USB memory card reader to the TV and select input as USB to use various multimedia files.



### NOTE

- It may not work when USB 3.0 devices are connected.

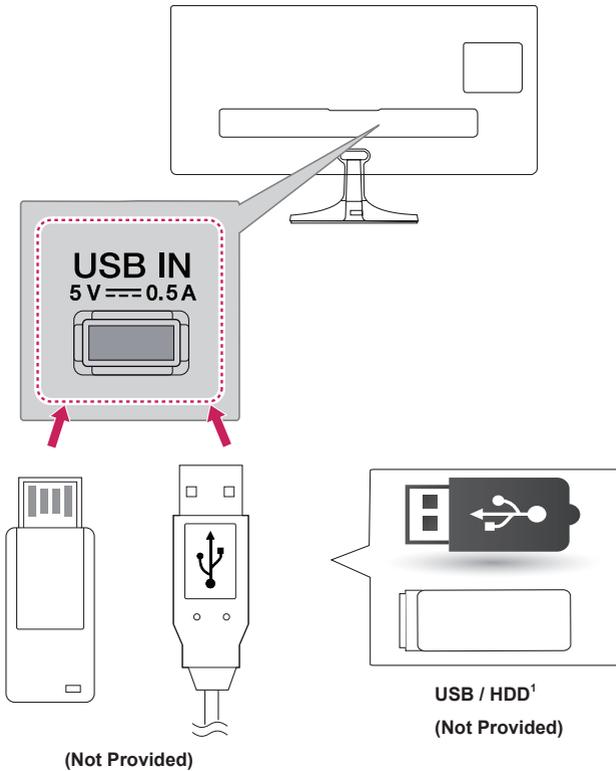

- The USB port provides 0.5 A electric current. If you need more electric current in the case of an HDD, use a separate power adaptor.



## CI module connection

View the encrypted (pay) services in digital TV mode. This feature is not available in all countries.



### NOTE

- Check if the CI module is inserted into the PCMCIA CARD SLOT in the right direction. If the module is not inserted properly, this can cause damage to the TV and the PCMCIA CARD SLOT.
- If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Antenna/Cable/Satellite Service Operator.

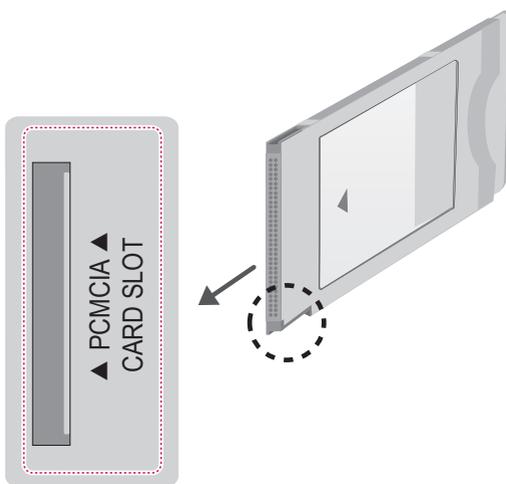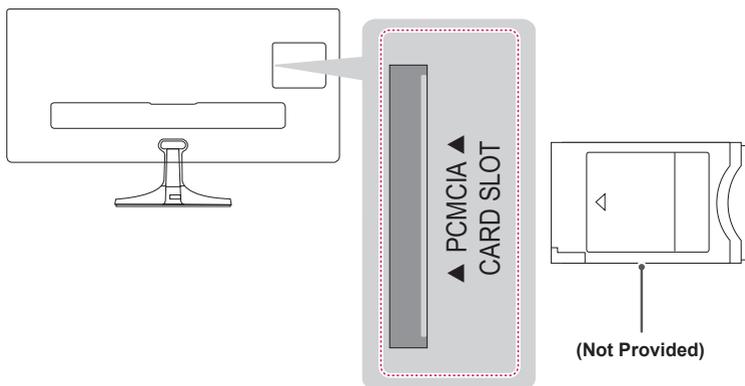

## Connecting to a wired network

### (Only UK)


Connect the TV to a local area network (LAN) via the LAN port as shown on the following illustration and set up the network settings. After making a physical connection, a small number of home networks may require the TV network settings to be adjusted. For most home networks, the TV will connect to automatically without any adjustments.

For detail information, contact your internet provider or router manual.



### CAUTION

- Do not connect a modular phone cable to the LAN port.
- Since there are various connection methods, please follow the specifications of your telecommunication carrier or internet service provider.

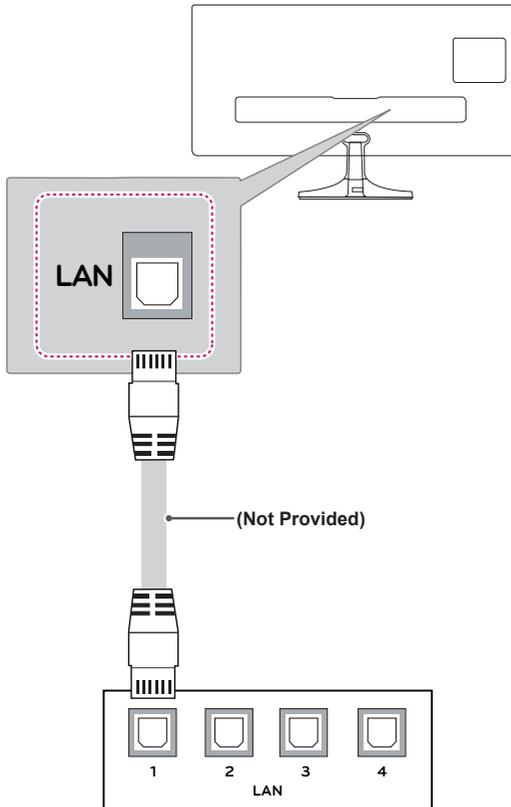

### NOTE

- UK: LAN port is available. (The LAN port is added to support HD MHEG.)
- Other areas: LAN port is not available.

## Connecting to a PC

Your TV supports the Plug & Play\* feature.

\* Plug & Play: The function when a PC recognizes a connected device and requires no driver to be installed.



### NOTE


- It is recommended to use an TV with the HDMI connection for the best image quality.
- If you turn the TV on when the set is cold, the screen may flicker. This is normal.
- Some red, green, or blue spots may appear on the screen. This is normal.
- Do not press the screen with your finger for a long time as this may result in temporary distortion on the screen.
- Avoid displaying a fixed image on the screen for a long period of time to prevent image burn. Use a screensaver if possible.
- When connecting the power cord to the outlet, use a grounded (3-hole) multi-socket or a grounded power outlet.

## HDMI connection

Transmits the digital video and audio signals from your PC to the TV. Connect the PC and the TV with an HDMI cable as shown in the following illustrations.

### ! NOTE

- Use a High Speed HDMI® cable.
- Please check your PC settings if you cannot hear any sound in HDMI mode.
- Press the **INPUT** button on the remote control to select either HDMI IN 1 or HDMI IN 2.
- Using a DVI to HDMI cable may cause compatibility issues.
- If the PC is connected through a HDMI, the device may cause compatibility issues.
- Dolby Digital and DTS are not supported. If no sound is coming out, set the audio output of the connected device to PCM.
- Using a non-standard HDMI cable may cause a problem with some of the functions. It is highly recommended to use a standard cable.

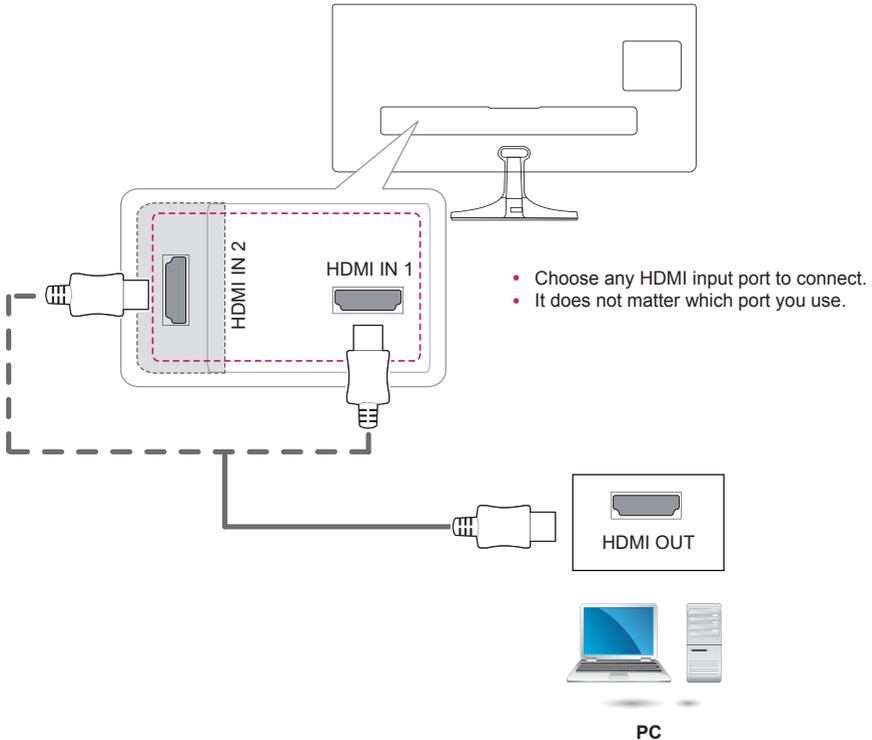


## Display Port connection

Transmits the digital video and audio signals from your PC to the TV. Connect your PC to the TV using the display port cable as illustrated below.


### ! NOTE

- Sound may not hear depending on the DP version of your PC.
- Dolby Digital and DTS are not supported. If no sound is coming out, set the audio output of the connected device to PCM.
- Press the **INPUT** button on the remote control to select DisplayPort.
- Using a DP to HDMI or DP to DVI cable may cause compatibility issues.
- HDMI signals are not converted to DP signals. If you use a DP to HDMI cable, you can watch your media on a PC or other device with DP output by using the HDMI port.

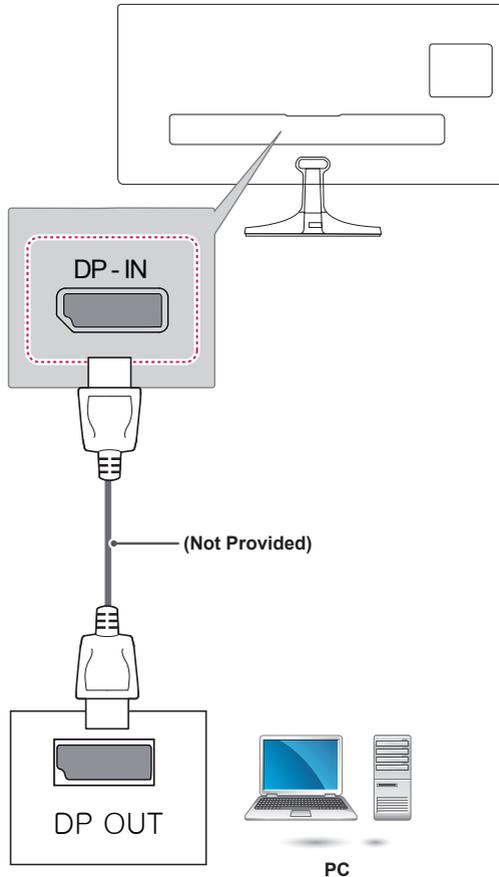

# REMOTE CONTROL

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.  
 To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching the ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. To remove the batteries, perform the installation actions in reverse.

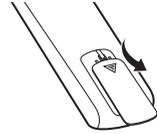

## CAUTION

- Do not mix old and new batteries, as this may damage the remote control.

Make sure to point the remote control toward the remote control sensor on the TV.

|  |   |
|--|---|
|  | <p><b>⏻ (POWER)</b> Turns the TV on or off.</p> <p><b>TV/RAD</b>  Selects Radio, TV and DTV programme.</p> <p><b>SUBTITLE</b> Recalls your preferred subtitle in digital mode.</p> <p><b>AD</b> By pressing the AD button, audio descriptions function will be enabled.</p> <p><b>TV/PC</b> Selects TV or PC mode.</p> <p><b>INPUT</b>  Changes the input source.</p>   |
|  | <p><b>Number buttons</b> Enters numbers.</p> <p><b>LIST</b> Accesses the saved programme list.</p> <p><b>Q.VIEW</b> Returns to the previously viewed programme.</p>   |
|  | <p><b>+ / -</b> Adjusts the volume level.</p> <p><b>FAV</b> Accesses your favourite programme list.</p> <p><b>GUIDE</b> Shows programme guide.</p> <p><b>MUTE</b>  Mutes all sounds.</p> <p><b>^ P v</b> Scrolls through the saved programmes</p> <p><b>^ PAGE v</b> Moves to the previous or next screen.</p>  |
|  | <p><b>Teletext buttons</b> ( <b>TEXT</b> / <b>T.OPT</b>) These buttons are used for teletext.</p> <p><b>INFO</b>  Views the information of the current programme and screen.</p>  |
|  | <p><b>SETTINGS</b> Accesses the main menus.</p> <p><b>PIP SETTINGS</b> PIP Displays the Menu screen for the PIP mode.</p> <p><b>Q. MENU</b> Accesses the quick menus.</p> <p><b>Navigation buttons (up/down/left/right)</b> Scrolls through menus or options.</p> <p><b>OK</b>  Selects menus or options and confirms your input.</p> <p><b>BACK</b>  Returns to the previous level.</p> <p><b>EXIT</b> Clears all on-screen displays and return to TV viewing.</p> |
|  | <p><b>PIP</b> Turns the PIP mode on or off.</p> <p><b>REC/*</b> Starts to record and displays record menu. (Depending on model)</p>   |
|  | <p><b>Control buttons</b> ( <b>Control buttons</b>) Controls the USB menus, or the compatible devices (USB).</p> <p><b>Colour buttons</b> These access special functions in some menus.<br/>                 (: Red, : Green, : Yellow, : Blue)</p> <p><b>-  + (Backlight)</b> Adjusts the brightness of the screen by controlling the screen backlight.</p>  |

## NOTE

- On MHEG programme, you cannot adjust the backlight with the yellow or blue key.

# INSTALLING LG MONITOR SOFTWARE

Insert the Software CD included in the product package into your PC's CD driver and install the LG Monitor Software.

- 1 Set up Internet Explorer as the default web browser.




- 2 Click 'LG Monitor Software' on the CD's main screen. When the file download window appears, click 'Run'. (Although the screen below may differ depending on your operating system or Internet Explorer version, the installation methods are the same.)




## NOTE

- Windows 7 must be updated to Service Pack 1 or higher.
- Versions before internet explorer 7 and internet explorer 7 may not be supported.


- 3 Follow the instructions to proceed with the installation.

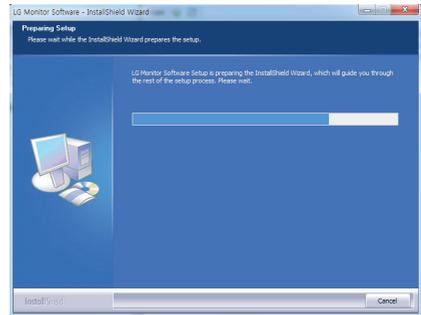

- 4 Check 'I accept the terms of the agreement' on the License Agreement screen and then click the 'Next' button.

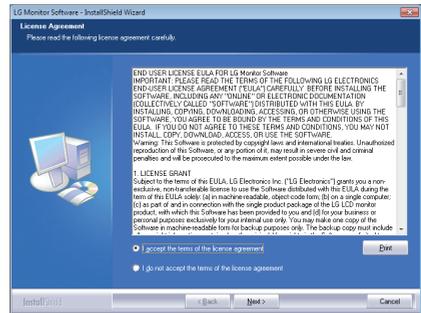


- 5 Select the programme that you want to install.

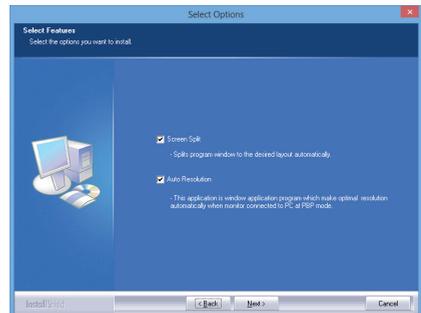


**NOTE**

- **Screen Split** : This program automatically splits the program window as desired.
- **Auto Resolution**: This is a program that auto-matically changes the resolution to the optimal settings when connecting the monitor to the PC in PIP mode.
  - ※ This program is not supported in Clone Mode.
  - ※ Extended Mode is not supported when using a single display.


6 The LG Monitor Software starts the installation as shown below:

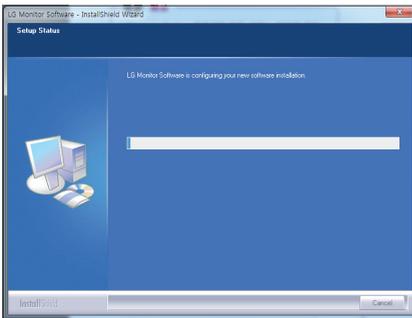

 7 The program you selected on the FUNCTION page will install automatically.

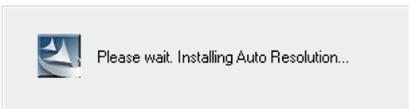

8 When the installation is complete, restart your system.

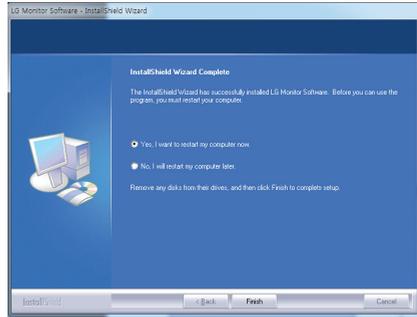


**NOTE**

1 If you run Screen Split, the Screen Split icon [  ] appears in the system tray at the right bottom of the PC screen.



2 Right-click the Screen Split icon and select a layout you want.

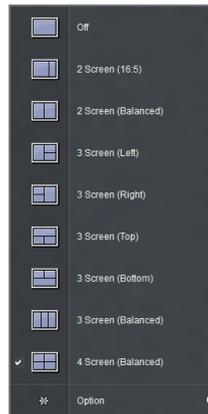

## CUSTOMIZING SETTINGS

### Accessing the Main Menus

The menus displayed on the TV screen may vary depending on the selected input mode.

#### TV, Component, AV

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**.

When you return to the previous menu, press  **BACK**.

|                |  |
|----------------|--|
| <b>PICTURE</b> | Adjusts the image size, quality or effect.         |
| <b>AUDIO</b>   | Adjusts the sound quality, effect or volume level. |
| <b>SETUP</b>   | Sets up and edit programmes.                       |
| <b>TIME</b>    | Sets the time, date or Timer feature.              |
| <b>LOCK</b>    | Locks or unlocks channels and programmes.          |
| <b>OPTION</b>  | Customizes the general settings.                   |
| <b>NETWORK</b> | Sets the network. (Apply: UK country)              |

**PICTURE**



**To select Picture Mode**

|   |  |
|---|--|
| <b>SETTINGS&gt; PICTURE&gt; Picture Mode</b>  |  |
| Select the picture mode optimized for the viewing environment or the programme. Depending on input signal, available range of picture modes may differ.<br>Expert mode is for picture tuning professionals to control and fine-tune using a specific image. For normal images, the effects may not be dramatic. |  |
| <b>Vivid</b>  | Heightens contrast, brightness and sharpness to display vivid images.  |
| <b>Standard</b>   | Displays images in standard levels of contrast, brightness and sharpness.  |
| <b>Eco</b>  | [This feature is available in certain countries only] The Energy Saver feature changes settings on the TV to reduce power consumption.   |
| <b>Cinema / Game</b>  | Displays the optimum picture for movie, game.  |
| <b>Sport</b>  | [This feature is available in certain countries only.] Optimised picture mode for sport. The pitch and kits are presented in vibrant colours, with crystal-clear images even for fast movements.   |
| <b>Expert1</b><br><b>Expert2</b>  | Menu for adjusting picture quality that allows experts and amateurs to enjoy the best TV viewing. This menu for adjustment is provided for ISF-certified picture tuning professionals. (ISF logo can only be used on ISF-certified TVs.)<br>ISFccc: Imaging Science Foundation Certified Calibration Control<br>The ISF function is only available on some models. |

**To fine-tune picture mode**

|   |  |
|---|--|
| <b>SETTINGS&gt; PICTURE&gt; Picture Mode&gt; Backlight / Contrast / Brightness / Sharpness / Colour / Tint / Colour Temp.</b>                               |  |
| First select a Picture Mode of your choice. Depending on the input signal or other picture settings, the range of detailed items for adjustment may differ. |  |
| <b>Backlight</b>  | Adjusts the display brightness by varying the brightness of the LCD panel.   |
| <b>Contrast</b>   | Adjusts the Colour contrast and brightness of the screen.  |
| <b>Brightness</b>   |  |
| <b>Sharpness</b>  | Adjusts the sharpness of the screen.   |
| <b>Colour</b>   | Adjusts the Colour depth of the screen.  |
| <b>Tint</b>   | Adjusts the gamma, Colour temperature and Colour of the screen.  |
| <b>Colour Temp.</b>   | Adjusts the overall tint of the picture.<br>In Expert mode, you can fine-tune the picture using the Gamma or Method options. |

**To set Advanced Control / Expert Control**

|  |   |
|--|---|
| <b>SETTINGS&gt; PICTURE&gt; Picture Mode&gt; Advanced Control / Expert Control</b>   |   |
| For each picture mode, screen can be calibrated; or for a special screen, picture settings can be adjusted. Select the desired Picture Mode. Depending on input signal or other picture settings, the range of detailed items for adjustment may differ. |   |
| <b>Dynamic Contrast</b>  | Adjusts the contrast to the optimal level according to the image's brightness.                      |
| <b>Dynamic Colour</b>  | Adjusts colours to make the image appear in more natural colours.                                   |
| <b>Skin Colour</b>   | Sets Skin colour spectrum separately to implement the skin colour as defined by the user.           |
| <b>Sky Colour</b>  | Sky colour is set separately.   |
| <b>Grass Colour</b>  | Natural colour spectrum (meadows, hills, etc.) can be separately set.                               |
| <b>Gamma</b>   | Sets the gradation curve according to the output of picture signal in relation to the input signal. |
| <b>Color Gamut</b>   | Selects the range of colors that can be expressed.  |
| <b>Edge Enhancer</b>   | Shows clearer and distinctive yet natural edges of the video.                                       |

|                                |   |
|--------------------------------|---|
| <b>Expert Pattern</b>          | [This feature is available on certain models only] Patterns used for expert adjustment.   |
| <b>Color Filter</b>            | Filters a specific color spectrum in RGB colors to fine-tune color saturation and hue accurately.   |
| <b>Color Temperature</b>       | Adjusts the overall tone of the screen as desired. In Expert mode, detailed fine-tuning can be set via Gamma method, etc.   |
| <b>Color Management System</b> | This system is used by experts to adjust color with a test pattern. They can select from six color areas (Red/ Green/Blue/Cyan/Magenta/Yellow) without affecting other colors. For normal images, adjustments may not result in noticeable color changes. |

#### To set Picture Option

|  |   |
|--|---|
| <b>SETTINGS&gt; PICTURE&gt; Picture Mode&gt; Picture Option</b>  |   |
| Adjusts detailed setting for images. Depending on input signal or other picture settings, the range of detailed items for adjustment may differ. |   |
| <b>Noise Reduction</b>   | Eliminates noise in the picture   |
| <b>MPEG Noise Reduction</b>  | Eliminates noise generated while creating digital picture signals.  |
| <b>Black Level</b>   | Adjusts the screen's brightness and contrast to fit them to the input picture's black level by using the blackness (black level) of the screen.                   |
| <b>Real Cinema</b>   | Optimizes the screen for movie viewing.   |
| <b>Motion Eye Care</b>   | [This feature is available on certain models only.] Saves power consumption by adjusting the brightness corresponding to the movement of the image on the screen. |

#### To set Picture Reset

|  |  |
|--|--|
| <b>SETTINGS&gt; PICTURE&gt; Picture Mode&gt; Picture Reset</b>   |  |
| Resets picture settings that the user customizes.<br>Each picture mode is reset. Select the desired picture mode to reset. |  |

#### To adjust Aspect Ratio

Selects the screen aspect ratio.

|  |   |
|--|---|
| <b>SETTINGS&gt; PICTURE&gt; Aspect Ratio</b> |   |
| <b>16:9</b>                                  | Resizes the image ratio to fit 16:9 screen.   |
| <b>21:9</b>                                  | Resizes the image ratio to fit 21:9 screen.   |
| <b>Just Scan</b>                             | Displays video images in the original size without removing parts of the edge of the image. In DTV, Component(over 720 p) mode, Just Scan is available.   |
| <b>Original</b>                              | When your TV receives a wide screen signal it will automatically change to the picture format broadcasted.  |
| <b>Full Wide</b>                             | When TV receives the wide screen signal, it will let you adjust the picture horizontally or vertically, in a linear proportion, to fill the entire screen fully. 4:3 and 14:9 video is supported in full screen without any video distortion through DTV input.<br>[This function is only available in the EU, China, and Hong Kong.]<br>In Analogue/DTV/AV/Scart mode, Full Wide is available. |
| <b>4:3</b>                                   | Resizes the image ratio to fit 4:3 screen.  |
| <b>14:9</b>                                  | You can view a picture format of 14:9 or a general TV programme in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is moved up or down.   |
| <b>Zoom</b>                                  | Resizes the image to fit the screen width. The top and bottom parts of the image may be cut off.  |
| <b>Cinema Zoom 1</b>                         | Choose Cinema Zoom when you want to enlarge the picture in correct proportion.  |

While viewing an external device, these cases may result in image burn:

- a video with stationary caption (such as network name)

- 4 : 3 aspect ratio mode for an extended period

Take caution when using these functions.

Available picture size may differ depending on the input signal.

**AUDIO**



**To use Sound Mode**

|  |  |
|--|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Mode</b>                             |  |
| Adjusts TV audio to an optimal level based on a selected sound mode. |  |
| <b>Standard</b>  | Suitable for all types of video.   |
| <b>News / Music / Cinema / Sport / Game</b>                          | Sets audio optimized for a specific genre.<br><b>Sport</b> : This feature is available in certain countries only.<br><b>News</b> : This feature is available on certain models only. |

**Using the Sound Effect function**

|   |  |
|---|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Effect</b>  |  |
| the user can select various sound effects.<br>Sound Effect function is available only for Standard mode in Sound Mode menu. |  |

**To adjust Clear Voice II function**

|   |  |
|---|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Effect&gt; Clear Voice II</b> |  |
| Boosts voice clarity from the TV.                             |  |

**To use MaxxAudio**

|   |  |
|---|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Effect&gt; MaxxAudio</b>  |  |
| MaxxAudio® by Waves, recipient of a Technical GRAMMY Award® is a suite of studio-quality sound tools for a superior listening experience. |  |

**To adjust User Setting function**

|   |   |
|---|---|
| <b>SETTINGS&gt; AUDIO&gt; Sound Effect&gt; User Setting</b>     |   |
| Adjusts the volume to a level of your choice using the User EQ. |   |
| <b>Reset</b>  | Resets voice options that the user has changed. |

**To adjust audio balance**

|  |  |
|--|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Effect&gt; Balance</b> |  |
| Adjusts left/right audio balance.                      |  |

**Initializing the Sound Effect function**

|  |  |
|--|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Effect&gt; Reset</b>       |  |
| Initialize the applied effect under the Sound Effect menu. |  |

**To set Auto Volume**

|  |  |
|--|--|
| <b>SETTINGS&gt; AUDIO&gt; Auto Volume</b>  |  |
| Auto Volume to On. Varying volume output from channel to channel is automatically adjusted for convenient TV watching when clicking through different programme. |  |

**To set sound out**

|   |  |
|---|--|
| <b>SETTINGS&gt; AUDIO&gt; Sound Out</b> |  |
| <b>TV Speaker</b>                       | Sound is output through the TV speaker.  |
| <b>Headphone</b>                        | [Only available for models with an earphone/headphone port]<br>Sound is output through the headphone connected to the earphone/headphone port.<br>If you connect headphones while the TV is powered on, it automatically detects the headphones and sounds through them. |

**To use DTV Audio Setting function****SETTINGS> AUDIO> DTV Audio Setting**

[Depending on model]

When different audio types exist in an input signal, this function allows you to select the audio type you want. If set to AUTO, the search order is HE-AAC → Dolby Digital+ → Dolby Digital → MPEG and output is produced in the first Audio Format found.

- In Italy / Latvia / Lithuania only, the search order is HE-AAC → Dolby Digital+ → MPEG → Dolby Digital.
- If the selected Audio Format is not supported, another Audio Format may be used for output

**To set AV Sync****SETTINGS> AUDIO> AV Sync. Adjust**

Synchronizes video and audio directly when they do not match.

**To use Sound Optimizer function****SETTINGS> AUDIO> Sound Optimizer**

Optimized sound for custom TV installation.

|                        |   |
|------------------------|---|
| <b>Normal</b>          | General sound mode.                     |
| <b>Wall Mount Type</b> | Optimizes sound for a wall-mounted TV.  |
| <b>Stand Type</b>      | Optimizes sound for a stand-mounted TV. |

**SETUP**



**To view programme information**

|   |
|---|
| <b>Press 'INFO' button.</b>   |
| Displays information on current programme and/or current time, etc. |

**TV Guide**

|   |
|---|
| <b>Press 'GUIDE' button.</b>  |
| [In Digital mode only]<br>Obtains information about programmes and airtime. Checks the broadcasting time of the desired programme and schedule viewing. |

**Automatically Setting Up Programme**

|  |
|--|
| <b>SETTINGS&gt; SETUP&gt; Auto Tuning</b>  |
| Automatically tunes the programmes.<br>1. Select Country where the TV is used. Programme settings change depending on the country you choose.<br>2. Initiate Auto Tuning.<br>3. Select Input Source of your choice.<br>4. Set Auto Tuning following screen instructions.<br>If Input Source is not connected properly, programme registration may not work.<br>Auto Tuning only finds programmes that are currently broadcasting.<br>If Lock System is turned on, a pop-up window will appear asking for password. |

**Cable DTV Setting option**

|  |   |
|--|---|
| When searching for programmes using FULL setting it can take a long time. The following values are needed in order to search all available programmes quickly and correctly. The commonly used values are provided as "default". |   |
| <b>Frequency</b>   | Enter a user-defined frequency.   |
| <b>Symbol rate</b>   | Enter a user-defined symbol rate (Symbol rate: Speed at which a device such as modem sends symbols to a programme). |
| <b>Modulation</b>  | Enter a user-defined modulation. (Modulation: Loading of audio or video signals onto carrier).                      |
| <b>Network ID</b>  | Unique identifier allocated for each user.  |
| <b>Start Frequency</b>   | Enter a user-defined start frequency range.   |
| <b>End Frequency</b>   | Enter a user-defined end frequency range.   |

**Cable DTV Setting**

|  |
|--|
| <b>SETTINGS&gt; SETUP&gt; Cable DTV Setting</b>  |
| [In Cable mode only]<br>When Channel Auto Update is On, you can update information for all the programmes that can be updated, including the programme currently being watched. When Channel Auto Update is Off, you can only update information for the programme currently being watched.<br>The range that a user can select from the Service Operator menu differs depending on number of Service Operator supported by each country.<br>If number of supported Service Operator for each country is 1, corresponding function becomes inactive. |

**To use Manual Tuning**

|  |
|--|
| <b>SETTINGS&gt; SETUP&gt; Manual Tuning</b>  |
| Adjusts programmes manually and saves the results.<br>For digital broadcasting, signal strength and signal quality can be checked.<br>For analogue broadcasting, you can set up station names and use fine tuning. Normally fine tuning is only necessary if reception is poor.<br>[This feature is available on certain models only]<br>You can also adjust the Frequency(KHz) and Bandwidth. |

**To edit programmes****SETTINGS> SETUP> Programme Edit**

Edits the saved programmes.

Set as favourite programme, block/unblock programme, skip programme etc. of the selected programme.

**To set favourite programmes****SETTINGS> SETUP> Programme Edit**

[This feature is available on certain models only.]

1. Select the channel you want.

2. Press the **FAV** button to select **Favourite Group** and then **OK**.

You can check your favourite channels by pressing the **LIST** button on the remote control.

**To use Favourite****Press the 'FAV' button.**

You can only view the channels you set as favourites.

**SETTINGS> SETUP> Programme Mode**

[Depending on model]

This function allows you to watch a tuned program in Antenna, Cable, Satellite, or CAM Mode.

- You can only watch programs in the selected mode.

- The CAM menu is only available when the CAM Mode is enabled. The menu name may vary depending on the CAM type.

**CI Information****SETTINGS> SETUP> CI Information**

- This function enables you to watch some encrypted services (pay services).

- If you remove the CI Module, you cannot watch pay services.

- CI (Common Interface) functions may not be possible depending upon the country broadcasting circumstances.

- When the module is inserted into the CI slot, you can access the module menu.

- To purchase a module and smart card, contact your dealer.

- When the TV is turned on after inserting a CI Module, you may not have any sound output. The Smart Card may not be compatible with the CI module.

- When using a CAM(Conditional Access Module), please make sure it meets fully the requirements of either DVB-CI or CI plus.

- An abnormal process of CAM(Conditional Access Module) may cause a bad picture.

- [Depending on model] If the TV does not display any video and audio when CI+ CAM is connected, please contact to the Antenna/Cable/Satellite Service Operator.

**Teletext [Depending on the country]****Press 'TEXT' button.**

Teletext is a free service provided by the TV station that offers text-based information about TV programmes, news and weather.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTTEXT systems.

- Colour button: To select the preceding or following page.

- Number button: Enters the desired page number.

-  $\wedge$  P  $\vee$  : To select the preceding or following page.

**Press 'T.OPT' button.**

\* Special Teletext Function

Select the Text Option menu.

- Index : Select each index page.

- Time : When viewing a TV programme, select this menu to display the time at the top right hand corner of the screen.

- Hold : Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages.

- Reveal : Select this menu to display concealed information, such as solutions to riddles or puzzles.

- Update : Displays the TV picture on the screen while waiting for a new teletext page.

- Language [In Digital Mode Only] : Sets Teletext language.

**Digital Teletext****Press the 'TEXT' button.**

[In UK/Ireland only]

The TV gives you access to digital teletext which gives much better text, graphics etc. than older analogue teletext. This digital teletext can access special digital teletext services and specific services which broadcast digital teletext.

\* Teletext within digital service

1. Press the numeric or  $\wedge$  P  $\vee$  button to select a certain service which broadcasts digital teletext.
2. Follow the indications on digital teletext and move onto the next step by pressing **TEXT**, **OK**, Navigation, Red, Green, Yellow, Blue or NUMBER buttons etc..
3. Press the number or  $\wedge$  P  $\vee$  button to use a different digital teletext service.

\* Teletext in digital service

1. Press the numeric or  $\wedge$  P  $\vee$  button to select a certain service which broadcasts digital teletext.
2. Press the **TEXT** or colour button to switch on teletext.
3. Follow the indications on digital teletext and move onto the next step by pressing **OK**, Navigation, Red, Green, Yellow, Blue or NUMBER buttons etc..
4. Press the **TEXT** or colour button to switch off digital teletext and return to TV viewing.

**TIME****To set current time****SETTINGS> TIME> Clock**

Checks or changes the time while watching TV.

|               |  |
|---------------|--|
| <b>Auto</b>   | Synchronizes the TV clock to the digital time information sent by the TV station.          |
| <b>Manual</b> | Sets the time and date manually if the auto setup does not correspond to the current time. |

**To set the TV to turn on and off automatically****SETTINGS> TIME> Off Time / On Time**

Sets On / Off time.

Select Off on Repeat to discontinue On Time / Off Time.

To use On Time / Off Time, set the current time correctly.

Even when the On Time function is on, the TV will turn off automatically in 120 minutes when no button is pressed within that time.

**To use Sleep Timer****SETTINGS> TIME> Sleep Timer**

Turns off the TV after a preset number of minutes.

To cancel the Sleep Timer, select Off.

**To set Automatic Standby****SETTING> TIME> Automatic Standby**

[This function is available on certain models or in certain countries only]

If you do not press any button on the TV or remote control for a certain period, the TV will automatically switch to standby mode.

This function does not work on Store Demo mode or while software update.

**LOCK****To set the password****SETTINGS> LOCK> Set Password**

Set or change the TV password.

The initial password is set as [0000].

When France is selected for Country, password is not '0','0','0','0' but '1','2','3','4'.

When France is selected for Country, password cannot be set as '0','0','0','0'.

**To lock the system****SETTINGS> LOCK> Lock System**

Locks the selected programme.

First set Lock System to On.

|                          |  |
|--------------------------|--|
| <b>Block Programme</b>   | Blocks programmes with content inappropriate for children. Programmes can be selected but the screen is blank and the audio is muted. To watch a locked programme, enter the password.   |
| <b>Parental Guidance</b> | This function operates according to information from the broadcaster. Therefore if the signal has incorrect information, this function does not operate. Prevents children from watching certain adult TV programmes according to the ratings limit set. Enter a password to watch a blocked programme. Ratings differ by country. |

**To use Key Lock****SETTINGS> LOCK> Key Lock**

Locks control buttons on the TV.

Key Lock function remains intact even in case of power outage or when the power cord is removed from the wall socket.

Key Lock function can only be set by remote control, and not by the button on the TV.

Even with Key Lock ON, TV's buttons can turn on the power.

**OPTION**



| SETTINGS> OPTION> Language(Language)  |  |
|---|--|
| You can select the language of the menu displayed on the screen and the digital sound broadcasting. |  |
| <b>Menu Language</b>  | Selects a language for the display text.   |
| <b>Audio Language</b>   | [In Digital mode Only]: Selects the desired language when watching digital broadcasting containing several voice languages.  |
| <b>Subtitle Language</b>  | [In Digital mode Only]: [This feature is available in certain countries only.]<br>Use the Subtitle function when two or more subtitle languages are broadcast.<br>- If subtitle data in a selected language is not broadcast, the default language subtitle will be displayed.   |
| <b>Text Language</b>  | [In Digital mode Only]: [This feature is available in certain countries only.]<br>Use the Text language function when two or more Text languages are broadcast.<br>- If teletext data in a selected language is not broadcast, the default Text language will be displayed.<br>- If you select the wrong local country, teletext may not appear correctly on the screen and some problems may occur during teletext operation. |

| SETTINGS> OPTION> Country  |  |
|--|--|
| [Depending on country]<br>Sets the country that the TV uses.<br>TV settings are changed according to the broadcast environment of the selected country.<br>If the country setting is changed, the Auto Tuning information screen may appear.<br>In a country that Digital broadcasting regulation isn't fixed, some DTV functions may not work depending on digital broadcasting circumstances.<br>If the country setting is set to "--", European terrestrial digital standard broadcasting programmes are available, but some DTV functions may not work properly. |  |

| SETTINGS> OPTION> Disability Assistance  |   |
|--|---|
| Audio commentary or subtitles are provided for those who are hard of hearing or visually impaired. |   |
| <b>Hard of Hearing</b>   | This function is used for the hearing impaired. If it is set to on, the subtitle is displayed by default.   |
| <b>Audio Description</b>   | This function is for the blind, and provides explanatory audio describing the current situation in a TV programme in addition to the basic audio. When Audio Description is selected On, basic audio and Audio Description are provided only for those programmes that have Audio Description included. |

**To set Power Indicator**

| SETTINGS> OPTION> Standby Light  |  |
|--|--|
| [This function is available on certain models or in certain countries only.]<br>Turns the standby light in the front panel of the TV on/off. |  |

**To set up USB storage**

| SETTINGS> OPTION> Divx(R) VOD |   |
|-------------------------------|---|
| <b>Registration</b>           | Checks DivX Reg. Code for replaying DivX protected videos. Register at <a href="http://vod.divx.com">http://vod.divx.com</a> . Use Reg. Code to rent or purchase movies at <a href="http://www.divx.com/vod">www.divx.com/vod</a> . <ul style="list-style-type: none"> <li>• Rented/purchased DivX files cannot be played if the DivX Registration Code of a different device is used. Use only the DivX Registration Code granted to this specific device.</li> <li>• Converted files not conforming to the DivX Codec Standard may not play or may produce abnormal sound.</li> </ul> |
| <b>Deregistration</b>         | Deregisters DivX.   |

**To specify Factory Reset****SETTINGS> OPTION> Factory Reset**

All stored information is deleted and TV settings are reset.  
TV turns itself off and back on, and all settings are reset.  
When Lock System is in place, a pop-up window appears and asks for password.  
Do not turn off the power during initialization.

**To change TV mode****SETTINGS> OPTION> Mode Setting**

Selects Standard or Store Demo.  
When in use in home, please select Standard.  
Store Demo mode is for store display.

**SETTINGS> OPTION> Customer Support> Software Update**

Uses Software Update to check and obtain the latest version. If not updated, certain functions may not work properly.

|                              |  |
|------------------------------|--|
| <b>Software Update</b>       | Set it to On. If an update is available, a prompt will appear to perform the update.   |
| <b>Automatic update mode</b> | [This feature is available on certain models only] If an update is available, the update automatically starts without prompting.   |
| <b>Check Update Version</b>  | [This feature is available on certain models only] Checks the latest update version installed. When a new update is available, the download process can be performed manually. |

- When the update starts, the update progress window appears for a short time and disappears.
- The latest version can be obtained via the digital broadcast signal or an internet connection.  
[Depending on model]
- Changing the programme while downloading the software via a digital broadcast signal interrupts the download process. Returning to the initial programme allows downloading to resume.
- If software is not updated, certain functions may not work properly.
- [For Finland/Sweden/Denmark/Norway models.]  
If the software update is performed via the broadcasting signal, you will be prompted to continue the update regardless of whether the Automatic update mode is enabled or not.
- [This feature is available in certain countries only.] It is also possible to check manually for available updates.

**SETTINGS> OPTION> Customer Support> Picture Test**

[This feature is available on certain models only.]  
Run a Picture Test first to verify that the image signal output is normal.  
If there is no problem with the test image, check connected external devices and the broadcast signal.

**SETTINGS> OPTION> Customer Support> Sound Test**

[This feature is available on certain models only.]  
Run a Sound Test first to verify that the sound signal output is normal.  
If there is no problem with the test sound, check connected external devices and the broadcast signal.

**Data Service****SETTINGS> OPTION> Data Service**

[Depending on country]  
This function allows users to choose between MHEG (Digital Teletext) and Teletext if both exist at the same time.  
If only one of them exists, either MHEG or Teletext is enabled regardless of which option you selected.

**To connect a USB device**

Plays content stored on a USB device (external HDD, USB memory stick) directly on the TV, easily and conveniently.  
 Connect the USB storage device to the TV's USB IN terminal.  
 The connected USB storage device can be used immediately.

**To remove the USB device**

**Q.MENU> USB device**  
 Select a USB storage device that you want to remove.  
 When you see a message that the USB device has been removed, separate the device from the TV.  
 Once a USB device has been selected for removal, it can no longer be read. Remove the USB storage device and then re-connect it.

**Using a USB storage device - warning**

- If the USB storage device has a built-in auto recognition program or uses its own driver, it may not work.
- Some USB storage devices may not work or may work incorrectly.
- Use only USB storage devices formatted with the Windows FAT32 or NTFS File System.
- For external USB HDDs, it is recommended that you use devices with a rated voltage of less than 5 V and a rated current of less than 500 mA.
- It is recommended that you use USB memory sticks of 32 GB or less and USB HDDs of 1 TB or less.
- If a USB HDD with power-saving function does not work properly, turn the power off and on. For more information, refer to the user manual of the USB HDD.
- Data in the USB storage device can be damaged, so be sure to back up important files to other devices. Data maintenance is the user's responsibility and the manufacturer is not responsible for data loss.

**To use USB storage**

**INPUT> USB> All Media / Movie List / Photo List / Music List**  
 Selects a file from the list. Displays the file that you choose.  
 Sets play related settings by checking option during disk playback.

- Movie List : This feature is available on certain models only.

**USB supporting file**

|                                     |  |
|-------------------------------------|--|
| Maximum data transfer rate          | 20 Mbps (megabits per second)  |
| External subtitle formats supported | *.smi, *.srt, *.sub (MicroDVD, SubViewer 1.0/2.0), *.ass, *.ssa, *.txt (TMPlayer), *.psb (PowerDivX) |
| Internal subtitle formats supported | XSUB (supports internal subtitles generated from DivX6)  |

**Available video file**

Maximum: 1920 x 1080 @ 30 p (only Motion JPEG 640 x 480 @ 30 p)

|                                |  |
|--------------------------------|--|
| .asf, .wmv                     | [Video] VC-1 Advanced Profile, VC-1 Simple and Main Profiles, MP43<br>[Audio] WMA Standard   |
| .3gp, .3gp2                    | [Video] H.264/AVC, MPEG-4 Part2<br>[Audio] AAC, AMR(NB/WB)   |
| .divx, .avi                    | [Video] DivX3.11, DivX4, DivX5, DivX6, XviD, H.264/AVC, Motion JPEG<br>[Audio] MPEG-1 Layer I, II, Dolby Digital, MPEG-1 Layer III (MP3), *DTS |
| .mp4, .m4v, .mov               | [Video] H.264/AVC, MPEG-4 Part 2, XviD<br>[Audio] AAC, MPEG-1 Layer III (MP3)  |
| .mkv                           | [Video] H.264/AVC, XviD, MPEG-4 Part2<br>[Audio] HE-AAC, Dolby Digital, MPEG-1 Layer III (MP3), *DTS   |
| .ts, .trp, .tp, .mts,<br>.m2ts | [Video] H.264/AVC, MPEG-2<br>[Audio] MPEG-1 Layer I, II, MPEG-1 Layer III (MP3), Dolby Digital,<br>Dolby Digital Plus, AAC                     |
| .vob                           | [Video] MPEG-1, MPEG-2<br>[Audio] Dolby Digital, MPEG-1 Layer I, II, DVD-LPCM  |
| .mpg, .mpeg, .mpe              | [Video] MPEG-1<br>[Audio] MPEG-1 Layer I, II   |

\*DTS : Depending on model

**Available music file**

|            |  |
|------------|--|
| mp3        | [Bit rate] 32 Kbps - 320 Kbps<br>[Sample freq.] 16 kHz - 48 kHz<br>[Support] MPEG1, MPEG2, Layer2, Layer3  |
| AAC        | [Bit rate] Free Format<br>[Sample freq.] 8 kHz ~ 48 kHz<br>[Support] ADIF, ADTS  |
| M4A        | [Bit rate] Free Format<br>[Sample freq.] 8 kHz ~ 48 kHz<br>[Support] MPEG-4  |
| OGG        | [Bit rate] Free Format<br>[Sample freq.] ~ 48 kHz<br>[Support] Vorbis  |
| WMA        | [Bit rate] 128 kbps ~ 320 kbps<br>[Sample freq.] 8 kHz ~ 48 kHz<br>[Support] WMA7, 8, 9 Standard   |
| WMA 10 Pro | [Bit rate] ~ 768 kbps<br>[Channel / Sample freq.]<br>- M0 : Up to 2 / 48 kHz<br>- M1 : Up to 5.1 / 48 kHz<br>- M2 : Up to 5.1 / 96 kHz<br>[Support] WMA 10 Pro |

**Available photo file**

|                                |   |
|--------------------------------|---|
| 2D(jpeg, jpg, jpe),<br>3D(jps) | [Available file type]<br>SOF0: baseline, SOF1: Extend Sequential,<br>SOF2: Progressive<br>[Photo size]<br>Minimum: 64 x 64<br>Maximum: Normal Type: 15360 (W) x 8640 (H)<br>Progressive Type: 1920 (W) x 1440 (H) |
| 3D (mpo)                       | [Available file type] mpo<br>[Photo size]<br>4:3 size: 3,648 x 2,736 / 2,592 x 1,944 / 2,048 x 1,536<br>3:2 size: 3,648 x 2,432   |
| BMP                            | [Photo size]<br>Minimum : 64 x 64<br>Maximum : 9600 x 6400  |
| PNG                            | [Available file type] Interlace, Non-Interlace<br>[Photo size]<br>Minimum : 64 x 64<br>Maximum : Interlace : 1200 x 800<br>Non-Interlace : 9600 x 6400  |

- BMP and PNG format files may be slower to display than JPEG.
- The 3D function may differ, depending on the model.

**Items to note when playing videos**

- Some subtitles created by users may not work properly.
- The video and subtitle files should be placed in the same folder. For subtitles to display correctly, the video and subtitle files must have the same name.
- We do not support any stream that contains GMC (Global Motion Compensation) or Qpel (Quarterpel Motion Estimation).
- Only H.264/AVC profile level 4.1 and lower is supported.
- Video files that exceed 50 GB (gigabyte) are not supported for playback. The file size limit is dependent on the encoding environment.
- The DTS is supported only for playback of USB and HDMI video files [depending on the model].
- The DTS support may vary depending on your country and model.

**NETWORK**

To connect to the network [Depending on model]

**SETTINGS> NETWORK> Network Setting**

Set IP Mode to **IP Auto Setting** or **IP Manual Setting**.

|                        |   |
|------------------------|---|
| <b>IP Auto Setting</b> | Select this mode if your Internet service is broadband. |
|------------------------|---|

|                          |  |
|--------------------------|--|
| <b>IP Manual Setting</b> | Select this mode if you are using the Internet in an office (for example, fixed IP). |
|--------------------------|--|

If you select **IP Manual Setting**, type in the IP address.

Select **OK** to connect to the network.

**Setting a network - warning**

- Use a standard LAN cable (Cat5 or higher with RJ45 connector, 10 Base-T or 100 Base TX LAN port).
- Resetting your modem can cause network connection problems. To resolve the problem, turn the power off, disconnect and reconnect, and then turn the power back on.
- LG Electronics is not responsible for any Internet connection problems or any faults, malfunctions and errors caused by an Internet connection.
- A network connection may not work properly depending on the Internet service provider.
- A DSL modem is required for a DSL service; a cable modem is required for a cable service. Only a limited number of Internet connections may be available, and TV network setting may not be available depending on your contract with your Internet Service Provider (ISP). (If only one device is allowed per line and the PC is already connected, other devices cannot be used.)
- If you do not turn off the entire local home network, network traffic may occur on some devices.
- Invalid settings on network devices can cause the TV to run slowly or not operate properly. Install the devices correctly according to the appropriate manual and set the network.

**SETTINGS> NETWORK> Network Status**

Display the network status.

- Internet is connected : Externally connected
- Network is connected : Only internally connected
- Not connected : When there is no network connection

If the following symptoms occur, please carry out the checks and adjustments described below. There may be no malfunction.

### Operational problems

Cannot view certain programmes.

Adjust the location or orientation of the antenna.

Save the programmes you wish to view using Auto Tuning or Programme Edit.

There is a delay after the TV is switched on before the image is fully visible.

This is normal. Any delay is due to an image deletion process which cleans up image noise that may occur when the TV is first switched on.

### Image problems

Images from previous programme or other programmes linger or the screen displays annoying lines.

Adjusts the orientation of the antenna to the TV transmitter, or refer to the manual for instructions on connecting the antenna.

Vibrating horizontal /vertical lines and fishnet patterns appear momentarily

Such a problem may happen when there is strong electronic interference. Turn off other electronic devices such as mobile phones, power tools and other small electrical appliances.

The screen display freezes or does not work properly during a digital broadcast.

This may occur in case of a weak signal or unstable reception. Adjust the antenna orientation and cable connections.

If the signal strength or quality is low on Manual Tuning, check with the TV station or administration office.

Digital broadcasting is not available even though the cable is connected.

Check with the cable operator providing your subscription and/or signal. (Depending on your subscription, digital broadcasting may not be supported.)

The display is inactive or unclear when connected to an HDMI® source.

Check the HDMI® cable specifications. If your HDMI® cable is not genuine, images may fade in and out or not be displayed properly.

Ensure that all cables are securely connected. When connections are not secure, images may not be properly displayed.

Does not work with a USB storage device.

Verify that the USB device and cable is version 2.0 or higher.

**Sound problems**

Screen display is on but there is no sound.

Check other TV programmes.

[Depending on model] Ensure the TV Speaker is set to On.

For an analogue broadcast, stereo is not clear or sound comes from one speaker only.

In a poor reception area (areas with weak or unstable signals) or if Multi Audio is not stable, select Mono on Multi Audio.

Adjust the Balance using the Navigation Button.

TV sound is not in sync with the image or the sound breaks up occasionally.

If the issue affects a specific TV programme only, it may be caused by problems with the broadcast signal for the individual station. Check with the TV station or your cable operator.

The volume changes when I change programme.

Volume can vary from programme to programme.

Set Auto Volume to On.

On certain programmes, there is no sound at all, or only the background music can be heard (in case of a programme created for overseas viewers).

In Language, set Language → Audio Language to the language of your choice. Even if you change the language on Multi Audio, you can go back to the default setup once you turn off the power or change the programme.

There is no sound when connected to an HDMI® / USB source.

Make sure that the High Speed HDMI™ or HDMI® cable is high speed.

Check that the USB device and cable is version 2.0 or higher.

Use only regular music (\*.mp3) files.

**PC connection problem (Only for models supporting PC connection)**

The screen display does not come on after connecting to the computer.

Make sure that the computer and the TV are securely connected.

Check whether the resolution is correctly set for PC input.

To use the TV as a secondary monitor, check if the connected desktop or laptop supports dual monitor display.

There is no sound after connecting the computer with the HDMI cable.

Check with manufacturer of your video card to ensure it supports HDMI voice output. (Video cards in DVI format require connection of a separate sound cable.)

When connected to the computer, the display is partially cut off or shifts to one side.

Set the resolution to support PC input.

(If this does not work, reboot the computer.)

**Problems replaying movies in USB**

[This feature is available on certain models only.]

I cannot view the files on the Movie List.

Check whether the file on the USB storage device can be read on a computer.

Check whether the file extension is supported.

The file is invalid. The above error message appears. Sound, video or subtitles is not normal.

Make sure that the file replays normally on the computer's video player. (Check for damaged files.)

Check if USB media can support the selected file.

- For information on requesting service, refer to the following menu.

[This feature is available on certain models only.]

**SETTINGS> OPTION> Customer Support> Product/Service Info.**

## HDMI1, HDMI2, DisplayPort

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**.  
When you return to the previous menu, press  **BACK**.



Easy control



Function



PIP



Screen



Settings




Reset

Each option is described below.

| Menu                |                   | Description   |
|---------------------|-------------------|---|
| <b>Easy control</b> | <b>Brightness</b> | Adjusts the brightness and contrast of the screen.                      |
|                     | <b>Contrast</b>   |   |
|                     | <b>Volume</b>     | Adjusts the volume level.   |
|                     | <b>Input</b>      | Changes the input source.   |
|                     | <b>Ratio</b>      | Adjusts the screen ratio.   |
| <b>Function</b>     |                   | Adjusts SES, picture mode and MaxxAudio.                                |
| <b>PIP</b>          |                   | Displays the screens of two input modes on one TV.                      |
| <b>Screen</b>       | <b>Picture</b>    | Adjusts the sharpness, black level, and response time of the screen.    |
|                     | <b>Color</b>      | Adjusts the gamma, Colour temperature and Colour balance of the screen. |
| <b>Settings</b>     |                   | Sets the Language, Standby Light, Automatic Standby and Key Lock.       |
| <b>Reset</b>        |                   | Resets to the default settings as of the day of purchase.               |

## Ratio Settings

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**.  
When you return to the previous menu, press  **BACK**.

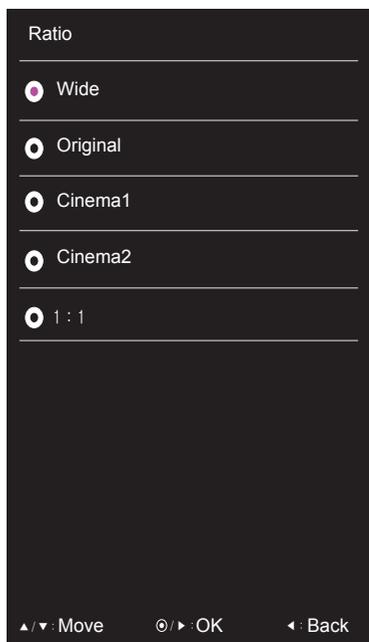

Each option is described below.

| Menu> Easy control> Ratio | Description  |
|---------------------------|--|
| <b>Wide</b>               | Displays the video in wide-screen, regardless of the video signal input.   |
| <b>Original</b>           | Displays a video according to the input video signal aspect ratio.   |
| <b>Cinema1</b>            | Enlarges the screen with an aspect ratio of 21:9. (at 1080 p)  |
| <b>Cinema2</b>            | Enlarges the screen with an aspect ratio of 21:9 including the black box area at the bottom for subtitles. (at 1080 p) |
| <b>1:1</b>                | The aspect ratio is not adjusted from the original.  |




### NOTE

- The display may look the same for Wide, Original and 1:1 options at the recommended resolution (2560 x 1080).
- The ratio is disabled in the interlaced signal.

**Function Settings**

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**. When you return to the previous menu, press  **BACK**.

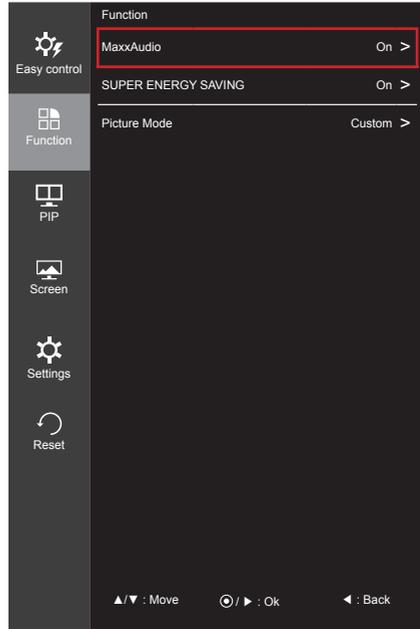


Each option is described below.

| Menu> Function                   | Description     |  |
|----------------------------------|-----------------|--|
| <b>MaxxAudio</b>                 | <b>On</b>       | MaxxAudio® by Waves, recipient of a Technical GRAMMY Award® is a suite of studio-quality sound tools for a superior listening experience.        |
|                                  | <b>Off</b>      | Disables the MaxxAudio function.   |
| <b>SES (Super Energy Saving)</b> | <b>On</b>       | Enables the SES function, which allows you to save energy according to the SES efficiency level.   |
|                                  | <b>Off</b>      | Disables the SES function.   |
| <b>Picture Mode</b>              | <b>Custom</b>   | Allows the user to adjust each element. The Colour mode of the main menu can be adjusted.  |
|                                  | <b>Reader 1</b> | Adjusts the screen to improve the visual effects to read the news. if you want to make the screen brighter, you can adjust it on OSD menu.       |
|                                  | <b>Reader 2</b> | Adjusts the screen to improve the visual effects to display the cartoon. if you want to make the screen brighter, you can adjust it on OSD menu. |
|                                  | <b>Photo</b>    | Optimizes the screen to view photos.   |
|                                  | <b>Cinema</b>   | Optimizes the screen to improve the visual effects of a video.   |
|                                  | <b>Game</b>     | Optimizes the screen for game play.  |

### PIP Settings


- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**. When you return to the previous menu, press  **BACK**.

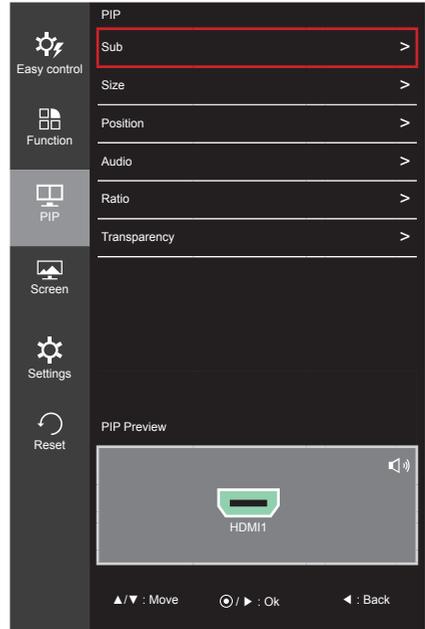

- On page 20 for the setting of that option "PIP function" section for more information.

**Picture Settings**

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK**.
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- 4 When you are finished, press **EXIT**. When you return to the previous menu, press **BACK**.

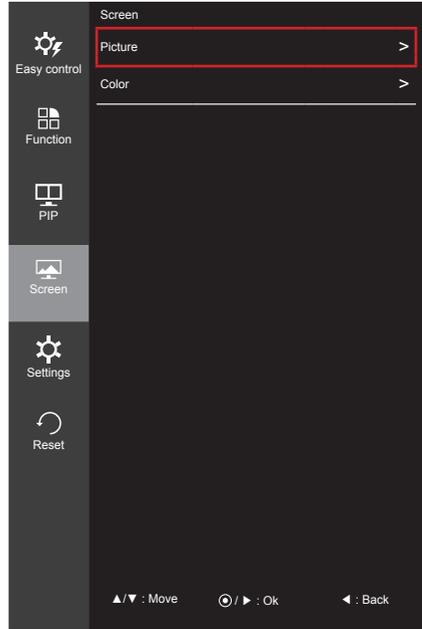


Each option is described below.

| Menu> Screen> Picture | Description  |
|-----------------------|--|
| <b>Sharpness</b>      | Adjusts the sharpness of the screen.   |
| <b>Black Level</b>    | Sets the offset level (for HDMI only).<br><b>Offset:</b> as a reference for a video signal, this is the darkest Colour the TV can display.   |
|                       | <b>High</b> The picture of the screen gets brighter.   |
|                       | <b>Low</b> The picture of the screen gets darker.  |
| <b>Response Time</b>  | Sets a response time for displayed pictures based on the speed of the screen. For a normal environment, it is recommended that you use Normal. For a fast-moving picture, it is recommended that you use High. Setting to High may cause image sticking. |
|                       | <b>High</b> Sets the response time to High.  |
|                       | <b>Middle</b> Sets the response time to Middle.  |
|                       | <b>Low</b> Sets the response time to Low.  |
|                       | <b>Off</b> Off the response time.  |

## Color Settings

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**.  
When you return to the previous menu, press  **BACK**.

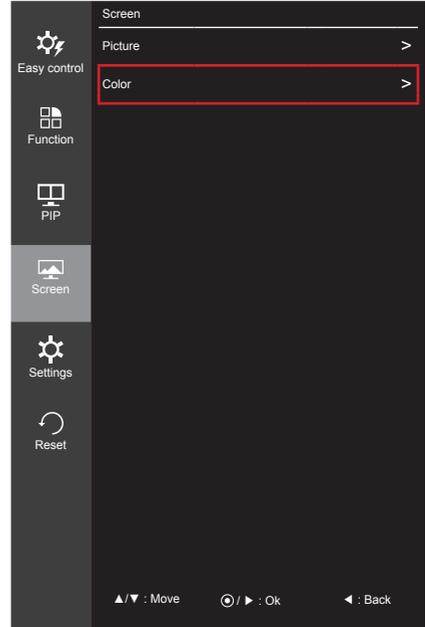


Each option is described below.

| Menu>                     | Description  |  |
|---------------------------|--|--|
| Screen> Color             |  |  |
| <b>Gamma</b>              | Custom gamma setting: When using the gamma 0, gamma 1, and gamma 2 TV settings, higher gamma settings mean a brighter image is displayed and vice versa.   |  |
| <b>Color Temp</b>         | Selects the factory default picture Colour.<br><b>Custom:</b> You can customize the picture Colour.<br><b>Warm:</b> Sets the screen Colour to a reddish tone.<br><b>Medium:</b> Sets the screen Colour between a red and blue tone.<br><b>Cool:</b> Sets the screen Colour to a bluish tone. |  |
| <b>Red / Green / Blue</b> | You can customize the picture Colour using Red, Green, and Blue Colours.   |  |
| <b>Six Color</b>          | Meets the user requirements for Colours through adjusting the Colour and saturation of the six Colours (red, green, blue, cyan, magenta, yellow) and saving the settings.  |  |
|                           | <b>Hue</b>   | Adjusts tone of the screen.  |
|                           | <b>Saturation</b>  | Adjusts the saturation of the screen Colours. The lower the value, less saturated and bright the Colours become. The higher the value, the more saturated and dark the Colours become. |
| <b>Reset</b>              | Returns the Colour settings to the default settings.   |  |

**Settings**

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK**.
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK**.
- 4 When you are finished, press **EXIT**. When you return to the previous menu, press **BACK**.

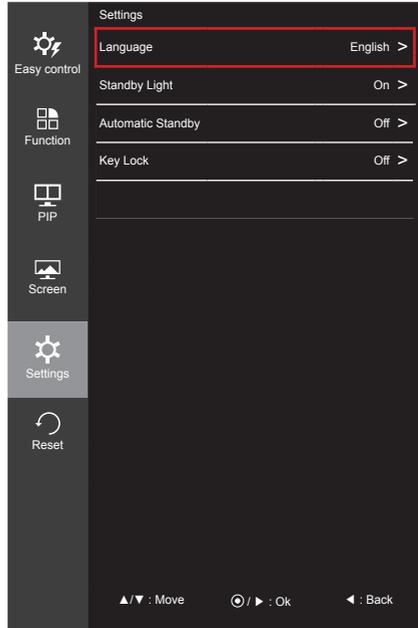


Each option is described below.

| Menu> Settings           | Description                                   |  |
|--------------------------|---|--|
| <b>Language</b>          | Sets the menu screen to the desired language. |  |
| <b>Standby Light</b>     | <b>On</b>                                     | The Standby Light is automatically turned on.      |
|                          | <b>Off</b>                                    | The Standby Light is turned off.                   |
| <b>Automatic Standby</b> | <b>Off</b>                                    | The Automatic Standby mode is turned off.          |
|                          | <b>4H / 6H / 8H</b>                           | Sets the time frame of the Automatic Standby mode. |
| <b>Key Lock</b>          | Prevents incorrect key input.                 |  |
|                          | <b>On</b>                                     | Key input is disabled.                             |
|                          | <b>Off</b>                                    | Key input is enabled.                              |

## Reset

- 1 Press **SETTINGS** to access the main menus.
- 2 Press the Navigation buttons to scroll to one of the following menus and press **OK** .
- 3 Press the Navigation buttons to scroll to the setting or option you want and press **OK** .
- 4 When you are finished, press **EXIT**.  
When you return to the previous menu, press  **BACK**.

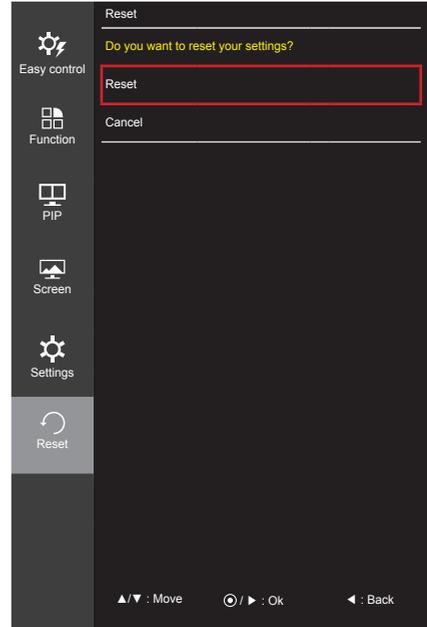

Each option is described below.

| Menu> Reset                                | Description                     |
|--|---------------------------------|
| <b>Do you want to reset your settings?</b> |                                 |
| <b>Reset</b>                               | Resets to the default settings. |
| <b>Cancel</b>                              | Cancel the reset.               |

# MAINTENANCE

## Cleaning Your TV

Clean your TV regularly to keep the best performance and to extend the product's lifespan.



### CAUTION

- Make sure to turn the power off and disconnect the power cord and all other cables first.
- When the TV is left unattended and unused for a long time, disconnect the power cord from the wall outlet to prevent possible damage from lightning or power surges.

## Screen and frame

To remove dust, wipe the surface with a dry and soft cloth.

To remove major dirt, wipe the surface with a soft cloth dampened in clean water or a diluted mild detergent. Then wipe immediately with a clean and dry cloth.



### CAUTION

- Do not push, rub, or hit the surface with your fingernail or a sharp object, as this may result in scratches on the screen and image distortions.
- Do not use any chemicals, such as waxes, benzene, alcohol, thinners, insecticides, air fresheners, lubricants, as these may damage the screen's finish and cause discolourations.

## Cabinet and stand

To remove dust, wipe the cabinet with a dry and soft cloth.

To remove major dirt, wipe the cabinet with a soft cloth dampened in a clean water or water containing a small amount of mild detergent.




### CAUTION

- Do not spray liquid onto the surface. If water enters the TV, it may result in fire, electric shock, or malfunction.
- Do not use any chemicals as this may deteriorate the surface.

## Power cord

Remove the accumulated dust or dirt on the power cord regularly.

## Preventing “Image burn” or “Burn-in” on your TV screen

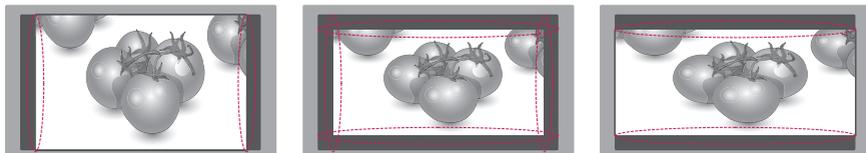

- If a fixed image displays on the TV screen for a long period of time, it will be imprinted and become a permanent disfigurement on the screen. This is “image burn” or “burn-in” and not covered by the warranty.
- If the aspect ratio of the TV is set to 4:3 for a long period of time, image burn may occur on the letterboxed area of the screen.
- Avoid displaying a fixed image on the TV screen for a long period of time (2 or more hours for LCD) to prevent image burn.

# TROUBLESHOOTING

| Symptom   | Troubleshooting  |
|---|--|
| No image is displayed.  | <ul style="list-style-type: none"> <li>• Check whether there is a power cut or whether the power cord is properly connected to the power outlet.</li> <li>• Check if the standby indicator is turned off.</li> <li>• If the screen is turned off due to use of the Energy Saving mode, press any button on the remote control to disable the Energy Saving mode and display the image.</li> <li>• Move the mouse or press any key, then the screen will appear.</li> </ul> |
| The 'Out of Range' message is displayed on the screen.                        | <ul style="list-style-type: none"> <li>• This symptom occurs when signals from the PC (video card) are out of the horizontal or vertical frequency range of the product. Please see the Product Specification section of this manual and configure your display again.</li> </ul>  |
| The 'No Signal' message is displayed on the screen.                           | <ul style="list-style-type: none"> <li>• This symptom occurs when the signal cable between the PC and the product is not connected. Check the signal cable and connect it again.</li> <li>• Check if the input setting is correct when the PC and the product are connected.</li> </ul>  |
| The screen position is incorrect when using a PC.                             | <ul style="list-style-type: none"> <li>• Check whether the resolution or frequency of the video card is set within the appropriate range for the product and go to Control Panel&gt; Display&gt; Settings to set it to the recommended resolution.</li> </ul>  |
| There are still images sticking after power off.                              | <ul style="list-style-type: none"> <li>• Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image.</li> <li>• Use a screen saver to protect the screen when using the product for a prolonged period of time.</li> </ul>  |
| The display is discoloured (16 Colour).                                       | <ul style="list-style-type: none"> <li>• Set the Colour to 24 bit (true Colour) or higher. In Windows, go to Control Panel&gt; Display&gt; Settings&gt; Colour Quality.</li> </ul>   |
| The screen Colour is unstable or the images are displayed in only one Colour. | <ul style="list-style-type: none"> <li>• Check if the signal cable is connected properly. Reconnect the cable or reinsert the PC's video card.</li> </ul>  |
| Spots appear on the screen.   | <ul style="list-style-type: none"> <li>• When using the Product, pixilated spots (red, green, blue, white or black) may appear on the screen. This is normal for the LCD screen. It is not an error nor is it related to the Product's performance.</li> </ul>   |
| The 'Key Locked' message displays on the screen.                              | <ul style="list-style-type: none"> <li>• The key lock is enabled. Go to Menu&gt; Settings (Lock) and set 'Key Lock' to Off.</li> </ul>   |
| The remote control is not working.  | <ul style="list-style-type: none"> <li>• Make sure that there are no obstacles between the remote control and the Product.</li> <li>• Check whether the batteries are correctly inserted with the correct polarity.</li> <li>• If the batteries are weak, replace both of the batteries with new ones.</li> <li>• The product may malfunction in a place where a lamp with an electronic stabilizer (3-wavelength lamp) is installed.</li> </ul>                           |
| Nothing is displayed on the TV screen.  | <ul style="list-style-type: none"> <li>• Use the TV/PC switch key to select TV.</li> </ul>   |

**NOTE**

- **Vertical Frequency:** In order to display an image, the screen must be refreshed dozens of times per second like a fluorescent lamp. The number of times the screen is refreshed per second is called vertical frequency or refresh rate and is represented by Hz.
- **Horizontal Frequency:** The time it takes to display one horizontal line is called the horizontal cycle. The number of horizontal lines displayed in one second can be calculated by dividing one by the horizontal cycle. This is called horizontal frequency and is represented by kHz.
- Check if the video card's resolution or frequency is within the range allowed by the Product and set to the recommended (optimal) resolution in **Control Panel> Display> Settings**.
- Failing to set the video card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area or misalignment of the display.
- The configuration procedure may differ depending on your computer and/or operating system. Also, some video cards may not support certain resolutions. If this is the case, contact the manufacturer of the computer or video card for assistance.
- Some video cards may not support the 2560 x 1080 resolution.  
If the resolution cannot be displayed, contact the manufacturer of your video card.

# SPECIFICATIONS

|                                       | Satellite Digital TV <sup>1</sup> | Digital TV     | Analogue TV   |
|---------------------------------------|-----------------------------------|----------------|---|
| Television system                     | DVB-T/T2<br>DVB-C<br>DVB-S/S2     | DVB-T<br>DVB-C | PAL/SECAM B/G/D/K,<br>PAL I/I', SECAM L/L <sup>12</sup>                 |
| Programme coverage                    | VHF, UHF<br>C-Band, Ku-Band       | VHF, UHF       | VHF: E2 to E12, UHF : E21 to E69,<br>CATV: S1 to S21, HYPER: S21 to S47 |
| Maximum number of storable programmes | 6,000                             | 1,500          |   |

1 Only DVB-T2 support models

2 Except for Nordic countries (Denmark, Finland, Norway and Sweden)

|   |  |   |
|---|--|---|
| Panel   | Screen Type                              | 730 mm Wide   |
|   | Pixel Pitch                              | 0.2628 mm (H) x 0.2628 mm (V)   |
| Video Signal                                  | Max. Resolution                          | 2560 × 1080 @ 60 Hz   |
|   | Recommended Resolution                   | 2560 × 1080 @ 60 Hz   |
|   | Horizontal Frequency                     | 30 kHz to 90 kHz  |
|   | Vertical Frequency                       | 56 Hz to 75 Hz  |
|   | Synchronization Type                     | Digital   |
| Input Connector                               |  | TV, Component, AV1(SCART), AV2(CVBS), HDMI*2, USB, DP, PCMCIA, LAN(Only UK)       |
| Power   | Rated Voltage                            | 19 V --- 3.2 A  |
|   | Power Consumption                        | On Mode : 45 W (typ.)<br>Off Mode ≤ 0.5 W   |
| AC/DC Adapter                                 |  | Manufacturer : LIEN CHANG, Model : LCAP39<br>Manufacturer : APD, Model : DA-65G19 |
| Tilt  | Tilt Range                               | -5 to 20°   |
| Dimensions (Width x Height x Depth)<br>Weight | With Stand                               |   |
|   | 703.0 mm x 414.2 mm x 213.2 mm<br>5.7 kg |   |
|   | Without Stand                            |   |
|   | 703.0 mm x 328.5 mm x 64.0 mm<br>5.2 kg  |   |
| Environmental conditions                      | Operating Temperature                    | 10 °C to 35 °C  |
|   | Operating Humidity                       | 20 % to 80 %  |
|   | Storage Temperature                      | -10 °C to 60 °C   |
|   | Storage Humidity                         | 5 % to 90 %   |

Product specifications shown above may be changed without prior notice due to upgrade of product functions.

**HDMI / DisplayPort(PC) supported mode**

| Resolution  | Horizontal Frequency(kHz) | Vertical Frequency(Hz) |
|-------------|---------------------------|------------------------|
| 720 x 400   | 31.468                    | 70.080                 |
| 640 x 480   | 31.469<br>37.500          | 59.940<br>75.000       |
| 800 x 600   | 37.879<br>46.875          | 60.317<br>75.000       |
| 1024 x 768  | 48.363<br>60.023          | 60.004<br>75.029       |
| 1152 x 864  | 67.500                    | 75.000                 |
| 1280 x 720  | 45.000                    | 60.000                 |
| 1280 x 1024 | 63.981<br>79.976          | 60.020<br>75.025       |
| 1600 x 900  | 60.000                    | 60.000                 |
| 1680 x 1050 | 65.290                    | 59.954                 |
| 1920 x 1080 | 67.500                    | 60.000                 |
| 2560 x 1080 | 66.700                    | 60.000                 |

**NOTE**

- The recommended resolution is 2560 x 1080 / 60 Hz. However, it may not be supported depending on your PC or AV model.

**HDMI(VIDEO) supported mode**

| Resolution  | Horizontal Frequency(kHz) | Vertical Frequency(Hz) |
|-------------|---------------------------|------------------------|
| 720 x 480   | 31.500                    | 60.000                 |
| 720 x 576   | 31.250                    | 50.000                 |
| 1280 x 720  | 37.500<br>45.000          | 50.000<br>60.000       |
| 1920 x 1080 | 33.750                    | 60.000                 |
|             | 28.125                    | 50.000                 |
|             | 33.750                    | 30.000                 |
|             | 56.250<br>67.500          | 50.000<br>60.000       |

**Component supported mode**

| Resolution  | Horizontal Frequency(kHz) | Vertical Frequency(Hz) |
|-------------|---------------------------|------------------------|
| 720 x 480   | 15.730                    | 59.940                 |
|             | 15.750                    | 60.000                 |
| 720 x 576   | 15.625                    | 50.000                 |
| 720 x 480   | 31.470                    | 59.940                 |
|             | 31.500                    | 60.000                 |
| 720 x 576   | 31.250                    | 50.000                 |
| 1280 x 720  | 44.960                    | 59.940                 |
|             | 45.000                    | 60.000                 |
|             | 37.500                    | 50.000                 |
| 1920 x 1080 | 33.720                    | 59.940                 |
|             | 33.750                    | 60.000                 |
|             | 28.125                    | 50.000                 |
|             | 56.250                    | 50.000                 |
|             | 67.432                    | 59.940                 |
|             | 67.500                    | 60.000                 |

**Component port connecting information**

| Component ports on the TV | Y | P <sub>B</sub> | P <sub>R</sub> |
|---------------------------|---|----------------|----------------|
|                           |   |                |                |

| Video output ports on DVD player | Y | P <sub>B</sub> | P <sub>R</sub> |
|----------------------------------|---|----------------|----------------|
|                                  | Y | B-Y            | R-Y            |
|                                  | Y | C <sub>b</sub> | C <sub>r</sub> |
|                                  | Y | P <sub>b</sub> | P <sub>r</sub> |

**NOTE**

- Avoid keeping a fixed image on the set's screen for prolonged periods of time. The fixed image may become permanently imprinted on the screen. Use a screen saver when possible.
- There may be interference relating to resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode to another resolution or change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.
- The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- If using a sound card, adjust PC sound as required.



Make sure to read the Safety Precautions before using the product.

Keep the Owner's Manual (CD) in an accessible place for future reference.

The model and serial number of the TV is located on the back and one side of the TV. Record it below should you ever need service.

MODEL \_\_\_\_\_

SERIAL \_\_\_\_\_