

**LG *VOLT2***<sup>™</sup>

**User Guide**



# Table of Contents

---

Introduction.....	1
About the User Guide.....	1
Get Started.....	2
Phone Layout.....	2
microSIM Card.....	4
Handling the microSIM Card.....	4
Insert microSIM Card.....	5
microSD Card.....	6
Insert microSD Card.....	7
Unmount the microSD Card.....	8
Remove microSD Card.....	9
Format microSD Card.....	9
Battery Use.....	9
Battery Capacity.....	9
Charge the Battery.....	9
Turn Your Phone On and Off.....	11
Use the Touchscreen.....	11
Activation and Service.....	15
Complete the Setup Screens.....	16
Basic Operations.....	18
Basics.....	18
Home Screen and Applications List.....	18
Select Options and Navigate Screens.....	18
Menu Operations.....	18
Phone Settings Menu.....	19
Portrait and Landscape Screen Orientation.....	19
Capture Screenshots.....	19
Applications.....	20
Launch Applications.....	20
Apps List.....	20
Phone Number.....	22
Airplane Mode.....	22

Airplane Mode .....	22
Enter Text.....	23
QWERTY Keyboard.....	24
Phone Keyboard .....	25
Tips for Editing Text .....	25
Search Your Phone and the Web .....	28
Phone and Web Search Using Text Entry .....	28
Phone and Web Search Using Voice Command.....	29
Clip Tray.....	29
Google Account.....	30
Create a Google Account.....	30
Sign into Your Google Account.....	30
Google Play Store .....	31
Find and Install an Application .....	31
Launch an Installed Application .....	32
Reinstall an Application.....	32
Lock and Unlock Your Screen .....	32
Unlock Your Screen Using the Knock Code Feature.....	33
Update Your Phone.....	34
Update PRL.....	34
Update Profile .....	34
Update Firmware .....	34
Update LG Software .....	35
UICC Unlock .....	35
Your Phone Interface .....	36
Home Screen Basics.....	36
Home Screen Layout .....	36
Extended Home Screens .....	37
Status Bar .....	37
Notifications Window.....	40
Customize the Home Screen .....	41
Create Shortcuts .....	41
Add and Remove Widgets on the Home Screen .....	42
Change the Phone's Wallpaper .....	43
Phone App.....	44

Place and Answer Calls .....	44
Call Using the Phone Dialer.....	44
Answer Phone Calls.....	45
In-Call Screen Layout and Operations.....	45
Place Calls from Contacts/Call History .....	47
Place a Call from Contacts .....	47
Call from Call Logs.....	47
Optional Services .....	47
Voicemail Setup .....	48
Visual Voicemail.....	48
Set Up Visual Voicemail.....	48
Review Visual Voicemail.....	49
Visual Voicemail Options .....	49
Configure Visual Voicemail Settings.....	50
Change Your Main Greeting via the Voicemail Menu.....	51
Caller ID Blocking .....	51
Call Waiting.....	51
Conference Calling .....	52
Call Forwarding.....	52
Call Settings .....	53
Contacts .....	54
Add a Contact .....	54
Check Contacts.....	55
Edit a Contact.....	55
Delete a Contact .....	56
Join and Separate Contacts.....	56
Import and Back Up Contacts .....	56
Import Contacts.....	56
Back Up Contacts .....	57
Messaging and Internet.....	58
Text and Multimedia Messaging .....	58
Compose Text Messages .....	58
Read and Reply to Text Messages.....	59
Send a Multimedia Message (MMS).....	59
Save and Resume a Draft Message.....	60

Managing Message Conversations .....	60
Text and Multimedia Message Options .....	62
Create and Send Gmail .....	64
Create a Google Account.....	64
Sign in to Your Google Account.....	64
Access Gmail .....	65
Send a Gmail Message.....	65
Read and Reply to Gmail Messages .....	66
Email .....	67
Add an Email Account (POP3 or IMAP) .....	67
Corporate Email (Outlook) .....	67
Open Email .....	68
Create and Send Email.....	68
Reply to or Delete an Email Message .....	69
Configure and Sync Corporate Email Settings .....	69
Browser .....	71
Camera and Video .....	73
Take Pictures and Record Videos .....	73
Take Pictures .....	74
Record Videos .....	74
Camera and Video Settings .....	74
Gesture Shot.....	75
View Your Pictures.....	75
Gallery Options .....	75
Edit Pictures .....	76
Share Pictures and Videos .....	77
Send Pictures or Videos by Email .....	77
Send a Picture or Video by Multimedia Message .....	77
Send Pictures or Videos Using Bluetooth.....	78
Assign Pictures .....	78
Video Options.....	79
Dual Play.....	80
Useful Apps and Features.....	81
Navigation .....	81
Google Maps.....	81

Scout .....	81
Google Hangouts .....	82
QuickMemo+ .....	83
Music .....	84
Google Play Music .....	84
Music Player .....	84
Back Up Your Downloaded Music Files .....	85
Calendar .....	86
Open the Calendar .....	86
Change Calendar View .....	86
View Event Details .....	86
Create an Event .....	86
Edit or Delete an Event .....	87
Set an Event Reminder .....	87
Respond to an Event Reminder .....	88
Display and Synchronize Calendars .....	88
Change Calendar Settings .....	88
Folders .....	89
Clock .....	90
Additional Clock Features .....	90
Calculator .....	92
Connectivity .....	93
Connections Optimizer .....	93
Transfer Files Between Your Phone and a Computer .....	94
Wi-Fi .....	95
Turn Wi-Fi On and Connect to a Wireless Network .....	95
Wi-Fi Settings .....	96
Disconnect Wi-Fi .....	96
Wi-Fi Direct .....	96
Tethering .....	97
Bluetooth .....	97
Bluetooth Information .....	97
Enable the Bluetooth Feature .....	97
Pair Bluetooth Devices .....	98
Connect to a Paired Bluetooth Device .....	99

Send Information Using Bluetooth .....	99
Receive Data via Bluetooth.....	100
Settings .....	101
Basic Settings .....	101
Airplane Mode .....	102
Wi-Fi Settings.....	103
Bluetooth Settings .....	103
Mobile Data .....	103
Call Settings .....	103
Share & Connect.....	103
Media Server.....	103
Printing .....	103
Tethering .....	104
Mobile Networks.....	104
Sound Settings.....	105
Sound Profile.....	105
Volume .....	106
Ringtone.....	106
Sound with Vibration .....	107
Vibrate Type.....	107
Interruptions .....	107
Lock Screen .....	107
App.....	107
Notification LED .....	108
Notification Sound.....	108
Vibrate on Tap .....	108
Sound Effects.....	108
Message/Call Voice Notifications.....	109
Display Settings .....	109
Font Type.....	109
Font Size .....	110
Brightness .....	110
Auto-Rotate Screen .....	110
Screen Timeout.....	110
Home Touch Buttons .....	111

Daydream.....	111
Motion Sensor Calibration.....	111
Home Screen Settings .....	112
Wallpaper.....	112
Screen Swipe Effect.....	112
Allow Home Screen Looping.....	112
Help.....	112
Lock Screen Settings .....	112
Screen Lock .....	113
Smart Lock.....	114
Screen Swipe Effect.....	114
Wallpaper .....	114
Shortcuts .....	114
Contact Info for Lost Phone .....	115
Lock Timer .....	115
Power Button Instantly Locks.....	115
Storage Settings.....	115
Battery & Power Saving Settings .....	116
App Settings.....	116
Default Message App.....	117
Location Settings.....	117
Security Settings .....	117
Accounts & Sync .....	118
Language & Input Settings.....	119
Backup & Reset .....	120
Shortcut Key.....	122
Date & Time Settings .....	122
Accessibility Settings.....	123
Vision .....	123
Hearing.....	124
Motor & Cognition .....	124
General .....	124
Services .....	125
QuickCircle Case .....	125
Activate This Device.....	125

System Updates.....	125
About Phone .....	125
Copyright Information.....	126
For Assistance .....	128
Boost Account Information and Help .....	128
Manage Your Account .....	128
Re-Boost .....	129
Index.....	130

# Introduction

---

The following topic provides basic information for using this guide and your new phone.

## About the User Guide

Thank you for purchasing your new LG Volt 2. The following topics explain how best to use this guide to get the most out of your phone.

### Before Using Your Phone

Read [Get Started](#) and [Basic Operations](#) thoroughly for proper usage.

Accessible services may be limited by subscription contract conditions.

### Descriptions in the User Guide

Note that most descriptions in this guide are based on your phone's setup at the time of purchase. Unless otherwise noted, instructions begin from the phone's home screen, which is displayed by tapping . Some operation descriptions may be simplified.

### Screenshots and Key Labels

Screenshots in the user guide may appear differently on your phone. Key labels in the user guide are simplified for description purposes and differ from your phone's display.

### Other Notations


In the user guide, the phone may be referred to either as "phone," "device," or "handset." A microSD™ or microSDHC™ card is referred to as an "SD Card" or a "memory card."

# Get Started

The following topics provide all the information you need to set up your phone and Boost service for the first time.

## Phone Layout

The following illustration outlines your phone's primary external features and buttons.

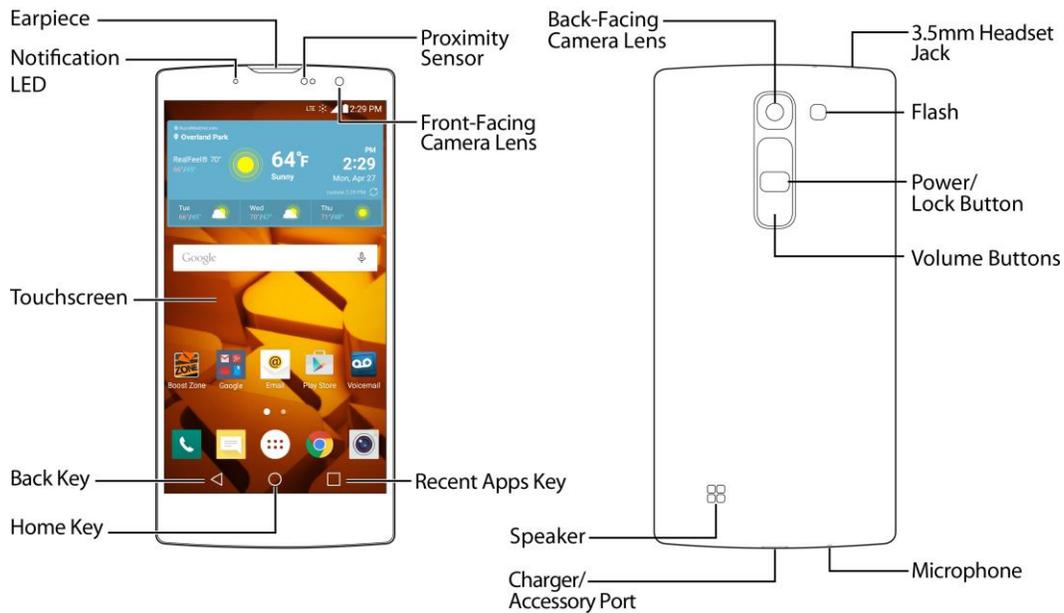

Part	Description
<b>Earpiece</b>	Lets you hear the caller and automated prompts.
<b>Notification LED</b>	Flashes front notification LED when you receive notifications, such as an incoming call, if you enable this feature.
<b>Touchscreen</b>	Displays all the information needed to operate your phone, such as the applications, call status, the Contacts list, the date and time, and the signal and battery strength.
<b>Back Key</b> 	Returns to the previous screen. It also closes pop-up display items such as menus and dialog boxes. Touch and hold to access the Dual window feature.

Part	Description
<b>Home Key</b> 	Returns to the Home screen. If you're already viewing one of extension canvases, it opens the central Home screen. Touch and hold to access Google Now.
<b>Recent Apps Key</b> 	Allows you to access recently-used apps. Touch and hold to access the available options.
<b>Front-Facing Camera Lens</b>	Allows you to take pictures and video of yourself. Also lets you participate in video chats.
<b>Proximity Sensor</b>	Senses proximity towards other objects (such as your head) so that touch commands are not accidentally activated during a call.  <b>Note:</b> Please be careful not to cover the sensors with a protective film, pouch, or a protective case not authorized by LG.
<b>Back-Facing Camera Lens</b>	Lets you take pictures and record videos.
<b>Speaker</b>	Lets you hear the different ringers and sounds. The speaker also lets you hear the caller's voice in speakerphone mode.
<b>Charger/Accessory Port</b>	Allows you to connect the phone charger or an optional USB cable.
<b>Microphone</b>	Transmits your voice for phone calls or records your voice or ambient sounds for voice recordings and videos.
<b>Volume Buttons</b>	Allow you to adjust the ringer and media volumes, or to adjust the in-call volume during a call.
<b>Power/Lock Button</b>	Locks the screen. Press and hold to open the phone options menu for the following options: Power off, Power off and restart, and Turn on/off Airplane mode.
<b>Flash</b>	Helps you take pictures and video in dim lighting.
<b>3.5mm Headset Jack</b>	Allows you to plug in a headset for convenient, hands-free conversations.

**CAUTION!** Inserting an accessory into the incorrect jack may damage the phone.

# microSIM Card

The microSIM card is an IC (Integrated Circuit) card containing phone number and other customer information.

## Handling the microSIM Card


Keep the following in mind when handling a microSIM card.

- Customer is responsible for any damage caused by inserting microSIM card in another-brand IC card reader, etc. The company is not responsible in such case.
- Always keep the IC chip clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage the microSIM card.
- See instructions included with the microSIM card for handling.
- The microSIM card is the property of the company.
- The microSIM card is replaceable (at cost) in case of loss/damage.
- Return the microSIM card to the company when cancelling your subscription.
- Returned microSIM cards are recycled for environmental purposes.
- Note that microSIM card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on the microSIM card. The company is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your microSIM card or phone (microSIM card inserted) is lost/stolen. For details, contact Customer Service.
- Always power off the phone before inserting/removing a microSIM card.

## Insert microSIM Card


Follow these instructions to insert a microSIM card. Remember to power off your phone before inserting a microSIM card.

1. Remove the back cover.

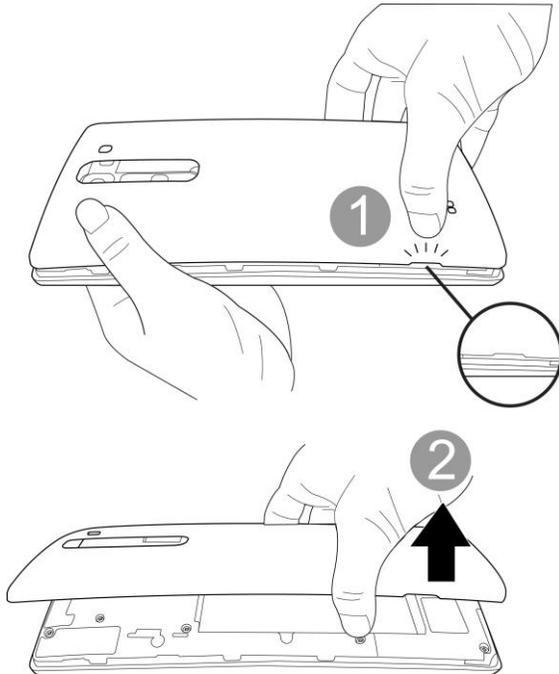


- Lift gently in the direction shown.

2. Insert the microSIM card.

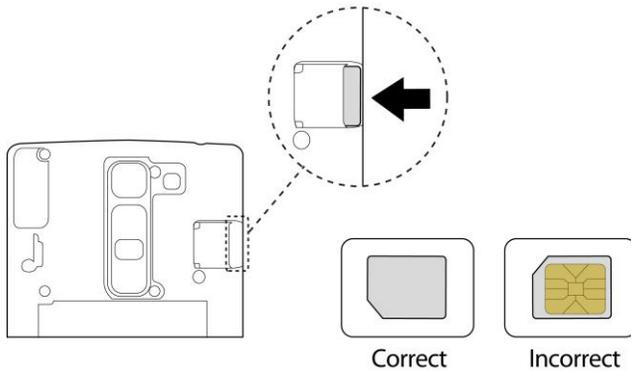


- Insert gently with gold IC chip facing downward.

3. Insert the battery.

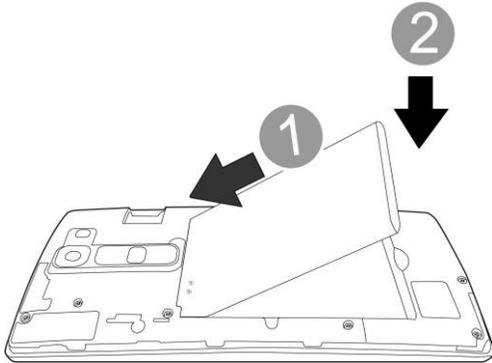

4. Attach the back cover.

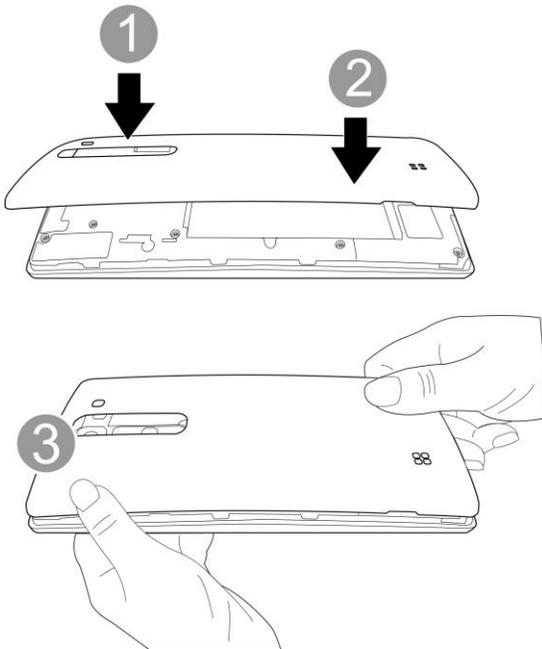

- Make sure all the tabs are secure and there are no gaps around the cover.

## microSD Card

Your phone supports the use of an optional microSD card (not included) to expand its storage capacity. Some cards may not operate properly with your phone.

### ! microSD card Cautions

**Data:** Information stored on the microSD card can become lost or changed accidentally or as a result of damage. It is recommended that you keep a separate copy of important data. The company is not responsible for damages from data that is lost or changed.


**Reading/Writing Data:** Never power off or remove the battery while reading or writing data.

**Handling microSD card:** Use/store microSD cards away from the reach of infants. May cause choking if swallowed.

## Insert microSD Card


Follow these steps to insert an optional microSD card (not included). Make sure to power your phone off before inserting or removing a microSD card.

1. Remove the back cover.

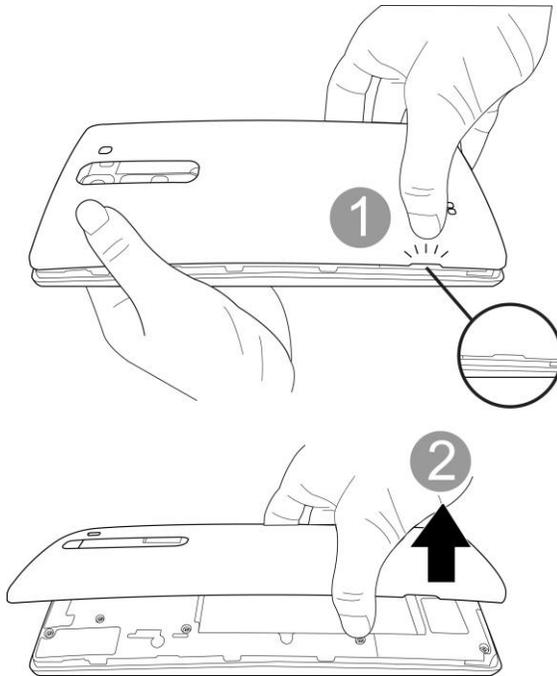


- Lift gently in the direction shown.

2. Insert the microSD card.

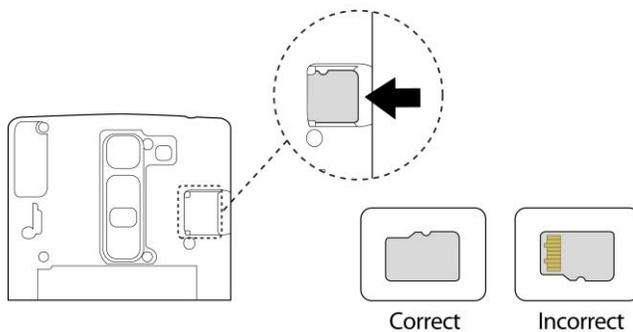


- Insert the microSD card all the way gently without bending and with the terminals facing down.
- Insert only microSD cards.

3. Insert the battery.

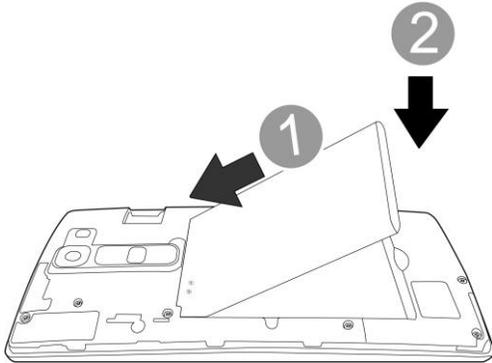

4. Attach the back cover.

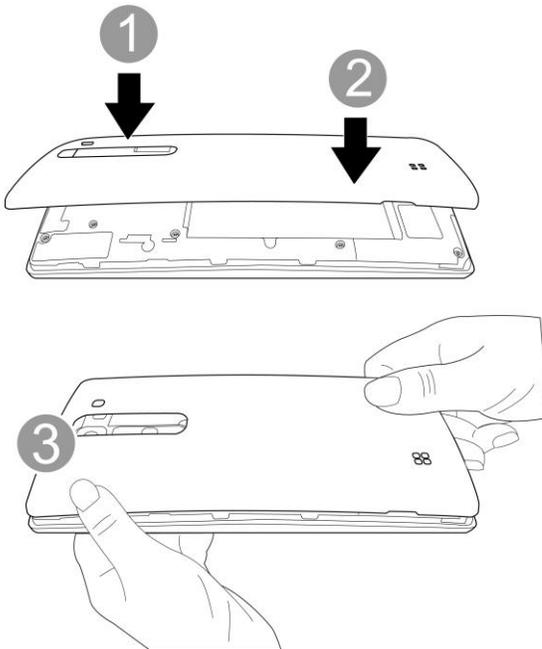

- Make sure all the tabs are secure and there are no gaps around the cover.

## Unmount the microSD Card

Always unmount the microSD card before removing it from your phone.

1. Tap  >  > **Settings** .
2. Tap **Storage**.
3. Tap **Unmount SD card**.
  - The menu option name changes from **Unmount SD card** to **Mount SD card**. The card is now unmounted.

## Remove microSD Card

Follow these instructions to remove a microSD card. Always power the phone off before inserting or removing a microSD card.

1. Tap  >  > **Settings** .
2. Tap **Storage**.
3. Tap **Unmount SD card**.
4. Remove the back cover.
5. Slide the microSD card out of the slot to remove it.
6. Attach the back cover.

## Format microSD Card

When you insert an optional microSD card for the first time, it is recommended that you format it on your phone.

1. Tap  >  > **Settings** .
2. Tap **Storage**.
3. Tap **Erase SD card**.
4. Tap **Erase SD card** again.
5. Tap **Erase SD card** once last time to confirm.
  - All data on the microSD card is erased, and the card is formatted for use on your phone.

## Battery Use

The following topics provide information about your phone's battery.

### Battery Capacity


Your phone is equipped with a Li-Ion battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 23 hours of continuous digital talk time.

### Charge the Battery

Follow these instructions to charge your phone's battery using either the included AC adapter or via a USB connection on your computer.

## Charge Using the AC Adapter

1. Plug the USB connector into the charger/accessory port at the bottom of your phone.

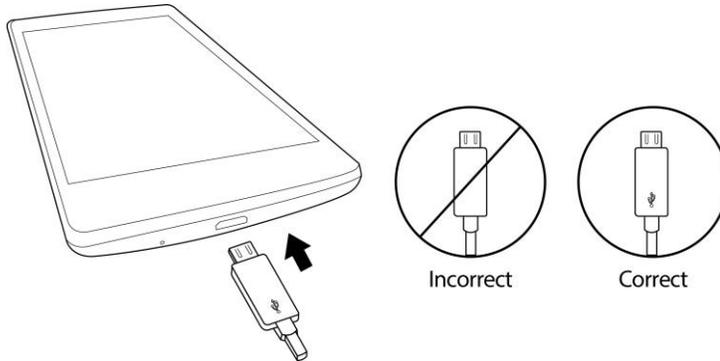


2. Plug the AC adapter into an electrical outlet.
  - The indicator light illuminates when charging starts. The light goes off when the battery is fully charged. Fully charging a battery may take up to three hours.
3. After charging, disconnect the phone from the charger.
  - Unplug the AC adapter from the outlet, and remove the micro USB cable from the phone and the AC adapter.

**Note:** Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

## Charge Using a PC Connection

Before using a PC connection to charge your phone, ensure that the computer is turned on. Depending on the type of connection, your phone's battery may not charge.

1. Insert the small end of the micro USB cord into the charger/accessory port at the bottom of your phone.

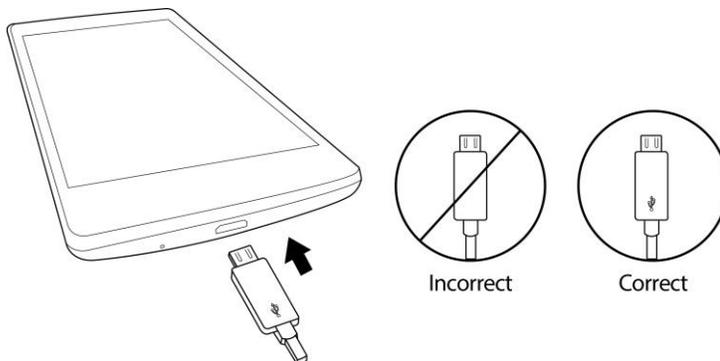

2. Insert the large end of the micro USB cord into an external USB port on your computer.
3. After charging, remove the micro USB cable from both the phone and the computer.

# Turn Your Phone On and Off

The instructions below explain how to turn your phone on and off.

## Turn Your Phone On

- Press and hold the **Power/Lock Button**.
  - ❖ Your phone will power on. Depending on the settings, you may see the lock screen.
    - See [Lock and Unlock Your Screen](#) and [Screen Lock Setting](#) for information about using the screen lock.
    - The first time you turn the phone on, you will see the setup screens. See [Complete the Setup Screens](#) for details.
    - If your phone is not yet activated, see [Activation and Service](#) for more information.

## Turn Your Phone Off

1. Press and hold the **Power/Lock Button** to open the phone options menu.
2. Tap **Power off** to turn the phone off.
3. Tap **OK** to confirm.
  - ❖ Your phone will power off.

Your screen remains blank while your phone is off (unless the battery is charging).

**Tip:** The KnockON feature allows you to double-tap the screen to easily turn it on or off.

# Use the Touchscreen

Your phone's touchscreen lets you control actions through a variety of touch gestures.


## Tap or Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons by simply tapping or touching them with your finger.



## Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

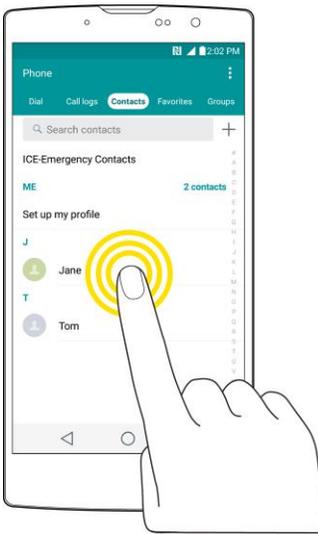

## Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




## Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.




## Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.

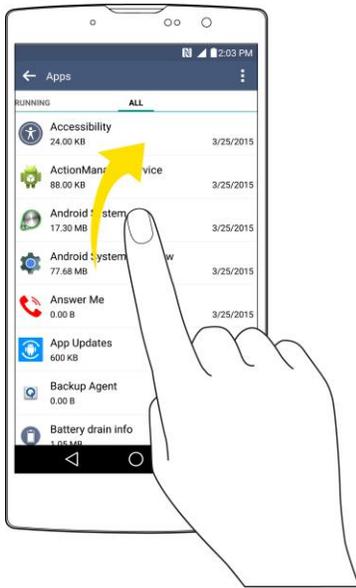

## Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways. When entering text, you can turn the phone sideways to bring up a bigger keyboard.

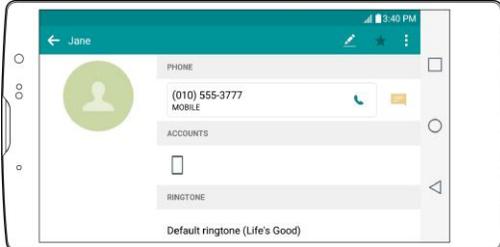


**Note:** The Auto-rotate check box needs to be selected for the screen orientation to automatically change.

Tap  >  > **Settings**  > **Display** > **Auto-rotate screen**.

**Tip:** You can also access the screen rotation setting from the notifications window. Drag the Status Bar down and then tap **Rotation** to select or deselect the option.

## Pinch and Spread

“Pinch” the screen using your thumb and forefinger to zoom out or “spread” the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

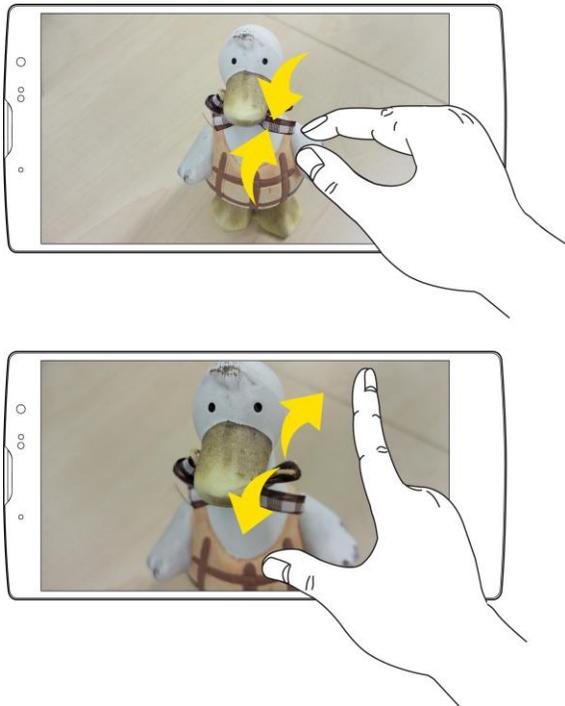

## Activation and Service

Before using your phone, you must set up your service with Boost Mobile. You will need your phone's serial number (MEID), printed on a sticker inside the battery compartment.

For more information about your Boost Mobile account, see [Boost Account Information and Help](#).

### Create Your Account and Pick Your Plan

Set up your Boost Mobile account.

1. From your computer, visit [boostmobile.com/activate](https://boostmobile.com/activate).
2. Enter your phone's MEID and click **start activation process**.
  - Your phone's MEID (serial number) is printed on the sticker located on the back of your phone in the battery compartment. This number can also be found on the bottom panel of the phone's package.
3. Follow the remaining instructions to choose your plan and select a payment method.
4. Follow the activation instructions below and you'll be able to start using your phone.

**Note:** You can also activate by phone by calling **1-888-BOOST-4U** (1-888-266-7848) from any other phone.

## Activate Your Phone

After setting up your account on [boostmobile.com](https://boostmobile.com), simply turn your device on. Your device is designed to activate automatically. If you are swapping from another Boost Mobile device to a new one, be sure to turn off the old device before swapping the serial number (MEID). Once the MEID swap is complete, turn on the new device and the programming information will be pushed to your device automatically.

You can also start the activation process manually.

- Tap  >  > **Settings**  > **Activate this device.**

## Complete the Setup Screens

The setup screens help you set up certain features and preferences on your phone. Once your phone has been turned on, you will see a Accessibility message. You can then complete the setup process.

**Note:** You may be able to complete the setup screens before your phone has been activated on your Boost account.

**Note:** During or after setup, you may see a **Connections Optimizer** notice. Read the notice and touch **I Agree** to allow your phone to connect automatically to the best available data network, including Wi-Fi.

To turn Connections Optimizer off at any time, tap  >  > **Settings**  > **More** > **Mobile networks** > **Connections optimizer** and uncheck the box. See [Connections Optimizer](#) for details.

1. On the configuration screen, touch **Next** to get started.
2. Follow the onscreen instructions to complete each section. For each topic, you will have the option to skip it and continue to the next screen.
  - **Select language** - Select a desired language.
  - **Set internet connection** - If prompted, follow the prompts to sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. See [Wi-Fi](#) for more details.
  - **Add your account** - Sign in to your Google Account to get the most out of your device.
  - **Get your apps & data** - If you add a Google Account, you will be prompted to restore data from a backup of another device.
  - **Protect your phone** - Prevent others from using this phone without your permission by activating device protection features.
  - **Google Services** - Read all of the information for the available Google Services and, if you agree, tap **Next**. Otherwise, uncheck the options and tap **Next**.
    - **Use Google's location service** - Helps apps determine location. This means sending anonymous location to Google, even when no apps are running. Tap **Learn more** for additional information.

- **Help improve location services** - Allows apps and services to scan for Wi-Fi networks even when Wi-Fi is off.
  - **Help improve your Android experience** - Allows your device to send diagnostic and usage data to Google automatically. Tap **Learn more** for additional information.
  - **Useful settings** - Set the phone name to be used for Bluetooth and Wi-Fi Direct and contact information in case your phone is lost.
  - **Knock Code** - Set your personalized Knock Code for your security.
  - **Home touch button combination** - Select the desired home touch button combination.
3. Tap **Done**. Your setup is now complete. Follow the onscreen instructions to learn about basic touch menu navigation, view tutorials, or just get started.

# Basic Operations

---


The following topics outline basic features and operations of your phone.

## Basics

The following topics offer an overview of your phone's basic operations.

## Home Screen and Applications List

Most of your phone's operations originate from the home screen or the apps list.

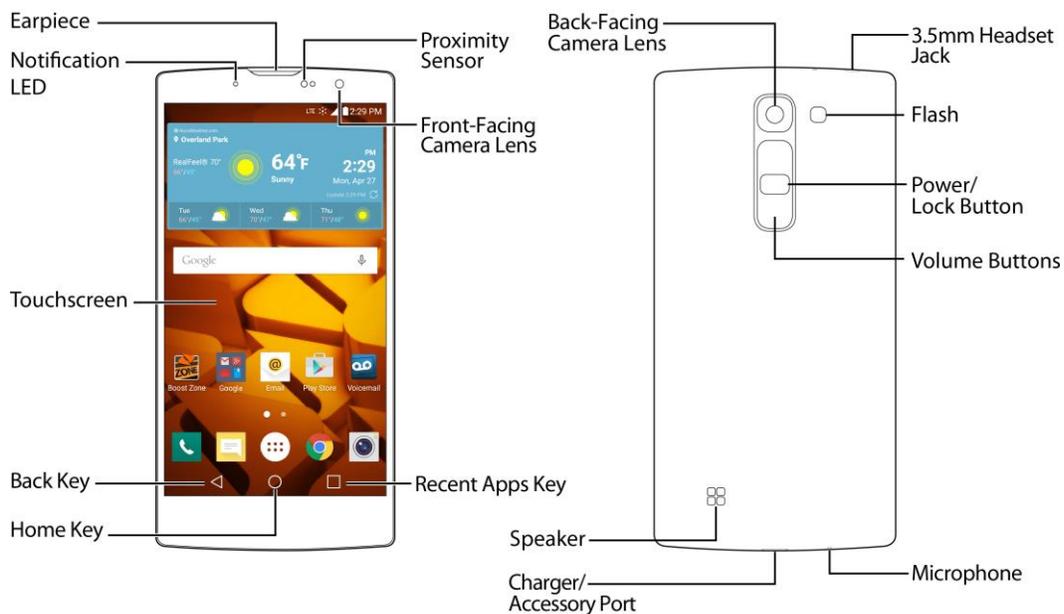

For information about using the home screen, see [Home Screen Basics](#).

## Select Options and Navigate Screens

Tap icons, onscreen keys, and other items to open or activate the assigned function.

- Tap **Back**  to return to the previous screen.

## Menu Operations

You can display options menus using the menu key, any app-specific menu icon, or by tapping and holding a screen area, depending on your current app.

- Tap **Menu**  to view available settings and options.

## Phone Settings Menu

You can customize your phone's settings and options through the Settings menu.

- Tap  >  > **Settings** .

– or –

Tap  > touch and hold  > **System settings**.


– or –

Drag the status bar down and tap **Settings** .

For more information, see [Settings](#).

## Portrait and Landscape Screen Orientation

The default orientation for your phone's screen is portrait (vertical), but many apps will change to landscape orientation (widescreen) when you rotate the phone sideways. Not all screens will adjust for landscape orientation.

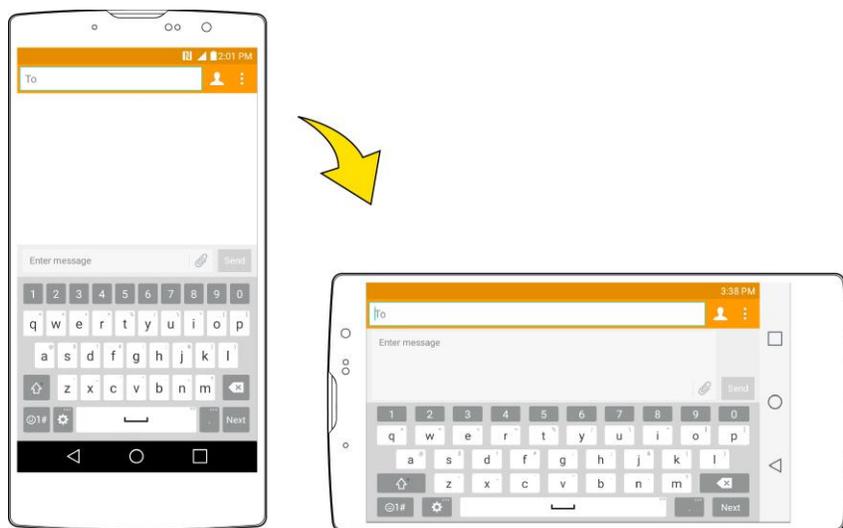

**Note:** The Auto-rotate check box needs to be selected for the screen orientation to automatically change.

Tap  >  > **Settings**  > **Display** > **Auto-rotate screen**.

**Tip:** You can also access the screen rotation setting from the notifications window. Pull down the status bar and tap **Rotation** to select or deselect the option.

## Capture Screenshots

You can use your phone's power and volume buttons to capture screenshots.

- Press and hold the **Power/Lock Button** and **Volume Down Button** at the same time to capture a screenshot of the current screen.

- ❖ The current screenshot will be captured and stored in the Screenshots album in the phone's Gallery. Tap  >  > **Gallery** .

## Applications

The following topics describe how to access the applications (apps) list and launch apps on your phone.

### Launch Applications

All installed apps can be accessed and launched from the apps list.

1. Tap  > .
2. Tap an app icon to launch the corresponding application.

### Apps List

The apps list expands to include any apps you download and install on your phone. The following table outlines the primary apps that have been preinstalled on your phone.

App	Function/Service
 <b>Google</b>	Access the Google applications.
 <b>Calculator</b>	Launches the Calculator application.
 <b>Calendar</b>	Launches the Calendar application that can sync to either your Google or Outlook® work calendar. Events can only be synched to a managed account.
 <b>Camera</b>	Launches the Camera.
 <b>Chrome</b>	Launches the Chrome web browser.
 <b>Clock</b>	Access the Clock application.
 <b>Contacts</b>	Displays the Contacts that can be synchronized with your phone from either your Google or Outlook account. Contacts can only be synched to a managed account.
 <b>Downloads</b>	Launches the Downloads application where you can view, reopen, or delete what you've downloaded.

App	Function/Service
 <b>Email</b>	Provides access your POP3, IMAP, and Exchange Server (Outlook) email accounts. Also provides access to your Gmail account.
 <b>File Manager</b>	Allows you to manage files in your internal memory and SD card (if available).
 <b>Gallery</b>	Displays a Gallery of camera images and video saved on your phone.
 <b>LG Backup</b>	Allows you to perform backup and restore your user data and settings on the phone into internal storage.
 <b>Gadget Guardian</b>	Gadget Guardian provides mobile device-specific security features that are coupled with a minimal performance hit. Lookout Mobile Security provides key security options that are unique to the mobile market. Along with the antivirus and anti-malware tech, there's a lost and stolen phone locator service, an application privacy adviser, and a backup service.
 <b>Maps</b>	Launches a dynamic map that helps you find local businesses, locate friends, view maps and get driving directions.
 <b>Messaging</b>	Provides access to your text and multimedia messages.
 <b>Music</b>	Launches the Music Player.
 <b>Phone</b>	Accesses the dial pad to make calls.
 <b>Play Store</b>	Browse, search for, and download applications from the Google Play Store app.
 <b>QuickMemo+</b>	Allows you to take screen shots and write a memo using the images.
 <b>Settings</b>	Accesses the phone's Settings menu.
 <b>Task</b>	Allows you to create a task and to synchronize with MS Exchange account.
 <b>Voice Command</b>	Allows you to perform various actions by speaking.

App	Function/Service
 <b>Voice Recorder</b>	Launches Voice Recorder application and lets you record and play the sound files.
 <b>Weather</b>	Launches the Weather application.
 <b>YouTube</b>	Launches the YouTube application.

**Note:** The Email application can access both Exchange Server-based email (such as Work email) and other Internet-based email providers such as Yahoo! and Gmail.

## Phone Number

Follow the instructions below to display your phone's wireless phone number.

1. Tap  >  > **Settings**  > **About phone**.
2. Tap **Status**.
  - ❖ You will see the number listed under **My phone number**.

## Airplane Mode

The following topics explain how to use your phone's Airplane Mode settings.

### Airplane Mode

Airplane mode turns off all functions that emit or receive signals, while leaving your phone on so you can use apps that don't require a signal or data.

To turn on airplane mode:

1. Press and hold the **Power/Lock Button** to display the device options menu.
2. Tap **Turn on Airplane mode** > **OK**.

**Tip:** You can also access Airplane mode through the status bar menu. Drag the status bar down and tap **Airplane mode**  > **OK**.

To turn off airplane mode:

1. Press and hold the **Power/Lock Button** to display the device options menu.
2. Tap **Turn off Airplane mode** > **OK**.

**Tip:** You can also access Airplane mode through the status bar menu. Drag the status bar down and tap **Airplane mode**  > **OK**.

## Enter Text

You can type on your phone using one of the available touchscreen keyboards or Google voice typing.

### Touchscreen Keyboards

Your phone offers you a choice of touchscreen keyboards for entering text. The keyboard appear automatically onscreen when you tap a text entry field, and they can be used in either portrait or landscape mode.

To access to the keyboard settings, tap  >  > **Settings**  > **Language & input** > **KEYBOARD & INPUT METHODS**.

The methods available include:

- **Google keyboard** allows you to use a traditional QWERTY setup to enter text. Additional options expand your ability to enter text faster and more accurately.
- **Google voice typing** allows to use Google voice recognition to convert speech to text.
- **LG keyboard** allows you to use a LG keyboard to enter text.

**Note:** Keyboard layouts and options may change depending on where you're using them. For example, if you're entering text to do a Web search, a search icon may be available instead of an enter key.

# QWERTY Keyboard

You can enter text using the on-screen keyboard. The on-screen keyboard appears on the screen when you tap an available text entry field.

## Letters Entry Keyboard

### Shift Key

Tap once to capitalize the next letter you type. Tap again to turn on CAPS lock. And tap again to turn off CAPS lock.

### Symbols Key

Tap to change input to the symbol entry.

### Settings/Voice Input/ Clip Tray Key

Tap to access the keyboard settings. Touch and hold to select entering text by voice input, or access the Clip Tray.

### Delete Key


Tap to delete characters to the left of the cursor.

### Enter Key

Tap to move to a new line of text.

### Space Key

Tap to enter space.

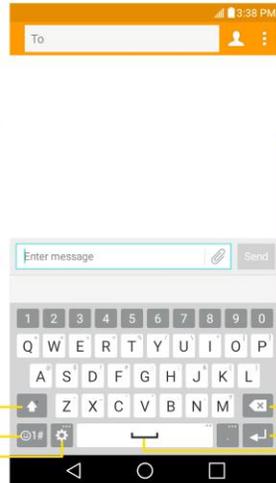

## Symbols Entry Keyboard

### Navigation Key

Tap to access additional symbols until you see the one you want.

### Letters Key

Tap to return to letters mode.

### Emoticons Key

Displays the emoticons bar and allows you to choose any to enter in the message.

### Delete Key


Tap to delete characters to the left of the cursor.

### Enter Key

Tap to move to a new line of text.

### Space Key

Tap to enter space.

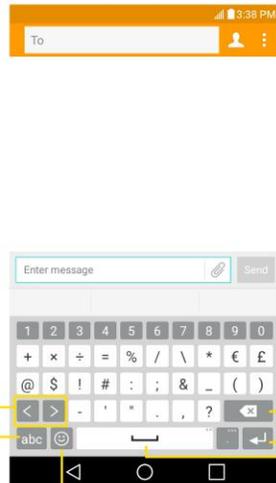

# Phone Keyboard

When T9 is off, to enter text, tap the key labeled with the desired letter until it appears on the screen. For example, tap <sup>2</sup> ABC once for "a", twice for "b", or three times for "c".

## Letters Entry Keyboard

**Symbols Key**  
Tap to change input to the symbol entry.

**Space Key**  
Tap to enter a space.

**Delete Key**  
Tap to delete characters to the left of the cursor.

**T9 Key**  
Tap to turn on/off the T9 text entry mode.

**Settings/Voice Input/Clip Tray Key**  
Tap to access the keyboard settings. Touch and hold to select entering text by voice input, or access the Clip Tray.

**Enter Key**  
Tap to move the cursor to the next line.

## Symbols Entry Keyboard

**Alt Key**  
Tap to access additional symbols until you see the one you want.

**Letters Key**  
Tap to return to letters mode.

**Emoticons Key**  
Displays the emoticons bar and allows you to choose any to enter in the message.

**Delete Key**  
Tap to delete characters to the left of the cursor.

**Space Key**  
Tap to enter space.

**Enter Key**  
Tap to move the cursor to the next line.

## Tips for Editing Text

Your phone gives you many options to make entering text easier, including copying, cutting, and pasting text, using voice-to-text input, customizing the user dictionary, using predictive text, and more.

To cut/copy and paste:

1. Touch and hold a word to highlight it.
2. Drag the blue highlight markers to highlight the text you want.

– or –


To select all the text, tap **Select all** in the context menu.

- To cancel the selection, simply tap unselected text or empty area.

3. Tap **Cut** or **Copy** in the context menu.
4. Place the cursor on the location where you want to paste the text.
5. Touch and hold the text field and tap **Paste**. The text that you pasted also remains in the phone's memory (temporarily), so you can paste that same text in another location.

## Move Cursor Using the Space Bar

Touch and hold the Space Key and slide your finger to the left or right to move the cursor.

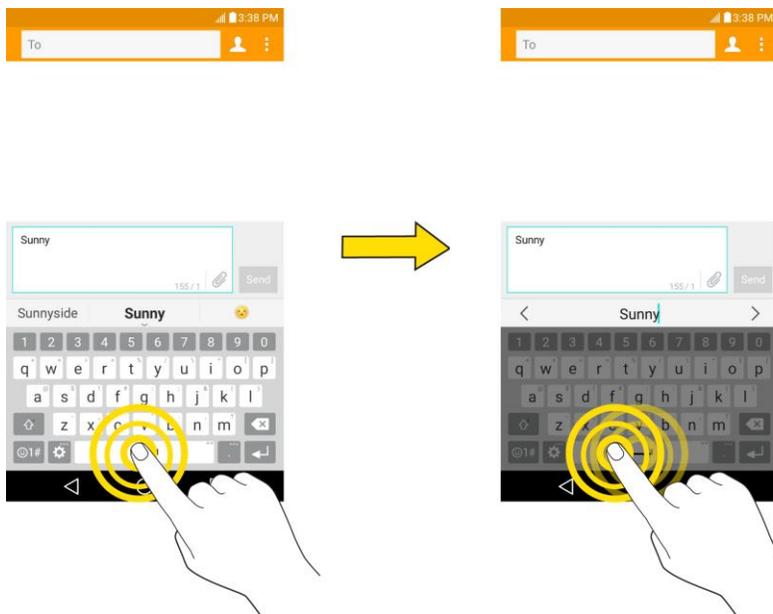


## Split Keyboard Using Gesture

The split keyboard feature allows you to use both hands to type while in landscape view. Each half of the keyboard withdraws to the left and right of the screen. Place both thumbs on the keyboard and slide them outwards in opposite directions.



To change the keyboard height:


1. Tap  > **Keyboard height and layout** > **Keyboard height**.
2. Drag the blue bar to adjust the keyboard height.

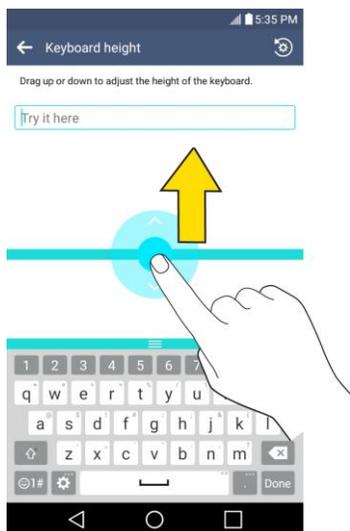

To change the bottom row keys:

1. Tap  >  > **Settings**  > **General tab** > **Language & input** > **LG Keyboard**  > **Keyboard height and layout** > **QWERTY keyboard layout**.

2. Drag to add or delete keys or change the order. To change to another character on the visible key, tap the key and choose the desired character that you want displayed.

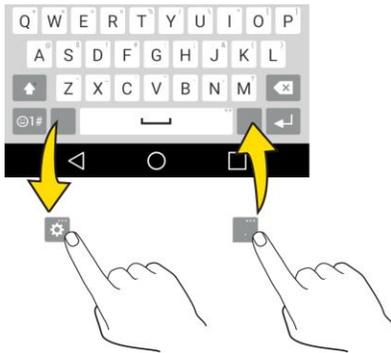

**Note:** This function does not support some languages.


## Search Your Phone and the Web

You can search for information on your phone and on the web using the Search application. Some applications, such as Gmail, Contacts, and Browser have the ability to search contents within those specific applications. You can conduct the search by typing in the search terms or saying what you're looking for. Typing can be useful because the search application can provide suggestions so you don't necessarily have to type out your full request.


### Phone and Web Search Using Text Entry

You can search on your phone and on the web by entering text.

1. From the Home screen, tap the Search Widget . (For information on how to add widget, see [Add and Remove Widgets on the Home Screen](#).)

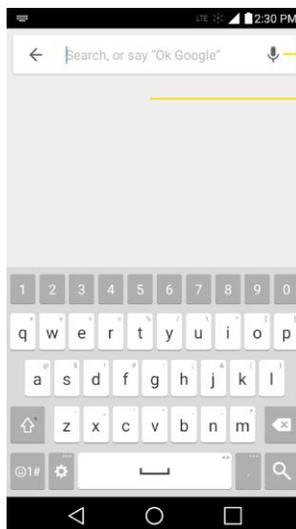

2. Enter the text you're searching for in the search field.

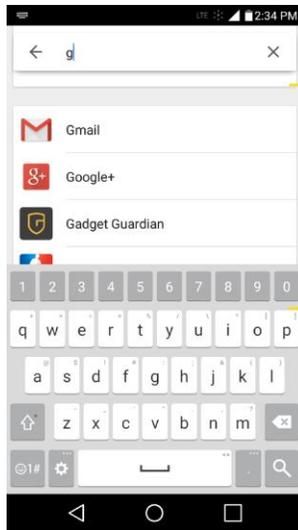

As you type, search results from your device, previous search terms, and Web search suggestions appear. Tap an item to search for that term.

- You can use the Search preferences to configure some aspects of Google web search (for example, whether it makes suggestions below the search field as you type), and what phone features you want to include in searches.

To access these settings, touch and hold  > **Settings**.

3. Tap  to search for the entered text.

– or –

If what you want to search for appears in the suggestions list, tap that item to conduct the search.

4. If the phone asks you to select which browser to use, tap your preference. Then, make sure that the **Use as default app** check box is selected to keep this preference setting.

## Phone and Web Search Using Voice Command

You can search on your phone and on the web by voice command.

- From the Home screen, tap the  on the Google Search Widget.

For more information on Google Search, touch and hold  > **Help & feedback** from the Google search screen.

## Clip Tray

Easily access the contents you store in the Clip Tray whenever and wherever you want. You can copy images or texts and keep them in the Clip Tray. Then, you can paste them whenever and wherever you want.

- Tap and hold text and images while editing them and tap **Clip Tray**.
- Tap and hold a text input field and select **Clip Tray**. You can also access the Clip Tray by tapping and holding , then tapping .

**Note:** Saved items are stored in the Clip Tray temporarily. In Clip Tray, tap  and an item then select **Done** to lock the item and prevent deletion. Tap  to delete items. This function may not be supported in the downloaded apps.

## Google Account

You will need a Google Account to access several phone features such as Gmail, Google Maps, Hangouts, and the Google Play applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your phone and your online Google Account.

### Google Account Cautions

Be sure not to forget your Google Account ID or password.

## Create a Google Account

You must create and/or sign into a Google Account to use Gmail, Google Hangouts™, Google Calendar™, and other Google Apps. Signing into a Google Account is also necessary to download applications from the Google Play Store app to sync your data (if applicable) with the Google servers, and to take advantage of any other available Google services on your phone.

If you don't have a Google Account, you will be prompted to create one. If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.

1. From a computer, or from your phone's Browser, navigate to [www.google.com](http://www.google.com).
2. On the main page, tap or click **Sign in > Create an account**.
3. Follow the on-screen prompts to create your free account.
4. Log into your provided email address, locate the email from Google, and respond to the new email to both confirm and activate your new account.

## Sign into Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. Launch an application that requires a Google Account (such as Play Store or Gmail).
2. Enter a Google Account and tap **NEXT**.

**Note:** If you do not already have a Google Account, tap **Or create new account** and follow the on-screen prompts to create your new account.

3. Enter your Password and tap **NEXT**.
4. Select if you want to back up your phone's apps, app data, settings, and Wi-Fi passwords and tap **NEXT**.

5. Checkmark the entries you want to sync (if necessary) and tap **NEXT**.

Your phone then communicates with the Google servers to confirm your information.

**Important:** Some applications, such as Calendar, work only with the primary Google Account (the first Google Account set up with your phone). If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web can be synchronized with your phone. You will be prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store.

## Google Play Store

Google Play™ is the place to go to find new Android apps, books, movies, and music for your phone. Choose from a wide variety of free and paid content ranging from productivity apps and games to bestselling books and blockbuster movies and music. When you find what you want, you can easily download and install it on your phone.

To access the Google Play store app, you must first connect to the Internet using your phone's Wi-Fi or mobile data connection and sign in to your Google Account. See [Browser](#) and [Sign In to Your Google Account](#) for details.

### Installing Applications

Many different kinds of applications can be installed on your phone from Google Play (provided by Google Inc.). The company is not responsible in any way for user-installed applications (quality, reliability, legality, fitness for a purpose, credibility, accuracy, etc.) or resulting malfunctions (viruses, etc.).

**Important:** Our policies often do not apply to third-party applications. Third-party applications may access your personal information or require us to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

## Find and Install an Application

When you install apps from Google Play app and use them on your phone, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your phone. Download and install only apps that you trust.

1. Tap  >  > **Play Store** .
2. Browse for an application. Once you have decided on one, tap it to view its details.
3. Read the application descriptions and comments.
4. Tap **INSTALL** (for free applications) or the price button (for paid applications).

**Note:** Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. Read the app's access requirements and tap **ACCEPT** if you agree to them.
6. Check the progress of the current download by opening the Notifications Panel.
7. You will be notified when the item is downloaded and installed on your phone.
8. On the Play Store screen, tap  > **My apps**, tap the installed application in the list, and then tap **OPEN**.

## Launch an Installed Application

The first time you open a Google application on your phone, you will be required to sign in with your existing Google Account. If you do not have a Google Account, you will be prompted to create one.

1. Tap  >  > **Play Store**  >  > **My apps**.
2. Tap the desired application, then tap **OPEN**.

– or –

1. Tap  > .
2. Tap the icon of the newly installed application.

## Reinstall an Application

If the Android Operating System is ever updated, any data contained on the phone will be erased. The only data stored on the phone are Google applications available via Play Store.

**Note:** Pictures, videos, applications and music are stored in the phone's internal memory. Contacts and Calendars are stored remotely on your remote Google or Outlook servers.

1. Tap  >  > **Play Store**  >  > **My apps**.
2. Swipe the screen to the left and scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
3. Follow the on-screen instructions.

## Lock and Unlock Your Screen

You can prevent accidental screen touches from activating phone functions by locking your phone.

### Lock Your Phone

When your phone is locked, you can only receive incoming calls or make calls to 9-1-1.

- Press the **Power/Lock Button**.

## Unlock Your Phone

1. Press the **Power/Lock Button** to wake up the phone.
2. Swipe the screen to any direction to unlock it.




**Note:** The default Lock screen simply locks the screen to prevent unintentional actions. For more security to guard against unauthorized use, you can set an unlock requirement (such as a pattern, PIN, or password) that will need to be entered to unlock it.

## Unlock Your Screen Using the Knock Code Feature

The Knock Code feature allows you to create your own unlock code using a combination of knocks (or taps) on the screen.

To activate the Knock Code feature:

1. Tap  >  > **Settings** .
2. Tap **Lock screen**.
3. Tap **Select screen lock** and tap **Knock Code**.
4. Use the 2x2 grid to create a sequence of knocks (or taps) to set your knock code.

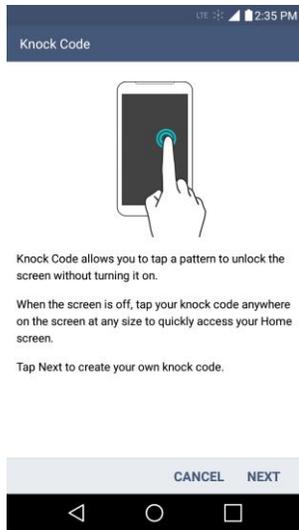

**Note:** You have to create a Backup PIN as a safety measure in case you forget your unlock sequence.

To unlock the phone using Knock Code:

- While the screen is off, tap the same sequence you established anywhere on the screen. The Home screen will be accessed directly.

## Update Your Phone

From time to time, updates may become available for your phone. You can download and apply updates through the **Settings > System updates** menu.

### Update PRL

This option allows you to download and update the PRL (Preferred Roaming List) automatically.

1. Tap  >  > **Settings**  > **System updates > Update PRL.**
2. Follow the on-screen instructions.

### Update Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your phone.

1. Tap  >  > **Settings**  > **System updates > Update profile.**
2. Follow the on-screen instructions.

### Update Firmware

This option allows you to download and update the Firmware for your device.

1. Tap  >  > **Settings**  > **System updates > Update Firmware.**

2. Follow the on-screen instructions.

## Update LG Software

This option allows you to download and update the LG software.

1. Tap  >  > **Settings**  > **System updates** > **Update LG software**.
2. Follow the on-screen instructions.

## UICC Unlock

This option allows you to unlock the client initiated UICC.

1. Tap  >  > **Settings**  > **System updates** > **UICC Unlock**.
2. Follow the on-screen instructions.

# Your Phone Interface


The following topics describe how to use and customize your phone's home screen, understand the status bar, and use the notifications window.

## Home Screen Basics

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more.

## Home Screen Layout

Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

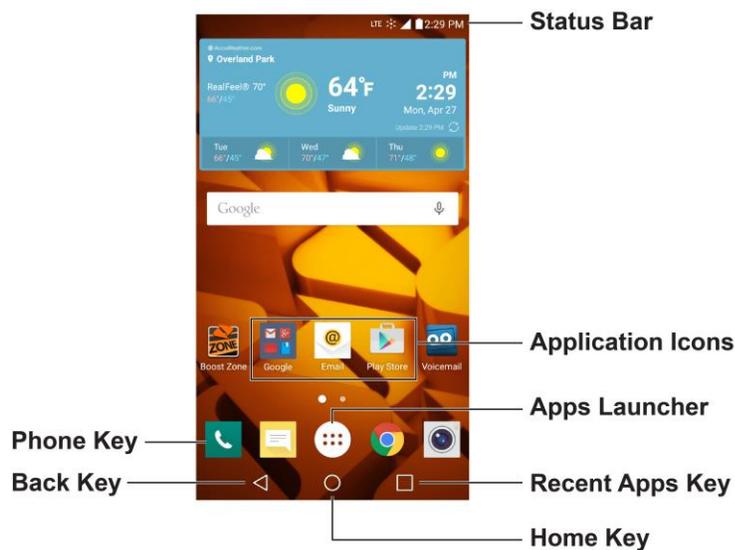

Item	Description
Phone Key 	Tap to open the dial pad. Also provides additional tabs to access Call logs, Contacts, Favorites, and Groups.
Back Key 	Tap to return to the previous screen.
Home Key 	Tap to display the main home screen.
Recent Apps Key 	Tap to access a list of your most recently-used apps. Touch and hold to access menu options.
Apps Launcher 	Tap to open the Application screen to view installed applications.

Item	Description
<b>Application Icons</b>	Tap an icon (application, folder, etc.) to open and use it.
<b>Status Bar</b>	Shows device status information including the time, signal strength, battery status, and notification icons.

**Note:** Your phone's home screens cycle through so that you can keep swiping in one direction and make it back to the main home screen. The small circles above the primary shortcuts let you know your current screen position.

**Tip:** Tap **Home**  to return to the main home screen from any other screen.

## Extended Home Screens

In addition to the main home screen, your phone features extended home screens to provide more space for adding icons, widgets, and more. Tap **Home**  to display the main home screen and then drag across the screen to move from the main screen to an extended screen.

To go directly to a particular screen:

1. From any screen, pinch the screen to display thumbnail images of all screens.



2. Tap the screen you want to open.

## Status Bar

The Status Bar at the top of the home screen provides phone and service status information on the right side and notification alerts on the left. To view the notifications window or access the quick settings menu, tap the Status Bar and drag it down.

## Main Status Icons

Icon	Status
	<b>Signal Strength</b> – Shows your current signal strength (the more bars there are, the stronger the signal is).
	<b>No Service</b> – Your phone cannot find a mobile network.
	<b>Enhanced 4G LTE Connected</b> – Indicates that 4G LTE data service is available.
	<b>Enhanced 4G LTE In Use</b> – Indicates that 4G LTE data service is in use.
	<b>3G/1x Connected</b> – Indicates that 3G/1x data service is available.
	<b>3G/1x In Use</b> – Indicates that 3G/1x data service is in use.
	<b>Wi-Fi Connected</b> – Indicates that Wi-Fi is in use.
	<b>Bluetooth On</b> – Indicates that Bluetooth is on.
	<b>Location On</b> – Indicates that Location is on.
	<b>Roaming</b> – Your phone is “roaming” off the Nationwide Boost Network.
	<b>Airplane Mode</b> – Indicates that the phone is in Airplane Mode.
	<b>Vibrate Mode</b> – Indicates that the ringer volume is set to vibrate and any sounds are silenced.
	<b>Priority</b> – Indicates that 'Priority' mode is set and only certain features are allowed to interrupt.
	<b>No interruptions</b> – Indicates that all sounds are turned off.
	<b>Very Low Battery</b> – Indicates that the battery is very low.
	<b>Low Battery</b> – Indicates that the battery is low.
	<b>Battery Drained (40%)</b> – Indicates that the battery is partially drained.

Icon	Status
	<b>Battery Full</b> – Shows your current battery charge level. (Icon shown is fully charged.)
	<b>Battery Charging</b> – Indicates that the battery is charging.
	<b>Alarm Clock</b> – Indicates that an alarm is set.

## Main Notification Icons

Icon	Notification
	<b>New Gmail</b> – Indicates a new Gmail message.
	<b>New Email</b> – Indicates a new Email message.
	<b>New Text or Multimedia Message</b> – Indicates that you have received a new text or multimedia message.
	<b>New Hangouts Message</b> – Indicates a new Hangouts Message.
	<b>Problem With Text Or Multimedia Message Delivery</b> – Indicates that a text or multimedia message was not delivered.
	<b>New Voicemail</b> – Indicates that you have received a new voicemail message.
	<b>Upcoming Event</b> – Alerts you to an upcoming event.
	<b>Data Is Syncing</b> – Application sync is active and synchronization is in progress for Gmail, Calendar, and Contacts.
	<b>Problem With Sign-In Or Sync</b> – There has been an issue with your connection to the Google server, or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google Account.
	<b>Full Storage</b> – Indicates that storage is full.
	<b>USB Connected</b> – The phone has detected an active USB connection.

Icon	Notification
	<b>More Notifications Not Displayed</b> – Indicates that there are more notifications which are not displayed in the Status Bar.
	<b>Call In Progress</b> – Indicates that a call is in progress.
	<b>Call In Progress Using Bluetooth Headset</b> – Indicates that a call is in progress using the Bluetooth headset.
	<b>Call Being Forwarded</b> – Indicates that a call is being forwarded.
	<b>Call On Hold</b> – Indicates that a call is on hold.
	<b>Missed Call</b> – Indicates that you have missed calls.
	<b>Uploading Data</b> – Indicates that your phone is uploading data.
	<b>Downloading Data</b> – Indicates that your phone is downloading data.
	<b>Download Finished</b> – Indicates that a download is complete.
	<b>Connected To Basic VPN</b> – Indicates that the phone is connected to a Basic VPN.
	<b>Song Is Playing</b> – Indicates that a song is playing.
	<b>Carrier Data</b> – Data use threshold approaching or exceeded.
	<b>TTY</b> – Indicates that your phone is operating in TTY mode.
	<b>Hotspot Active</b> – Indicates that Portable Wi-Fi hotspot is active.

## Notifications Window

Drag the Status bar down to open the Notifications window. From there, you can check notifications, open messaging apps, use the quick settings menu, and more.

### Open the Notifications Window

- Drag the Status bar down. (Slide your finger down from the top of the screen.)

- ❖ The Notifications window opens. To check notifications, tap an item in the list.

## Close the Notifications Window

- Drag the Notifications window up. (Slide your finger up from the bottom of the screen.)  
– or –
- Tap **Back**  to close the Notifications window.

## Notifications Window Layout

The Notifications window gives you access both to notifications and the quick settings menu.

# Customize the Home Screen

You can customize your Home screen when you do the following.

- Create Shortcuts
- Add Widgets
- Create Contact shortcuts
- Change the Background (Wallpaper)
- Customize Application Icons

## Create Shortcuts

Shortcuts are different from the Home screen Widgets. Shortcuts can access a specific contact, activate a feature, action, or launch an application.

To add a shortcut from the Applications screen:

1. Tap  to access the Home screen.
2. Select a location (canvas) for your new shortcut by scrolling across your available canvases until you reach the desired one. (See [Extended Home Screens](#).)
3. Tap  to reveal all your current applications. By default, the applications are listed in a grid view.
4. Scroll through the list and locate your desired application.
5. Touch and hold the on-screen icon. This creates an immediate shortcut of the selected icon and closes the Applications screen. The new shortcut then appears to hover over the Home screen.

**Note:** The same shortcut can be added to any of the available canvases (Home or Extended). The application you add to the canvas will still appear within the Applications screen.

6. While holding the on-screen icon, position it on the current canvas. Once complete, release the screen to lock the shortcut into its new position.

To add a shortcut via the Home screen:

1. Tap  to access the Home screen.
2. Touch and hold on an empty area of the screen.
3. Tap either **Apps** or **Widgets**.
4. Touch and hold a selection from the list and drag it to your Home screen.

To delete a shortcut:

1. Tap  to access the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over **Remove**  and release it.

## Add and Remove Widgets on the Home Screen

Widgets are self-contained applications that can be accessed through your Applications screen or on the Home or Extended screens. Unlike a shortcut, this Widget appears as an on-screen application.

To add a Widget:

1. Tap  > .
2. Tap the **Widgets** tab.
3. Touch and hold an available Widget and drag it to your current screen.

To remove a Widget:

1. Go to the Home screen canvas on which the widget is located.
2. Touch and hold the widget. This unlocks it from its location on the current screen.
3. Drag the widget over **Remove**  and release it.
  - This action does not delete the Widget. It just removes it from the current canvas.

To place a Widget onto a different screen:

1. Touch and hold the widget you want to move.
2. Drag the widget to the edge of the screen (the left side if moving to a screen located on the left, right side if moving to a screen located on the right).
3. After about one second, the current screen will change. Repeat until you get to the desired screen.

# Change the Phone's Wallpaper

You can select and assign your phone's background wallpaper.

1. Tap  >  > **Settings**  > **Home screen** > **Wallpaper**.

– or –

Touch and hold an empty spot on the Home screen.

2. Tap **Wallpaper gallery**, **ID Wallpapers**, **Gallery**, **Live wallpapers**, **Multi-photo**, or **Photos**.
  - **Wallpaper gallery** to use a default wallpaper from the wallpaper gallery.
  - **ID Wallpapers** to open the available wallpapers that were included in your Boost ID pack.
  - **Gallery** to use a picture saved on your phone as a wallpaper. You can crop the picture before setting it as a wallpaper.
  - **Live wallpapers** to open a list of animated wallpapers installed on your phone. Live wallpapers can be animated or even interactive. More Live wallpapers are available in the Play Store.
  - **Photos** to use the Photos app and set a picture saved on your phone as a wallpaper. You can crop the picture before setting it as a wallpaper.
3. Depending on the type of wallpaper, tap **OK**, **Set wallpaper** or **Apply**.

# Phone App

---

The following topics outline the use of your device's phone app to place and receive calls, use voicemail, set up and manage contacts, and more.

## Place and Answer Calls

The following topics describe how to directly dial calls, how to answer incoming calls, and how to use the in-call screen options.


 
### Adjust In-Call Volume

- **Adjusting Call Volume:** Press the **Volume Up/Down Buttons** during the call.

## Call Using the Phone Dialer

The most "traditional" way to place a call is by using the phone's dialer screen.

1. Tap  >  > **Dial** tab.
2. Enter a phone number using the on-screen dialpad and tap .
  - If you enter a wrong number, tap  to erase digits one by one.
  - To erase the entire number, touch and hold .

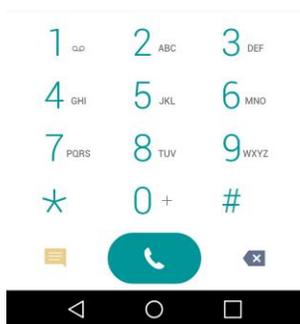

- You can open other applications during a call. The  will appear in the Status bar while the call is underway.
- Press the **Volume Up and Down Buttons** to adjust the call volume.

- Use the on-screen buttons to add another call, put a call on hold, to use the speakerphone, and for other options, as described in [In-Call Screen Layout and Operations](#).

3. Tap  to end the call.

**Tip:** To redial your last outgoing call, follow step 1 to access the Dialer, tap the **Call logs** tab, locate the call entry and tap .

You can also make calls from your Contacts list and from the Call logs.

## Answer Phone Calls

The following information lets you know how to answer incoming calls, mute the ringer on incoming calls, reject incoming calls, and more.

When you receive a phone call from a contact, the Incoming call screen appears and displays the caller ID icon, name, and phone number of the calling party. When you receive a phone call from someone who is not stored in People, only the default caller ID icon and phone number appear on the Incoming call screen.

**Note:** If your phone is turned off, all calls automatically go to voicemail.

### Answer an Incoming Call


1. When a call arrives, drag  in any direction to answer it.
2. To end the call, tap .

### Reject an Incoming Call

- When a call arrives, drag  in any direction to reject it.
  - ❖ The ringtone or vibration will stop and call will be sent directly to voicemail.

## In-Call Screen Layout and Operations

While you're on a call, you will see a number of onscreen options. Tap an option to select it.

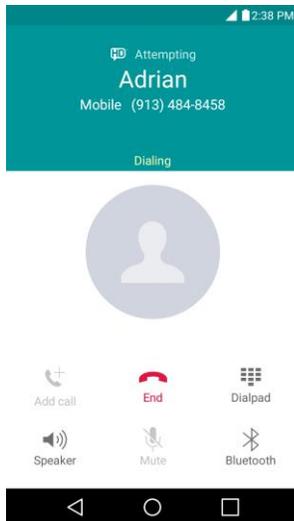

- **Add call** to initiate a 3-way call.
- **End** to end the current call.
- **Dialpad** to display the dialpad to enter additional numbers, for example, an extension or access code.
  - For example: When you call your bank's 800 number, use your dialpad to enter your account number and PIN.
- **Speaker** to route the phone's audio through the speaker (On) or through the earpiece (Off).
  - Activate the speaker to route the phone's audio through the speaker. (You can adjust the speaker volume using the volume buttons.)
  - Deactivate the speaker to use the phone's earpiece.

**Warning:** Because of higher volume levels, do not place the phone near your ear during speakerphone use.

- **Mute** to mute the microphone during an active call. Tap again to unmute the microphone.
- **Bluetooth** (Only available when a Bluetooth headset is connected to your phone) to route the phone's audio through a connected Bluetooth headset (On) or through the speaker (Off). For details about pairing the phone with a Bluetooth headset.
  - When the call is routed to a Bluetooth headset, the current call area shows the Bluetooth call icon (.

**Note:** The Headset button is activated to show the current call is routed to the connected Bluetooth headset.

- To route the current call back to the phone, tap **Bluetooth** to temporarily use the phone. Tap it again to route the call back to the connected Bluetooth headset.

- When Bluetooth or the Bluetooth headset is turned off, the call is routed through either the earpiece or speaker and shows .

Tap  during a call to display a list of additional in-call features. Tap an option to select it.

- **Contacts:** Display your contacts list.
- **QuickMemo+:** Open the QuickMemo+ app.
- **Messaging:** Opens the Messaging app.

## Place Calls from Contacts/Call History

Make calls quickly using Contacts and Call History.

### Place a Call from Contacts

You can place phone calls directly from entries in your Contacts list.

1. Tap  >  to display the phone app.
2. Tap **Contacts** to display the Contacts list.
3. Tap a contact.
4. Tap **Call**  next to the number you want to call.
5. To end the call, tap .

### Call from Call Logs

The Call logs list lets you quickly place calls to recent incoming, outgoing, or missed numbers.

1. Tap  >  to display the phone app.
2. Tap **Call logs** to display the Call logs list.
3. Tap an entry to display the call details.
4. Tap **Call**  to place a call.
5. To end the call, tap .

## Optional Services

The following topics outline additional voice-related services available with your phone, including call services, voicemail, and more.

## Voicemail Setup

You should set up your voicemail and personal greeting as soon as your phone is activated. Always use a password to protect against unauthorized access. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

1. Tap  >  > **Dial** tab.
2. Touch and hold **1** = to dial your voicemail number.
3. Follow the system prompts to:
  - Create your password.
  - Record your name announcement.
  - Record your greeting.

**Important: Voicemail Password** – It is strongly recommended that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

## Visual Voicemail

Visual Voicemail gives you a quick and easy way to access your voicemail. Now you can find the exact message you are looking for without having to listen to every voicemail message first. This new feature periodically goes out to your voicemail, and gathers the caller information from all of the current voicemails. It then populates a list with the caller name and number, along with the length of time and priority level of the voicemail message.

## Set Up Visual Voicemail

Setting up Visual Voicemail follows many of the same procedures as setting up traditional Boost voicemail. You should set up your Boost voicemail and personal greeting as soon as your phone is activated. Your phone automatically transfers all unanswered calls to your voicemail, even if your phone is in use or turned off.

**Note:** To set up your traditional voicemail box, see [Voicemail Setup](#).

1. Tap  >  > **Voicemail** .
2. Tap **Personalize now** and follow the system prompts to:
  - Create a password (part of standard voicemail).
  - Record your name announcement.
  - Record your greeting.
3. When prompted to enter information, enter your numeric responses.

**Important: Voicemail Password** – Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your phone is able to access your voicemail messages.

4. Once you have completed the setup process, return to the voicemail page (see step 1).
5. Tap the **Welcome to Voicemail** message on the screen to play a brief explanation of the voicemail services.

## Review Visual Voicemail

Visual Voicemail lets you easily access and select which messages you want to review.

1. Tap  >  > **Voicemail** .
2. Tap a message to review it. The following is a description of the features available while reviewing a voicemail message.
  -  **Timeline** provides a visual timeline for the current message. Touch and drag this bar to scroll through the message to different points.
    - Tap  to pause the playback, tap  to resume.
    -  /  **Speaker Off/On** to turn the speakerphone on or off during playback. If the speakerphone feature was enabled within the Voicemail Settings menu, the speakerphone will always be automatically enabled during voicemail playback.
  -  **Call** to call the person that left the message.
  -  **Delete** to delete the message.
  -  **Share** to share the selected message using your favorite services like Email, Messaging, and others.
  -  **Menu** to access Archive, Settings, Help.

## Visual Voicemail Options

Use the following options to access and configure your Visual Voicemail options.

1. Tap  >  > **Voicemail** .
2. From this initial screen, you can:
  - Tap  to compose a new voicemail message.
  - Tap **Inbox** to view the voicemail messages in other folder: **Inbox**, **Trash**, **Archive**, etc.
  - Tap  to access **Search**, **Settings**, **Help**.

- Tap  to play all new messages.
- Tap  to select multiple messages to delete, save, or mark as unread/read.

## Configure Visual Voicemail Settings

The Visual Voicemail settings menu lets you access settings for notifications, pictures, greetings, and more.

1. Tap  >  > **Voicemail** .
2. Tap  > **Settings** and select from the following:
  - **Avatar**
    - **Disable Avatar** to disable Avatar compose features and content store.
    - **Avatar Facebook Ad Signature** to enable avatar advertising signature when posting on Facebook.
    - **SMS delivery** to allow sending SMS message to recipients who do not have Avatar capability.
  - **Display**
    - **Themes** to choose the type of theme used for the application.
    - **Display name** to enter a name to identify yourself to people when replying or forwarding messages.
  - **Help** to see the Boost visual voicemail help.
  - **Preferences**
    - **Manage subscription** to subscribe and unsubscribe from the visual voicemail premium monthly subscription service. This may take a minute.
    - **Auto forward to email** to send a copy of new messages to an email address of your choice.
    - **Personalize voicemail** to change your voicemail greeting for incoming calls and update password.
    - **Delete messages** to set Visual Voicemail to permanently delete messages from the Trash folder after a specific number of days.
    - **Transcription language** to transcribe Voicemails from voice to text.
    - **Mobile advertising preferences** Manage participation in the Mobile Advertising Program, including enabling bonus app features.

- **Display ads** Control whether ads display inside Voicemail. Turning ads off also disables bonus features.
- **Sound**
  - **Notifications** to determine how you are notified of new voicemails. Set the notification sound and vibrate option.
  - **Speakerphone** to automatically turn the speaker on or off.
- **Updates** to search for an upgrade to your Visual message software.
- **About Voicemail** to view build information about the current visual voicemail application.

## Change Your Main Greeting via the Voicemail Menu

Your main greeting can be changed directly via the Visual Voicemail system. This direct access saves you from having to navigate within the voicemail menu.

1. Tap  >  > **Voicemail** .
2. Tap  > **Settings** > **Preferences** > **Personalize voicemail**.
3. Tap **OK** to connect to the Boost voicemail system. Follow the prompts to change your current greeting.

## Caller ID Blocking

Caller ID identifies a caller before you answer the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Tap  >  > **Dial** tab.
  2. Tap   .
  3. Enter a phone number.
  4. Tap .
- ❖ Your caller information will not appear on the recipient's phone.

To permanently block your number, call Boost Customer Service.

## Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your phone's screen informs you that another call is coming in and displays the caller's phone number (if it is available).

To respond to an incoming call while you're on a call:

- Swipe  in any direction. (This puts the first caller on hold and answers the second call.)

To switch back to the first caller:

- Tap **Swap calls**.

**Note:** For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing     before placing your call. Call Waiting is automatically reactivated once you end the call.

## Conference Calling

With conference calling, also known as 3-way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. On the dial pad screen, enter a number and tap  (or place a call from Log or Contacts).
2. Once you have established the connection, tap **Add call**, and dial the second number (or place the call from Logs or Contacts).
  - ❖ This puts the first caller on hold and dials the second number.
3. When you're connected to the second party, tap **Merge calls**. Your conference call is now in session.
4. To end the three-way call, tap .

**Note:** If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

## Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

**Note:** You are charged a higher rate for calls you have forwarded.

To activate Call Forwarding:

1. Tap  >  > **Dial tab**.
2. Tap   .
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap .
- ❖ You will hear a tone to confirm the activation of Call Forwarding. All calls to your wireless number will be forwarded to the designated phone number.

To deactivate Call Forwarding:

1. Tap  >  > **Dial tab**.

2. Tap    .

3. Tap .

❖ You will hear a tone to confirm the deactivation.

## Call Settings

Your phone's Call Settings menu lets you configure your voicemail options and a number of other settings for the phone application.

### Use the Call Settings Menu

1. Tap  >  > **Dial** tab.
2. Tap **Menu**  > **Call settings**.
3. Configure your options.
  - Tap a menu item to display its options.
  - Select your options and follow the prompts to set them.

### Call Settings Options

Use the Call Settings menu to adjust the following settings:

Setting	Description
<b>Voicemail</b>	You can configure your voicemail settings. For details on Voicemail settings, see <a href="#">Configure Visual Voicemail Settings</a> .
<b>Smart dialing</b>	Activate to make a call to the U.S. from abroad without entering the national code. Touch and hold  or tap the contact.
<b>Call reject</b>	You can set call rejection and manage the reject list.
<b>Decline with message</b>	You can send out a simple text message when you want to ignore an incoming call and respond to the caller with a text instead. You can add or edit quick messages.
<b>Auto answer</b>	Allows you to set the time before a connected hands-free device automatically answers an incoming call.

Setting	Description
<b>TTY mode</b>	A TTY (also known as a TDD or Text Telephone) is a telecommunications phone that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone. Your phone is compatible with select TTY phones. Please check with the manufacturer of your TTY phone to ensure that it is compatible with digital cell phones. Your phone and TTY phone will connect via a special cable that plugs into your phone's headset jack. If this cable was not provided with your TTY phone, contact your TTY phone manufacturer to purchase the connector cable.
<b>Hearing aids</b>	Tap to place the checkmark to turn on hearing aid compatibility.
<b>Proximity sensor</b>	When receiving and making calls, this sensor automatically turns the backlight off and locks the touch keypad by sensing when the phone is near your ear. This extends battery life and prevents the touch keypad from activating unintentionally during calls.
<b>Save unknown numbers</b>	You can set the phone to save the phone numbers not saved in Contacts yet.
<b>Power key ends call</b>	You can set the phone to end calls with <b>Power/Lock Button</b> on the call screen.
<b>Silence Incoming Calls</b>	You can set the phone to silence incoming calls by just flipping the phone.

## Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your phone as well as contacts synchronized with your Google Account, your PC, compatible email programs (including Exchange Server), and your friends from compatible social networking applications.

### Add a Contact

You can add contacts on your phone and synchronize them with the contacts in your Google Account, Microsoft Exchange account, or other accounts that support syncing contacts.

The Contacts application tries to join new addresses with existing contacts, to create a single entry. You can also manage that process manually.

1. Tap  >  > **Contacts** .
2. Tap  to add a contact.
3. Tap a destination type, **Phone contact** or **Google** (if available).

4. Tap  to select a picture to display next to the name in your list of contacts and in the Caller ID.
5. Tap the **Name** field and enter a name for your contact.
6. Tap the **Phone** field and enter a phone number.
7. Tap the label button (to the right of the phone number field) to select one of the following categories: **MOBILE**, **WORK**, **WORK MOBILE**, **HOME**, **HOME FAX**, **PAGER**, **RADIO**, **OTHER**, AND **CUSTOM**.
8. Tap the **Email** field and enter an email address and select the label from **HOME**, **WORK**, **OTHER**, **CUSTOM**.
9. Tap the **Address** field and enter an address and select the label from **HOME**, **WORK**, **OTHER**, **CUSTOM**.
10. Tap the **Groups** field and select one of the default groups or tap  to create a new group.
11. Tap the **Ringtone** field and select the desired ringtone for this contact.
12. Enter any additional information you may want to save and when you're finished, tap **SAVE**.

## Check Contacts

View a contact's details by displaying a contact entry.

1. Tap  >  > **Contacts** .
2. Tap a contact to view its details.

## Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry, assign a caller ID picture, customize with a unique ringtone, and more.

1. Tap  >  > **Contacts** .
2. Tap the contact to view its details.
3. Tap **Edit** .
4. Tap any field you want to change or add.
5. Add or edit the information, and then tap **SAVE**.

**Note:** To select a type (label) for a phone number, email address, or postal address (such as Home, Work, etc.), tap the type to the right of the field.

**Note:** To add more phone numbers, email addresses, etc., tap  on the right side of the entry field.

## Delete a Contact

You can delete a contact from the contacts details page.

1. Tap  >  > **Contacts** .
2. Tap a contact to view its details.
3. Tap **Menu**  > **Delete**.
4. Tap **YES**.

**Tip:** You can also touch and hold the contact from the contact list and then tap **Delete contact > Yes**.

## Join and Separate Contacts

When you have two or more entries for the same contact, you can join them into a single entry. You can also separate contacts that were joined.

1. Tap  >  > **Contacts** .
2. Tap  > **Manage contacts** > **Merge contacts**.
3. Select a tab at the top of the screen.
  - Tap **Merge suggestion** to select entries to merge.
  - Tap **Merged contacts** to select entries to separate.
4. Checkmark the entry (or entries) you want, then tap **MERGE** or **SEPARATE**.

## Import and Back Up Contacts

If you have contacts stored in vCard format on the phone's internal storage, you can import them into your Contacts application on your phone. You can also export contacts in vCard format onto the phone internal storage. Export your contacts to back them up to a computer or another phone.

### Import Contacts

You can import contacts from your internal storage directly to your Contacts application.

1. Copy the vCard files to your phone from your computer.
2. Tap  >  > **Contacts** .
3. Tap  > **Manage contacts** > **Import**.
4. Select where to import from and save to, then tap **OK**.
5. Tap the files you wish to import and tap **IMPORT** and **YES** to confirm.

## Back Up Contacts

You can export all of the contacts on your phone, as vCard files. You can then copy this file to a computer or another phone that is compatible with this format, such as an address book application.

1. Tap  >  > **Contacts** .
2. Tap  > **Manage contacts** > **Back up**.
3. Select a storage location and then tap **OK**.
4. Tap the contacts you want to export, then tap **EXPORT** and **YES** to confirm.
5. Enter a file name and tap **OK**.

# Messaging and Internet

---

With wireless service and your phone's messaging and data capabilities, you have the opportunity to share information through many different channels and accounts, including Gmail (Google), personal and corporate email, text and multimedia messaging, social networking accounts, and Hangouts.

## Text and Multimedia Messaging

With text messaging (SMS), you can send and receive instant text messages between your wireless phone and another messaging-ready phones. When you receive a new message, you will be notified by your phone. Messaging is available via the Messaging application in your Applications screen. The icon appears in Status Bar when a new text message is received.

**Note:** See your service plan for applicable charges for text messaging.

## Compose Text Messages

Quickly compose and send text messages on your phone.

1. Tap  >  > **Messaging** .
2. Tap .
3. Tap the **To** field and enter a contact's information, see example below, using the on-screen keyboard.
  - **Contacts:** As you enter either a name, phone number, or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, tap the associated name to complete the addressing.
  - **Mobile:** You can enter a wireless phone number directly.
  - **Email:** You can enter an email address directly.
4. Tap a matching entry from the on-screen dropdown list. This list is populated by matches found from your contact list.
5. Tap the text field and enter your message.
  - To enter a smiley from the menu options, tap  > **Insert smiley**. Make a selection from the list to insert it into your current message.
  - To enter emojis, tap , then tap , and select a category at the bottom of the keyboard.
6. Review your message and tap **Send**.

## Read and Reply to Text Messages

When you receive a text message, your phone will notify you.

- Open the Notification Panel and tap the text message notification.

– or –

- Tap  >  > **Messaging**  and tap the new message.

### Reply to a Text Message

1. While viewing a message, tap the text field to open the keyboard.
2. Compose your reply or use the preset messages or icons.
  - To enter a message, use your on-screen keyboard.
  - To enter a smiley from the menu options, tap  > **Insert smiley**. Make a selection from the list to insert it into the message.
  - To enter emojis, tap , then tap , and select a category at the bottom of the keyboard.
3. You may select additional messaging options by tapping .
4. Review your reply and tap **Send**.

## Send a Multimedia Message (MMS)

When you need to add a little more to a text message, you can send a multimedia message (MMS) with the contents such as images, videos, etc.

**Note:** See your service plan for applicable charges for multimedia messaging.

### Compose Multimedia Messages

1. Tap  >  > **Messaging** .
2. Tap the **To** field and enter the recipient's name, phone number, or email information.
3. Tap the text field and enter your message.
4. Tap .
5. Select a multimedia attachment type:
  - **Image:** Opens the Gallery application. Use the on-screen navigation to select the picture you wish to send with the outgoing message.
  - **Take photo:** Opens the Camera application. Take a picture, and then tap **OK** to use this image in your message. (See [Take Pictures](#).)

- **Video:** Opens the Gallery application. Use the on-screen navigation to select a video and attach it to your outgoing message.
- **Record video:** Opens the Camcorder application. Record a video, then tap **OK** to use this video in your message. (See [Record Videos.](#))
- **Audio:** Opens a menu that allows you to browse for audio files using different applications.
- **Record voice:** Opens the message recorder.
  - After recording your message, tap  to attach it to your message.
- **Location:** Opens a map screen. Select a location, then tap **Attach** to use this.
- **Contact:** Opens your Contacts list and allows you to select of a Contact to send.
- **Schedule:** Opens your Schedule event list and allow you to select an event to send.
- **Slide:** Allows you to create a slideshow with your media files.
  - Insert a multimedia file, then tap  > **Slide**. You can also enter text to each slide.
- **Draw:** Allows you to draw and attach an image like QuickMemo+.

**Note:** To remove or replace a picture or an audio attachment, on the Compose screen, tap  next to the attachment.

6. When you are finished creating your new MMS message, tap **Send MMS**.

## Save and Resume a Draft Message

While composing a text or multimedia message, tap  to automatically save your message as a draft.

To resume composing the message:

1. On the screen with all message threads, tap the message. The Draft icon  is displayed if a saved draft is available.
2. When you finish editing the message, tap **Send** or **Send MMS**.

## Managing Message Conversations

Text and multimedia messages that are sent to and received from a contact (or a number) are grouped into conversations or message threads in the Messaging screen. This allows you to see exchanged messages (similar to a chat program) with a contact on the same screen.

### Read a Text Message

- Do one of the following:
  - On the Messages screen, tap the message thread to open and read it.

- If you have a new message notification, touch and slide the Status Bar down to open the Notifications Panel. Tap the new message to open and read it.

## View a Multimedia Message (MMS)

1. Tap  >  > **Messaging** .
2. On the Messaging screen, tap a message thread to open it.
3. While viewing a message, tap the play icon (on the video or audio file) to playback the file or tap the image to view the picture.

**Tip:** The file attachment on the multimedia message can be saved to your phone's internal storage. To save the attachment, touch and hold the file and tap **Save attachment** from the Message options context menu.

**Note:** When Auto-retrieve in multimedia message settings is disabled, only the message header is downloaded. To download the entire message, tap the **Download** button in the message. For details, see [Text and Multimedia Message Options](#).

## Reply to a Text or Multimedia Message

1. Tap  >  > **Messaging** .
2. On the Messages screen, tap a message thread to open it.
3. While viewing a message, tap the text field and type your reply message.
4. Once completed, tap **Send** or **Send MMS**.

To return to the All messages screen from a text message thread, tap .

**Note:** To view the details of a particular message, in the message thread, touch and hold the message to open the options menu, and then tap **Details**.

**Note:** If a message contains a link to a web page, tap the message and then tap the link to open it in the web browser.

**Note:** If a message contains a phone number, tap the message and then tap the phone number to dial the number or add it to your contacts.

## Protect (Lock) a Message

You can lock a message so that it will not be deleted even if you delete the other messages in the conversation.

1. Tap  >  > **Messaging** .
2. On the Messages screen, tap a message thread to open it.
3. Touch and hold the message that you want to lock.

4. Tap **Lock message** on the options menu. A lock icon is displayed at the right hand side of the message.

## Delete a Message Thread

You can delete a single message or several messages at a time.

To delete a message thread:

1. Tap  >  > **Messaging** .
2. On the Messages screen, tap the message thread that you want to delete.
3. Tap  > **Delete**.
4. Tap **Select all** or choose the desired messages and tap **Delete**.
5. When prompted to confirm, tap **Yes**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

## Delete Multiple Message Threads

1. Tap  >  > **Messaging** .
2. On the Messages screen, tap  > **Delete**.
3. Tap the **Select all** checkbox at the top left corner, then tap **Delete**.
4. When prompted to confirm, tap **Yes**. Any locked messages in the thread will not be deleted unless you select the **Delete locked messages** check box.

## View Contact Information from a Message

When you have received a message from someone in your stored contacts, you can tap the contact's photo or icon in the message thread to open a menu of options. Depending on the stored contact information, you can view the contact details, phone or send an email message to the contact, and more.

## Text and Multimedia Message Options

The messages settings menu lets you control options for your text and multimedia messages including message limits, size settings, and notifications.

1. Tap  >  > **Messaging** .
2. On the Messages screen, tap  > **Settings**.
3. Adjust the following settings according to your needs:
  - **Notification settings**

- **Notifications:** Enable this option if you wish to receive a notification when a new text or multimedia message arrives.
  - **New message pop-up:** Enable this option if you wish to see a new message in a pop-up window.
  - **Preview:** Enable this option if you wish to preview the contents of messages when new messages arrive.
  - **Notification sound:** Allows you to select a ringer to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection, then press **OK** to save your new setting.
  - **Vibrate:** Enable this option if you want the phone to vibrate when a new text or multimedia message is received.
  - **Vibrate type:** Choose what type of vibration you wish to apply to new messages.
- **Text message**
  - **Priority:** Allows you to set the default priority as **Normal** or **High**.
  - **Message reassembly:** Enable this option (blue checkmark displays) so that multi-segment messages can be reassembled and shown as a single message. Each segment will still count toward your usage.
- **Multimedia message**
  - **Group Messaging:** Enable this option (blue checkmark displays) to send a single message as multimedia message when there are multiple recipients.
  - **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your multimedia message. When checked, the multimedia message header, message body, and any attachments will automatically download to your phone when the message is received. If you disable this option, only the multimedia message header will be retrieved and displayed.
    - **Roaming auto-retrieve:** Disable this option if you only desire the multimedia message headers to download while roaming. Enable this option to automatically download your complete multimedia messages even while roaming.
  - **Priority:** Allows you to set the default priority as **Low**, **Normal**, or **High**.
- **General settings**
  - **Quick message:** Tap this to add or edit quick messages. Quick message is the specified text message to send out when you choose to ignore an incoming call and respond to the caller with a message instead.
  - **Send message with Enter key:** You can opt to send a message by simply using the **Enter** key. This menu allows you to select when this feature should be enabled.

- **Signature:** Tap this to automatically add a signature to your messages (blue checkmark displays).
- **Callback number:** Check this to automatically add a callback number to your messages (blue checkmark displays).
- **Delete old messages:** Enable this option to delete older text messages when the limit for maximum number of text messages is exceeded.
  - **Text message limit:** Sets the maximum number of text messages that can be stored on the phone (per message thread).
  - **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the phone (per message thread).
- **Save to:** Allows you to set the default storage location for files received through Messages to **Internal storage** or **SD card**.

## Create and Send Gmail

Gmail is Google's web-based email service.

From a computer, launch your preferred web browser and navigate to [www.gmail.com](http://www.gmail.com). Depending on your synchronization settings, Gmail (along with calendar events, phone numbers and other contact information) on your phone can be automatically synchronized between your phone and your Gmail account on the web.

## Create a Google Account

You must create and/or sign into a Google Account to use Gmail, Google Hangouts™, and other Google Apps. Signing into a Google Account is also necessary to download updates and applications from the Google Play Store app to sync your data (if applicable) with the Google servers, and to take advantage of any other available Google services on your phone.

If you don't have a Google Account, you will be prompted to create one. If you have an enterprise account through your company or other organization, your IT department may have special instructions on how to sign into that account.

1. From a computer, or from your phone's Browser, navigate to [www.google.com](http://www.google.com).
2. On the main page, tap or click **Sign in > Create an account**.
3. Follow the on-screen prompts to create and activate your free account.

## Sign in to Your Google Account

If you have a Google Account but have not yet signed in with your phone, follow these instructions to sign in to your Google Account.

1. Launch an application that requires a Google Account (such as Play Store or Gmail).
2. Enter a Google Account and tap **NEXT**.

**Note:** If you do not already have a Google Account, tap **Or create new account** and follow the on-screen prompts to create your new account.

3. Enter your Password and tap **NEXT**.
4. Select if you want to back up your phone's apps, app data, settings, and Wi-Fi passwords and tap **NEXT**.
5. Checkmark the entries you want to sync (if necessary) and tap **NEXT**.

Your phone then communicates with the Google servers to confirm your information.

**Important:** Some applications, such as Calendar, work only with the primary Google Account (the first Google Account set up with your phone). If you plan to use more than one Google Account with your phone, be sure to sign into the one you want to use with such applications first. When you sign in, your contacts, Gmail messages, Calendar events, and other information from these applications and services on the web can be synchronized with your phone. You will be prompted to sign in or to create a Google Account the first time you start an application that requires one, such as Gmail or Play Store.

## Access Gmail

Access your personal Gmail account directly on your phone.

When you open the Gmail application, the most recent conversations are displayed in your Inbox.

1. Tap  >  > **Google**  > **Gmail** .
2. Do any of the following.
  - **View more email messages:** Swipe your finger up the screen to view more messages and conversations.
  - **Read a new email message:** Tap the unread message or the conversation with an unread message (just-arrived items display in bold).
  - **Select messages and conversations:** Tap the image to the left of the corresponding email.

## Send a Gmail Message

You can compose and send a message to people or groups with Gmail addresses or other email addresses.

1. Tap  >  > **Google**  > **Gmail** .
2. Tap .

**Note:** This will start the message from your default Gmail account. To send it from another account, tap the account name at the top left corner of the Inbox, then tap the account you want to use.

3. Enter a recipient's address. As you enter text, matching addresses are displayed from your Contact list. You can tap a suggested address or continue entering text to enter a new one.

4. Enter a subject for the message in the Subject field.
5. Continue into the next field to compose your email message.
6. Tap  > **Attach file** to add an attachment to the email.
7. Tap  to send the email.

– or –

If you're not ready to send the message, tap  > **Save draft** instead. You can read your drafts by opening messages with the Drafts label.

– or –

Tap  > **Discard** to erase the message (including any saved drafts).

**Note:** If you aren't connected to a network - for example, if you're working in Airplane mode - the messages that you send are stored on your phone, with the Outbox label until you connect to a network again.

## Read and Reply to Gmail Messages

You can continue an email conversation by replying to a message or by forwarding it.

1. Tap  >  > **Google**  > **Gmail** .
2. Touch a message to display it.
3. At the bottom of the message, tap  to reply to the message.

– or –

Tap  to reply all to the message.

– or –

Tap  to forward to the message.

- Replying to or forwarding messages without changing the subject adds your reply to the current conversation. Changing the subject starts a new conversation.
- The message will open in a new screen where you can add or remove addresses, edit the subject, and add or remove text or attachments.
- You can add one or more people to an ongoing conversation by replying to all and then adding the new person's address(es) to the message.

- All of the messages in the conversation are included in the new message; any messages that follow the message you forward are omitted.

4. Tap  to send the email.

**Note:** You can change the message action after you've started the message. Simply tap the  icon in the message header to the right of the current message action, then tap the one you want. For example, if you chose **Reply** but decide you want to **Reply all**.

## Email

Use the Email application to send and receive emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

### Add an Email Account (POP3 or IMAP)

The Email application only reveals all currently added email accounts. To view additional email accounts within the main Email screen, they must first be added.

1. Tap  >  > **Email** .
2. Do one of the following:
  - If this is your first time to add an email account, tap **Microsoft Exchange**, **Yahoo**, or **Other** on the Select email provider screen.
  - If you have already added an email account in Email, tap  > **Settings** >  **Add account**. If the Select email provider screen is displayed, tap **Microsoft Exchange**, **Yahoo**, or **Other**.
3. Enter the **Email address** and **Password** for your email account and then tap **Next**.
  - Tap **Manual setup** to configure your connection settings manually (POP3 , IMAP, or Exchange). Follow the on-screen prompts and enter the information specific to your carrier.

**Important:** If the account type you want to set up is not in the phone database, you will be asked to enter more details. You should get all pertinent information for the email account, such as incoming and outgoing server settings, before you proceed.

4. Enter the account name and your name and tap **Done**.

### Corporate Email (Outlook)

The Email application also provides access to your Outlook Exchange server via your phone. If your company uses Microsoft Exchange Server 2003, 2007 and 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts and directly with your company's Exchange server.

#### Set Up a Corporate Email

1. Tap  >  > **Email** .

2. Tap **Microsoft Exchange** (from the add new email account screen).
3. Enter your **Email address** and **Password** information, then tap **Next**. Consult your Network Administrator for further details.
  - **Email address:** Your Outlook work email address.
  - **Password:** Typically your network access password (case-sensitive).
4. If needed, enter a **Server address, Domain** and tap **Next**.
  - **Server:** Your exchange server remote email address. Typically starts with mail.XXX.com. Obtain this information from your company's network administrator.
  - **Domain:** Enter your network domain\login username.
  - If your network requires SSL encryption, tap the **Use secure connection (SSL)** box to place a checkmark and activate this additional level of security.
  - If your exchange server requires this feature, leaving this field unchecked can prevent connection.

**Note:** Signal interruptions or incorrect username or password information can cause completion issues.

5. Read the on-screen activation disclaimer and, if prompted, tap **Activate**.

**Note:** Depending on the type of account, you might be required to enable security to sync the account.

6. Configure your **Update schedule, Days to sync email** (days to synchronize between your phone and server), and activate any other email settings, then tap **Next**.
7. Identify your new account with a unique name and provide the outgoing name, then tap **Done**.

**Note:** You can have multiple Work Email (Microsoft Exchange) accounts active on your phone.

## Open Email

Reading and replying to email on your phone is as simple as on your computer.

1. Tap  >  > **Email** .
2. Tap a message to read, manage, or reply to.
  - From your Inbox screen, tap  to select the following options: **Sort by, Downloads** and **Settings**.

## Create and Send Email

Create and send email using any account you have set up on your phone. Increase your productivity by attaching files such as pictures, videos, or documents to email messages.

1. Tap  >  > **Email** .

2. From the Inbox, tap .
3. Enter the recipient's email address in the **To** field.
  - You can add as many message recipients as you want.

**Note:** To send an additional carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, enter the recipients in the **Cc** or **Bcc** field.

4. Tap the **Subject** field and enter the email subject.
5. Tap the body field and compose your email.
  - To add an attachment (such as picture, video, contact, event, audio, etc.), tap .
  - You can access the internal storage and navigate to the file you wish to attach.
  - Tap the file you wish to attach.
6. Tap  to send the email.

**Note:** If you close the messaging window before sending it, the message will be stored in Drafts.

## Reply to or Delete an Email Message

Replying to or deleting an email is simple.

### Reply to an Email Message

1. From the Inbox, tap an email message to view it.
2. With the email message displayed, tap  and choose **Reply**, **Reply all** or **Forward**.
  - If you select **Forward**, you must specify the message's recipients.
3. Enter a new message and tap .

### Delete an Email Message

- Touch and hold an email (from your inbox list) and tap **DELETE** from the pop-up context menu.

– or –

With the email message displayed, tap .

## Configure and Sync Corporate Email Settings

You can sync and configure various settings for your corporate email and create a corporate email signature.

## Sync Your Accounts

1. Tap  >  > **Settings**  > **Accounts & sync**.
2. Tap **Microsoft Exchange**, then select the Corporate account to reveal the account's synchronization settings screen.
3. If the option is available, place a checkmark next to each option if you want the phone to automatically synchronize. If you want to manually synchronize, tap  > **Pull down to refresh**.

## Configure Corporate Email

1. Tap  >  > **Settings**  > **Accounts & sync**.
2. Tap **Microsoft Exchange**, then select **Email Settings** and tap the desired account to reveal the account's synchronization settings screen.
3. The following settings are available.
  - **Account name:** Displays the name used by the phone to track the account.
  - **Signature:** To add a signature or other information to outgoing email.
    - **Edit Signature:** Displays a signature. Tap this to change it.
  - **Notifications:** Allows you to decide whether to notify you of new email.
    - **Notification sound:** Allows you to select the notification sound for new emails.
    - **Vibrate:** Allows you to configure vibrate options for new emails.
    - **Vibrate Type:** Allows you to select the vibration type for new emails.
  - **Auto-sync email:** Allows you to automatically sync email.
  - **Sync schedule:** Choose the Sync schedule.
  - **Folders to sync:** Select the folders you want to synchronize.
  - **Email sync period:** Choose how many days of email you want to sync.
  - **Message size limit:** Allows you to set the size limit for messages.
  - **Advanced settings:** Allows you to configure advanced email settings.
    - **Message format:** Select the format you want to view email messages in.
    - **Download over Wi-Fi:** Large attachments will be queued until Wi-Fi is connected.
      - **File size for Wi-Fi download:** Allows you to choose when to use Wi-Fi for downloading files attached to emails.
    - **Always Cc/Bcc me:** Allows you to copy yourself to emails sent out.

- **Auto resend times:** Set the number of tries to resend a failed email message.
  - **Out of office settings:** Allows you to set your out of office settings and message.
  - **Security settings:** Set digital signatures and encryption to secure email.
  - **Calendar sync period:** Allows you to set the period of time to sync with your calendar.
  - **Corporate directory:** Searches online directory for the recipient input.
  - **Server policy:** View the server policy currently applied.
  - **Exchange server settings:** Allows you to change the server settings for your account.
4. Tap  to return to the previous screen, your changes will be saved.

For more detailed Corporate email information, see [Corporate Email \(Outlook\)](#). For more information on Corporate Calendar synchronizing.

## Configure General Email Settings

1. Tap  >  > **Settings**  > **Accounts & sync**.
2. Tap **Email** to display the account's synchronization settings screen.
3. Tap **Email Settings** and select **General settings** to set the following settings.
  - **Email preview:** Allows you to set how many lines of email to display as a preview in the mailbox.
  - **Conversation view:** Allows you to view email messages sent or received with the same subject in one thread.
  - **Split view:** Allows you to view the email list with email contents in landscape orientation.
  - **Set default account:** Allows you to set the default account.
  - **VIP settings:** Set Notifications, Sound, Vibrate, Vibrate Type for VIP lists.
  - **Save to:** Allows you to choose where to save attachments.
  - **Ask before deleting:** Checkmark to set the phone to ask before deleting email.
  - **Auto-advance:** Select which screen to display after deleting an email.
  - **Load images:** Select to load images in the email.
4. Tap  to return to the previous screen.

## Browser

Your phone supports the Chrome mobile Web browser. If you are signed in with a Google Account, the Chrome browser will import all your bookmarks and other Web preferences for use on your phone.

1. Tap  >  > **Chrome** .
2. Tap the address bar at the top and enter search words (for a Google search) or a Web address.

## Add a Bookmark

Bookmark favorite sites using the Chrome menu options.

1. Tap  >  > **Chrome** .
2. Navigate to the Web page you want to bookmark, and tap **Menu**  > .
3. Check or change the bookmark name, URL, etc., and then tap **Save**.

## View Browser History

Use the browser menu options to view your browsing history.

1. Tap  >  > **Chrome** .
2. Tap **Menu**  > **History**.

## Open New Browser Tabs

Use tabbed browsing to switch between websites quickly and easily.

1. Tap  >  > **Chrome** .
2. Tap **Menu**  > **New tab**.
3. Tap the address bar at the top and enter search words (for a Google search) or a Web address.

**Tip:** To switch tabs, tap one of the available thumbnails in the tabs window.

## Browser Settings

Customize your experience with the Internet through the browser settings menu.

1. Tap  >  > **Chrome** .
2. Tap **Menu**  > **Settings**, and customize your browser settings.

## Chrome Support

- To find on-phone help with Chrome, from Chrome, tap **Menu**  > **Help & Feedback**.
  - ❖ A Web page will open displaying Google help for Chrome.


**Tip:** For more information, from your computer, visit: [google.com/intl/en/chrome/browser/mobile/](https://google.com/intl/en/chrome/browser/mobile/).

# Camera and Video

---

You can use the camera or camcorder to take and share pictures and videos.

**Note:** Be sure to clean the lens with a microfiber cloth before taking pictures. A lens cover with smudges from fingers can cause blurry pictures with a "halo" effect.

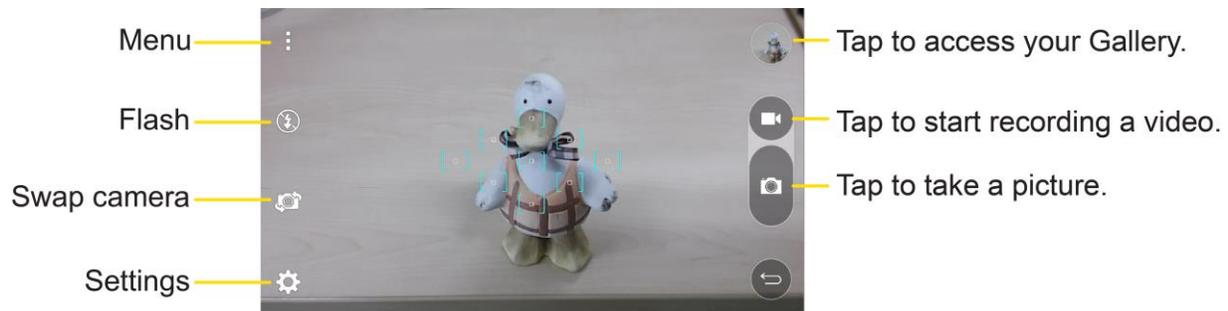

## Take Pictures and Record Videos

The following topics teach you how to take pictures and record videos with your phone's camera.

### Multi-point Auto-focus

When you take a picture, the Multi-point Auto-focus (AF) function operates automatically and will allow you to see a clear image.

### Capturing Pictures/Videos

- **File Format for Pictures:** File format for pictures is JPEG.
- **File Format for Videos:** File format for videos is MPEG4.

### ! Camera Cautions

**If Lens Becomes Dirty:** Fingerprints/smudges on lens prevent capturing of clear still images/videos. Wipe lens with a soft cloth beforehand.

**Avoid Exposure to Direct Sunlight:** Be careful not to expose lens to direct sunlight for long periods. May discolor color filter and affect color of images.

### ! Mobile Light Warning

Do not shine Mobile Light close to eyes. Do not look directly at Mobile Light when shining. Do not shine Mobile Light at other people's eyes. May affect eyesight, etc.

## Take Pictures

Taking pictures with your phone's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

To take a picture:

1. Tap  >  > **Camera** .
2. Frame your subject on the screen.
3. Focus indicators will turn from white to green when the camera is focused.
4. Tap . Your picture will be automatically saved to the Gallery.

## Record Videos

In addition to taking pictures, you can record, view, and send videos with your phone's built-in video camera.

1. Tap  >  > **Camera** .
2. Frame your subject on the screen.
3. Tap  to start recording the video.
4. The length of the recording is displayed on the top right of the screen.

**Note:** Tap  to take pictures while recording video.

5. Tap  to pause recording video. You can resume recording again tapping .
6. Tap  to stop recording. Your video will be automatically saved to the Gallery.

## Camera and Video Settings

From the camera mode, tap each icon to adjust the following camera settings.

-  **Flash** Tap to turn the flash **On**, **Off** or set it to **Auto**.
-  **Swap camera** to swap between the rear camera lens and the front camera lens.
-  **Settings** to adjust the following camera and video settings.
  -  **Image/Video size:** Allows you to set the resolution for your pictures and videos. For pictures, choose from **4:3**, **16:9**, and **1:1**. For videos, choose from **FHD** and **HD**.


-  **Cheese shutter:** Allows you to take pictures with voice commands. When on, just say "Cheese", "Smile", "Whiskey", "Kimchi", or "LG" to take a picture.
-  **Timer:** Set your camera's timer. This is ideal if you want to be a part of the picture.
-  **Grid:** Allows you to easily take pictures by displaying grid lines for easy alignment.
-  **SD card:** Menu displayed if you have inserted an SD card. Set the storage location for your videos or pictures. Choose from **IN** (internal storage) or **SD** (microSD card).

**Note:** This option will be displayed when you insert a microSD card into the phone.

-  **Help:** Allows you to learn how a function works. This icon will provide you with a quick guide.

## Gesture Shot

Take a picture with a hand gesture. To take a photo, raise your hand until the front camera detects it and a box appears on the screen.

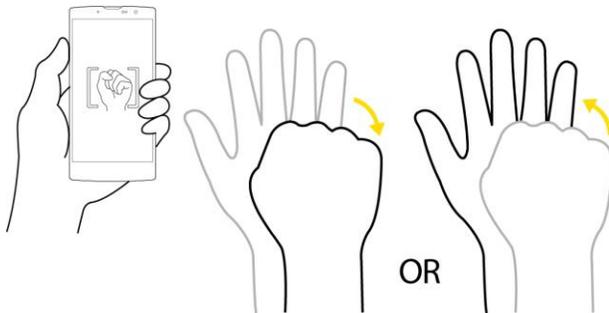

## View Your Pictures

The Gallery is where you can access the Gallery of stored camera images. You can view them in a slideshow, share them with your friends, and delete and edit them.

1. Tap  >  > **Gallery** .
2. Select a location and tap an image to view your picture.

## Gallery Options

The Gallery application presents the pictures and videos in your storage, including those you've taken with the Camera application and those you downloaded from the web or other locations.

1. Tap  >  > **Gallery**  to view the images stored in the storage.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)

3. Tap a picture in an album to view it.



- Tap on an album to access the photos and use the following options:
  -  **Camera:** Opens the Camera.
  -  **Share:** You can share the picture via various methods, such as Messaging or Bluetooth.
  -  **Delete:** Deletes the picture.
- While viewing a picture, tap  to access the following options: **Set image as, Move, Copy, Copy to Clip Tray, Rotate, Crop, Rename, Print, and Details.**

4. Tap  to return to the Album.

## Edit Pictures

Whether you're browsing pictures in filmstrip or grid view in the Gallery application, you can touch and hold on a picture to open a selection menu and choose to delete the picture, rotate or crop it, and more.

### Rotate and Save a Picture

1. Tap  >  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the picture you want to rotate.
4. Tap **Menu**  > **Rotate**, then select either **Rotate left** or **Rotate right**.

## Crop a Picture

1. Tap  >  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the picture you want to crop.
4. Tap **Menu**  > **Crop**.
5. To adjust the crop box size, touch and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
6. Tap **Done** to apply the changes to the picture.

## Share Pictures and Videos

The Gallery application lets you send pictures and videos using email or multimedia messages. You can share pictures on your social networks (such as Facebook, Flickr, Picasa, and Twitter) and share videos on YouTube. You can also send them to another phone or your computer using Bluetooth.

### Send Pictures or Videos by Email

You can send several pictures, videos, or both in an email or Gmail message. They are added as file attachments in your email. For more information about using email and Gmail, see [Create and Send Email](#) or [Create and Send Gmail](#).

1. Tap  >  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
  - To select multiple items, touch and hold an image to turn on multiple select. Tap all the items you want to include.
5. Tap **Share**  and then on the Share via menu, tap **Email** or **Gmail**.

**Note:** If you selected Mail and you have multiple email accounts, the default email account will be used.

For more information about using email and Gmail, see [Create and Send Email](#) or [Create and Send Gmail](#).

### Send a Picture or Video by Multimedia Message

Multimedia Messaging (MMS) lets you send pictures and videos using your phone's messaging app. Although you can send several pictures or videos in a multimedia message, it may be better to just send one at a time, especially if the files are large in size.

1. Tap  >  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
5. Tap **Share**  and then on the Share via menu, tap Messaging.

For more information about sending multimedia messages, see [Send a Multimedia Message \(MMS\)](#).

## Send Pictures or Videos Using Bluetooth

You can select several pictures, videos, or both and send them to someone's phone or your computer using Bluetooth.

1. Tap  >  > **Gallery** .
2. Tap an album (such as Camera).
3. Tap the album that contains the pictures or videos you want to share.
4. Tap the pictures or videos you want to share.
5. Tap **Share**  and then on the Share via menu, tap Bluetooth.

For more information, see [Bluetooth](#).

## Assign Pictures

After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).

1. Tap  >  > **Gallery** .
2. Tap an album and tap an image to view it.
3. With the picture displayed, tap  > **Set image as**.
4. Select an option.
  - **Contact photo** to assign the picture to a Contact entry as a picture ID. Tap an entry from Contacts, crop the image and tap **OK** to assign the picture.
  - **Home screen wallpaper** to assign the picture as a background image, crop the image and tap **OK** to assign the picture.
  - **Lock screen wallpaper** to assign the picture as a background image for your lock screen.

- **Wallpaper** to assign the picture as a background image, crop the image and tap **SET WALLPAPER** to assign the picture.

## Video Options

The Gallery is where you can access the Gallery of stored video images. You can view them, share them with your friends, and delete and edit them.

### Play a Video

1. Tap  >  > **Gallery**  to view videos stored in the storage.
  - Scroll left or right to view more albums.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a video in an album to play it.
  - Tap the screen to view the playback controls.

**Tip:** While playing a video, slide the left side of the screen up or down to adjust the screen brightness and slide the right side of the screen up or down to adjust the sound.

**Tip:** While playing a video, tap the timeline point to preview that portion of the video via a small screen. Tap the small screen to jump to that part of the video or slide your finger from left to right (or vice versa) to fast-forward and rewind.

### Available Options

1. Tap  >  > **Gallery**  to view the videos stored in storage.
2. Tap an album to open it and view its contents. (The pictures and videos in the album are displayed in chronological order.)
3. Tap a video to view it. While the video is playing, you can access the following options:
  -  **Menu:** Tap to access **Screen ratio, Subtitles, Share, Trim, Settings, and Details.**
  -  **Screenshot:** When Screenshot capturing is enabled, this captures a screen shot while playing a video.

**Note:** To activate screenshots, tap  > **Settings > Screenshot > On.**

-  **Volume:** Tap to adjust the playback volume.
-  **Lock/Unlock:** Locks the touch keys to prevent unintentional touches.

# Dual Play

Dual Play (connected wired or wirelessly two displays) can be run on a different screen.

1. Connect two devices using a wired (Slimport-HDMI) cable or wirelessly (Miracast). The connectable device can be a TV or a monitor supported by a HDMI cable or Miracast.

**Note:** The Gallery and Video apps are supported on Dual Play.

2. Tap  once when two displays are a different status (i.e. the monitor is playing a video and your phone's video app is displaying an empty screen), then Dual Play will start.

**Note:** Not all videos are supported by Dual Play. Dual Play operates at 1280X720 or higher display resolution.

# Useful Apps and Features

---

The following topics detail many of your phone's tools and features such as maps and navigation and more.

## Navigation

Your phone offers a number of location-based navigation programs to help you figure out where you are and get you where you're going.

### Enable Location Services on Your Phone

Before using any location-based services, you must enable your phone's location feature. For information about setting your phone's location options, see [Location](#).

## Google Maps

Use the Google Maps app to determine your location, find directions, browse local businesses and attractions, rate and review places, and more.

### View Maps of Specified Places

Use Google Maps to locate and map a specific address or destination.

1. Tap  >  > **Maps**  to view videos stored in the storage.
  - ❖ Google Maps opens.
    - If prompted, follow the onscreen instructions to accept terms of use.
2. Tap **Search** .
3. Enter an address, city, facility name, etc., and then tap a candidate in the results list or tap the Search icon in the keyboard.
  - ❖ A map of the specified location opens.

## Scout

Scout™ by Telenav is a daily personal navigator that helps you get where you're going. It lets you see and hear turn-by-turn directions and it can provide important, personalized information about traffic and alternate routes.

### Install the Scout App on Your Phone

Before you use Scout on your phone, you may need to download and install the app from the Google Play Store app.

1. Tap  >  > **Play Store** .
2. Tap the Search icon and search for "scout".
3. Tap **Scout GPS Navigation & Meet Up** from the results list.
4. Tap **INSTALL**, and then tap **ACCEPT**.
  - ❖ The app will be downloaded and installed on your phone.
5. When the download has completed, tap **OPEN**.
  - To open the app from the home screen, tap  >  > **Scout** .

## Use Scout as Your Personal Navigator

1. Tap  >  > **Scout** 
  - ❖ The Scout app will open.
    - If prompted, accept the terms of use before continuing.
2. Follow the on-screen instructions to access, launch, and use.

## Google Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, and also use video calling. Log in to a Google account beforehand (see [Google Account](#)).

The Google Hangouts application lets you have real-time text conversations with your friends.

### Open the Hangouts Application

- Tap  >  > **Google**  > **Hangouts** .

### Chat with Friends

1. Tap  >  > **Google**  > **Hangouts** .
2. Tap  to view your contacts list.
  - Tap the name of the person in your contacts list. If your friend is not yet on Hangouts, you can invite your friend via SMS.
    - or –
  - Tap the text field to enter a name, email or number.
3. Enter your message.

4. Tap .

## QuickMemo+

The QuickMemo+ feature allows you to create memos and capture screen shots. You can use QuickMemo+ to easily and efficiently create memos during a call, with a saved picture or from most phone screens.

1. While viewing the screen you want to capture and create a memo on, drag the Status Bar down and tap .



2. Create a memo using the following options:

- : Tap to undo the most recent action.
- : Tap to redo the most recently undone action.
- : Tap to add typed text to the memo.
- : Tap to add freehand notations to the memo.
- : Tap to use the eraser on the drawing you've added to the memo.
- : Tap to save the current memo.
- : Tap to select the desired options.

**Note:** Please use a fingertip while using the QuickMemo+ feature. Do not use your fingernail.

3. Tap  to save the current memo.
4. Tap **QuickMemo+** or **Gallery** to select where to save the note.

Discard the current memo:

- Tap  until you exit QuickMemo+.

### View the Saved QuickMemo+

Your QuickMemo+ can be saved in the QuickMemo+ application or in the Gallery application.

To view QuickMemo+ saved in one of your QuickMemo+:

- Tap  >  > **QuickMemo+**  and select the memo.

To view QuickMemo+ saved in your Gallery:

- Tap  >  > **Gallery**  and select the QuickMemo+ album.

## Music

You can play audio files that are stored in your phone's storage. Copy audio files from your computer onto your phone before you open the Music application. The Music Player application supports audio files in numerous formats.

### Google Play Music

Google Play Music lets you browse, shop, and play back songs purchased from the Google Play Store app, as well as songs you have loaded to Google's server from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

- Tap  >  > **Google**  > **Play Music** .

**Note:** Learn more about Google Play Music at [music.google.com](https://music.google.com).

### Music Player

You can play music and set as ringtone.

1. Tap  >  > **Music** .
2. You can select music tracks from the following tabs:
  - **Songs:** To browse through your downloaded music library.
  - **Albums:** To display your music library sorted by album.
  - **Artists:** To display your music library sorted by artist.
  - **Genres:** To display your music library sorted by genre.
3. Tap  to see the additional options.
  - **Favorites:** To display your music library sorted by favorites.
  - **Playlists:** To select a customized playlist you've created.
  - **Folders:** To browse for music files using folders.
4. Once you've displayed a list of songs, you can browse through your available titles.
  - To listen to a song or playlist, tap it to begin playing.

## Play a Song

1. Tap  >  > **Music**  > **Songs** tab.
2. Select the song you want to play.

## Create a Playlist

1. Tap  >  > **Music** .
2. Tap  > **Add to playlist**.
3. Select the songs you want to add to the playlist and tap **ADD**.
4. Tap **New playlist** and enter a name.
5. Tap **OK** to save the playlist.

## Assign a Song as a Ringtone

1. Tap  >  > **Music**  > **Songs** tab.
2. Touch and hold a song you'd like to use as your new ringtone. A context menu is displayed.
3. Tap **Set as ringtone** and select **Phone ringtone** to set it as the default ringtone or **Contact ringtone** to set it as a ringtone for a specific contact.
4. Confirm the song has been successfully assigned by navigating to your phone's ringtone menu.

**Note:** You can modify the Ringtones with the following methods:

- Tap  >  > **Settings**  > **Sound** > **Ringtone**.
- Open the Contact entry and check the **Ringtone** field.

## Back Up Your Downloaded Music Files

Boost recommends that you back up your downloaded music files to your computer. Although the downloaded files can only be played on your phone and on your account, backing them up to your computer lets you access the files in case your phone is misplaced.

1. Connect your phone to your PC using a USB cable.
2. Open the Notifications Panel and tap **USB connected**.
3. Select **Media device (MTP)** and use your computer to navigate to phone's Music folder.
4. Select and copy the music files to a folder on your computer's hard drive.

# Calendar

With the Calendar application you can view the events you have scheduled in the coming days, weeks, or months.

## Open the Calendar

You can open and use the calendar.

- Tap  >  > **Calendar** . If you have created or subscribed to more than one calendar through Google Calendar™ on the web, events from each calendar are displayed in a different color. (For information about which calendars are displayed on your phone, see [Display and Synchronize Calendars](#).)

**Note:** To go to any day in any Calendar view, tap  > **Go to date**.

## Change Calendar View


You can change the calendar view.

- Tap  > **Day, Week, Month, Year, Agenda**. Each view displays the events in your calendar for the period of time that you specify.

## View Event Details

You can view more information about an event in a number of ways, depending on the current view.

- In **Agenda, Day, Week,** or **Month**, tap an event to view its details and to use the options below.

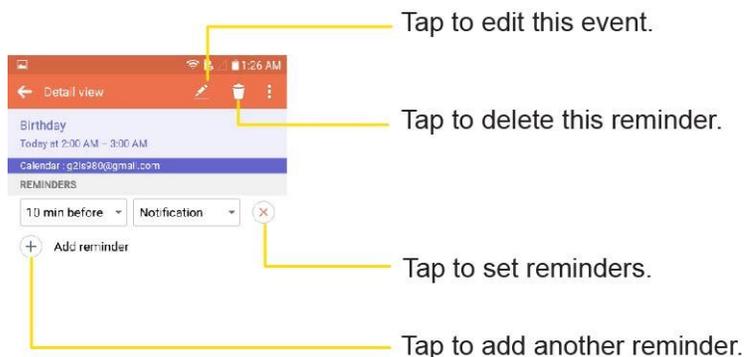

## Create an Event

You can use the Calendar tool on your phone to create events that appear on your phone and in your Google Calendar on the web.

1. Tap  >  > **Calendar**  and then .

  - You can also touch and hold a spot in **Day**, **Week**, or **Month** view to open the new event screen with that day and time already entered.

2. Add details about the event.
  - Enter a name and other optional details about the event, just as you would on Google Calendar (on the web). If you have more than one calendar, you can choose the calendar to which to add the event. Tap  to add more reminders. (See [Set an Event Reminder.](#))
3. Scroll to the bottom of the screen and tap **Save**.
  - The event will be added to your Calendar. You can also access and configure the event from Google Calendar on the web.

## Edit or Delete an Event

Depending on Calendars you've configured, you may be able to edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others.

### Edit an Event

1. Tap  >  > **Calendar**  and then tap the event to open it. (See [View Event Details.](#))
2. Tap . (For information on how to create or change event information, see [Create an Event.](#))
3. Make your changes to the event.
4. Tap **SAVE**.

### Delete an Event

- Tap an event to view the event details. Then, tap . Tap **YES** to confirm.

## Set an Event Reminder

You can set one or more reminders for an event saved in your Calendar.

1. Open **Calendar** and tap the event to open it. (See [View Event Details.](#))
2. Tap  **Add reminder** to add a reminder.
3. Tap the reminder time to display a pop-up menu and choose your desired setting.
  - At the designated time, you will receive a notification to remind you about the event. (See [Respond to an Event Reminder.](#)) If you're using a calendar from your Google account, you can also use Google Calendar (on the web) to configure additional reminders.

## Delete an Event Reminder

1. Tap  >  > **Calendar**  and then open the specific event.
2. Tap  to remove a reminder.

## Respond to an Event Reminder

If you set a reminder for an event, the reminder notification appears in the Status Bar when the reminder time arrives. (See [Notifications Window](#).)

1. If you receive notifications in the Status Bar, drag the Notifications Panel down to your notifications. Tap the event notification to open the list of Calendar notifications.
2. Tap an event in the Calendar notification to view more information about that event.
3. Tap **SNOOZE** in the Calendar notification to receive the reminder again 5 minutes later.

– or –

Tap **DISMISS** in the Calendar notification.

## Display and Synchronize Calendars

Initially, all calendars that you create or subscribe to through Google Calendar on the web are also displayed in the Calendar application on your phone. You can select which calendars to show or hide on the phone, and which to keep synchronized.

Only the calendars that you've created or subscribed to on the web are shown in the **Calendars** list.

To select calendars to display:

1. Tap  >  > **Calendar**  and then tap  > **Calendars to sync**.
2. Use the check box to select or deselect the desired accounts to display those calendars.

## Change Calendar Settings

You can change the settings for how the Calendar application displays events and how it notifies you of upcoming events.

- Tap  >  > **Calendar**  and then tap  > **Settings** > **Calendar settings**.
  - **Week starts on:** Opens a dialog box to configure from when the week starts on.
  - **Hide declined events:** When checkmarked, declined events so that they are not displayed in your calendar views. Tap to remove the checkmark and display all events in your calendar views.
  - **Weather:** Show weather info on the Calendar in Monthly view, for the current date and following 4 days.

- **Show tasks:** Allows you to show tasks in all event views.
- **Show events by:** Select event display type **Event brief** or **Timeline**.
- **Show week number:** Displays the week number out of the year.
- **Lock default time zone:** Lock event times and dates to default time zone.
- **Clear search history:** Allows you to remove all the searches you have performed.
- Tap  >  > **Calendar**  and then tap  > **Settings** > **Event notification settings**.
  - **Default reminder time:** Allows you to select the default time set for event reminders.
  - **Notifications:** Checkmark to allow notifications of new events. When Notifications is set, you can select the notification type, notification sound, vibrate or vibrate type, and whether to pop-up the notification or not.
  - **Quick responses:** Edit default responses when emailing guests.

## Folders

Folders allow you to organize other Home screen shortcuts and icons, or folders that contain all your contacts, contacts with phone numbers, or starred contacts. Your folder's contents are kept up to date automatically. Organizing in folders can create space to add more shortcuts, widgets, or applications on the Home screen.

### Add a Folder

1. On the Home screen, drag and drop an app icon over another app icon.  
– or –

On the Apps screen, tap  > **Edit/Uninstall apps**. Then drag and drop an app icon over another app icon.

2. A folder will be created with both app icons in it.

### Rename a Folder

1. Tap the folder icon to open it.
2. Tap the folder header .
3. Tap the text field to enter the new folder name and tap **OK**.

**Note:** You can also change the folder color.

### Organize Items in a Folder

- Just drag a shortcut or an icon to the desired location within a folder.

# Clock

Your phone has a clock app that lets you set alarms, view time in time zones around the world, use a stopwatch, set a timer, and use your phone as a desk clock.

## Checking the Time

You can check the phone any time on your phone. The current time displays in the upper right corner of the status bar. Many widgets and lock screens also display the time and provide options for how time is displayed.

## Set Alarms

Set multiple alarms using your phone's Clock app.

1. Tap  >  > **Clock** .
2. Tap an existing alarm to change its time and other attributes or tap **Add alarm**  to add a new one.
3. Set the time of the alarm. You can change the time by scrolling up/down the hour and minute and AM/PM field or tap the hour and minutes fields to enter the time with the keyboard.
4. Tap **Repeat** to select the days when you want the alarm to sound. (If you don't set a repeat, the alarm will only sound on the assigned day.)
5. Tap **Snooze duration** to open a dialog box to set the amount of time to wait before sounding the alarm again if it is not dismissed. You can set the alarm to ring repeatedly from 5 minutes up to 1 hour.
6. Tap **Alarm with vibration** to have the phone vibrate, in addition to playing the ringtone.
7. Tap **Alarm sound** to select a ringtone for the alarm. The ringtone plays briefly when you select it.
8. Slide the button on the **Alarm volume** slider to the right to increase the alarm volume and to the left to decrease it.
9. Tap **Auto app starter** to set the application you want to automatically open when you stop the alarm.
10. Tap **Puzzle lock** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
11. Tap **Memo** to enter a name for the alarm.
12. When you're finished, tap **SAVE**.

## Additional Clock Features

Your phone's clock app provides additional useful features including world clock, stopwatch, and timer functions. All features are available from the clock app display.

- Tap  >  > **Clock** .

## Timer

The timer provides a countdown timer.

1. Tap  >  > **Clock**  > **Timer** tab.
2. Tap the **Hour/Minute/Second** sections to set the timer.
3. Tap  > **Settings** to set the following options:
  - **Alarm with vibration:** Set the phone vibrate along with the alert sound. (A blue checkmark appears.)
  - **Alert sound:** Select the alert sound.
  - **Alert volume:** Set the alert volume.
4. Tap  to start.
  - Tap  to reset the timer and start over.
  - Tap  to resume the timer after it's stopped.
  - Tap  to stop the timer.

## World Clock

 
The world clock lets you keep track of the current time in multiple cities around the globe.

1. Tap  >  > **Clock**  > **World clock** tab.
2. Tap  to add a city.
3. Enter the city name in the search field and tap  on the keyboard.  
– or –  
Scroll through the cities list and tap the city.
4. You can add as many cities as you want. Repeat steps 2 and 3.

## Stopwatch

The stopwatch lets you time events down to the hundredth of a second.

1. Tap  >  > **Clock**  > **Stopwatch** tab.
2. Tap  to start stopwatch time.

3. Tap  to stop the stopwatch.
  - While measuring time, tap  to view lap times.

## Calculator

You can use the Calculator application to solve math problems.

1. Tap  >  > **Calculator** .
2. Enter numbers and arithmetic operators on the screen.
  - You can long-press the results to cut, copy, and/or paste the displayed values.
  - Tap  to delete the last number or operator you entered. Touch and hold  to delete numbers repeatedly.
  - Tap  to clear the screen.
  - Tap  to open an Options menu to view your **Calculation history** or change panels between **Scientific/Basic calculator**.

# Connectivity

---

The following topics address your phone's connectivity options, including USB file transfer and tethering, Wi-Fi, Bluetooth, IR connectivity, and more.

## Connections Optimizer

The Connections Optimizer is a tool that automatically selects the best mobile network for your phone, including "remembered" Wi-Fi networks.

### About Connections Optimizer

The Connections Optimizer helps you manage and enhance your data experience by finding and connecting to "remembered" Wi-Fi networks on your phone. Remembered Wi-Fi networks are networks with which you have previously chosen to connect. Active Wi-Fi connections may offer improved performance and generally improve battery life while allowing you to talk on the phone and use data at the same time.

The Connections Optimizer works by searching for available "remembered" Wi-Fi networks. If you do not leave your Wi-Fi antenna on all the time, you will only notice the Connections Optimizer operating at certain times of the day in a small number of locations on the network. Your Wi-Fi antenna will conserve battery by scanning for connections periodically (not continuously), and if no connection is achieved, the antennas will be turned off. You may also manually turn the antennas off during the scan period.

To facilitate quality assurance and enable feature enhancements, information is collected about your battery levels, Wi-Fi and network connections, and usage. No personal information is collected.

### Enable Connections Optimizer

1. Tap  >  > **Settings**  > **Networks** tab > **More** > **Mobile networks** > **Connections optimizer**. You will see a disclaimer.
2. Read the disclaimer and, if you agree, tap **I Agree** to turn Connections Optimizer on.
  - ❖ Connections Optimizer will turn on and automatically analyze your phone's connection options.

### Disable Connections Optimizer

1. Tap  >  > **Settings**  > **Networks** tab > **Mobile networks** > **Connections optimizer**.
2. Uncheck the **Connections optimizer option**.

# Transfer Files Between Your Phone and a Computer

You can use the supplied USB connector to connect your phone directly to your computer and transfer music, pictures, and other content files.

For example, if you have a music album stored on your computer that you want to listen to on your phone with any of the music apps, just attach your phone to the computer and copy the files to the music folder.

## File Transfer Tips

- If you want to save data to a microSD card on your phone, make sure the microSD card is installed and active. See [microSD card](#).
- Avoid removing the battery or microSD card while transferring data.
- Data exchange may use the methods outlined in the following table:

Method	Description
Media device (MTP)	Transfer files between your phone and PC such as pictures, videos, and music.
Send images (PTP)	Transfer image files between your phone and PC.

## Transfer Files Between the Phone and a Computer

1. Connect your phone to your computer using the supplied USB/charging cable.
  - Insert the larger end of the cable into the charger/accessory port at the bottom of the phone.
  - Insert the USB end of the cable into an available USB port on your computer. You may need to remove the USB cable from the charging adapter to access it.
2. When  appears in the notifications area, drag the Status bar down to display the Notifications window.
3. You will see either **USB connected** as Media sync or as camera.
  - ❖ The files on your phone can now be accessed via your computer.
    - For most transfers, you'll want to use **Connected as Media sync**.
    - To change the option, tap it in the Notifications window to open the storage settings, and then tap the desired option from the USB PC connection window.
4. On your computer, navigate to the detected device (such as through the My Computer menu) and open it.

5. If available, select a drive (**SD card** for microSD card or **Internal storage** for internal phone storage).
6. Select a folder (for example, **Music** for songs and albums) and copy files to it from your computer.
7. When you are done, disconnect your phone from your computer.
  - ❖ The transferred files are now saved to your phone or microSD card.

## Wi-Fi

To use your phone's Wi-Fi, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

### Turn Wi-Fi On and Connect to a Wireless Network

Use the Wireless & networks setting menu to enable your phone's Wi-Fi radio and connect to an available Wi-Fi network.

1. Tap  >  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi switch to turn Wi-Fi on .
- ❖ You will see the names and security settings of in-range Wi-Fi networks.
  - To disable Wi-Fi, tap the switch again .
4. Tap a Wi-Fi network to connect, enter the password (if it's not an open network), and then tap **Connect**.

❖ Your phone is connected to the Wi-Fi network. You will see  in the Status bar.

- The password, for a household wireless LAN router, is sometimes found on a sticker on the router (WEP, WPA, KEY, etc.). Contact the router manufacturer for information. For password for a public wireless LAN, check with user's service provider.
- Entering a password is not required if an access point is not security protected.

**Note:** The next time your phone connects to a previously accessed secured wireless network, you will not be prompted to enter the password again, unless you reset your phone to its factory default settings or you instruct the phone to forget the network.

**Note:** Wi-Fi networks are self-discoverable, which means no additional steps are required for your phone to connect to a Wi-Fi network. It may be necessary to provide a user name and password for certain closed wireless networks.

## Wi-Fi Settings

Use the Wi-Fi settings menu to manually set your Wi-Fi connection options.

1. Tap  >  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi switch to turn Wi-Fi on .
  - ❖ You will see the names and security settings of in-range Wi-Fi networks.
    - To disable Wi-Fi, tap the switch again .
4. Tap **Menu**  > **Advanced Wi-Fi**.
5. Configure your Wi-Fi settings.

## Disconnect Wi-Fi

You may wish to disconnect from a connected Wi-Fi network without turning Wi-Fi off.

1. Tap  >  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the name of the connected access point and then tap **FORGET**.
  - After disconnecting from an access point, you may need to re-enter the password to reconnect.

## Wi-Fi Direct

Use Wi-Fi Direct to connect directly to other Wi-Fi Direct devices simply via Wi-Fi, without an access point or the Internet.

1. Tap  >  > **Settings** .
2. Tap **Wi-Fi**.
3. Tap the Wi-Fi switch to turn Wi-Fi on .
  - ❖ You will see the names and security settings of in-range Wi-Fi networks.
4. Tap **Menu**  > **Advanced Wi-Fi** > **Wi-Fi Direct**.
5. Tap a device with which to connect.
  - If connected via Wi-Fi, you will see a confirmation. Follow the onscreen instructions.
6. Accept the connection on the other device.

- If a connection is not accepted after a certain period, the connection request is cancelled.
- To stop a connection, tap the a device > **OK**.

## Tethering

Use Tethering to share your device's Internet connection with a computer that connects to your device via Wi-Fi hotspot, or by Bluetooth.

1. Tap  >  > **Settings**  > **More** > **Tethering**.
2. Select a tethering option: **Wi-Fi hotspot** or **Bluetooth tethering**.
  - **Wi-Fi hotspot:** Allows other devices to connect to your phone via Wi-Fi.
  - **Bluetooth tethering:** Pair your phone with the other device via Bluetooth.

**Tip:** For additional support with tethering, from the tethering menu, tap **Help**.

## Bluetooth

Bluetooth® is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless phones. The Bluetooth communication range is usually approximately 30 feet.

### Bluetooth Function Cautions

Information may not appear correctly on connected devices depending on the transferred data.

## Bluetooth Information

Bluetooth is a technology that enables wireless connection with PCs, Bluetooth devices with hands-free features, etc.

Function	Description
<b>Audio output</b>	Listen to music wirelessly.
<b>Hands-free calls</b>	Call hands-free, using Bluetooth-capable hands-free devices and headsets.
<b>Data exchange</b>	Exchange data with Bluetooth devices.

## Enable the Bluetooth Feature

Use the settings menu to enable or disable your phone's Bluetooth capabilities.

- Wireless connection to all Bluetooth functions is not guaranteed for the phone.
- The phone may not connect properly depending on the other device.

- Noise may be experienced with wireless calls and hands-free calls depending on the conditions.

To enable Bluetooth:

1. Tap  >  > **Settings** .
2. Tap **Bluetooth**.
3. Tap the switch to turn Bluetooth on .

  - To disable Bluetooth, tap the switch again .

**Tip:** You can also turn Bluetooth on or off with the toggle menu in the Notifications window. Drag the Status bar down to display the Notifications window and then tap **Bluetooth** to turn Bluetooth on or off.

**Note:** Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless phone is prohibited, such as aboard an aircraft and in hospitals.

## Pair Bluetooth Devices

Search for and pair nearby Bluetooth devices. Registered Bluetooth devices can be connected simply.

- Enable the Bluetooth function on the Bluetooth devices being paired beforehand.

To pair Bluetooth devices:

1. Tap  >  > **Settings** .
2. Tap **Bluetooth**.
  - Nearby devices appear in the “AVAILABLE DEVICES” list.
  - If a target device is not detected, tap **SEARCH** to search again.
3. Tap a device from the “Available devices” list, and follow the onscreen instructions to pair with the device.
  - Methods to accept a Bluetooth connection differ depending on the devices used.

## Unpairing from a Paired Device

1. From the Bluetooth settings menu, tap **Settings**  next to the paired device you wish to unpair.
2. Tap **Unpair**.
  - ❖ The device is unpaired from your phone. To make another connection with the device, you will need to pair again.

## Connect to a Paired Bluetooth Device

You can listen to music over a Bluetooth stereo headset, or have hands-free conversations using a compatible Bluetooth headset or car kit. It's the same procedure to set up stereo audio and hands-free devices.

1. Tap  >  > **Settings** .
2. Tap **Bluetooth**.
  - Paired Bluetooth devices appear in the “PAIRED DEVICES” list.
3. Tap a device from the “Paired devices” list.
  - ❖ Your phone connects to the paired device.

The pairing and connection status is displayed below the device's name in the Bluetooth devices section. When the device is connected to your phone, the Bluetooth connected icon  is displayed in the Status bar. Depending on the type of device you have connected, you can then start using the headset or car kit to listen to music or make and receive phone calls.

**Note:** Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

## Send Information Using Bluetooth

You can use Bluetooth to transfer information between your phone and another Bluetooth-enabled device such as a phone or notebook computer.

### Types of Data You Can Send via Bluetooth

You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Calendar events
- Contacts
- Audio files

In the instructions below, Contacts data is being used as an example.

### Sending Contacts Data via Bluetooth

1. Tap  >  > **Contacts** .
2. Tap a contact to send.
3. Tap **Menu**  > **Share** > **Bluetooth**.

4. Tap a paired device to receive the data.
  - ❖ The contact information is sent.
    - If you see a message to confirm, follow the onscreen instructions.

## Receive Data via Bluetooth

Your phone is capable of receiving a wide variety of file types with Bluetooth, including pictures, music tracks, and documents such as PDFs.

1. When another device attempts to send a file to your phone via Bluetooth, you will see a request to accept the file.
2. Tap **Accept**.
  - ❖ The file is sent to your phone.
    - When your phone receives a file, you will see a notification. To open the file immediately, drag the Status bar down to display the Notifications window, and then tap the notification.
    - When you open a received file, what happens next depends on the file type:
      - Media files and documents are usually opened directly in a compatible application. For example, if you open a music track, it starts playing in the default music application.
      - For a vCalendar file, select the calendar where you want to save the event, and then tap **Import**. The vCalendar is added to your Calendar events. (For more information on using the Calendar, see [Calendar](#).)
      - For a vCard contact file, if there are multiple vCard files on your storage card, you can choose to import one, several, or all of those contacts to your contacts list.

# Settings

The following topics provide an overview of items you can change using your phone's System settings menus.

## Basic Settings

Tap  >  > **Settings**  to access your phone's settings menu.

- Alternatively, you can drag the status bar down and tap **Settings** .

The table below outlines the top-level settings categories.

Category	Description
<b>Airplane mode</b>	Turn Airplane mode on or off.
<b>Wi-Fi</b>	Enable and set Wi-Fi options.
<b>Bluetooth</b>	Enable Bluetooth connections.
<b>Mobile data</b>	Check your phone's Mobile data.
<b>Call</b>	Set phone's call settings.
<b>Share &amp; connect</b>	Set wireless and network functions.
<b>Tethering</b>	Connect other devices to your phone's internet connection.
<b>More</b>	Allows you to personalize additional wireless feature settings.
<b>Sound</b>	Set ringtone, operation tones, etc.
<b>Display</b>	Set font, brightness, etc.
<b>Home screen</b>	Set wallpaper, etc.
<b>Lock screen</b>	Set your phone's lock screen options.
<b>Storage</b>	Get memory information, etc.
<b>Battery &amp; power saving</b>	Set battery saver and check battery usage status, etc.
<b>Apps</b>	Get apps information on the phone.

Category	Description
Default message app	Set default message app.
Location	Set location options.
Security	Set security options.
Account & sync	Check account, add account, etc.
Language & input	Set language and language options.
Backup & reset	Set backup options, factory set, etc.
Shortcut key	Set keys for quick action.
Date & time	Set date and time options.
Accessibility	Set accessibility options such as screen magnification, hearing aid compatibility, etc.
QuickCircle case	Set apps for QuickCircle.
Activate this device	Activate the your phone.
System updates	Get system updates on your phone.
About phone	Get your phone information.

## Airplane Mode

Airplane Mode (flight mode) allows you to use many of your phone's features, such as games, and music, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your phone to Airplane Mode, it cannot send or receive any calls or access online data.

### Activate Airplane Mode

1. Tap  >  > **Settings** .
2. Tap the **Airplane mode** switch  to turn the function on. While in Airplane Mode, your phone's Status bar will display .

### Deactivate Airplane Mode

1. Tap  >  > **Settings** .
2. Tap **Airplane mode** switch  to turn the function off.

## Wi-Fi Settings

Your phone lets you take advantage of Wi-Fi hotspots for high-speed data access using available computer networks. For details on your phone's Wi-Fi features and settings, see [Wi-Fi Settings](#).

## Bluetooth Settings

Your phone's Bluetooth capabilities let you use wireless headsets, send and receive pictures and files, and more. For details on your phone's Bluetooth settings, see [Bluetooth](#).

## Mobile Data

You can check the current data usage, set to enable/disable mobile data, or set the mobile data limit.

### Turn Mobile Data On or Off

1. Tap  >  > **Settings** .
2. Tap the **Mobile data** switch  to turn it on.

– or –

Tap the **Mobile data** switch  to turn it off.

## Call Settings

Your phone's Call settings menu lets you configure options. For details on your phone's Call settings, see [Call Settings](#).

## Share & Connect

Your phone lets you use the wireless technology that enables data transmission between devices using SmartShare Beam, and other functions.

### Media Server

Share media content with nearby the DLNA-compatible devices.

1. Tap  >  > **Settings**  > **Share & connect**.
2. Tap **Media sever** and checkmark the **Content sharing** checkbox to allow nearby devices to access your content.

### Printing

The Printing menu allows you to manage your Google Cloud Print settings and print jobs.

- Tap  >  > **Settings**  > **Share & connect** > **Printing**.

# Tethering

Use Tethering to share your device's Internet connection with a computer that connects to your device via Wi-Fi hotspot or by Bluetooth. Consult [Tethering](#).

# Mobile Networks

The Mobile Networks menu allows you to configure various mobile network settings.

## Mobile Data

Allows you to enable and disable data access over the mobile network.

1. Tap  >  > **Settings**  > **More** > **Mobile networks**.
2. Tap the **Mobile data** checkbox to enable/disable the feature.

## 4G Settings

Allows you to view your 4G network provider and IP address.

1. Tap  >  > **Settings**  > **More** > **Mobile networks**.
2. Tap the **4G settings** to check **Network operator** and **IP address**.

## Network Mode

Allows you to choose your preferred network mode.

1. Tap  >  > **Settings**  > **More** > **Mobile networks** > **Network mode**.
2. Choose from the following options:
  - Tap **LTE/CDMA** to turn on the LTE/CDMA radio band.
  - Tap **CDMA** to turn on the CDMA radio band.

## Connections Optimizer

Your phone can be set to automatically connect you to Wi-Fi networks on your device's remembered list and, if applicable, to the Boost 4G Network.

1. Tap  >  > **Settings**  > **More**.
2. Tap **Mobile networks** > **Connections optimizer**.
3. Read the message and, if you agree, tap **I Agree**.

# Sound Settings

In the Sound settings menu, you can configure call and notification ringtones, audio volume, and other sound related settings.

## Sound Settings Overview

The sound settings menu allows you to configure the following options:

Sound Setting	Description
Sound profile	Set silent mode.
Volume	Set volume for ringtones, alarms, system features, etc.
Ringtone	Set your phone's default ringtone.
Sound with vibration	Enable vibration with ringtones.
Vibrate type	Set vibration type.
Interruptions	Set a tone for default phone notifications.
Lock screen	Set notification options for lock screen.
Apps	Set notifications for apps.
Notification LED	Set LED light options.
Notification sound	Set the sound heard for new notifications.
Vibrate on top	Enable vibration when tapping the screen.
Sound effects	Set sound for dialpad, screen lock, etc.
Message/call voice notifications	Set notification sound for message and call.

## Sound Profile

Configure your phone's sound profile.

1. Tap  >  > **Settings** .
2. Tap **Sound** > **Sound profile**.
3. Tap one of the two options.

# Volume

Adjust your phone's volume settings to suit your needs and your environment.

1. Tap  >  > **Settings** .
2. Tap **Sound > Volume**.
3. Adjust each volume level.
  - **Ringtone:** Changes the volume of your call ringtones (if applicable).
  - **Notification sound:** Allows you to set this volume level. This is the volume of the ringtone when you receive a notification.
  - **Touch feedback & system:** Changes the volume for feedback taps and system notifications.
  - **Music, video, games & other media:** Changes the volume of your music, videos and other media.
4. Tap **OK**.

**Tip:** You can adjust the ringer volume on the Home screen or Applications screen, or almost any screen by using the Volume Buttons on the back of your phone. In other applications such as Music, YouTube, spoken directions, and other audio, the Volume Buttons control the volume of the application.

# Ringtone

The phone ringtones alert you of incoming calls.

To select a ringtone for voice calls:

1. Tap  >  > **Settings** .
2. Tap **Sound > Ringtone**.
3. Tap a ringtone to select it and to hear it. If you want to set the ringtone, tap **OK**. If not, select another ringtone or tap **CANCEL**.

To use a song as a ringtone:

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

1. Tap  >  > **Settings** .
2. Tap **Sound > Ringtone**.
3. Tap  and tap a song.

For details about using the Music Player application, see [Music](#).

## Sound with Vibration

Allows you to set the phone to vibrate accompanying the ringtone.

1. Tap  >  > **Settings** .
2. Tap **Sound** > **Sound with vibration** checkbox to turn on the feature. (A blue checkmark will appear.)

## Vibrate Type

Allows you to set a vibrate type for incoming calls, incoming messages and email, alarms, and calendar events.

1. Tap  >  > **Settings** .
2. Tap **Sound** > **Vibrate type**.

**Note:** **Vibrate type** can only be selected when **Vibrate only** is selected as the sound profile or **Sound with vibration** option is checked in the Sound screen.

3. Set each vibrate type to the desired option.
4. Tap **OK**.

## Interruptions

Allows you to set a schedule when to prevent interruptions from notifications. You can set to allow certain features to interrupt when Priority only is set.

1. Tap  >  > **Settings** .
2. Tap **Sound** > **Interruptions**.
3. Set the desired options as needed.

## Lock Screen

The Lock Screen menu allows you to choose if you want to show or hide notifications on the lock screen.

1. Tap  >  > **Settings** .
2. Tap **Sound** > **Lock screen**.
3. Tap the desired option.

## App

The Apps menu allows you to prevent apps from displaying notifications or set apps to show notifications with priority when Do not disturb is set to Priority only.

1. Tap  >  > **Settings** .
2. Tap **Sound > Apps**.
3. Tap the desired apps.
4. Choose **None** to show no notifications from the app or choose **Priority** to show notifications with priority on top of others and when Do not disturb set to Priority only.

## Notification LED

Configures the notification flash options.

1. Tap  >  > **Settings** .
2. Tap **Sound > Notification LED**.
3. To activate LED lights for notifications, tap the **Notification LED** switch .
4. Select the notification type(s) you want the LED to flash for.

## Notification Sound

When you receive a notification such as the arrival of new messages, calendar events, or alarms, the phone sounds a ringtone.

1. Tap  >  > **Settings** .
2. Tap **Sound > Notification sound**.
3. Tap a sound to select it and to hear it. If you want to set the sound, tap **OK**. If not, select another sound or tap **CANCEL**.

## Vibrate on Tap

Vibrate when tapping the Home touch buttons and during other UI interactions.

1. Tap  >  > **Settings** .
2. Tap **Sound > Vibrate on Tap**.
3. Tap the checkbox to turn on the feature. (A blue checkmark will appear.)

## Sound Effects

This menu lets you select whether you hear tones when touching numbers on the dialpad, selecting on-screen options, and more.

1. Tap  >  > **Settings** .
2. Tap **Sound > Sound Effects**.

3. Tap the checkbox next to a desired option to enable or disable the feature. (A blue checkmark will appear.)

## Message/Call Voice Notifications

To read out the incoming call and the message event automatically.

1. Tap  >  > **Settings** .
2. Tap **Sound** > **Message/call voice notifications**.
3. Tap  to turn the feature on and set the desired options.

## Display Settings

Adjusting your phone's display settings not only helps you see what you want, it can also help increase battery life.

### Display Settings Overview

The sound settings menu allows you to configure the following options:

Display Setting	Description
Font type	Set a default font type for the display.
Font size	Set font size for display.
Brightness	Set the display brightness.
Auto rotate screen	Set whether to allow the screen to rotate the display with the phone orientation, where applicable.
Screen timeout	Set a screen timeout duration. <b>Note:</b> Longer durations discharge the battery more quickly.
Home touch buttons	Change which buttons are displayed in the Home Touch Buttons Bar, as well as how they're displayed.
Daydream	Set which screensaver is displayed when the phone is sleeping while docked and/or charging.
Motion sensor calibration	Set the accuracy of the tilt and speed of the phone's sensor.

## Font Type

Choose the desired font type.

1. Tap  >  > **Settings** .
2. Tap **Display** > **Font type**.
3. Tap a desired font type.

## Font Size

Choose the desired font size.

1. Tap  >  > **Settings** .
2. Tap **Display** > **Font size**.
3. Tap a desired font size.

## Brightness

Adjust your screen's contrast (brightness) to suit your surroundings.

1. Tap  >  > **Settings** .
2. Tap **Display** > **Brightness**.
3. Scroll down to Brightness and use the slider to set the brightness level.

**Tip:** For the best battery performance, use the dimmer levels. You can also set **Automatic brightness** to adjust brightness depending on the surrounding lighting.

## Auto-Rotate Screen

Choose whether the phone automatically switches the orientation of the screen as you turn it sideways or even upside down.

1. Tap  >  > **Settings** .
2. Tap the **Auto-rotate screen** checkbox to automatically rotate the screen. (A blue checkmark will appear.)

– or –

To disable the auto-rotate feature, tap the **Auto-rotate screen** checkbox again so that the checkmark is removed.

**Note:** Some applications on your phone do not support the Auto-rotate feature.

## Screen Timeout

Select how long the display screen remains backlit after you touch the screen or press a key before the screen darkens.

1. Tap  >  > **Settings** .
2. Tap **Display** > **Screen timeout**.
3. Tap **15 sec**, **30 sec**, **1 min**, **2 min**, **5 min**, **10 min**, **15 min** or **Keep screen turned on**.

**Note:** Long backlight settings reduce the battery's talk and standby times. For the best battery performance, use the shortest convenient timeout.

## Home Touch Buttons

Configure options for your Home touch buttons.

To configure the combination of your Home touch buttons:

1. Tap  >  > **Settings** .
2. Tap **Display** > **Home touch buttons** > **Button combination**.
3. Drag the icons to rearrange the Home touch buttons.

To select the color theme for your Home touch buttons:

1. Tap  >  > **Settings** .
2. Tap **Display** > **Home touch buttons** > **Color**.
3. Tap the desired color theme from the list.

## Daydream

Screensaver will be on when the phone is sleeping while docked and/or charging.

1. Tap  >  > **Settings** .
2. Tap **Display** > **Daydream**.
3. Tap the feature you want to use and configure it.
4. To activate the daydream feature, tap the **Daydream** switch .

## Motion Sensor Calibration

Improves the accuracy of the tilt and speed of the sensor.

1. Tap  >  > **Settings** .
2. Tap **Display**.
3. Tap **Motion sensor calibration**.
4. Place the phone on a flat surface and tap **CALIBRATE SENSOR**.

# Home Screen Settings

Configure your phone's home screen settings.

## Wallpaper

Change the wallpaper for your Home screen.

1. Tap  >  > **Settings** .
2. Tap **Home screen** > **Wallpaper**.
3. Choose a location and select the desired wallpaper.
4. Tap **OK**, **Set wallpaper** or **Apply** to set it as the wallpaper.

## Screen Swipe Effect

Choose the desired type of effect to display when you swipe from one Home screen canvas to the next.

1. Tap  >  > **Settings** .
2. Tap **Home screen** > **Screen swipe effect**.
3. Tap the desired effect and **OK**.

## Allow Home Screen Looping

Displays the first screen after the last screen when scrolling the Home screen.

1. Tap  >  > **Settings** .
2. Tap **Home screen**.
3. Tap the **Allow Home screen looping** checkbox. (A blue checkmark will appear.)

## Help

The Help menu provides helpful tips for your Home screen.

- Tap  >  > **Settings**  > **Home screen** > **Help**.

## Lock Screen Settings

The lock screen settings let you set your method for unlocking your phone, customize lock screen options, determine whether to show pop-up tips for unlocking the phone, and enter your owner information to be displayed on the lock screen.

# Screen Lock

You can increase the security of your phone by creating a screen lock. When enabled, you have to draw the correct unlock pattern on the screen, enter the correct PIN, or enter the correct password to unlock the phone's control keys, buttons, and touchscreen.

In order from least secure to most secure, the available screen lock options are:

- None
- Swipe
- Knock Code
- Pattern
- PIN
- Password

**Important:** To protect your phone and data from unauthorized access, it is recommended that you use the highest security level available (Password protection). It is also recommended you frequently change your password to ensure the safety of your phone and personal data.

## Screen Lock Setting

1. Tap  >  > **Settings** .
2. Tap **Lock screen** > **Select screen lock**.
3. Select the desired screen lock option from the following options.
  - **None:** No screen lock set.
  - **Swipe:** Swipe any part of the screen to unlock the screen.
  - **Knock Code:** The Knock Code feature allows you to create your own unlock code using a combination of knocks on the screen. You can access the Home screen directly when the screen is off by tapping the same sequence on the screen.
  - **Pattern:** Opens a set of screens that guide you through drawing a screen unlock pattern. It's recommended that you enter backup PIN as well in case that you might lost the pattern. Then, you can set vibrate on touch or whether to make the pattern visible.
  - **PIN:** Enter a numeric PIN to unlock screen.
  - **Password:** Enter a password to unlock screen.

From then on, any time you wish to turn the phone on or unlock the screen, you must draw your unlock pattern or enter the PIN or password to unlock the screen.

**Note:** You have five opportunities to enter your unlock Pattern, PIN or Password. If you've entered wrong information five times in a row, you must wait 30 seconds before you can attempt again.

**Note:** When using Knock Code, failing to enter the correct sequence 5 times will display an outlined grid box to allow you precise entry. If you fail 1 more time, the backup PIN or Google account sign-in is required.

- If you've set up a Google Account on the phone, tap the **Forgot pattern?** button. You will be able to unlock the phone with your Google Account username and password or entering you Backup PIN.
- If you haven't created a Google Account on the phone, you must perform a factory reset.

**CAUTION!** If you perform a factory reset, all user applications and user data will be deleted. Please remember to back up any important data before performing a factory reset.

## Smart Lock

Allows you to set when to automatically unlock the phone.

1. Tap  >  > **Settings** .
2. Tap **Lock screen** > **Smart Lock**.

**Note:** If you use this function, set a screen lock first.

## Screen Swipe Effect

Choose the desired screen swipe effect when you swipe the screen.

1. Tap  >  > **Settings** .
2. Tap **Lock screen** > **Screen swipe effect**.
3. Tap **Hula hoop**, **Circle mosaic**, **Light particle**, **Vector circle**, or **Soda**.

## Wallpaper

Select the wallpaper to display on your lock screen.

1. Tap  >  > **Settings** .
2. Tap **Lock screen** > **Wallpaper**.
3. Select **Gallery** or **Wallpaper gallery**.
4. Select the desired wallpaper and tap **YES** or **SET WALLPAPER**.

## Shortcuts

The Shortcuts menu allows you to choose the shortcuts available on the lock screen.

1. Tap  >  > **Settings** .
2. Tap **Lock screen** > **Shortcuts**.

3. Tap a shortcut and select the desired app. You can also select **Delete shortcut** so that no icon is displayed.
4. Tap **SAVE**.

## Contact Info for Lost Phone

Select whether to display the owner information on the lock screen and customize the owner information.

1. Tap  >  > **Settings** .
2. Tap **Lock screen**.
3. Tap **Contact info for lost phone**, then tap the **Always on Lock screen** checkbox to show owner information on the lock screen. (A blue checkmark will appear.)
4. Enter the desired information in the field provided and tap **SAVE**.

## Lock Timer

Choose the amount of time before the screen automatically locks after the screen has timed-out.

1. Tap  >  > **Settings** .
2. Tap **Lock screen** > **Lock timer**.
3. Tap the desired time.

## Power Button Instantly Locks

This menu allows you to instantly lock the screen when you press the **Power/Lock Button** .

1. Tap  >  > **Settings** .
2. Tap **Lock screen**.
3. Tap the **Power button instantly locks** checkbox to turn on the feature. (A blue checkmark will appear.)

## Storage Settings

The Storage menu lets you monitor the used and available internal memory and SD card (if available). you can also mount/unmount the SD card and erase its contents.

1. Tap  >  > **Settings** .
2. Tap **Storage**.

# Battery & Power Saving Settings

The Battery & power saving menu lets you show any battery information and configure options.

1. Tap  >  > **Settings** .
2. Tap **Battery & power saving**.
3. Tap **Battery usage** to see which apps are consuming the most battery power.
4. Tap **Battery percentage on status bar** to display the battery percentage indicator on the Status Bar.
5. Tap **Battery saver** to set the Battery saver feature on or off and select which functions are changed when the feature is activated.
6. Tap **Help** to view tips about the Battery saver feature.

## App Settings

This menu lets you view details about the applications installed on your phone, manage their data, force them to stop, and set whether you want to permit installation of applications that you obtain from websites and email.

To view details about the applications:

1. Tap  >  > **Settings**  > **Apps**.
2. Tap the **DOWNLOADED**, **ON SD CARD**, **RUNNING** or **ALL** tab to view your apps.
3. Tap the desired app to view its information.

To force applications to stop:

1. Tap  >  > **Settings**  > **Apps**.
2. Tap the **RUNNING** tab.
3. Find the application to force stop and tap the application.
4. Tap **Stop**.
5. Read the disclaimer and tap **YES**.

To uninstall a downloaded application:

1. Tap  >  > **Settings**  > **Apps**.
2. Tap the **DOWNLOADED** tab.
3. Find the application you want to uninstall and tap it.

4. Tap **Uninstall**.
5. Read the disclaimer and tap **OK**.

## Default Message App

Set your default messaging app as desired.

1. Tap  >  > **Settings** .
2. Tap **Default message app**.
3. Tap the desired option.

## Location Settings

Allows you to turn on location service. Your phone determines your approximate location using GPS, Wi-Fi and mobile networks.

- Tap  >  > **Settings**  > **Location**.
  - **Mode** – Set the location mode as **High accuracy (GPS and networks)**, **Battery saving (Networks only)**, **Device sensors only (GPS only)** and **Accelerated location**.
  - **Camera** – Tag photos or videos with locations.

## Security Settings

Use the Security settings to configure how to help secure your phone and its data.

- Tap  >  > **Settings**  > **Security**.

### Content lock

Select lock types to lock files in the Gallery.

### Encrypt phone

Opens a screen that encrypts data on the phone for security. You will be required to enter a PIN or password to decrypt your phone each time you power it on.

### Encrypt SD card storage

Encrypt SD card storage and keep data unavailable for other devices.

### Password typing visible

Checkmark to briefly show each character of passwords as you enter them so that you can see what you enter.

## Phone administrators

Allows you to view or deactivate device administrators.

## Unknown sources

Allows installation of non-Play Store applications.

## Verify apps

Disallow or warn before installation of apps that may cause harm.

## Storage type

Displays the storage type for credentials.

## Certificate management

Allows you to manage the certificate.

- **Trusted Credentials**  
Checkmark to allow applications to access your phone's encrypted store of secure certificates and related passwords and other credentials. You use credential storage to establish some kinds of VPN and Wi-Fi connections. If you have not set a password for the secure credential storage, this setting is dimmed.
- **Install from Storage**  
Touch to install a secure certificate from storage.
- **Clear Credentials**  
Deletes all secure certificates and related credentials and erases the secure storage's own password, after prompting you to confirm that you want to do this.

## Trust agents

View or deactivate Trust agents.

## Screen pin

This feature allows you to lock your device so that the current user can only access the pinned app. This is useful for users with children.

## App usage access

Allows you to set to access App usage.

# Accounts & Sync

Use the Accounts & sync settings menu to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules and whether all applications can synchronize user data automatically. Gmail,

Calendar, and other applications may also have their own settings to control how they synchronize data; see the sections on those applications for details.

1. Tap  >  > **Settings** .
2. Tap **Accounts & sync**.

**Note:** Tap **Auto-sync data** to automatically sync your account data.

3. Tap **ADD ACCOUNT** to add a new account.

## Language & Input Settings

Your phone's Language & input settings let you select a language for the device's screens and menus, as well as manage a personal user dictionary. The keyboard settings let you select a preferred input method, control keyboard settings, and more.

### Language and Input Settings Overview

You can set the following options in the Language and input settings menu:

Language and Input Setting	Description
<b>Language</b>	Set the language for your display and menus.
<b>Spelling correction</b>	Set spelling correction options.
<b>Default</b>	Set the default method for entering text.
<b>Google keyboard</b>	Set Google keyboard options.
<b>Google voice typing</b>	Set options for Google Voice text entry.
<b>LG Keyboard</b>	Set options for LG Keyboard options.
<b>Voice search</b>	Set your voice search options.
<b>Text-to-speech options</b>	Set text-to-speech options.
<b>Pointer speed</b>	Set the speed of the pointer for a mouse/trackpad.

### Language

You can choose to display your device's on-screen menus in multiple languages.

1. Tap  >  > **Settings**  > **Language & input** > **Language**.

2. Select a language from the list.

## Spelling Correction

Allows spelling correction when using the on-screen keyboard.

## Keyboard & Input Methods

Shows the default keyboard type. Checkmark the keyboard you want to use from **Google Keyboard**, **LG Keyboard**, or **Google voice typing**. Tap  to configure each keyboard's settings.

## Voice Search

Tap to configure the Voice Search settings.

## Text-to-Speech Output

Tap to set the preferred engine or general settings for text-to-speech output.

## Pointer Speed

Adjust the pointer speed.

# Backup & Reset

Your phone's Backup and reset menu lets you back up your phone's data and settings to Google servers before resetting your phone to the original factory settings. The Factory data reset erases all data from the phone's application storage, including:

- Your Google Account
- All other email and social networking accounts
- System and application data and settings
- Downloaded applications

## Backup and Reset Overview

The following options are available in the Back up and reset menu:

Backup and Reset Option	Description
<b>LG Backup</b>	Backs up all the data using LG's app.
<b>Back up my data</b>	Enable backup for application data, Wi-Fi passwords, and other settings to Google servers.
<b>Backup account</b>	Select the account used to back up data.

Backup and Reset Option	Description
<b>Automatic restore</b>	When reinstalling an application, backed up settings and data will be restored.
<b>Factory data reset</b>	Reset all settings and delete all data on phone.

- Performing a factory data reset erases all data on the phone. It is recommended that you back up important data before performing a factory data reset.
- Erased information cannot be restored. Only erase data after you are sure you have saved everything you need.

## Access Backup and Reset Options

1. Tap  >  > **Settings** .
2. Tap **Backup and Reset**.
3. Set options.
  - If you're performing a Factory Data Reset, follow the prompts to confirm the data removal. The phone will erase all data and reboot.

## LG Backup

Backs up all information on the device and restores it in the event of data loss or replacement.

**Note:** Tap  > **Help** to learn more about LG Backup.

## Back Up My Data

Allows you to back up app data, Wi-Fi passwords, and other settings to Google servers.

## Backup Account

Allows you to choose an account to use to back up data.

## Automatic Restore

When reinstalling an app, enabling this option restores backed up settings and data.

## Factory Data Reset

Resetting the phone restores all the factory defaults, including personal data from phone storage, information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. After resetting the phone, the next time you turn on the phone, you're prompted to reenter the same kind of information as when you first started the phone. See [Activation and Service](#).

1. Tap  >  > **Settings**  > **Backup & reset**.
2. If you are certain that you would like to restore all factory settings, tap **Factory data reset**.
3. Tap **RESET PHONE**.
4. Enter your unlock sequence if you have configured one, then tap **Delete all** and **OK** to confirm.

## Shortcut Key

Shortcut Key provides quick access to apps by pressing and holding the Volume Buttons when the screen is off or locked.

**QuickMemo+**: Press and hold the **Volume Up Button**.

**Camera**: Press and hold the **Volume Down Button**.

- Tap  >  > **Settings**  > **Shortcut key**.

## Date & Time Settings

Set your preferences for how the date and time is displayed. You can also select a time zone.

- Tap  >  > **Settings**  > **Date & time**.

### Date and Time Overview

The following Date and time options may be configured:

Date and Time Option	Description
<b>Auto-date and time</b>	Set the date and time automatically via the connected wireless network.
<b>Set date</b>	Set the date manually (only available when Automatic date and time option is disabled).
<b>Set time</b>	Set the time manually (only available when Automatic date and time option is disabled).
<b>Auto-time zone</b>	Enable this option to use the one provided by the network.
<b>Select time zone</b>	Set the time zone manually (only when Automatic time zone is disabled).
<b>Use 24-hour format</b>	Enable or disable 24-hour format.

## Access Date and Time Options

1. Tap  >  > **Settings** .
2. Tap Date and time.
3. Set available date and time options.

# Accessibility Settings

Use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

**Note:** Requires additional plug-ins to become selectable.

## Vision

The Vision setting allows you to configure the visual options.

1. Tap  >  > **Settings**  > **Accessibility** > **Vision**.
2. Set the following options:
  - **TalkBack:** Tap the **TalkBack** switch  to turn it on. Tap **Settings** at the bottom of the screen to adjust the TalkBack settings. When TalkBack is turned on, the touchscreen settings require the user to first tap an item they wish to select, and then double tap the item again in order to access this feature.
  - **Message/call voice notifications:** Use automatic spoken alerts for incoming calls and messages.
  - **Screen shade:** Set to 0% brightness of device for saving power and low vision.
  - **Font size:** Checkmark to increase the size of the text.
  - **Touch zoom:** Zoom in or out by triple tapping the screen.
  - **Screen color Inversion:** Checkmark to invert the colors of the screen and content.
  - **Screen color adjustment:** Set the color contrast for better screen viewing. Tap the Color adjustment switch  at the top right corner of the screen to turn it on. Then, tap the screen and drag across the screen in any direction until you see the color contrast you want to use.
  - **Screen color filter:** Set the color filter for better screen viewing. Tap the **Screen color filter** switch  at the top right corner of the screen to turn it on.
  - **Power key ends call:** Checkmark so that you can end voice calls by pressing the **Power/Lock** Button. When this option is enabled, pressing the **Power/Lock** Button during a call does not lock the screen.

## Hearing

The Hearing setting allows you to configure hearing options.

1. Tap  >  > **Settings**  > **Accessibility** > **Hearing**.
2. Set the following options as you want.
  - **Captions:** Customize caption settings for those with hearing impairments.
  - **Notification LED:** Turn on the LED light for incoming calls and notifications
  - **Flash alerts:** The flash will blink for incoming calls and notifications.
  - **Turn off all sounds:** Activate to turn off all sounds.
  - **Audio type:** Checkmark to change the sound to **Mono** or **Stereo**.
  - **Sound balance:** To manually adjust the sound direction.

## Motor & Cognition

The Physical and Moto setting allows you to configure physical and motor options.

1. Tap  >  > **Settings**  > **Accessibility** > **Motor & cognition**.
2. Set the following options as you want.
  - **Touch feedback time:** Allows you to set the touch and hold delay (short, medium, or long).
  - **Touch assistant:** Provide a touch board with easy use for general buttons or gestures to access in short. Tap the Touch assistant icon  to access the **Power Button**, **Home Key**, **Volume Down Button**, **Volume Up Button**, **Screen**, **Capture**, **Accessibility**, and **Pinch**.
  - **Screen timeout:** Set the desired screen timeout.
  - **Touch control areas:** Limit touch control to selected areas of the screen. Press the **Volume Down Button** and **Home Key** at the same time to activate and deactivate this feature.

## General

The General setting allows you to configure system options.

1. Tap  >  > **Settings**  > **Accessibility**.
2. Set the following options as you want.
  - **Accessibility features shortcut:** Sets quick, easy access to selected features when you triple-tap the **Home Key** .

- **Persistent notification:** Tap the switch  to turn it on. Alerts sound repeatedly when there are unread notifications for certain apps.
- **Auto-rotate screen:** Checkmark to allow the device to rotate the screen depending on the device orientation (portrait or landscape).

## Services

The Services setting allows you to configure the service option.

1. Tap  >  > **Settings**  > **Accessibility**.
2. Tap **Switch Access** to control your device using configurable key combinations.

## QuickCircle Case

This menu allows you to select apps to be used directly on the cover in small view using QuickCircle. Keep in mind that turning on these QuickCircle case settings may result in irregular device behavior.

1. Tap  >  > **Settings**  > **QuickCircle case**.
2. Tap  to activate the feature. Tap **Select apps** to choose which apps are displayed when using the QuickCircle case.

## Activate This Device

The Activate this device menu lets you activate a new phone or use additional self-service options such as checking the status of an in-service phone.

1. Tap  >  > **Settings**  > **Activate this device**.
2. Follow the onscreen prompts to activate your phone or review your summary.
  - ❖ Your phone activates. If already activated on an account, you will see a usage and plan summary.

## System Updates

From time to time, updates may become available for your phone. You can download and apply updates through the Settings menu.

- Tap  >  > **Settings**  > **System updates**.

## About Phone

The About Phone menu lets you access important phone information, search for and apply updates, and view legal and safety information.

## About Phone Overview

The following About Phone items may be reviewed or set:

About Phone Item	Description
Phone name	Check you phone's name.
Update Center	Check updates for apps.
Network	Check network status, etc.
Status	Check your phone's status.
Battery	Check battery status, etc.
Hardware info	Check model number, hardware version, etc.
Software info	Check android version, SW version, etc.
Legal info	Check legal document, open source licenses, etc.
Patent information	Check LG patent information, etc.

### Access About Phone Options

1. Tap  >  > **Settings** .
2. Tap **About Phone**.
3. Select or view available options.

# Copyright Information

©2015 Boost Worldwide, Inc. All rights reserved.

LG and the LG logo are registered trademarks of LG Electronics, Inc. Volt 2 is a trademark of LG Corp. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks is under license. Android, Google, the Google logo, Google Play and other marks are trademarks of Google, Inc. Other marks are trademarks of their respective owners.



This DivX Certified<sup>®</sup> device has passed rigorous testing to ensure it plays DivX<sup>®</sup> video.

To play purchased DivX movies, first register your device at [vod.divx.com](http://vod.divx.com). Find your registration code in the DivX VOD section of your device setup menu.

**DivX Certified<sup>®</sup> to play DivX<sup>®</sup> video up to HD 720p, including premium content. DivX<sup>®</sup>, DivX Certified<sup>®</sup> and associated logos are trademarks of DivX, LLC and are used under license.**



Manufactured under license from Dolby Laboratories.

Dolby and the double-D symbol are trademarks of Dolby Laboratories.

## Note: Open Source Software

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

# For Assistance

---

The following topics address areas of support for your device, such as account information.

## Boost Account Information and Help

Find out about managing your account online and on your phone, buying additional minutes for your plan, and getting help.

For more information about your Boost Mobile account, as well as other Boost Mobile services, visit us at: [boostmobile.com](http://boostmobile.com).

## Manage Your Account

Access information about your account. You can:

- Check your minutes.
- Re-Boost<sup>®</sup> (add money to your account).
- Change plans.
- And more.

## From Your Phone

Access account information and other self-service tools from BoostZone.

- Tap  >  > **BoostZone** .

You can also dial directly for access to certain information:

- Dial # 2<sub>ABC</sub> 2<sub>ABC</sub> 5<sub>JKL</sub> (#BAL) to check account balance.
- Dial # 2<sub>ABC</sub> 3<sub>DEF</sub> 3<sub>DEF</sub> (#ADD) to make a payment.
- Dial # 6<sub>MNO</sub> 1<sub>QW</sub> 1<sub>QW</sub> to launch BoostZone or call Boost Customer Care (depending on your Settings) to get answers to other questions.

## From Your Computer

- Visit [boostmobile.com](http://boostmobile.com), click **My Account**, and log in with your wireless phone number and account PIN.

## From Any Other Phone

- Boost Customer Care: **1-888-BOOST-4U** (1-888-266-7848).

## Re-Boost

Boost Mobile makes it easy to add money to your account. You decide exactly how and where you want to pay. Keep your account active by using your phone and adding money to your account.

### Pay with Cash

Find an Authorized Re-Boost Retailer near you. Pick up a Re-Boost Card or recharge for as low as \$10 at the register, where available.

### Pay Anytime with a Credit/Debit Card

Dial **#ADD** ( # 2<sub>ABC</sub> 3<sub>DEF</sub> 3<sub>DEF</sub> ) to add money from your phone or visit **My Account** at [boostmobile.com](http://boostmobile.com) to do it online. Securely register your credit/debit card with Boost for more convenient one-time payments or to set up easy Auto Re-Boost payments.

### Set Up Worry-Free Payments with Auto Re-Boost<sup>SM</sup>

It's the easiest way to make sure your account stays on and active. Use a credit card, debit card or bank account—whatever's best for you.

Visit [boostmobile.com/reboost/](http://boostmobile.com/reboost/) to get the details on all your Re-Boost options.

# Index

---

- About Phone, 125
- About the User Guide, 1
- Access Gmail, 65
- Accessibility Settings, 123
- Accounts & Sync, 118
- Activate This Device, 125
- Activate Your Phone, 15
- Add a Contact, 54
- Add an Email Account (POP3 or IMAP), 67
- Add and Remove Widgets on the Home Screen, 42
- Additional Clock Features, 90
- Airplane Mode, 22, 102
- Allow Home Screen Looping, 112
- Answer Phone Calls, 45
- App, 107
- App Settings, 116
- Applications, 20
- Apps List, 20
- Assign Pictures, 78
- Auto-Rotate Screen, 110
- Back Up Contacts, 57
- Back Up Your Downloaded Music Files, 85
- Backup & Reset, 120
- Basic Settings, 101
- Basics, 18
- Battery & Power Saving Settings, 116
- Battery Capacity, 9
- Battery Use, 9
- Bluetooth, 97
- Bluetooth Information, 97
- Bluetooth Settings, 103
- Boost Account Information and Help, 128
- Brightness, 110
- Browser, 71
- Calculator, 92
- Calendar, 86
- Call Forwarding, 52
- Call from Call Logs, 47
- Call Settings, 53, 103
- Call Using the Phone Dialer, 44
- Call Waiting, 51
- Caller ID Blocking, 51
- Camera and Video Settings, 74
- Capture Screenshots, 19
- Change Calendar Settings, 88
- Change Calendar View, 86
- Change the Phone's Wallpaper, 43
- Change Your Main Greeting via the Voicemail Menu, 51
- Charge the Battery, 9
- Check Contacts, 55
- Clip Tray, 29
- Clock, 90
- Complete the Setup Screens, 16
- Compose Text Messages, 58
- Conference Calling, 52
- Configure and Sync Corporate Email Settings, 69
- Configure Visual Voicemail Settings, 50
- Connect to a Paired Bluetooth Device, 99
- Connections Optimizer, 93
- Contact Info for Lost Phone, 115
- Contacts, 54
- Copyright Information, 127
- Corporate Email (Outlook), 67
- Create a Google Account, 30, 64
- Create an Event, 86
- Create and Send Email, 68
- Create and Send Gmail, 64
- Create Shortcuts, 41
- Customize the Home Screen, 41
- Date & Time Settings, 122
- Daydream, 111
- Default Message App, 117
- Delete a Contact, 56
- Disconnect Wi-Fi, 96
- Display and Synchronize Calendars, 88
- Display Settings, 109
- Dual Play, 80
- Edit a Contact, 55
- Edit or Delete an Event, 87
- Edit Pictures, 76
- Email, 67
- Enable the Bluetooth Feature, 97
- Enter Text, 23
- Extended Home Screens, 37
- Find and Install an Application, 31

- Folders, 89
- Font Size, 110
- Font Type, 109
- Format microSD Card, 9
- Gallery Options, 75
- General, 124
- Gesture Shot, 75
- Google Account, 30
- Google Hangouts, 82
- Google Maps, 81
- Google Play Music, 84
- Google Play Store, 31
- Handling the microSIM Card, 4
- Hearing, 124
- Help, 112
- Home Screen and Applications List, 18
- Home Screen Basics, 36
- Home Screen Layout, 36
- Home Screen Settings, 112
- Home Touch Buttons, 111
- Import and Back Up Contacts, 56
- Import Contacts, 56
- In-Call Screen Layout and Operations, 45
- Insert microSD Card, 7
- Insert microSIM Card, 5
- Interruptions, 107
- Join and Separate Contacts, 56
- Language & Input Settings, 119
- Launch an Installed Application, 32
- Launch Applications, 20
- Location Settings, 117
- Lock and Unlock Your Screen, 32
- Lock Screen, 107
- Lock Screen Settings, 112
- Lock Timer, 115
- Manage Your Account, 128
- Managing Message Conversations, 60
- Media Server, 103
- Menu Operations, 18
- Message/Call Voice Notifications, 109
- microSD Card, 6
- microSIM Card, 4
- Mobile data, 103
- Mobile Networks, 104
- Motion Sensor Calibration, 111
- Motor & Cognition, 124
- Music, 84
- Music Player, 84
- Navigation, 81
- Notification LED, 108
- Notification Sound, 108
- Notifications Window, 40
- Open Email, 68
- Open the Calendar, 86
- Optional Services, 47
- Pair Bluetooth Devices, 98
- Phone and Web Search Using Text Entry, 28
- Phone and Web Search Using Voice Command, 29
- Phone Keyboard, 25
- Phone Layout, 2
- Phone Number, 22
- Phone Settings Menu, 19
- Place a Call from Contacts, 47
- Place and Answer Calls, 44
- Place Calls from Contacts/Call History, 47
- Portrait and Landscape Screen Orientation, 19
- Power Button Instantly Locks, 115
- Printing, 103
- QuickCircle Case, 125
- QuickMemo+, 83
- QWERTY Keyboard, 24
- Read and Reply to Gmail Messages, 66
- Read and Reply to Text Messages, 59
- Re-Boost, 129
- Receive Data via Bluetooth, 100
- Record Videos, 74
- Reinstall an Application, 32
- Remove microSD Card, 9
- Reply to or Delete an Email Message, 69
- Respond to an Event Reminder, 88
- Review Visual Voicemail, 49
- Ringtone, 106
- Save and Resume a Draft Message, 60
- Scout, 81
- Screen Lock, 113
- Screen Swipe Effect, 112, 114
- Screen Timeout, 110
- Search Your Phone and the Web, 28
- Security Settings, 117
- Select Options and Navigate Screens, 18
- Send a Gmail Message, 65
- Send a Multimedia Message (MMS), 59
- Send a Picture or Video by Multimedia Message, 77
- Send Information Using Bluetooth, 99
- Send Pictures or Videos by Email, 77
- Send Pictures or Videos Using Bluetooth, 78

Services, 125  
 Set an Event Reminder, 87  
 Set Up Visual Voicemail, 48  
 Share & Connect, 103  
 Share Pictures and Videos, 77  
 Shortcut Key, 122  
 Shortcuts, 114  
 Sign in to Your Google Account, 64  
 Sign into Your Google Account, 30  
 Smart Lock, 114  
 Sound Effects, 108  
 Sound Profile, 105  
 Sound Settings, 105  
 Sound with Vibration, 107  
 Status Bar, 37  
 Storage Settings, 115  
 System Updates, 125  
 Take Pictures, 74  
 Take Pictures and Record Videos, 73  
 Tethering, 97, 104  
 Text and Multimedia Message Options, 62  
 Text and Multimedia Messaging, 58  
 Tips for Editing Text, 25  
 Transfer Files Between Your Phone and a  
   Computer, 94  
 Turn Wi-Fi On and Connect to a Wireless  
   Network, 95  
 Turn Your Phone On and Off, 11  
 UICC Unlock, 35  
 Unlock Your Screen Using the Knock Code  
   Feature, 33  
 Unmount the microSD Card, 8  
 Update Firmware, 34  
 Update LG Software, 35  
 Update PRL, 34  
 Update Profile, 34  
 Update Your Phone, 34  
 Use the Touchscreen, 11  
 Vibrate on Tap, 108  
 Vibrate Type, 107  
 Video Options, 79  
 View Event Details, 86  
 View Your Pictures, 75  
 Vision, 123  
 Visual Voicemail, 48  
 Visual Voicemail Options, 49  
 Voicemail Setup, 48  
 Volume, 106  
 Wallpaper, 112, 114  
 Wi-Fi, 95  
 Wi-Fi Direct, 96  
 Wi-Fi Settings, 96, 103