

<<< Advanced Software Upgrade Guide >>>

Applicable Models: LCD TV and PDP TV are released on 2008, 2009 years

- LCD TV: **LH***, **LU***, **SL***, **LF***, **LG60**, **LG70** Series

- PDP TV: **PS70**, **PS80**, **PG40**, **PG60**, **PG70** Series

① Searching the latest software.

➤ Search the latest software from the website (<http://www.lge.com>)

- Our counselor of Call center inform you more detail method.

① Connect to www.lge.com




② Select your country

③ Move to the Support

④ Click the Manual & Drivers

⑤ Fill in the your Model name

⑥ Click the "Drivers & software"

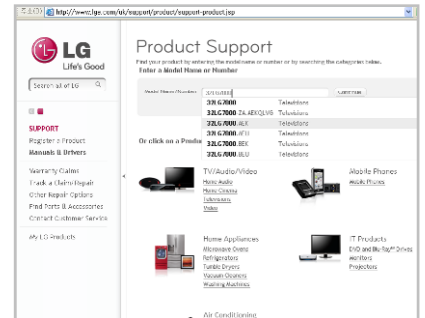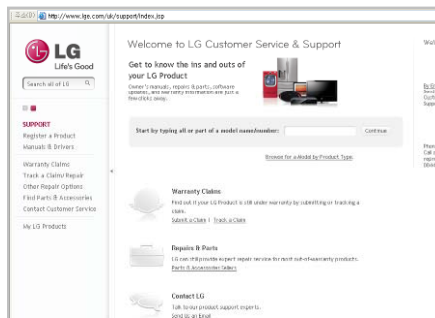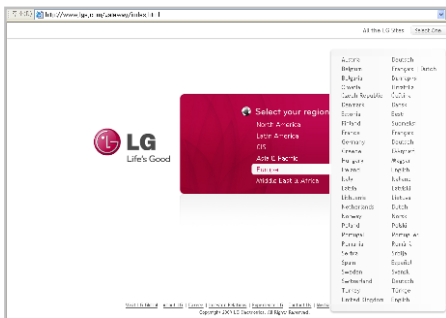

② Downloading the Software file to the USB Memory device.



➤ Save the latest software from website to the USB Memory device.

▲ Caution!! Your PC don't have any security Program


① Connect the USB Memory device to the USB port of your PC.

② Make a folder in USB Memory device (Folder name must be "LG_DTV")

③ Click the " Download this file" on the website to save it to the USB Memory device

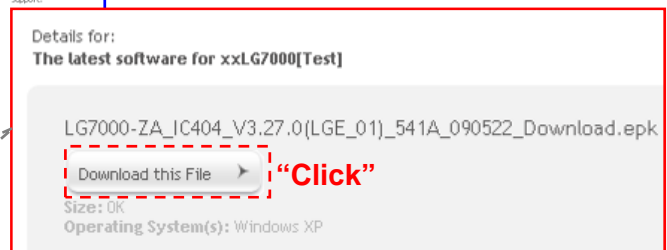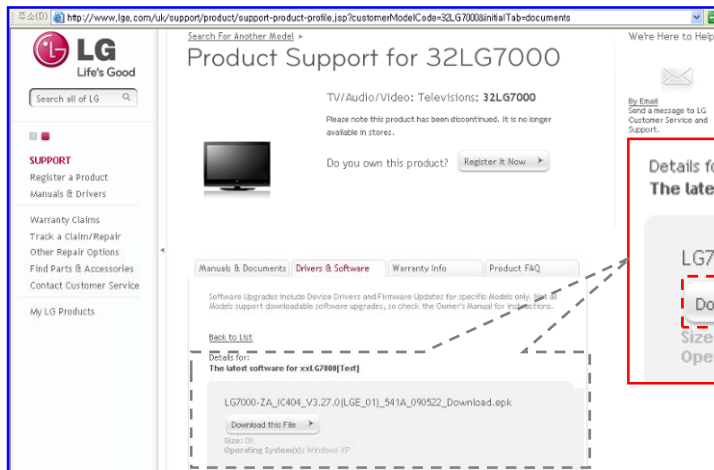


④ Save software file to "LG_DTV" folder of USB Memory device

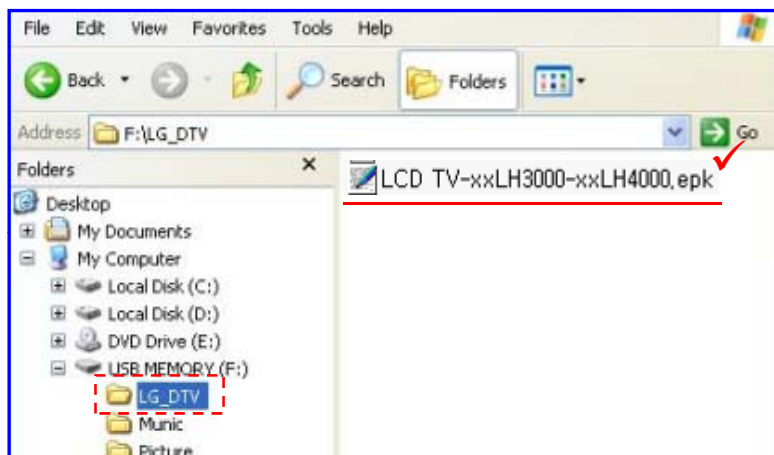

③ Connecting the USB device to USB IN Jack on the TV

- Connect the USB device to USB IN (or USB IN SERVICE ONLY) Jack on the TV
- ※ Position of USB In Jack : Side or Rear (differ depending on your TV Model)

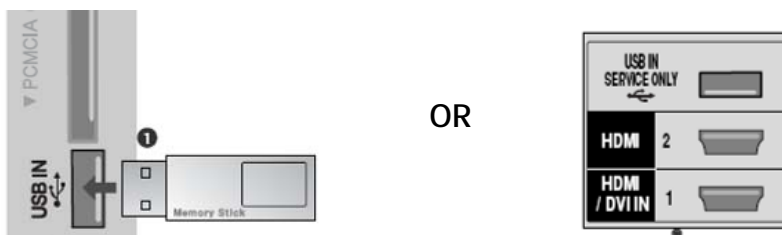


④ Running the software upgrade

- If TV recognize the latest software for customer's TV model from connected USB device, it will appear below message.
- Please select "start" to execute the upgrade automatically
 - ※ If there are the same or lower software version in the USB device than Software version in your TV, doesn't appear below message.
 - ※ A few USB devices may not be compatible with the TV, in that case you use another USB device.


▲ Warning!!

Please don't disconnect the power or remove the USB device while running the upgrade.

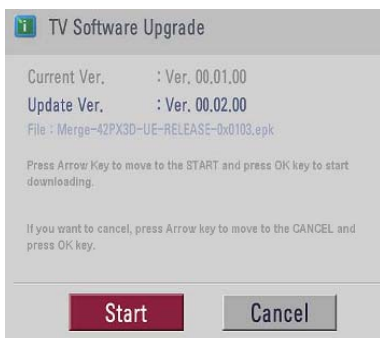


Step1. Please select "Start" to execute the upgrade automatically.

- Press Arrow key to move to the "Start"

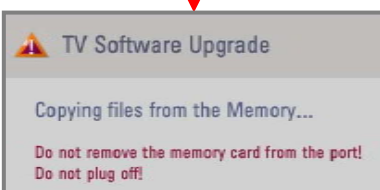


Step2. Copying software file from the USB device to the TV

- ※ Don't remove the USB device while this message is displayed.

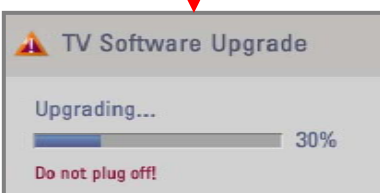

Step3. Running the software upgrade

- ※ Don't turn off the power while this message is displayed.
- ※ If some problems happen during upgrade, the TV will display the error message and restart to return to the previous version.

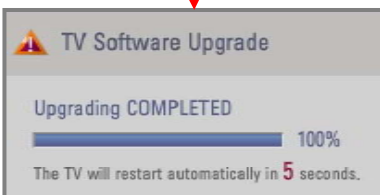

Step4. Complete the software upgrade

- If the upgrade is completed, this message is displayed.
- The TV will turn off and on automatically after the upgrade completed.

● Note

- You can check the upgraded software version on the "Diagnostics menu" (OSD Menu: Setup -> Diagnostics)
- It might be initialized previous menu setting (Channel tuning, Picture, Audio,,)
- If you have still problem after upgrade, please contact with us again.