

<<< Advanced Software Upgrade Guide >>>

Applicable Models: LCD TV and PDP TV are released on 2008, 2009, 2010 years

- LCD TV: ****LD****, ****LE****, ****LH****, ****LU****, ****SL****, ****LF****, ****LG60****, ****LG70**** Series

- PDP TV: ****PJ****, ****PK****, ****PS70****, ****PS80****, ****PG40****, ****PG60****, ****PG70**** Series



① Searching the latest software.

- Search the latest software from the website (<http://www.lg.com/uk/support/index.jsp>)
- Our counselor of Call center inform you more detail method.

- ① Connect to www.lg.com
- ② Select your country

- ③ Move to the Support
- ④ Click the Manual & Drivers

- ⑤ Fill in the your Model name
- ⑥ Click the "Drivers & software"

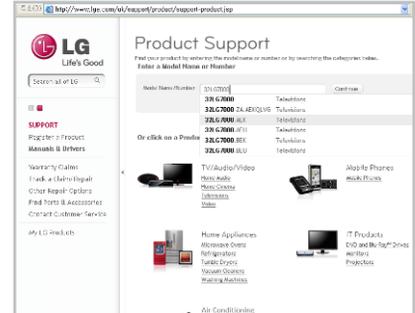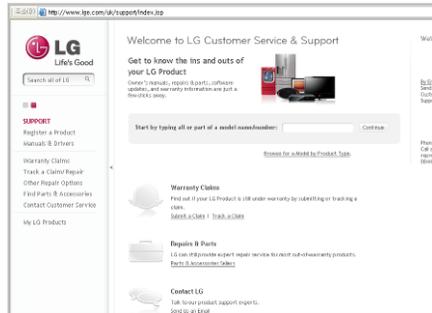


② Downloading the Software file to the USB Memory device.


- Save the latest software from website to the USB Memory device.

⚠ Caution!! Your PC don't have any security Program

- ① Connect the USB Memory device to the USB port of your PC.
- ② Make a folder in USB Memory device (Folder name must be "**LG_DTV**")
- ③ Click the "Download this file" on the website to save it to the USB Memory device

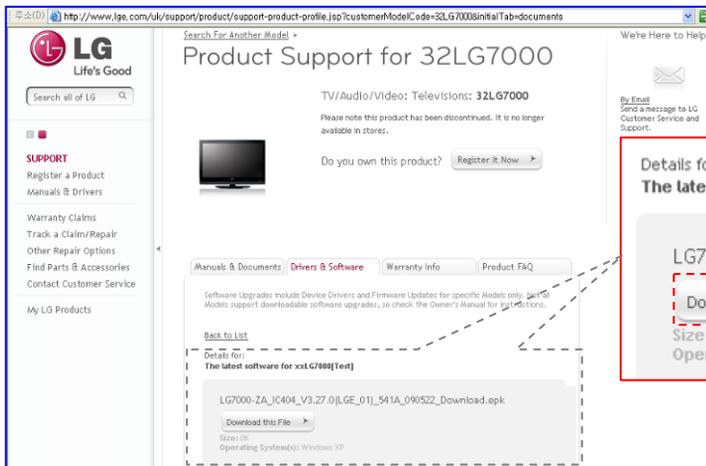


- ④ Save software file to "**LG_DTV**" folder of USB Memory device

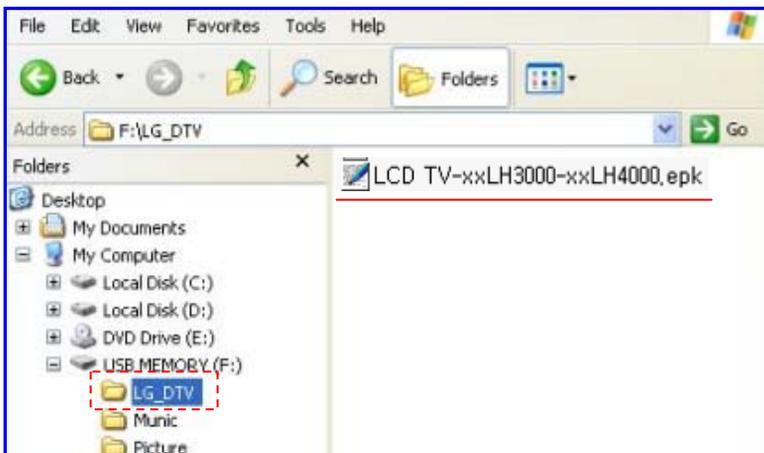


③ Connecting the USB device to USB IN Jack on the TV

- Connect the USB device to USB IN (or USB IN SERVICE ONLY) Jack on the TV
- ※ Position of USB In Jack : Side or Rear (differ depending on your TV Model)

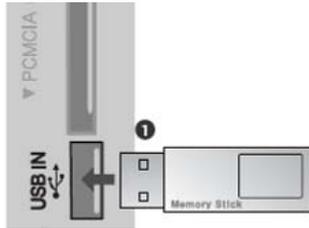

OR

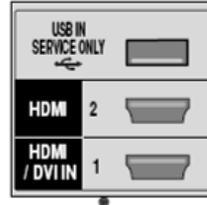


④ Running the software upgrade

- If TV recognize the latest software for customer's TV model from connected USB device, it will appear below message.
- Please select "start" to execute the upgrade automatically
 - ※ If there are the same or lower software version in the USB device than Software version in your TV, doesn't appear below message.
 - ※ A few USB devices may not be compatible with the TV, in that case you use another USB device.


⚠ Warning!!

Please don't disconnect the power or remove the USB device while running the upgrade.

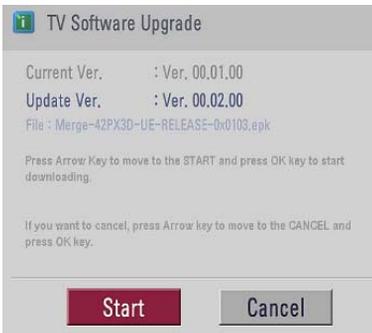


Step1. Please select "Start" to execute the upgrade automatically.

- Press Arrow key to move to the "Start"

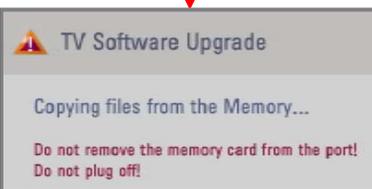


Step2. Copying software file from the USB device to the TV

- ※ Don't remove the USB device while this message is displayed.

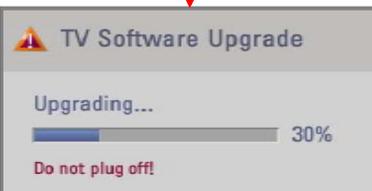

Step3. Running the software upgrade

- ※ Don't turn off the power while this message is displayed.
- ※ If some problems happen during upgrade, the TV will display the error message and restart to return to the previous version.

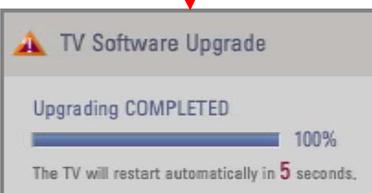

Step4. Complete the software upgrade

- If the upgrade is completed, this message is displayed.
- The TV will turn off and on automatically after the upgrade completed.

ⓘ Note

- You can check the upgraded software version on the "Diagnostics menu" (OSD Menu: Setup -> Diagnostics)
- It might be initialized previous menu setting (Channel tuning, Picture, Audio,,,))
- If you have still problem after upgrade, please contact with us again.