

# Software Upgrade Instruction

## USB/DISC Update

LG\_BD\_6200M51.ROM is an update file for Main Software.

### Step 1: Creating Separate Firmware Update Device

You can create a firmware update files on your own media by saving them in the USB memory device or in CD/DVD.

#### [Option A] Creating a Firmware Update USB Device

To create a firmware update in a USB memory device, copy the update file(s) to the USB device.

##### Preparation:

The USB memory device should have at least 80MB of free space to save the firmware update files.

1. Insert a USB memory device into the PC.
2. Copy the latest version of firmware update files to the USB drive.

(You should make UPG\_ALL folder and save file in that folder)

#### [Option B] Creating a Firmware Update CD/DVD

To create a firmware update in a CD/DVD, write the update file(s) to the CD+R/RW or DVD±R/RW disc using CD burning software.

##### Preparation:

To create a firmware update CD/DVD, prepare the following items according to your storage media:

<b>CD</b>	<ul style="list-style-type: none"><li>- CD-RW drive and CD burning software. (Both must be installed in your PC to create a firmware update CD.)</li><li>- Blank recordable CD-R or CD-RW disc.</li></ul>
<b>DVD</b>	<ul style="list-style-type: none"><li>- DVD-RW drive and DVD burning software. (Both must be installed in your PC to create a firmware update DVD.)</li><li>- Blank recordable DVD-R, DVD-RW, DVD+R, or DVD+RW disc.</li></ul>

1. Insert a blank recordable CD/DVD-R, CD/DVD-RW, DVD+R, or DVD+RW disc into the CD/DVD-RW drive.
2. Run the CD/DVD burning software, and select the [CD Data] or the [Burn DVD Data] option on the program.
3. Write the firmware update file(s) in the root directly of CD/DVD. For details, follow the operating instructions provided by the CD/DVD burning software provider.

 
# Software Upgrade Instruction

## Step 2: Updating Firmware




- 1) Turn on the player and wait until the Home Menu appears.
- 2) Insert USB memory or CD/DVD disc that contains the update file(s) of the latest firmware version into the player.

- USB memory device: Insert the USB memory device to a USB port on the front panel of the player.
- CD/DVD: Press OPEN/CLOSE button to open the disc tray. Load the disc and press OPEN/CLOSE button to close the disc tray.

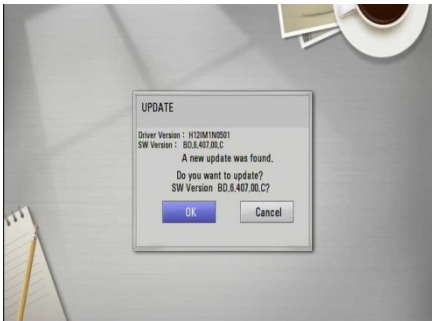

 
- 3) The UPDATE window appears displaying the versions of current firmware in white, and the versions saved in the USB memory device or CD/DVD in blue.

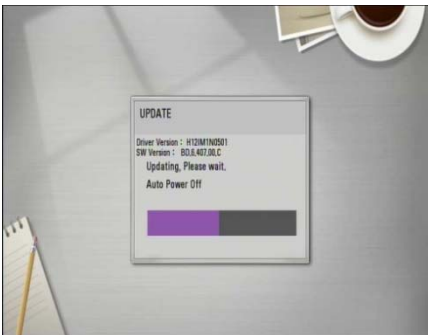

- 4) Press ENTER on the remote control to start the update. A status bar shows the progress of the firmware update.

- Updating Main Software will take about 3 minutes.
- Updating Driver will take about 1 minute.
- Updating both Main Software and Driver will take about 4 minutes

 Please be patient during the software update!

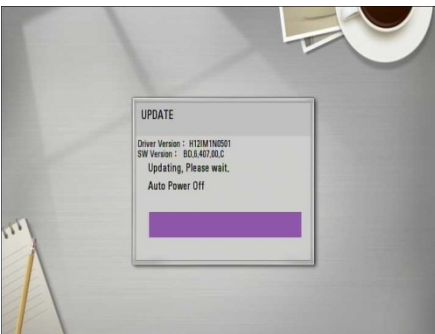

- 5) When the update is completed, the power will turn off and on automatically.

- 6) Eject the firmware update device and turn the player back on.