 


## Pagination & Folding

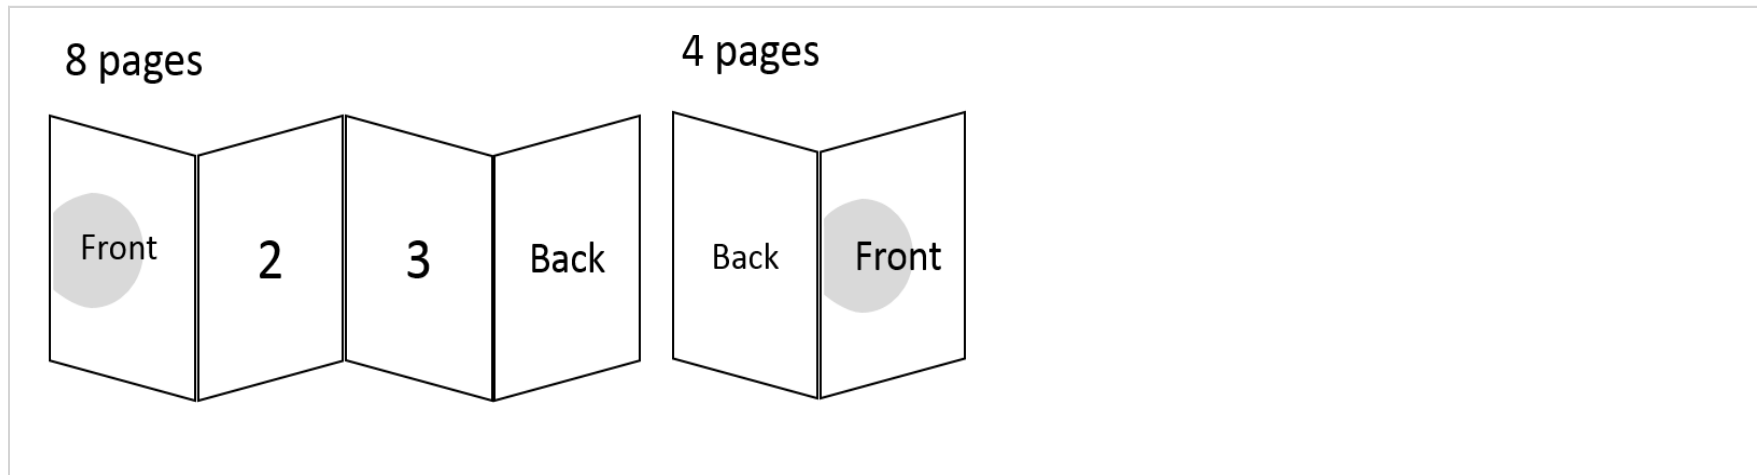 



## Printing Specifications

Material	Cover	Woodfree 80 g/m²	Note		SEUNG HAN HONG		
	Inner	Woodfree 80 g/m²					
Coating	Cover	Uncoated			Prepared	Description	Manual
	Inner	Uncoated					
Color	Cover	1 color (Black)			2018-07-24	P/No.	MFL70420347
	Inner	1 color (Black)					
Size		148 x 210 mm (A5 size_Folded size)			Checked	Ver.	1.0
Binding Method		Only folding					
Book Binding		Center folding once			Approved		
Completed total pages		4					

## Additional Information

### Specification

Power consumption	Refer to the main label.
AC adapter	<ul style="list-style-type: none"> <li>Model : DA-50F25</li> <li>Manufacturer : Asian Power Devices Inc.</li> <li>Input : 100 - 240 V ~ 50 - 60 Hz</li> <li>Output : 25 V  2 A</li> </ul>
Dimensions (W x H x D)	Approx. 891.0 mm X 57.5 mm X 87.8 mm With foot
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	360 W RMS

Design and specifications are subject to change without notice.

### OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.


In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

**POWER:** This unit operates on a mains supply of 100 - 240 V~, 50 / 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

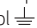**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



SIMPLE MANUAL

# Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.


To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
SK5




MFL70420347

 [www.lg.com](http://www.lg.com)  
Copyright © 2018 LG Electronics Inc. All Rights Reserved.

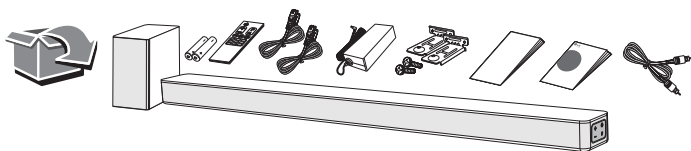

## Front Panel

 The buttons are located on the side.




⏻ (Standby) ..... Switches the unit ON or OFF

F (Function) ..... Selects Function

+/- (Volume) ..... Adjusts Volume

## Rear Panel

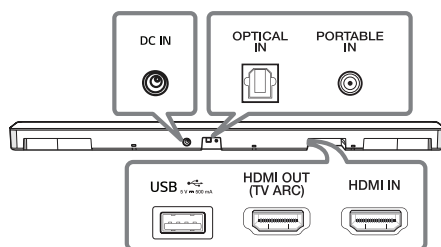 

DC IN ..... Connect to the AC adapter

OPTICAL IN ..... Connect to an Optical device

PORTABLE IN ..... Connect to a Portable device

USB ..... Connect to a USB device

HDMI OUT (TV ARC) ..... Connect to a TV

HDMI IN ..... Connect to HDMI out on a device

## 1 Subwoofer Connection

Place the wireless subwoofer near the speaker and follow steps below.

- 1 Connect the power cord of wireless subwoofer and sound bar to the outlet.

- 2 Turn on the main unit :

The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

### Subwoofer Connection Manually

If the subwoofer does not make sound, try to connect manually.

- 1 Press **Pairing** button on the rear of the wireless subwoofer.

- The green LED on the rear of wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the Pairing button.)

 
- 2 Turn on the main unit.

- 3 Pairing is completed.

- The green LED on the rear of wireless subwoofer turns on.



Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

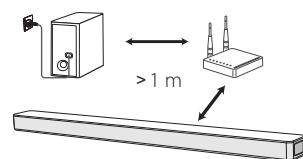


## 2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


### A Optical Connection

 - 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

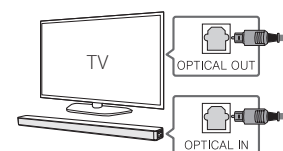

### B HDMI(ARC) Connection

 
- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

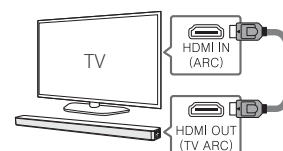

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.


### Additional Device Connection

 - 1 Connect to the external device as follows.

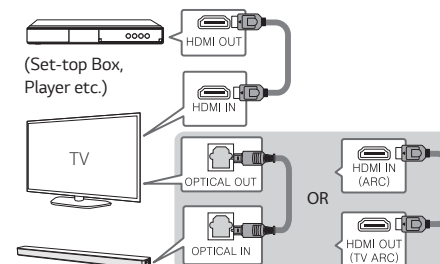

- 2 Set the input source by pressing F on the remote control or unit repeatedly.

## Remote control

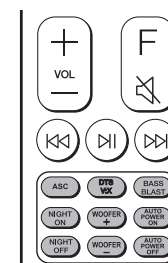 

ASC/DTS V:X/BASS BLAST: Selects the sound effect.

NIGHT ON/OFF: Turns down the volume at night.

WOOFER +/-: Adjusts the volume level of subwoofer.

AUTO POWER ON/OFF: Automatically turns on by an input source.

### Replacement of battery

