

LAS655K SW Update Guide – Using USB

Main Program File name of LAS655K is LG_HB_A100M80.ROM

Step 1: Creating an update file

You can create an update file in USB memory.

[Option A] Create an update file on USB

You can copy and update the update file to USB memory.

Preparation:

The USB Memory Device must have at least 200 MB of free space.

1. Connect USB to PC.

2. Copy the latest version of Update File to USB.

(You do not need to copy it to USB root and create a separate folder)

Step 2: Firmware Update



1) Turn on the Soundbar and display the Home menu.


2) Insert USB with firmware file into Soundbar.
- USB: Connect to the USB port on the front of the soundbar.



3) An update popup window will appear, showing the current version and the version to be updated.



4) Press the Enter button on the remote control to start the firmware update.
- Main firmware update time: about 3 minutes.

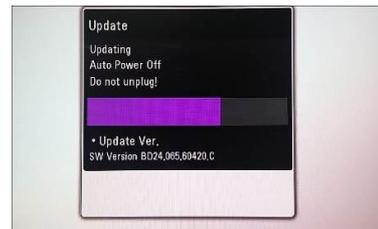

5) When the update is completed, the power is automatically turned off.

6) Please turn on the power and remove USB for firmware update.


LAS655K SW Update Guide – Using Network

You can update the firmware by connecting the device directly to the S/W update server.


Configure network settings

To connect the device directly to the S/W update server and update the firmware, the device is connected to the network. If the device is not connected to a network, physically connect it.

Step 1. After booting the device, select Settings from the Home menu. **Step 3.** If you select Others -> Software -> Update, the following pop-up will occur if there is a new update image on the server.

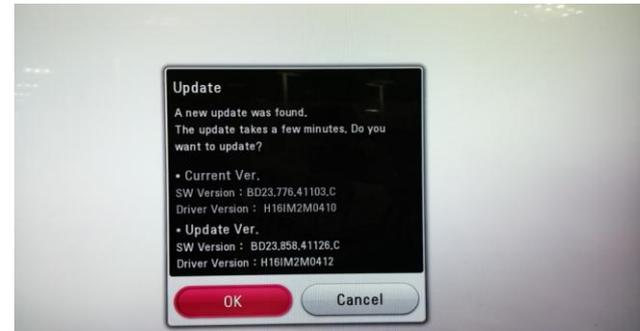

Step 2. Select Others -> Software -> Update

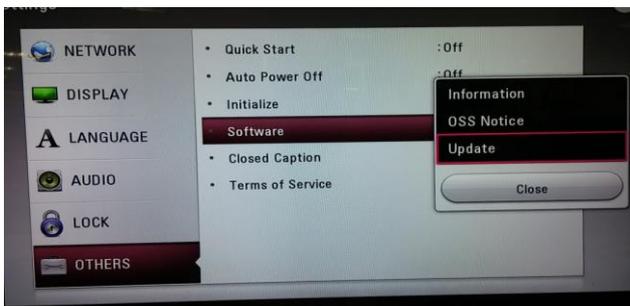

Step 4. Click OK button to download & update and then power-off automatically.