



ENGLISH

# OWNER'S MANUAL

# AIR

# CONDITIONER

**Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times. This manual is the simplified version of original manual. You can obtain the original manual from [www.lg.com](http://www.lg.com).**

TYPE : WALL MOUNTED

Original instruction



MFL69598508  
Rev.01\_101718

[www.lg.com](http://www.lg.com)

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

# TABLE OF CONTENTS

This manual is produced for a group of products and may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

|                                                    |           |
|----------------------------------------------------|-----------|
| <b>SAFETY INSTRUCTIONS .....</b>                   | <b>3</b>  |
| IMPORTANT SAFETY INSTRUCTIONS.....                 | 4         |
| <b>OPERATION .....</b>                             | <b>9</b>  |
| Notes for Operation .....                          | 9         |
| Parts and Functions.....                           | 9         |
| Wireless Remote Control.....                       | 10        |
| Restarting the Air Conditioner Automatically ..... | 15        |
| Using the Mode Function.....                       | 15        |
| Using the Jet Mode Function.....                   | 17        |
| Using the Fan Speed Function.....                  | 17        |
| Using the Air Flow Direction Function.....         | 18        |
| Setting the On/Off Timer.....                      | 18        |
| Using the Sleep Function(Optional).....            | 19        |
| Using the Simple Timer Function(Optional).....     | 20        |
| Using the Energy Display Function(Optional).....   | 20        |
| Using the Light Off Function(Optional) .....       | 21        |
| Using the Comfort Air Function(Optional).....      | 21        |
| Using the Energy Control Function(Optional).....   | 22        |
| Using Special Functions.....                       | 22        |
| Smart Appliance Connectivity.....                  | 24        |
| <b>SMART FUNCTIONS .....</b>                       | <b>25</b> |
| Using LG SmartThinQ Application.....               | 25        |
| <b>MAINTENANCE.....</b>                            | <b>28</b> |
| Clean the Air Filter .....                         | 30        |
| <b>TROUBLESHOOTING .....</b>                       | <b>31</b> |

# SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

## WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

## CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

## WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

### **Children in the Household**

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

### **For use in Australia:**

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## IMPORTANT SAFETY INSTRUCTIONS

### **WARNING**

**To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:**

#### **Installation**

- Do not install the air conditioner on an unstable surface or in a place where there is danger of it falling.
- Contact an authorized service center when installing or relocating the air conditioner.
- Install the panel and the cover of the control box safely.
- Do not install the air conditioner in a place where flammable liquids or gases such as gasoline, propane, paint thinner, etc., are stored.
- Make sure that the pipe and the power cable connecting the indoor and outdoor units are not pulled too tight when installing the air conditioner.
- Use standard circuit breaker and fuse that conform to the rating of the air conditioner.
- Do not input air or gas into the system except with the specific refrigerant.
- Use non-flammable gas (nitrogen) to check for leak and to purge air; using compressed air or flammable gas may cause fire or explosion.
- The indoor/outdoor wiring connections must be secured tightly, and the cable should be routed properly so that there is no force pulling the cable from the connection terminals. Improper or loose connections can cause heat generation or fire.
- Install dedicated electric outlet and circuit breaker before using the air conditioner.
- Do not connect the ground wire to a gas pipe, a lightning rod, or a telephone ground wire.

## Operation

- Be sure to use only those parts listed in the service parts list. Never attempt to modify the equipment.
- Make sure that children do not climb on or hit the outdoor unit.
- Dispose of the batteries in a place where there is no danger of fire.
- Use only the refrigerant specified on the air conditioner label.
- Cut off the power supply if there is any noise, smell, or smoke coming from the air conditioner.
- Do not leave flammable substances such as gasoline, benzene, or thinner near the air conditioner.
- Contact an authorized service center when the air conditioner is submerged by flood waters.
- Do not use the air conditioner for an extended period time in a small place without proper ventilation.
- In the event of a gas leak (such as Freon, propane gas, LP gas, etc.) ventilate sufficiently before using the air conditioner again.
- To clean the interior, contact an authorized service center or dealer. Using harsh detergents may cause corrosion or damage to the unit.
- Be sure to ventilate sufficiently when the air conditioner and a heating appliance such as a heater are used simultaneously.
- Do not block the inlet or outlet of air flow.
- Do not insert hands or other objects through the air inlet or outlet while the air conditioner is operating.
- Make sure that the power cable is neither dirty, loose, nor broken.
- Never touch, operate, or repair the air conditioner with wet hands.
- Do not place any objects on the power cable.
- Do not place a heater or other heating appliances near the power cable.
- Do not modify or extend the power cable. Scratches or peeling insulation on the power cables may result in fire or electric shock, and should be replaced.
- Cut off the power supply immediately in the event of a blackout or a thunderstorm.
- Take care to ensure that power cable could not be pulled out or damaged during operation.
- Do not touch refrigerant pipe or water pipe or any internal parts while the unit is operation or immediately after operation.

## **Maintenance**

- Do not clean the appliance by spraying water directly onto the product.
- Before cleaning or performing maintenance, disconnect the power supply and wait until the fan stops.

## **Technical Safety**

- Installation or repairs made by unauthorized persons can pose hazards to you and others.
- The information contained in the manual is intended for use by a qualified service technician who is familiar with the safety procedures and equipped with the proper tools and test instruments.
- Failure to read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.
- The appliance shall be installed in accordance with national wiring regulations.
- When the power cord is to be replaced, the replacement work shall be performed by authorized personnel using only genuine replacement parts.
- This appliance must be properly grounded to minimize risk of electric shock.
- Do not cut or remove the grounding prong from the power plug.
- Attaching the adapter ground terminal to the wall receptacle cover screw does not ground the appliance unless the cover screw is metal, uninsulated, and the wall receptacle is grounded through house wiring.
- If you have any doubt whether the air conditioner is properly grounded, have the wall receptacle and circuit checked by a qualified electrician.
- The refrigerant and insulation blowing gas used in the appliance require special disposal procedures. Consult a service agent or a similarly qualified person before disposing of them.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agents or similarly qualified person in order to avoid a hazard.

## CAUTION

**To reduce the risk of minor injury to persons, malfunction, or damage to the product or property when using this product, follow basic precautions, including the following:**

### **Installation**

- Do not install the air conditioner in an area where it is directly exposed to sea wind(salt spray).
- Install the drain hose properly for the smooth drainage of water condensation.
- Exercise caution when unpacking or installing the air conditioner.
- Do not touch the leaking refrigerant during installation or repair.
- Transport the air conditioner with two or more people or use a forklift.
- Install the outdoor unit such that it is protected from direct sunlight. Do not place the indoor unit in a place where it is directly exposed to sunlight via the windows.
- Safely dispose of packing materials such as screws, nails or batteries using proper packaging after installation or repair.
- Install the air conditioner in a place where the noise from the outdoor unit or the exhaust fumes will not inconvenience the neighbors. Failure to do so may result in conflict with the neighbors.
- The air conditioner should be used only for the applications for which it has been designed : the indoor unit is not suitable to be installed in areas used for laundry.

### **Operation**

- Remove the batteries if the remote control is not to be used for an extended period of time.
- Make sure that the filter is installed before operating the air conditioner.
- Be sure to check if there is a refrigerant leak after installing or repairing the air conditioner.
- Do not place any object on the air conditioner.
- Never mix different types of batteries, or old and new batteries for the remote control.
- Do not let the air conditioner run for a long time when humidity is very high or when a door or a window has been left open.

- Stop using the remote control if there is a fluid leak in the battery. If your clothes or skin are exposed to the leaking battery fluid, wash off with clean water.
- Do not expose people, animals, or plants to the cold or hot wind from the air conditioner for extended periods of time.
- If the leaking battery fluid has been swallowed, wash off the inside of the mouth thoroughly and consult a doctor.
- Do not drink the water drained from the air conditioner.
- Do not use the product for special purposes, such as preserving foods, works of art, and etc. It is an air conditioner for consumer purposes, not a precision refrigeration system. There is risk of damage or loss of property.
- Do not recharge or disassemble the batteries.

### **Maintenance**

- Never touch the metal parts of the air conditioner when removing the air filter.
- Use a sturdy stool or ladder when cleaning, maintaining, or repairing the air conditioner at a height.
- Never use strong cleaning agents or solvents when cleaning the air conditioner or spray water. Use a smooth cloth.

# OPERATION


## Notes for Operation

### Suggestion for Energy Saving

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, within a short period of time.
- Open windows regularly for ventilation. The indoor air quality may deteriorate if the air conditioner is used for long durations.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.


## Parts and Functions

### Indoor Unit

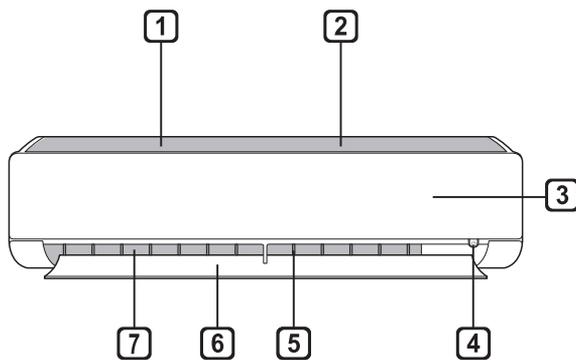

- 1 Air Filter
- 2 Air Intake
- 3 Front Cover
- 4 On/Off Button
- 5 Air Deflector (Vertical louver)
- 6 Air Deflector (Horizontal vane)
- 7 Air Outlet

### Outdoor Unit

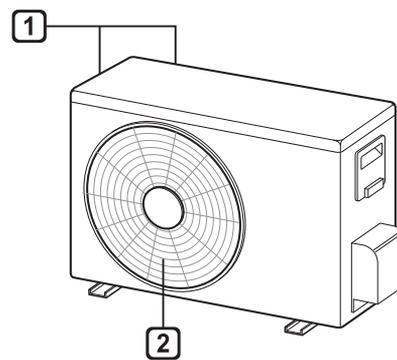

- 1 Air Intake Vents
- 2 Air Outlet Vents

### NOTE

 
- The number and location of operation lamps may vary according to the model of the air conditioner.
- The feature may be changed according to the type of model.

## Wireless Remote Control


### Inserting Batteries

If the display screen of the remote control begins to fade, replace the batteries. Insert AAA (1.5 V) batteries before using the remote control.

- 1 Remove the battery cover.

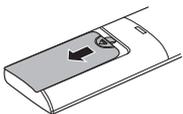


- 2 Insert the new batteries and make sure that the + and - terminals of the batteries are installed correctly.

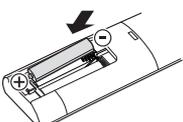

### Installing the Remote Control Holder


To protect the remote control, install the holder where there is no direct sunlight.

 - 1 Choose a safe and easily accessible location.
- 2 Fix the holder by fastening 2 screws firmly with a screwdriver.

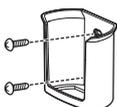

### Operating method

Point the remote control towards the signal receiver at the right side of the air conditioner to operate it.

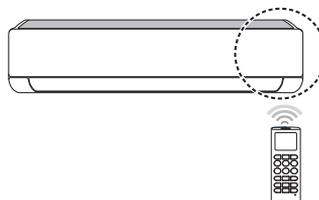

### NOTE

- The remote control may operate other electronic devices if it is directed towards them. Make sure to point the remote control towards the air conditioner signal receiver.
- For proper operation, use a soft cloth to clean the signal transmitter and receiver.
- In case of a function not provided in the product, no buzzer sound occurs from the product when a button for such function on the remote control is pressed except for Air Flow Direction (SWING), Energy Display (ECONO), Air Purification function (AIR CLEAN).



## Setting the Current Time

- 1 Insert batteries.
  - The icon below blinks at the bottom of the display screen.



- 2 Press  or  button to select the minutes.

- 3 Press **SET/CANCEL** button to finish.

### NOTE

- The On/Off Timer is available after setting the current time.

## Using the °C/°F Conversion Function(Optional)

This function changes unit between °C and °F.


- Press and hold  button about 5 seconds.

## Operating the Air Conditioner Without the Remote Control


You can use the **ON/OFF** button of the indoor unit to operate the air conditioner when the remote control is unavailable.

- 1 Open the front cover (Type1) or horizontal vane(Type2).
- 2 Press the **ON/OFF** button.

### Type1

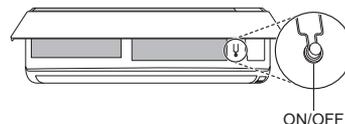

### Type2

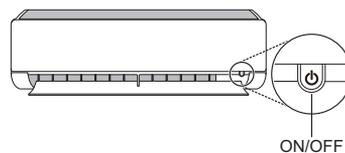


### NOTE

- The stepping motor may be broken, if the horizontal vane opens rapidly.
- The fan speed is set to high.
- The feature may be changed according to the type of model.
- The temperature cannot be altered when using this emergency On/Off button.
- For cooling & heating models, the temperature is set from 22 °C to 24 °C.

## Using Wireless Remote Control


You can operate the air conditioner more conveniently with the remote control.

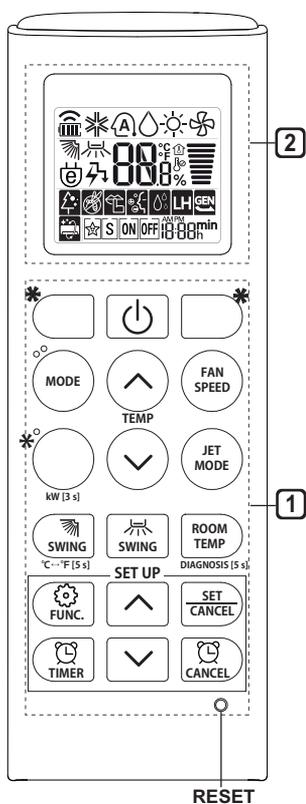

| 1<br>Button | 2<br>Display Screen | Description                                                                         | Available Function    |
|-------------|---------------------|-------------------------------------------------------------------------------------|-----------------------|
|             |                     |                                                                                     | Multi                 |
|             | -                   | To turn on/off the air conditioner.                                                 | <input type="radio"/> |
|             | 88 °C               | To adjust the desired room temperature in cooling, heating or auto changeover mode. | <input type="radio"/> |
| MODE        |                     | To select the cooling mode.                                                         | <input type="radio"/> |
|             |                     | To select the heating mode.                                                         | <input type="radio"/> |
|             |                     | To select the dehumidification mode.                                                | <input type="radio"/> |
|             |                     | To select the fan mode.                                                             | <input type="radio"/> |
|             |                     | To select the auto changeover/auto operation mode.                                  | <input type="radio"/> |
| JET MODE    | PO                  | To change room temperature quickly.                                                 | <input type="radio"/> |
| FAN SPEED   |                     | To adjust the fan speed.                                                            | <input type="radio"/> |
|             |                     | To adjust the air flow direction vertically or horizontally.                        | <input type="radio"/> |

### NOTE

- \* buttons may be changed according to the type of model.
- When connected to the Multi Outdoor unit, the Energy Display, Energy Control, Silent and Smart Diagnosis function may not be supported.

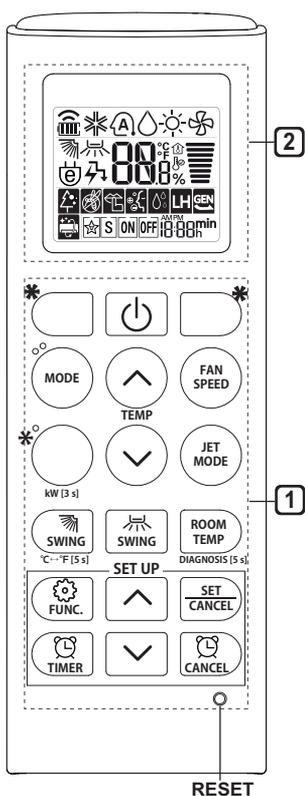


| 1<br>Button        | 2<br>Display<br>Screen | Description                                                    | Available Function                  |  |
|--------------------|------------------------|----------------------------------------------------------------|-------------------------------------|--|
|                    |                        |                                                                | Multi                               |  |
|                    |                        | To turn on/off air conditioner automatically at desired time.  | <input type="radio"/>               |  |
| SET/<br>CANCEL     | -                      | To set/cancel the special functions and timer.                 | <input type="radio"/>               |  |
|                    | -                      | To cancel the timer settings.                                  | <input type="radio"/>               |  |
|                    | -                      | To adjust time.                                                | <input type="radio"/>               |  |
| *LIGHT<br>OFF      | -                      | To set the brightness of the display on the indoor unit.       | <input type="radio"/>               |  |
| ROOM<br>TEMP       |                        | To display the room temperature.                               | <input type="radio"/>               |  |
| °C↔°F[5 s]         |                        | To change unit between °C and °F.                              | <input type="radio"/>               |  |
| *COMFORT<br>AIR    |                        | To adjust the air flow to deflect wind.                        | <input type="radio"/>               |  |
| kw[3 s]            | -                      | To set whether or not to display information regarding energy. | <input checked="" type="checkbox"/> |  |
| *ENERGY<br>CTRL    |                        | To bring the effect of the power saving.                       | <input checked="" type="checkbox"/> |  |
| DIAGNOSIS<br>[5 s] | -                      | To conveniently check maintenance information of a product.    | <input checked="" type="checkbox"/> |  |

ENGLISH

**NOTE**

- \* buttons may be changed according to the type of model.
- When connected to the Multi Outdoor unit, the Energy Display, Energy Control, Silent and Smart Diagnosis function may not be supported.

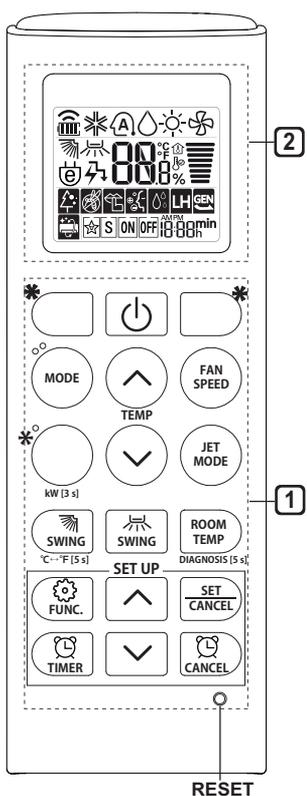

| 1<br>Button                                                                       | 2<br>Display<br>Screen                                                            | Description                                                          | Available Function |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|----------------------------------------------------------------------|--------------------|
|                                                                                   |                                                                                   |                                                                      | Multi              |
|  |  | To purify the air by removing particles that enters the indoor unit. | ○<br>(Optional)    |
|                                                                                   |  | To reduce noise from outdoor units.                                  | ×                  |
|                                                                                   |  | To remove moisture generated inside the indoor unit.                 | ○                  |
| RESET                                                                             | -                                                                                 | To Initialize the remote control settings.                           | ○                  |

**NOTE**

- Some functions may not be supported, depending on the model.
- \* buttons may be changed according to the type of model.
- Press the **SET/CANCEL** button to operate the selected **FUNC.**


## Restarting the Air Conditioner Automatically

When the air conditioner is turned on again after a power failure, this function restores the previous settings.


### Disabling Auto Restart

- 1 Open the front cover (Type1) or horizontal vane (Type2).
- 2 Press the **ON/OFF** button and hold it for 6 seconds, then The unit will beep twice and the lamp will blink twice 4 times.
  - To re-enable the function, press the **ON/OFF** button and hold it for 6 seconds. The unit will beep twice and the lamp will blink 4 times.

#### Type1

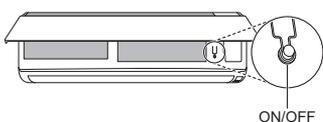

#### Type2

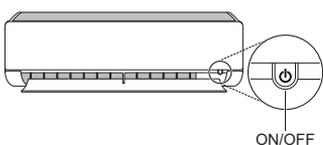


### NOTE

- The feature may be changed according to the type of model.
- If you press and hold the **ON/OFF** button for 3 – 5 seconds, instead of 6 seconds, the unit will switch to the test operation. In the test operation, the unit blows out strong cooling air for 18 minutes and then returns to factory default settings.

## Using the Mode Function

This function allows you to select the desired function.

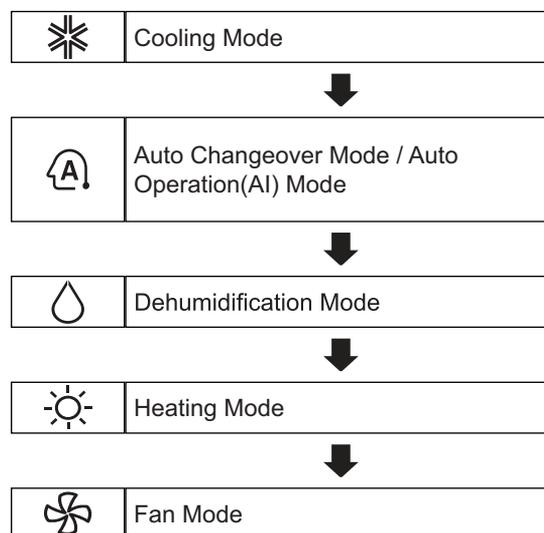

### Cooling Mode

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Cooling Mode.
  - ❄️ is displayed on the display screen.
- 3 Press **▲** or **▼** button to set the desired temperature.

## Heating Mode

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Heating Mode.
  -  is displayed on the display screen.
- 3 Press  or  button to set the desired temperature.

## Dehumidification Mode

This mode removes excess moisture from a highly humid environment or during the rainy season, in order to prevent molding from setting in. This mode adjusts the room temperature and the fan speed automatically to maintain the optimal level of humidity.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Dehumidification Mode.
  -  is displayed on the display screen.

### NOTE

- In this mode you cannot adjust the room temperature, it is adjusted automatically.
- The room temperature is not displayed on the display screen.

## Fan Mode

This mode only circulates the indoor air without changing the room temperature.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Fan Mode.
  -  is displayed on the display screen.
- 3 Press **FAN SPEED** button to adjust the fan speed.

## Auto Operation(Artificial Intelligence)

### Multi Model

In this operation mode, the system is automatically operated by the electronic controls.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the Auto Operation.
  -  is displayed on the display screen.
- 3 Press  or  button to set the desired temperature.
- 4 Press **FAN SPEED** button to adjust the fan speed.

## Using the Jet Mode Function

### Changing Room Temperature Quickly

This function allows you to cool indoor air quickly during the summer or warm it quickly during winter.

- The Jet Mode function is available with Cooling, Heating and Dehumidification Mode.

- 1 Turn the appliance on.
- 2 Press **MODE** button repeatedly to select the desired mode.
- 3 Press **JET MODE** button.
  - **P<sub>0</sub>** is displayed on the display screen.

#### NOTE

- Jet Heating Mode is not available on some models.
- In Jet Cooling Mode, strong air blows out at temperature of 18 °C for 30 minutes.
- In Jet Heating Mode, strong air blows out at temperature of 30 °C for 30 minutes.
- This function may operate differently from the remote control display.

## Using the Fan Speed Function

### Adjusting the Fan Speed

- Press **FAN SPEED** button repeatedly to adjust the fan speed.

| Display Screen                                                                    | Speed         |
|-----------------------------------------------------------------------------------|---------------|
|  | High          |
|  | Medium - High |
|  | Medium        |
|  | Medium - Low  |
|  | Low           |
| -                                                                                 | Natural Wind  |

#### NOTE

- The fan speed of natural air adjusts automatically.



- The fan speed icons are displayed on some indoor units.

**F1** → **F2** → **F3** → **F4** → **F5**

Indoor unit display is displayed only 5 seconds and return to the setting temperature on some models.

## Using the Air Flow Direction Function

This function adjusts the direction of the air flow vertically (horizontally).

- Press   button repeatedly and select the desired direction.
  - Select   to adjust the direction of the air flow automatically.

### NOTE

- Adjusting the air flow direction horizontally may not be supported, depending on the model.
- Adjusting the air deflector arbitrarily may cause product failure.
- If you restart the air conditioner, it starts to operate with the previously set direction of air flow, so the air deflector may not match the icon displayed on the remote control. When this occurs, press  or  button to adjust the direction of the air flow again.
- This function may operate differently from the remote control display.

## Setting the On/Off Timer

This function sets the air conditioner to turn on/off automatically at desired time.

### Setting the On Timer

- 1 Press  button repeatedly.
  - The icon below blinks at the bottom of the display screen.



- 2 Press  or  button to select the minutes.

- 3 Press **SET/CANCEL** button to finish.
  - After setting the timer, current time and  icon are displayed on the display screen indicating that the desired time is set.

### Canceling the On Timer

- 1 Press  button repeatedly.
  - The icon below blinks at the bottom of the display screen.



- 2 Press **SET/CANCEL** button to cancel the setting.



## Setting the Off Timer

- 1 Press  button repeatedly.
  - The icon below blinks at the bottom of the display screen.



- 2 Press  or  button to select the minutes.

- 3 Press **SET/CANCEL** button to finish.
  - After setting the timer, current time and  icon are displayed on the display screen indicating that the desired time is set.

### NOTE

- This function is disabled when you set Simple Timer.

## Canceling the Off Timer

- 1 Press  button repeatedly.
  - The icon below blinks at the bottom of the display screen.



- 2 Press **SET/CANCEL** button to cancel the setting.

## Canceling the Timer Setting

 
- Press  button to cancel all timer settings.

## Using the Sleep Function(Optional)

This function turns off the air conditioner automatically when you go to sleep.

- 1 Turn the appliance on.
  - The icon below blinks at the bottom of the display screen.

- 2 Press  button repeatedly.

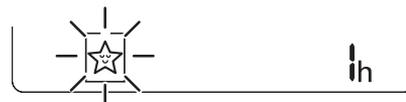

- 3 Press  or  button to select the hour (up to 7 hours).

- 4 Press **SET/CANCEL** button to finish.
  -  is displayed on the display screen.


### NOTE

 -  is displayed on some indoor units.
- Indoor unit display is displayed from 1H to 7H, which is displayed only 5 seconds and then return to the setting temperature.
- In the Cooling and Dehumidification Mode, the temperature increases by 1 °C after 30 minutes and additional 1 °C after another 30 minutes for a more comfortable sleep.
- The temperature increases up to 2 °C from the preset temperature.
- Although the remark for fan speed on the display screen may be changed, the fan speed is adjusted automatically.

## Using the Simple Timer Function(Optional)

This function turns off the air conditioner automatically when you go to sleep.

- 1 Turn the appliance on.
- 2 Press  button repeatedly.
  - The icon below blinks at the bottom of the display screen.

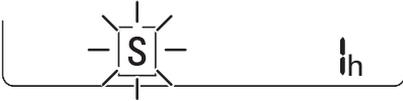

- 3 Press  or  button to select the hour (up to 7 hours).
- 4 Press **SET/CANCEL** button to finish.
  -  is displayed on the display screen.

### NOTE

- This function is disabled when you set Off Timer.

## Using the Energy Display Function(Optional)

This function displays the amount of electricity generated on the indoor display as the product operates.

### Display the Current Energy Usage

- 1 Turn the appliance on.
- 2 Press  button and hold it about 3 seconds.
  - The instantaneous power consumption() is displayed for a while on some indoor units.

### NOTE

- It is not displayed on the wireless remote control.
- The unit of the displayed value is kW.
- If it is more than 99 kW, which is the range of expression, maintain it as 99 kW.
- Display wattage under 10 kW with 0.1 kW unit, and display one over 10 kW with 1 kW unit.
- The actual power may differ from the power displayed.
- When connected to the Multi Outdoor unit, this function may not be supported.



## Using the Light Off Function(Optional)

### Display Screen Brightness

You can set the brightness of the indoor unit display screen.

- Press **LIGHT OFF** button.

## Using the Comfort Air Function(Optional)

### Comfort Vane Operation

This function conveniently sets the vane to a preset position to deflect the supply air away from blowing directly onto the occupants in the room.

- 1 Turn the appliance on.
- 2 Press **COMFORT AIR** button repeatedly and select the desired direction.
  -  or  is displayed on the display screen.

### NOTE

-  or  is displayed on some indoor units.
- This function is disabled when you press **MODE** or **JET MODE** button.
- This function is disabled and auto swing of vertical direction is set up when you press  button.
- When this function is off, the horizontal vane operates automatically depending on the set mode.



## Using the Energy Control Function(Optional)

- 1 Turn the appliance on.
- 2 Press **ENERGY CTRL** button.
  - Press **ENERGY CTRL** button repeatedly to select each step.

### NOTE

- 1 step : The power Input is decreased by 20% compared to rated power input.
  - $\bar{1}00\%$  is displayed on the display screen.
- 2 step : The power Input is decreased by 40% compared to rated power input.
  - $\bar{1}40\%$  is displayed on the display screen.
- 3 step(Optional) : The power Input is decreased by 60% compared to rated power input.
  - $\bar{1}60\%$  is displayed on the display screen.
- $\bar{1}$ (1 step),  $\bar{1}\bar{1}$ (2 step) is displayed on some indoor units.
- This function is available with Cooling Mode.
- Capacity may decrease when Energy Control mode is selected.
- Desired temperature is displayed about 5 seconds if you press **FAN SPEED**,  $\bar{\wedge}$  or  $\bar{\vee}$  button.
- Room temperature is displayed about 5 seconds if you press **ROOM TEMP** button.
- When connected to the Multi Outdoor unit, this function may not be supported.

## Using Special Functions

- 1 Turn the appliance on.
- 2 Press **FUNC** button repeatedly to select the desired function.
- 3 Press **SET/CANCEL** button to finish.



| Display Screen                                                                    | Description                                                          |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------|
|  | To purify the air by removing particles that enters the indoor unit. |
|  | To reduce noise from outdoor units.                                  |
|  | To remove moisture generated inside the indoor unit.                 |

**NOTE**

- Some functions may not be supported, depending on the model.
- Some functions may operate differently from the remote control display.

**Canceling Special Functions**

- 1 Press **FUNC** button repeatedly to select the desired function.
- 2 Press **SET/CANCEL** button to cancel the function.

**Using the Air Purification Function**

These functions supply clean and fresh air by ion particles and filter.

| Function       | Display                                                                             | Description                                                                                       |
|----------------|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
| <b>Ionizer</b> |  | Ion particles from Ionizer sterilize the aerial bacteria and other harmful substances.            |
| <b>Plasma</b>  |                                                                                     | It removes microscopic contaminants from the intake air completely to supply clean and fresh air. |

**NOTE**

- You can use this function without turning the air conditioner on.
- Both the plasma lamp and the cooling lamp light up while Smoke Away/Plasma is in operation on some models.
- Do not touch ionizer during operation.
- This function may operate differently from the remote control display.

## Using the Silent Function

This function prevents potential claims by neighbors, reducing noise from outdoor units.

-  is displayed on the display screen.

### NOTE

- This function is disabled when you press **MODE** or **ENERGY CTRL** or **JET MODE** button.
- This function is available with Cooling, Heating, Auto Changeover, Auto Operation Mode.
- When connected to the Multi Outdoor unit, this function may not be supported.

## Using the Auto Clean Function

In the Cooling and Dehumidification Mode, moisture is generated inside the indoor unit. This function removes such moisture.

-  is displayed on the display screen.

### NOTE

- Some buttons cannot be used while the Auto Clean function is in operation.
- If you turn off the power, the fan operates for 30 minutes and cleans the inside of the indoor unit.

## Smart Appliance Connectivity

### Using the Wi-Fi Pairing Function(Optional)

Once it is connected to the internet through a home Wi-Fi network, you can control the appliance remotely with the application for the smart phone.

- Press and hold the  and **JET MODE** button simultaneously about 3 seconds.

### NOTE


- It is not displayed on the wireless remote control.
- For more information, read manual in Wi-Fi module.

# SMART FUNCTIONS


## Using LG SmartThinQ Application

### Things to check before using LG SmartThinQ

- For appliances with the  logo
- 1 Check the distance between the appliance and the wireless router (Wi-Fi network).
    - If the distance between the appliance and the wireless router is too far, the signal strength becomes weak. It may take a long time to register or installation may fail.
  - 2 Turn off the **Mobile data** or **Cellular Data** on your smartphone.
    - For iPhones, turn data off by going to **Settings** → **Cellular** → **Cellular Data**.

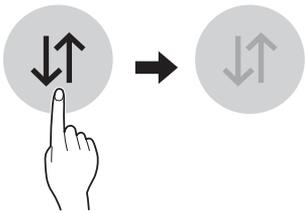

- 3 Connect your smartphone to the wireless router.

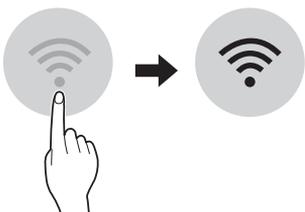

### NOTE

- To verify the Wi-Fi connection, check that **Wi-Fi**  icon on the control panel is lit.
- The appliance supports 2.4 GHz Wi-Fi networks only. To check your network frequency, contact your Internet service provider or refer to your wireless router manual.
- LG SmartThinQ is not responsible for any network connection problems or any faults, malfunctions, or errors caused by network connection.
- If the appliance is having trouble connecting to the Wi-Fi network, it may be too far from the router. Purchase a Wi-Fi repeater (range extender) to improve the Wi-Fi signal strength.
- The Wi-Fi connection may not connect or may be interrupted because of the home network environment.
- The network connection may not work properly depending on the Internet service provider.
- The surrounding wireless environment can make the wireless network service run slowly.
- The appliance cannot be registered due to problems with the wireless signal transmission. Unplug the appliance and wait about a minute before trying again.
- If the firewall on your wireless router is enabled, disable the firewall or add an exception to it.
- The wireless network name (SSID) should be a combination of English letters and numbers. (Do not use special characters.)
- Smartphone user interface (UI) may vary depending on the mobile operating system (OS) and the manufacturer.
- If the security protocol of the router is set to **WEP**, you may fail to set up the network. Please change it to other security protocols (**WPA2** is recommended) and register the product again.

## Installing LG SmartThinQ

Search for the LG SmartThinQ application from the Google Play Store or Apple App Store on a smart phone. Follow instructions to download and install the application.

### NOTE

- If you choose the simple login to access the LG SmartThinQ application, you must go through the appliance registration process each time you change your smartphone or reinstall the application.

## Product Registration

- 1 Run the **LG SmartThinQ** application on a smart phone.
- 2 Create an account and sign in.
- 3 Select **Register**.
- 4 Select **Air conditioner**.
- 5 Follow the instruction on the smart phone.

## Wi-Fi Function

- For appliances with the  logo

Communicate with the appliance from a smart phone using the convenient smart features.

## Using the Application

- 1 Select the appliance in the application and connect it to a Wi-Fi network.
- 2 Select the menu on the upper right side to access settings and features.

## Firmware Update

Keep the appliance performance updated.

## Smart Diagnosis™

If you use the Smart Diagnosis function, you will be provided with the useful information such as a correct way of using the appliance based on the pattern of use.

## Settings

Allows you to set various options on the appliance and in the application.

### NOTE

- If you change your wireless router, your Internet service provider or your password after registering the appliance, please delete it from the LG SmartThinQ **Settings** → **Edit Product** and register again.
- The application is subject to change for appliance improvement purposes without notice to users.
- Functions may vary by model.



## Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

## Wireless LAN module Specifications

|                    |                                                                                  |
|--------------------|----------------------------------------------------------------------------------|
| Model              | LCW-003                                                                          |
| Frequency range    | 2412 ~ 2472 MHz                                                                  |
| Output power (Max) | IEEE 802.11b : 18.37 dBm<br>IEEE 802.11g : 17.67 dBm<br>IEEE 802.11n : 17.67 dBm |

### RF Radiation Exposure Statement

This equipment shall be installed and used at a minimum distance of 20 cm from the human body.




# MAINTENANCE

## **!** WARNING

- Turn off the power and unplug the power cord before you perform any maintenance; otherwise it may cause electric shock.

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition. Clean the product regularly to maintain optimal performance and to prevent possible breakdown.

- Dry the air conditioner in Fan mode for 3 to 4 hours and disconnect the power. There may be internal damage if moisture is left in its components.
- Before using the air conditioner again, dry the inner components of the air conditioner in Fan mode for 3 to 4 hours. This will help to remove the odor generated from moisture.

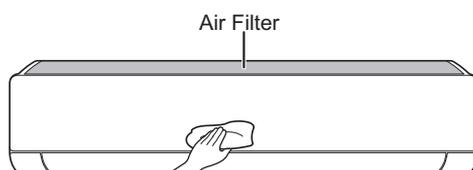

- The feature may be changed according to the type of model.



| Type                     | Description                                                                                       | Interval       |
|--------------------------|---------------------------------------------------------------------------------------------------|----------------|
| <b>Air filter</b>        | Clean with a vacuum or hand wash.                                                                 | 2 weeks        |
| <b>Ionizer(Optional)</b> | Use dry cotton bud to remove any dust                                                             | Every 6 months |
| <b>Indoor unit</b>       | Clean the Indoor unit surface by using a soft, dry cloth.                                         | Regularly      |
|                          | Have a professional clean the condensate drain pan.                                               | Once a year    |
|                          | Have a professional clean the condensate drain pipe.                                              | Every 4 months |
|                          | Replace the remote control batteries.                                                             | Once a year    |
| <b>Outdoor unit</b>      | Have a professional clean the heat exchanger coils and the panel vents.(Consult with technician). | Once a year    |
|                          | Have a professional clean the fan.                                                                | Once a year    |
|                          | Have a professional clean the condensate drain pan.                                               | Once a year    |
|                          | Have a professional verify that all the fan assembly is firmly tightened.                         | Once a year    |
|                          | Clean the electric components with air.                                                           | Once a year    |

### CAUTION

- Never use water that is higher than 40 °C when you clean the filters. It may cause deformation or discoloration.
- Never use volatile substances when you clean the filters. They may damage the surface of the product.
- Do not wash the 3M filter with water, because the filter can be damaged (Optional).
- Do not wash the Triple filter with water, because the filter can be damaged (Optional).



## Clean the Air Filter


Clean the air filters once every 2 weeks, or more, if necessary.

### NOTE


- The air filter can be broken when it is bended.
- When the air filter is not assembled correctly, dust and other substance come into the indoor unit.

### Type1

- 1 Turn off the power and unplug the power cord.
- 2 Open the front cover.
  - Lift up both sides of the cover slightly.
- 3 Hold the knobs of the air filters, pull them down slightly and remove them from the indoor unit.

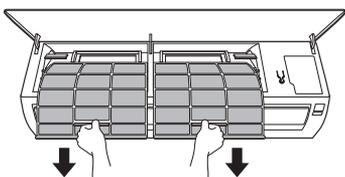

- 4 Clean the filters with a vacuum cleaner or with lukewarm water with neutral detergent.
- 5 Dry the filters in the shade.
- 6 Insert the hooks of the air filters into the front cover.

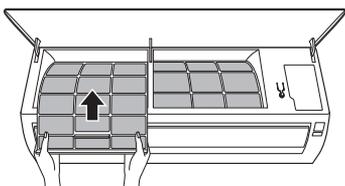


- 7 Check the side of the front cover for correct assembly of the air filters.


### Type2

If you look at the indoor unit from above it, can assemble the top filter easily.

- 1 Turn off the power and unplug the power cord.
- 2 Hold the knob of air filter, lift it up slightly.

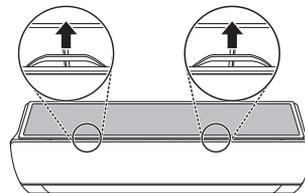


- 3 Remove it from the indoor unit.

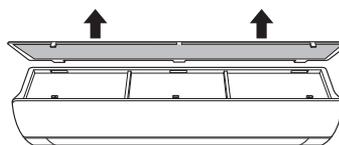


- 4 Clean the filter with a vacuum cleaner or with lukewarm water with neutral detergent.

- 5 Dry the filter in the shade.

- 6 Insert the hooks of the air filter into the front cover.

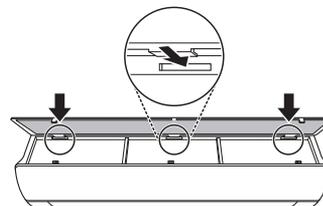

- 7 Push down hooks to assemble the air filter.

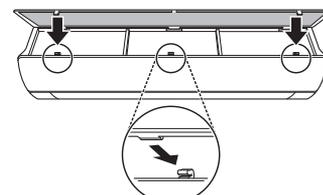

- 8 Check the side of the front cover for correct assembly of the air filter.

# TROUBLESHOOTING

## Self-diagnosis Function

This product has a built-in self-diagnosis function. If an error occurs, the lamp of the indoor unit will blink in 2 second intervals. If this occurs, contact your local dealer or service center.

## Before Calling for Service

Please check the following before you contact the service center. If the problem persists, contact your local service center.

| Problem                                            | Possible Causes                                                                   | Corrective Action                                                                                                                                                                                                                                                         |
|----------------------------------------------------|-----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The air conditioner does not work normally.</b> | Burning smell and strange sounds are coming from the unit.                        | <ul style="list-style-type: none"> <li>• Turn off the air conditioner, unplug the power cable or disconnect the power supply, and contact the service center.</li> </ul>                                                                                                  |
|                                                    | Water leaks from the indoor unit even when the humidity level is low.             |                                                                                                                                                                                                                                                                           |
|                                                    | The power cable is damaged or it is generating excessive heat.                    |                                                                                                                                                                                                                                                                           |
|                                                    | A switch, a circuit breaker (safety, ground), or a fuse is not operated properly. |                                                                                                                                                                                                                                                                           |
|                                                    | The unit generates an error code from its self-diagnosis.                         |                                                                                                                                                                                                                                                                           |
| <b>The air conditioner does not work.</b>          | The air conditioner is unplugged.                                                 | <ul style="list-style-type: none"> <li>• Check whether the power cord is plugged into the outlet or the power isolators are switched on.</li> </ul>                                                                                                                       |
|                                                    | A fuse exploded, or the power supply is blocked.                                  | <ul style="list-style-type: none"> <li>• Replace the fuse or check if the circuit breaker has tripped.</li> </ul>                                                                                                                                                         |
|                                                    | A power failure has occurred.                                                     | <ul style="list-style-type: none"> <li>• Turn off the air conditioner when a power failure occurs.</li> <li>• When the power is restored, wait 3 minutes, and then turn on the air conditioner.</li> </ul>                                                                |
|                                                    | The voltage is too high or too low.                                               | <ul style="list-style-type: none"> <li>• Check if the circuit breaker has tripped.</li> </ul>                                                                                                                                                                             |
|                                                    | The air conditioner was turned off automatically at a preset time.                | <ul style="list-style-type: none"> <li>• Turn the air conditioner on.</li> </ul>                                                                                                                                                                                          |
|                                                    | The battery setting in the remote controller is incorrect.                        | <ul style="list-style-type: none"> <li>• Make sure that the batteries are inserted correctly in your remote controller.</li> <li>• If the batteries are placed correctly, but the air conditioner still does not operate, replace the batteries and try again.</li> </ul> |

| Problem                                                                        | Possible Causes                                             | Corrective Action                                                                                                                                                                                                         |
|--------------------------------------------------------------------------------|-------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The air conditioner does not emit cool air.</b>                             | Air is not circulating properly.                            | <ul style="list-style-type: none"> <li>• Make sure that there are no curtains, blinds, or pieces of furniture blocking the front of the air conditioner.</li> </ul>                                                       |
|                                                                                | The air filter is dirty.                                    | <ul style="list-style-type: none"> <li>• Clean the air filter once every 2 weeks.</li> <li>• See "Cleaning Air Filter" for more information.</li> </ul>                                                                   |
|                                                                                | The room temperature is too high.                           | <ul style="list-style-type: none"> <li>• In summer, cooling the indoor air fully may take some time. In this case, select the Jet Mode to cool the indoor air quickly.</li> </ul>                                         |
|                                                                                | Cold air is escaping from the room.                         | <ul style="list-style-type: none"> <li>• Make sure that no cold air is escaping through the ventilation points in the room.</li> </ul>                                                                                    |
|                                                                                | The desired temperature is higher than the set temperature. | <ul style="list-style-type: none"> <li>• Set the desired temperature to a level lower than the current temperature.</li> </ul>                                                                                            |
|                                                                                | There is a heating source nearby.                           | <ul style="list-style-type: none"> <li>• Avoid using heat generators like electric ovens or gas burners while the air conditioner is in operation.</li> </ul>                                                             |
|                                                                                | Fan Mode is selected.                                       | <ul style="list-style-type: none"> <li>• During Fan Mode, air blows from the air conditioner without cooling or heating the indoor air.</li> <li>• Switch the operation mode to cooling operation.</li> </ul>             |
|                                                                                | Outside temperature is too high.                            | <ul style="list-style-type: none"> <li>• The cooling effect may not be sufficient.</li> </ul>                                                                                                                             |
| <b>The fan speed cannot be adjusted.</b>                                       | The Jet Mode, or Auto Operation Mode is selected.           | <ul style="list-style-type: none"> <li>• In some operation modes, you cannot adjust the fan speed. Select an operation mode in which you can adjust the fan speed.</li> </ul>                                             |
| <b>The temperature cannot be adjusted.</b>                                     | The Fan Mode or Jet Mode is selected.                       | <ul style="list-style-type: none"> <li>• In some operation modes, you cannot adjust the temperature. Select an operation mode in which you can adjust the temperature.</li> </ul>                                         |
| <b>The air conditioner stops during operation.</b>                             | The air conditioner is suddenly turned off.                 | <ul style="list-style-type: none"> <li>• The Timer Function may have timed out, which turns the unit off. Check the timer settings.</li> </ul>                                                                            |
|                                                                                | A power failure has occurred during operation.              | <ul style="list-style-type: none"> <li>• Wait for the power to come back. If you have the Auto Restart function enabled, your unit will resume its last operation several minutes after power is restored.</li> </ul>     |
| <b>The indoor unit is still operating even when power has been turned off.</b> | The Auto Clean function is being operated.                  | <ul style="list-style-type: none"> <li>• Allow the Auto Clean function to continue since it removes any remaining moisture inside the indoor unit. If you do not want this feature, you can turn the unit off.</li> </ul> |



| Problem                                                       | Possible Causes                                                                                                                                                                                                                                                                                                                          | Corrective Action                                                                                                                                                                                                                               |
|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The air outlet on the indoor unit is discharging mist.</b> | The cooled air from the air conditioner makes mist.                                                                                                                                                                                                                                                                                      | <ul style="list-style-type: none"> <li>When the room temperature decreases, this phenomenon will disappear</li> </ul>                                                                                                                           |
| <b>Water leaks from the outdoor unit.</b>                     | In the heating operations, condensed water drops from the heat exchanger.                                                                                                                                                                                                                                                                | <ul style="list-style-type: none"> <li>This symptom requires installing a drain hose under the base pan. Contact the installer.</li> </ul>                                                                                                      |
| <b>There is noise or vibration.</b>                           | <p>A clicking sound can be heard when the unit starts or stops due to movement of the reversing valve.</p> <p>Creaking sound: The plastic parts of the indoor unit creak when they shrink or expand due to sudden temperature changes.</p> <p>Flowing or Blowing sound: This is the flow of refrigerant through the air conditioner.</p> | <ul style="list-style-type: none"> <li>These are normal symptoms. The noise will stop.</li> </ul>                                                                                                                                               |
| <b>The indoor unit gives off an odor.</b>                     | Odors (such as cigarette smoke) may be absorbed into the indoor unit and discharged with airflow.                                                                                                                                                                                                                                        | <ul style="list-style-type: none"> <li>If the smell does not disappear, you need to wash the filter. If this does not work, contact the service center to clean your heat exchanger.</li> </ul>                                                 |
| <b>The air conditioner does not emit warm air.</b>            | When Heating Mode starts, the vane is almost closed, and no air comes out, even though the outdoor unit is operating.                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>This symptom is normal. Please wait until the unit has generated enough warm air to blow through the indoor unit.</li> </ul>                                                                             |
|                                                               | The outdoor unit is in Defrosting Mode.                                                                                                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>In Heating Mode, ice/frost is built up on the coils when the outside temperature falls. This function removes a layer of frost on the coil, and it should finish in approximately 15 minutes.</li> </ul> |
|                                                               | Outside temperature is too low.                                                                                                                                                                                                                                                                                                          | <ul style="list-style-type: none"> <li>The heating effect may not be sufficient.</li> </ul>                                                                                                                                                     |

**NOTE**

- Some functions may not be supported, depending on the model.







ENGLISH



