

SIMPLE MANUAL

Mini Hi-Fi Audio

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.


MODEL
OM5560



www.lg.com




Top panel

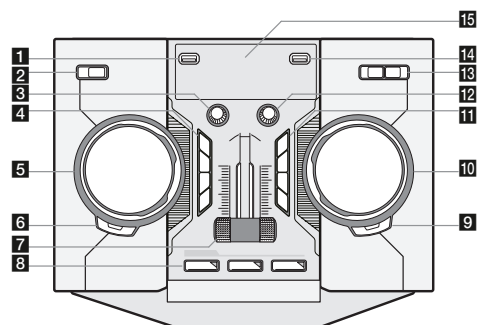


- 1** **USB 1 Port**
You can play or record sound files by connecting the USB device.
- 2** **⏻/⏻ (Standby/On)**
- 3** **MIC.** (Microphone volume)
Controls microphone's volume.
- 4** **VOICE CANCELLER**
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.
Press to switch this mode on or off.
KEY CHANGER (b/♯)
Changes the key to suit your vocal range.
LIGHTING / PARTY LINK
- Turns on/off the lighting effects.
- Press and hold to select the PARTY LINK.
- 5** **SCRATCH / LEVEL / SYNC SET**
Turn clockwise or counterclockwise to make Scratch sound. / Adjust DJ EFFECT level. / Sets Delay value in PARTY LINK mode.
- 6** **DJ EFFECT**
Selects DJ EFFECT mode.
USER EQ
Selects the sound effect created by your own.
- 7** **PARTY THRUSTER**
Slide the lever to create a party atmosphere.
- 8** **CLUB, DRUM, USER (DJ PRO)**
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)
1, 2, 3 (DJ PRO PAD)
Press a desired sound pad.

- 9** **SEARCH**
Moves to folder or file in selection mode.
OK
Selects a folder when searching a file.
- 10** **|<< , >>| & SEARCH (Skip/Search)**
- Searches a folder or a file.
- Searches for a section within a track/file.
- Selects the radio stations.
- 11** **>|| (Play/Pause)**
- Starts or pauses playback.
- Selects Stereo/Mono.
⏏ (Stop)
Stops playback or cancels DELETE function.
⏏ (Open/Close)
Opens and closes the disc tray.
REGION EQ / BASS BLAST
- Chooses region equalizer.
- Press and hold to select BASS effect directly.
- 12** **VOL. (Volume)**
Adjusts speaker volume.
- 13** **USB REC / DEMO**
Records to USB. / Shows Demo mode.
F (Function) / WIRELESS LINK
- Selects the function and input source.
- Press and hold for 3 seconds to select WIRELESS PARTY LINK mode.
- 14** **USB 2 Port**
You can play or record sound files by connecting the USB device.
- 15** **Display window**

Front panel / Rear panel

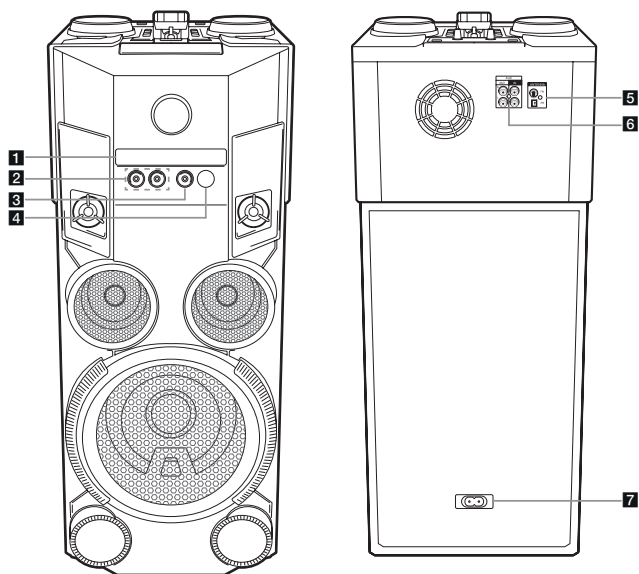

- 1** Disc tray
- 2** MIC (Microphone) 1 / 2 jack
- 3** PORT. IN
- 4**  Remote sensor

- 5** ANTENNA (FM, AM)
- 6** AUX IN / OUT
- 7** AC in socket

Controller App



Download the **Music Flow Bluetooth** App to your device.


LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit. Networked standby : 0.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 330 mm x 715 mm x 302 mm
Net Weight	Approx. 13.3 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	500 W

Design and specifications are subject to change without notice.

Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

