 


# SN7x USB F/W Update Guide - Preparation

- Preparation

1. SN7x Series Units : Main Unit
2. SN7x RCU
3. USB Memory
4. Update Files that downloaded from LG Site



**<Main Unit>**

*Necessary*



**<USB Memory>**

*for USB update*



**< RCU >**

*Necessary*

**※ Take care not to power off during update**

# SN7x USB F/W Update Guide – USB Update

## ● S/W Update Method

STEP 1 : Download Update Files(B/E and MICOM) from LG Web Site.

STEP 2 : Do Format USB memory with FAT32 or NTFS File System

※ These models can not support ExFAT File System

STEP 3 : Copy Update Files to USB Memory (Please copy Files in the Root of USB)

Update Module	File Name updated
B/E	MAIN_SN7_BAR_200727A.bin
MICOM	MICOM_SN7_BAR_2007020_FEA1_rev2705.bin

※ Update Files should exist only in USB Memory

STEP 4 : Insert USB Memory (USB Port in the back side of SET)

※ Never remove USB Memory and Power plug during update

STEP 5 : Press Function key to change function to USB

(Push Remote or SET Function key)


STEP 6 : Update start automatically

Display is changed to **B-UPDATE** → Update finish

→ \*Automatically Power off

STEP 7 : Power Cord Plug out

STEP 8 : Power Cord plug in and Power on

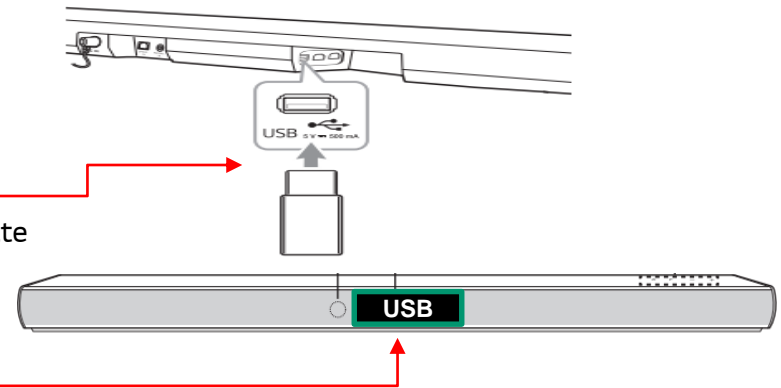

## # Caution:

- When downloading the file, you should neither unplug the USB device, change to the other function, nor power off the device.
- USB device must be unplugged when the downloading process is completed.

※ If security program (Water Wall) is activated on your PC, you must save the file to the USB storage device and disable the security software, then download the file to your set.