



SIMPLE MANUAL

Wireless Sound Bar

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODELS
LAS455H

LAC555H



ENGLISH

DEUTSCH

FRANÇAIS

NEDERLANDS

SLOVENŠČINA

ITALIANO

ESPAÑOL

ΕΛΛΗΝΙΚΑ

PORTUGUÊS

MAGYAR

ČEŠTINA

HRVATSKI

SRPSKI

SLOVENČINA

БЪЛГАРСКИ

МАКЕДОНСКИ

POLSKI

ROMÂNĂ

РУССКИЙ

LATVIEŠU


LIETUVIŲ

EESTI

www.lg.com



Front Panel

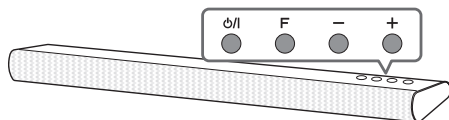

- Power On /Off
- Selects Function
- Adjusts Volume

1 Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of wireless subwoofer to the outlet.
- 2 Turn on the sound bar :
The sound bar and wireless subwoofer will be **automatically** connected. A yellow-green LED on the wireless subwoofer will light on.



If no sound is heard from the wireless subwoofer, please follow as below.


- i. Adjust volume level of sound bar to minimum. "VOL MIN" appears on display window.
- ii. Press and hold (Mute) button on the remote control about 3 seconds. "WL RESET" appears on display window and red LED on the sound bar blinks.
- iii. Press and hold **PAIRING** on the back of wireless subwoofer for more than 5 seconds using point of a pen.
- iv. Disconnect the power cord of the sound bar and the wireless subwoofer. Connect them again.

Controller App



Download the **Music Flow Bluetooth** App to your device.

Rear Panel

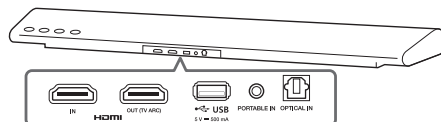


- HDMI IN Connect to a device
- HDMI OUT (TV ARC) Connect to a TV
- USB port Connect to a USB device
- PORTABLE IN Connect to a Portable device
- OPTICAL IN Connect to an Optical device

2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

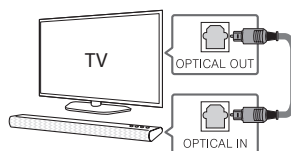

B HDMI(ARC) Connection

- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

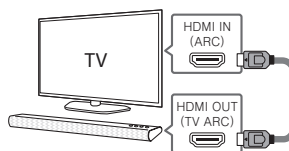


LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>


Additional Information





Specification

Power requirements	Refer to the main label.
	Refer to the main label.
Power consumption	Networked standby : 2.3 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 890 mm x 55 mm x 89 mm
Net Weight	Approx. 2.72 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	300 W

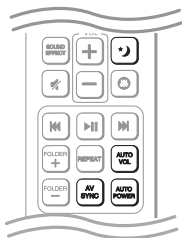Design and specifications are subject to change without notice.

Remote control




-  : Turns down the volume at night.
-  : Adjusts the volume level appropriately.
-  : Synchronizes the audio and video.
-  : Automatically turns on by an input source.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Replacement of battery

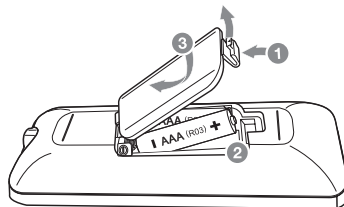

Declaration of Conformity

CE 0197

Hereby, LG Electronics European Shared Service Center B.V. declares that this Wireless Sound Bar is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.
European Standard Team
Krijgsman 1
1186 DM Amstelveen
The Netherlands

or can be requested at our dedicated DoC website:

<http://www.lg.com/global/support/cedoc/cedoc#>

This device is a 2.4 GHz wideband transmission system, intended for use in all EU member states and EFTA

