

Color Video Camera

Please read this manual carefully before operating your set and retain it for future reference.

LCZ2850-DN/LCZ2850-DP LCZ2850 Series



Important Safety Instructions

- Read these instructions. Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-ove



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

REGULATORY INFORMATION: FCC Part 15

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense

Power Supply

This camera must always be operated a DC 12 V Certified/Listed, class 2 power supply only.

Handling of the unit

Be careful not to spill water or other liquids on the unit. Be cautions not to get combustible or metallic material inside the body. If used with foreign matter inside, the camera is liable to fail or to get cause of fire or electric shock.

- Remove dust or dirt on the surface of the lens with a blower.
- Use a dry soft cloth to clean the body. If it is very dirty, use a cloth dampened with a small quantity of neutral detergent then wipe dry.
- Avoid the use of volatile solvents such as thinners, alcohol, benzene and insecticides. They may damage the surface finish and/or impair the operation of the camera.

Operating and storage location

Avoid viewing a very bright object (such as light fittings) during an extended period. Avoid operating or storing the unit in the following locations.

- Extremely hot or cold places (operating temperature -10 °C to 50 °C, however, we recommend that the unit be used within a temperature range of 0 $^{\circ}\text{C}$ to 45 $^{\circ}\text{C}$)
- Damp or dust place
- · Places exposed to rain
- · Places subject to strong vibration
- · Close to generators of powerful electromagnetic radiation such as radio or TV

- A suitable conduit entries, knock-outs or glands shall be provided in the cable entries of this product in the end user.
- Holes in metal, through which insulated wires pass, shall have smooth well rounded surfaces or shall be provided with brushings.

Warning: Do not install this equipment in a confined space such as a bookcase or similar unit. Warning: Wiring methods shall be in accordance with the National Electric Code, ANSI/NFPA 70.

Warning: This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warning: To reduce a risk of fire or electric shock, do not expose this product to rain or moisture. Caution: This installation should be made by a qualified service person and should conform to all

Caution: To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel

Caution: The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus

Caution: It is permitted to use ancillary equipment (e.g. A UPS) to prevent the damage from mains supply voltage reductions.

Disposal of your old appliance



- This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream
- Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
- You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see <u>www.lg.com/global/recycling</u>

Herald Way Pegasus Business Park Castle Donington, DE74 2TZ United Kingdom


Specification

| Item LC | | LCZ2850-DP | |
|---|--|---|--|
| system | NTSC | PAL | |
| s number | 520 000 Pixels 610 000 Pixels | | |
| els number | 480 000 Pixels | 570 000 Pixels | |
| Device | 4.5 mm (1/4 Type) Super HAD CCD II | | |
| Signal System Total Pixels number Effective Pixels number Image Device ISP Lens Digital Zoom IRIS Control Sync. System Scanning Frequency (H/V) Horizontal Resolution S/N Ratio Minimum B / W Illumination Video Output Signal Day & Night | XDI-II | | |
| ns | x28 Zoom, F 1.5 (Wide | de End), F 3.7 (Tele End) | |
| Zoom | X | 12 | |
| nal System ixels number Pixels number ge Device ISP Lens ital Zoom S Control ic. System Frequency (H/V) on B / W Color Output Signal | AUTO / MANUAL | | |
| ystem | Internal | | |
| quency (H/V) | 15.734 kHz / 59.94 Hz | 15.625 kHz / 50 Hz | |
| Resolution | 600 TV Lines | | |
| atio | 52 dB | | |
| B/W | 0.01 lx (Sens-up OFF), 0.000 01 lx (Sens-up ON) | | |
| Color | 0.2 lx (Sens-up OFF), 0.003 lx (Sens-up ON), | | |
| out Signal | 1 Vp-p Composite (75 Ω) | | |
| Day & Night | | NIGHT / EXT | |
| ight | WDR / BLC / HSBLC / OFF | | |
| IR | 3D-DNR (Off/Low/Middle/High) | | |
| | bystem s number els number Device P ns Zoom Ontrol system quency (H/V) Resolution latio B / W Color Out Signal Night | System NTSC s number 520 000 Pixels els number 480 000 Pixels Device 4.5 mm (1/4 Type) P XD ASS 28 Zoom, F 1.5 (Wide Zoom X Dentrol AUTO / I System Inter Quency (H/V) 15.734 kHz / 59.94 Hz Resolution 52 B / W 0.01 lx (Sens-up OFF), 0 Color 0.2 lx (Sens-up OFF), 0 Dut Signal 1 Vp-p Comp Night AUTO / DAY / B ight WDR / BLC / | |

| Item | LCZ2850-DN | LCZ2850-DP | |
|--------------------------|--------------------------------|-------------------|--|
| Electronic Shutter Speed | 1/60 to 1/120 000 | 1/50 to 1/120 000 | |
| White Balance | AUTO / ATW / ONE PUSH / MANUAL | | |
| Control Method | RS-485 | | |
| Power Source | DC 12V | | |
| Power Consumption | 3.6 W | | |
| Operation Temperature | re | | |
| Storage Temperature | | | |
| Operation Humidity | | | |
| Storage Humidity | | | |
| Weight | | | |
| Dimension (H x V x D) | | | |

Installation -

1. Install the camera and mounting bracket securely.

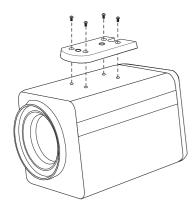

<ITALIANO> Montare la videocamera alla staffa in maniera sicura.

<ESPAÑOL> Monte la cámara y el soporte.


PORTUGUÊS> Instale a câmera e o suporte de montagem firmemente.

<PYCCKNЙ> Надежно установить камеру и монтажный кронштейн.

<TÜRKÇE> Kamera ve kamera bağlantı parçasını sağlam bir şekilde monte edin.



2. Install the camera and mounting arm.

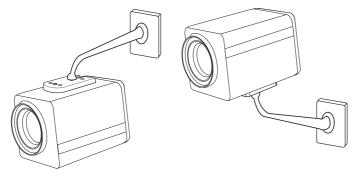

<ITALIANO> Montare la videocamera al braccio. <ESPAÑOL> Monte la cámara y el brazo de soporte. <PORTUGUÊS> Instale a câmera e o braço de montagem.

<TÜRKÇE> Kamera ve kamera bağlantı parçası kolunu monte edin.

Установить камеру и монтажный кронштейн.

Wire Color

3 WHITE

4 RED

5 BLUE

6 BROWN ORANGE

8 VIOLET


BLACK

9 GRAY

1 GREEN

YELLOW

3. The video signal connection between the camera and the monitor or DVR.

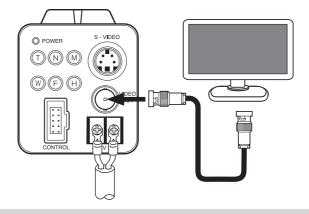


Il collegamento del segnale video tra la videocamera e il monitor o il

<ESPAÑOL> La conexión de señal de video entre la cámara y el monitor o un DVR.

<PORTUGUÊS> A ligação do sinal de vídeo entre a câmara e o monitor ou DVR.

Передача видеосигнала с камеры на монитор или цифровой <PYCCKNЙ>

<TÜRKÇE> Kamera ve monitör veya DVR arasındaki video sinyal bağlantısı. 4. Connect to the 12 V DC UL Listed, Class 2 Power Supply only on the

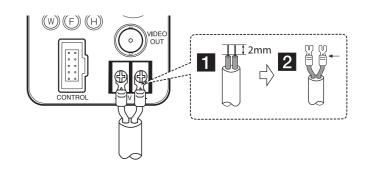

Collegare ad alimentazione di energia a CC 12 V UL indicata, Classe 2 <ITALIANO>

Conecte a la alimentación eléctrica de 12 VCD en lista UL, de Clase 2 <ESPAÑOL>


Ligue ao DC 12 V UL listado, fornecimento de energia Classe 2 apenas <PORTUGUÊS>

Подключите камеру к сертифицированному источнику питания <PYCCKNЙ> постоянного тока класса напряжением 12 В.

Kameranın bağlantısını sadece 12V AA DA UL Sınıf 2 güç kaynağı ile <TÜRKÇE>

Connections

You can control the PTZ and RS-485 by a pin terminal on the back side of the camera.

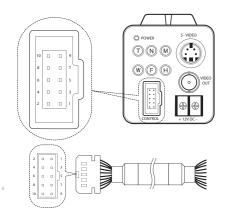

| <italiano></italiano> | È possibile controllare il PTZ e RS-485 da un terminale perno sul lato posteriore della telecamera. |
|-----------------------|---|
| <español></español> | Se puede controlar el PTZ y RS 485-por un terminal de clavija en el |

É possível controlar a PTZ e RS-485 por um terminal de pino do lado <PORTUGUÊS> de trás da câmara. Вы можете управлять РТZ и RS-485 контактный разъем на задней <PYCCKNЙ>


Kameranın arka tarafında bir pin terminal ile PTZ ve RS-485 kontrol <TÜRKCE>

| CN312 | | | | |
|-------|----------|--------------------|--|--|
| 1 | ZOOM | | | |
| 2 | COM | ZOOM & FOCUS | | |
| 3 | FOCUS | DC Control | | |
| 4 | MENU/HOT | | | |
| 5 | AD2 | A/D Key 2 Input | | |
| 6 | AD1 | A/D Key 2 Input | | |
| 7 | NC | | | |
| 8 | TR- | For RS-485 Control | | |
| 9 | TR+ | | | |
| 10 | GND | Common GND | | |


* is the color of the cable. (If it is offered)

RS-485 Connect


<PYCCKNЙ>

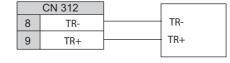

RS-232C TTL Connect (Option)

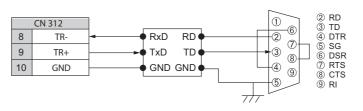

Zoom & Focus DC Control connect

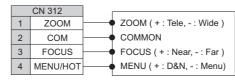

Receiver Unit / Controller

+ Vcom + (6V~12V)

Vcom - (6V~12V)

Additional Information

RS-485 Protocol(Optional)

Data Communication Format • Data Length: 1 Byte (8 Bit)

Start/Stop Bit: 1 Bit

· Parity Bit: None

• Baud rate: 9 600 bps

Format

| BYTE1 | BYTE2 | BYTE3 | BYTE4 |
|-------|-------|-----------|-------|
| 0xE5 | 0x87 | Camera ID | 0x60 |
| | | | |
| BYTE5 | BYTE6 | BYTE7 | |

*C.S.

Key IN or Key Out *C.S. = Check Sum

- The data of total 6 bytes is transmitted from the external RS-485 device to the camera.
- BYTE 7 : The value of Check Sum from 'BYTE 1 ' to 'BYTE 6 '.