



ENGLISH

FRANÇAIS

PORTUGUÊS

SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download
Owner's Manual. Some of the content in this manual may differ from your unit.

 
MODEL
CK99



www.lg.com
Copyright © 2018 LG Electronics Inc. All Rights Reserved.
1807_Rev02



Top Panel

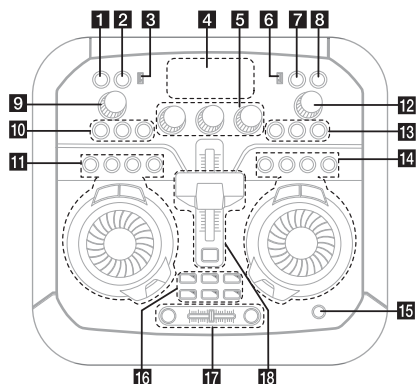

- 1** (Standby)
Turns the power on or off.
- 2** **USB REC / DEMO**
- Records to USB 1.
- To stop Recording, press and hold for 3 seconds.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.
- 3** **USB 1 Port**
You can play sound files by connecting the USB device.
- 4** Display window
- 5** **TEMPO A -/+**
Adjusts TEMPO in USB 1 function.
MASTER VOL. (Volume) -/+
Adjusts speaker volume.
TEMPO B -/+
Adjusts TEMPO in USB 2 function.
- 6** **USB 2 Port**
You can play sound files by connecting the USB device.
- 7** **F (Function)**
- Selects the function and input source.
- Press and hold to select the PARTY LINK.
- 8** **WIRELESS LINK**
- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.
- 9** **MIC (Microphone) VOLUME -/+**
Adjusts microphone volume.
- 10** **VOCAL EFFECTS**
Selects VOCAL EFFECTS mode.
MIC ECHO
Selects ECHO mode.
VOICE CANCELLER
You can reduce the vocal tones during music playback from various input sources.

- 11** Side 1 / Basic controls (CD / USB 1 / BLUETOOTH / RADIO only)

(Stop)
Stops playback or cancels DELETE function.

(Skip/Search)
- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.

(Play/Pause)
- Starts or pauses playback.
- Selects stereo/mono.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

DJ SCRATCH / SEARCH & LEVEL

- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the USER EQ level.
- Searches a folder or a file.
- Adjusts DJ EFFECT level.
- Selects vocal effects.

USER EQ

Selects the equalizer created by your own.

DJ EFFECT

Selects a desired DJ EFFECT.

DJ LOOP

Selects DJ LOOP mode.
(DJ LOOP mode can use during CD/USB playback.)

- 12** **H/P (Headphone) VOLUME -/+**
Adjusts headphone volume.

- 13** **KEY CHANGER (b/#)**

Changes the key to suit your vocal range.

H/P (Headphone) MODE

Press to select a headphone monitor mode.

- 14** Side 2 / Basic controls (USB 2 only)

(Stop)
Stops playback or cancels DELETE function.

(Skip/Search)
- Skips backward or forward.
- Searches for a section within a track/file.

(Play/Pause)
Starts or pauses playback.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

DJ SCRATCH / SEARCH & MULTI

- Turns clockwise or counterclockwise to make scratch sound.
- Searches a folder or a file.
- Selects the lighting effects.

DJ LOOP

Selects DJ LOOP mode.

(DJ LOOP mode can use during USB playback.)

SPECIAL EQ / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.
- Press and hold to select BASS BLAST (or BASS BLAST+) effect directly.

LIGHTING

Selects lighting mode.

15 (Open/Close)

Opens and closes the disc tray.

16 CLUB, DRUM, USER (DJ PAD)

Selects CLUB, DRUM or USER sound effect to mix.

(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

1, 2, 3, 4, 5, 6 (DJ PAD)

Press a desired sound pad.

17 AUTO SYNC

When using MIX, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.

MIX

Mixes audio sound.

Cross fader

Move the cross fader to adjust the sound volume of mixed sound when using MIXER ON.

 
18 PARTY ACCELERATOR lever

Slide the lever to create a party atmosphere.

PARTY ACCELERATOR MODE

Selects PARTY ACCELERATOR MODE.

Front Panel

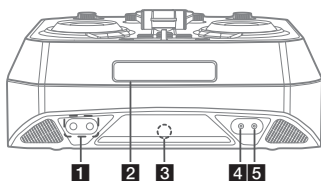

1 MIC (Microphone) 1/2 jack

 
2 Disc tray

3  (Remote sensor)


4 PORT. (Portable) IN jack

5 H/P (Headphone) jack

Speaker Connection

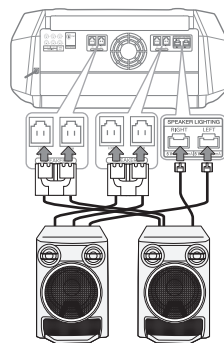

Rear Panel

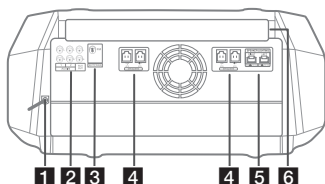 

1 Power cord

2 AUX IN 1/2 (L/R)

AUX OUT (L/R)

3 ANTENNA (FM)


4 SPEAKERS connector

5 SPEAKER LIGHTING
Connect the speaker lighting cables.

6 Lighting LED

Additional Information


Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 470 mm x 213 mm x 423 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	5,000 W RMS

Design and specifications are subject to change without notice.

Additional Information

 Replacement of battery

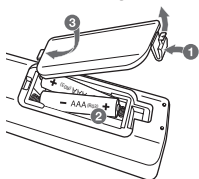

Caution

- When you use the multiple socket, it is advisable to use 15 A socket. 10 A socket may cause power off due to lack of power supply.
- Do not place objects on the speakers. It may cause the objects to fall and make property damage.
- Install the speakers on a firm surface not to slide. The vibration caused by the strong output can shake and move the speakers.
- Avoid turning up max volume in a small enclosed space. The powerful and intense output of the speakers can shake the ceiling and get the objects in the room falling.
- To protect from hearing damage, keep the sufficient distance from the speaker. The overwhelming sound from the speaker may cause a person's hearing damage.
- Allow more than 20 cm of free space between the main set and the speakers when you install the main set on the ground. High sound pressure from the speakers can make the set tremble to disturb the CD playback.
- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Grounding

(Except for devices which are not grounded.) Ensure that you connect the earth ground wire to prevent possible electric shock (i.e. a Audio with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet). If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>