

SIMPLE MANUAL

Mini Hi-Fi Audio

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
OM7560

 


www.lg.com

Copyright © 2017 LG Electronics Inc. All Rights Reserved.



Top panel

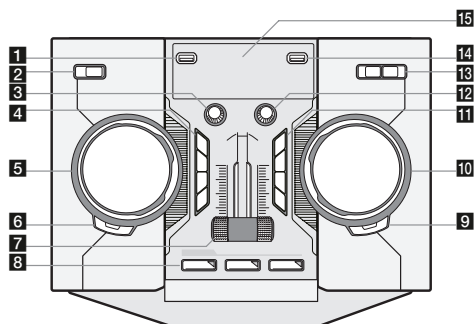

1 USB 1 Port
You can play or record sound files by connecting the USB device.

2 **⏻/⏻** (Standby/On)

3 **MIC.** (Microphone volume)
Controls microphone's volume.

4 **VOICE CANCELLER**

- You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.
- Press to switch this mode on or off.

KEY CHANGER (b/*)

Changes the key to suit your vocal range.

LIGHTING / PARTY LINK

- Turns on/off the lighting effects.
- Press and hold to select the PARTY LINK.

5 **SCRATCH / LEVEL / SYNC SET**

Turn clockwise or counterclockwise to make Scratch sound.
/ Adjust DJ EFFECT level. / Sets Delay value in PARTY LINK mode.

6 **DJ EFFECT**

Selects DJ EFFECT mode.

USER EQ

Selects the sound effect created by your own.

7 **PARTY THRUSTER**

Slide the lever to create a party atmosphere.

8 **CLUB, DRUM, USER (DJ PRO)**

Selects CLUB, DRUM or USER sound effect to mix.

(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)

1, 2, 3 (DJ PRO PAD)

Press a desired sound pad.

9 **SEARCH**

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

10 **|<< , >>| & SEARCH (Skip/Search)**

- Searches a folder or a file.
- Searches for a section within a track/file.
- Selects the radio stations.

11 **>|| (Play/Pause)**

- Starts or pauses playback.
- Selects Stereo/Mono.

□ (Stop)

Stops playback or cancels DELETE function.

△ (Open/Close)

Opens and closes the disc tray.

REGION EQ / BASS BLAST

- Chooses region equalizer.
- Press and hold to select BASS effect directly.

12 **VOL. (Volume)**

Adjusts speaker volume.

13 **USB REC / DEMO**

Records to USB. / Shows Demo mode.

F (Function) / WIRELESS LINK

 
- Selects the function and input source.
- Press and hold for 3 seconds to select WIRELESS PARTY LINK mode.


14 **USB 2 Port**


You can play or record sound files by connecting the USB device.

15 **Display window**

Front panel / Rear panel

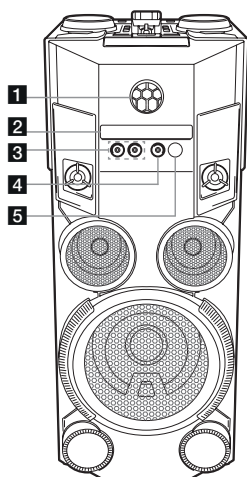

 - 1 DANCE LIGHTING** (Lighting ball)
 - Shows the various lighting patterns and color.
 - You can control angle up and down with your finger.
- 2** Disc tray
- 3** MIC (Microphone) 1 / 2 jack
- 4** PORT. IN
- 5**  Remote sensor

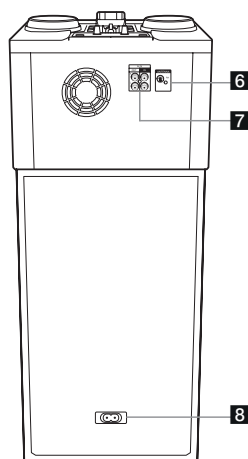

- 6** ANTENNA (FM)
- 7** AUX IN / OUT
- 8** AC in socket

Controller App



Download the **Music Flow Bluetooth** App to your device.


LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330 mm x 815 mm x 302 mm
Net Weight	Approx. 16.8 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,000 W RMS

Design and specifications are subject to change without notice.

 
Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

Replacement of battery

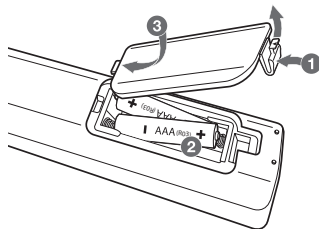

Industry Canada Statement

This device complies with Industry Canada's applicable licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3 (B)

IC Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20 cm (7.8 inches) between the antenna & your body.

OTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

WARNING

[For product having the wireless function using 5 GHz frequency bands]

- (i) the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the bands 5250–5350 MHz and 5470–5725 MHz shall be such that the equipment still complies with the e.i.r.p. limit;
- (iii) for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725–5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits specified for point-to-point and non-point-to-point operation as appropriate; and
- (iv) the worst-case tilt angle(s) necessary to remain compliant with the e.i.r.p. elevation mask requirement set forth in Section 6.2.2(3) shall be clearly indicated. (devices operating in the band 5250–5350 MHz with a maximum e.i.r.p. greater than 200 mW)
- (v) High-power radars are allocated as primary users (i.e. priority users) of the bands 5250–5350 MHz and 5650–5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.



LG Customer Information Center
Centre d'information à la clientèle de LG

1-888-542-2623 CANADA

Register your product Online!
Enregistrez votre produit en ligne!

www.lg.com