


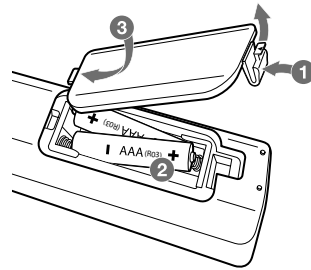 
## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 163 mm x 251 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	720 W RMS


Design and specifications are subject to change without notice.

### Replacement of battery



**POWER:** This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



## SIMPLE MANUAL

# Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
CJ45

 


[www.lg.com](http://www.lg.com)

Copyright © 2017 LG Electronics. All Rights Reserved




## Front Panel

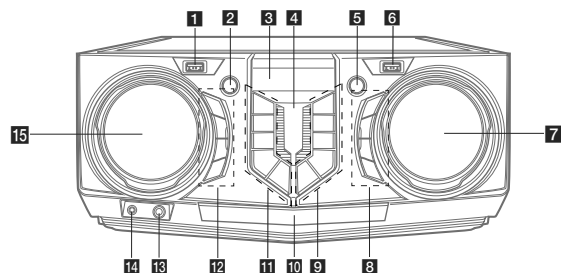


- 1** USB 1 Port  
You can play sound files by connecting the USB device.
- 2** (Standby)  
Turns the power on or off.
- 3** Display window
- 4** (Remote sensor)
- 5** **WIRELESS LINK**  
- Selects MASTER or SLAVE on WIRELESS PARTY LINK mode.  
- Enable or disable WIRELESS PARTY LINK mode.
- 6** USB 2 Port  
You can play sound files by connecting the USB device.
- 7** **VOLUME**  
Adjust speaker volume.
- 8** **MIC** (Microphone) +/-  
Adjust microphone volume.  
**VOICE CANCELLER**  
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.  
**ECHO**  
Selects ECHO mode.
- 9** **F** (Function)  
Selects the function and input source.  
▶|| (Play/Pause)  
- Starts or pauses playback.  
- Selects stereo/mono.  
▶▶I (Skip/Search)  
- Skips forward.  
- Searches for a section within a track/file.  
- Selects the radio stations.  
**KEY CHANGER ( # / b )**  
Changes the key to suit your vocal range.
- 10** Disc tray
- 11** **USB REC / DEMO**  
- Records to USB.  
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.  
 (Stop)  
Stops playback or cancels DELETE function.  
I<< (Skip/Search)  
- Skips backward.  
- Searches for a section within a track/file.  
- Selects the radio stations.  
△ (Open/Close)  
Opens and closes the disc tray.  
**AUTO DJ**  
Selects the AUTO DJ mode.
- 12** **SOUND EFFECT**  
Chooses sound impressions.  
**REGION EQ / BASS BLAST**  
- Chooses region equalizer.  
- Press and hold to select BASS effect directly.  
**SEARCH**  
Moves to folder or file in selection mode.  
**OK**  
Selects a folder when searching a file.
- 13** **MIC** (Microphone) jack
- 14** **PORT.** (Portable) **IN** jack
- 15** **SEARCH**  
- Searches a folder or a file.  
- Turns clockwise or counterclockwise to control the SOUND EFFECT, REGION EQ mode.

## Rear Panel

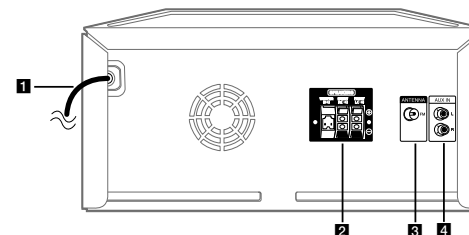 

- 1** Power cord
- 2** **SPEAKERS** connector/terminals
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R)  
Connect an auxiliary device.

## Speaker Connection

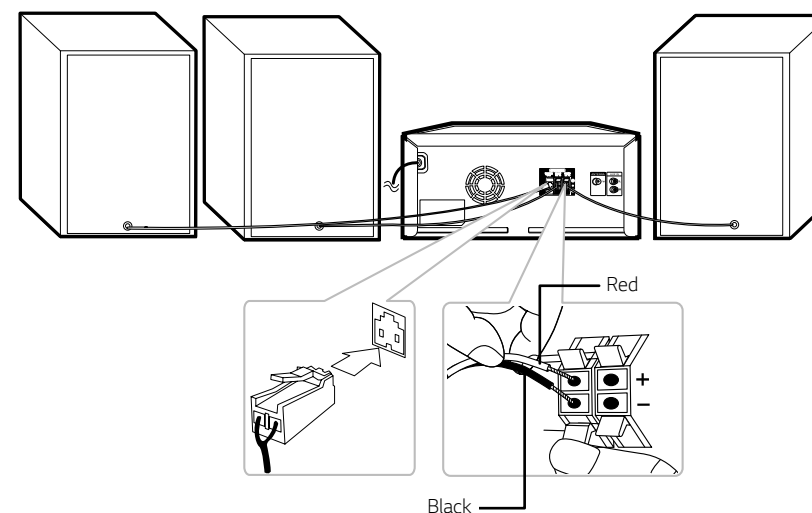 

### Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>