

Additional Information

Specification


| Power requirements | Refer to main label. |
|------------------------------------------|----------------------------------------------------------------------|
| | Refer to main label. |
| Power consumption | Networked standby: 0.4 W (If all network ports are activated.) |
| Dimensions (W x H x D) | Approx. 360 mm x 60.5 mm x 299 mm |
| Net Weight | Approx. 2.69 kg |
| Bus Power Supply (USB) | 5 V === 500 mA |
| Amplifier (Total RMS output power) | 1,000 W |

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

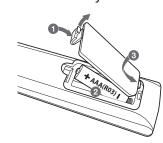





To view the instructions of advanced features, visit http://www.lg.com and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL LHD675





www.lg.com






Front Panel




Speaker Connection

Speaker design and connection method may be different according to models.

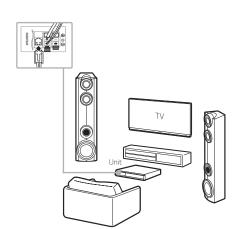

Rear Panel

 

SPEAKERS Connect to speakers.

HDMI OUT TO TV Connect to TV.

AUX (L/R) INPUT Connect to analogue device.

VIDEO OUT Connect to TV.

OPTICAL IN Connect to digital device.

ANTENNA FM ... Connect to radio antenna.

TV Connection

 
HDMI & Optical Connection

- 1 Connect the Player to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

3 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.





LG Sound Sync (Wireless)



For more information, download the online owner's manual. http://www.lg.com

