



user guide LM-X600IM

Copyright ©2019 LG Electronics Inc. All rights reserved

MBM672583021(1.0)

www.lg.com

	1.	General Information3	
1.1		Profile and Safety Precaution	3
1.2		Safety Warning and Attentions	4
1.3		Battery Information and Care	5
	2.	Your Phone6	
2.1		Phone Overview	6
2.2		Functions of Keys	
2.3		Functions of icons	6
2.4		Status Icon	6
2.5		Product Components and Accessories	7
	3.	Getting started7	
3.1		Installing the SIM Card & Memory Card	7
3.2		Charging the Battery	
3.3		Linking to the Networks and devices	8
3.4		Using the Touch Screen	9
3.5		Using the onscreen keypad	9
3.6		Dialing Calls	. 10
	4.	Using the Menus10	
4.1		Calculator	. 10
4.2		Calendar	. 10
4.3		Camera	. 10
4.4		Chrome	. 16
4.5		Clock	16
4.6		Contacts	. 17
4.7		Google Docs	. 17
4.8		Google Drive	. 17
4.9		Google Duo	. 18
4.10)	Files	. 18
4.11	L	FM Radio	
4.12	2	Gmail	. 18
4.13		Google	
4.14		Keep Notes	
4.15		Google Maps	
4.16		Messages	
4.17		News	
4.18		Phone	
4.19		Google Photos	
4.20		Google Play Movies & TV	
4.21		Google Play Music	
4.22		Google Play Store	
4.23		Settings	
4.24		SIM Teallit	
4.25 4.26		SIM Toolkit	
4.20 4.27		Slides	
4.2	1	Sound Veronaei	. 21

4.28	YouTube	27
4.29	Google Assistant	27
5	Appendix	
5.1	FAQ	28
5.2	Phone software update	30
5.3	Disposal of Your Old Appliance (As per e-waste rule)	30
5.4	Open Source Software Notice Information	31
5.5	Regulatory information (Regulation ID number, BIS Mark, E-Labeling etc.)	31
5.6	LG Bridge	31
5.7	Customer Information Center	31
5.8	Trademarks	32

1. General Information

1.1 **Profile and Safety Precaution**

Please read this pamphlet carefully in order to make your phone in perfect condition.

Our company may change this mobile phone without prior written notice and reserves the final right to interpret the performance of this mobile phone.

Due to different software and network operators, display on your phone may be different, refer to your phone for details.

Please read the following guidelines regarding the use of your phone. Not following them maybe dangerous or illegal.

Certification information (SAR)

Our phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines.

SAR (Specific absorption rate) is the unit of measurement of body-absorbed RF quantity when phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests. The true SAR level during phone usage will be far lower than this level. The SAR value of phone may change depending on factors such as how close you are to a network base station, use of accessories and other enhancement. The SAR value may differ depending on national reporting, testing requirements and the network band.

The highest SAR value of the device at the head and body are 0.411 W/Kg and 0.768 W/Kg respectively averaged over 1 gm of human issue. Permitted SAR Values for a mobile phone is 1.6W/Kg (1g)

SAR Recommendations

- 1. Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.
- 2. Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.
- 3. Prefer to use your cell phone when the signal quality is good.
- 4. People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.
- 5. Maintain a preferable distance of 15 mm from the device.
- 6. Maximum operating temperature is 35° degree Celsius

1.2 Safety Warning and Attentions

Safety Warning

Road Safety Comes First

Do not use a hand-held phone while driving. Use hands-free fittings when calls are unavoidable while driving. In some countries, dialing or receiving calls while driving is illegal!

Switch Off in Aircraft

Wireless devices can cause interference in aircraft. Using a mobile phone in flight is illegal and risky.

Please make sure that your mobile phone is powered off in flight.

Switch Off Before Entering Risky Areas

Strictly observe the relevant laws, codes, and regulations on the use of mobile phones in risky areas. Turn off your mobile phone before entering a place susceptible to explosion, such as an oil station, oil tank, chemical plant or a place where a blasting process is under way.

Observe All Special Regulations

Follow any special regulations in force in any area such as hospitals and always switch off your phone whenever it is forbidden to use it or, when it may cause interference or danger. Properly use your mobile phone near medical apparatuses, such as pacemakers, hearing aids and some other electronic medical devices, as it may cause interference to such apparatuses.

Interference

The conversation quality of any mobile phone may be affected by radio interference. An antenna is built inside the mobile phone and located below the microphone. Do not touch the antenna area during a conversation, lest that the conversation quality deteriorate.

Qualified Service

Only qualified personnel may install or repair phone equipment. Installing or repairing the mobile phone on your own may bring great danger and violates the warranty rules.

Accessories And Batteries

Use only approved accessories and batteries.

Use Sensibly

Use only in a normal and proper manner.

Emergency Calls

Ensure the phone is switched on and in service, enter the emergency number, e.g. 112, then press the Dial key. Give your location and state your situation briefly. Do not end the call until told to do so.

Note: Just like all other mobile phones, this mobile phone does not necessarily support all the features described in this manual due to network or radio transmission problems. Some networks even do not support the emergency call service. Therefore, do not rely solely on the mobile phone for critical communications such as first aid. Please consult the local network operator.

Attentions

This mobile phone is well designed with fine art. Please exercise special care when using it. The following suggestions will help your mobile phone survive the warranty period and extend its service life:

1. Keep the mobile phone and all its fittings beyond children's reach.

2. Keep the mobile phone dry. Keep away from rain, moisture, liquid or other

substances that may corrode electronic circuits.

- 3. Do not use or store the mobile phone in dusty places, lest that active parts of the mobile phone be damaged.
- 4. Do not store the mobile phone in a high-temperature place. High temperature will shorten the life of electronic circuits and damage the battery and some plastic parts.
- 5. Do not store the mobile phone in a chilly place. Otherwise, moistures will be formed inside the mobile phone to damage electronic circuits when the mobile phone is moved to a constant temperature place.
- 6. Do not throw, knock or shock the mobile phone, as that will destroy the internal circuits and high-precision components of the mobile phone.
- 7. Use your device in temperature between 0 °C to 35 °C, if possible. Exposing your device to extremely low or high temperatures may result in damage, malfunction or even explosion.

1.3 Battery Information and Care

- 1. You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- 2. Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- 3. Do not disassemble or short-circuit the battery.
- 4. Keep the metal contacts of the battery clean.
- 5. Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- 6. Recharge the battery if it has not been used for a long time to maximize usability.
- 7. Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- 8. Do not leave the battery in hot or cold places, as this may deteriorate battery performance.
- 9. Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
- 10. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- 11. Always unplug the charger from the wall socket after the device is fully charged to save unnecessary power consumption of the charger.
- 12. Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.
- 13. Make sure that no sharp-edged items such as animal's teeth or claws, come into contact with the battery. This could cause a fire.

WARNING! Notice for Battery Replacement

- 1. Do not remove the back cover.
- 2. Your device has an internal battery. For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- 3. The Li-Ion Battery is a hazardous component which can cause injury.
- 4. Battery replacement by non-qualified professional can cause damage to your device.

2. Your Phone

2.1 Phone Overview

Please have a look at phone image below.



2.2 Functions of Keys

The mobile phone provides the following keys:

> Power Key

Power key situates at the right side of the phone. While using the phone, you can press this key to lock screen; if you press and hold this key, a phone-options dialog would pop out. Here, you can select to Power off or Restart or Screenshot or Emergency.

> Volume key

Volume key situates at the right side of the phone. You can press it to adjust ringer volume.

2.3 Functions of icons

> Home key

Touch it to open home screen.

Back key

Touch this icon to return to the previous screen;

Note: - To check recent app, swipe up on Home key.

2.4 Status Icon

When there is a notification for an unread message, calendar event or alarm, the status bar displays the corresponding notification icon. Check your device's status

by viewing notification icons displayed on the status bar.

	No signal
4g + t	Data is being transmitted over the network
Ö	Alarm is set
u[]u	Vibrate mode is on
*	Bluetooth is on
Ŷ	Connected to a computer via USB
	Battery level
Ŧ	Airplane mode is on
č	Missed calls
•	Wi-Fi is connected
×	Mute mode is on
•	GPS is on
(:	Hotspot is on
	No SIM card
-	

Note: - Some of these icons may appear differently or may not appear at all, depending on the device's status. Refer to the icons according to the actual environment and area in which you are using the device and your service provider.

2.5 Product Components and Accessories

The Following items are included with your device.


- 1. Device
- 2. Charger
- 3. USB Cable
- 4. Quick Start Guide
- 5. Warranty Card
- 6. Ejection Pin

3. Getting started

3.1 Installing the SIM Card & Memory Card

You must insert the SIM/SD card before using the phone.

- 1. Switch off the mobile phone.
- 2. Remove SIM/SD card tray as instructed in figure below.
- 3. Insert the SIM/SD card in relevant slot as shown in figure below.

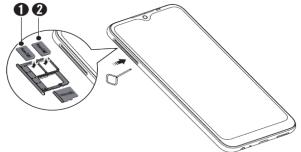

Note: The SD card is a miniature object. Keep it out of the reach of children for avoid children swallow it.

3.2 Charging the Battery

Your phone is powered by a rechargeable battery. If your phone comes up a message which notifies you that the battery power is too low, at that moment, please recharge the battery. Connect the charger to a power outlet and the micro USB connector to the phone's USB port. The LED flashlight on the top of the phone is red. Once the phone has finished charging, the light turns green and you should unplug the charger.



3.3 Linking to the Networks and devices

Your phone can connect to a variety of networks and devices, including mobile networks for voice and data transmission, Wi-Fi data networks, and Bluetooth devices, such as headsets. You can also connect your phone to a computer, to transfer files from your phone's SD card and share your phone's mobile data connection via USB.

Connecting to Mobile Network

When you assemble your phone with a SIM card, your phone is configured to use your provider's mobile networks for voice calls and for transmitting data. **Connecting to Wi-Fi networks**

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Tap on Settings>Network & Internet>Wi-Fi

Check Wi-Fi to turn it on. The phone scans for available Wi-Fi networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.

Note: If the phone finds a network that you connected to previously, it connects to it automatically.

Touch a network to connect to it. If the network is open, you are prompted to confirm that you want to connect to that network by touching Connect. If the network is secured, you're prompted to enter a password or other credentials.

Connecting to Bluetooth devices

Bluetooth is a short-range wireless communications technology that devices can use to transfer information over a distance of about 8-10 meters. The most common Bluetooth devices are headphones for making calls or listening to music, hands-free kits for cars, and other portable devices, including laptops and cell phones.

Tap on Settings>Connected Devices> Bluetooth Check Bluetooth to turn it on.

You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpaired them. Your phone scans for and displays the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, make it discoverable.

Connecting to a computer via USB

Once the mobile phone is connected to a PC with USB, the PC will charge the mobile phone automatically. In such case, USB computer connection will appear on your screen.

1. Drag the notification panel down and tap Charging this device via USB.

2. Select Use USB for File Transfer.

3. The device is recognized as a Removable Disk by the computer. Open the folder and transfer or copy files from your phone to PC and vice-versa.

3.4 Using the Touch Screen

Touch-screen tips

> Touch

To act on items on the screen, such as application and settings icons, to type letters and symbols using the onscreen keyboard, or to press onscreen buttons, you simply touch them with your finger.

> Touch & hold

Touch & hold an item on the screen by touching it and not lifting your finger until an action occurs. For example, to open a menu for customizing the Home screen, you touch an empty area on the Home screen until the menu opens.

Drag

Touch & hold an item for a moment and then, without lifting your finger, move your finger on the screen until you reach the target position.

Swipe or slide

To swipe or slide, you quickly move your finger across the surface of the screen, without pausing when you first touch it (so you don't drag an item instead). For example, you slide the screen up or down to scroll a list.

Lock screen

When Screen lock in Security setting is enabled, press Power key to lock the handset. This helps to prevent accidental touching of keys and as well as power saving. When Sleep function in Display setting is enabled, after the handset device has been idle for preset period, the screen will be locked automatically to save power.

Unlock screen

Press Power key to switch on the handset device. The lock screen appears. Touch and slide to up to unlock screen if there is no security lock.

3.5 Using the onscreen keypad

You enter text using the onscreen keyboard. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard.

To enter text

Touch a text field, and the onscreen keyboard opens. Some applications open the keyboard automatically. In others, you touch a text field where you want to enter text to open the keyboard.

Touch the keys on the keyboard to type.

The characters you've entered appear in the text field, with suggestions for the word you are typing below.

Use Delete Icon to erase characters to the left of the cursor.

After finishing typing, touch Back icon to close the keyboard.

3.6 Dialing Calls

Dialing a call to a number in the contacts

Touch the Phone icon or the phone application icon on the Home screen, then select the Contacts tab. Swipe or slide upward/downward to pick out the target contact. Then you can touch the dial icon to originate a call.

Dialing a call to a number in call log

Touch the Phone icon or the phone application icon on the Home screen, then select the Recent call log tab. Swipe or slide upward/downward to pick out and touch the target contact. Then you can originate a call.

Answering incoming calls

Swipe up the Call icon to answer an incoming call

Touch the Call End icon to end the current conversation

To reject an incoming call, swipe down the Call icon

Managing multiple calls

If you accept a new call when you're already on a call, you can swipe the Call icon up to answer the current call.

4. Using the Menus

4.1 Calculator

You can use this Calculator to solve simple arithmetic problems or use its advanced option to solve more complex equations. Touch Clear to delete the last number or operator you entered. Touch & hold clear to delete everything in the display. In the calculator screen, you can touch upper right corner menu icon to clear history or choose theme etc.

4.2 Calendar

You can open Calendar to view events you've created Events from each account you've added to your phone and configured to synchronize calendars are displayed in Calendar.

4.3 Camera

LG W30 Pro is powered by 13MP Rear Camera and 16MP front camera. In rear W30 Pro has 3 cameras for capturing more detailed images. You can take the photos or record videos to save your all memorable moment.

Camera Specs with images






Starting the Camera

- 1. Swipe up on Home Key and Tap on Samera app and Camera opens.
- 2. Tap on Capture button to capture the image/ Videos.

Note: - Also can press Volume Up/Down key to capture the images or to start the video recording.

Here in below image shows the camera overview in Photo mode as:

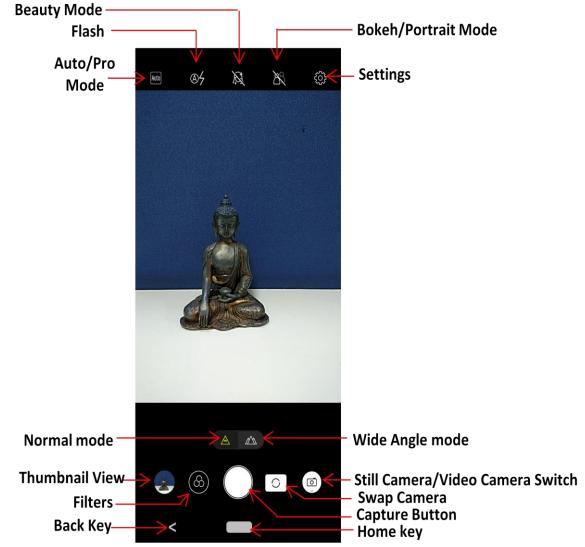

Except the options and mode explained above there are several more Settings in your camera.

₩ @4 XL XL @	← Settings	← Settings
	General	Continuous Shot
	GPS location	Picture size
and the second se	Storage Phone	Anti Banding Level
	Still camera	Watermark Disable
<u>Ken</u>	Countdown timer	Picture quality
	- Face Detection	Shutter Sound
	Continuous Shot	
	Picture size 13M pixels	Video camera Video quality
	Anti Banding Level	Video duration
	Watermark Disable	Time lapse
	Picture quality Standard	Un Un
s 💿 🔵 😣	Shutter Sound	System
	<	<

Note: - Camera settings appear according to active camera and active camera/video mode. For example "Continuous shot" & "Flash" settings display for rear camera only and "Selfie Mirror" settings display for front camera only. Similarly "Beauty" and "Bokeh" mode only for "Still Camera" mode and not available for "Video camera" mode.

Camera Modes & Settings

Mode/ Settings	Description	Overview
Still Camera mode Video Camera mode	Still Camera mode is for capturing images. It is same for both Front and Rear Camera. Video Camera mode is for recording videos. It is same for both Front and Rear Camera.	
Auto/Pro mode	Here gives the facility to adjust camera parameters Automatically and as well as Manually. If user choose Pro mode then he can adjust camera parameters himself/herself like Focus as AF/MF, ISO, EV, WB etc. In Auto mode device adjust all these parameters automatically.	
Flash	Select Flash as On/Off/Auto for rear Still Camera. Flash light is also available as On/Off for rear Video camera.	¥ ®4 4

Beauty Mode	In Beauty mode user can choose different beauty effect as Off, Low, Mid, High and Custom to customize Soften and Whiten effect. It works same for both front and rear camera.	Original Beauty effect
Bokeh Mode In Rear Camera	Bokeh mode is capturing images with blur background. User can adjust the object by tapping anywhere on screen which need to be focused and the rest area will be blur.	Normal Mode Bokeh Mode
Bokeh Mode In Front Camera	Bokeh mode in front camera also almost similar to rear camera but in front bokeh mode user can not change the focus manually. It automatic focuses the closest object and background of the focused area will be blur.	Original Final effect
Wide Angle Mode	W30 Pro handset has triple camera and it gives the option to view and capture images in wide angle. It gives the advantage of capturing images with larger range of the scene with more background. It works only in Rear Camera. It is not for front camera.	Normal View Wide Angle View

Filters	Filters are giving for multiple scene effects like None, Mono, Sepia, Negative, Solarize, Posterize and Aqua. User can choose any scene effect of his choose and capture the images. It works same for both rear and front camera.	
GPS Location	Camera Settings>GPS Location If GPS location is enable then captured images will save with location detail at where image is captured. It functions same for both front and rear camera.	Image: Series of the series of th
Storage	Camera Settings>Storage Here can choose storage Phone or SD Card for captured images/videos.	
Countdo wn timer	Camera Settings>Countdown timer Countdown timer is option to capture images automatically after selected time interval. Here options are as 2s, 5s, 10s and Off. It functions same for both front and rear camera.	
Face Detectio n	Camera Settings>Face detection Enabled Face detection will detect the faces in camera preview. It functions same for both front and rear camera.	

Continuo us Shot	Camera Settings>Continuous shot If enables then touch and hold capture button and camera will continuously capture images, maximum it can capture up to 10 images in continuous shot mode. It works only in Rear Camera. It is not for front camera.	
Selfie Mirror	Front Camera>Settings>Selfie Mirror It means that if you view the pictures taken, then you'd see that right is left and left is right just like looking in the mirror. It works only in Front Camera. It is not for rear camera.	Selfie Mirror Off On
Picture Size	Camera Settings>Picture Size There are different type of picture sizes as 13MP, 9MP(1:1), 8MP(16:9) and 8MP for rear camera and 16MP, 4MP, HD 1080 and HD 720 for front camera. After selecting a resolution the camera preview screen display accordingly and also images captured accordingly.	
Anti- Banding	Anti banding is a setting that you should check if you are in a room with fluorescent lights or you plan on shooting a television screen. Often when using a camera in these environments, there is a noticeable flicker in the image. This setting helps reduce flicker.	
Water mark	To enable water mark can capture images with LG logo at right bottom side. It is same for both front and rear camera.	

Disture	Comoro Sottingos Disturo quality	
Picture	Camera Settings>Picture quality	
Quality	Here options are available to	
	capture images with Standard,	
	Low and High quality.	
Shutter	Tap to enable and disable	
Sound	camera shutter sound when	
	capture image/video	
Video	Video Camera Settings>Video	
Quality	quality	
	Here different quality options as	
	4K HD, 1080p and 720p for rear	
	video camera and 1080p, 720p,	
	QVGA & QCIF for front video	
	camera. User can choose any	
	quality for recording.	
Video	Video Camera Settings>Video	
Duration	duration	
	Here video recording duration	
	available as 30 seconds, 10	
	minutes, 30 minutes and no	
	limit. Video recording stops	
	automatically after selected	
	duration.	
Time	Video Camera Settings>Time	
Lapse	lapse	
	This mode gives options to play	
	the recorded video faster than	
	normal. It gives option as Off, 5	
	seconds, 10 seconds, 1	
	minutes, 3 minutes and 5	
	minutes. For example if we	
	select 5 seconds laps than it	
	play the recorded video 5 time	
	faster, if we record a video of	
	duration 5 seconds than its play	
	back will be finished in 1	
	seconds.	
Restore	Restore default will reset the	
Default	camera settings to the default.	
	ge to the default	

4.4 Chrome

This is a Browser; you can use this for browse web sites.

4.5 Clock

Touch the Clock icon in the main menu interface. You can set an alarm by modifying an existing alarm or by adding a new one. Timer and Stop watch also available in Clock application.

4.6 Contacts

View contacts that saved in Device or Gmail. Here user has options as:

Search

You can search record by contact name. After inputting correct name, it will show the contact.

New contact

Click the 😌 "new contact", you can choose to add the contact to Phone or Gmail. After choosing storage location, input name and number can be added.

Delete/Share contact

Long press any contact, enter the multi-selection list, check the contact, than click "Delete" or "<> Share".

Contacts to display

From the option at top right corner is can Set display all contacts or customize view to part of the contacts.

Labels

Options button \equiv at top left corner>View and create Labels (Group Contacts). Settings:-

Your info: If information saved before will display here otherwise user can add or edit information.

Accounts: If you do not add account, account management is empty, if you have added the account, you will see the account information, of course, you can add multiple accounts in the settings, to achieve multiple account synchronization. After adding the account, click on this account can synchronize your mobile phone contacts.

Sort by: Sort contacts list by first name or last name.

Name format: Display contacts in format as first name first or last name first. **Theme:** Choose theme as Dark – On/Off.

Default Contact Storage: Set Gmail or Device as default storage for new contacts.

Import/Export/Restore: You can import contacts from the SD card or export the contact list to SD card and can restore contact from previous backups.

Undo changes: Change your contacts list back to any state in the past 30 days. **Call contact**

Click contact to enter into contact detail interface and then click the call icon. **Send message to contact**

Click contact to enter into detail contact interface and then click the message icon.

4.7 Google Docs

Google Docs is a word processor included as part of a free, web-based software office suite offered by Google. The app is also compatible with Microsoft Office file formats. The application allows users to create and edit files and provide lot of document templates for user reference like CVs, different letters format, Legal etc.

4.8 Google Drive

Google Drive is a file storage and synchronization service developed by Google. Google Drive allows users to store files on their servers, synchronize files across devices, and share files. Safely store and share your photos, videos, files and more in the cloud. Your first 15 GB of storage are free with a Google account.

4.9 Google Duo

Google Duo is the new, simple video calling app that brings you face-to-face with all the people that matter most. With Duo can connect video call with any device either Android[™] or Iphone.

4.10 Files

Files by Google is a file management app that helps you Free up space with cleaning recommendations. Find files faster with search and simple browsing. Share files offline with others, fast and without data.

4.11 FM Radio

Please plug in the compatible earphone to the device and then turn on the radio. The earphone cable can be used as FM Antenna. Please adjust appropriate volume when listening to the radio. Continue to use higher volume is harmful for your ear.

4.12 Gmail

You can login to your existing Gmail account or create new Gmail account through this app.

4.13 Google

You can search and view something in your phone or webpage after connect with internet through this function.

4.14 Keep Notes

Google Keep is a note-taking service, Keep offers a variety of tools for taking notes, including text, lists, images, and audio. Quickly capture what's on your mind and get a reminder later at the right place or time. Speak a voice memo on the go and have it automatically transcribed.

4.15 Google Maps

Navigate your world faster and easier with Google Maps. Get real-time GPS navigation, traffic, and transit info, and explore local neighborhoods by knowing where to eat, drink and go - no matter what part of the world you're in.

4.16 Messages

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS) with your friends on their mobile phones.

Sending a message

1. Touch message icon on the home screen and touch add new message icon to edit a new message.

- 2. Enter a contact's name or number in the recipient field. As the information is entered, all matching contacts appear. Touch a suggested contact or multiple contacts as message recipient(s).
- 3. Touch Enter message to compose your message.
- 4. After completing the message, touch Send icon to send your message.

Note: - This handset supports multi regional languages. User can read and write messages in following languages:

English, Hindi, Marathi, Punjabi, Tamil, Telugu, Malayalam, Bengali, Gujarati, Kannada, Assamese, kashmiri, Konkani, Manipuri, Nepali, Oriya, Sanskrit, Sindhi, Urdu, Bodo, Santali, Maithili and Dogri.

4.17 News

Google News is a smart news app that organizes what's happening in the world to help you learn more about the stories that matter to you. Stay up to date with Google News.

4.18 Phone

Dial a call to a number saved in your contacts or to the new number. Also can check the recent call logs records. Three dots (\equiv) menu at the top right corner of the screen for more options and settings like Call history, Calling accounts, Contact Blacklist etc. Touch the dial pad icon, where you can input phone number to originate a call.

4.19 Google Photos

Google Photos is the home for all your photos and videos, automatically organized and easy to share. Also this app have Backup feature and gives users free, unlimited storage for photos up to 16 megapixels and videos up to 1080p resolution.

4.20 Google Play Movies & TV

The app offers movies and television shows for purchase or rental, depending on availability.

4.21 Google Play Music

Here you can subscribe music radio channels and enjoy music in online or offline mode. Also can play music stored in your Phone or SD card storage.

4.22 Google Play Store

Enjoy millions of the latest Android apps, games, music, movies, TV, books, magazines & more. Here you can search and download paid and free applications and games of your interest and enjoy.

4.23 Settings

The Settings application contains most of the tools for customizing and configuring your phone as:

Panic Button

Swipe up on Home key>Settings>Panic button

This feature is with On/Off facility, by default it is ON for user safety concerns. You can use this function to call Emergency number, 112 in Emergency situation. You can use this function by pressing Power key three times in quick succession; your phone will initiate the call to single emergency number 112. It will work in locked/unlocked mode without needing to enter your phone pass code.

Network & Internet

You can use Network & Internet settings to manage your SIM card settings, configure and manage connections to networks and devices by using Wi-Fi. Set up hotspot & tethering, Aeroplane mode, VPN and mobile networks in this interface. Swipe up on Home key>Settings>Network & Internet

Wi-Fi

- > On the settings screen, tap **Network & Internet> Wi-Fi.**
- > Available Wi-Fi networks appear automatically.
- Select a network.
- · You may need to enter the network's Wi-Fi password.
- The device skips this process for previously accessed Wi-Fi networks. If you do not want to automatically connect to a certain Wi-Fi network, tap the network and then tap **Forget network**.


Wi-Fi preferences

Under Wi-Fi feature Wi-Fi preference feature is available, It gives options as

- Turn On Wi-Fi automatically On/Off Wi-Fi will turn back on near high quality saved networks, like your home network.
- Open Network notification On/Off
 Notify when a high quality public network is available.
- Install certificates
 Install certificates if required.
- ➢ Wi-Fi Direct

You can connect your device to other devices that support Wi-Fi Direct to share data directly with them. You do not need an access point. You can connect with more than two devices by using Wi-Fi Direct.

- Turn On Wi-Fi and enter to Wi-Fi Preference>Wi-Fi Direct
- Nearby devices that support Wi-Fi Direct automatically appears.
- Select a device
- Connection occurs when the device accepts the connection request.

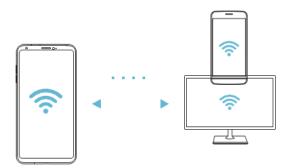

>

Note: - The battery may drain fast using Wi-Fi Direct.

- MAC address
 - Here MAC address information available.
- Saved Networks Here saved the previously connected Wi-Fi networks.

Mobile Network

Here found options as:

- Mobile data On/Off Access data using mobile network
- Roaming On/Off Connect to data services when roaming.
- > data usage

When open data usage list of app display with detail of mobile data used within a preset monthly cycle as:

10:24 A	M 🛦 🗉 🐨 🔹	🛈 🖇 🐨 🖬	1 🖺 30%
←	Mobile data usage		۹
	13 Jun – 12 Jul	~	÷
	18.26 GB used		
			2.0 GB warning
			nannig
13 Jun	Operator data accounting may accounting	13 Jul differ from de	evice
٠	YouTube 7.56 GB		
	Google Play Store 3.06 GB		
G	Facebook 2.97 GB		
•	Chrome		
	< -		

Here more options to customize some more settings as:

Settings>Network & Internet>Mobile network>App data usage cycle>

- Here can check and reset the usage cycle duration date.
- Set Data Warning On/Off
- Data Warning Here can set data warning as 1GB/2GB/5GB etc. at which user want to get data warning alerts. When mobile data used upto the set limit it will give data warning alert to user that he has used the data which he set in Data warning option.
- Set Data Limit On/Off If it is ON, then it will pause the mobile data when mobile data consumed as per pre set data limit and give one notification to user to resume if want to continue using data or OK to pause the data usage as:

Мо	bile data is paused	
	e data limit that you set has been ched. You are no longer using mo a.	obile
lf y usa	ou resume, charges may apply fo ge.	r data
	RESUME	ок

• Data Limit – Here can set the data limit at which user want to get Data limit alert.

- Enhance 4G LTE Mode On/Off Use LTE services to improve voice and other communications (recommended)
- Preferred Network Type Here can set network as 4G/3G/2G.
- Automatically Select Network On/Off If enable then search network and register to network automatically. But if it is disable then need to search and register to available networks manually.
- Access Point Names Here display the APNs for the inserted SIM card operators.

Data Saver – Settings>Network & Internet>Data usage>Data Saver – On/Off, if it is enable then it help to reduce data usage, data saver prevents some apps from sending or receiving data in the background. An app that you are currently using can access data, but may do so less frequently. This may mean, for example, that images don't display until you tap them.


Hotspot & Tethering – Here different tethering options to share mobile data as:

- Wi-Fi hotspot On/Off If it is enabled then user can share his mobile data with others after doing few settings as:
- **On/Off On** tap to On/off Wi-Fi hotspot function.
- Hotspot name Here by default handset name but user can customize to any other name.
- Hotspot password User need to set some password to make his device hotspot as password protected. If user want to share his data with others then turn on Wi-Fi on other's handset and share the hotspot password with them to connect.



Note: - This option uses mobile data and may incur data usage, fees, depending on your pricing plan. Consult with your service provider for more information. For more information please visit <u>http://www.android.com/tether#wifi</u>

- > **USB Tethering** On/Off Share phone's internet connection via USB
 - Connect your device and others devices via USB cable.
 - On the settings screen Network & Internet>Hotspot & tethering>USB tethering
 - Tap to activate it

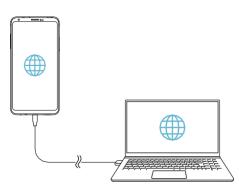

Note: - 1. This option uses mobile data and may incur data usage, fees, depending

on your pricing plan. Consult with your service provider for more information. 2. When connecting to a computer, download the USB driver from <u>www.lg.com</u> and install it on the computer.

3. You cannot send or receive files between your device and a computer while USB tethering is turned on. Turn Off USB tethering to send or receive files.

4. Operating system that support tethering are Window Xp or higher or Linux.

- Bluetooth Tethering Share phone's Internet connection via Bluetooth. A Bluetooth-connected device can connect to the Internet by using your device's mobile data with few settings as:
 - On the settings screen, tap Network & Internet>Hotspot & tethering>Bluetooth Tethering
 - Tap to activate it.
 - Turn on Bluetooth on both devices and pair them.

Note: - This option uses mobile data and may incur data usage fees, depending on your pricing plan. Consult with your service provider for more information. For more information is available <u>http://www.android.com/tether#Bluetooth_tethering</u>

SIM Cards

Here save the SIM settings as:

- SIM 1/SIM2 Enable/Disable, change SIM name and theme color.
- Mobile Data Save here preferred SIM1 or SIM2 for mobile data
- Calls Save here preferred SIM as SIM1 or SIM2 for outgoing calls.
- SMS messages Save here preferred SIM as SIM1/SIM2 for sending messages.

Aeroplane mode – On/Off – To enable/disable aeroplane mode.

VPN - You can connect to a safe virtual network, such as intranet. You can also manage connected virtual private networks.

Add VPN as:

- 1. On the settings screen tap Network & Internet>VPN
- 2. Tap on + option at top right corner and Add VPN

3. Enter VPN details and save it.


Configuring VPN settings as:

- 1. Tap a VPN from the VPSs list.
- 2. Enter the VPN user account details and tap CONNECT

Note: - This feature is available only when the screen lock is activated. If the screen lock is deactivated, a notification screen appears. Tap *CHANGE* from the notification screen to activate the screen lock. See *Setting a screen lock* for details.

Connected Devices

You can set BT, Cast devices and Printers connections here and access them. Enter to the Connection Preferences option for

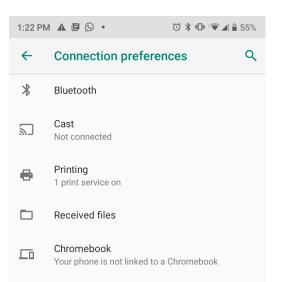

Select any connection option and follow the on-screen notification to setup the connections.

- Bluetooth You can connect your device to nearby devices that support Bluetooth to exchange data with them. Connect your device to a Bluetooth headset and a Keyboard. This makes it easier to control the device. Pairing with another device
 - 1. On the settings screen tap Connected devices>Connection preferences>Bluetooth.
 - 2. Tap \bigcirc to activate this.
 - Available devices appear automatically.
 (Only the devices sets as visible are displayed on the list.)
 - 4. Select a device from the list.
 - 5. Follow the on-screen instructions to perform authentications. (This step is skipped for previously accessed devices)

Sending data via Bluetooth

- 1. Select a file
 - (You can send multimedia files or contacts.)
- 2. Tap \leq share via Bluetooth
- 3. Select a target device for the file.
- 4. The file is sent as soon as the target device accepts it. (File sharing process may differ, depending on the file)
- Cast You can play the screen and sound of the devices on a different device such as TV that supports the cast functions with the help of cast devices such as chrome cast etc.
- Printing You can connect with printers via Wi-Fi. For this function printers must support Wi-Fi.
- > **Received Files –** Check here transfer history.
- Chromebook Link devices so that yo can text from your computer, share your phone's internet connection and simplify unlocking. Use your Chromebook to setup. For more information visit http://support.google.com/chromebook

Apps & Notifications

Here you can check all the applications as recent, default and system apps of device and can check screen time for the recent apps, On/Off/Change notification sound, check apps permissions and special access for the apps.

Battery

You can view your battery status, battery percentage, battery level and battery use in this interface. And you can set up various setting like

- Battery Saver On/Off If enable then to extend battery life, Battery saver turns off some device features and restricts apps.
- Adaptive Battery On/Off If enabled, it will limit battery for apps that you don't use often. To extend battery life, Adaptive Battery limits battery for infrequently used apps. Your phone will learn how you use apps over time. Notifications may be delayed for these apps.
- Battery Percentage On/Off Show battery percentage in status bar. Display

Here you can customize various display settings as

- Brightness level Here can set display brightness from 0-100%
- Night Light On/Off If enabled, Night Light tints your screen amber. This makes it easier to look at your screen or read in dim light, and may help you fall asleep more easily.
- Adaptive brightness On/Off If enabled, your screen brightness will automatically adjust to your environment and activities. You can move the slider manually to help adaptive brightness learn your preferences.
- > Wallpaper Choose wallpapers from Live wallpapers/Photos/Wallpapers.
- Sleep Set sleep time from the available options.
- > Auto rotate screen On/Off auto rotate screen.
- > Hide Notch Here can choose notch style as Default/Hide the notch.
- > Font size Here user can change font size of text.
- Display size With display size user can make the items on screen smaller or larger. Some apps may change position.
- Screen saver Set screen saver as clock/colours/Photos and condition for the screen saver as while charging/while docked/while charging or docked/Never.
- Ambient Display If it is enabled then screen will wake up from sleep mode for new received notifications.
- Device theme Here options to choose device theme as Dark/Light/Automatic (based on wallpaper)
- Blink light On/Off blink notification light for Missed events like missed call or unread messages

Sound

Here you can customize

- Volume level for Media Volume/Call volume/Ring volume/Alarm volume/ Notification volume.
- Also Vibrate for calls On/Off If enabled then phone will vibrate also for Incoming calls.
- Do not disturb On/Off If enabled it will mute the sound & notifications but allow alarm and media, No visual or sound from notifications, Calls from starred contacts and repeat callers and no messages, events & reminders. User can customize its duration and also its behavior.
- Shortcut to prevent ringing Press volume up and power key simultaneously to set the ringer mode to silent or vibrate.
- Phone Ringtone Here user can customize the incoming calls ringtone. User can customized ringtone from the available system tone options and also from the music/audio files available in phone storage or SD card.
- Default Notification Sound Here user can customize the notification sound from the available system tone options and also from the music/audio files available in

phone storage or SD card.

- Default Alarm Sound Here user can customize the Alarm sound from the available system tone options and also from the music/audio files available in phone storage or SD card.
- Other sounds and Vibrations On/Off Dial pad tones, Screen locking sounds, Charging sounds, Touch sounds and Touch vibrations.

Storage

Use the Storage settings to monitor the used and available space on your phone and on your SD card and to manage your space.

Security & Location

You can set the parameters about security through this function as:

- Device security Here options are as:
 - Screen lock Here user can set screen lock as None/Swipe/Pattern/PIN/Password.
 - Lock screen preferences Set here lock screen preferences.
 - Fingerprint Here in fingerprint settings save and setup your fingerprint as your screen lock.
 - Face recognition Here in face recognition settings add your face and use your face to unlock your device.
 - Smart Lock Here more smart options to keep your device safe with options available as Smart lock with On-body detection, Trusted places, Trusted devices, trusted face and voice match.

Note: - Please understood the instructions carefully of Smart lock before use.

- Privacy Here options are as:
 - Location On/Off you device location.
 - Show passwords Display character briefly as you type password to unlock screen.
 - Device admin apps Here only one device admin app as Find My Device. It is useful to lock or erase data in case device is lost.
 - SIM Card Lock Set up SIM lock password with the help of SIM PIN. If you don't know your SIM PIN, please contact with your operator services and get your PIN.
 - Except above options few more options as Encryption & credentials, Trusted agents and screen pinning are available in Security settings.

Accounts

Here you can check your configured accounts on device and also add & delete any configured account.

Accessibility

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone and other options like Magnification mode, Color inversion, Power button end calls, Mono audio, Captions, High contrast text etc.

Digital Wellbeing

Digital Wellbeing features is a feature which helps telling which apps you're spending too much time and you can limit your usage to a particular application by set a timer on the application.

Google

Here you will found google account security settings and other services settings as location, search assistant & voice, setup nearby device etc. **System**

Language & input - Use the Language & Input settings to select the language for the text on your phone and for configuring the input method. Open the Language & Input option>Language>Add a language>Select a language from the list. Now selected language will display in the Language preference list. Here select the preferred language and drag it to the top position to use selected language as phone's default language.

- Gestures Enable Swipe up on Home button to switch apps and if disable will switch to three button interfaces as Back, Home and Recent key.
- Date & time You can use Date & Time settings to set your preferences for how dates are displayed. You can also use these settings to set your own time and time zone, rather than obtaining the current time from the network etc.
- Backup Here can enable or disable backup your data to Google drive, if enable, the google drive will backup of your gmail, apps, contacts, SMS etc.
- Reset Options Reset your phone in this interface as Erase all data or Reset wifi, mobile & network settings or reset app preference.
- > Multiple Users User can create multiple guest/user using this option.
- System Update Check here for any new update if any software update available here and then update.

About phone - This function enables you to view some phone related information like software info, IMEI info, serial number, SAR info etc.

4.24 Sheets

Create, edit, and collaborate with others on spreadsheets from your device with the Google Sheets app. With Google Sheets Open, edit, and save Excel files.

4.25 SIM Toolkit

Here you will find SIM Services.

4.26 Slides

Create, edit, and collaborate with others on presentations from your device with the Google Slides app. With Google Slides you can Open, edit, and save PowerPoint files.

4.27 Sound Recorder

Use this function to record audio files and can check recorded audio files.

4.28 YouTube

Here you can watch videos of your choice after data is connected.

4.29 Google Assistant

Your device has the Google Assistant built in. Ask it questions. Tell it to do things. It's your own personal Google. Touch and hold Home key and then you will see "Hi, how can I help?" after which you can say your voice command.

Note: - The Google assistant is not available in all languages.

5. Appendix

5.1 FAQ

If you find exceptions when operating the mobile phone, restore the factory settings and then refer to the following table to solve the problem. If the problem persists, contact the distributor or service provider.

Fault	Cause	Solution
	The SIM card is damaged.	Contact your network service provider
SIM card error	The SIM card is not in position.	Check the SIM card
	The metal face of the SIM card is polluted.	Clean the SIM card with a clean cloth
Poor received signal quality	Signals are obstructed. For instance, radio waves cannot be effectively transmitted nearby a high building or in a basement.	Move to a place where signals can be effectively transmitted
	Line congestions occur when you use the mobile phone in high-traffic hours	Avoid using the mobile phone in high- traffic hours
Device Over heat	Gaming for long periods of time Streaming content for hours like YouTube or Netflix etc. Your settings aren't optimal like Screen brightness on full blast? Animated wallpaper? Widgets, widgets everywhere?	Use less power like Low Power Mode or Battery Saver Mode or Battery optimization to reduces the amount of power your phone is using and can also help preserve your phone's battery life. Dim your screen brightness — Keeping the screen at a reasonable brightness (not full blast) will take some strain off your phone's battery (and your eyes).
	-	Turn off Wi-Fi, GPS, and Bluetooth — Disabling battery-

		draining features such as these gives your phone a break, allowing it to cool down.
	Environmental factors etc. Used wrong charger for charging battery.	Avoid direct sunlight Charge your phone correctly with appropriate charger. Restart your phone — Occasionally restarting your phone can help prevent overheating due to minor software problems.
The mobile phone cannot be powered on	The battery energy is exhausted.	Charge the battery
Calls cannot be dialed	Call barring is activated	Cancel call barring
The mobile phone cannot connect the network	The SIM card is invalid	Contact your network service provider
	The mobile phone is not in a service area of the GSM network	Move to the network operator's service area
	The signal is weak	Move to a place where the signal quality is high
The battery cannot be charged	The charging voltage does not match the voltage range indicated on the charger	Ensure the charging voltage matches the voltage range indicated on the charger
	An improper charger is used	Use the charger specially designed for the mobile phone

5.2 Phone software update

LG Mobile phone software update from the Internet

LG Mobile phone software update from the Internet. For more information about using this function, please visit http://www.lg.com/common/index.jsp, select your country and language.

This feature allows you to conveniently update the firmware on your phone to a newer version from the Internet without needing to visit a service center. This feature will only be available if and when LG makes a newer firmware version available for your device.

Because the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure you check all instructions and notes that appear at each step before proceeding. Please note that removing the USB cable during the upgrade may seriously damage your mobile phone.

Note: - LG reserves the right to make firmware updates available only for selected models at its own discretion and does not guarantee the availability of the newer version of the firmware for all handset models.

LG Mobile Phone software update via Over-the-Air (OTA)

This feature allows you to conveniently update your phone's software to a newer version via OTA, without connecting a USB cable. This feature will only be available when LG makes a newer firmware version available for your device. To perform the phone software update

Settings>System>Advanced>System Update>Check for update.

Note: - Your personal data from internal phone storage including information about your Google account and any other accounts, your system/application data and settings, any downloaded applications and your DRM license might be lost in the process of updating your phone's software. Therefore, LG recommends that you backup your personal data before updating your phone's software. LG does not take responsibility for any loss of personal data. This feature depends on the area or service provider.

5.3 Disposal of Your Old Appliance (As per e-waste rule)

The WEEE logo (shown at the left) appears on the product (handset, and charger)
 to indicate that this product must not be disposed of or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please

visit to our web site:

http://www.lge.com/in

Note: - LGE will not bear any responsibility for any incompliance with the abovementioned guidelines or improper usage of the mobile phone.

5.4 Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lge.com. In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

5.5 Regulatory information (Regulation ID number, BIS Mark, E-Labeling etc.)

For regulatory details, go to Settings>About Phone>Regulatory Labels

5.6 LG Bridge

LG Bridge overview

LG Bridge is an app that helps you manage the photos, music, videos and documents saved on your LG Smartphone from your computer conveniently. You can back up contacts, photos and more to the computer or update the device software.

Note: - See LG Bridge help for details. The supported features may vary depending on the device. LG USB driver is a necessary program to connect your LG smartphone with the computer and is installed when you install LG Bridge.

LG Bridge functions

- 1. Manage the files on the device from a computer via Wi-Fi connection or mobile data connection.
- 2. Back up data from the device to a computer or restore data from a computer to the device via USB cable connection.
- 3. Update the device software from a computer via USB cable connection.

Installing LG Bridge on a computer

- 1. Go to www.lg.com from your computer.
- 2. Select your region and clickQ.
- 3. In the search bar, enter the name of your device.
- 4. Click Support Manuals & Downloads.
- 5. In the Software & Firmware, Click PC Sync and download the setup file.
- 6. Click Details to view the minimum requirements for installing LG Bridge.

5.7 Customer Information Center

For any query related to after sales service, you may please contact us on the numbers listed below.



Regd. Office : A Wing (3rd Floor) D-3, District Center Saket, New Delhi-110017

5.8 Trademarks

- Copyright ©2019 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
- GoogleTM, Google MapsTM, GmailTM, YouTubeTM, Google DuoTM, Google PlayTM, AndroidTM, ChromeTM, Google PhotosTM, Google Play ProtectTM, Google CalendarTM, Google DocsTM, Google DriveTM, Google SheetsTM and other related marks and logos are trademarks of Google LLC.
- \triangleright Bluetooth[®] is a registered trademark of Bluetooth[®] SIG, Inc. worldwide.
- > Wi-Fi[®] and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.
- All other trademarks and copyrights are the property of their respective owners.