



# LG Pocket Photo

## Owner's manual

Please read this manual carefully before operating your device.

MODEL : PD239W/ PD239P/ PD239Y/ PD239TW/ PD239TP/  
PD239TY/ PD239SP/ PD239SL/ PD239SA/ PD239G/  
PD239PH/ PD239BH/ PD239YH/ PD239SF



Windows Phone Store



NFC-enabled



Fun Application



Inkless Paper



Android™



Bluetooth®

Bluetooth®



The actual device may differ from the image.

ENGLISH

## Safety information



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**WARNING:** Do not install this equipment in a confined space such as a book case or similar unit.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

### **CAUTION concerning the Power Cord**

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

This device is equipped with a portable battery or accumulator.

### **Safety way to remove the battery or the battery from the equipment:**

Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems for batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

**NOTICE:** For safety making information including product identification and supply ratings, please refer to the main label inside the apparatus.

**NOTICE:** Only use the AC adaptor supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

**CAUTION:**

- The apparatus should not be exposed to water (dripping or splashing) and objects filled with liquids, such as vases, shouldn't be placed on the apparatus.
- Minimum distance around the apparatus for sufficient ventilation, no less than 5 cm.
- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloth, curtains etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- The unit's internal lithium battery should only be serviced by an authorised service centre.

**Note****Device operating temperature**

When operating in cold weather, the device shall not print. Bring it inside from the cold and give about 10 min to adjust to the specified operating temperature (5 °C - 40 °C). Then try printing again. (For the appropriate use, it is recommended not to operate it outdoors in winter.)

**Caution****CAUTION when using this product in environments of low humidity**

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

## Contents

### Safety information .....2

### STEP 1 Getting Started .....6

Supplied items.....6

Product Overview.....6

Power On / Off.....7

### STEP 2 Charging Battery .....7

### STEP 3 Inserting Photo Paper .....9

Cleaning printer head using Smart Sheet 10

About photo paper .....10

Paper Jam Solution .....12

### STEP 4 Installing App ..... 12

Installing App for Android phone .....12

App Setting .....13

Installing App for iPhone .....14

Setting Bluetooth of iPhone .....14

Installing App for Windows phone .....15

Setting Bluetooth of Windows phone ....15

### STEP 5 Printing Photo ..... 16

Printing using Android phone .....16

Printing using iPhone .....20

Printing using Windows phone .....22

Using the edit mode .....24

Notes on the printing .....24

Checking where to buy paper .....26

Updating the device .....26

### Checking Label..... 27

 
### About LED Indicator..... 28

### Specifications ..... 30

### Troubleshooting ..... 31

# STEP 1 Getting Started

## Supplied items



LG Pocket Photo Printer



 
USB cable



Charger





ZINK Photo Paper




Simple manual

- Depending on the model, supplied items may differ. (ex. Charger, Photo Paper etc.)

## Product Overview

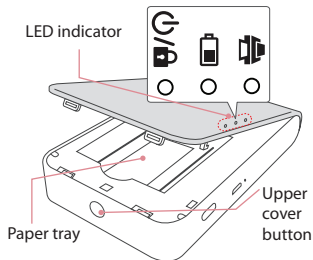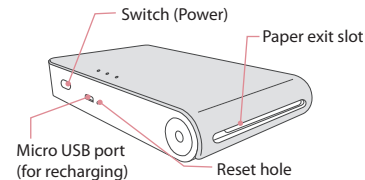  



## Power On / Off

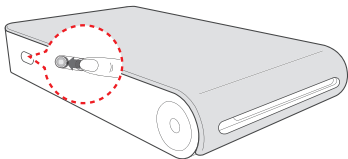 

On: Slide the switch to direction of the arrow.


Off: Slide the switch to the opposite direction.

### ! Note

 - When turning the device on, LED indicator  /  flashes for 5 sec. Then printing is available.
- For more information, see "About LED indicator".




## STEP 2 Charging Battery

 This device uses built-in battery. Before using it, charge the battery in full. (Refer to below)




Battery charging time : 1.5 hours

Checking the charging status with LED indicators

- Power-off  : Charging  : Full charge : 
- 0 % : flashes for about 30 sec. and turns off.
- LG Pocket Photo is always charged when connected to the power supply except for being printed.

### Charger (AC Adapter)

- Model : ADS-5MA-06A 05050GPG/ ADS-5MA-06A 05050GPCU/ ADS-5MA-06A 05050GPB/ ADS-5MA-06A 05050GPI/ ADS-5MA-06A 05050GPSA
- Manufacturer : SHENZHEN HONOR ELECTRONIC CO.,LTD.
- Input : 100 - 240 V ~, 50 / 60 Hz Max. 0.3 A
- Output : 5 V  1.0 A

### Note

- Depending on the model, the adapter may not be included in supplied items.
- When buying an adapter, refer to the recommended specifications above.
- If you do not use recommended adapter, charging time may differ.



### Caution

- Handle with care during charging to prevent electric shock.
- Do not place near heating appliance.
- Do not disassemble or deform.
- Do not give shock on.
- Avoid too high or low temperature or humidity.



 
### Note

- You can connect the device to PC using the supplied USB cable, but charging time can be longer.
- The operating time on battery may vary depending on the battery status, operational status and environment conditions.
- When the battery is discharged, printing is available after charging it for more than 10 min. (Charge in full to print in a row.)




## STEP 3 Inserting Photo Paper

1. Open the upper cover.



 2. Unwrap the pack of the photo papers.
3. Slide Smart Sheet (Blue) and photo papers together into the Paper insert slot. Smart Sheet will be ejected automatically before first printing.
  - Do not insert more than 10 Photo papers and 1 Smart Sheet. Otherwise 2 papers may be ejected at once or paper jam may occur.
  - Once the pack is unwrapped, keep the remaining papers after using in an airtight plastic bag.
  - When power is turned on, you cannot open the upper cover. To open it, turn off the power.

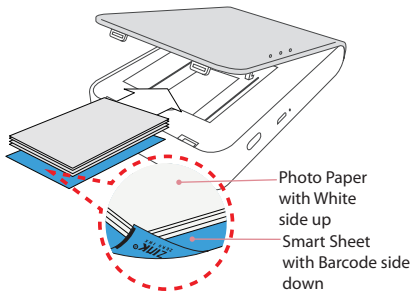

## Cleaning printer head using Smart Sheet



Smart sheet (Cleaner)

When you insert new smart sheet and photo papers, this device scans the barcode of smart sheet to maintain optimized photo paper. (It will be ejected before the first printing.)

To maintain the best quality, remove foreign material of the head using cleaning feature.

### Note on Smart sheet

When using Smart Sheet, it should be used with photo papers in the same pouch.

- Using smart sheet from other pouch may result in low quality.
- If print quality is abnormal or low, print out the smart sheet 3-5 times repeatedly.
- Reuse the smart sheet until use up the photo papers from same pouch.

## About photo paper



Photo paper pouch

Use exclusive photo paper for LG Pocket Photo.

**Otherwise, the print quality cannot be guaranteed, and it may cause damage of Pocket Photo.**

### **Note on Photo paper**

- Do not damage or bend the papers.
  - Using soiled paper may result in malfunction.
  - Ensure to use the papers within its valid date.
  - Handle with care not to get dirt on, when you touch the paper.
  - Once unpacked, the papers may begin to curl up or discolor after a period of time. It is recommended to use them as soon as possible.
- Using photo papers from other company may result in malfunction, paper jam or low quality.
  - Do not place inside a car or, expose to direct sunlight or moisture.
  - Do not leave in a place where the temperature or humidity is too high or low. It may reduce the quality of the printed photo.

## Paper Jam Solution

Do not pull the paper out. Turn the device off and on again, the paper will be ejected automatically.

- If there are foreign material or dust on the roller, it may not be ejected properly.  
In that case, remove the foreign material of the head with scotch tape first. And then, clean using smart sheet and try again.
- If this problem is not solved, please refer to "Troubleshooting".

## STEP 4 Installing App

### Installing App for Android phone

#### From Play Store (Android market)

Search for "LG Pocket Photo".

#### Using QR code

 
Scan the QR code on the product box.

## Using NFC

Refer to "Printing using NFC".

**Tagging:** Tagging for the first time, it links to Play Store where you can download LG Pocket Photo App.

#### Preparation : Before using NFC

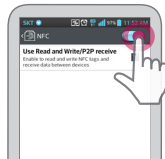

To print a photo using NFC, go to [setting] of smart phone and then, activate [Read and Write] mode.

## App Setting

Set the options in [Setting].



- **NFC\*** : Prints using NFC (NFC-enabled phone only)
- **Bluetooth** : Prints using Bluetooth
- **GPS\*\*** : Saves the location where you took a photo

\* NFC : Near Field Communication

\*\* GPS : Global Positioning System using a satellite

- To optimize printing photo, activate all modes and use pocket photo App.

### See "Help" for details

For more information about the App, touch [ ? ]



## Installing App for iPhone

### From App Store

Search for “LG Pocket Photo”.

### Using QR code


Scan the QR code on the product box.

## Setting Bluetooth of iPhone

1. On your iPhone's home screen, touch [Settings].
2. Touch “Bluetooth” and touch the slider to turn Bluetooth [On].
3. To connect your Pocket Photo device to the iPhone, turn on your device and make sure it is discoverable mode.
4. When you find the device, touch the model name of Pocket Photo on the screen.



### See “Help” for details

For more information about the App, touch .



## Installing App for Windows phone



### From Store

Search for "LG Pocket Photo".

## Setting Bluetooth of Windows phone



 

1. On your Windows phone home screen, touch [Settings].
2. Select "Bluetooth" on the system and touch the slider to turn Bluetooth [On].
3. To connect your Pocket Photo device to Windows phone, turn on your device and make sure it is discoverable mode.
4. When you find the device, touch the model name of Pocket Photo on the list.
5. After Checking [Connected], Run the App.




## STEP 5 Printing Photo

### Printing using Android phone

#### Printing using Bluetooth

Preparation : Turn the device on, and start printing with the LED indicator /  turning on.

1. Run LG Pocket Photo App on Android phone.
2. Select a photo to print, and touch .
3. Touch [OK], then it will start searching for Bluetooth devices.
  - To print, set print mode or the number of photo on the preview screen.
4. When LG Pocket Photo is paired for the first time, [Bluetooth pairing request] appears. To start printing, touch [Pairing] or input the PIN code '0000'.
  - If Smart Sheet is in the device, it will be ejected before the printing starts.






## Printing using NFC (NFC)

 Check whether your Android phone supports NFC first.

- How to read NFC tag : Bring your smartphone close to the NFC tag on the device.

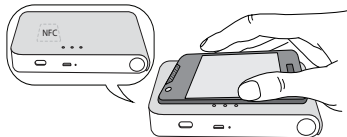

1. Tagging for the first time, it links to Play Store where you can download LG Pocket Photo App.
2. Go to [Setting] in the App installed, and check [NFC].




3. Choose a photo to print and tag, then printing is started immediately. From this time, you can run the App and print a photo by just tagging.



## Caution

 - If NFC tag is not read, check its position on LG Pocket Photo and smartphone. Then try again.  
(Depending on the type of smartphone, the position of NFC tag on it may differ.)
- If your smartphone case is plated with chrome, NFC is unavailable. Depending on your case's material or thickness, NFC may not be read well.
- Do not place the smartphone on the pocket photo when using NFC. (Same image can be printed repeatedly.)

- ❗ You can print photos directly from Android phones or PC via Bluetooth without the App. Choose a photo and select [Bluetooth] in [Share] or [Menu].

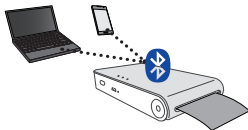

## Caution



- Check the power of the Pocket Photo, when your device can not search for Bluetooth device.
- The photo file less than 10 MB can be printed.
- Setting screen may differ depending on the phone manufacturer.
- When connecting to the other company's smartphone, some functions may be limited depending on conditions.

## Setting Pocket Photo App of Android phone

You can check remaining battery, the number of photos printed, Help, Where to buy paper, device version, update, MAC address, and setting of print mode, etc.

1. Run LG Pocket Photo App on Android phone.  
(To check [Device information], set to [On] the Bluetooth of smartphone.)
2. Go to Setting.
3. Touch [Device Information].



 
 Paper Full	Prints without white space. (The edge of the image can be cut off.)
 Image Full	Prints an image as a whole. (White space can occur at the edge of the paper.)
Auto Power Off	Set a time so that the device turns itself off. (Default is [5 min]. If you set to [Off], the device can be on for up to 2.5 hours when fully charged.)


### Note

- The longer time you set [ Auto Power Off] to, the more the battery consumption is. The number of maximum prints may differ.
- It is recommended to keep default setting of the device.

## Printing using iPhone

### Printing using Bluetooth

Preparation : Turn the device on, and start printing with the LED indicator  turning on.

1. Run LG Pocket Photo App on iPhone.
2. Select a photo to print, and touch .
3. "Do you want to print?" message appears. Touch [OK] to start printing.
  - To print, set print mode or the number of photo on the preview screen.
  - If Bluetooth is not connected, "Paired device not found" message is appeared. (refer to the Bluetooth setting for iPhone.)


- If Smart Sheet is in the device, it will be ejected before starting printing.





## Setting iPhone Pocket Photo App

 You can check remaining battery, the number of the photos printed, Help, Where to buy paper, device version, update, MAC address, and setting of print mode, etc.

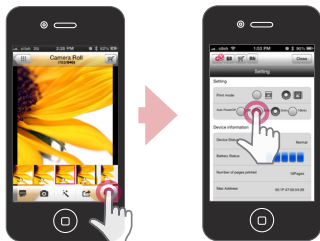1. Run LG Pocket Photo App on iPhone.  
(To check [Device information], set to [On] the Bluetooth of iPhone.)
2. Go to Setting.
3. Touch Setting options to change.



 Paper Full	Prints without white space. (The edge of the image can be cut off.)
 Image Full	Prints an image as a whole. (White space can occur at the edge of the paper.)
Auto Power Off	Set a time so that the device turns itself off. (Default is [5 min]. If you set to [Off], the device can be on for up to 2.5 hours when fully charged.)


### Note

- The longer time you set [ Auto Power Off] to, the more the battery consumption is. The number of maximum prints may differ.
- It is recommended to keep default setting of the device.



## Printing using Windows phone

 
### Printing using Bluetooth (📶)

Preparation : Turn the device on, and start printing with the LED indicator 🔌/🔒 turning on.

1. Run LG Pocket Photo App on Windows phone.
2. Select a photo to print, and touch .
3. "Do you want to print?" message appears. Touch [OK] to start printing.
  - If the printing is not started, check power of the device.
  - If Bluetooth is not connected, select registered Pocket photo device or reset Bluetooth by selecting [Search].

### Print mode


-  Paper Full: Prints without white space. (The edge of the image can be cut off.)
-  Image Full: Prints an image as a whole. (White space can occur at the edge of the paper.)

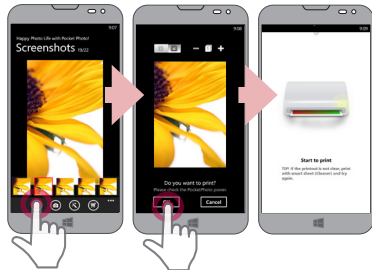

## **Note**

- If Smart Sheet is in the device, it will be ejected before starting printing.
- To print, set print mode or the number of photo on the preview screen. Setting of print mode and the number of photo printed is supported only for PD239 model.

### See “Help” for details

For more information about the App, touch  ➔ [Help].



At <http://popoguide.lge.com> under downloadable, you can download the Owner's manual using PCs.

### **Note on Windows Phone**

- You can check Manual, Share, App version and Where to buy paper by touching .
- Windows phone does not support installing App or printing photo by NFC function.
- In case of Windows phone, to print a photo in the normal folder via bluetooth it is available only when using the app.
- The limitations of Windows Phone
  - Device information is not supported.
  - Windows phone does not support firmware / TMD\* update of Pocket Photo.

(At <http://www.lg.com> , under Downloadable, you can download the Pocket Photo update tool for Windows PCs.)

TMD\*: TMD means colour correction data.

## Using the edit mode

You can edit a photo quality, color or size using edition tool on the menu.

Use the edit function with a variety of image correction filter



## Notes on the printing

- The printed image may differ from the original image due to the printing method (thermal transfer printing).
- Use the latest App of LG Pocket Photo ( when printing a photo, it makes optimized image.)
- The higher resolution the image has, the higher quality the printed photo has. (The proper resolution is more than 1280 x 2448 pixel.)
- Once the battery is fully charged, you can print up to 30 papers in a row.
- The maximum prints are based on ISO 24712 Colour image standard and the number of photos printed may vary depending on user environmental conditions (time, temperature, humidity or printing method).
- If there are more than a LG Pocket Photo device, check MAC address on the label to choose one you want to use. (Refer to "Checking Label".)



- The Bluetooth searching and transferring may fail depending on its environment. Check the Bluetooth condition on your phone and try again.
- If pairing multiple smartphone, re-pairing may occur.



## Caution

- Do not pull paper out by force during printing.
- Do not open the upper cover during printing.
- Do not place an object in front of the Paper exit slot.
- If the device is vibrated or given shock, the quality of the printed photo may be reduced.
- Printing for Passport / VISA image may be unsuitable as the case may be. Printing the image taken in studio is recommended.
- The printing quality may differ depending on the original image (When too dark or dim). Use the image after correcting it using Pocket photo App.
- Pocket photo APP's resolution is optimized in 800x480 pixel.

## Checking where to buy paper

1. To check where to buy paper, go to setting or menu screen.
2. After touching [📄], select a country.

## Updating the device

You can update the device by pairing smart phone to the latest software to enhance the products operation and /or add new features.

1. Connect the device and smart phone via Bluetooth.
2. Run the Pocket Photo App and then, touch [Setting] menu.
3. The current version and higher version are shown if new version is existed.

4. Touch [Update] button to update the device.

 


### ! Note


- During the device update procedure, do not turn off the power or press Reset button.
- This device cannot be updated to previous version.
- If there is no higher version, the Message [This is the latest version.] appears.
- At <http://www.lg.com> , under Downloadable, you can download the Pocket Photo update tool for Windows PCs.

## Checking Label

In case there are more than a LG Pocket Photo device, check MAC address on the product label to choose one you want to use.

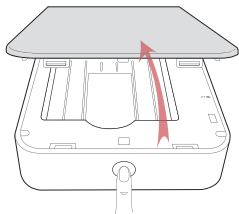

 1. Open the upper cover.

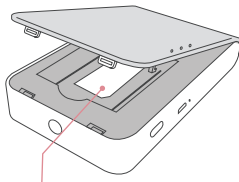

2. You can find the product label.










### Note

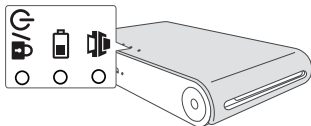 











When power is turned on, you cannot open the upper cover. To open it, turn off the power.













## About LED Indicator




The LED indicators shows the device condition.



LED color	Condition/ Power	Description
 ○  ○  ●	Waiting/ On	Waits for printing. Device turns itself off, if it is left unused for a while.
 ○  ○  ●	Updating/ Blink	Updating or turning on or power off (Auto)


 
 ○  ○  ○	Off	To print, turn on the device.
 ○  ○  ●	Error/ blink	Update Failed
 ○  ●  ○	Charging	To print, turn on the device.
 ○  ●  ○	Full charge	Battery is fully charged.

  	Battery is high temperature (above 45 °C)	While continuous printing, battery temperature is overheated. (Wait for a while.)
  	Error/Blink	No paper, Paper jam, Cancelled, Opened, Low/high temperature, Unsupported file format
  	Low battery/ Blink	To print, charge the device.
  	Charge the battery	Remaining battery is less than 30%

	Printing/ Blink	Transferring data via Bluetooth or Printing
 	Cooling mode/ Blink	After continuous printing the device may automatically cool down its internal temperature. Wait for a while to print again.

## Specifications

Photo size	50 mm x 76 mm (Dot size : 640 x 1224)
Image file type/size	PNG (Max: 1350x1050), JPEG (Baseline) / less than 10 MB (Progressive JPEG is not supported.)
Media paper used	ZINK™ Photo Paper (exclusive for LG)
Media paper storage environment	Temperature : 20 - 25 °C Humidity : 40 - 55 % RH
Device operation environment	Temperature : 5 - 40 °C Humidity : less than 70 % (35 °C) (An temperature limitation message appears on the App.)
Optimum print environment	Temperature : 15 - 32 °C Humidity : less than 70 % (32 °C)


LED indicator	Power / Waiting / Bluetooth transmitting / Charged / Discharged / Error / Condition of printer/ Update
Communication	Bluetooth 4.0
External connector	Micro USB port for charging battery
Bus Power Supply (USB)	(Adapter) DC 5 V  1.0 A
Battery life	500 mAh Li-Polymer rechargeable battery
Power supply	AC adapter (DC 5 V  1.0 A)
Image resolution	More than 1280 x 2448 pixels
Dimensions (W x D x H)	76 mm x 126 mm x 20 mm
Net Weight	221 g



Pocket Photo App supporting version	<ul style="list-style-type: none"> <li>• Android v2.2 or higher</li> <li>• iOS v5.1 or higher</li> <li>• Windows Phone 8.0 or higher</li> </ul>
-------------------------------------	---

- Your phone may be incompatible with the device depending on its manufacturer, environment or (Android or iOS) operating system.
- Design and specifications are subject to change without prior notice.
- All other product and brand names are trademarks or registered trademarks of their respective owners.


## Troubleshooting

Symptom	Cause / Solution
No power	<p>The battery is discharged.</p> <p>Be sure the device is connected to charger or PC properly when charging.</p>
Bluetooth pairing does not work well.	<p>Switch Bluetooth off and on again on your smartphone, then pair with the device in the smartphone's settings.</p> <p>Turn on the device and try printing (pairing) again in 5 sec.</p> <p>Be sure the device is on.</p>

The paper is jammed before printing.	1. Turn the device off and on again then paper is ejected automatically.
The paper is jammed during printing.	2. If above solution does not work, open the Upper cover and arrange the papers. Then insert them with Smart Sheet (Blue) or pull the paper out slowly and gently.
The printed photo has lines.	Open the Upper cover, arrange the papers and insert them with Smart Sheet locating at the bottom. Then try printing again. (To open the Upper cover, refer to "Checking Label".
No or incomplete image is printed.	
The edge of the image on the photo is cut off.	Set Print mode to  in the App's setting then the image is printed as a whole.

White space appears at the edge of the paper.	When print mode is set to  , white space may appear if the aspect ratio of the paper and your image is not the same. When print mode is set to  , the edge of the image can be cut off or white space at the edge of the paper may appear.
---	---



Quality of printed photo is too low.	In case you magnify an image using  menu in the App, the quality of the printed photo may be reduced.
	Turn off the device and insert Smart Sheet locating at the bottom of the papers. Then try printing again.
	Be sure the photo size is bigger than the proper resolution.(1280 x 2448 pixels)
	When using Smart Sheet, it should be used with photo papers in the same pouch.
	If you use other company's photo paper, it cannot be guaranteed for print quality or damage of pocket photo.

Device does not print.	Preheating is needed. Wait for about 2 min.
	Be sure there are papers in the device.
	It may take time to print after Smart Sheet is ejected.
	Be sure the photo file is less than 10 MB. Only baseline JPEG, PNG (Max: 1350x1050) format is supported.
Device is turned off automatically.	Check [Auto Power Off] time in the App's setting.
Above solutions do not work.	Press Reset hole with a pointed thing like mechanical pencil to initialize.

