

OWNER'S MANUAL

Please read this manual carefully before operating your set and retain it for future reference. Installation work must be performed in accordance with the national wiring standards by authorized personnel only.

This equipment shall be provided with a supply conductor complying with the national regulation.

Original instruction (R410A/R32)

[Representative] LG Electronics Inc. EU Representative : LG Electronics European Shared Service Center B.V. Krijgsman 1, 1186 DM Amstelveen, The Netherlands [Manufacturer] LG Electronics Inc. Changwon 2nd factory 84, Wanam-ro, Seongsan-gu, Changwon-si, Gyeongsangnam-do, KOREA



MFL67870252 Rev.03_120219 www.lg.com Copyright © 2017 - 2019 LG Electronics Inc. All Rights Reserved. ITALIANO ESPAÑOL FRANÇAIS DEUTSCH EAAHNIKA

ENGLISH УССКИЙ ЯЗЫК

УКРАЇНСЬКА

ҚАЗАҚ ТІЛ

БЕЛАРУСКАЯ МОВ/

O'ZBEK TIL

LIMBA ROMÂNĂ

FAL

TABLE OF CONTENTS

3 SAFETY INSTRUCTIONS

9 PRIOR TO OPERATION

- 9 Preparing for Operation
- 9 Usage
- 9 Cleaning and Maintenance
- 9 Service

10 OPERATING INSTRUCTIONS

- 10 Forced Operation
- 10 Auto Restart Function

11 MAINTENANCE AND SERVICE

- 11 Ceiling Cassette 1Way (Plasma + Grille Type)
- 12 Ceiling Cassette 1Way (Plasma + Panel Type)
- 13 Ceiling Cassette 2Way
- 14 Ceiling Cassette 4Way
- 15 Ceiling Cassette Round
- 16 Ceiling Concealed Duct & Fresh Air Intake Unit
- 17 Concealed Floor Standing
- 18 Art Cool Gallery Series
- 20 Wall Mounted
- 21 Convertible
- 22 Console
- 23 When the air conditioner is not going to be used for a long time
- 23 Operation Tips
- 24 Before you call for service...

Safety Instructions

The following symbols are displayed on indoor and outdoor units

i	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with flammable refrigerant (for R32)
	This symbol indicates that the Operation Manual should be read carefully.	Æ	This symbol indicates that a service personnel should be handling this equipment with reference to the Installation Manual.

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

This symbol is displayed to indicate matters and operations that can cause risk.

Read the part with this symbol carefully and follow the instructions in order to avoid risk.

A WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

Installation

- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.
 - There is risk of fire or electric shock.
- For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.
 - Do not disassemble or repair the product. There is risk of fire or electric shock.

- Always ground the product.
 - There is risk of fire or electric shock.
- · Install the panel and the cover of control box securely.
 - There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker.
 - Improper wiring or installation may cause fire or electric shock
- Use the correctly rated breaker or fuse.
 - There is risk of fire or electric shock.
- Do not modify or extend the power cable.
 - There is risk of fire or electric shock.
- Do not install, remove, or re-install the unit by yourself (customer).
 - There is risk of fire, electric shock, explosion, or injury.
- Be cautious when unpacking and installing the product.
 - Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.
- For installation, always contact the dealer or an Authorized Service Center. - There is risk of fire, electric shock, explosion, or injury.
- Do not install the product on a defective installation stand. - It may cause injury, accident, or damage to the product.
- Do not turn on the breaker or power under condition that front panel, cabinet, top cover, control box cover are removed or opened.
 - Otherwise, it may cause fire, electric shock, explosion or death.
- Be sure the installation area does not deteriorate with age.
 - If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.
- Use a vacuum pump or Inert (nitrogen) gas when doing leakage test or air purge. Do not compress air or Oxygen and Do not use Flammable gases. Otherwise, it may cause fire or explosion.
 - There is the risk of death, injury, fire or explosion.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation. (for R32)
- Ducts connected to an appliance shall not contain an ignition source. (for R32)
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)
- Keep any required ventilation openings clear of obstruction.

ENGLISH

Operation

- Take care to ensure that power cable could not be pulled out or damaged during operation.
 - There is risk of fire or electric shock.
- Do not place anything on the power cable. - There is risk of fire or electric shock.
- Do not touch(operate) the product with wet hands.
 - There is risk of fire or electrical shock.
- Do not place a heater or other appliances near the power cable.
 - There is risk of fire and electric shock.
- Do not allow water to run into electric parts.
- It may cause There is risk of fire, failure of the product, or electric shock.
- Do not store or use flammable gas or combustibles near the product. - There is risk of fire or failure of product.
- Do not use the product in a tightly closed space for a long time.
 - Oxygen deficiency could occur.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.
 - Do not use the telephone or turn switches on or off. There is risk of explosion or fire.
- If strange sounds, smell or smoke comes from product. Turn the breaker off or disconnect the power supply cable.
 - There is risk of electric shock or fire.
- Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.
 - There is risk of property damage, failure of product, or electric shock.
- Do not open the inlet grill of the product during operation.
 (Do not touch the electrostatic filter, if the unit is so equipped.)
 There is risk of physical injury, electric shock, or product failure.
- When the product is soaked (flooded or submerged), contact an Authorized Service Center.
 - There is risk of fire or electric shock.
- Be cautious that water could not enter the product.
 - There is risk of fire, electric shock, or product damage.

- Ventilate the product from time to time when operating it together with a stove, etc.
 - There is risk of fire or electric shock.
- Turn the main power off when cleaning or maintaining the product.
 - There is risk of electric shock.
- Take care to ensure that nobody could step on or fall onto the outdoor unit. - This could result in personal injury and product damage.
- Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.
 - Moisture may condense and wet or damage furniture.
- Do not turn on the breaker or power under condition that front panel, cabinet, top cover, control box cover are removed or opened.
 - Otherwise, it may cause fire, electric shock, explosion or death.

Installation

- Always check for gas (refrigerant) leakage after installation or repair of product.
 - Low refrigerant levels may cause failure of product.
- Install the drain hose to ensure that water is drained away properly. - A bad connection may cause water leakage.
- Keep level even when installing the product.
 - To avoid vibration or water leakage.
- Use two or more people to lift and transport the product.
 - Avoid personal injury.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification. (for R32)
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.
 - It may cause a problem for your neighbors.

- If anyone other than a licensed professional installs, repairs, or alters LG Electronics air conditioning products, the warranty is voided.
 - All costs associated with repair are then the full responsibility of the owner.

Operation

- Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)
 - This could harm to your health.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.
 - There is risk of damage or loss of property.
- Do not block the inlet or outlet of air flow.
 - It may cause product failure.
- Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.
 - There is risk of fire, electric shock, or damage to the plastic parts of the product.
- Do not touch the metal parts of the product when removing the air filter. They are very sharp!
 - There is risk of personal injury.
- Do not step on or put anything on the product. (outdoor units) - There is risk of personal injury and failure of product.
- Always insert the filter securely. Clean the filter every two weeks or more often if necessary.
 - A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.
- Do not insert hands or other objects through the air inlet or outlet while the product is operated.
 - There are sharp and moving parts that could cause personal injury.
- Do not drink the water drained from the product.
 - It is not sanitary and could cause serious health issues.
- Use a firm stool or ladder when cleaning or maintaining the product.
 - Be careful and avoid personal injury.

- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants. (for R32)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not touch refrigerant pipe and water pipe or any internal parts while the unit is operating or immediately after operation.
 - It can cause a burn or frostbite.

Prior to Operation

Preparing for Operation

- 1. Contact an installation specialist for installation.
- 2. Use a dedicated circuit.

Usage

- 1. Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- 2. Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- 3. Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

Cleaning and Maintenance

- 1. Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- 2. Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- 3. When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.

Service

For repair and maintenance, contact your authorized service dealer.

Operating Instructions


Forced Operation

Operation procedures when the remote control can't be used.

Press the tact switch (ON/OFF button) for 2 seconds.

If you want to stop operation, press again the tact switch.

In case the power comes on again after power failure on the forced operation mode, the operating conditions are automatically set as follows:During forced operation, the initial mode continues.

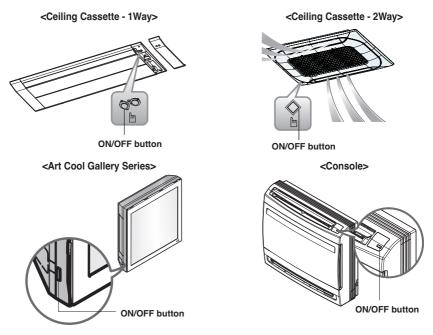

* The feature may be changed according to the type of model.

	Cooling	Heat pump model		
	Model	Room Temperature < 21 °C	21 °C ≤Room Temperature <24 °C	Room Temperature \geq 24 °C
Operating mode	Cooling	Heating	Dehumidification	Cooling
Indoor Fan Speed	High	High	High	High
Setting temperature	22 °C	24 °C	-	22 °C

Auto Restart Function

In case the power comes on again after a power failure, auto restarting operation is the function to operate procedures automatically to the previous operating conditions.

Maintenance and Service

Ceiling Cassette - 1Way (Plasma + Grille Type)

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filter


The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.

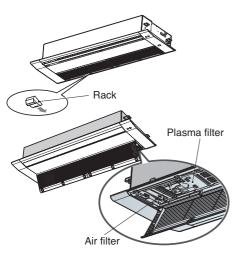

TT chassis : 6 EA Rack TU chassis : 4 EA Rack

- □ Never use any of the followings:
 - Water hotter than 40 °C. Could cause deformation and/or discoloration.
 - Volatile substances. Could damage the surfaces of the air conditioner.



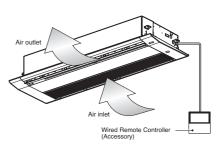

1. Remove air filters.

Take hold of the tab and pull slightly forward to remove the filter.

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

2. Remove plasma filter.

Unscrew 2 screws from plasma filter.

- 3. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - □ If hot water (50 °C or more) is used, it may be deformed.
- 4. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 5. Install plasma filter and air filter.

Ceiling Cassette - 1Way (Plasma + Panel Type)

Before performing any maintenance, turn off the main power to the system.

Panel, Case, and Remote Control


□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filter

The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.

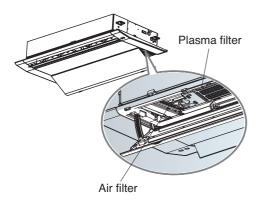


TT chassis : 6 EA Rack TU chassis : 4 EA Rack

Never use any of the followings:

- Water hotter than 40 °C. Could cause deformation and/or discoloration.
- Volatile substances. Could damage the surfaces of the air conditioner.



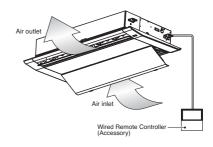

1. Remove air filters.

Take hold of the tab and pull slightly forward to remove the filter.

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

2. Remove plasma filter.

Unscrew 2 screws from plasma filter.

- 3. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (50 °C or more) is used, it may be deformed.
- 4. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 5. Install plasma filter and air filter.

Ceiling Cassette - 2Way

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filters


The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.

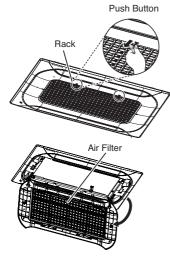

Never use any of the followings:

- Water hotter than 40 °C. Could cause deformation and/or discoloration.
- Volatile substances. Could damage the surfaces of the air conditioner.



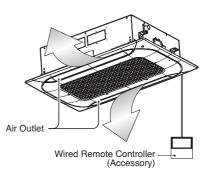

1. Remove the Air filters.

Take hold of the tab and pull slightly forward to remove the filter.

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (50 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

Ceiling Cassette - 4Way

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control

□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.


Air Filters

The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.



- Never use any of the followings:
 - Water hotter than 40 °C. Could cause deformation and/or discoloration.
 - Volatile substances. Could damage the surfaces of the air conditioner.



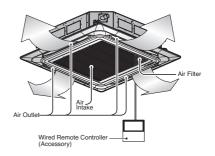

1. Remove the Air filters.

Take hold of the tab and pull slightly forward to remove the filter.

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
- If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
- If hot water (50 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

Ceiling Cassette - Round

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filters


The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.

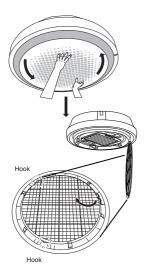

Never use any of the followings:

- Water hotter than 40 °C. Could cause deformation and/or discoloration.
- Volatile substances. Could damage the surfaces of the air conditioner.



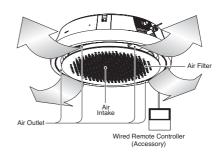

- 1. Remove the Air filters.
 - Take hold of the tab and pull slightly forward to remove the filter.

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
- If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
- If hot water (50 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

Ceiling Concealed Duct & Fresh Air Intake Unit

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


□ Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filter

The air filters behind Indoor unit (the suction side) should be checked and cleaned once every 2 weeks or more often if necessary.

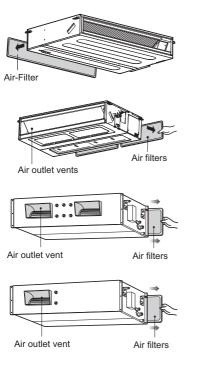

- Never use any of the followings:
 - Water hotter than 40 °C Could cause deformation and/or discoloration.
 - Volatile substances Could damage the surfaces of the air conditioner.



- 1. Remove the Air filters.
 - Take hold of the tab and pull slightly forward to remove the filter.

CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit. It may cause an injury.

- 2. Clean dirt from the air filter using a vacuum cleaner or washing with water.
 - If dirt is conspicuous, wash with a neutral detergent in lukewarm water.
 - If hot water (50 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
 - Do not expose the air filter to direct sunlight or heat from a fire when drying it.
- 4. Install the air filter.

* The feature can be changed according to the type of model.

Concealed Floor Standing

CAUTION

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control


Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filter

The air filters bottom Indoor unit (the suction side) should be checked and cleaned once every 2 weeks or more often if necessary.

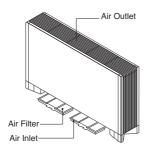

- Never use any of the followings:
 - Water hotter than 40 °C Could cause deformation and/or discoloration.
 - Volatile substances
 Could damage the surfaces of the air
 conditioner.



- 1. Clean the filter with a vacuum or warm, soapy water.
 - If very dirty, wash with a solution of detergent in lukewarm water.
 - If hot water (50 °C or more) is used, filter may be deformed.
- 2. After washing with water, dry well in the shade.
- 3. Re-install the air filter.

Art Cool Gallery Series

Before performing any maintenance, turn off the main power to the system, disconnect the circuit breaker and unplug the power cord.

Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

A CAUTION

Never use any of these

- Water hotter than 40 °C. It may cause deformation and discoloration.
- · Volatile substances. They may damage the surface of the air conditioner.

Air Filters

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water. Dry well in shade after washing and reinstall the filters back in place.

Plasma Filters

The plasma filters behind the air filter should be checked and cleaned once in every 3 months or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner. If it is dirty wash it with water and dry well in shade an install back in place.

Deodorizer Filters

Remove the deodorizer filters behind the air filter and expose them in direct sunlight for 2 hours. And then insert these filters into original position.


Removal of Filters

Art Cool Type :

Pull out the upper section of front panel and lift it up. Take out a filter with front panel held.

With PUSH button pressed, pull out grip to take out a plasma filter. Dry it completely in the shade after cleaning.

Then set a plasma filter and a filter orderly. Put the hook of front panel onto the hanger, in order to close the front panel.

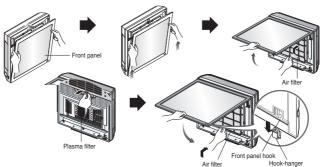

A CAUTION

Don't touch this plasma filter within 10 seconds after opening the inlet grille, it may cause an electric shock.



How to replace picture & photograph

 
1. Turn off power and then open the upper part of front panel.



4. Take out picture.




7. Cover mat and press down with hand(s) until contacting closely.





 
5. Turn upside-down of the picture and turn over mat, then take off a protective tape attached at the mat.




8. Slide the photo graph/drawing requested under both hanger parts as following, and fix them. Press the front panel lightly to close. **3.** Push and close the top part of the front panel and then pull the bottom part of the panel forward until it is secured.



 6. Place the picture/photograph between the exited picture and mat. (Recommended size of a photo/picture: 450 mm x 450 mm)



 9. Push both links of lower part of panel inside and fix it. Then turn on.








% In case a mat is not used, recommended size of a photo/picture: 522 mm x 522 mm

 When powering on after replacing filter and picture, the front panel doesn't intervene.



Wall Mounted

Before performing any maintenance, turn off the main power to the system.

Never use any of the followings:

- Water hotter than 40 °C. Could cause deformation and/or discoloration.
- Volatile substances. Could damage the surfaces of the air conditioner.

Air Filters

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams for each model type. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water. Dry well in shade after washing and reinstall the filters back in place.






Clean the air filter


Clean the air filter once every 2 weeks or more if necessary.

- 1. Turn off the power and unplug the power cord.
- 5~24 kBtu/h : Hold the knob of air filter, Lift it up slightly. 30~36 kBtu/h : Open the front panel as shown.

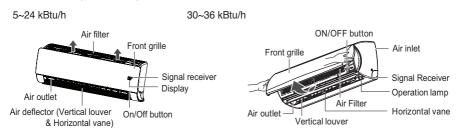

* The feature can be changed according to type of model.

 3. 5~24 kBtu/h : Hold the knob of air filter, Lift it up slightly and remove it from the unit. 30~36 kBtu/h : Pull the filter tab slightly forward to remove the air filter.



* The feature can be changed according to type of model.

- 4. Clean the filter with a vacuum cleaner or with warm water.
- If dirt is difficult to remove, wash the filter in lukewarm water with detergent.
- 5. Dry the filter in the shade.

NOTE The air filter can be broken when it is bended.

Convertible

Before performing any maintenance, turn off the main power to the system.

Grille, Case, and Remote Control

Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

NOTE

Supply power must be disconnected before cleaning the indoor unit.


□ Never use any of the followings:

- Water hotter than 40 °C. Could cause deformation and/or discoloration.
- Volatile substances
 Could damage the surfaces of the air conditioner.

AIR FILTERS

The air filters behind the front grille should be checked and cleaned once in every 2 weeks or more often if necessary.

- 1. Lift the front access panel and pull the filter tab slightly forward to remove the filter.
- 2. Clean the filter with a vacuum cleaner or warm, soapy water.
 - If dirt is conspicuous, wash with a solution of detergent in lukewarm water.
 - If hot water (40 °C or more) is used, it may be deformed.
- 3. After washing with water, dry well in the shade.
- 4. Re-install the air filter.

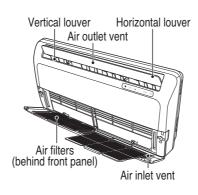



Console

Before performing any maintenance, turn off the main power to the system, disconnect the circuit breaker and unplug the power cord.

Cleaning of Panel and filters

Clean the unit with a soft dry cloth. Do not use bleach or abrasives.

Never use any of these

- Water hotter than 40 °C. It may cause deformation and discoloration.
- · Volatile substances. They may damage the surface of the air conditioner.

Air Filters

The air filters behind the front panel / grill should be checked and cleaned once in every 2 weeks or more often if necessary. To remove the filters see the self explanatory diagrams below. Clean the filters with a vacuum cleaner or warm soapy water. If dirt is not easily removed, wash with a solution of detergent in luke warm water. Dry well in shade after washing and reinstall the filters back in place.

Allergy Filter


Remove the Allergy Filter behind the air filter and expose them in direct sunlight for 2 hours.

And then insert these filters into original position.




Removal of Grille

- 1. Open the front grille by pulling forward
- 2. Then pull out the link of grille from groove in front panel.
- 3. Then pull out 2 hinges of grille from grooves in front panel.

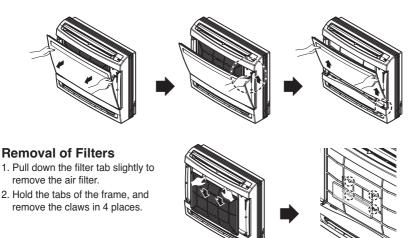

When the air conditioner is not going to be used for a long time

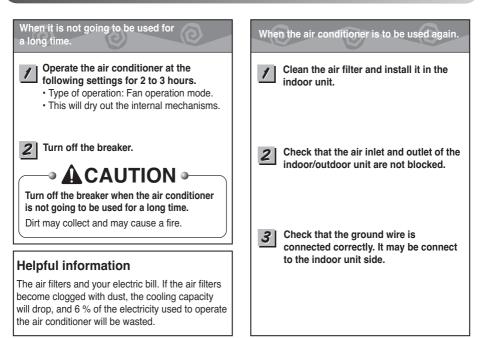

Operation Tips

Do not overcool the room. This is not good for the health and wastes electricity.	Keep blinds or curtains closed. Do not let direct sunshine enter the room when the air conditioner is in operation.	Keep the room temperature uniform. Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.
Make sure that the doors	Clean the air filter regularly.	Ventilate the room
and windows are shut tight.	Blockages in the air filter	occasionally.
Avoid opening doors and	reduce the airflow and lower	Since windows are kept
windows as much as possible	cooling and dehumidifying	closed, it is a good idea to
to keep the cool air in the	effects. Clean at least once	open them and ventilate the
room.	every two weeks.	room now and then.

Before you call for service...



Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

The air conditioner does not operate.	The room has a peculiar odor.	It seems that condensation is leaking from the air conditioner.	Air conditioner does not operate for about 3 minutes when restart.
 Have you made a mistake in timer operation? Has the fuse blown or has the circuit breaker been tripped? 	Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.	Condensation occurs when the airflow from the air conditioner cools the warm room air.	 This is the protector of the mechanism. Wait about three minutes and operation will begin.
Does not cool or heat effectively.	The air conditioner operation is noisy.	Crack sound is heard.	Remote control display is faint, or no display at all.
 Is the air filter dirty? See air filter cleaning instructions. The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. Has the temperature been set incorrectly? Are the indoor unit's air inlet or outlet vents obstructed? 	 For a noise that sounds like water flowing. This is the sound of freon flowing inside the air conditioner unit. For a noise that sounds like the compressed air releasing into atmosphere. This is the sound of the dehumidifying water being processed inside the air conditioning unit. 	This sound is generated by the expansion/ constriction of the front panel, etc. due to changes of temperature.	 Are the batteries depleted? Are the batteries inserted in the opposite (+) and (-) directions?

NOTE

· Water resistant: The outdoor side of this appliance is WATER RESISTANT.

The indoor side is not water resistant and should not be exposed to excess water. • Some functions may not be supported, depending on the model.

