



SIMPLE MANUAL

Wireless Sound Bar


To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
LAS550H





Front Panel

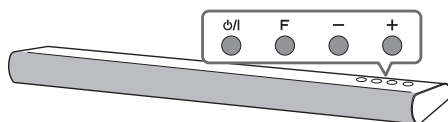

- ⏻ Power On /Off
- F Selects Function
- + Adjusts Volume

1 Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of wireless subwoofer to the outlet.
- 2 Turn on the sound bar :
The sound bar and wireless subwoofer will be **automatically** connected. A yellow-green LED on the wireless subwoofer will light on.



If no sound is heard from the wireless subwoofer, please follow as below.


- i. Adjust volume level of sound bar to minimum. "VOL MIN" appears on display window.
- ii. Press and hold (Mute) button on the remote control about 3 seconds. "WL RESET" appears on display window and red LED on the sound bar blinks.
- iii. Press and hold PAIRING on the back of wireless subwoofer for more than 5 seconds using point of a pen.
- iv. Disconnect the power cord of the sound bar and the wireless subwoofer. Connect them again.

Controller App



Download the **Music Flow Bluetooth** App to your device.

Rear Panel

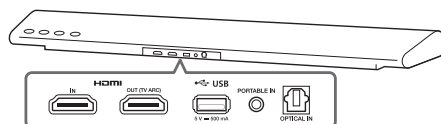


- HDMI IN Connect to a device
- HDMI OUT (TV ARC) Connect to a TV
- USB port Connect to a USB device
- PORTABLE IN Connect to a Portable device
- OPTICAL IN Connect to an Optical device

2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

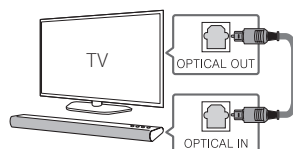

B HDMI(ARC) Connection

- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

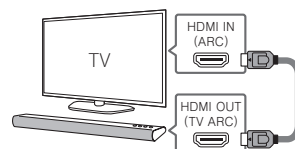

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>


Additional Information

Specification

| | |
|------------------------------------|--|
| Power requirements | Refer to the main label. |
| Power consumption | Refer to the main label. |
| | Networked standby : 2.5 W (If all network ports are activated.) |
| Dimensions (W x H x D) | Approx. 890 mm x 51 mm x 85 mm |
| Net Weight | Approx. 2.8 kg |
| Bus Power Supply (USB) | 5 V 500 mA |
| Amplifier (Total RMS Output power) | 320 W |

Design and specifications are subject to change without notice.

Remote control

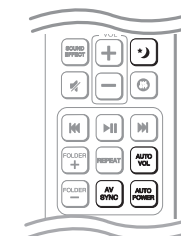


- : Turns down the volume at night.
- : Adjusts the volume level appropriately.
- : Synchronizes the audio and video.
- : Automatically turns on by an input source.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Replacement of battery

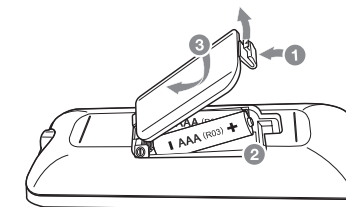

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE