




Quick Start Guide

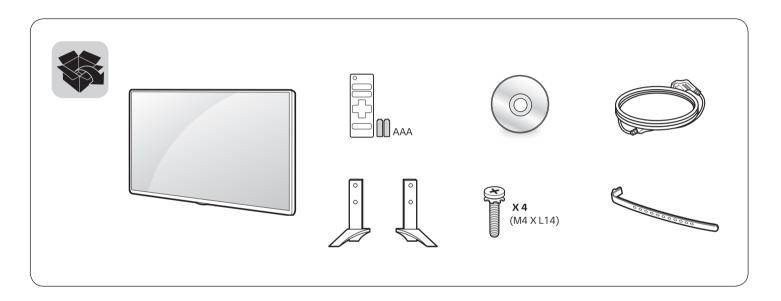

^{*}Images may vary depending on models.

Unpacking

Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.







- Read Safety and Reference.
- For the power supply and power consumption, refer to the label attached to the product.





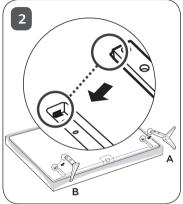

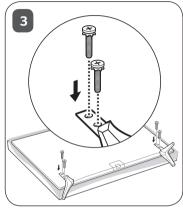







- Image shown may differ from your TV.
- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.





 

 















- Image shown may vary depending on model.
- All connection cables & devices shown in the picture are not included along with the TV set.





H/P OUT





OPTICAL DIGITAL **AUDIO OUT**









- Image shown may vary depending on model.
- All connection cables & devices shown in the picture are not included along with the TV set.





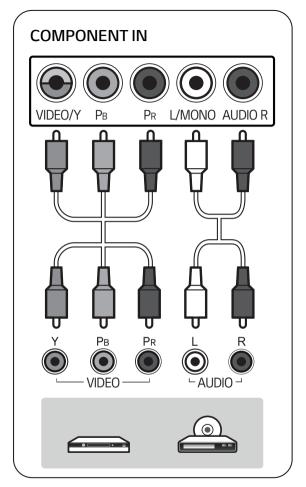

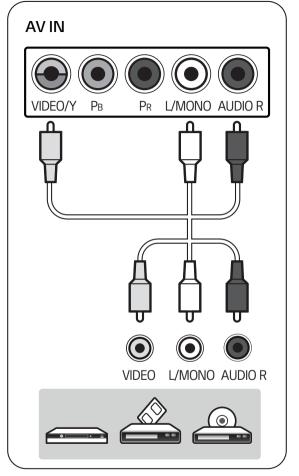



NOTE-

- Image shown may vary depending on model.
- All connection cables & devices shown in the picture are not included along with the TV set.





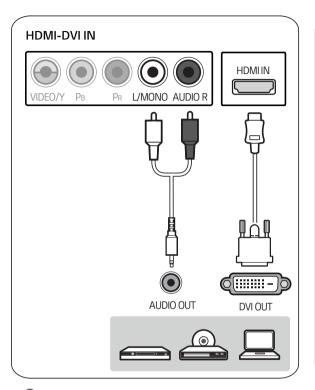


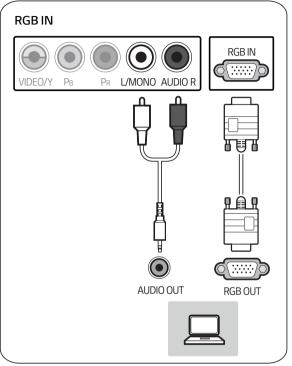




- Image shown may vary depending on model.
- All connection cables & devices shown in the picture are not included along with the TV set.




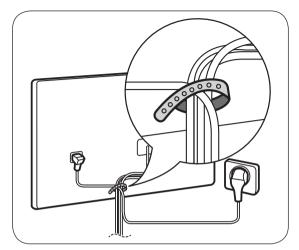



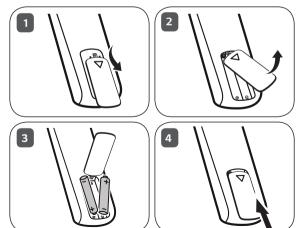




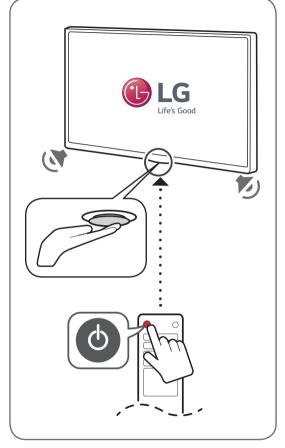

– 🕡 NOTE

• Image shown may vary depending on model.



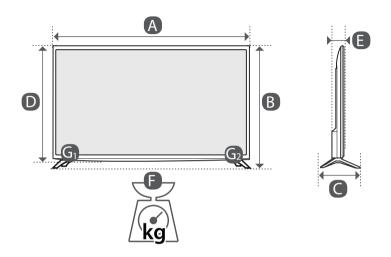

	A (mm)	B (mm)	C (mm)	(mm)	(mm)	(kg)	F -(G)+ G)(kg)
43LW310C-TA	971	624	198	575	58.7	9.8	9.5
49LW310C-TA	1103	698	198	650	58.7	13.4	13.1
Power requirement					AC 100-240 V ~ 50 / 60 Hz		