

SIMPLE MANUAL Micro Hi-Fi Audio

To view the instructions of advanced features, visit <u>http://www.lg.com</u> and then download Owner's Manual. Some of the content in this manual may differ from your unit.


MODEL CM2760




www.lg.com



Front Panel

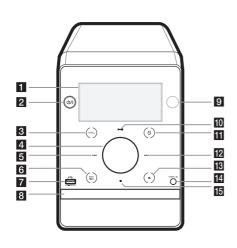

1	Display window
2	也/I (Power): Switches the unit ON or OFF.
3	FUNC. : Selects the function or input source.
4	Adjusts volume of speaker.
5	(Skip/Search) : Searches backward. / Skips to the previous track/file. / Selects the radio stations.
6	Bass Blast : Selects BASS effect.
7	USB : Plays the audio files by connecting the USB device.
8	Disc tray
9	Remote sensor
10	►/II (Play/Pause) : Starts or pauses playback. / Selects Stereo/Mono.
11	🛞 : Changes input source to the Bluetooth .
12	(Skip/Search) : Searches forward. / Skips to the next track/file. / Selects the radio stations.
13	▲ : Opens or closes the disc tray.
14	PORT. IN : Connects to a Portable device.
15	■ (Stop) : Stops playback.

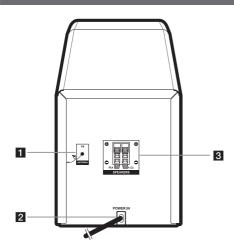

Rear Panel

- 1 FM ANTENNA
- 2 POWER IN
- 3 SPEAKERS (L/R) terminals

Controller App




Download the **Music Flow Bluetooth** App to your device.

LG Sound Sync (Wireless)



For more information, download the online owner's manual. http://www.lg.com


Speaker Connection

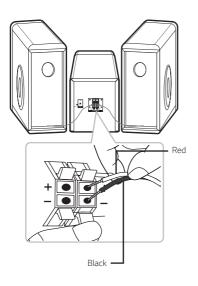

How to disconnect the wireless network connection or the wireless device

Turn off the unit by pressing the power button for more than 5 seconds.

Replacement of battery

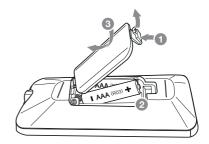

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
	Refer to the main label on the unit.
Power Consumption	Networked standby : 0.5 W
	(If all network ports are activated.)
Dimensions (W \times H \times D)	Approx. 170 mm x 230 mm x 276 mm
Net Weight	Approx. 2.2 kg
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	160 W

Design and specifications are subject to change without notice.

