

Easy Setup Guide Specification

담당	관리자	
HR JHO 11.04.14	HR JHO 11.04.14	HR JHO 11.04.14

1. Model Description

MODEL	65VS10-PQ	BRAND	65VS10	Part No.	MBM63399901 (1104-REV00)
SUFFIX	EUROPE,ASIA,USA	Product Name	EASY SETUP GUIDE		

2. Printing Specification

1. Trim Size (Format) : 420mm x 297 mm (WXH)
 2. Fold Step Size (Format) : 210 mm x 148.5 mm (WXH)
 3. Printing Colors
: 1 COLOR
 4. Stock (Paper)
: Uncoated paper 80 g/㎡ (백상지)
 5. Printing Method : OFF SET
 6. Bindery : One Sheet (2 Folded)
 7. Language : English / German / French / Italian (4)
 8. Number of pages : 2
- * 두 번 접지 후 최종은 "Easy Setup Guide" 라는 제목이 앞면으로 오게 함
(The title "Easy Setup Guide" should be a front page after doing fold 2)

NOTES

- * This part contain Eco-hazardous substances (Pb, Cd, Hg, Cr6+, PBB, PBDE, etc.) within LG standard level, Details should be followed Eco-SCM management standard[LG(56)-A-2524]. Especially, Part should be followed and controlled the following specification.
- (1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production.
 - (2) Especially, Don't use or contain lead(Pb) and cadmium(Cd) in ink.

3. Special Instructions

(1) Origin Notification

- | | | |
|--------------------------------|-----------------------------|-----------------------------|
| * LGEIN : Printed in Indonesia | * LGEWA : Printed in U.K | * LGEMA : Printed in Poland |
| * LGESP : Printed in Brazil | * LGEMX : Printed in Mexico | |
| * LGEND : Printed in China | * LGEIL : Printed in India | |

 
4. Changes

△8				
△7				
△6				
△5				
△4				
△3				
△2				
△1				
REV. NO.	MM/DD/YY	SIGNATURE	CHANGE NO.	CHANGE CONTENTS




Pagination sheet

P/NO. MBM63399901
Total pages : 2 pages

Outside

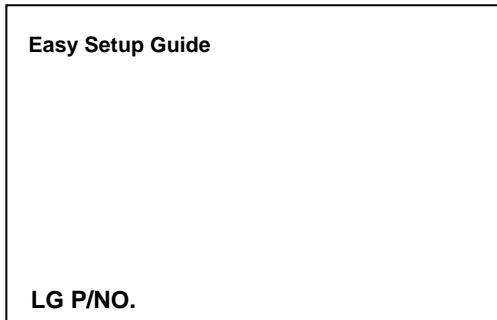

Inside

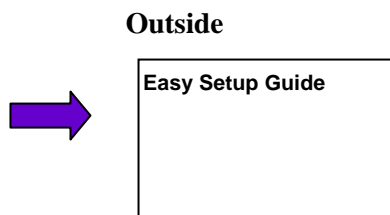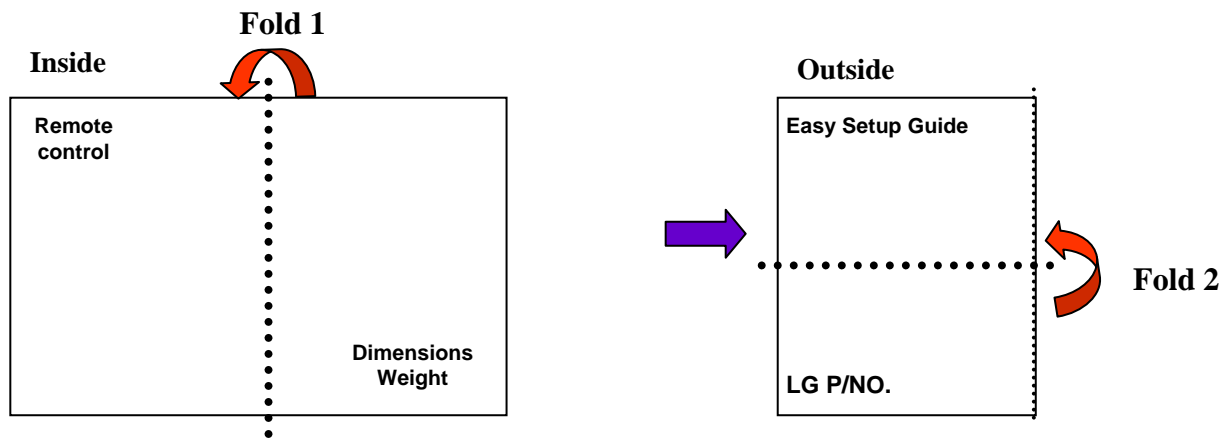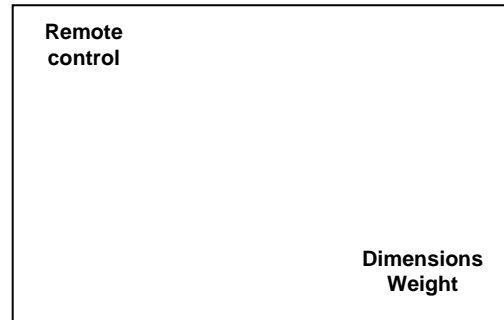   

LG Easy Setup Guide

65VS10

ENG ENGLISH DEU DEUTSCH FRA FRANÇAIS ITA ITALIANO



Please read this Easy Setup Guide carefully before operating your product. Keep it for future reference and record the model number and serial number of the product. See the label attached on the product and quote this information to your dealer if you require service.

 
Accessories / Zubehör / Accessoires fournis / Accessori

ENG Make sure the following items are included with your product. Included accessories may look slightly different from the figures shown below.

DEU Stellen Sie sicher, dass die folgenden Zubehörteile im Lieferumfang des Produkts enthalten sind. Die mitgelieferten Zubehörteile können von den nachstehenden Abbildungen abweichen.

FRA Assurez-vous que les accessoires suivants sont inclus avec votre moniteur. Les accessoires fournis peuvent avoir un aspect légèrement différent de ceux représentés ci-dessous.

ITA Assicurarsi che i seguenti componenti siano in dotazione con il prodotto. Gli accessori inclusi potrebbero differire leggermente dalle immagini illustrate di seguito.

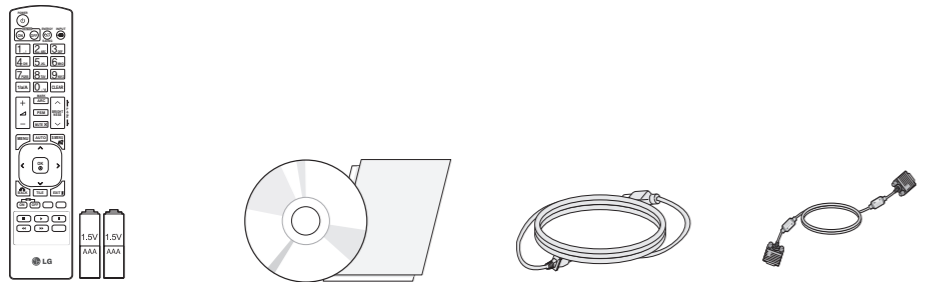

Remote Control / Batteries CD (Owner's Manual) / Card Power Cord D-Sub Signal Cable

 
Optional Accessories /

ENG Without prior notice, optional accessories are subject to change to improve the performance of the product, and new accessories may be added. Optional accessories are not included for all models.

DEU Without prior notice, optional accessories are subject to change to improve the performance of the product, and new accessories may be added. Optional accessories are not included for all models.

FRA Without prior notice, optional accessories are subject to change to improve the performance of the product, and new accessories may be added. Optional accessories are not included for all models.


ITA Without prior notice, optional accessories are subject to change to improve the performance of the product, and new accessories may be added. Optional accessories are not included for all models.



Speaker




 
Screws/Cable



Cable holder/
Cable Tie



Speaker kit

  Connecting the power / Anschluss an die Stromversorgung / Raccordement à l'alimentation / Collegamento del cavo di alimentazione

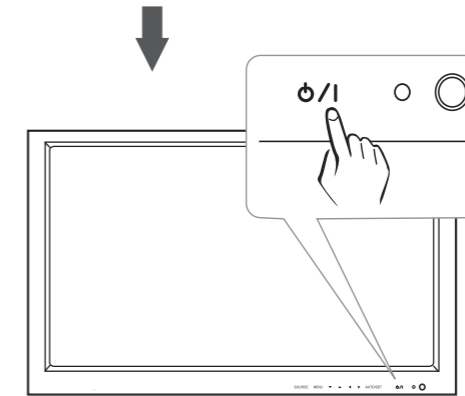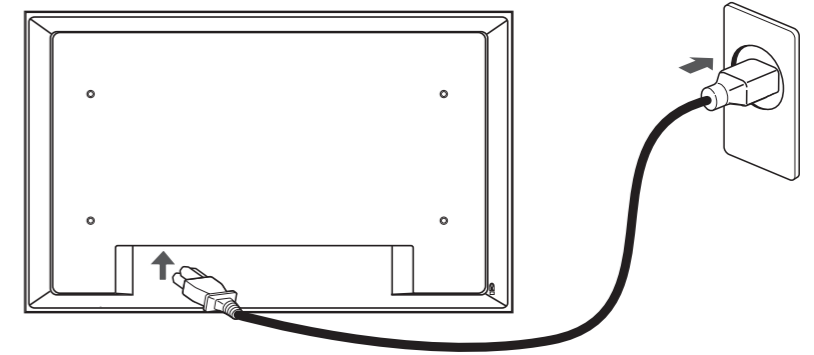


ENG Power turn On/Off
DEU Gerät ein-/ausschalten
FRA Marche/Arrêt
ITA Pulsante di accensione/spengimento

  Connecting external devices / Verbinden externer Geräte / Raccordement d'appareils externes / Collegamento di dispositivi esterni

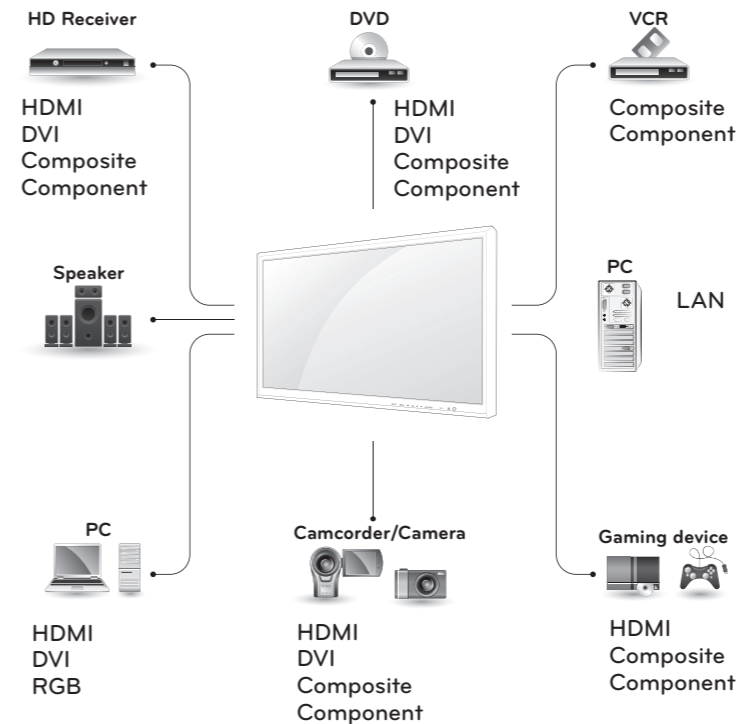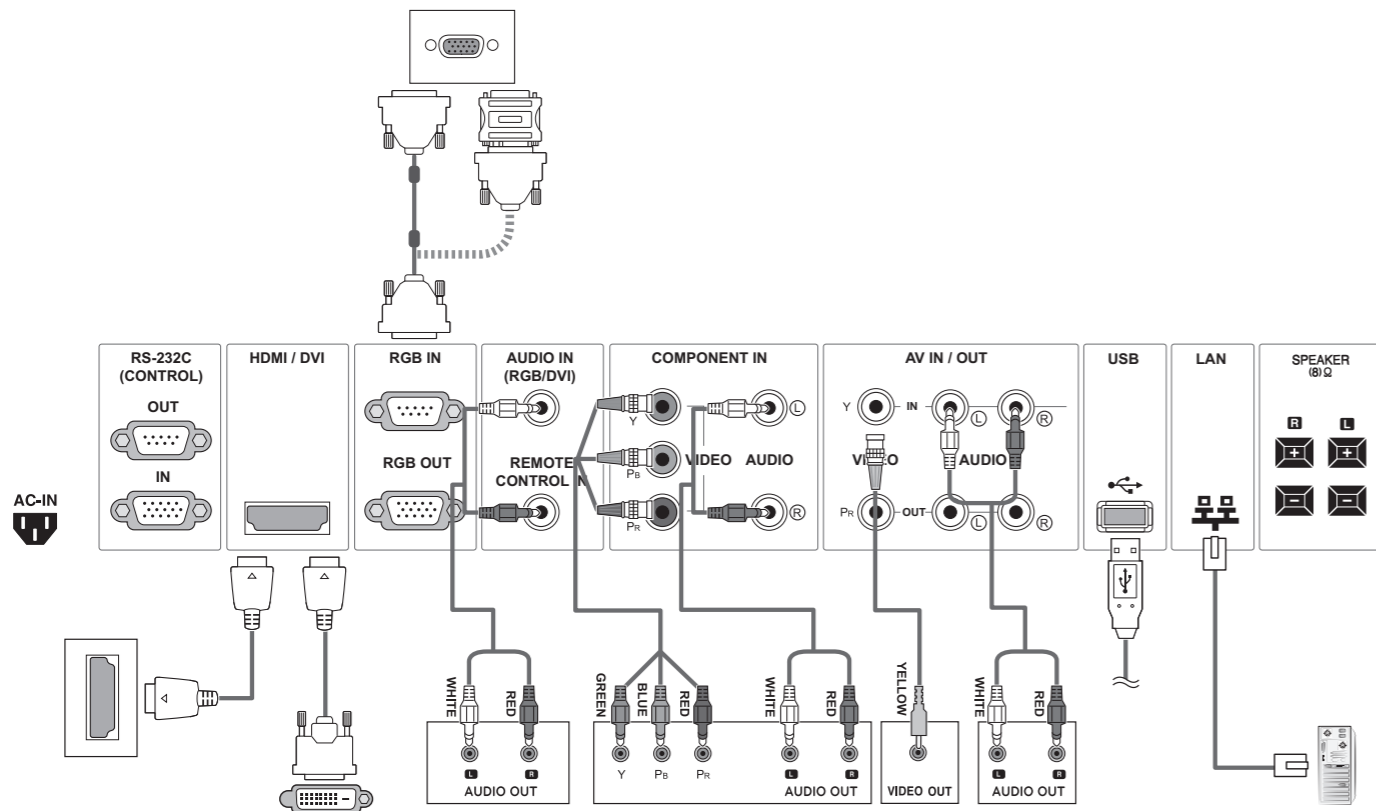

! Note / Hinweis / Remarque / Nota

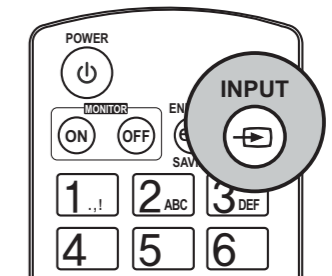 


ENG Select an input signal.
AV → RGB PC → HDMI/DVI

DEU Wählen Sie ein Eingangssignal aus.
AV → RGB PC → HDMI/DVI

FRA Sélectionnez un signal d'entrée.
AV → RGB PC → HDMI/DVI

ITA Selezionare un segnale di ingresso.
AV → RGB PC → HDMI/DVI

 ! Note / Hinweis / Remarque / Nota

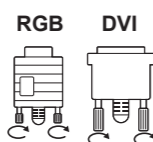

ENG Connect the signal input cable and tighten it by turning the screws clockwise.

DEU Schließen Sie das Eingangskabel an, und sichern Sie es, indem Sie die Schrauben im Uhrzeigersinn festziehen.

FRA Raccordez le câble d'entrée de signal et serrez-le en tournant les vis dans le sens des aiguilles d'une montre.

ITA Collegare il cavo di ingresso del segnale e fissarlo ruotando le viti in senso orario.

 
Remote control /

ENG

- 1 **POWER**: Turns the Monitor set on or off.
- 2 **Monitor On / Off**: Turn off the monitor and then turn it back on.
- 3 **Number and Alphabet buttons**: Enters numbers. The alphabet selection is not applicable.
- 4 **1/a/A Button**: This button selection is not applicable.
- 5 **Volume Button**: Volume up and down.
- 6 **PSM Button**: Selects the Picture Status Mode.
- 7 **Mute button**: Accesses the main menus or saves your input and exit menus.
- 8 **MENU**: Selects the input mode.
- 9 **Navigation buttons**: Scrolls through menus or options.
- 10 **OK**: Selects menus or options and confirms your input.
- 11 **BACK**: Allows the user to move return one step in an interactive application, EPG or other user interaction function.
- 12 **ID ON/OFF button**: When the number of input ID is equal to the number of ID Mode, you can control the monitor which you want in the multi display condition.
- 13 **USB Menu control buttons**
USB menu(Photo List and Music List or Movie List).
- 14 **ENERGY SAVING**: Adjusts the brightness of the screen to reduce energy consumption.
- 15 **INPUT**: If you press the button once, the following Input Signal. Window will appear. Select the signal type you want using the button.
- 16 **Clear button**: This button selection is not applicable.
- 17 **ARC Button**: Selects the Aspect Ratio Mode.
- 18 **Brightness Key**: Adjust the brightness by pressing the Up and Down buttons on the remote control.
- 19 **AUTO**: Automatically adjusts picture position and minimizes image instability.(RGB input only).
- 20 **S.MENU**: This button selection is not applicable.
- 21 **EXIT**: Clears all on-screen displays and returns to Monitor set viewing from any menu.
- 22 **TILE**: Selects the TILE Mode.

DEU

- 1 **POWER**: Turns the Monitor set on or off.
- 2 **Monitor On / Off**: Turn off the monitor and then turn it back on.
- 3 **Number and Alphabet buttons**: Enters numbers. The alphabet selection is not applicable.
- 4 **1/a/A Button**: This button selection is not applicable.
- 5 **Volume Button**: Volume up and down.
- 6 **PSM Button**: Selects the Picture Status Mode.
- 7 **Mute button**: Accesses the main menus or saves your input and exit menus.
- 8 **MENU**: Selects the input mode.
- 9 **Navigation buttons**: Scrolls through menus or options.
- 10 **OK**: Selects menus or options and confirms your input.
- 11 **BACK**: Allows the user to move return one step in an interactive application, EPG or other user interaction function.
- 12 **ID ON/OFF button**: When the number of input ID is equal to the number of ID Mode, you can control the monitor which you want in the multi display condition.
- 13 **USB Menu control buttons**
USB menu(Photo List and Music List or Movie List).
- 14 **ENERGY SAVING**: Adjusts the brightness of the screen to reduce energy consumption.
- 15 **INPUT**: If you press the button once, the following Input Signal. Window will appear. Select the signal type you want using the button.
- 16 **Clear button**: This button selection is not applicable.
- 17 **ARC Button**: Selects the Aspect Ratio Mode.
- 18 **Brightness Key**: Adjust the brightness by pressing the Up and Down buttons on the remote control.
- 19 **AUTO**: Automatically adjusts picture position and minimizes image instability.(RGB input only).
- 20 **S.MENU**: This button selection is not applicable.
- 21 **EXIT**: Clears all on-screen displays and returns to Monitor set viewing from any menu.
- 22 **TILE**: Selects the TILE Mode.

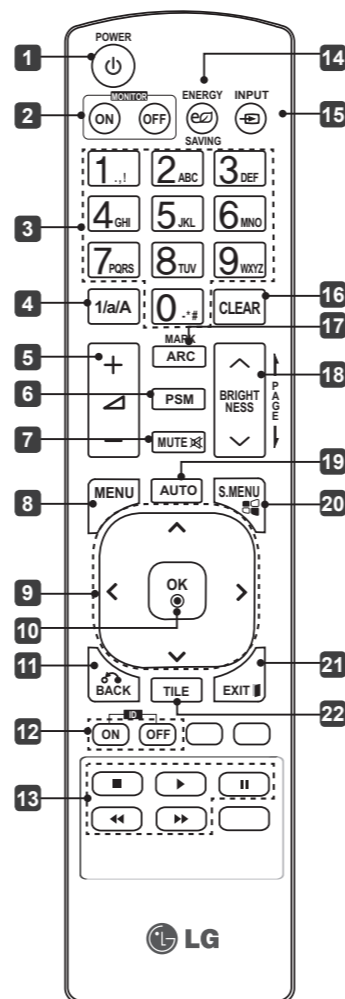

FRA

- 1 **POWER**: Turns the Monitor set on or off.
- 2 **Monitor On / Off**: Turn off the monitor and then turn it back on.
- 3 **Number and Alphabet buttons**: Enters numbers. The alphabet selection is not applicable.
- 4 **1/a/A Button**: This button selection is not applicable.
- 5 **Volume Button**: Volume up and down.
- 6 **PSM Button**: Selects the Picture Status Mode.
- 7 **Mute button**: Accesses the main menus or saves your input and exit menus.
- 8 **MENU**: Selects the input mode.
- 9 **Navigation buttons**: Scrolls through menus or options.
- 10 **OK**: Selects menus or options and confirms your input.
- 11 **BACK**: Allows the user to move return one step in an interactive application, EPG or other user interaction function.
- 12 **ID ON/OFF button**: When the number of input ID is equal to the number of ID Mode, you can control the monitor which you want in the multi display condition.
- 13 **USB Menu control buttons**
USB menu(Photo List and Music List or Movie List).
- 14 **ENERGY SAVING**: Adjusts the brightness of the screen to reduce energy consumption.
- 15 **INPUT**: If you press the button once, the following Input Signal. Window will appear. Select the signal type you want using the button.
- 16 **Clear button**: This button selection is not applicable.
- 17 **ARC Button**: Selects the Aspect Ratio Mode.
- 18 **Brightness Key**: Adjust the brightness by pressing the Up and Down buttons on the remote control.
- 19 **AUTO**: Automatically adjusts picture position and minimizes image instability.(RGB input only).
- 20 **S.MENU**: This button selection is not applicable.
- 21 **EXIT**: Clears all on-screen displays and returns to Monitor set viewing from any menu.
- 22 **TILE**: Selects the TILE Mode.

ITA

- 1 **POWER**: Turns the Monitor set on or off.
- 2 **Monitor On / Off**: Turn off the monitor and then turn it back on.
- 3 **Number and Alphabet buttons**: Enters numbers. The alphabet selection is not applicable.
- 4 **1/a/A Button**: This button selection is not applicable.
- 5 **Volume Button**: Volume up and down.
- 6 **PSM Button**: Selects the Picture Status Mode.
- 7 **Mute button**: Accesses the main menus or saves your input and exit menus.
- 8 **MENU**: Selects the input mode.
- 9 **Navigation buttons**: Scrolls through menus or options.
- 10 **OK**: Selects menus or options and confirms your input.
- 11 **BACK**: Allows the user to move return one step in an interactive application, EPG or other user interaction function.
- 12 **ID ON/OFF button**: When the number of input ID is equal to the number of ID Mode, you can control the monitor which you want in the multi display condition.
- 13 **USB Menu control buttons**
USB menu(Photo List and Music List or Movie List).
- 14 **ENERGY SAVING**: Adjusts the brightness of the screen to reduce energy consumption.
- 15 **INPUT**: If you press the button once, the following Input Signal. Window will appear. Select the signal type you want using the button.
- 16 **Clear button**: This button selection is not applicable.
- 17 **ARC Button**: Selects the Aspect Ratio Mode.
- 18 **Brightness Key**: Adjust the brightness by pressing the Up and Down buttons on the remote control.
- 19 **AUTO**: Automatically adjusts picture position and minimizes image instability.(RGB input only).
- 20 **S.MENU**: This button selection is not applicable.
- 21 **EXIT**: Clears all on-screen displays and returns to Monitor set viewing from any menu.
- 22 **TILE**: Selects the TILE Mode.

 
Installing Batteries / Einlegen der Batterien / Insertion des piles / Inserimento delle pile

ENG To replace batteries, open the battery cover, replace batteries (1.5 V AAA) matching ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover.
To remove the batteries, perform the installation actions in reverse.

DEU Um die Batterien zu wechseln, öffnen Sie das Batteriefach, wechseln Sie die Batterien (1,5 V-AAA), legen Sie die ⊕- und ⊖-Enden entsprechend der Kennzeichnung im Fach ein, und schließen Sie das Batteriefach. Gehen Sie zum Herausnehmen der Batterien in umgekehrter Reihenfolge vor.

FRA Pour remplacer les piles, ouvrez le couvercle du compartiment des piles, insérez deux piles de 1,5 V de type AAA en respectant la polarité ⊕ et ⊖, et refermez le couvercle. Pour retirer les piles, procédez à l'inverse de leur insertion. Les piles et batteries internes au produit ou raccordées à celui-ci ne doivent pas être exposées à une chaleur excessive telle que celle du soleil, d'un feu ou d'une origine similaire.

ITA Per sostituire le batterie, aprire il coperchio del vano batteria, sostituire le batterie (AAA da 1,5 V) facendo corrispondere le estremità ⊕ e ⊖ ai simboli presenti all'interno del vano e chiudere il coperchio. Per rimuovere le batterie, eseguire le operazioni di installazione in senso inverso.

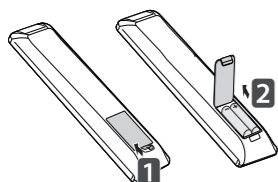

To view the User's guide / Zur Ansicht des Benutzerhandbuchs / Consultation du manuel d'utilisation / Per visualizzare la guida per l'utente

ENG "Insert CD ROM" in Computer
 ■ CD-ROM will open automatically.(for Window only)
 ■ My computer → Digital_LG(CD-ROM) → Index.htm Open
 ■ My computer → Digital_LG(CD-ROM) → Manual folder
 → User's Guide Open

DEU Legen Sie die CD-ROM in den Computer ein.
 ■ Die CD-ROM wird automatisch geöffnet. (Nur für Windows)
 ■ Arbeitsplatz → Digital_LG (CD-ROM) → Index.htm öffnen
 ■ Arbeitsplatz → Digital_LG (CD-ROM) → Ordner „Benutzerhandbuch“ → Benutzerhandbuch öffnen

FRA Insérez le CD-ROM dans votre ordinateur.
 ■ Le CD-ROM s'exécutera automatiquement (Windows uniquement).
 ■ Poste de travail → Digital_LG (CD-ROM) → Ouvrir le fichier Index.htm
 ■ Poste de travail → Digital_LG (CD-ROM) → Dossier Manual → Ouvrir le fichier du manuel d'utilisation

 
ITA "Inserire il CD ROM" nel computer
 ■ Il vano CD-ROM si apre automaticamente (solo per Windows)
 ■ Risorse del computer → Digital_LG(CD-ROM) → Index.htm Open
 ■ Risorse del computer → Digital_LG(CD-ROM) → Manual folder → User's Guide Open

Dimensions (Width x Height x Depth) / Weight Abmessungen (Breite x Höhe x Tiefe) / Gewicht Dimensions (Largeur x Hauteur x Profondeur) / Poids Dimensioni (Larghezza x Altezza x Profondità) / Peso

ENG * The specifications shown above may be changed without prior notice for quality improvement.
DEU * Die oben aufgeführten Spezifikationen können sich aus Gründen der Qualitätsverbesserung ohne Vorankündigung ändern.
FRA * Les spécifications indiquées ci-dessus peuvent être modifiées sans préavis à des fins d'amélioration de la qualité.
ITA * Le specifiche sopra riportate possono subire modifiche senza preavviso per migliorare la qualità del prodotto.



1535.4 mm x 136.7 mm x 907.6 mm / 51.1 kg
1535,4 mm x 136,7 mm x 907,6 mm / 51,1 kg

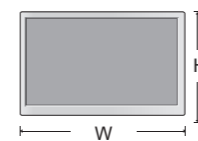

1535.4 mm x 136.7 mm x 907.6 mm / 51.8 kg
1535,4 mm x 136,7 mm x 907,6 mm / 51,8 kg