

GoldStar

ROOM AIR CONDITIONER **OWNER'S MANUAL**

SPLIT TYPE ROOM AIR CONDITIONER

Please read carefully and thoroughly this manual before operating this unit.

- Contact the authorized SVC man for repair or maintenance of this unit.
- Contact the installer for installation of this unit.

Prior to installation, this air-conditioning unit must be submitted for approval by the utility service which provides electricity (EN 60555-3 Norm).



CONTENTS

PRODUCT COMPONENT IDENTIFICATION	3
(1) Feature	3
(2) Indoor Unit, Outdoor Unit	4
(3) Name and Function-Remote Controller	5
(4) Remote Controller Preparation	6
AIR CONDITIONER OPERATION	7
(1) Operation Mode	7
(2) Operation Procedure	7
(3) Fan Operation	12
(4) Sleep Mode Auto-Control Setting	13
(5) Airflow Direction Procedure	14
(6) Setting the Present Time	15
(7) Timer Setting	16
(8) Operation Details	18
FORCED OPERATION	19
CARE AND MAINTENANCE	20
OPERATION TIPS	22
CAUTION	23
BEFORE CALLING FOR SERVICE	24
THIS IS NOT MALFUNCTION	25

PRODUCT COMPONENT IDENTIFICATION

(1) Feature

✓A **Soft Dry Operation Mode**

page 9

This mode is designed to dehumidify without overcooling.

✓B **Natural wind by CHAOS logic**

page 18

This mode automatically controls the indoor fan speed and creates the feeling of a pleasant breeze like a natural wind by CHAOS logic.

✓C **Auto Operation**

page 12

In selecting this mode of operation, the setting temperature, indoor fan speed, and the desired operation mode are automatically set by Fuzzy rule on the basis of sensing the room temperature. During Auto Operation, vertical the louver swings up and down automatically in according to 1/f rhythm. Pressing the Airflow Direction Control Button will set the louvers as the desired position. If you want to go on with the 1/f swing of vertical the louver, press again the Airflow Direction Control Button.

✓D **ON/OFF Dual Timer Setting**


page 16

You can program the room air conditioner to turn itself on or off so as to ensure you maximum comfort when you return from being away.

✓E **Sleep Mode Auto Control**

page 13

 A touch of the Sleep Mode Button automatically programs the room air conditioner to turn off controls the indoor fan speed, and adjusts the setting temperature to create a more comfortable sleep.

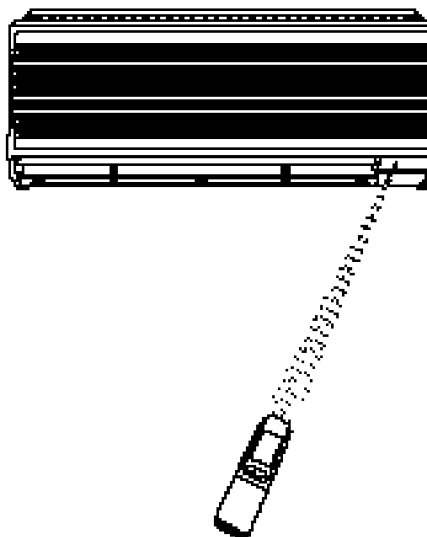

Wireless Remote Controller puts all functions at your fingertips.

CAUTION

of handling the Remote Controller

f u Aim at the signal receptor on the room air conditioner so as to operate.

f u The remote control signal can be received at a distance of up to about 7m.

f u Be sure that there are no obstructions between the remote controller and the signal receptor.

f u Do not drop or throw the remote controller.

 
Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.

f u Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation.

(ex: electronic quick start, ELBA, inverter type fluorescent lamp)

(2) Indoor Unit, outdoor Unit


Indoor Unit

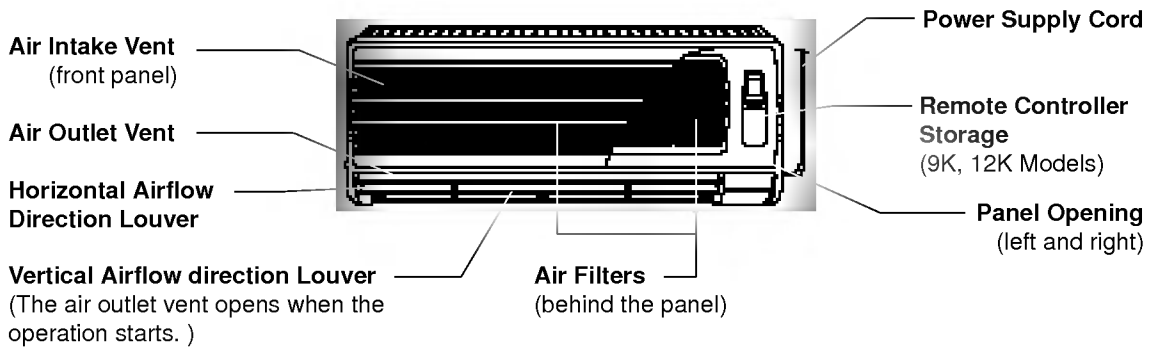

Indoor unit controls and indicators

Open the front panel

 Press the panel to open (left and right side of front panel) and open the panel upward.

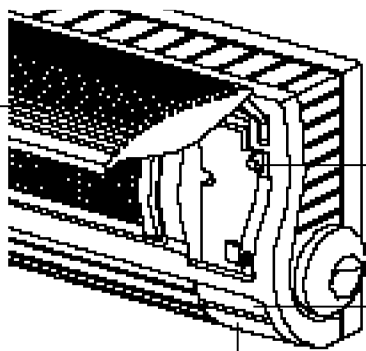

Forced Operation Button

Used for operation when the remote controller cannot be used.





(When operation is stopped by the remote controller without removing power plug, the room air conditioner consumes approximately 2W of electricity.)

Signal Receptor

Receives the signals from the remote controller.

 
(Signal received sound: two short beeps or one long beep.)

Operation Indication Lamps

-  On : Lights up during the air conditioner operation.
-  Sleep Mode : Lights up during Sleep Mode Auto operation.
-  Timer : Lights up during timer operation.
-  Deice Mode : Light up during Deice Mode operation. (Blinks on and off during hot start) (Heat Pump Only)

OUTDOOR : Light up during compressor operation.(Cooling Only)

Outdoor Unit

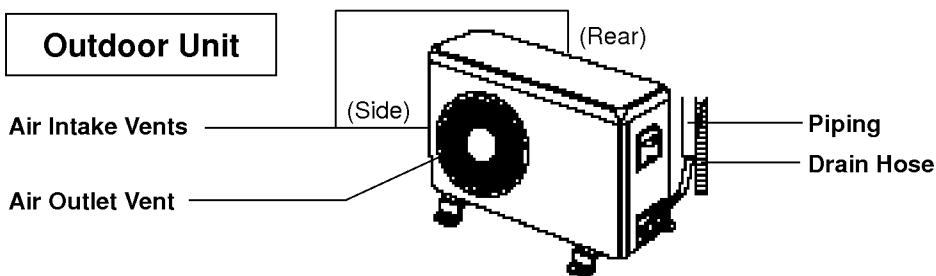


(3) Name and Function-Remote Controller

Remote Controller

Signal transmitter.

 Transmits the signals to the room air conditioner.

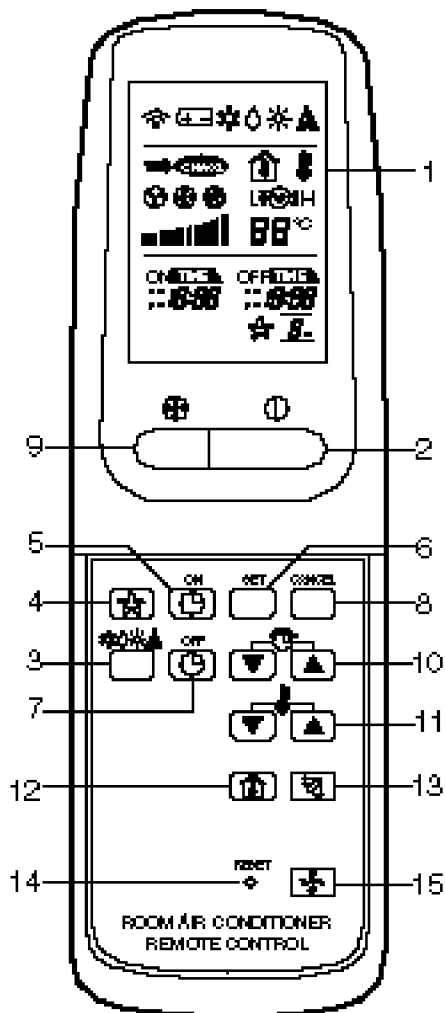


- ∟A **Operation Display**
Displays the operation conditions.
- ∟B **Start/Stop Button**
Operation starts when this button is pressed, and stops when the button is pressed again.
- ∟C **Operation Mode Selection Button**
Used to select the operation mode.
 - f Cooling Operation Mode.
 - f Soft Dry Operation Mode.
 - f Heating Operation Mode. (Heat Pump Only)
 - f Auto Operation Mode.
- ∟D **Sleep Mode Auto Button**
Used to set Sleep Mode Auto Operation.
- ∟E **ON Timer Button**
Used to set the time of starting operation.
- ∟F **Timer Set Button**
Used to set the timer until the desired time is obtained.
- ∟G **OFF Timer Button**
Used to set the time of stopping operation.
- ∟H **Timer CANCEL Button**
Used to cancel the timer operation.
- ∟I **Indoor Fan Speed Selector**
Used to select the desired fan speed.
- ∟J **Time Setting Button**
Used to adjust the time.
- ∟K **Room Temperature Setting Button**
Used to adjust the room temperature.
- ∟L **Room Temperature Checking Button**
Used to check the room temperature.
- ∟M **Airflow Direction Control Button**
Used to set the desired airflow direction.
- ∟N **Reset Button**
- ∟O **Fan Operation Button (Cooling Only)**
Used to operate the indoor fan only.


(4) Remote Controller Preparation

How to store the remote controller (9K, 12K Models)

 - 1** Press the left and the right side to open the front panel upward.

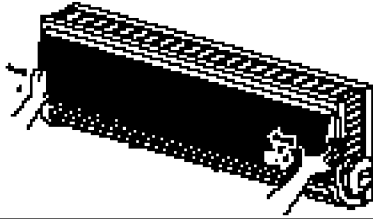


- 2** Store the remote controller.

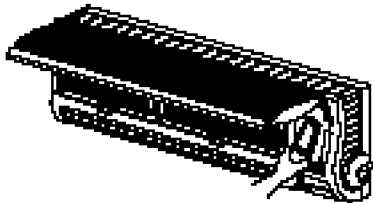 

(Remove it when using.)

 - 3** Press the left and the right side to close the front panel.

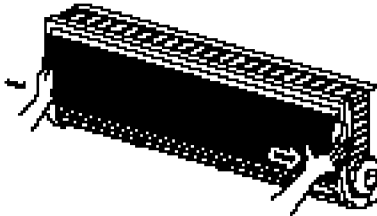

How to mount onto a wall (All models)

 
- 1** Use the screws to secure the holder to the wall.



Confirm that the remote control signals can be received from this location.

- 2** To Attach the remote controller to the holder.


(1) Hook

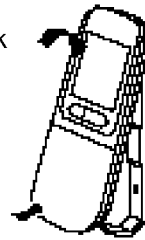

(2) Press

- 3** To remove.

 (1) Pull

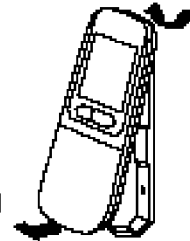

(2) Unhook

How to insert batteries

- 1** Remove the cover from the back of the remote controller.

fSlide the cover according to the arrow direction.



- 2** Insert the two batteries.

fBe sure that the (+) and (-) directions are correct.

fBe sure that both batteries are new.



- 3** Re-attach the cover.

fSlide it back into position.

 


fDo not use rechargeable batteries, such as batteries differ from standard dry cells in shape, dimensions, and performance.

fRemove the batteries from the remote controller if the air conditioner is not going to be used for some long time.


AIR CONDITIONER OPERATION

(1) Operation Mode

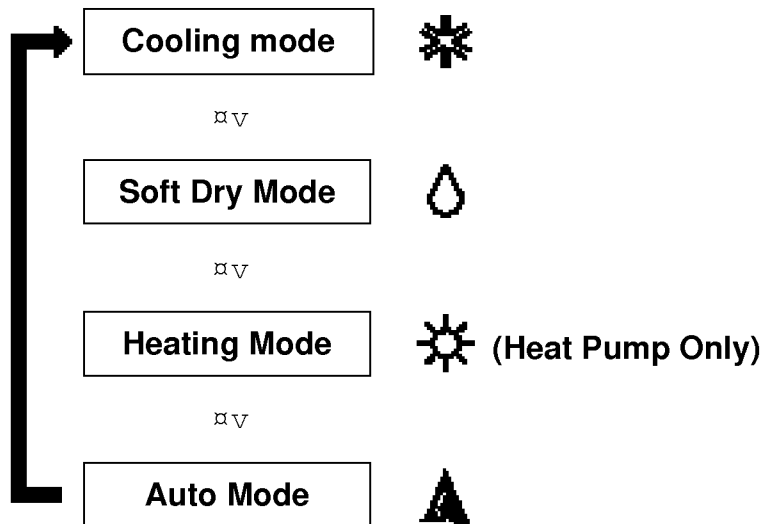

(2) Operation Procedure


 
- 1st Start/Stop Button
- 2nd Operation Mode Selection Button
- 3rd Room Temperature Setting Button
- 4th Indoor Fan Speed Selector

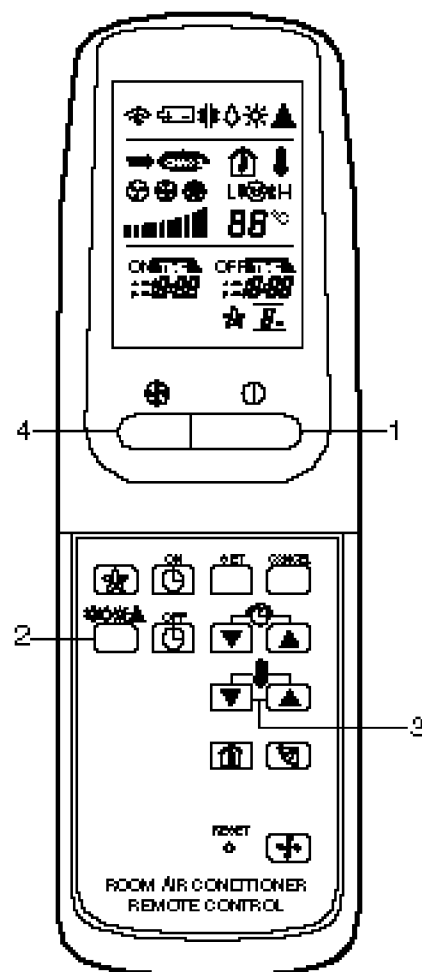

⌘ Cooling Operation Mode

(LED lamp ON)

  1 Press the Start/Stop Button.

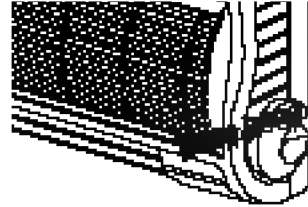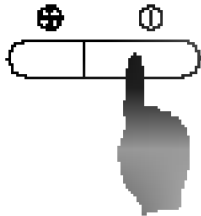


Two short beep will sound and the operation lamp will light up.

2 Select Cooling Operation.

Press the Operation Mode Selection Button.

 Each time the button is pressed, the operation mode is shifted in the arrow direction.

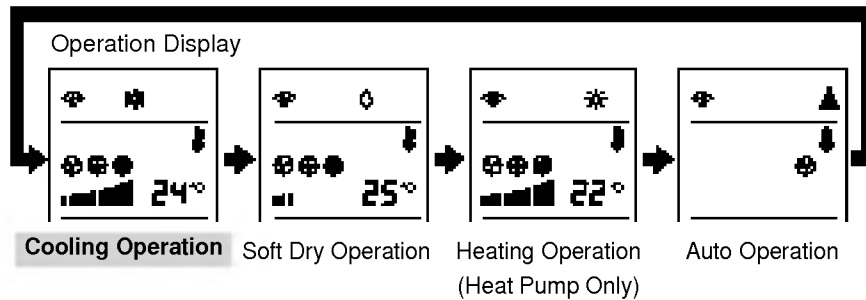

3 Set the temperature.



 
The temperature can be set within a range of 20°C~30°C by 1°C.



To raise the Temperature

To lower the Temperature

4 Set the fan speed.

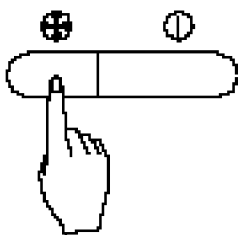

Select the fan speed in four steps

low, medium, high, CHAOS.

The

The display shows high fan



speed.

Each time the button is pressed, the fan speed mode is shifted.

➤ B Soft Dry Operation Mode

This mode dehumidifies without overcooling.
 (LED lamp ON)


1 Press the Start/Stop Button.

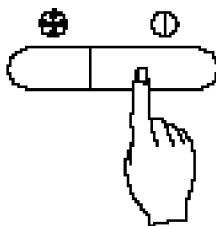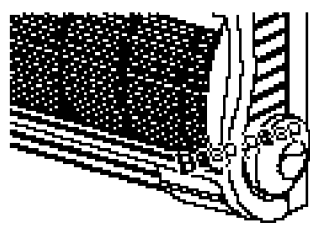
f U Two short beep will sound and the operation lamp will light up.

2 Select Soft Dry Operation.

Press the operation Mode Selection Button.
 Each time the button is pressed, the operation mode is shifted in the arrow direction.

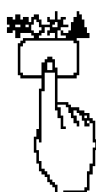


Operation Display

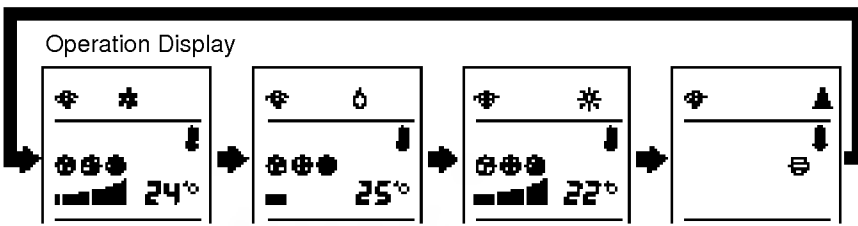


Cooling Operation **Soft Dry Operation** Heating Operation Auto Operation (Heat Pump Only)

3 Set the temperature lower than the room temperature.

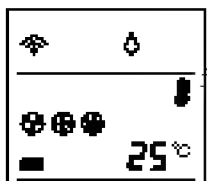

f U The temperature can be set within a range of 20°C~30°C by 1°C.



To raise the Temperature

To lower the Temperature

4 During Dry Operation.

 
 
f U The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because of already being set to the best speed for Dry Operation by Micom Control.

f U The indoor fan may be stopped not so as to be the room overcooling.

◀ C Heating Operation Mode

(LED lamp ON)

1 Press the Start/Stop Button.

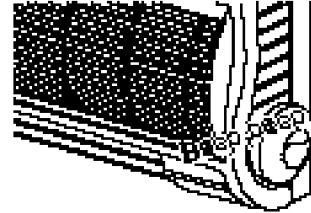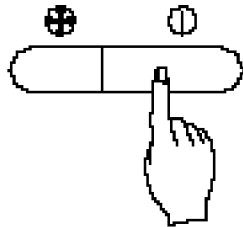


Two short beeps will sound and the operation lamp will light up.


2 Select Heating Operation.

Press the Operation Mode Selection Button.

 
Each time the button is pressed, the operation mode is shifted in the arrow direction.

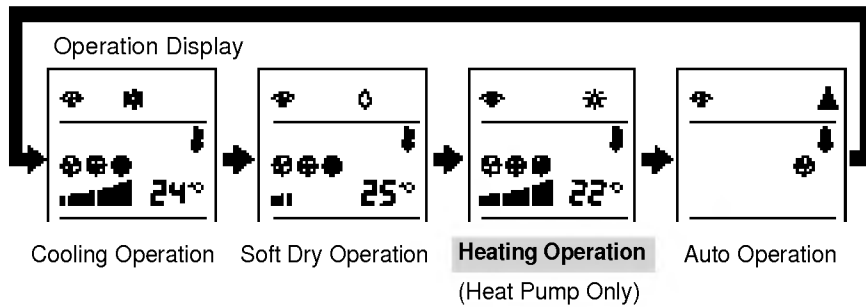

3 Set the temperature.

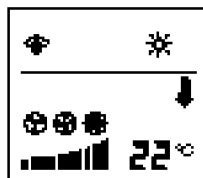 

 
The temperature can be set within a range of 16°C~30°C by 1°C.



To raise the Temperature

To lower the Temperature

 4 Set the fan speed.

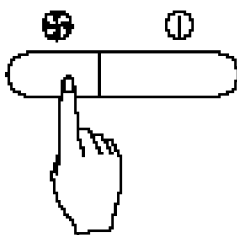

Select the fan speed in four steps: low, medium, high, CHAOS.

 
 
The display shows high fan speed.

Each time the button is pressed, the fan speed mode is shifted.

▷D Auto Operation Mode

(LED lamp ON)

1 Press the Start/Stop Button.

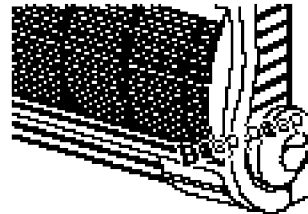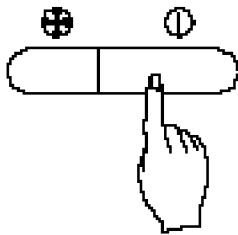


Two short beeps will sound and the operation lamp will light up.


2 Select Auto Operation.

Press the Operation Mode Selection Button.

 Each time the button is pressed, the operation mode is shifted in the arrow direction.

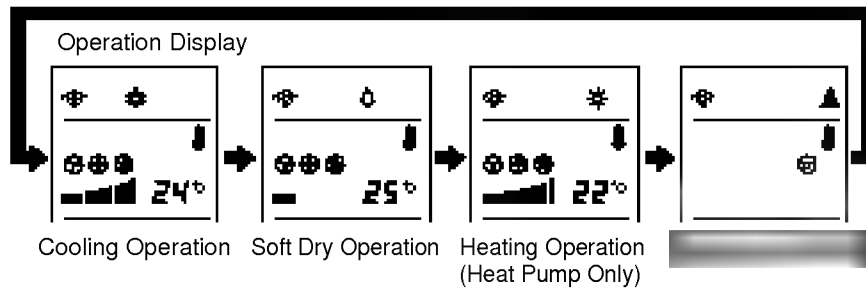

3 Set the temperature.

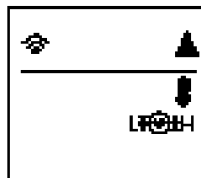 

The desired operation mode and the setting temperature and the fan speed are automatically set by Fuzzy rule on the basis of sensing the room temperature.



To raise the Temperature.

To lower the Temperature.

4 During Auto Operation.

It is impossible to switch the indoor fan speed during Auto Operation because of being already set to the best position by Fuzzy rule.

 
 
It is possible to press the room temperature setting button only two times so as to change the automatically setting temperature.

If the room air conditioner is not operating as desired, switch to cooling mode or other mode.

(3) Fan Operation (Cooling Only)

(LED lamp ON)

1 Press the Start/Stop Button.

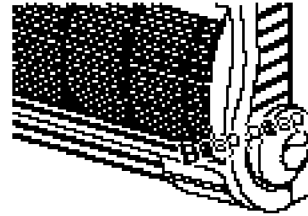
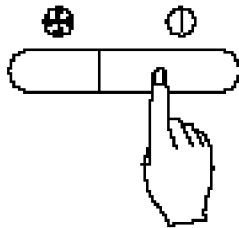


Two short beeps will sound and the operation lamp will light up.

2 Select Fan Operation Button.



  3 Each time the Fan Speed Selector is pressed, the fan speed mode is shifted in the arrow direction.

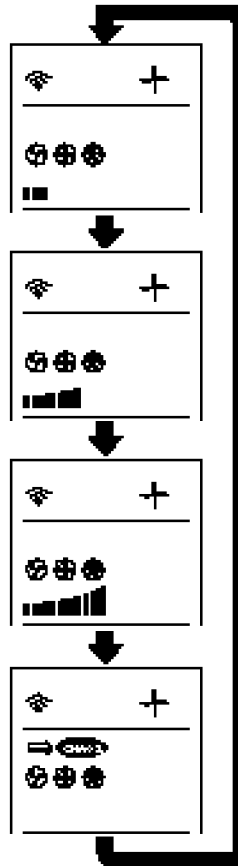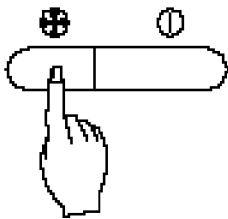

Fan speed is low.

Fan speed is medium.

 
Fan speed is high.

Natural wind by CHAOS logic:
The indoor fan speed is automatically changed from the high to the low, or reversely by CHAOS logic.

(4) Sleep Mode Auto Control Setting


(★ LED lamp ON)

Remote Controller

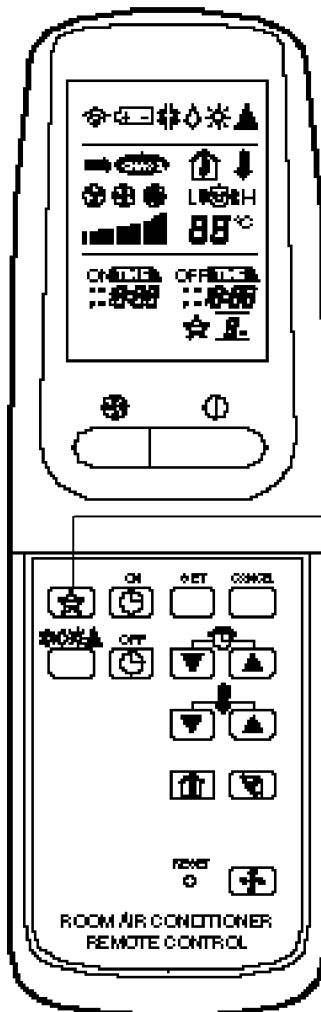

The Sleep Mode will be operated at a low fan speed (Cooling) or a med. Fan speed prevent the room from being too cold (Cooling) or too hot (Heating) by automatically the setting temperature being raised (Cooling) or being decreased (Heating) for comfortable sleeping.

 Press the Sleep Mode Auto Button.

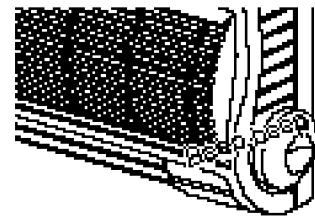

1. Press the Sleep Mode Auto Button and set the time to turn off.
2. Check the Sleep Mode Auto LED of the room air conditioner to light up.
3. The Timer is programmed by 1 hour each pressing the sleep mode auto button from 1 hour to 7 hours.
4. The indoor fan is switched to a low speed.

The setting temperature will be automatically raised by 1°C 30 minutes later and by 2°C 1 hour later (Cooling) or continued without any change (Heating).

 
So as to cancel the Sleep Mode, press the CANCEL button several times until disappear the Sleep Mode. (Star pictograph)

(5) Airflow Direction Procedure


∠A Vertical Airflow Direction Control

Airflow Direction Control

The airflow direction can be adjusted as desired by using the remote controller. This is effective when you want to cool yourself directly, such as after taking a bath.

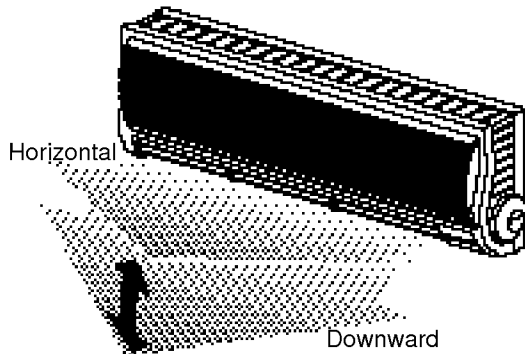


Remote Controller

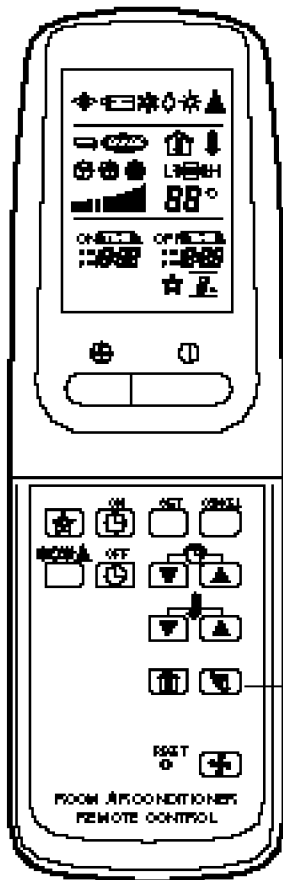 

Airflow Direction Control Button

 - 1 Press the Start/Stop Button.
(Confirm the unit on operation.)

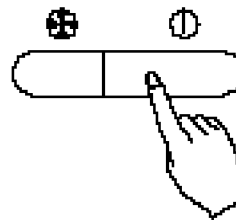

- 2 Press the Airflow Direction Control Button for the vertical louver's swinging up and down automatically.



- 3 Press again the Airflow Direction Control Button to set the vertical louver at the desired airflow direction.



 
Caution

fU Always use the remote controller to adjust the airflow direction. Manually moving the vertical airflow direction louver by hand could cause operation errors.

fU When air conditioner operation is stopped, the vertical airflow direction louver will close the air conditioner's air outlet vent.

⌘B Horizontal Airflow Direction Control


Adjust the horizontal airflow direction by manually moving the horizontal airflow direction louver by hand.

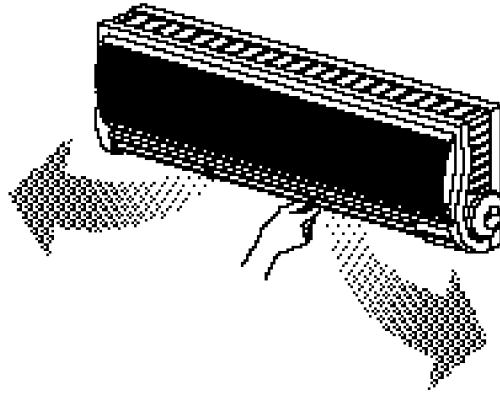


(6) Setting the Present Time

The present time can be set only when pressing the reset button or when replacing batteries for the remote controller.

 - 1** Press the Start/Stop Button after pressing the RESET Button or changing batteries for Remote Controller.

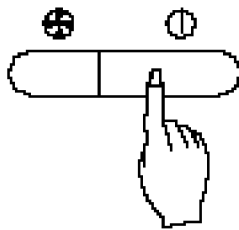

 - 2** Press the Time Setting Button until being set the desired time.

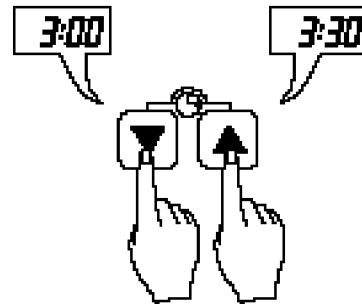

- 3** Press the Time SET Button.



 
NOTE: Check a.m. and p.m. Indicator in setting time.

(7) Timer Setting


(LED lamp ON)

Remote Controller

- ✓A ON Timer Button or OFF Timer Button
- ✓B Time Setting Button
- ✓C Timer SET Button
- ✓D Timer CANCEL Button

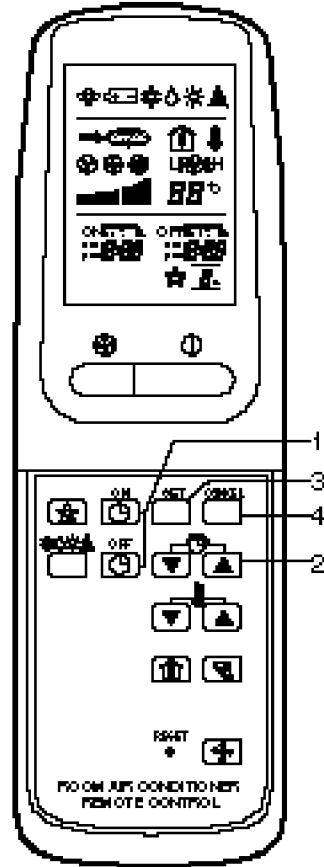


 - 1** Press the ON Timer Button or OFF Timer Button.

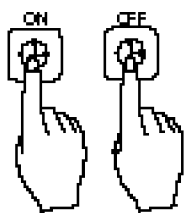

The timer setting will be displayed.

 - 2** Change the Time Setting and press the Timer Set Button.

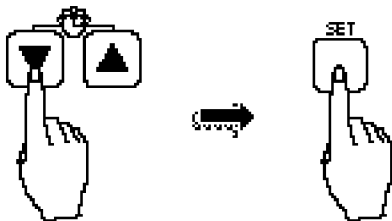

To cancel the settings

Press the Timer Cancel Button.



(The timer lamp on the air conditioner and the display will go out.)

 
If the settings are cancelled by a power failure

Press the Start/Stop Button, and then set the timer again as desired time in accordance with Timer Setting Procedure.


Timer Setting Procedure

1 Confirm the present time. (Refer page 15)

2 Press ON Timer Button or OFF Timer Button.

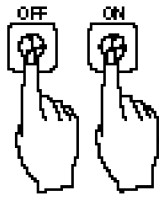

Delay
OFF Timer

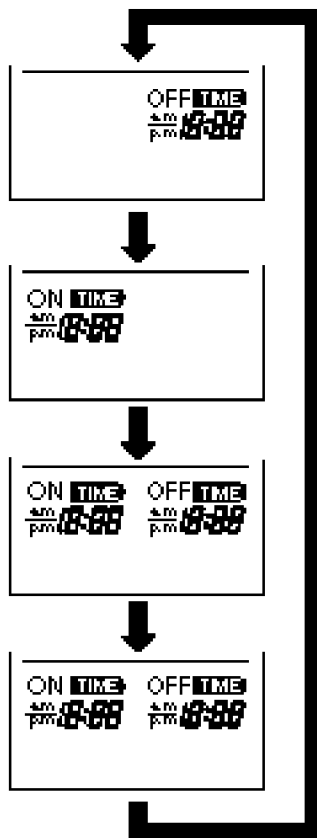 

fUSelect one of the following four types of operation.

fUEach time the button is pressed, the operation mode is shifted to the arrow direction.

Operation stops at OFF Timer Setting.

 
Operation starts at ON Timer Setting.

Operation stops at OFF Timer Setting and starts at ON Timer Setting.

Operation starts at ON Timer Setting and stops at OFF Timer Setting.

NOTE: Check a.m. and p.m. Indicator in setting time.

3 Press the Time Setting Button until being set the desired time.

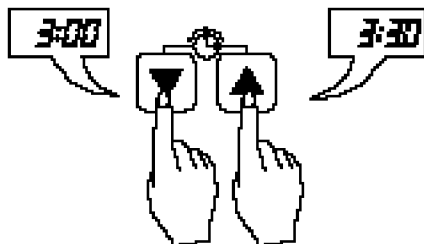

4 Press the Timer SET Button.

 


(8) Operation Details

fU Soft Dry Operation Mode

When the room temp. is higher than the setting temperature, it operates cooling mode as the setting temperature, the setting fan speed (if CHAOS mode, then med.), and then it will be switched to Soft Dry Operation Mode when the room temperature reaches the setting temperature.


In Soft Dry Operation Mode, the indoor fan speed is automatically switched to the low.

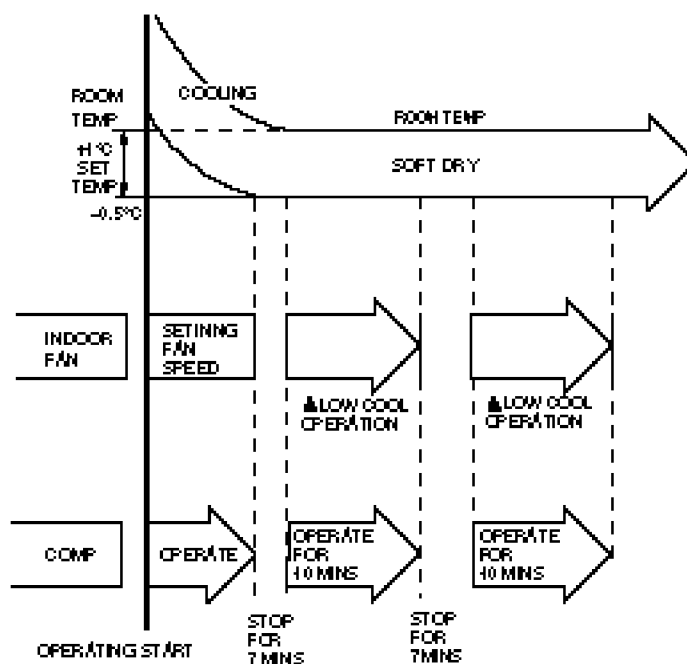

fU Natural wind by the CHAOS logic

For more fresh feeling than other fan speed mode, press the indoor fan Speed Selector and set to CHAOS mode.

 In this mode, the wind blows like natural breeze by automatically fan speed switching from the high to the low, or reversely in according to the CHAOS logic.

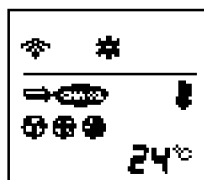


FORCED OPERATION

Operation procedures when the remote controller can't be used.


Open the front panel upward and press the Forced Operation Button.

If want to stop operation, press again.

 During Forced operation, the operating conditions are automatically set as the following.

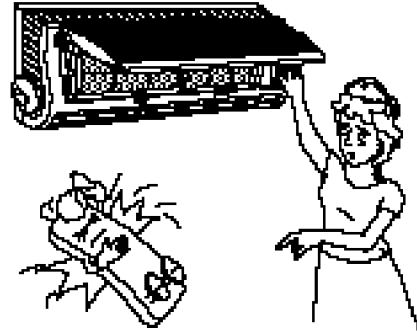

Room temperature	below 21 °C	21 °C~24 °C	over 24 °C
Operating mode	Heating	Soft dry	Cooling
Setting temperature	22 °C	Room temperature	24 °C
Indoor fan speed	High	by soft dry rule	High

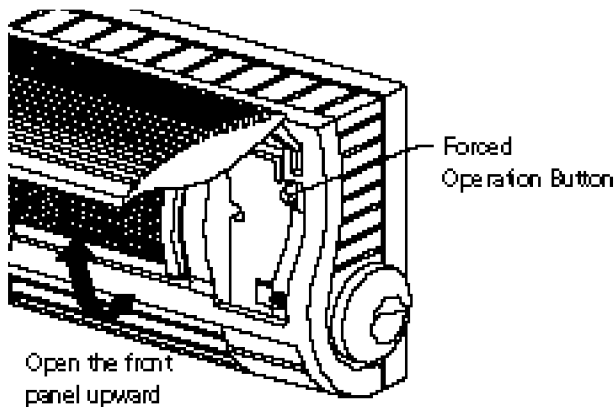 

Press the Forced Operation Button.



Press the Forced Operation Button once again to stop operation.

Helpful information

Airflow speed and cooling capacity

The cooling capacity indicated in the specification is the value when the fan speed is set to high, and the capacity will be lower at low or medium fan speed.

 
High fan speed is recommended when you wish to cool the room quickly.



CARE AND MAINTENANCE

Before performing any maintenance procedure

Remove power plug.

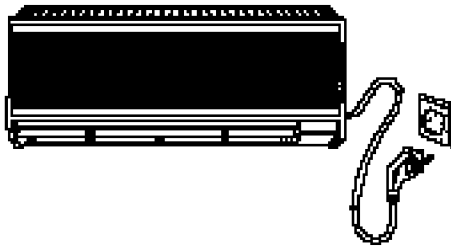

Don't wash with water.



Never use any of the followings.

 
• Water hotter than 40°C.
Could cause deformation and/or discoloration.

• Volatile substances.
Could damage the surfaces of the air conditioner.



Cleaning of the air filters.
Recommended about once every two weeks.

- 1** Remove the Air Filters.
Take hold of the tab and pull slightly forward to remove the filter.

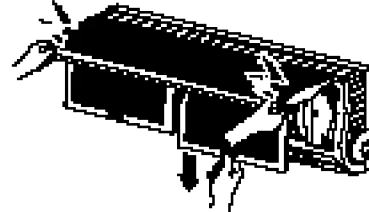


- 2** Clean.
• To remove the dust adhering to the filters, either use a vacuum cleaner, or wash them in water and dry in the shade.
• Re-insert the filter into the original position.



If the Air Filters become damaged.
• Purchase new filters from your air conditioner dealer.

 Cleaning of the air conditioner and the remote controller.
• Wipe with a soft, dry cloth.

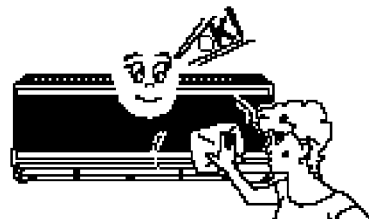

At the end of the season

- 1 Operate the air conditioner at the following settings for 2 to 3 hours.

 
(Summer)

f uType of operation: Cooling.

f uTemperature setting: 30°C.

This will dry out the internal mechanisms.

- 2 Remove the batteries from the Remote Controller.

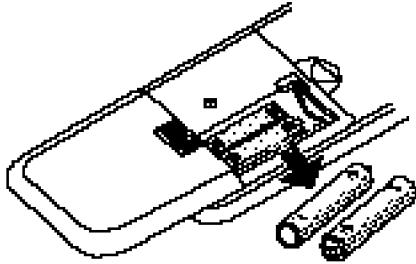


- 3 Cover the outdoor unit with the protective cover.




At the start of the season

 
- 1 Remove the protective cover from the outdoor unit.

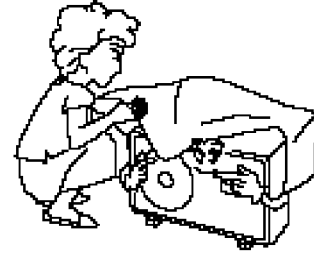

 - 2 Clean the air filters, re-insert them, and operate the air conditioner.

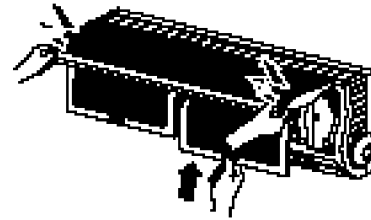

 - 3 Be sure that nothing obstructs the air outlet and intake vents.

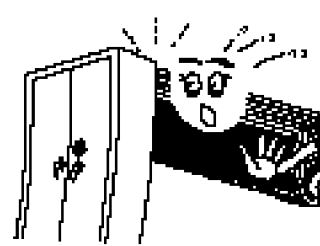

Helpful information

The air filters and your electric bill

 
If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.



OPERATION TIPS


Do not overcool the room.

This is not good for the health and wastes electricity.

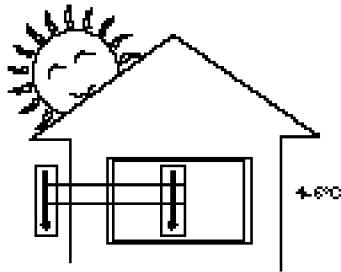


Keep blinds or curtains closed.

 Do not let direct sunshine enter the room when the air conditioner is in operation.

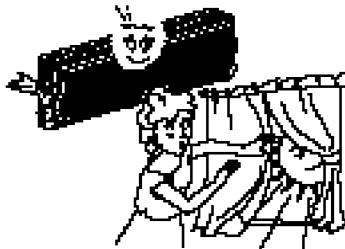


Keep the room temperature uniform.

 Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.

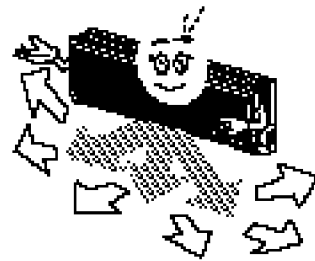


Make sure that the doors and windows are shut tight.

 Avoid opening doors and windows as much as possible to keep the cool air in the room.

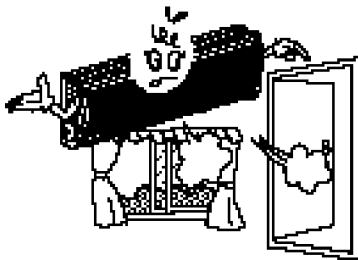


Clean the air filter regularly.

 Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

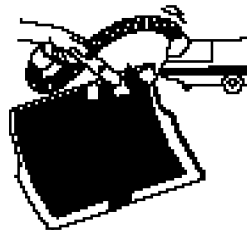

Ventilate the room occasionally.

 
Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

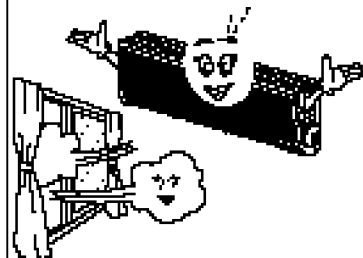

CAUTION


Do not pull out the power cord.

 Damage to the cord may result in serious electrical shocks.

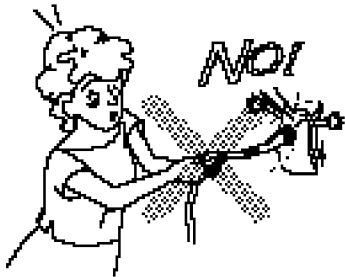


Do not use the air conditioner for purposes other than cooling the room.

 Do not use the air conditioner for other purposes, such as drying clothes, preserving foods, keeping animals, or cultivating vegetables.

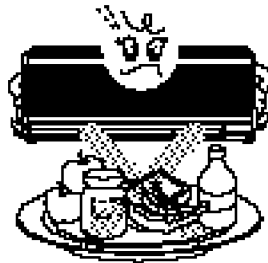


Do not block the air intake and outlet vents.

 This causes lowered performance and irregular operation. Do not insert sticks or other objects into these vents as it is dangerous to touch the electric components and the fan.

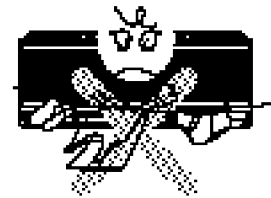


Select the most appropriate temperature.

 Take care to adjust the temperature to suit the conditions. Rooms occupied by young infants, the elderly, or invalids should be kept at an appropriate temperature.

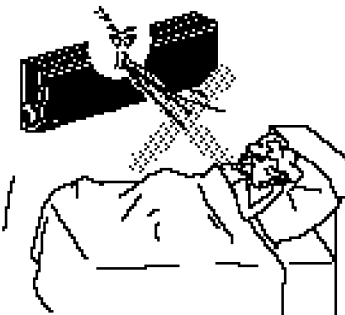

Do not use heating apparatuses in the vicinity.

 The air conditioner's plastic parts may melt if exposed to excessive heat.

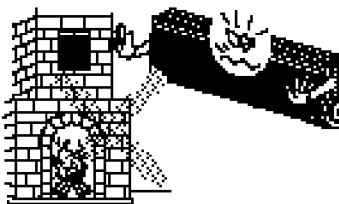

Avoid exposing the body directly to a continuous unidirectional cool air-flow for long periods.

This is not good for your health.



BEFORE CALLING FOR SERVICE

Check the following points before requesting repairs or service . . . If the malfunction persist, please contact your dealer.

Faults	Cause
Does not operate.	<ul style="list-style-type: none"> f T Has the fuse blown or has the circuit breaker been tripped? f T Have you made a mistake in timer operation?
Does not cool or heat effectively.	<ul style="list-style-type: none"> f T Is the air filter dirty? See air filter cleaning instructions. f T The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. f T Has the temperature been set incorrectly? f T Are the indoor unit's air inlet or outlet vents obstructed?
The room has a peculiar odor.	<ul style="list-style-type: none"> f T Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.
The air conditioner operation is noisy.	<ul style="list-style-type: none"> f T For a noise that sounds like water flowing. <ul style="list-style-type: none"> —This is the sound of freon flowing inside the air conditioner unit. f T For a noise that sounds like the compressed air releasing into atmosphere. <ul style="list-style-type: none"> —This is the sound of the dehumidifying water being processed inside the air conditioning unit.
It seems that condensation is leaking from air conditioner.	<ul style="list-style-type: none"> f T Condensation occurs when the airflow from the air conditioner cools the warm room air.
Air conditioner does not operate for about 3 minutes when restart.	<ul style="list-style-type: none"> f T This is the protector of the mechanism. f T Wait about three minutes and operation will begin.
Remote controller display is faint, or no display at all.	<ul style="list-style-type: none"> f T Are the batteries depleted? f T Are the batteries inserted in the opposite (+) and (-) directions?

NOTE

SPLASH PROOF : The outdoor side of this appliance is SPLASH PROOF and the indoor side is ordinary.

This is not malfunction

It may happen some noise the same as "Tig" "Tig" from the indoor unit when the unit operate or after the unit stop, which is due to plastic body's shrinkage or expansion by temperature fluctuation.



MEMO



LG Electronics Inc.

P/NO:3HO3770T

Printed in Korea