

VHS  
PAL



# Table of Contents

 
## ***Welcome to LG***

 
Thank you for buying this LG video cassette recorder Model **BC999NY/BC954NY**.

# Remote Control

## Location & functions

Your video recorder (VCR) is designed so that almost all of its features can be controlled from the

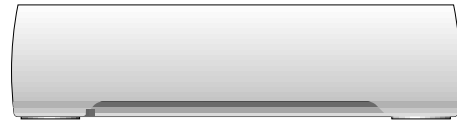

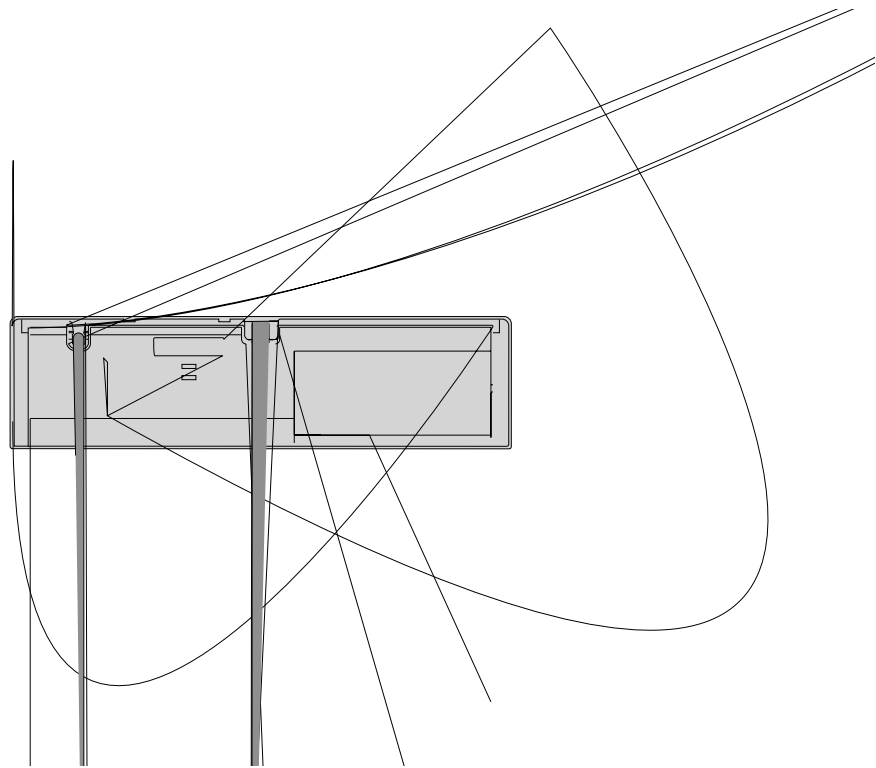

1



Make sure that you have correctly installed your VCR as described earlier in this book.

Press **POWER** to turn on your VCR.

Turn on your TV.





# How to Using the main menu

Switch on your TV set and video recorder by pressing the **POWER** button.

Press **i** button.

The main menu will appear on the TV screen.

Press ◀ and ▶ to select the desired menu.

Press **OK** and press ▲ or ▼ to select.

Press **"i"** to return to a TV picture.



Press

 
 
Press **OK**.

Press **▲** or **▼** to select  
**letters** and **numbers**



After tuning TV stations into your VCR you may wish to **delete** a station.

The instructions given on this page will show you how easily delete any unwanted TV stations.

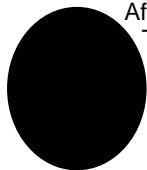

Make sure that you have correctly connected your VCR as described earlier in this book.

Turn on your TV.

Press **POWER** to turn on your VCR.

Insert the video cassette into your VCR.

The video cassette should have the window side facing up and the arrow facing away from you.





## Other Playback features

Your VCR incorporates a number of tape search features that enable you to quickly search a tape for your particular recording.

During playing back or still picture press **j** or **k** repeatedly to obtain different playback speeds.

Press **▲** or **▼** to improve picture quality.

Press **PLAY** to play your tape back at normal speed.



Press **STOP**.

**STOP** will appear for a few seconds on the TV screen.









The clock in your VCR controls time and date settings for your VCR.

2 3



Make sure that TV channels have been tuned and stored in correct SHOWVIEW order.

Insert a video cassette with protection tab into your VCR.

Press **SHOWVIEW**.

Press ▲ or ▼ to select the recording type.

**ONCE:** To record once.

**WEEKLY:** To record at the same time every week.

**DAILY:** To record every day (except Saturday and Sunday) at the same time.

Press the **numbered buttons** to enter the **ShowView Code** of the TV programme that you wish to record.

If you make a mistakepress ◀ then enter the revised number.













Press **OK/CLK/CNT.**  
Press **CLEAR** to set the counter to 0:00:00.

Press **PLAY** or start recording.

The tape counter will display the actual play time in hours, minutes

Press **STOP** when playback or recording is complete.

Press **REW.**

The tape will rewind and automatically stop when the counter returns to

Press **C.LOCK.**

**SAFE** will appear on the TV screen.

**SAFE** will flicker in your video recorder's display for a few seconds.

Switch on your VCR.

Press **i**.

Press ◀ or ▶ to select  
**16:9/4:3**.

Press **OK**.

Press ▲ or ▼ repeatedly  
to select: **AUTO, 4:3** or  
**16:9**.

**AUTO:**  
Automatically plays back  
Wide-Screen  
programmes as Wide-  
Screen and Normal  
programmes as normal.

**4:3:**

fj T\*tprogrammrecordings /F2)3 1 Tf 0 -1.315ramTc 0 Tw (16:9/4:3)Tj 1 1 Tf 0 -1 TD ramTc 0 T278 Tw (Og0 -1278 Tw

A

A









**L**

**P/N:3834RP0049F**