



**NICAM/Hi-Fi STEREO
Video Cassette Recorder**

OWNER'S MANUAL

MODEL: BC990NW



PAL

**Before connecting, operating or adjusting this product,
please read this instruction booklet carefully and completely.**

Precaution & features

Information



Position your VCR so that no bright light or sunlight falls directly onto it.

Care should be taken not to expose your VCR to any unnecessary vibration, moisture, dust or heat.

During electrical storms it is advisable to unplug both the aerial cable and mains plug to prevent accidental damage to your VCR and TV.

Do not operate your VCR if it is damaged. Your VCR should not be repaired by anyone except qualified service personnel.

Never remove the back cover of your VCR as this can expose you to very high voltage and other hazards. If your VCR does not operate properly, please check the Troubleshooting Check List (see p. 33). If your VCR still does not operate properly, unplug it and call your dealer.



Just to name a few examples of the extraordinary features:

- HQ (High Quality)- picture enhancement system
- ez (easy) operations (see p. 29)
- Energy Saving Function
- Programmable 80 channel memory with Frequency synthesised tuner
- ACMS (Automatic Channel Memory System)
- 7 event/1 month programmable timer
- LP - Long Play - recording & playback
- Digital Shuttle Controls
- ICON OSD (On Screen Display)
- NTSC playback on PAL TV
- Logic & Picture Search
- Child Lock
- Auto Head Cleaner
- Auto Power on and Play
- Fine still, Frame advance & Fixed Slow functions
- Real Time Counter
- Quick Start function
- Auto Tracking System
- Digital Stereo decoder for reception of NICAM Stereo & Mono sound
- Hi-Fi Audio System
- Simulcast Recording & Playback



Welcome to LG

Thank you for buying this LG video cassette recorder Model **BC990NW**.

Description	2 - 5	Advanced Operations	24 - 33
Precaution & Features information	2	Timer Recording Using On Screen	
Remote Control Location & functions	4	Display	24 - 25
Your VCR's Controls	5	Energy Saving	26
Setting Up	6 - 15	On Screen Display	26
Connecting to a TV	6	Tape Counter Memory Stop	27
Connecting to your Hi-Fi & Camcorder	7	Child Lock	27
Tuning in a video channel On your TV	8 - 9	Memory Shut-Off	28
How to Using the main menu	10	Video Doctor (Self-Diagnosis)	28
Tuning in TV Stations Automatically	11	ez (easy) Operations	29
Tuning in TV Stations Manually	12 - 13	Hi-Fi Stereo Sound System	30
Changing the order of TV Stations	14	Simulcast Recording & Playback	31
Deleting TV Stations	15	Helpful Hints	32 - 33
Basic Operations	16 - 23	Tape Copying	32
Playback a tape	16 - 17	Specifications	32
CM(Commercial Message) skip	17	Troubleshooting Check List	33
OPR(Optimum Picture Response)	17		
Other Playback features	18 - 19		
Recording TV programmes	20 - 21		
To set the Colour System	22		
Setting the Clock Manually	23		


Table of Contents

Remote Control

Location & functions


To install batteries:
Your REMOTE CONTROL HANDSET is powered by two AA type batteries.

 1. To insert them, push the tab backwards and lift off the cover of the handset.
2. Put the two batteries into the compartment making sure the + and - are correctly positioned.
3. Replace the cover.

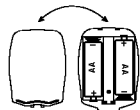

Your video recorder (VCR) is designed so that almost all of its features can be controlled from the REMOTE CONTROL HANDSET. Some features can also be controlled from the FRONT PANEL of the video recorder. The maximum operating distance that you may control your video recorder is about 7.5 metres (25 feet). It must also be within an angle of 30 degrees either side of the REMOTE SENSOR on the front of your video recorder.

 
To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time. Do not use batteries of differing age or type. Always discard batteries safely.

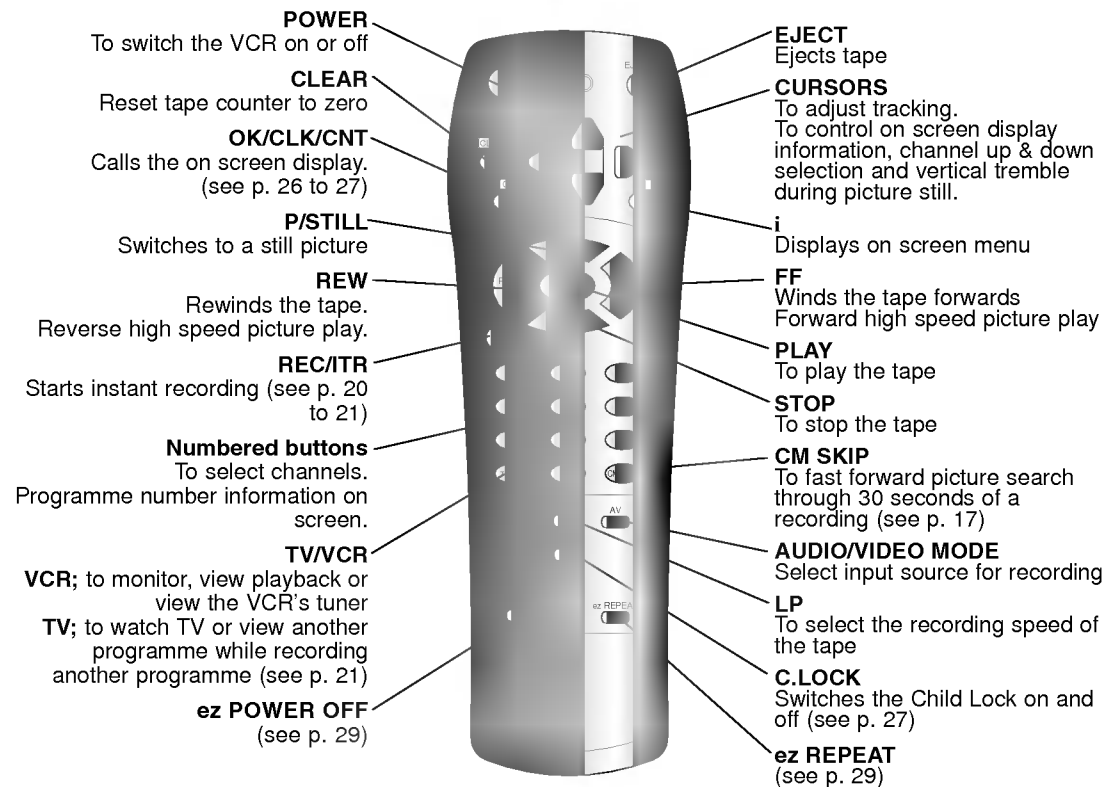

Your VCR's Controls



 Each button on your VCR has the same function as its corresponding button on the remote control handset.

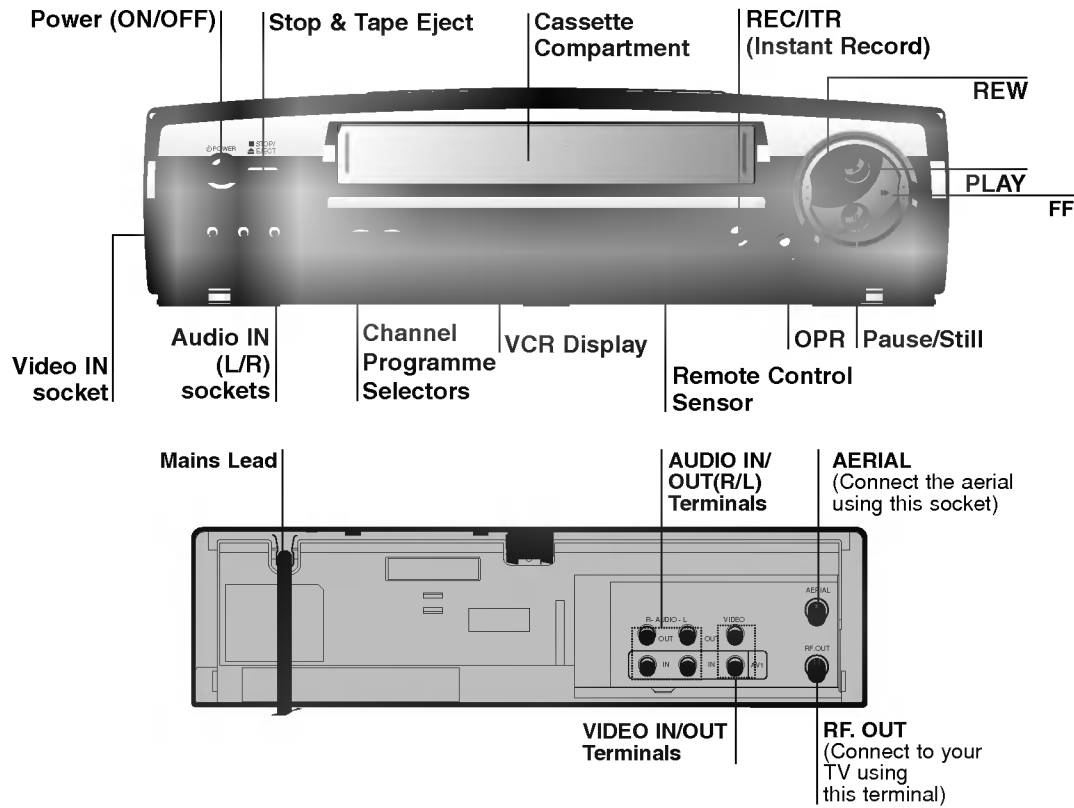


Connecting To a TV


Using your VCR very first time

Following picture will display on the TV screen when you have just connected your video recorder for the very first time.

 To make tuning TV stations, please follow stages 3 to 4 as shown "ACMS" (see p. 11).

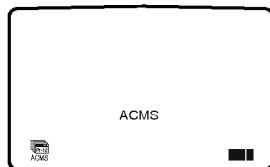


 
The guidance given on the next two pages is the most common forms of connection. However please check with your manufacturers instruction books for specific information. Make sure all connections are made with both your VCR and additional appliance unplugged from the mains to avoid damaging your equipment.

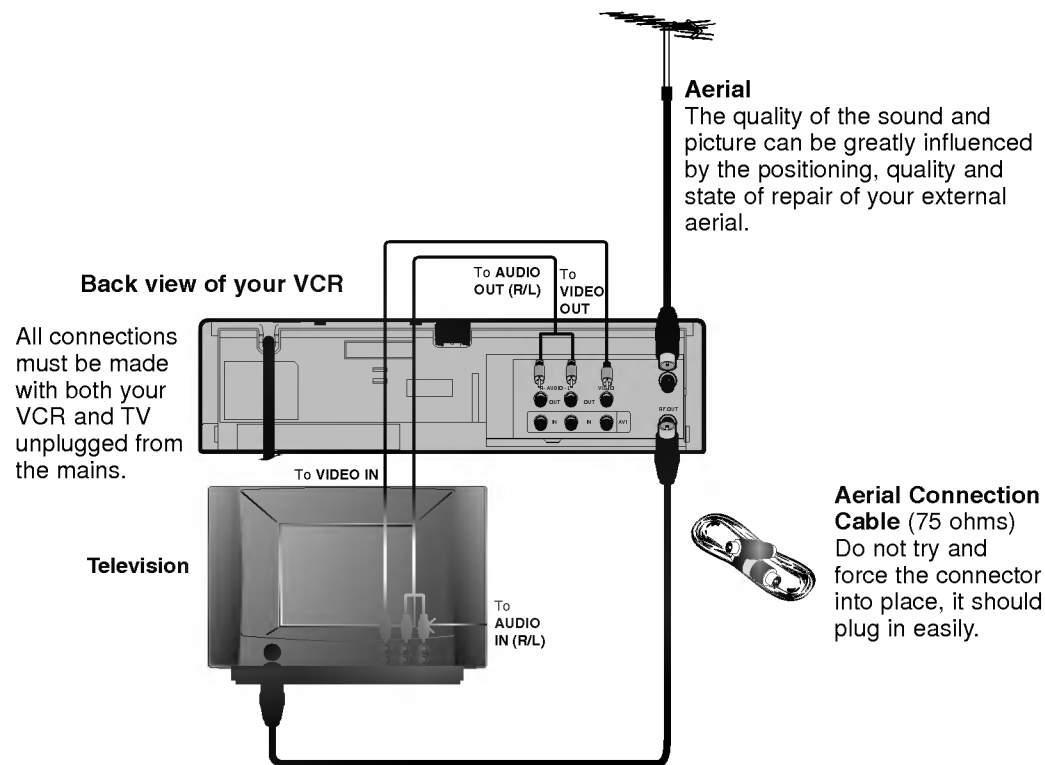

Connecting To your Hi-Fi & Camcorder

An audio system can be connected to the AUDIO OUT terminals on the back of your VCR.
Please remember to turn the volume to minimum on your Hi-Fi, then gradually increase the volume; this will prevent damaging your speakers and save you from an extremely noisy shock!

  Make sure all connections are made with both your VCR and camcorder unplugged from the mains to avoid damaging your equipment. To make connecting your camcorder easier we have designed the Audio IN (Left and Right) and Video IN terminals on the front panel of your VCR.

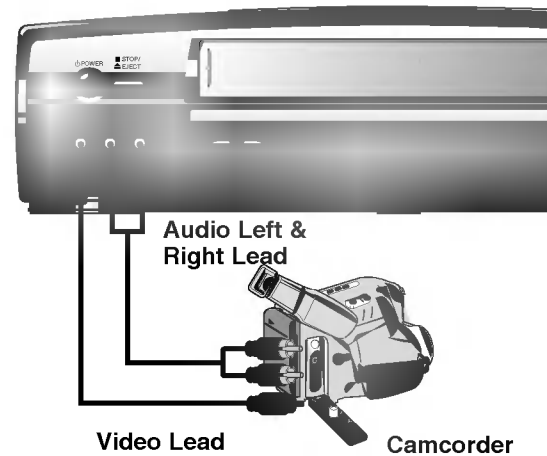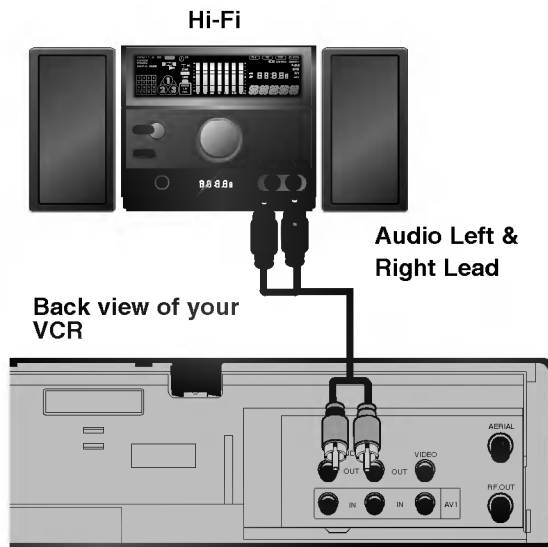

Audio out terminals & RCA Leads

The RCA terminals for connecting your VCR to your Hi-Fi are on the back of the set; L = Left sound output, R = Right sound output. You normally have to select the AUX function on your Hi-Fi.

Tuning in a Video channel On your TV

The output frequency of this video recorder (VCR) is set at UHF channel 36. If channel 36 is already used by another TV station, or if the picture is distorted, you can change the transmitter channel of your VCR. Stages 5 ~ 8 will show you how to change the output frequency of your VCR.



 
Your TV receives signals from the video recorder (VCR) like another TV station. You have to select a channel number on your TV and tune it in so that you may watch video tapes. If you have used **AUDIO** and **VIDEO** cables then your TV should already have a dedicated video channel built into it, usually called **AV**.

1

Make sure that you have correctly installed your VCR as described earlier in this book.

Press **POWER** to turn on your VCR.

Turn on your TV.

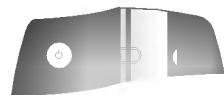

2

Insert a pre-recorded video tape into your VCR and press **PLAY** on the remote control.



Select a TV channel number on which you wish to watch video's.

Don't worry if you don't have a video-tape to play at this stage! If you switch your VCR on and continue stages **3 ~ 4**, instead of seeing video playback tune your TV until you see a bright blue screen.

3

Tune this channel until the video picture is sharp and the sound is clear.

If you have used a **AUDIO** and **VIDEO** cables you will not have to tune your TV, simply select the **AV** channel. The **AV** channel is already pre-tuned for optimum video playback on your TV.

4

Store this channel on your TV.

You will need to look at the TV instruction book if you do not know how to do this.

5

Only carry out stages 5 ~ 8 if you cannot obtain clear video playback as described in stages 1 ~ 4.

Select a TV channel number on which you wish to watch video's.

Make sure that your VCR is in **STANDBY** (only the clock will be displayed) by pressing **POWER** on the remote control.


6

Hold down **PROG ▲** or **▼** on the front of your VCR for more than 4 seconds.



CH36 will appear in the VCR display.

The following picture will be displayed on the TV screen.

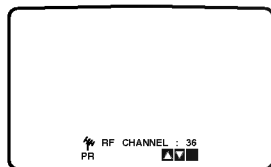 

7

Press **PROG ▲** or **▼** to select another video channel.



You may select any channel number between 22 and 68.

8

Select a TV channel number on which you wish to watch video's.

Tune this channel so that a bright blue screen appears.

Store this channel on your TV.

Press **⏻** on the front of your VCR when you have finished.



Make sure that you have correctly installed your VCR and successfully tuned in a dedicated video channel on your TV. If you do not tune in a dedicated video channel on your TV you will be unable to view and record video tapes!

How to Using the main menu



This VCR can easily be programmed by using the menus displayed on screen.
The menus are controlled from the REMOTE CONTROL HANDSET.

1

Switch on your TV set and video recorder by pressing the **POWER** button.



 
2

Press **i** button.
The main menu will appear on the TV screen.




3

Press **◀** and **▶** to select the desired menu.
Press **OK** and press **▲** or **▼** to select.

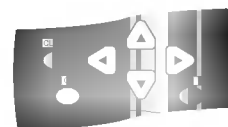

4

 Press **i** to remove the menus from the TV screen.

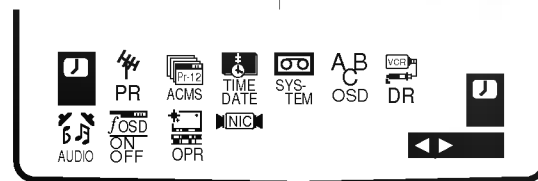

LANGUAGE SELECTION

You can select the language among English, Russian, Deutsch, Francais, and Polski.

- **REC** - Timer recording setting (see p. 24 to 25).
- **PR** - Manual tuning setting (see p. 12 to 13).
- **ACMS** - ACMS (Automatic Channel Memory System) (see p. 11).
- **TIME DATE** - Date & clock setting (see p. 23).
- **SYSTEM** - To set the Colour TV System (see p. 22).
- **ABC OSD** - To change the language setting for OSD (see left).
- **DR** - To check a problem with your VCR (see p. 28).

- **AUDIO** - To select the channel for audio output (see p. 30).
To select the channel of audio output according to your TV type ("B/G" for PAL B/G TV, "D/K" for PAL D/K TV)
- **F.OSD ON/OFF** - To display the operational mode of your VCR (see p. 26).
- **OPR** - To improve the playback picture (see p. 17).
- **NIC** - To activate or deactivate the NICAM digital sound (see p. 30).



If the TV broadcast signal is weak your VCR may not detect the necessary information and will be and to store them correctly. To overcome this problem please turn to the **MANUAL TUNING** section on page 12 to 13.

Tuning in TV Stations Automatically

1

Press **POWER** to turn on your VCR.



 
 
2

Press **i**.

The main menu will appear on the TV screen.


Press **◀** or **▶** to select the **ACMS**.

Press **OK**.

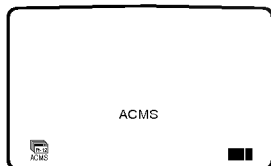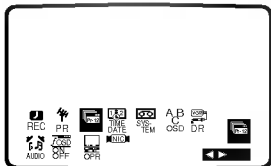

3

 
Press **OK** again to start the automatic tuning process.

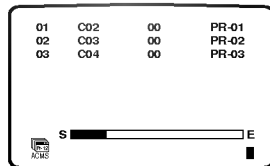

4

The **TV STATION TABLE** will appear when tuning is complete.

 Press **i** to save your settings.

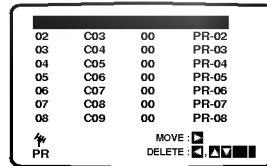

Tuning in TV Stations Manually



In certain areas of the country broadcast signals may be too weak for your VCR's automatic tuning process to find or assign TV stations correctly. You must tune in these weaker broadcast stations manually in order for your VCR to store them.

 
 
1

Press **i**.

The main menu will appear on the TV screen.

Press **◀** or **▶** to select the PR.


Press **OK**.

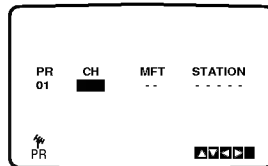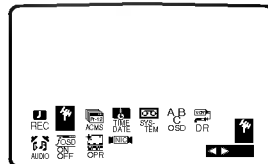


2

Press **i**.

 The station table will appear.

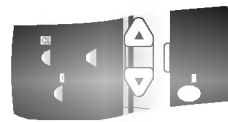


 
Press **▲** or **▼** to select the programme number that you want to tune (for example, PR 07).

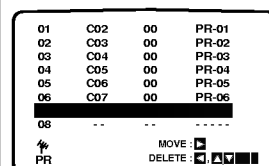

3

Press **OK**.

  
Enter the channel number of station that you want to tune with the **numbered buttons**.

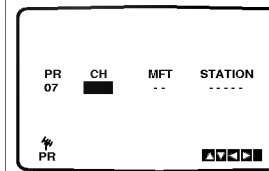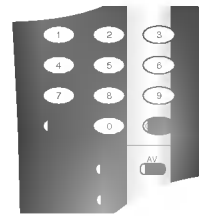

4


Searching will stop when it locates a station.

 Control the fine tuning of the station by pressing **▲** or **▼**.

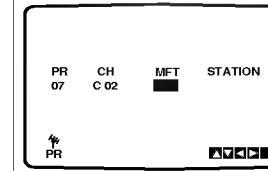

5

 Press **▶** to select and press **OK**.

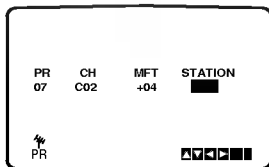


6

Press **▲** or **▼** to select **letters** and **numbers** for the new station name.

Press **◀** or **▶** to move back and forth between characters.

 
Press **OK**.

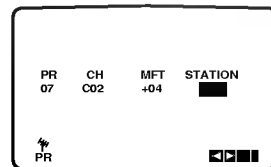

7

Press **i**, confirm the station placement.

 If you wish to manually tune other stations repeat stages 1-7.

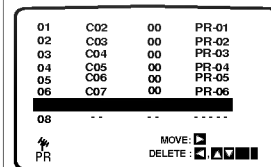

8

Press **i** again to remove the menus from the TV screen.

Your new TV station has now been tuned into your VCR.



Changing the order of TV Stations



After tuning TV stations into your VCR you may wish to **change** the order in which they are stored without having to retune them against! The instructions given on this page will show you how you can simply move them into your desired order.

 
 
 
1

Press **i**.

The main menu will appear on the TV screen.

Press **◀** or **▶** to select the PR.

Press **OK**.

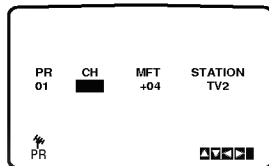
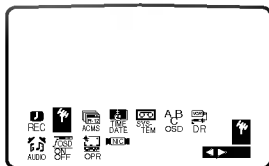
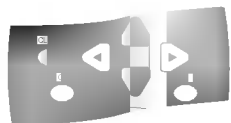


2

Press **i**.



Press **▲** or **▼** to select the **programme number** you want to move (for example, PR 03).

   Press **▶**.

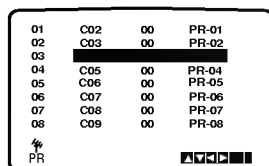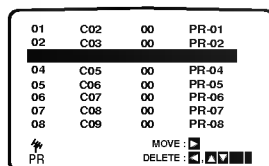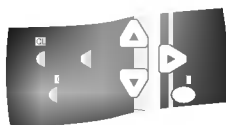

3

  Press **▲** or **▼** to select the **programme number** you want to move to (for example, PR 05).

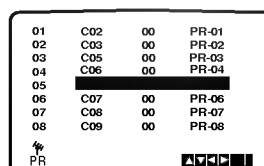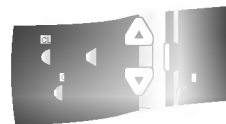



4

Press **OK**.

The selected **programme** will be moved to the **new programme number**.

If you wish to move other TV stations repeat stages 1 - 4.

  Press **i** to remove the menus from the TV screen.

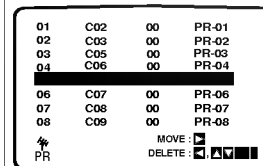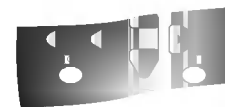





After tuning TV stations into your VCR you may wish to **delete** a station.
The instructions given on this page will show you how easily delete any unwanted TV stations.

1
Press **i**.

The main menu will appear on the TV screen.


Press **◀** or **▶** to select the **PR**.

  Press **OK**.

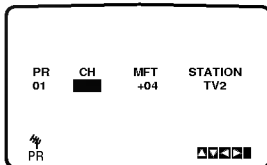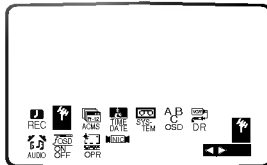



2
Press **i**.

 Press **▲** or **▼** to select the **programme number** you want to delete.

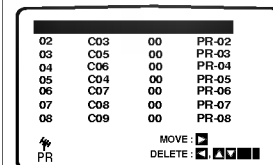



3
Press **◀**.

  After a short while, the selected station will be deleted.

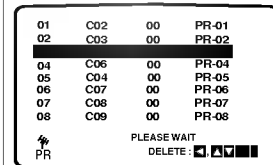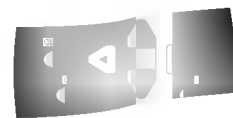

4
Press **i** to remove the menus from the TV screen.

  If you wish to delete other TV stations repeat stages **1 - 3**.

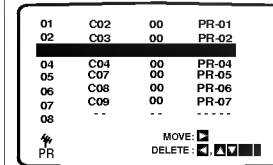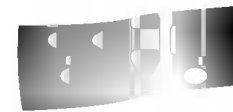


Deleting TV Stations

How to selecting Stored TV stations:
Stored TV stations can be selected in either of two ways.
Press **▲** or **▼** to select different stations that are tuned into your VCR.



 You may also directly select stations using the **numbered buttons** on the remote control.

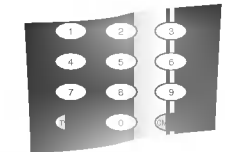

Playback a tape



You will only be able to load and eject video cassettes when your VCR is plugged into the mains. Your VCR may also playback recordings from NTSC tapes (on PAL TV).

Getting a better picture

When a cassette is inserted and playback started, the automatic tracking function works to get the best possible picture automatically. If the quality of the recording is poor, repeatedly press ▼ or ▲ on the remote control to manually adjust the tracking until any distortions have been removed. Press numbered 0 on the remote control to switch automatic tracking back on again.

1

Make sure that you have correctly connected your VCR as described earlier in this book.

Turn on your TV and select the video channel for video playback.

 
Press **POWER** to turn on your VCR.



2

Insert the video cassette into your VCR.

The video cassette should have the window side facing up and the arrow facing away from you.

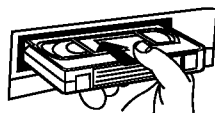

3

Press **PLAY** to start playing your tape.



If you load a video cassette which has had its record protection tab removed (playback of the cassette will start automatically).

AUTO TRACKING

 
Your VCR will automatically adjust the tracking to give the best picture quality.

4

Press **P/STILL** to still a picture.

Press **P/STILL** repeatedly to advance the tape frame by frame.

If you hold down **P/STILL**, the picture will be slowed down at about 1/19 times the normal playback.

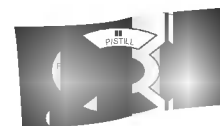

Tapes can be paused for up to 5 minutes. After 5 minutes your VCR will stop the tape to prevent damaging the tape or your VCR.

Still picture quality can be improved slightly by pressing ▲ or ▼.



5

 
Press **PLAY** to continue playing your tape.

Picture search:

During playing back press either **FF** or **REW** to this will enable you to rapidly wind the tape (7 times normal playback) see where you are on the tape.

Logic search:

During fast forwarding or rewinding press and hold **FF** or **REW** the picture will be played back at 7 times normal playback speed.

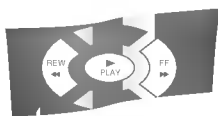

6

Press **STOP** to end playback.



Press **EJECT**.



If the end of the tape is reached, your VCR will stop playback automatically, rewind, stop, eject the tape and place itself into power off mode.

CM (Commercial Message) Skip:

This feature enables you during playback of a tape to skip a commercial break in a few seconds, then resume normal playback.

While tape is playing press **CM SKIP** on the remote control to skip commercial (or another programme material).



Repeatedly press **CM SKIP** to skip:

- | | |
|---------|-------------|
| 1 Press | 30 seconds |
| 2 Press | 60 seconds |
| 3 Press | 90 seconds |
| 4 Press | 120 seconds |
| 5 Press | 150 seconds |
| 6 Press | 180 seconds |

OPR (Optimum Picture Response):

This feature automatically improves playback picture quality by adjusting your VCR to the condition of the tape.

Press **i**.

Press ◀ or ▶ to select **OPR**.

Press **OK**.



Press ▲ or ▼ repeatedly to select: **OFF**, **SOFT** or **SHARP**.

Please note you may only set OPR when playing a tape.

Press **i** return to screen.

Other Playback features



Your VCR incorporates a number of tape search features that enable you to quickly search a tape for your particular recording.

1

During playing back or still picture press ◀ or ▶ repeatedly to obtain different playback speeds.



You can reach the following playback speeds.
(-7xplay, -3xplay, -play, still, 1/19 slow, play, 2xplay, 7xplay)

To switch off the slow motion and shuttle, press the desired function.

During slow motion and shuttle, the noise bars may appear on the picture according to the status of tape.

2

Press ▲ or ▼ to improve picture quality.



3

Press **PLAY** to play your tape back at normal speed.



4

Press **STOP**.

STOP will appear for a few seconds on the TV screen.



Fast Forward (FF):

Press **FF**.
The tape will rapidly wind forwards.

FF will appear for a few seconds on the TV screen.



Rewind (REW):

 
Press **REW**.
The tape will rapidly wind backwards.

REW will appear for a few seconds on the TV screen.




Recording TV programmes

If you do not wish to record on a tape (this can happen quite easily by accident!) remove the protection tab on the back edge of the video cassette.

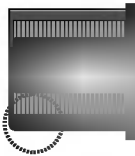

 It is possible to record on a video cassette with the record protection tab removed by covering the hole with self adhesive tape.

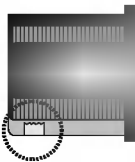

Your VCR allows you to make recordings using a variety of simple methods:
Instant Timer Recording (ITR) start recording immediately for a set period of time or until the video cassette runs out.

1

Make sure that you have correctly connected your VCR as described earlier in this book.

 
Press **POWER** to turn on your VCR.



2

Insert a video cassette with protection tab into your VCR.

The video cassette should have the window side facing up and the arrow facing away from you.

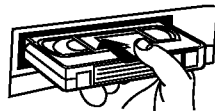


3

Press **▲** or **▼** to select the **programme number** you wish to record.



 You may also directly select programme number using the **numbered buttons** on the remote control.

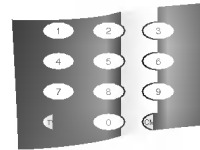

4

If you wish to record external video from a sky decoder or satellite receiver using the VIDEO IN and AUDIO IN(L/R) set the pre-set number to "SC", "AV1" or "AV2" by pressing the "AV" button.



SC01 Hi-Fi Sound only recording using the AUDIO IN terminals on the front of your VCR.

AV 1 Sound and Picture recording using the VIDEO IN and AUDIO IN (L/R) on the back of your VCR.

AV 2 Sound and Picture recording using the VIDEO IN and AUDIO IN (L/R) on the front of your VCR.

 


Your VCR incorporates Long Play (LP) which enables you to record up to twice the amount of time on a video cassette. For example an E-180 will record up to 180 minutes using Standard Play (SP); using LP you will be able to record up to 360 minutes. **Please note** there will be a slight loss in picture and sound quality when using LP.

5

Press **LP** if you wish to record in Long Play or Standard Play.

SP will produce improved picture and sound quality, however LP will provide twice as much recording time as SP. SP or LP will be displayed to let you know which you have selected.

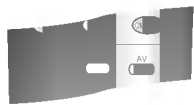

6

Press **REC/ITR** to start recording.

RECORD will appear on the TV screen.

Press **REC/ITR** several times. Each successive press will increase the record time by 30 minutes until you reach a maximum of 9 hours.

 


7

Press **P/STILL** to avoid recording unwanted scenes.

Press **P/STILL** to continue recording.

Tapes can be paused for up to 5 minutes; RECP will be displayed when a tape is paused. After 5 minutes your VCR will stop recording to prevent damaging the tape or your VCR.

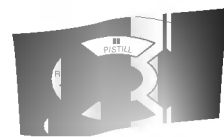

8

Press **STOP** to end recording.

Press **EJECT**.

EJECT will appear on the TV screen.

If the end of the tape is reached, your VCR will stop recording automatically, rewind, stop, eject the tape and place itself into power off.



Remember you can record one programme while watching another by starting your instant recording, press **TV/VCR** to select TV mode and then selecting a different channel on your TV.



To set the colour system



Your VCR is equipped with triple colour standard, you can play back a tape in PAL B/G and SECAM D/K.

 
 
During playback your VCR detects the colour system automatically.
If there are colour problem please select the colour system manually.

1

Press **i**.



The main menu will appear on the TV screen.

Press **◀** or **▶** to select the **SYSTEM**.

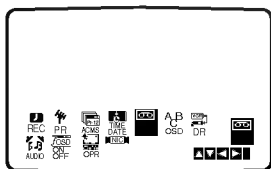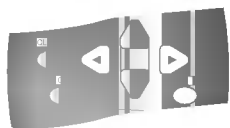

2

  Press **OK**.

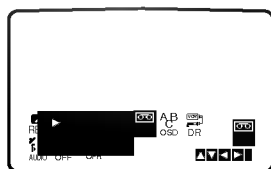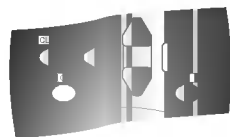

3

 
Press **▲** or **▼** to select according to the **COLOUR** system used.

AUTO: automatic colour selection,
PAL: PAL recordings
MESECAM: MESECAM recordings.



4

Press **i** to remove the menus from the TV screen.

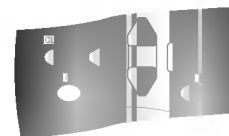

Setting the clock Manually

1

Press **i**.

Press **◀** or **▶** to select
TIME DATE.

Press **OK**.

 
 


2

Use the **numbered buttons** on the remote control or press **▲** or **▼** to alter the **HOURS, MINUTES, DAY, MONTH** and **YEAR**.

Please note your VCR uses a 24 hour clock.
e.g. 1pm will be displayed as 13:00.

The day of the week will appear automatically when you enter the year.

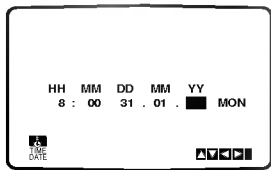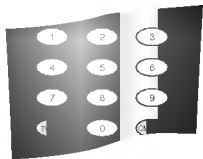

3

 
If you make a mistake press **◀** or **▶** and enter the correct details.



4

Press **i**.

Your new clock settings are stored and will appear on your video recorder's display.

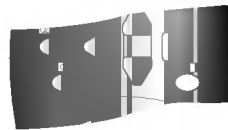

Timer recording

Using On Screen Display

ADVANCE

 


You may set up to seven timer record events within one month of the current date **PLEASE NOTE!** before setting the timer make sure that you have set the VCR clock correctly and you know which stations you have tuned TV stations on your VCR.

1

Insert a video cassette with protection tab into your VCR.

The video cassette should have the window side facing up and the arrow facing away from you.

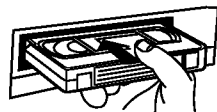


2

Press **i**.

Press **◀** or **▶** to select **REC.**

 Press **OK**.

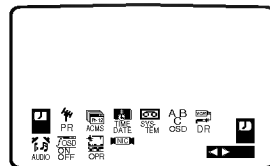

PR	DATE	T	I	M	E	SP
■	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP

DELETE: **◀** **▶** **■**

 
3

Press **OK** to start setting the timer record event.



If all timer record events are full press **▲** or **▼** to select the event that you wish to remove and replace.

Press **◀** to delete the event.

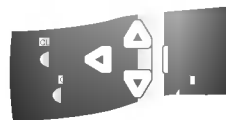


PR	DATE	T	I	M	E	SP
■	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP

▲ **▼** **◀** **▶**

4

 Press the **numbered buttons** to enter the station that you wish to record.

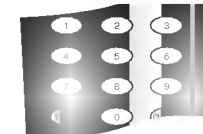

When selecting stations 1 - 9, press 0 first, then the channel number; for example Stations 3 - 03. You may also select Channels by pressing **▲** or **▼**. Once selected press **▶**.

If you wish to record external video from a satellite receiver using the VIDEO IN and AUDIO IN(L/R) set the pre-set number to "AV1" or "AV2" by pressing the "AV" button on the remote control.

PR	DATE	T	I	M	E	SP
■	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP

▲ **▼** **◀** **▶**



If at a later date you wish to **delete** or **change** any of the settings in timer event memory you may do so without having to enter all the timer event information again. Simply display the timer event screen. Press ▲ or ▼ to select the event that you wish to **delete** or **change**.

 
Press ◀ to delete the event...or

Press OK to change; then press ◀ or ▶ to select; Station, Date, Start and End times and LP.

Press ▲ or ▼ to enter the correct information.

5

Press the **numbered buttons** to enter the date of the programme.

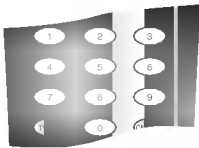

If you press **OK** before entering the date you may select one of the following automated recording features. Press ◀ or ▶ to select, then press **OK** to confirm.


DLY To record every day (except Saturday and Sunday) at the same time.

Weekly To record at the same time every week.

PR	DATE	T I M E	SP
NRTV	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
■	SU MO TU WE TH FR SA		

6

 Press the **numbered buttons** to enter the recording start and end times of the programme that you wish to record.

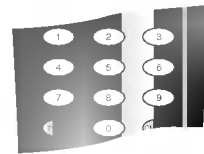

Please note your VCR uses a 24 hour clock.


e.g. 1pm will be displayed as 13:00.

You may also select the the start and end times by pressing ▲ or ▼.

PR	DATE	T I M E	SP
NRTV	16	19:00-20:00	■
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
■	SU MO TU WE TH FR SA		

7

 Press ◀ or ▶ and press ▲ or ▼ if you wish to record in Long Play.

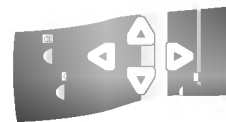

PR	DATE	T I M E	SP
NRTV	16	19:00-20:00	■
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
--	--	SP
REC. SPEED	: SP		

8

Check that the timer event details are correct.

Press **i** twice.

If **PLEASE CHECK** is displayed, you have entered incorrect and will need to re-enter the data.

Press **POWER** to switch your VCR Standby.



TIMER will appear in the video recorder's display while your VCR waits to make the recording.



If Timer record events Overlap...

 
Make sure that the preset times of the timer recording events do not overlap. If they do, the earlier programme will always be given priority.

Example:

Programme 1 is programmed to start at 16:00 and end at 17:00.

Programme 2 is programmed to start at 16:30 and end at 18:00.

(In this case, Programme 1 will be recorded in its entirety, but only the last 30 minutes of Programme 2 will be recorded.)

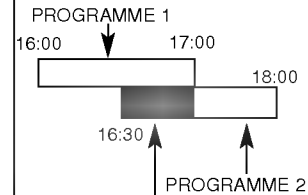

Energy Saving On Screen Display



Your VCR has an Energy Save feature which if set will place your VCR into an economic power save where the clock display will disappear. If you have programmed a recording, this feature will not work.

1

Press **POWER** on the **VCR**.

The VCR and clock will appear on the video recorder's display.

2

Press **POWER** on the **VCR** again and your VCR will go into **Energy Save**.

All indicators will turn off in the video recorder's display.

 
Press **POWER** to switch off **Energy Save**.



You may easily display the current time or tape counter and amount of tape left, day, month, year, day of week, programme channel, tape speed and operational mode of your VCR on the TV screen. If a recording is taking place these On Screen Displays will not be recorded onto the tape.

1

Press **OK/CLK/CNT** to display.

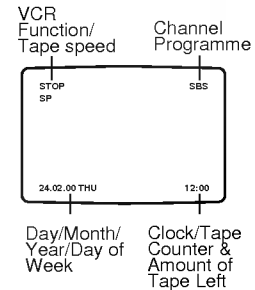



Press **OK/CLK/CNT** repeatedly to display the tape counter and amount of tape left.

2

After 3 seconds the display will clear only leaving the clock or tape counter and amount of tape left on the TV screen.

 Press **OK/CLK/CNT** again to remove all displays from the TV screen.

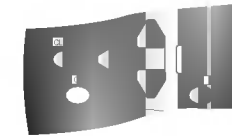

 If you have set the **OSD ON/OFF** to **OFF** in the main menu, function **OSD(On Screen Display)** will not be displayed.



 
The **Digital Tape Counter** can be displayed on your TV screen instead of the time by pressing **OK/CLK/CNT** on the remote control. The Digital Tape Counter indicates the relative positions of recordings on the tape.

1

Press **OK/CLK/CNT**.
Press **CLEAR** to set the counter to 0:00:00.

Press **PLAY** or start recording.

The tape counter will display the actual play time in hours, minutes and seconds.

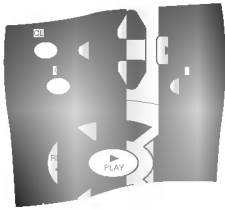


2

Press **STOP** when playback or recording is complete.

Press **REW**.

 
The tape will rewind and automatically stop when the counter returns to 0:00:00.

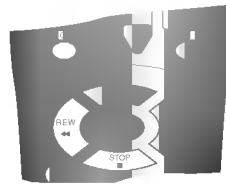

The control buttons on the front of the VCR can be switched off so that your VCR can only be operated using the remote control.

1

Press **C.LOCK**.

 **SAFE** will appear on the TV screen.

SAFE will flicker in your video recorder's display for a few seconds.


None of the buttons on the front of your VCR will work (except **STOP/ EJECT**)

If any buttons on the front of your VCR are pressed **SAFE** will flicker in your video recorder's display for a few seconds.



2

Press **C.LOCK** again to switch off the child lock.

 **SAFE** will disappear on the TV screen.

OFF will flicker in your video recorder's display for a few seconds.

Tape Counter Memory Stop



Memory Shut-Off

Video Doctor (Self-Diagnosis)



Automatic Memory Shut-Off

This feature of your VCR enables you to switch off your VCR automatically after tape rewind has been completed.

1

Press **POWER** during tape rewind.



2

The tape will rewind to the beginning and your VCR will automatically switch itself off.



VIDEO DOCTOR (Self-Diagnosis)

 
 
 
This feature informs you that there is a problem with your VCR. These error messages will appear on the TV screen.

1

Press **i**.

Press **◀** or **▶** to select **DR**.

Press **OK**.

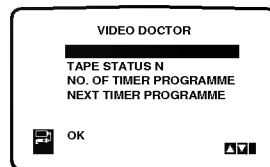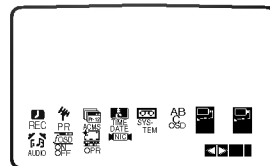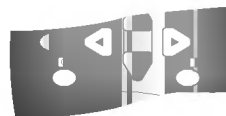

2

Press **▲** or **▼** to check a problem.

HEAD STATUS

● PLEASE CLEAN:

Clean your video heads.

TAPE STATUS

● NOT RECORDABLE:

Insert a tape with its protection tab in place

NO. OF TIMER PROGRAMME

● 2

Shows the number of timer recording.

NEXT TIMER PROGRAMME

● 1 26 10:00~11:00

Shows the current status of timer recording.

Press **i**.



ez (easy) power off

Sequence of "Stop → Rewind → Eject → Power Off" is operated automatically by pressing ez POWER OFF.

1

During playing back, press ez POWER OFF.



2

Your VCR will be operated as the following ;

STOP



REWIND



EJECT



POWER OFF

 


ez (easy) repeat

By pressing & holding ez REPEAT during playing back, the holding section is replayed twice automatically.

1

During playing back, press & hold ez REPEAT at the point where repeat play is to be concluded. Then, your VCR is started reverse search.

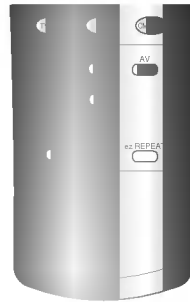

2

Release ez REPEAT at the point where repeat play is to start.

The holding section is replayed twice automatically.



Pressing ez REPEAT again during repeat play, return to normal play.

ez (easy)
Operations
ADVANCED

Hi-Fi Stereo System Advanced



Your VCR will record and playback Hi-Fi stereo sound. In addition it has a stereo NICAM digital stereo sound decoder. This allows you to record and playback the sound in several different ways. Video cassettes recorded on your VCR will have a normal mono audio track and two VHS Hi-Fi stereo audio tracks. These stereo tracks allow you to make audio recordings in Hi-Fi stereo mode from a TV broadcast, stereo audio system, video disc or another Hi-Fi VCR.

1

Your VCR is fitted with a NICAM stereo decoder to obtain the benefits of digital stereo sound (on stations that transmit stereo sound).

The particular type of sound received or that recorded will be briefly displayed on the TV screen for a couple of seconds:

STEREO NICAM

Sound is automatically recorded on the Hi-Fi stereo and mono tracks of the video tape.

MONO

The sound is recorded on the Hi-Fi tracks and the mono track of the video tape without any separation.

 
 
2

Switch on your VCR.

Press **i**.

Press **◀** or **▶** to select **AUDIO**.

Press **OK**.

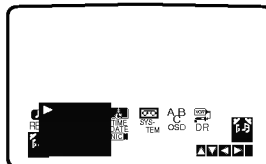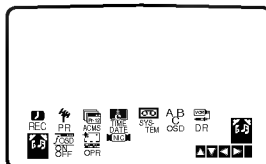

3

Press **▲** or **▼** to select **AUDIO**.

The choice is **STEREO**, **L-CH** (left channel), **R-CH** (right channel) and **MONO**.



 
4

Press **i**.





This feature enables you to simulcast sound transmitted by an audio source and the picture transmitted by the TV station.

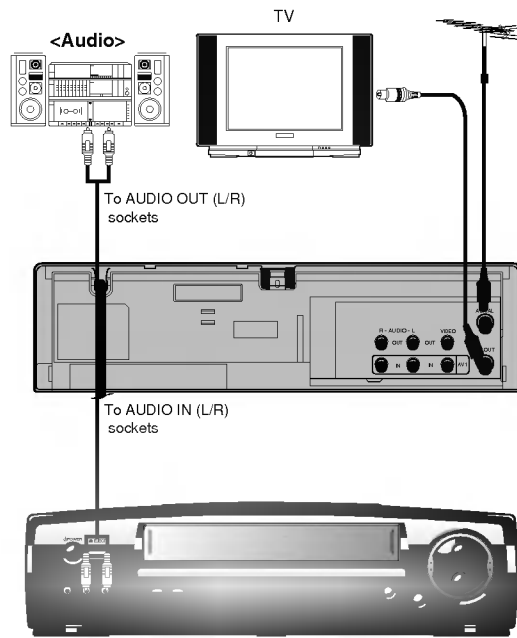

Simulcast Stereo Recording

1

Connect the stereo tuner or receiver to the left and right AUDIO INPUT connectors (AV2) on the front panel of the VCR.

3

Adjust the stereo sound quality on your stereo tuner or receiver.

2

Press AV to select SIMULCAST (SC).

4

Other operations are the same as for general recording.

Simulcast Stereo Playback

1

Connect the VCR and TV.

3

Other operations are the same as general playback.

2

If the VCR is connected both to a stereo TV and your audio system, turn on your audio system and set the TV sound to minimum.

Simulcast
Recording &
Playback

 
Tape Copying

Specifications



A second VCR (for tape copying) should be connected to the AUDIO IN (L/R) and VIDEO IN terminals on the front of your VCR or from the back of your VCR. Remember to select the appropriate audio/video mode by pressing the **AV** button on the remote control.

Back view of your VCR
Place the blank video tape that you wish to record **ON** into this VCR

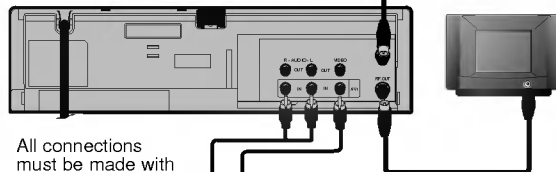

All connections must be made with both your VCR's and TV unplugged from the mains

RCA Lead
If you use a RCA lead picture quality will be improved and you will be able to enjoy stereo sound when playing tapes

Back view of playing VCR
Place the video tape that you wish to record **FROM** into this VCR



The design and specifications are subject to change without notice.

General

Power	110-240V~, 50/60Hz.
Power consumption	Approx. 18 Watts (Energy Saving mode: 3 Watts)
Video Head System	Double azimuth 4 heads, helical scanning.
Tape speed	23.39 mm/sec (SP mode)/ 11.69 mm/sec (LP mode).
Tape format	Tape width 12.7 mm (0.5 inch).
Maximum recording time	4 hours (SP mode, E-240 tape)/ 8 hours (LP mode, E-240 tape).
Rewind time	Approx. 65 (+/-10) sec.(E-180 tape).
Dimensions	360 x 94 x 270 mm (W x H x D)
Weight	3.4 Kg.
Operating temperature	5°C - 35°C
Operating humidity	Less than 80%.
Timer	24 hours display type.

Video

Television system	CCIR standard (625 lines, 50 fields) PAL/SECAM colour signal
Recording format	PAL/MESECAM
RF reception	PAL/SECAM (B/G, D/K)
RF OUT	PAL G/K
Input level	VIDEO IN (RCA type) 1.0 Vp-p, 75 Ohm, unbalanced
Output level	VIDEO OUT (RCA type) 1.0 Vp-p, 75 Ohm, unbalanced
Signal to noise ratio	More than 43 dBm.
RF Modulator	UHF 22-68 (Adjustable).

Audio

Input level	AUDIO IN (RCA type) -6.0 dBm, more than 47 kohms
Output level	AUDIO OUT (RCA type) -6.0 dBm, less than 1 kohms
Track	Mono track & Hi-Fi track
Frequency response	Normal: 100 Hz-10 kHz (-6/+3 dB) Hi-Fi: 20 Hz-20 kHz (-3/+3 dB)
Signal to noise ratio	Normal : More than 43 dB (at SP mode) Hi-Fi : More than 70 dB (at SP mode)
Dynamic range	Hi-Fi : More than 80 dB (at SP mode)

Troubleshooting

Check List

Video Head Cleaning



Whenever a video cassette is inserted into or ejected from your VCR the video head is automatically cleaned. This should mean that additional head cleaning should not be necessary. However dirt accumulating on the head after a long period of time can cause the playback picture to become blurred or broken up. High quality video cassette tapes will not normally deposit dirt onto the video head, but old or damaged tapes might.

Symptom	Check points	Symptom	Check points
No picture & no sound	<ul style="list-style-type: none"> Is the mains plug plugged in and switched on? Is the TV switched on? Try another channel, maybe a weak signal. Check the aerial. Is it connected? Check the aerial. Is the cable broken or damaged? Have you tuned in a video channel on your TV to watch video on? If you have used a RCA lead to connect your VCR and TV have you selected the AV channel on your TV? Check tuning, carry out Automatic Tuning again 	Video cassette cannot be inserted	<ul style="list-style-type: none"> Is the cassette compartment empty? Are you trying to insert the cassette the right way round?
No playback or poor picture	<ul style="list-style-type: none"> Are the TV channels tuned in properly? Have you tried using another cassette? Can you minimise the noise bars to an acceptable level with 0, ▲ or ▼ ? 	Remote control does not work	<ul style="list-style-type: none"> Is the mains plug plugged in and switched on? Is the VCR switched on Check the batteries in remote control.
TV programmes cannot be recorded	<ul style="list-style-type: none"> Can you get a picture on the TV? Are the aerial leads and special RF connector lead between your VCR and TV connected? Are the TV channels tuned in properly? Has the safety tab on the video cassette been removed to prevent recording? Try another station, maybe a weak signal Check the aerial. Is it connected to the TV? 	The top of the playback picture is unstable	<ul style="list-style-type: none"> Is the video cassette damaged, have you tried using another one? Adjust the horizontal control on your TV. Check the aerial. Is it connected? Check the aerial. Is the cable broken or damaged? Check for local interference Make sure that you are using a video TV channel on your TV.
		Auto Play does not work	<ul style="list-style-type: none"> Has the safety tab been removed from the video cassette? Is the child lock switched on mode?
		No Hi-Fi sound	<ul style="list-style-type: none"> Switch "AUDIO" in the menu to STEREO.
		No NICAM sound recording	<ul style="list-style-type: none"> Make sure "NIC" in the main menu is set to "AUTO" for the station to be recorded.



P/N: 3834RP0061E