



website: <http://www.lgservice.com>  
e-mail: <http://www.lgservice.com/techsup.html>

# **LRBP1031W** **LRBP1031NI**

## **REFRIGERATOR- FREEZER**

### **User's Guide (3~16)**

Please read this User's Guide carefully before operating and keep it handy for reference at all times.

## **REFRIGERATEUR- CONGELATEUR**

### **Manuel de l'utilisateur (17~30)**

Lisez avec attention ce Manuel de l'utilisateur avant d'utiliser le réfrigérateur et gardez-le toujours pour toute référence.

## **FRIGORIFICO- CONGELADOR**

### **Instrucciones de uso (31~43)**

Lea estas instrucciones de uso con atención antes de poner el aparato en funcionamiento y manténgalo siempre a mano para que pueda consultarlo en cualquier momento.





# Table of Contents

<b>Introduction</b>	<b>Registration</b> ..... 4
	<b>Important Safety Instruction</b> ..... 4
	<b>Identification of Parts</b> ..... 6
<b>Installation</b>	<b>Installation</b> ..... 7
	<b>Starting</b> ..... 7
<b>Operation</b>	<b>Temperature Control</b> ..... 8
	<b>Quick Freeze</b> ..... 8
	<b>Vacation</b> ..... 9
	<b>Self Test</b> ..... 9
	<b>Door Alarm</b> ..... 9
	<b>Ice Making</b> ..... 9
	<b>Defrosting</b> ..... 9
<b>Suggestion On Food storage</b>	<b>Storing Food</b> ..... 10
<b>Care and Maintenance</b>	<b>General Information</b> ..... 11
	<b>Lamp Replacement</b> ..... 11
	<b>Cleaning</b> ..... 12
<b>Troubleshooting</b>	<b>Troubleshooting</b> ..... 13

## Introduction

### Introduction

## Registration

The model and serial number are found on the rear of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase : \_\_\_\_\_

Dealer Purchased From : \_\_\_\_\_

Dealer Address : \_\_\_\_\_

Dealer Phone No. : \_\_\_\_\_

Model No. : \_\_\_\_\_

Serial No. : \_\_\_\_\_

## Important Safety Instruction

 
### Precaution

This Refrigerator-Freezer must be properly installed and located in accordance with the installation instruction before it is used.

Never unplug your Refrigerator-Freezer by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.

When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

After your Refrigerator-Freezer is in operation, do not touch the cold surfaces in the freezer compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.



## Important Safety Instruction

### Precaution

Pull out the power plug prior to cleaning the Refrigerator-Freezer.

 
Never damage, severely bend, pull out, or twist the power cord because power cord damage may cause a fire or electric shock.

Never place glass products in the freezer because they may be broken when their contents are frozen.

### Recommended Grounding Method

Before you move your refrigerator into its final location, it is important to make sure you have the proper electrical connection:

A 115 Volt, 60 Hz., AC only 15 or 20 ampere fused, grounded electrical supply is required. It is recommended that a separate circuit serving only your refrigerator be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

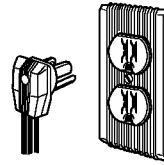

### Power Cord Replacement

If the supply cord is damaged, it must be replaced by a special cord or assembly from the manufacturer or its service agent.

### Danger

 
Risk of child entrapment.  
Before you throw away your old refrigerator or freezer:  
Take off the doors.  
Leave the shelves in place so that children may not easily climb inside.

### Don't store

Don't store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.


### Grounding (Earthing)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current. In order to prevent possible electric shock, this appliance must be grounded. Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.





## Identification of Parts

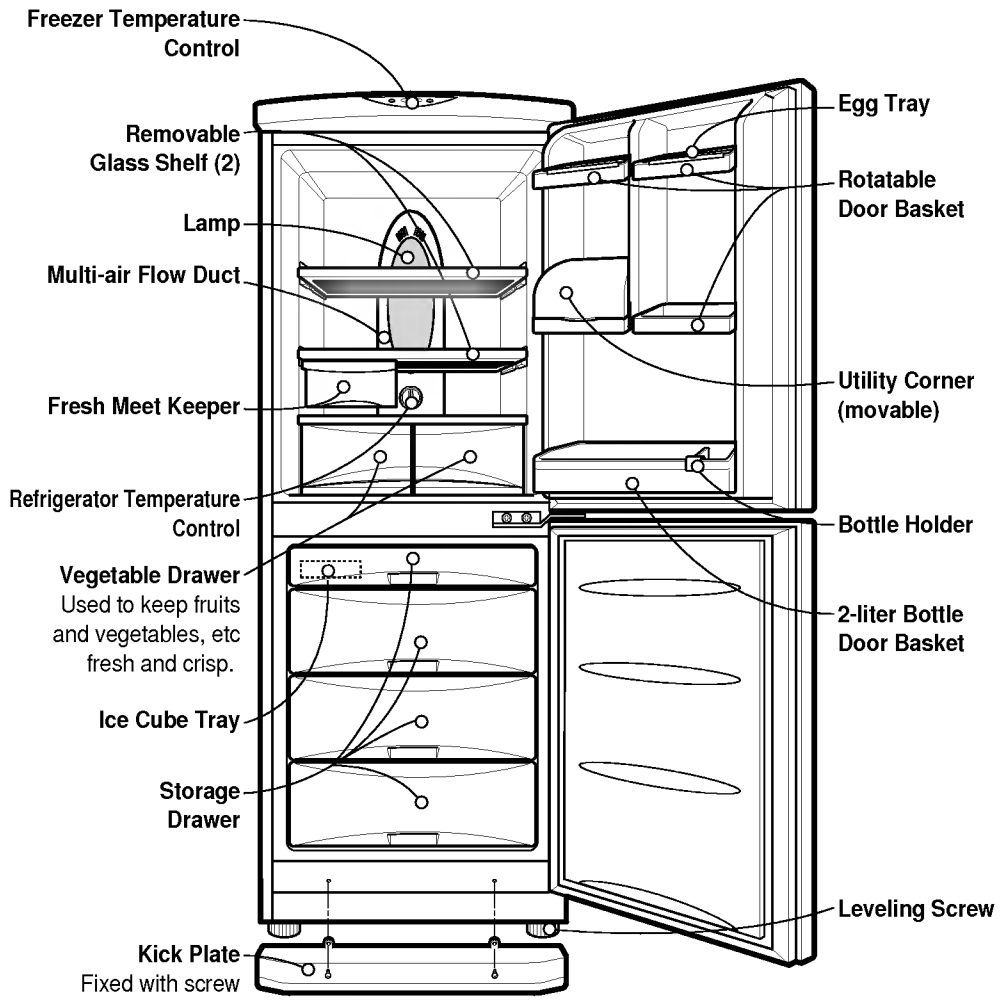 

## Installation

### Installation

1. Select a good location.  
Place your Refrigerator-Freezer where it is easy to use.
2. Avoid placing the unit near heat sources, direct sunlight or moisture.
3. To avoid vibration, the unit must be leveled.  
If required, adjust the leveling screws to compensate for the uneven floor.  
The front should be slightly higher than the rear to aid in door closing.  
Leveling screws can be turned easily by tipping the cabinet slightly.  
Turn the leveling screws counterclockwise( ↺ ) to raise the unit, clockwise( ↻ ) to lower it.
4. Clean your Refrigerator-Freezer thoroughly and wipe off all dust accumulated during shipping.
5. Install accessories such as ice cube box, etc., in their proper places.They are packed together to prevent possible damage during shipment.
6. Connect the power supply cord (or plug) to the outlet.  
Don't double up with other appliances on the same outlet.

### Starting

When your Refrigerator-Freezer is installed, allow it 2-3 hours to stabilize at normal operating temperature prior to filling it with fresh or frozen foods.  
If power plug is disconnected, allow 5 minutes delay before restarting.  
Your Refrigerator-Freezer is now ready for use.

 
## Operation

### Temperature Control

Your Refrigerator-Freezer has two controls that let you regulate the temperature in the refrigerator and freezer compartments.

#### Refrigerator


- Initially set the Temp. Control at 4. Then adjust the compartment temperature according to your desire.
- If you want an inside temperature slightly less cold or colder, turn the knob towards Min or Max, respectively.

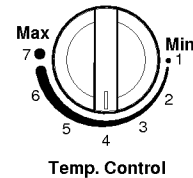

When the surrounding temperature is low, adjust the Temp. Control Min.


#### Freezer

 - Freezer temperature control is on the top of the Refrigerator-Freezer. Initially set the Freezer Temp at mid-point. By pressing the Freezer Temp button, you can adjust the temperature of the Freezer as indicated by the numbers of lamps lit. (The setting is composed of five steps; 5 lamps lit indicates coldest.)
- When you starting the Refrigerator-Freezer or connecting the power plug to the outlet, temperature setting is automatically set to the mid-point.

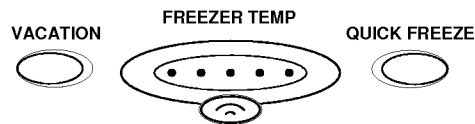

#### Quick Freeze

 - When the button is pushed, the buzzer sounds.
- This function is used when you want to freeze the foods quickly. Press the QUICK FREEZE button once, and then the quick freeze operation starts with the lamp lit.

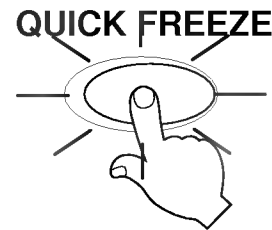

The quick freeze operation takes about 3 hours.

When its operation ends, it automatically returns to the normal state.

If you want to stop the quick freeze operation, press the QUICK FREEZE button once more, the lamp goes out, and the quick freeze operation stops and the refrigerator returns to the normal state.

**Vacation**

This function makes the Refrigerator-Freezer work in a power saving mode which is useful for when you are away on holiday, by reducing energy consumption as much as possible. Pressing VACATION starts operation with lamp ON and pressing it again stops the operation. For better functioning, you should set the Temp. Control to Min.

**Self Test**

This function allows you to check for operational problems. If you think you have a problem with your Refrigerator-Freezer, then press the temperature control button:

 
- Indicator lights move up or down, then there is no problem with your Refrigerator-Freezer.
- Indicator lights do not move up or down, then please leave the power connected and call your nearest service agent.

**Door Alarm**

When the door of the Refrigerator is left opened for a while, the alarm sounds.

**Ice Making**

- To make ice cubes, fill the ice tray to the water level and place it in the freezer.
- If ice cubes are required quickly, press the QUICK FREEZE button.
- To remove ice cubes, hold the tray at its ends and twist gently.

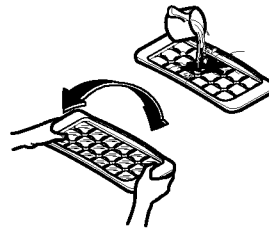


To remove ice cubes easily, run water on the tray before twisting.

**Defrosting**

 Defrosting takes place automatically. The defrosting water flows down to the evaporating tray and is evaporated automatically.






## Storing Food

- Do not store food which goes bad easily at low temperature, such as bananas, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the Refrigerator-Freezer could spoil other food and lead to higher electric bills.
- When storing the food, use a container with a lid. This prevents moisture from evaporating, and helps food to keep its taste and nutrients.

 - It is desirable to store moist food (especially vegetable and fruit) in the vegetable compartment.

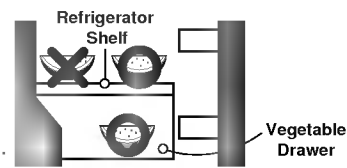

If it is necessary to

store on a shelf of the refrigerator, put it close to the door away from the back wall of the refrigerator to avoid being frozen by the cool circulating in the refrigerator.

- Do not block air vents with food. Smooth circulation of cold air keeps the Refrigerator-Freezer temperature even.
- Do not open the door frequently. Opening the door lets warm air enter the Refrigerator-Freezer, and cause temperature to rise.
- To adjust the temperature control easily, do not store food near the temperature control dial.
- Never keep too many foods in door rack, as this may stop the door from closing fully.
- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This causes loss of taste and nutrition.

If you keep the Refrigerator-Freezer in a hot and humid place, frequently open its door or put a lot of vegetables in it, dew may form in it, which has no effect on its performance. Remove the dew with dust cloth free from care.

## Care and Maintenance

### General Information

#### Power Failure

- A brief power failure does no harm to the foods stores. Try to avoid opening and closing the door too frequently.

 
#### If You Move

- Take out foods from the Refrigerator-Freezer and firmly fix the loose items with tape.
- Turn the leveling screws until they stop before moving the Refrigerator-Freezer. Otherwise the screw may scratch the floor or the Refrigerator-Freezer cannot move.

#### Anti Condensation Pipe

- The Anti-Condensation pipe is installed around the front side of Refrigerator-Freezer as well as on the partition between refrigerator compartment and freezer compartment to prevent dewing.


#### Anti-Condensation Pipe

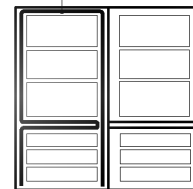

- Especially after installation or when ambient temperature is high, the Refrigerator-Freezer may feel hot, which is quite normal.

### Lamp Replacement

 1. Unplug the power cord from the outlet.
2. Remove refrigerator shelves.
3. To remove the lamp cover, insert ⊖ type driver in the underside of the lamp cover and pull it out forwards.
4. Turn the lamp counterclockwise.
5. Assemble in reverse order of disassembly.  
Replacement lamp must be the same specification as original.

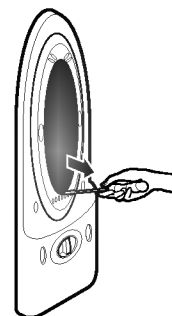



## Cleaning

### Before Cleaning

Be sure to unplug the power.

### Exterior

Clean the outside of the Refrigerator-Freezer with a soft cloth soaked with hot water or liquid detergent. If you use a detergent, be sure to wipe it with a clean wet cloth.

### Interior

As above.

 
 
 
### After Cleaning

Check that the power cord is not damaged, the power plug has not overheated, and that the power plug is tightly inserted into the outlet.

### Warning

Be sure to dry the appliance with a cloth after washing it with water.

Do not use abrasive, petroleum, benzene, thinner, hydrochloride acid, boiling water, rough brush, etc, as they may damage parts of the Refrigerator-Freezer.



## Troubleshooting

**Before calling for service, check this list.  
It may save you both time and expense.  
This list includes common occurrences that are not  
the result of defective workmanship or materials in  
this appliance.**

Problem	Possible Causes
<b>Refrigerator- Freezer Does Not Operate</b>	<ul style="list-style-type: none"> <li>• Power plug may be unplugged from the electric outlet. Plug it in securely.</li> <li>• House fuse has blown or circuit breaker has tripped. Check and/or replace fuse and reset circuit breaker.</li> <li>• Power cut. Check house lights.</li> </ul>
<b>Refrigerator or Freezer Compartment Temperature Too Warm</b>	<ul style="list-style-type: none"> <li>• Temperature control not set on proper position. Refer to Temperature Control section.</li> <li>• Appliance is placed close to heat source.</li> <li>• Warm weather-frequent door openings.</li> <li>• Door left open for a long time.</li> <li>• Package holding door open or blocking air duct in freezer compartment.</li> </ul>
<b>Vibration or Rattling or Abnormal Noise</b>	<ul style="list-style-type: none"> <li>• The floor on which the Refrigerator-Freezer is installed may be uneven or the Refrigerator-Freezer may be unstable. Make it even by rotating the leveling screw.</li> <li>• Unnecessary objects placed in the back side of the Refrigerator-Freezer.</li> </ul>
<b>Frost or Ice Crystals on Frozen Food</b>	<ul style="list-style-type: none"> <li>• Door may have been left ajar or package holding door open.</li> <li>• Too frequent or too long door openings.</li> <li>• Frost within package is normal.</li> </ul>
<b>Moisture Forms on Cabinet Surface</b>	<ul style="list-style-type: none"> <li>• This phenomenon is likely to occur in a wet space. Wipe it with a dry towel.</li> </ul>

## Troubleshooting

Problem	Possible Causes
<b>Moisture collects inside</b>	<ul style="list-style-type: none"><li>• Too frequent or too long door openings.</li><li>• In humid weather, air carries moisture into refrigerator when doors are opened.</li></ul>
<b>Refrigerator has odor</b>	<ul style="list-style-type: none"><li>• Foods with strong odors should be tightly covered or wrapped.</li><li>• Check for spoiled food.</li><li>• Interior needs cleaning. Refer to CLEANING section</li></ul>
<b>Door not closing properly</b>	<ul style="list-style-type: none"><li>• Food package is keeping door open. Move packages that keep door from closing.</li><li>• Refrigerator-Freezer is not level. Adjust the leveling screws.</li><li>• The floor on which the Refrigerator-Freezer is installed may be uneven or the Refrigerator-Freezer may be unstable. Slightly raise the front side with the leveling screw.</li></ul>
<b>Interior light does not work</b>	<ul style="list-style-type: none"><li>• No power at outlet.</li><li>• Light lamp needs replacing. Refer to the Lamp Replacement section</li></ul>

## To Reverse the Doors

 
Your Refrigerator-Freezer is designed with reversible doors, so that they may open from either the left or right hand side to suit your kitchen design.

### Precaution

1. Before reversing the door, you should remove food and accessories like shelves or trays which are not fixed in the Refrigerator-Freezer.
2. Use Torque Wrench or Spanner to fix or remove the bolt.
3. Do not lay the Refrigerator-Freezer down. This will cause problems.
4. Be careful not to drop the doors in disassembling or assembling.

### How to Reverse the Doors

1. Remove screw ② and cover ①.  
Remove cap cover ③, hinge-L ⑤, and pin ⑥.  
Remove the freezer door.  
Move cap ⑦ to the side not used.  
Move hinge ⑧ and screw ⑨ to the side you wish and reinstall.
2. Remove bolt ● and hinge-C ● and take off refrigerator door ●.  
Move cap ● to the side not used.  
Move door bracket ● and screw ● to the side you wish and reinstall.
3. Move hinge-U pin ● and top cover cap ●.  
Assemble the refrigerator door ●.  
Assemble hinge-C ● and bolt ●.  
Assemble freezer door ●.  
Assemble the hinge-L ⑤ and bolt ④.  
Assemble base cover ① and screw ②.


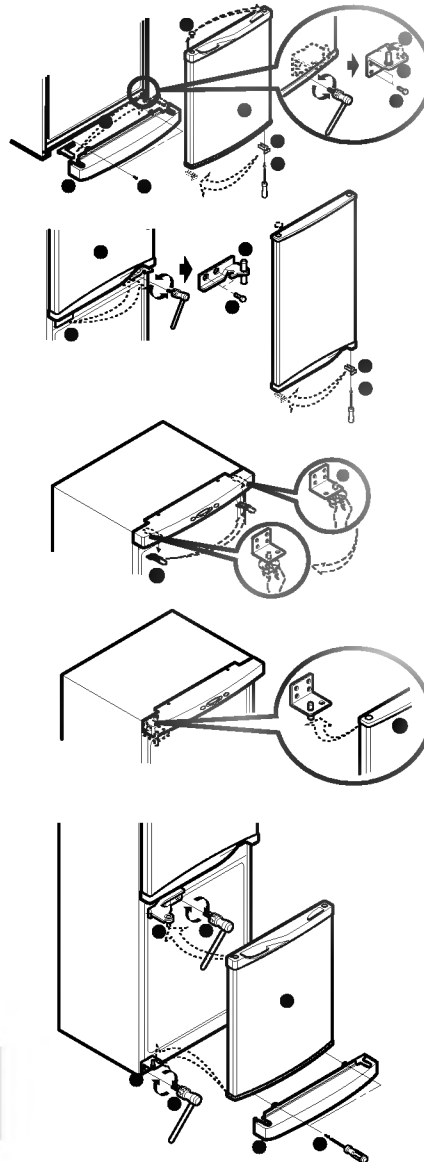



Reversing the doors is not covered by the warranty.





**CUSTOMER ASSISTANCE NUMBERS:**

   - To Prove Warranty Coverage  
Retain your Sales Receipt to prove date of purchase.  
A copy of your Sales Receipt must be submitted at the time warranty service is provided.
- To Obtain Product, Customer or Service Assistance  
Call Toll-free for Customer Service  
Tel : 1-800-243-0000
- To Obtain Nearest Authorized Service Center  
Call 1-800-243-0000, push option #1, 24 hours a day, 7days per week.  
Please have your product type (Monitor, TV, VCR, MWO, Refrigerator)  
and ZIP code ready.



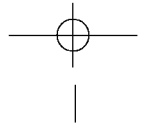

**LG Electronics Inc.**

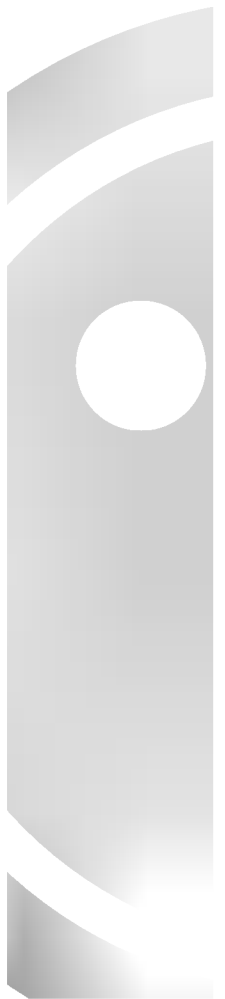  

P/No. 3828JD8267R

Printed in Korea

