

premium ezDIGITAL



LG internet
DIGITAL



 
Cautions Before Using Touch-Screen

When Using the Touch-Screen...

- Don't scratch the screen with a knife, or any sort of sharp tool. It can cause serious damage to the screen.



- When writing, use the stylus. The text will appear more clearly.

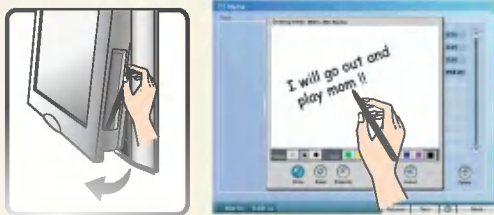


Power Saving Function

- You can set the time to activate the power saving mode.
- Touch the screen to reactivate it.



Screen Program Reboot Function.

 - If screen program doesn't operate properly, open the refrigerator door and touch the **Reset** button on the top.
- Contents saved (e.g. Schedule) will not be lost when re-starting the screen program.

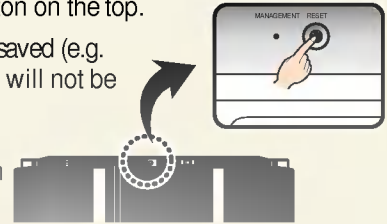


When Closing the Screen

- Push the lower screen in to close the screen.



Screen Protection Function

 - The screen turns off after a preset time in the main screen mode.
- If you select pictures as a screen saver, the pictures appear consecutively on the screen.
- Screen will return to Main Display when it is touched.

You can see Help for all screen functions by touching the  button which is provided on the menu bar.



Power On/Off Function of Screen



- To achieve greater power saving, open the refrigerator door and switch off the power button when you leave home or in case you do not use the screen for a long time.
- This power On/Off switch is for the screen, not for the refrigerator. Even if you turn off this switch, the refrigerator does not turn off.

What is  DreamLG.com ?
<http://www.dreamlg.com>

Dream LG is a portal service centered on home service that LG has created for your convenience. You can easily check memos, schedules, and food storage information from a remote location via internet.

Monitor various kind of information and download programs related to other LG internet products, such as the Internet air conditioner, Internet washing machine, Internet microwave oven, et al.



Internet

12~21



Cook

38~41

Stored Food

42~44

Management

45~55

 
Appendix
 Method of
 Write Character

56~59

✓ The software supplied with the product may be upgraded without notice in order to improve the quality of the product.



Main Screen

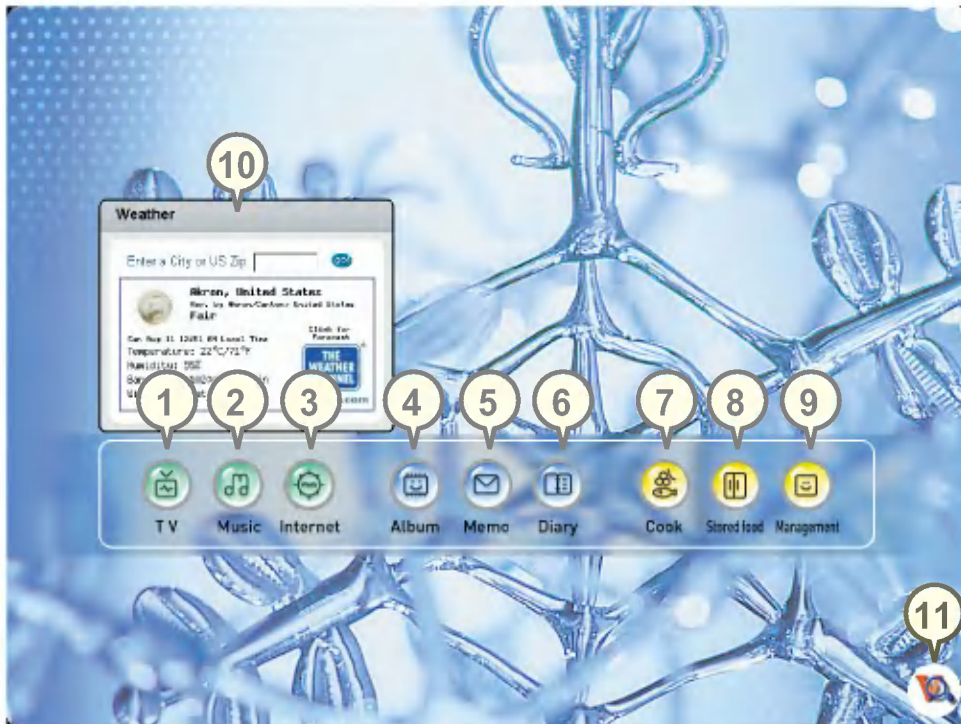

TV

You can watch television via cable, antenna, VCR, etc.

Music

You can listen to the music saved in the music box.

Internet

You can easily be connected to the Internet at home.

Album

You can take a picture and use it as a screen saver when not using the screen.

Memo

You can leave a text, drawing, or even a video memo for your family.

Digital Diary

You can record anniversaries and other events.

Diary

There are all types of cooking information searchable by course, ingredient, nutritional and caloric information is also available.

Stored Food

You can record the food stored in the refrigerator.

Management

You can use various management programs like the Self-Diagnosis and Preference settings.

Weather Information

You can get weather information of your area.

Virus Vaccine

This icon means virus vaccine is working.



TV – Watching TV

Channel number is displayed for about 5 seconds.



1

Main

Touch this button and the screen changes to the Main Menu.

- You may touch the MAIN button of the remote control.



Watch Television

First, touch the TV button on the touch screen.

- To watch TV, first record/set the broadcasting channels in your area through auto searching function describer below.

Select a channel by touching the channel ▲▼ button or the number buttons(0~9).

1 When TV screen appears, touch the Ch. Control button from the menu bar.

- The menu bar disappears after every 10 seconds if there is no response from the user. You can see the menu bar again by touching any where on the screen.

2 Set channels by touching Auto. Ch. from Ch. Control window.

- To setup automatic channels, run auto searching function by touching Auto ch. button.

Check the cable and antenna connections before auto searching

- The method to connect TV antenna and video cables, is given in the owner's manual.

! Caution

Wait for auto program to complete the channel search cycle before choosing a channel. If you touch the Cancel button during auto programming, the function will stop and only channels found up to that time will be stored.

! Note

- If automatic channel setting is complete, check the saved channels by touching the channel ▲▼ button.
In automatic channel setting, only current channels on air with appropriate signal present are memorized. Blank channels are omitted.



TV - Watching TV



4



 
Memorize or Delete Specific Channel...

- 1 Select the desired channel by touching the Channel number button from Ch. Control window.
- 2 To memorize the selected channel, Touch the Add button.
- 3 To delete the selected channel, touch the Delete button.

Adjust Volume

- 4 Touch the Volume button on the menu bar. Then adjust volume with ◀▶.
 - ▣ It will be convenient to use the Volume + , - on the remote control.



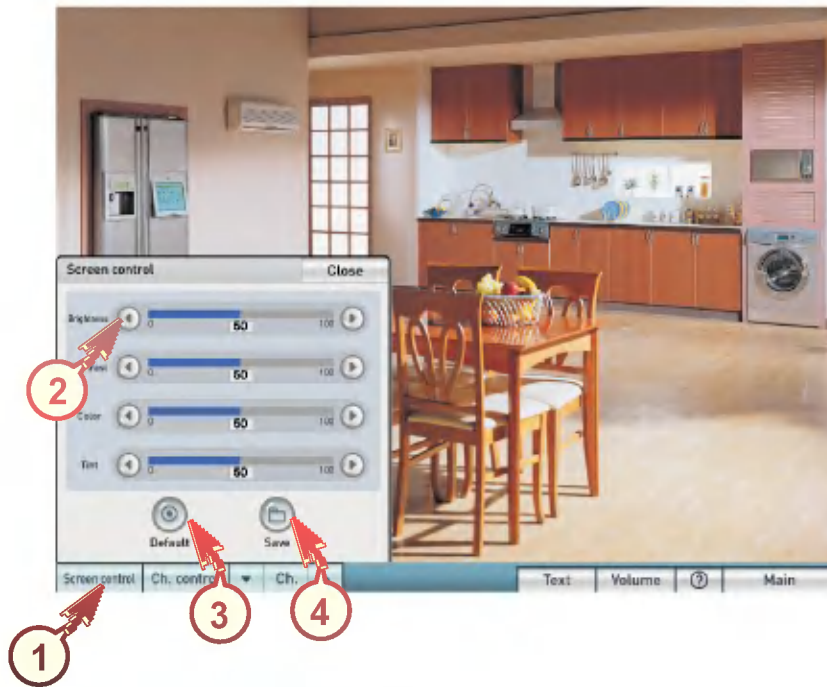

Control the Screen...

- 1** Touch the Screen Control button on the menu bar of the TV screen.
- 2** Use the ◀▶ buttons to adjust the screen status according to your desire.
 - You can control brightness, contrast, color, and tint.
- 4** Touch the Save button to obtain your desired screen settings

 
Reset the Screen to Default Setting

- 3** Touch the Default button.
- 4** Touch the Save button.

! Note

Following points does not indicate product failure.

- An afterimage may occur if the screen image changes too quickly.
- Color picture on the screen may occur instantly in between changing channels.
- Gray color screen may appear for weak channels when setting up through automatic channels.

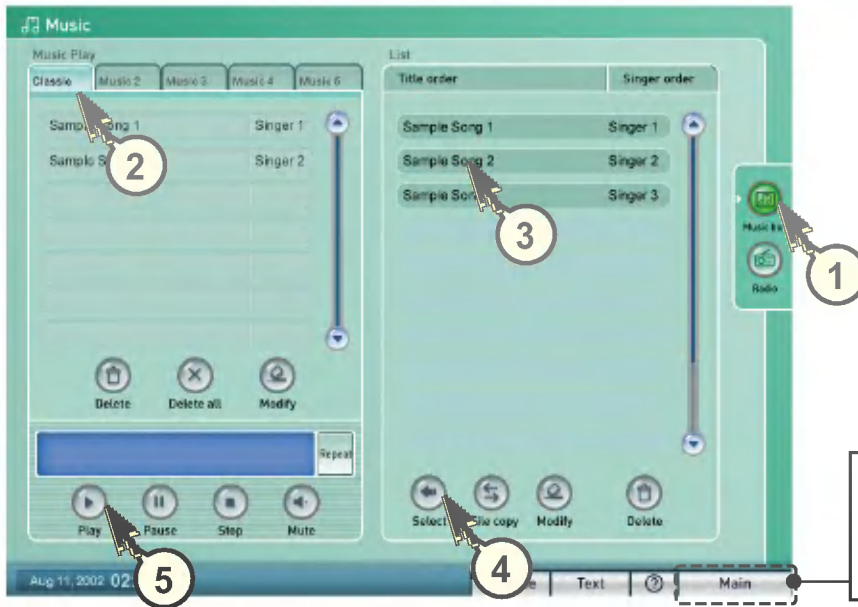

Caution

Copyright and additional rights according to the law of digital sound source are held by the manufacturer.

Duplicating and distributing digital music could leave the user open to prosecution.

Main

Touch the button to return to the Main screen.

Listen to the Music...

- 1** Touch the Music box.
- 2** Select one of the music list.
- 3** Select the song you wish to hear from the list.
- 4** Touch the Select button.
- 5** Touch the Play button.
 - If you touch the Play button, the list will play in a continuous order.
 - To adjust the volume, Touch the Volume button and then operate it appropriately.

Music 1~5

Songs selected from the song list will appear in sequence.

Delete Button (Selection List)

Touch to delete songs selected from the song list.



Delete All Button

Touch to delete all songs in the song list.



Repeat Play On/ Off Button

Touch to listen to a song more than once.



Play Button

Touch to listen to the currently selected song.



Pause Button

Touch to stop the current song.



Mute Button

Touch to select mute function.



 
Select Button

Touch to select a song.




Note


1. You can select Music 1 ~ Music 5 from the song list.
2. If you want to listen to a particular song on the song list, select the song and touch Play.
3. You can easily search for a desired song as songs can be listed in ascending order by title or artist name.
4. Any song in the song list will not be deleted while music is playing.

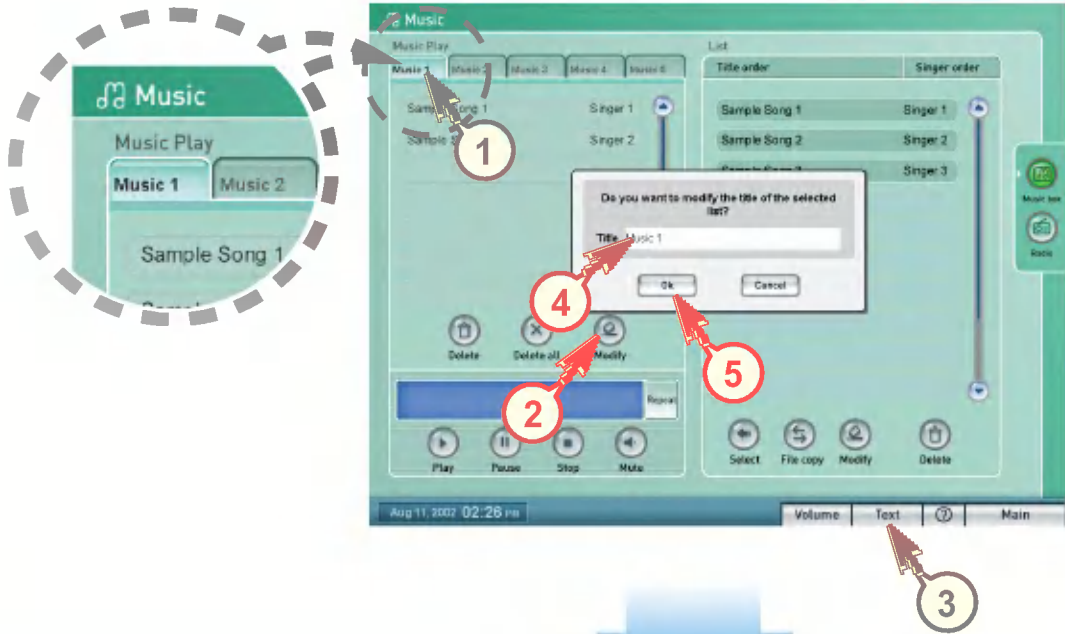

Modify the Title of Music List

  - 1** Select one form the music lists
- 2** Touch the Modify button.
- 3** Touch the Text button.
- For method to use the keyboard, see page 17.
- 4** Modify the title.
- 5** Touch the OK button.

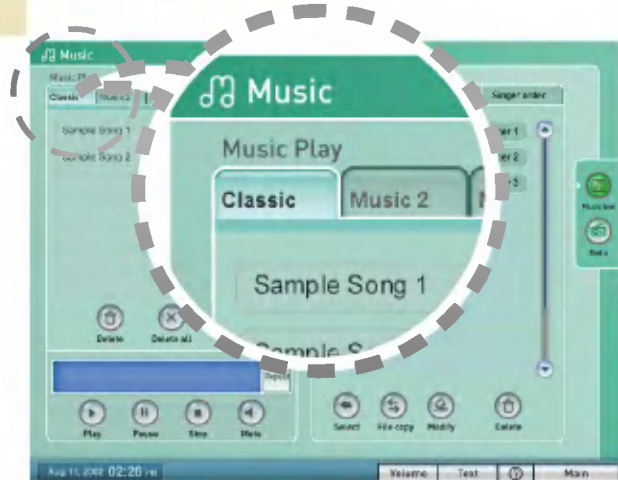

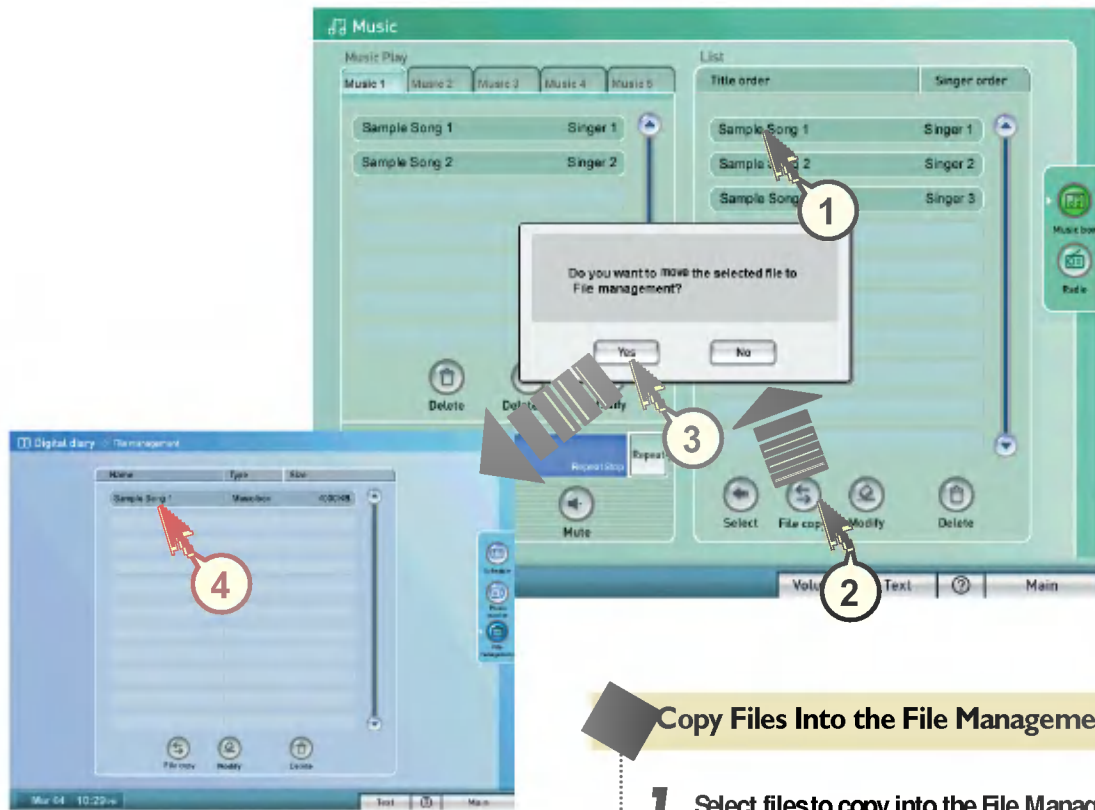

Copy Files Into the File Management...

- 1 Select files to copy into the File Management.
- 2 Touch the File Copy button.
- 3 Select Yes to copy the selected file into the File Management.
- 4 Check copied data from the File Management of the Digital Diary.

Note

- Copy important files into File Management which could then be sent as attachments via e-mail.
- Sample songs supplied with the product may be changed.

File Copy Button

Touch to save desired songs.



Delete Button

Touch to delete songs from the entire song list.



 
Modify Button

Touch to edit song title and artist's name.



Touch the Text button on the menu bar.

- You cannot listen to songs if you delete them from the song list.

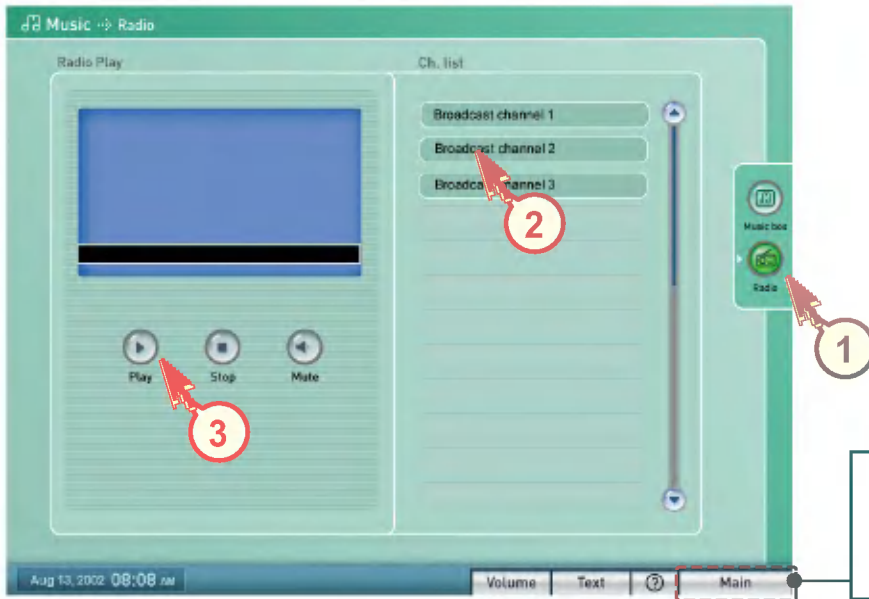


Main
Touch this button to return to the Main screen.

Listen to Radio...

- 1** Touch the Radio button.
- 2** Select a radio channel to listen.
- 3** Touch the Play button.

! Caution

 - Radio uses streaming service of each broadcasting company. To listen to radio, Internet connection must be live.
- The streaming speed depends on the broadcasting service provided by the internet radio company.

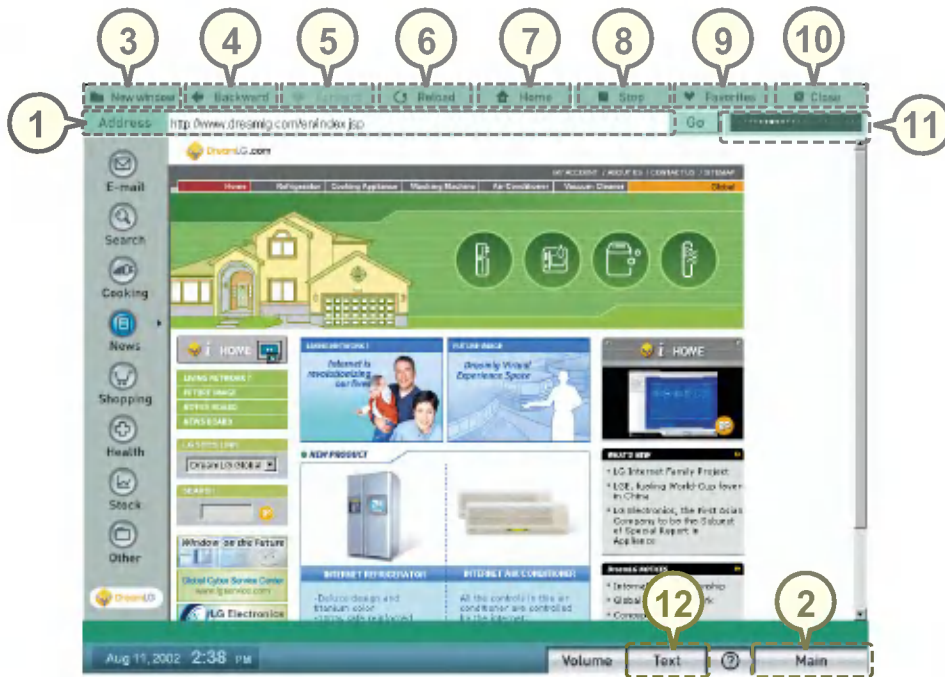

Internet Address Input Window

Input the Internet address with the keyboard.

Main Button

Touch to return to the Main screen.

New Window Button

Touch to open a new Internet window.

Back Button

Touch to return to the previous link.

Forward Button

Touch to move to the next link.

Reload Button

Touch to refresh the current page.

Home Button

Touch to return to the home page.
<http://www.dreamlg.com>

Stop Button

Touch to stop the browsing of the current page.

Favorites Button

Touch to visit bookmarked URLs.

Close Button

Touch to close the current Internet window.

Connection Confirm Window

 
 
 
Shows the status of the Internet connection.

Text Button

Touch to input an Internet address.



Note You cannot use Real Player, Dial pad, et al. with LG Internet refrigerator.

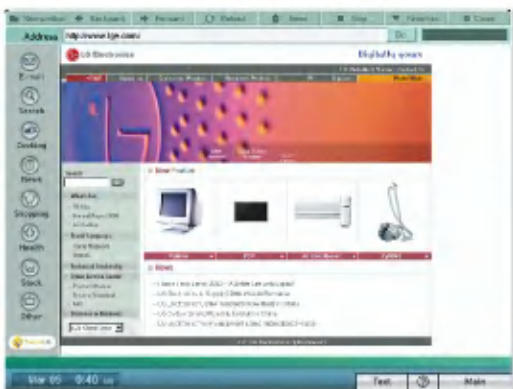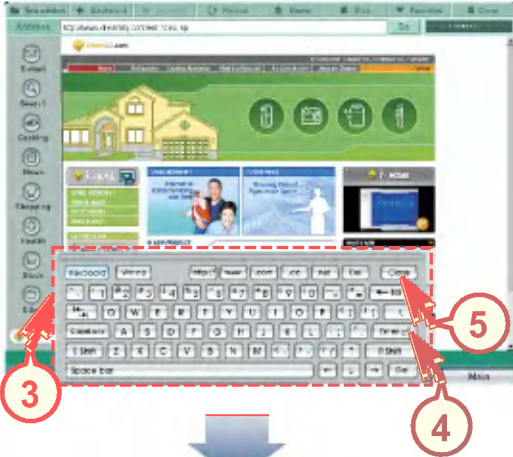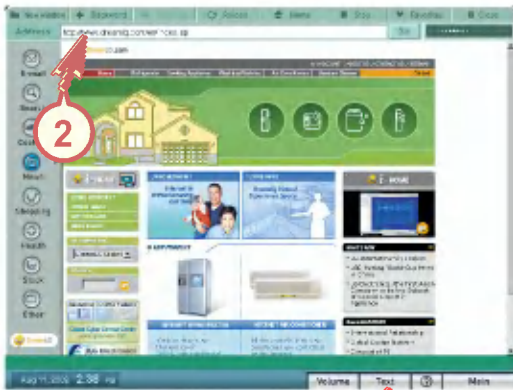

Entering By Directly Inputting an Internet address

 
- 1** Touch the Text button.
The keyboard is activated.
- 2** Touch the Address Input window.
- 3** Enter the desired Internet address either by using keyboard or writing character recognition function using stylus
Ex) <http://www.lge.com>
 Make sure the cursor blinks in the Address Input window.
- For keyboard operations, see page 17.
- 4** Touch the Enter button to connect to the desired site.
- 5** Touch the Close button on the keyboard to make it disappear.

Note

1. The opening screen is the Dream LG portal site. This homepage may be changed in the Internet section of the Management area.
2. Press **New window** button to open a new window.
3. Press **Close** to close the current window.
4. At a given time up to 3 browser windows may be opened.



Internet - Bookmark

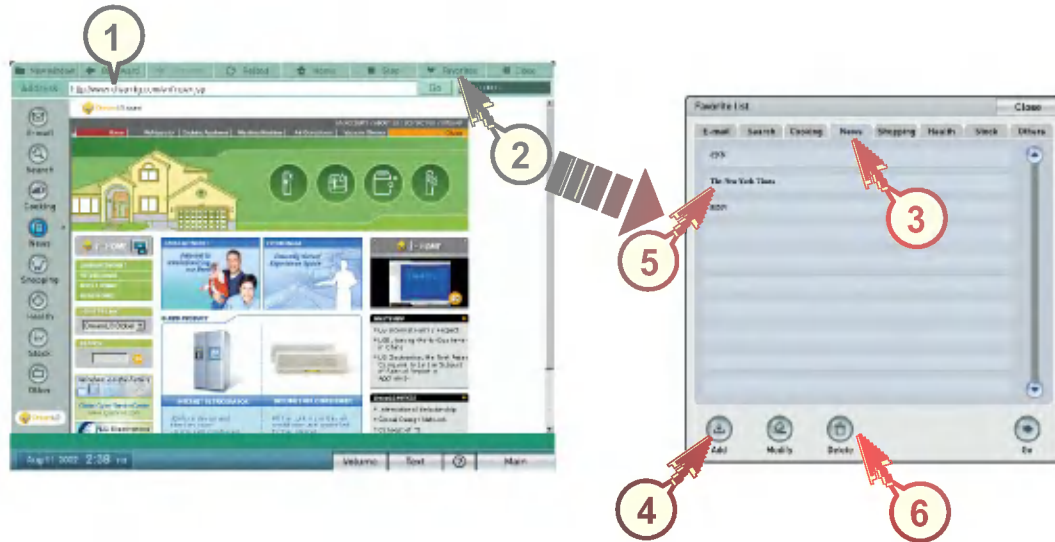

How to Add in Bookmark

 
- 1** Connect to the page you want to save as your favorite.
- 2** Touch the Favorites button.
- 3** Select one of the groups
 - ▣ You can easily manage the Bookmark list by using these Groups.
- 4** Touch the Add button.
Check the name of the connected site.

How to Delete Address in Bookmark

- 5** Select an Internet site from the Bookmarks
- 6** Touch the Delete button

Close Button

Touch to close Internet window



Go Button

Touch to connect to the site you chose



Modify Button

Touch to modify information of the chosen group name.



Delete Button

 
 
Touch to delete the address in the Bookmark.



Add Button

Touch to add the site to your Bookmark.



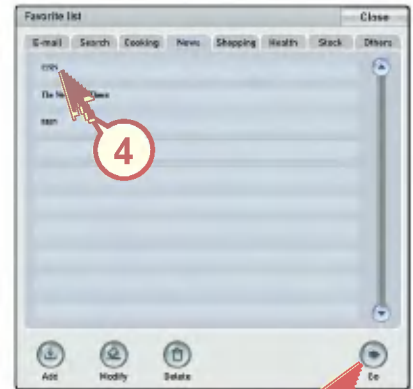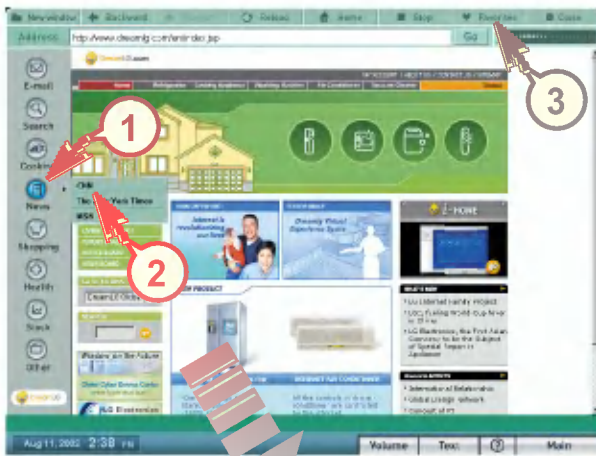

Connecting By Using a Bookmark Icon

- 1** Select an Icon.
- 2** Select the site which you want to view.

Connecting By Using a Bookmark

- 3** Touch the Favorites button.
- 4** Select the site which you want to view.
- 5** Touch the Go button to connect to the site you selected.

 
 


Internet – Downloading Method




Caution

You cannot save or open every file type downloaded.
We suggest downloading only files usable by the system such as jpg, mp3, et al.

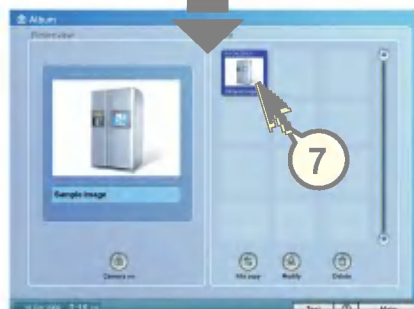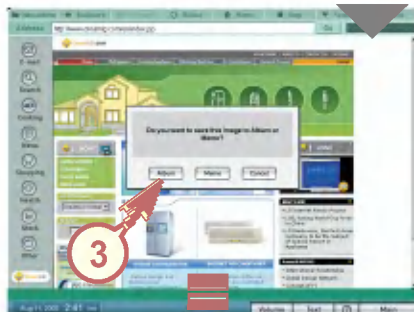

Download Files...

- 1** Touch the file you wish to download.
- 2** Select  button.
 - The button may not appear in some cases such as downloading mp3 files.
- 3** Select the location.
- 4** Touch the Text button.
 - For keyboard operations, see page 17.
- 5** Input the title.
- 6** Touch the Ok button.
- 7** You can check files by using the appropriate menu.





 
Method to Enter Letters Using Keyboard

※ Keyboard can be changed according to the country.



✓ Keyboard appears if you press the Text button on any menu.

English Keyboard

To input capitals, touch the  key and then touch desired letter.

! Caution

Make sure the cursor blinks by touching each input window when inputting the text.

Text cannot be entered when the cursor does not blink in the input window.



Method to Enter Letters Using Keyboard

※ Keyboard can be changed according to the country.



Use of Keyboard

1. Keyboard

Touch to use keyboard.

2. Writing

Touch to use the writing recognition function.

3. Tab

Touch to move the cursor to next window.

4. CapsLock

Touch to type in all capital letters.

5. Shift

Touch to input the uppercase characters on the keyboard.
Touch again to return to the lowercase characters on the keyboard.

6. Space Bar

Touch to insert a space between characters.

7. Enter

Touch to change the line or enter OK during entry of contents.

8. Back Space

Touch to move the cursor backward or delete characters.

9. Close

Touch to close the keyboard.

10. Del

Touch to delete a character.

11. Internet Address Entry Key

 
Touch to enter Internet addresses.



Method to Enter Writing Character

- ✓ Touch the Writing button to switch to the writing entry mode.

The Enter window consists of English Entry, Numeric Entry, and Special Character Entry boxes.

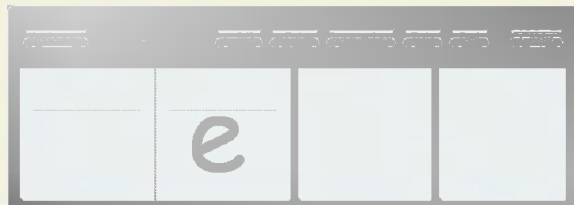

Method to Input English Characters.

 
You must write the characters in the English Writing Entry Box one by one. To input capital letters extend your drawing above the separation line else for lowercase draw below the line.

Note

You can input characters consecutively by using both Writing Input windows alternatively.



Method to Enter Writing Character

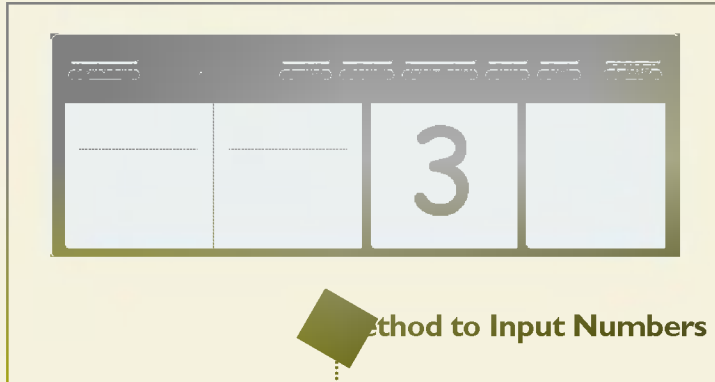

You must write characters one by one in the numeric input box.

Gesture Entry

Gestures are used to edit text already input. Use the gestures in Table 1 to edit text.

A black point is a starting point of the stroke in the writing table as described in Table 1.

Note

- The writing recognition function may not recognize every character. This is due to peculiarities in each person's penmanship and is not an indication of product failure.
- Appendix shows method to write characters. Recognition can be done even if the user doesn't follow the drawing procedure described in the table. But it is recommended to follow, as it makes entries more accurate and rapid.

Table 1. Gesture Writing Method

Function	Writing method	Function	Writing method
Space Bar		Back Space	
Enter		Tab	
Del		-	-

 


Method to Enter Writing Character



You must write characters one by one in the special character input box.

Description of Other Keys

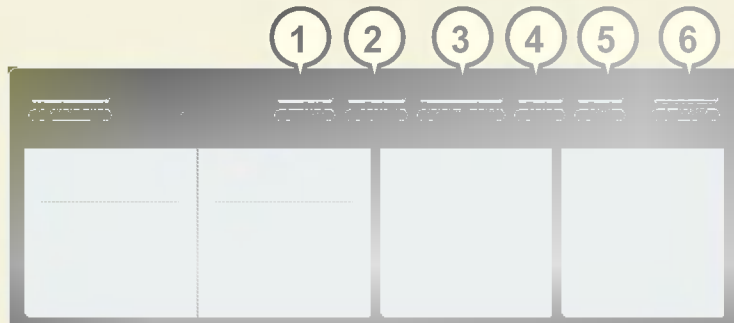

1. Back Space

Touch to move the cursor backward or delete a character.

2. Enter

Touch to change the line .
It can be used to enter OK during entry of contents.

3. Space Bar

Touch to insert a space between characters.

4. Tab

Touch to move the cursor to the next window.

5. Del

Touch to delete the previous character.

6. Close

Touch to close the keyboard.





Note

- You can set pictures taken in Album as screen saver in the Setting of the Management.
- Once you view yourself on the picture, the view would be a mirror one, but the photo you get would be that of a real image.

Main

  Touch this button to return to the Main screen.

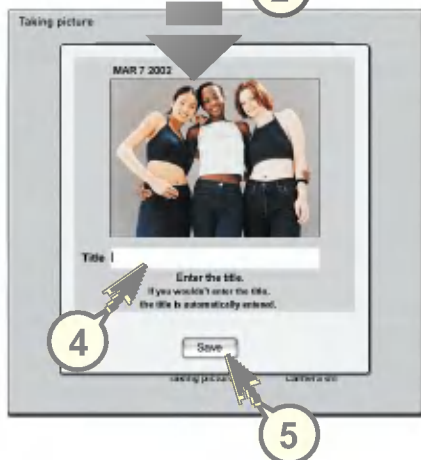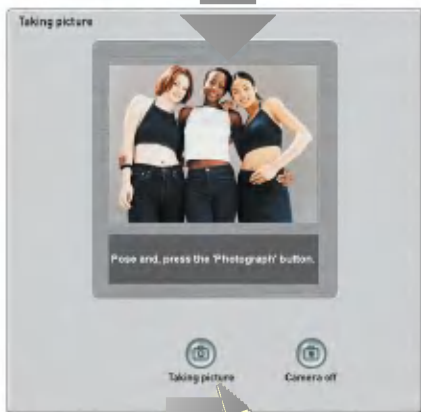

First, adjust the angle of the monitor so the image can be seen on the screen. Move the subject into the desired pose.



- 1 Press the Camera On button.
- 2 Touch the Taking Picture button and the photo will be taken after 3 seconds.
 - You can take a picture even from a remote distance by touching the PHOTO button of the remote control.

- 3 Touch the Text button after taking the picture.
 - For keyboard operations, see page 17.
- 4 Touch the blank title when the keyboard appears. The cursor will blink.
- 5 Touch the Save button after inputting title.



- 1** Select the picture that is to be deleted.
Touch the desired picture and its frame will turn blue.
- 2** Touch the Delete button.

Camera On Button

Touch to open the Taking Picture window.



Camera on

Camera Off Button

Touch to close the Taking Picture window.



Camera off

Taking Picture Button

Touch to take a picture.
After 3 seconds, the picture is taken.



Taking picture

Modify Button

Touch to modify the title of picture.



Modify

File Copy Button

Touch to save the desired picture.



File copy

Delete Button

Touch to delete picture from the list.

 


Delete




Note

Copy important files into File Management which could then be sent as attachments via e-mail.

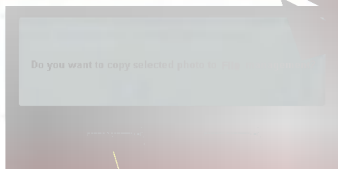


3

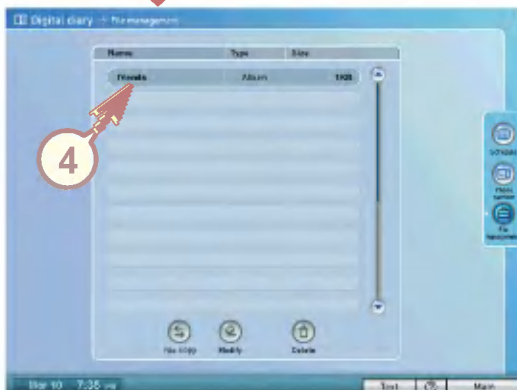 

Copy Picture File into File Management...

 - 1 Select files to copy into File Management.
- 2 Touch the File copy button.
- 3 Select Yes to copy selected files to File Management.
- 4 Check copied data from the File Management of the Digital Diary.

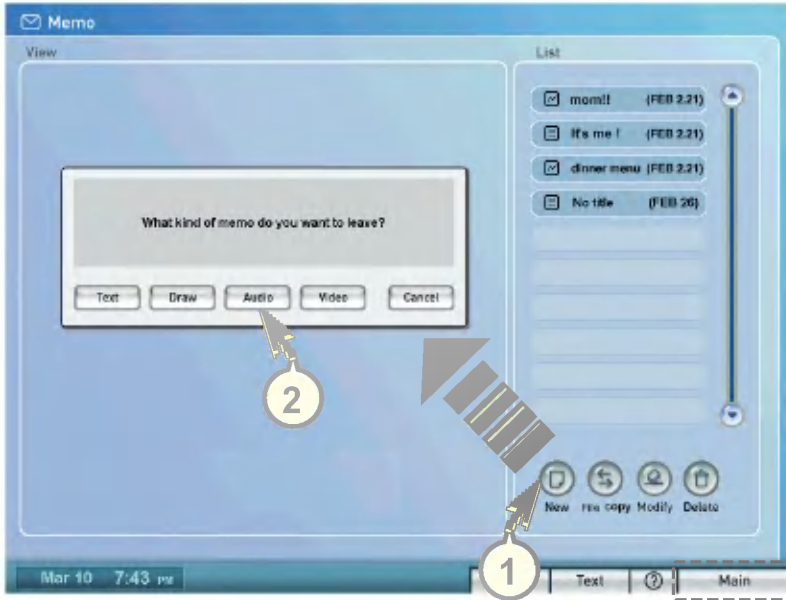

No List Status depending on color of button

<i>Gray</i>	Message checked
<i>Blue</i>	Message active
<i>Sky Blue</i>	Message not checked

Main
Touch this button to return to the Main screen.

 
- 1 Touch the New button.**
The Memo type selection window appears.
- 2 Select the type of memo desiring to leave.**
 - ▣ There are four types: Text, Draw, Audio, and Video.

Note

1. If a new memo is saved, a notice window appears on the main screen to show that there is a new memo.



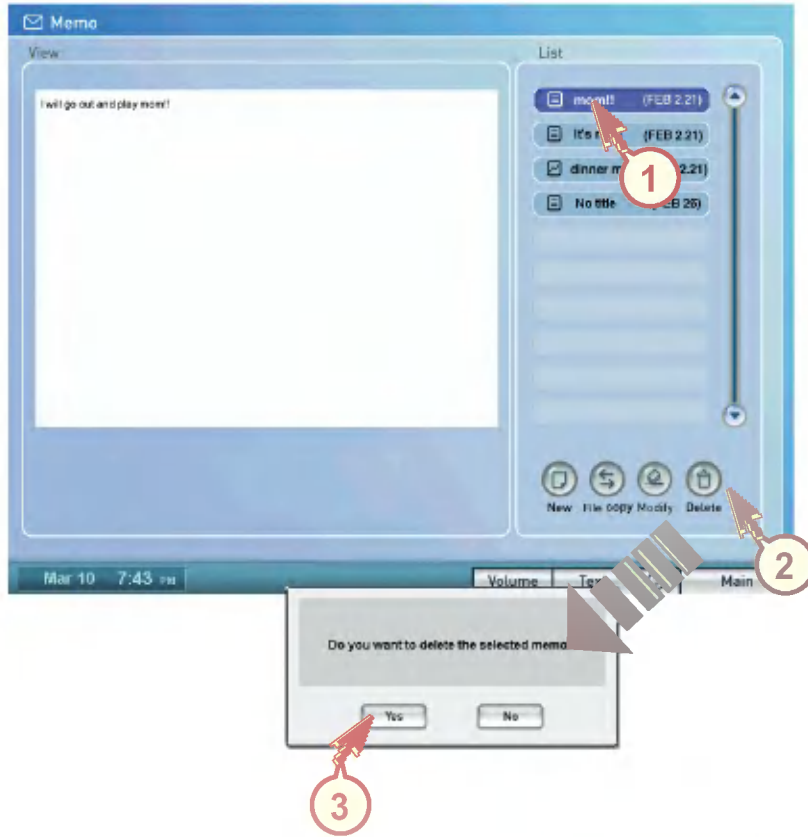

2. You can check the saved memo by touching the **New memo** button.


<p>New Button Touch to write a new memo.</p>	<p>Text Button Touch to write a text memo.</p>	<p>Video Button Touch to record a video memo.</p>	<p>Audio Button Touch to record an audio memo.</p>
<p>File Copy Button Touch to save a memo in the file management.</p>	<p>Draw Button Touch to draw a memo.</p>	<p>Cancel Button Touch to cancel an input memo.</p>	<p>Delete Button Touch to delete a memo.</p>



- 1** Select the memo to delete.
Contents of memo appear.
- 2** Touch the Delete button.
- 3** Touch Yes to delete the selected memo.

Icon Display Indicating Memo Type

 -  Text Memo
-  Drawing Memo
-  Audio Memo
-  Video Memo

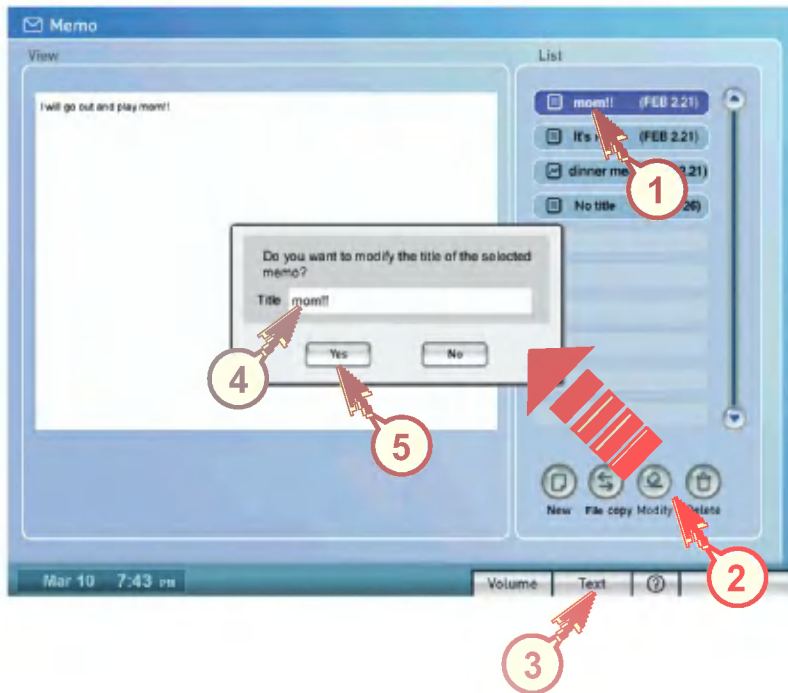


- 1** Select the memo to modify.
- 2** Touch the **Modify** button.
- 3** Touch the **Text** button.
- For keyboard operations, see page 17.
- 4** Modify the title.
- 5** Touch the **Yes** button.

Caution

You can input text only when the cursor blinks on the Title Enter window.

 Touch the Enter window if there is no blinking.

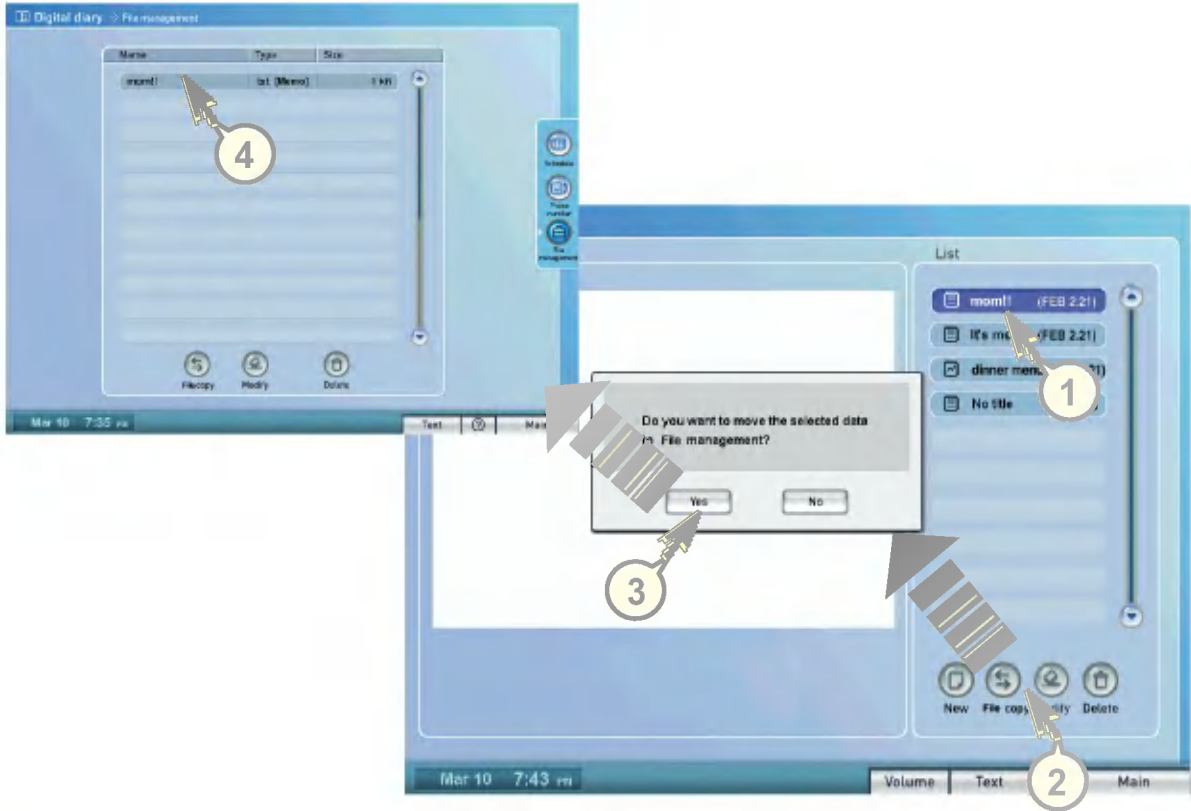

Copy Memo Files to the File Management...

- 1** Select the files to copy to the File Management.
- 2** Touch the File copy button.
- 3** Select Yes to copy selected files to the File Manage.
- 4** Check copied data from the File Management of the Digital Diary.

Note

 
Copy important files into File Management which could then be sent as attachments via e-mail.

Memo – Text memo

Caution

You can leave a memo only when the cursor blinks on the Text Memo window. Touch the Text Memo window if there is no blinking.


1 When touching the Text button

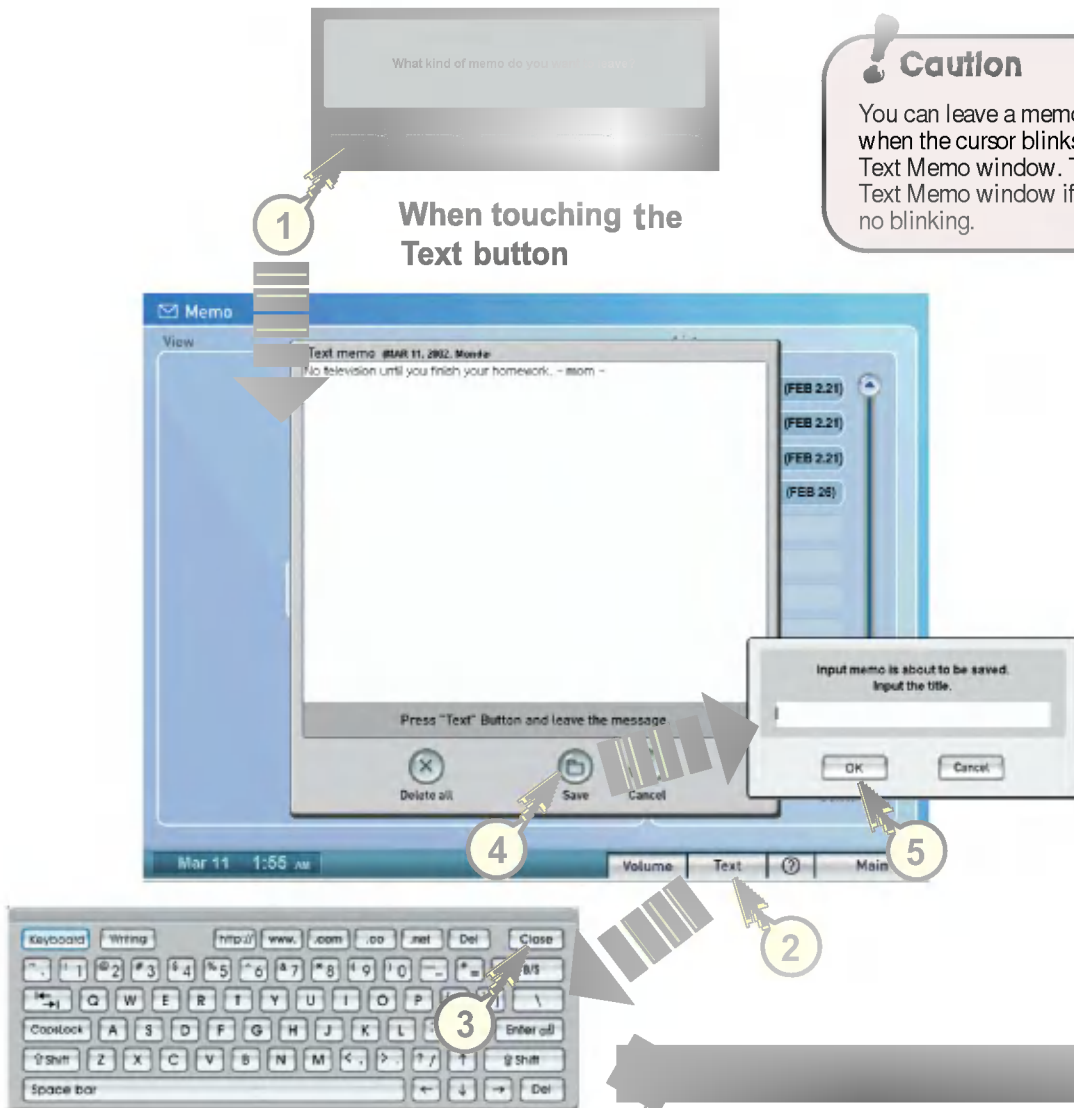

Note

1. If a memo is saved, a notice window appears on the main screen to show that there is a new memo.

 


2. You can check a saved memo by pressing the  New memo.

- 1 Touch the Text button on the Memo Type window.
- 2 You can write a memo with the keyboard or leave a memo using stylus and the handwriting recognition feature.
- 3 If input is complete, touch the Close button of the keyboard.
- 4 Touch the Save button.
- 5 Input the title by using the keyboard and then touch the OK button.

- For keyboard operations, see page 17.

Memo – Draw memo

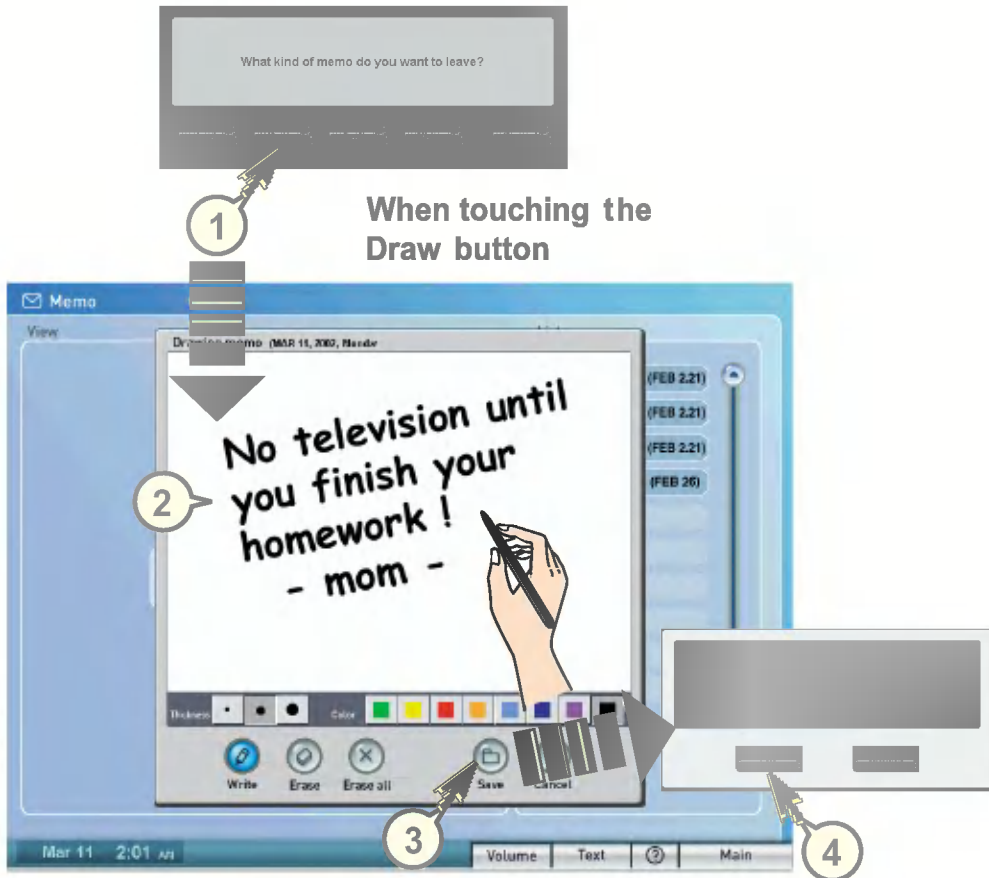

- 1** Touch the Draw button on the Memo Type window.
- 2** You can write a memo by hand or the stylus
 - Use the icons below on the memo area to adjust the color and line thickness.
- 3** Touch the Save button.
- 4** Input the title using the keyboard and then touch the OK button.
- For keyboard operations, see page 17.

Write Button

Touch to write Draw memo.



Save Button

Touch to save a memo.



Erase Button

Touch to erase the part you want to correct using hand or the stylus.



Cancel Button

Touch to cancel memo input.

 


Erase All Button

Touch to delete all input memo.



Memo – Audio memo

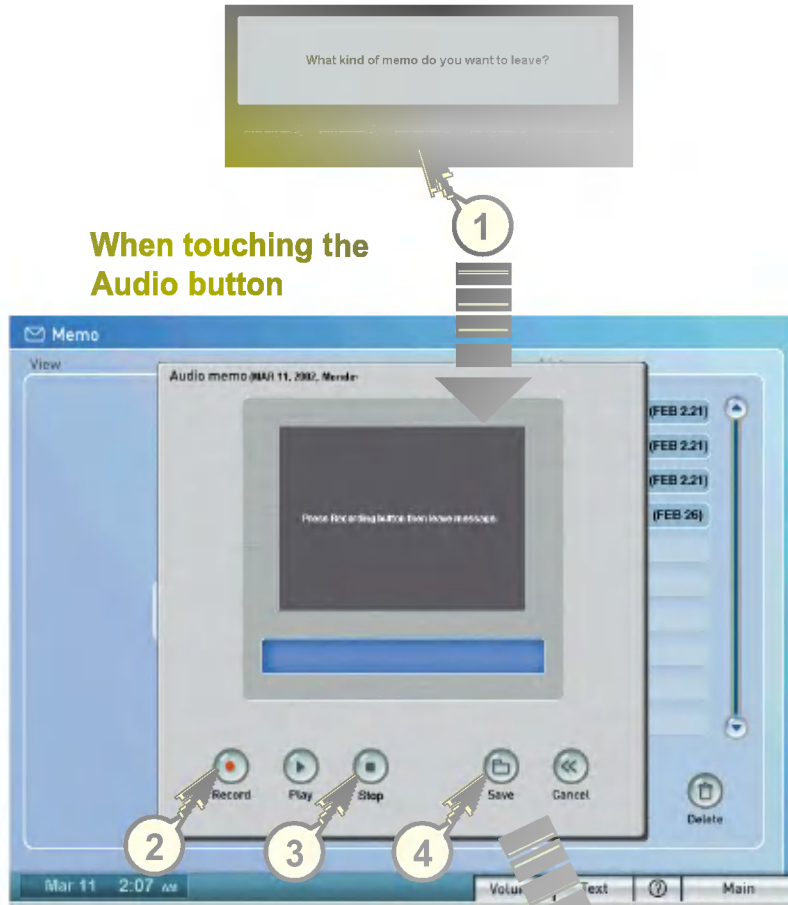


When touching the Audio button

- 1** Touch the Audio button on the Memo Type window.
- 2** Touch the Record button and record audio.
- 3** If recording is finished, touch the Stop button.
 - You can check recorded memo by pressing Play button.
 - Adjust volume by touching the Volume button on the menu bar.
- 4** Touch the Save button.
- 5** Write the title using the keyboard and then touch the OK button.

- For keyboard operations, see page 17.

 
Memo – Video memo

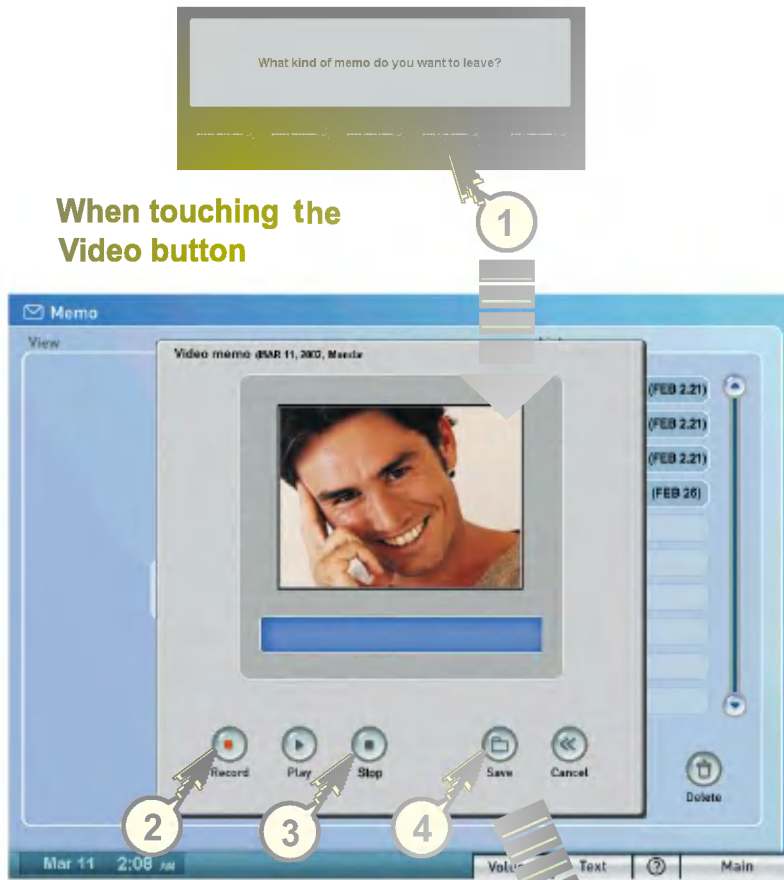



When touching the
Video button

- 1 Touch the Video button on the Memo Type window.
- 2 Take a pose and then touch the Record button.
- 3 Touch the Stop button when recording is finished.
 - ▣ You can check recorded memo by touching Play button.
 - ▣ Adjust volume by touching the Volume button on the menu bar.
- 4 Touch the Save button.
- 5 Write the title using the keyboard and then touch the OK button.

  
- For keyboard operations, see page 17.

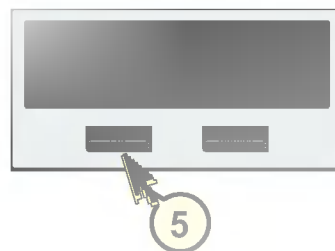

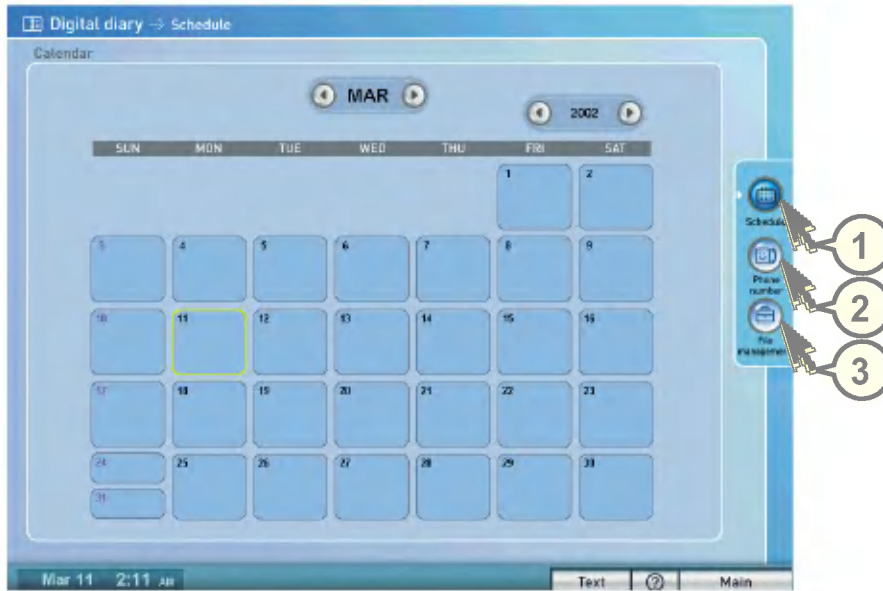

- 1**  **Schedule**
 You can manage all types of appointments, anniversaries, birthdays, etc.
- 2**  **Phone Number**
 You can input phone numbers for easy retrieval.
- 3**  **File Management**
 You can easily manage important memos, pictures, or music files which can be downloaded via Internet.

Note

- First set time when installing the refrigerator.
 You can set the time in the Setting area of the Management menu from the main menu.
- Current date is displayed in a yellow memo box. 

Digital Diary – Schedule



- 1 Select the year and the month which you want to register.
- 2 Select the date.
- 3 Input schedule information using the keyboard or the stylus
- 4 Select an Icon.
- 7 Touch the Save button.

- 1 Select the year and the month for which you want to check your schedule.
- 2 Select the date. Icon displayed on that date corresponds to its schedule.



Digital Diary – Schedule



Anniversary Selection.
Touch the anniversary icon.

- 5** Touch the Erase button. Erase the part you want to correct using hand or the stylus
- 6** Touch the Write button. Write new contents using hand or the stylus
- 7** Touch the Save button.

- 8** Touch the Erase all button and all the letters will be erased.

Notify Schedule

 
Notice window will prompt on the main screen notifying an event scheduled for the current date.



You can check schedule by touching the **Reminder** button.

Note

The anniversary icon cannot be deleted by pressing the Erase button.
It can be deleted by touching the icon again.

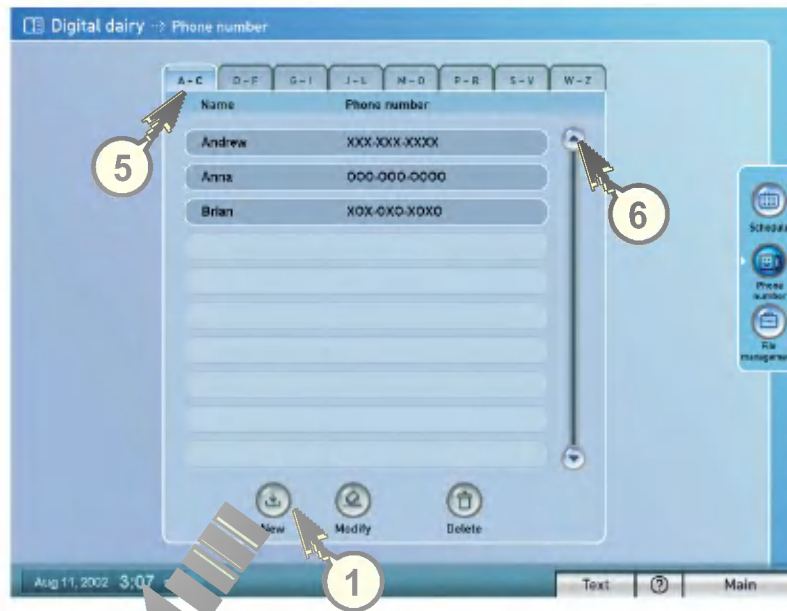


Note
- Phone numbers are arranged by name in ascending alphabetical order.

Retrieve Phone Numbers...

- 5 Touch the relevant page of the name to retrieve.
- 6 Retrieve by using ▲▼ when several of phone number exist.

Input a New Phone Number...

 - 1 Touch the New button.
- 2 Input name and phone number using the keyboard.
- For keyboard operations, see page 17.
- 3 Touch the Save button.
- 4 Touch the Enter button.
 - ▣ Touch the Continue button for inputting numbers consecutively.

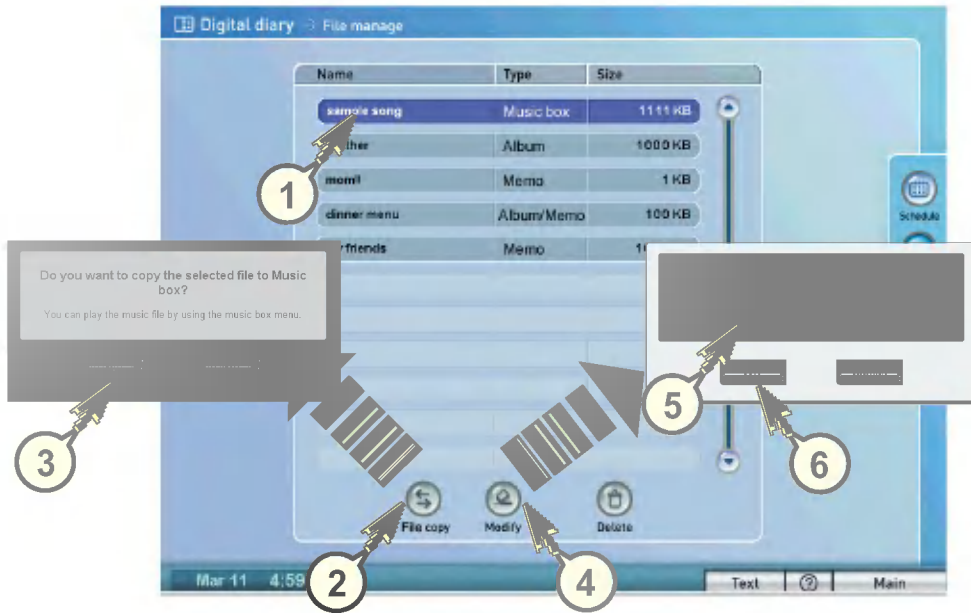

Check the Relevant Files...

- 1** Select the files to check.
- 2** Touch the File Copy button.
- 3** Select Yes to move selected data.
 - You can check files by using the appropriate menu.

Caution

You cannot move or execute data except for avi, mpg, txt, bmp, gif, jpg, or mp3 files.

Placement position depending on file type.

avi, mpg, txt	Memo
bmp, gif, jpg	Album, Memo
mp3	Music – music box

- 1** Select files to modify.
- 4** Touch the Modify button.
- 5** Modify the file name using the keyboard.
 - For keyboard operations, see page 17.
- 6** Touch the OK button.



Note

- The recipes in the cookbook are specific to every country's eating habit.

Main

Touch this button to return to the Main screen.

 


1 Select the method to classify the recipe.

2 Select desired recipe from each classification item.

3 Ingredients, preparation, and recipe for the selected menu appears if you touch it.

You can see the rest of the content by using the ▲ ▼ buttons.

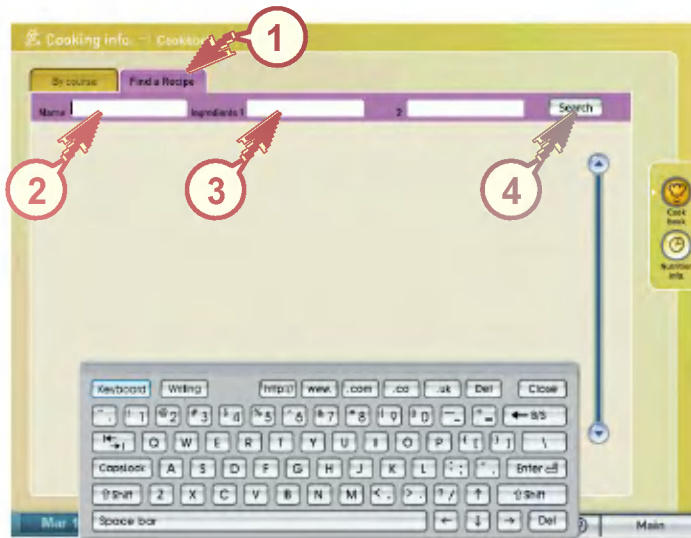

1 Touch the Find a Recipe button.

2 Input a recipe name to search.
- For keyboard operations, see page 17.

 
4 Touch the Search button.

3 Input ingredients of recipe to search.

- ▣ You can be more precise in your search if you input for both ingredient 1 and ingredient 2 fields.
- For keyboard operations, see page 17.

4 Touch the Search button.

Cook – Nutrition Info.

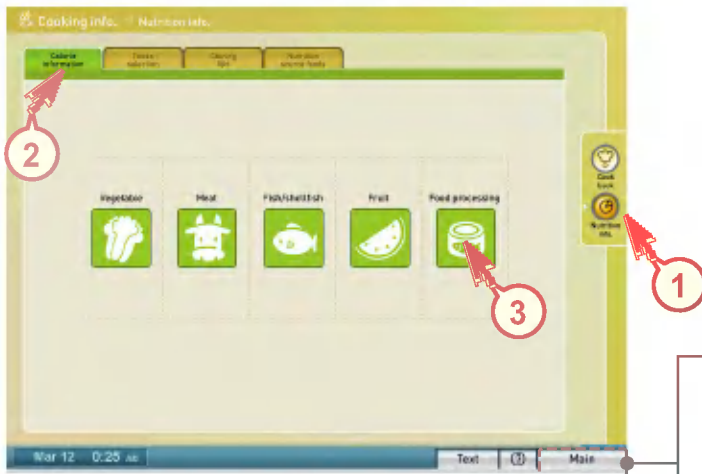

Main
Touch this button to return to the Main screen.



- 1** Touch the Nutrition Information button.
- 2** Select the desired information.
- 3** You can check useful nutrition information by selecting the desired classification.

Cook – Nutrition Info.

Calorie Information



Foods Selection

 


Storing Tips





Nutrition source foods



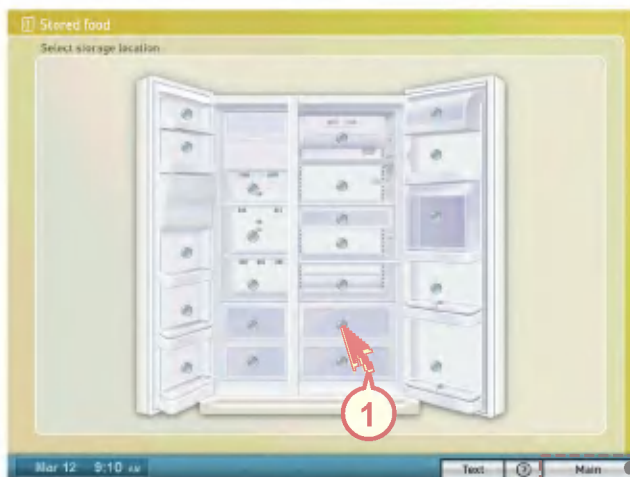

! Caution
Days stored indicates the period from the date recording/modifying food name to the current time.

  Main
Touch this button to return to the Main screen.

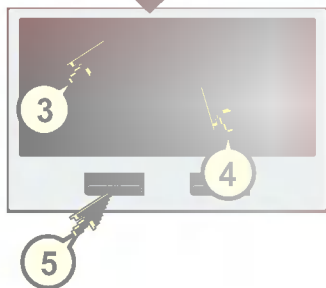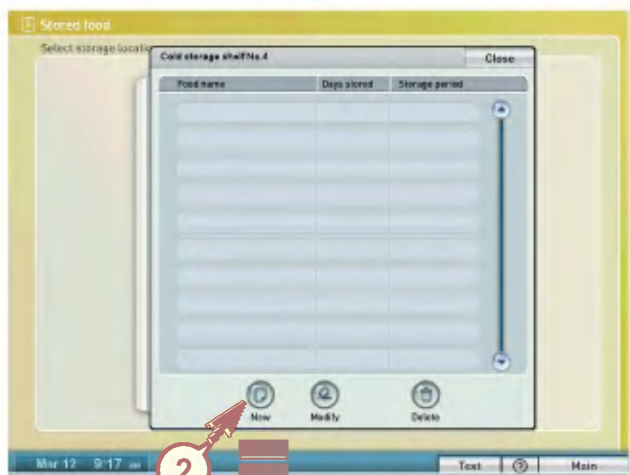


- 1** Touch the circle on the refrigerator diagram where you wish to record your food item.
- 2** Touch the New button.
- 3** Use keyboard to record the name of food item stored.
- For keyboard operations, see page 17.
- 4** Set the storage period by touching the ▲▼.
 - Today's data is displayed in the storage period.
 - Days stored are automatically calculated from the input date.
- 5** Touch the OK button.
 - The gray circle changes to green if the food list is recorded.



- 7** Touch the circle at the desired position.

 
Stored Food

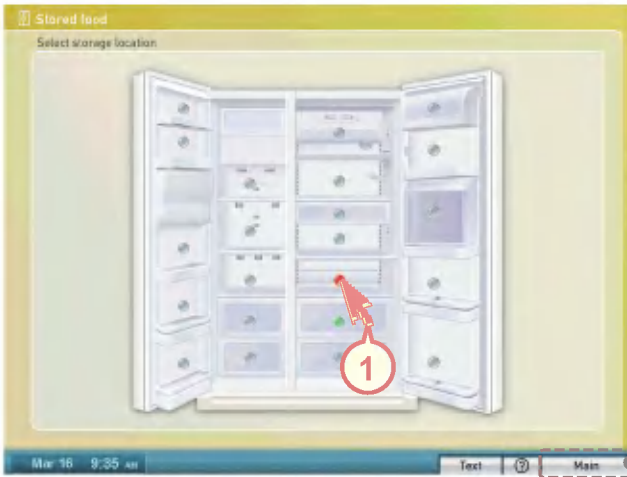


Information of Storage Period Passed




- When food lists are empty
- When the storage period has not expired
- When the storage period expires

 Main
Touch this button to return to the Main screen.

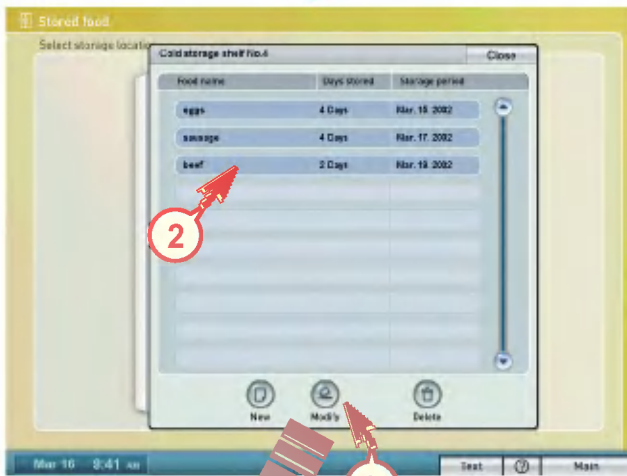

    - 1** Touch the circle at the desired position.
- 2** Select the food name to modify.
- 3** Touch the Modify button.
- 4** Modify contents using the keyboard.
- For keyboard operations, see page 17.
- 5** Touch the OK button.

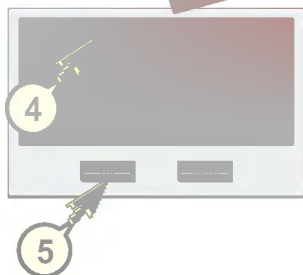

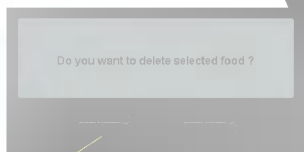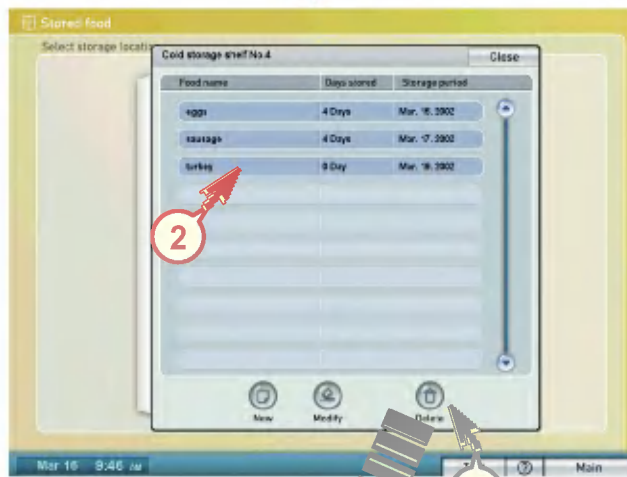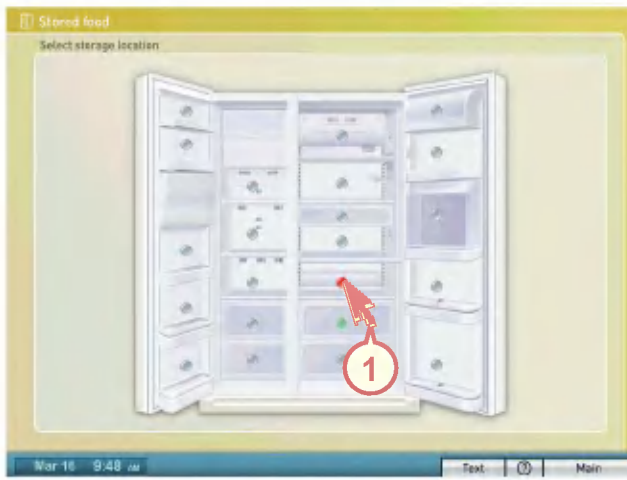

- 1** Touch the circle at the desired position.
- 2** Select the food name to delete.
- 3** Touch the Delete button.
- 4** Touch Yes to delete the selected item.

 
Note

- Notice window appears on the main screen to indicate that storage period has expired for some food item.



- You can check the stored food expirations by touching the Check stored food button.

Background

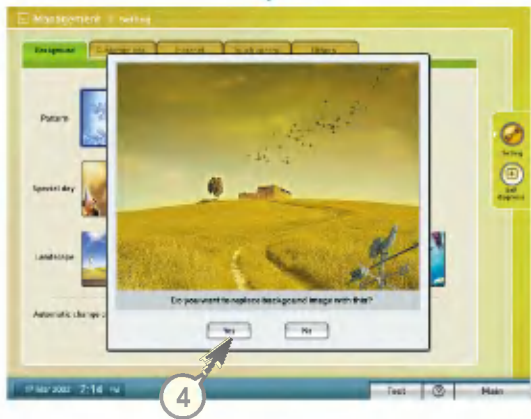

- 1** Touch the Setting button.
- 2** Touch the Background screen.
- 3** Select an image to set it as a background screen.
- 4** Touch Yes
 - The frame of the image set as a background screen turns to blue.

When Not Using the Background Automatic Change Function

- 5** Change the setting of the background automatic change (special day) to Not Used.

The background image is automatically changed to one of these images (below) for birthdays, anniversaries, and wedding if you have selected the Automatic Change Feature.

 
- For digital diary operations, see page 33.



Birthday





Wedding

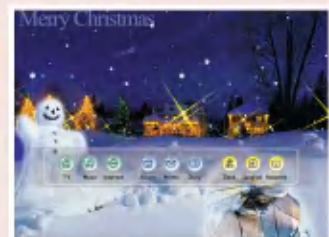

Christmas

  Customer Information Setting

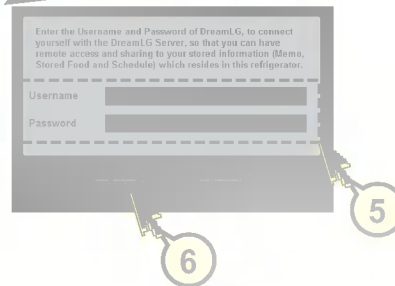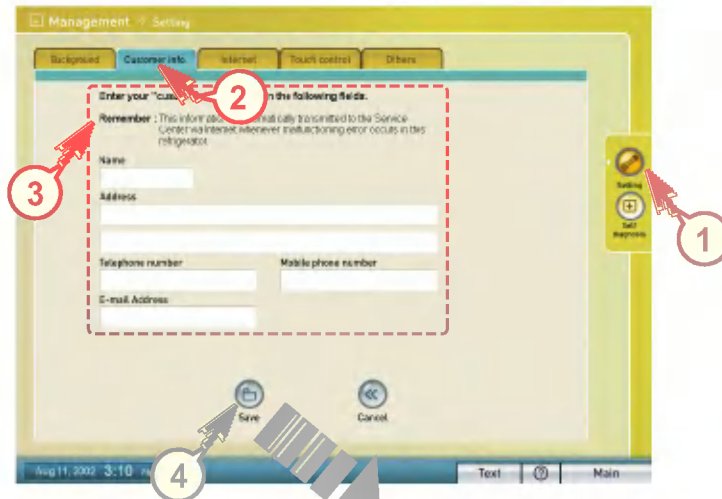


- 1 Touch the Setting button.
- 2 Touch the Customer info button.
- 3 Input Name, Address, Phone number and E-mail Address
- For keyboard operations, see page 17.
- 4 Touch the Save button.
- 5 Input the DreamLG username and password.
- 6 Touch the Save button.

Note

Why should you input DreamLG ID?
It is intended to input DreamLG ID for providing more convenient service in connection with an automatic malfunction report or when connected to DreamLG. Connect to the Dream LG website <http://www.dreamlg.com> and register your DreamLG ID.
The input is not always needed.

 Internet Setting With a Built-In LAN

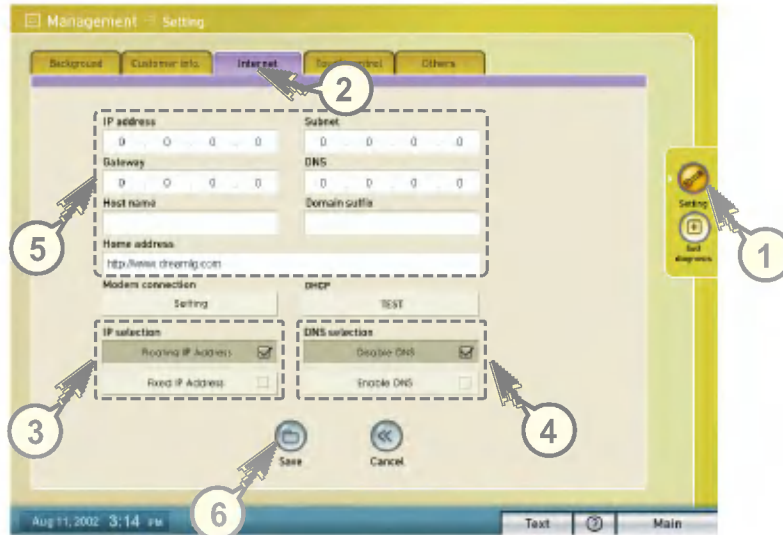

- 1** Touch the Setting button.
- 2** Touch the Internet button.
- 3** Select whether you will use a fixed IP address or a floating IP address
- 4** Select whether you want to enable DNS
- 5** Input information such as IP address, gateway, subnet, DNS, host name, and domain suffix.
- 6** Touch the Save button.
 - The system will reboot.

 
Note


1. To use Internet, you need a unique address. You must assign an IP address, just as each phone is assigned its own number.
2. There are two methods to use IP address. The one is to assign fixed IP address and the other is to receive and use floating IP address by using the DHCP server.

Caution

- To setup the internet, you must input the necessary information for IP settings. Contact your ISP and also contact LG service center if you need help. At the initial installation, LG service personnel can help you to set it up. It is advised not to modify the settings after initial installation.

Internet Setting With an External Modem

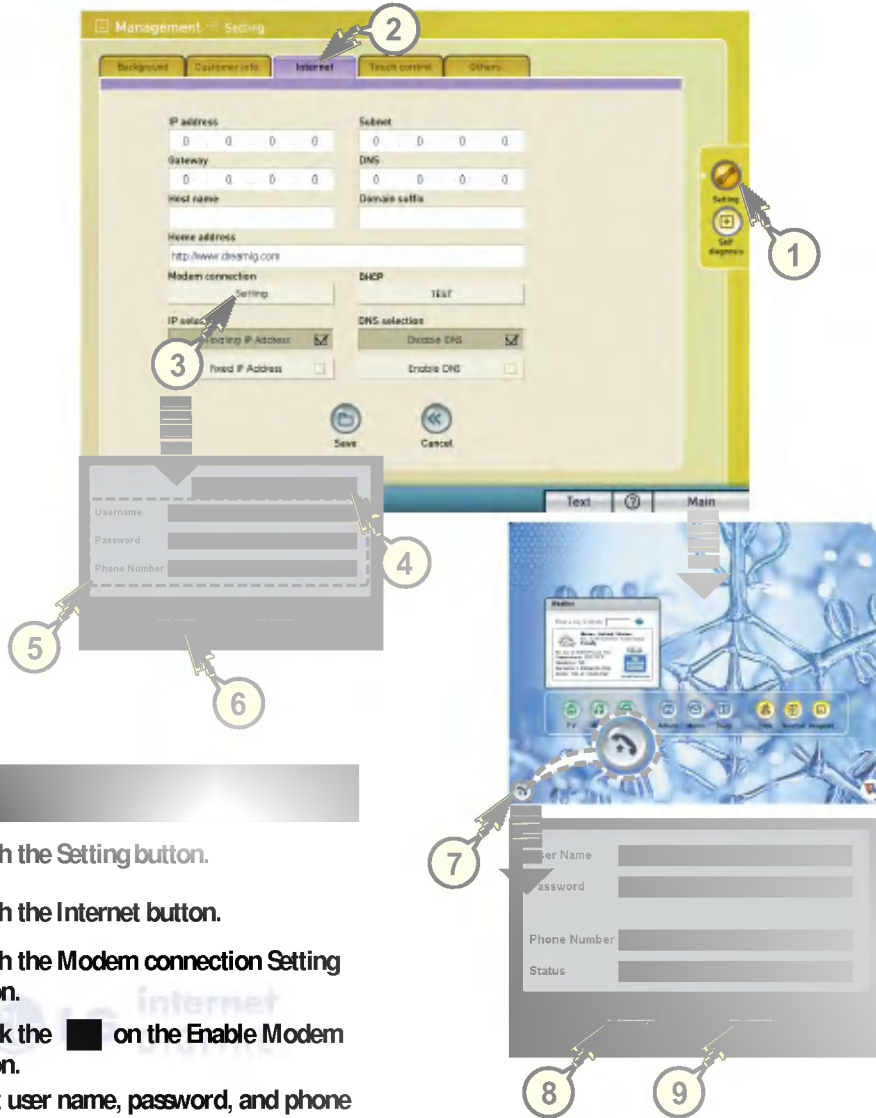

- 1 Touch the Setting button.
- 2 Touch the Internet button.
- 3 Touch the Modem connection Setting button.
- 4 Check the on the Enable Modem button.
- 5 Input user name, password, and phone number.
- 6 Touch the Save button.
 - The  button will appear on the main screen.

 
- 7 Touch the  button on the main screen.
- 8 Touch the Connect button.

- 7 Touch the  button on the main screen.
- 9 Touch the Cancel button.

! Caution

- Make sure your external modem is connected and turned on.
- Contact your ISP and also contact LG Service Center if you need help.

Touch Screen

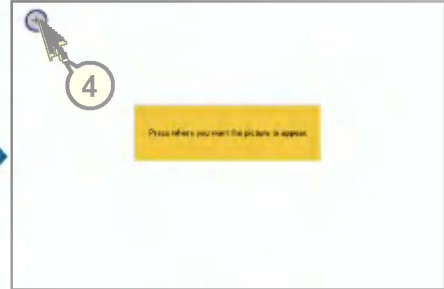


- 1** Touch the Setting button.
- 2** Touch the Touch Control button.
- 3** Touch the Control button.
- 4** Touch the first point of the touch screen.
 - Use the stylus for greater accuracy.
- 5** Touch the second point of the touch screen.
- 6** Touch Yes if you are satisfied with the touch screen adjustment.
 - If the touch control is not properly done, do not save and touch any button for 10 seconds as then it will return to the previous setting.

Caution

The screen angle varies according to the user's height and posture. Adjust it according to your convenience.

 Others

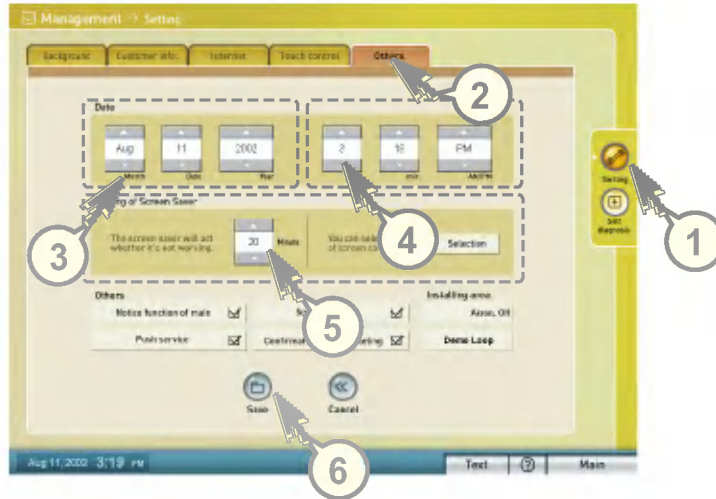



- 1** Touch the Setting button.
- 2** Touch the Others button.
- 3** Set the date for the Day, Month, and year using the ▲▼ buttons
- 4** Set the time for Hour, Minute and AM/PM using the ▲▼ buttons
- 6** Touch the Save button.

- 1** Touch the Setting button.
- 2** Touch the Others button.
- 5** Input the activation time for screen saver.
 - Select Never if desiring not to use a screen saver.
- 6** Touch the Save button.

! Note


1. If you set pictures as your screen saver, these pictures will then appear continuously when screen saver mode activates.
2. In case no picture is set, it will be changed to the power saving mode in which the monitor turns off.
3. First, set time when the refrigerator is installed.

  Others

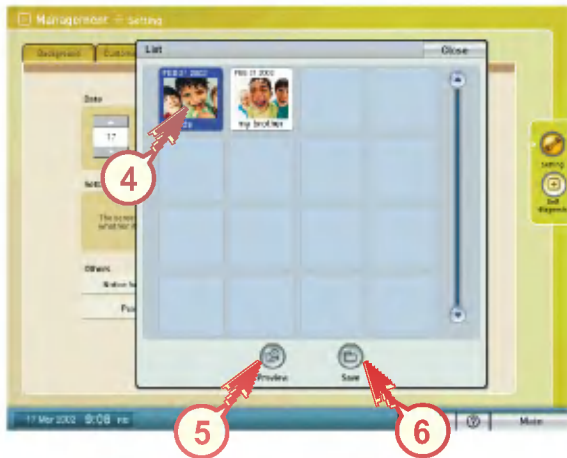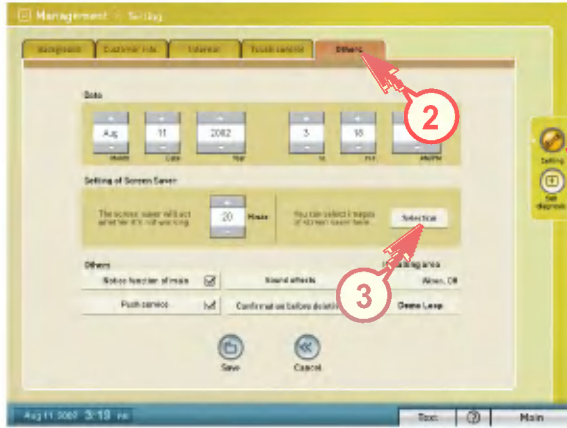

- 1** Touch the **Setting** button.
- 2** Touch the **Others** button.
- 3** Touch the **Selection** button.
- 4** Select all the pictures you wish to set for your screen saver.
 - The frame will turn blue.
- 5** You can preview pictures of the screen saver by touching **Preview** button.
- 6** Touch the **Save** button.

 Others

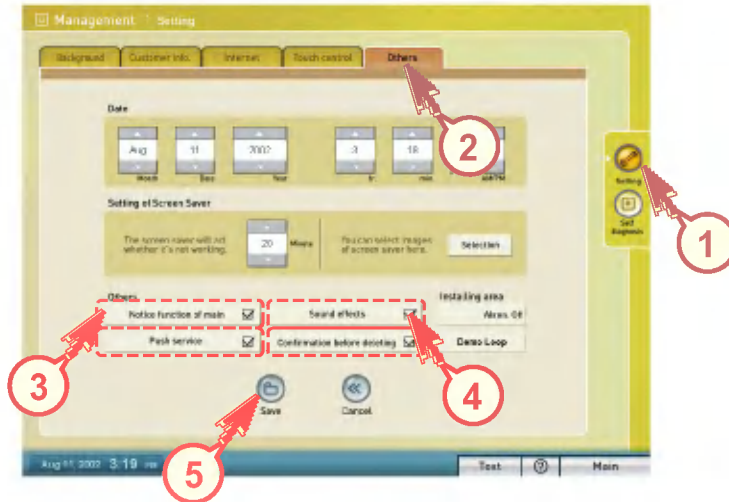

- In settings you have an option to use the notice window on the main screen to notify you about a new memo, scheduled event, food storage expiration date, or malfunction. See pages 25, 35, and 44.

1 Touch the **Setting** button.

2 Touch the **Others** button.

3 Select whether you will use this function.

5 Touch the **Save** button.

- This turns the click sound on or off.

 
1 Touch the **Setting** button.

2 Touch the **Others** button.

4 Select whether you will use this function.

5 Touch the **Save** button.

Others

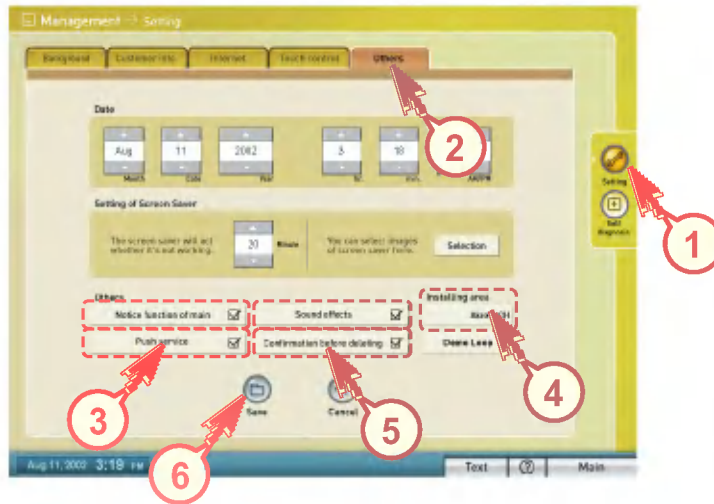

■ In settings you have an option to see weather information on the main screen.

- 1** Touch the **Setting** button.
- 2** Touch the **Others** button.
- 3** Select whether you will use this function.
- 4** Select your area.
- 6** Touch the **Save** button.



 
■ In settings you have an option to enable or disable the display of an alarm message while deleting files.

- 1** Touch the **Setting** button.
- 2** Touch the **Others** button.
- 5** Select whether you will use this function.
- 6** Touch the **Save** button.

✓ Caution

- Important files may get deleted by mistake if confirmation message function in deletion is not opted for.


In Normal Operation

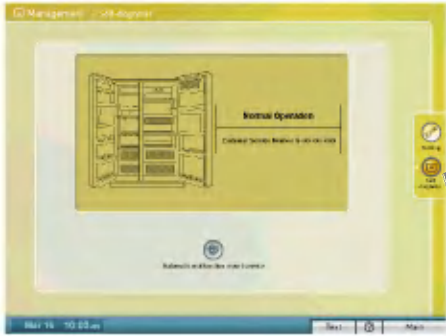



When a failure is found through self-diagnosis, you can automatically report it to the service center via Internet.

 1 Touch the Self-diagnosis button.

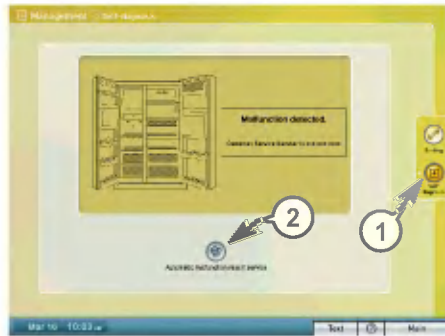Defects That Can Be Detected Through Self-Diagnosis.









Case of Defects That Can Be Detected Through Self-diagnosis

- 1** Touch the Self-Diagnosis button.
- 2** Touch the Automatic Malfunction Report Service button.





Note

This refrigerator has a self-diagnosis feature for the refrigerator and freezer. Other problems, such as shelf damage cannot be detected through self-diagnosis. In such a case, report these faults via Internet or call the Authorized Service Center immediately. If the Internet is not available, telephone your servicer.

Caution

First, input your DreamLG ID in the Internet section of the Management menu before sending an automatic malfunction report. If a malfunction occurs, do not turn the power off but contact an Authorized Service Center.

Defects That Cannot Be Detected Through Self-Diagnosis.

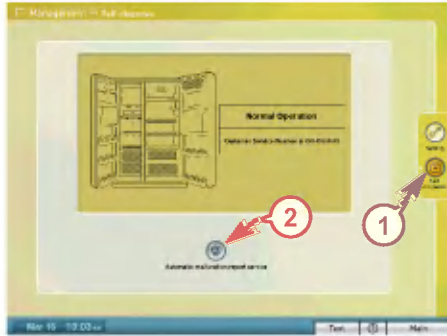 


Figure 1. Internet report successful



Figure 2. Internet report failed.

Case of Defects That Cannot Be Detected Through Self-diagnosis

- 1** Touch the Self-Diagnosis button.
- 2** Touch the Automatic Malfunction Report Service button.

! Caution

1. If Internet report succeeded, you will see the message shown in Figure 1.
2. If it failed, you will see the message shown in Figure 2.



1. Writing Capital Letters

	Writing Method		Writing Method
A		N	
B		O	
C		P	
D		Q	
E		R	
F		S	
G		T	
H		U	
I		V	
J		W	
K		X	
L		Y	
M		Z	



2. Writing Lowercase Letters

	Writing Method		Writing Method
a		n	
b		o	
c		p	
d		q	
e		r	
f		s	
g		t	
h		u	
i		v	
j		w	
k		x	
l		y	
m		z	



3. Writing Numbers

	Writing Method
0	
1	
2	
3	
4	
5	
6	
7	
8	
9	



4. Writing Special characters

	Writing Method		Writing Method
&		!	
@)	
#		<	
\$		>	
%		l	
*		I	
^		l	
1/2		1	
1/4		*	
—		1	
+		1	
=		1	
=		1	
7		1	
1		1	



Memo







Memo





