



LG

Single Package Type Air Conditioner

***OWNER'S MANUAL***

Please read through this manual. It contains valuable information about your air conditioner. This manual may help save time and money by explaining proper product maintenance and preventing improper use.

Pay close attention to precautions in order to prevent potential hazards and damage from misuse or improper installation. LG is not responsible for any damages caused by misuse of the product.

Prior to installation, this air conditioning unit must be submitted for approval by the utility service which provides electricity (EN 61000-3-2).

# TABLE OF CONTENTS

- a. Name and Function of Remote Controller
- b. Optional Function
- c. Set the Current Time and a day of the week
- d. Weekly programming
- e. Holiday Setting
- f. Timer Setting
- g. Operation Mode
- h. Operation Procedure

## For Your Records

Write the model and serial numbers here:

Model # \_\_\_\_\_

Serial # \_\_\_\_\_

You can find them on a label on the side of each unit.

Dealer's Name \_\_\_\_\_

Date Purchased \_\_\_\_\_

## Read This Manual

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of **Troubleshooting Tips** first, you may not need to call for service at all.



## CAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only.
- Installation work must be performed in accordance with the national wiring standards by authorized personnel only.

To prevent injury and property damage, follow these instructions.

- Incorrect operation due to ignoring instructions will cause harm or damage, the seriousness of which is indicated by the following symbols.



**WARNING** This symbol shows the possibility of death or serious injury.



**CAUTION** This symbol indicates the possibility of injury or damage to property.

⌋  **WARNING** ⌋

- **Do not install, remove and reinstall the unit by yourself.**
  - Improper installation will cause water leakage, electrical shock, or fire. Please consult authorized dealer or specialist for the installation work. Please note any fault caused by improper installation is not covered by warranty.
  - Unit must be installed in an easily accessible area. Any additional cost required to hire a special equipment to service the unit will be the responsibility of the customer.

⌋  **WARNING** ⌋



- It will cause an injury by the fan.



- It may cause an injury.



- It will cause electrical shock.



- It may cause an injury.
- Be sure to disconnect all electric power before filter cleaning.



- If not, dirt may collect and cause a fire.



- If the unit continues to operate in an abnormal condition, it may cause fire, damage, etc. In this case, consult your dealer.



- If these are done incorrectly, it may cause a fire, electric shock, injury. Consult your dealer.

## ⚠ CAUTION

- Contact the authorized Service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.

## ⚠ CAUTION



- Water may enter the unit and degrade the insulation. It may cause an electric shock.



- An oxygen shortage may occur.



- Since the fan rotates at high speed during operation, it may cause an injury.



- This could injure the pet or plant.



- It may cause a fire or deformation of the cabinet.



- The unit may drop or fall down and cause an injury.



- It may cause imperfect combustion.



- It may cause an injury.



- It may cause an injury through dropping or falling down.



- In the cooling mode, if it is operated in a room with high humidity (80%r.h. or more) for a long time, water condensed in the air conditioner may drop and may wet and spoil furniture, etc.



- It may cause an injury, etc. by falling down.



- Do not use this air conditioner to preserve precision devices, food, animal, plants and art objects. It may cause deterioration of quality, etc.



 
- If will cause electrical shock or fire.



- It may cause an injury.




- It will cause an injury by the rotating blower.

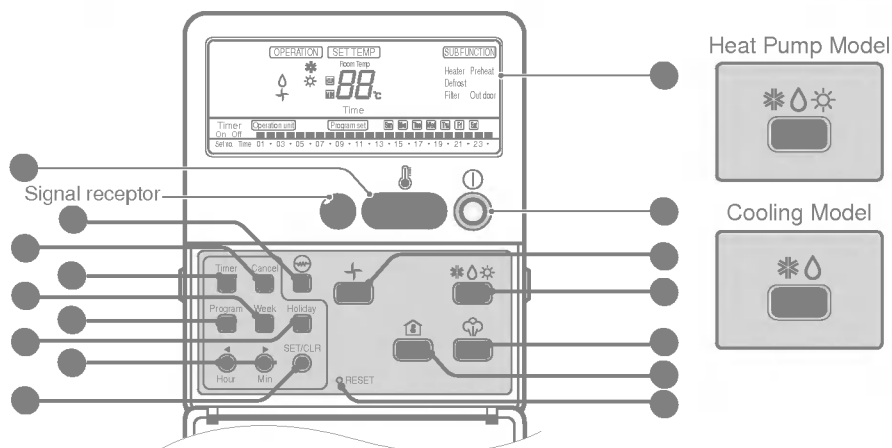


- **Operation display**  
Displays the operation conditions.
- **On/Off Button**  
Operation starts when this button is pressed, and stops when the button is pressed again.
- **Set Temperature Button**  
Used to set the temperature when the desired temperature is obtained.
- **FAN Operation Button**  
Used to circulate room air without cooling or heating.
- **Operation Mode Selection Button**  
Used to select the operation mode.
  - Cooling Operation Mode
  - Soft Dry Operation Mode
  - Heating Operation Mode(except cooling model)
- **Humidifier ON/OFF Button**
- **Room Temperature Checking Button**  
Used to check the room temperature.
- **Heater Button**(E/Heater is optional parts)  
Used to operate E/Heater.
- **Timer Cancel Button**  
Used to cancel the timer.
- **Timer Set Button**  
Used to set the timer when the desired time is obtained.
- **Week Button**  
Used to set a day of the week.
- **Program Button**  
Used to set the weekly timer.
- **Holiday Button**  
Used to set a holiday of the week.
- **Time Set Button**  
Used to set the time of the day and change the time in the weekly timer Function.
- **Set and Clear Button**  
Used to set and clear the weekly timer.
- **Reset Button**  
Used to set the current time and clear the setting time.

 ※ Display temperature can be different from actual room temperature if the remote controller is installed at the place where sun-rays are falling directly or the place nearby heat source.

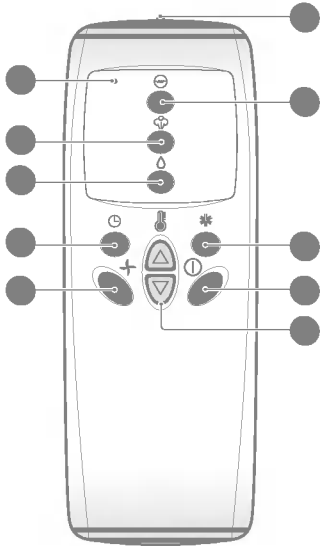

**(Cooling Model)**

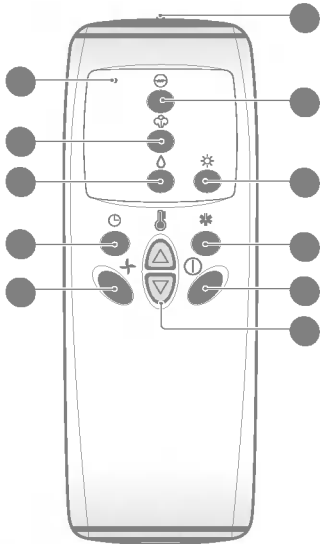 

**(Heat pump Model)**

● **Signal Transmitter**

- Transmits the signals to the package air conditioner

● **Operation Display of the Remote Control**

● **Humidifier ON/OFF Button**

● **Cooling Operation Button**

● **Temperature Setting Button**

● **Power ON/OFF Button**

- Operation will start when this button is pressed, and stop when the button is pressed again.

● **Timer Set Button**

- Each time the button is pressed, the mode is changed in the following process.  
Timer set (1, 2, 3, 4, 5, 6, 7 hours)  
If you select "0:00" the off Timer function will be canceled.

● **Fan Operation Button**

● **Heating Button (Heat Pump Model Only)**

● **Electric Heater ON/OFF Button(Optional)**

 
● **Soft Dry Operation Button**

**Handling the remote control**

- Aim at the signal receptor on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7meters.
- Be sure that there are no obstructions between the remote control and the signal receptor.
- Do not drop or throw the remote control.
- Do not place the remote control in a location exposed to direct sunlight, or next to a heating unit, or other heat source.
- Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation. (ex:electronic quick start, ELBA, inverter type fluorescent lamp)



**1** Press the '  ' button.

Each time the button is pressed, the number is changed from **00** to **23**.  
You can set the number of the current hour.

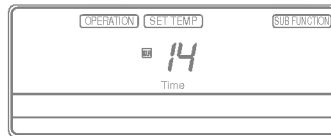

**2** Press the '  ' button.

  Each time the button is pressed, the number is increased from **00** to **59**.  
You can set the number of the current minute.

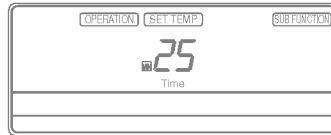


**3** Press '  ' button.

Each time the button is pressed, a day of the week is shifted from Sunday to Saturday.  
You can set the day of the week.




**4** Press the '  ' button.

 If you want to reset the current time and a day of the week, click the Reset button.

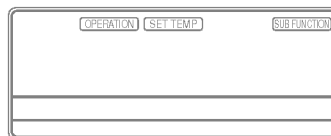

# 1 Press the Program button.

 The remote controller is displayed like a picture. Then 'Program set', 'Sun' and '01' is blinked.

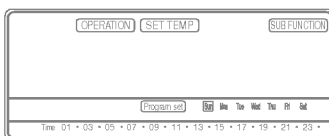



# 2 Press the 'Week' button.

Press  button repeatedly until desired mode appears.



For example, if you want Thu, press  button 4 times.

 
# 3 Select the time you want.

Press  or  button, then blinking letter is shown.


If you press  button, then '■' shape appears.

'' shape means that five o'clock is reserved.

Using below buttons, you can reserve time.



 \* For example, the air-conditioner is on 6,7,8 and 13~22 o'clock.

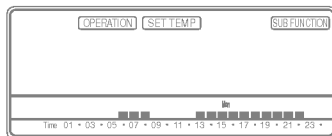

# 4 Press the Program button again to finish weekly programming.





If Tuesday is a holiday in this week, you may set a holiday.

- Press the Program button.



 
- Press the Week button.  
Select the Tuesday.



- Press the Holiday button.



Then the remote controller will be displayed 'Tue'.  
The outside rectangular means holiday.

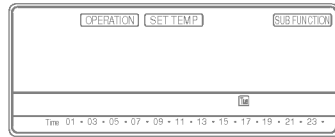

- Press the Program button again to finish holiday setting.

 


This function is used to turn on or turn off in several hours.

- Press the Timer button  
to turn Timer on or off.





- Change the timer setting until the desired time is set.



  - If you want to cancel the timer setting, press the Cancel button.




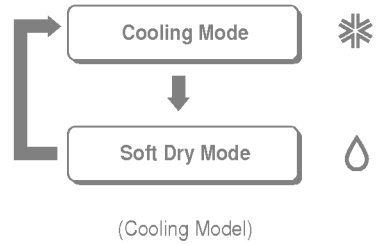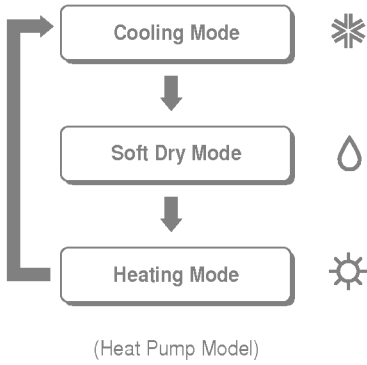

**1st** On/Off Button

**2nd** Operation Mode Selection Button

 **3rd** Room Temperature Setting Button

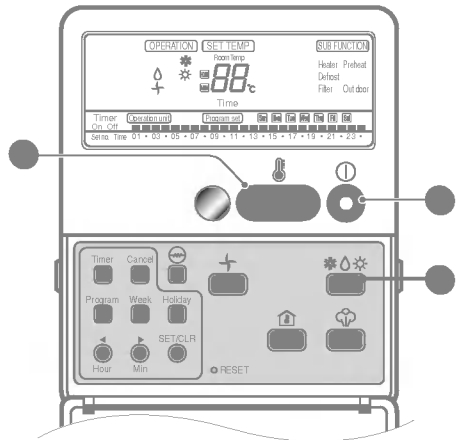

**1** Press the On/Off Button.



 
**2** Select Cooling Operation.

Press the Operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.



Operation Display




Soft Dry Operation

Heating Operation




 Operation Display



Soft Dry Operation

 **3** Set the temperature lower than the room temperature.

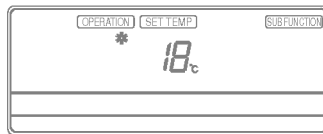

• The temperature can be set within a range of 18°C ~ 30°C by 1°C .



To raise the Temperature.

To lower the Temperature.

This mode dehumidifies without overcooling.

 
 
**1** Press the On/Off Button.



**2** Select Soft Dry Operation.

Press the operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.

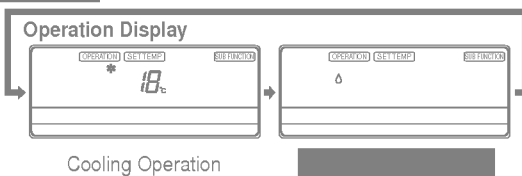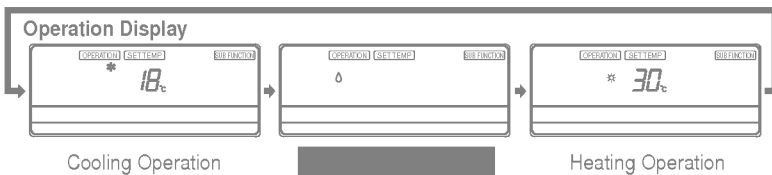

**1** Press the On/Off Button.



 
**2** Select Heating Operation.

Press the Operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.



**3** Set the temperature.

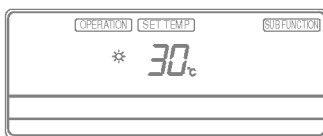


• The temperature can be set within a range of 16°C~30°C by 1°C.




To raise the Temperature.

To lower the Temperature.

 **4** This air-conditioner is set to the hot start control in order not to discharge the cold air during the heating operation. This time, the remote controller indicates 'Preheat'.

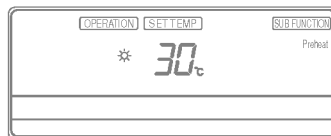

 **5** If the outdoor temperature is too low during the heating operation, this air-conditioner is set to the defrosting operation and the remote controller indicates 'Defrost'.

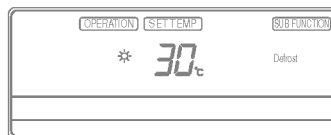


**1** Press the On/Off Button.



**2** Select heating+ E/heater Operation.

Press the Operation Mode Selection Button.

 Press the Heater Operation Button on the remote controller. (When the unit operates in heating mode.)

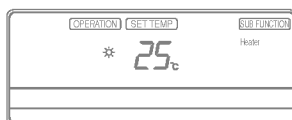


**3** Set the temperature upper than the room temperature.

The temperature can be set within a range of 16°C~30°C by 1°C.




To raise the Temperature.


 
To lower the Temperature.

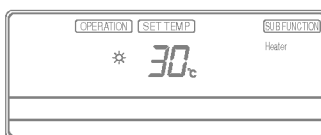

 **1** Press the Heater Operation Button on the remote controller.

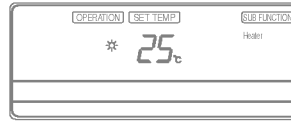

 **2** Set the temperature upper than the room temperature.  
The temperature can be set within a range of 16°C~30°C by 1°C.

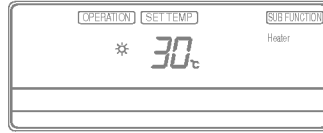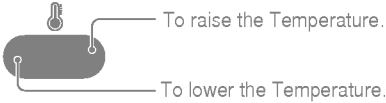

This is the Function that any children cannot use to the air-conditioner.

## Operation procedure

 
### To set the Child-Lock Function

Press the Timer button and Minute Set button for three seconds. Then the operation mode shift to child lock mode and it is displayed 'CL' in the operation display.

When you press any button in this time, the remote controller is not converted to any selected mode and the 'CL' is displayed in the remote controller for about three seconds. But the Room Temperature function is operated in spite of child lock mode.


### To cancel the Child-Lock Function

Press the Timer button and Minute Set button for three seconds. Then the child-lock mode is cancelled and the preselected mode is displayed in the remote controller.

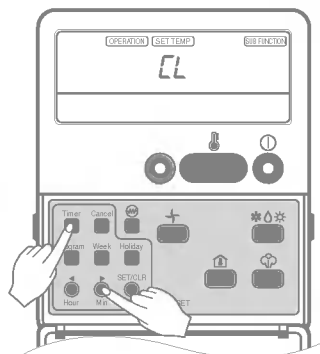

## • Cooling Operation Mode

 When the room temperature is higher than the set temperature, it operates in cooling mode at the set temperature, the set fan speed, and then it will be in automatically turn off when the room temperature reaches the set temperature +0.5°C.

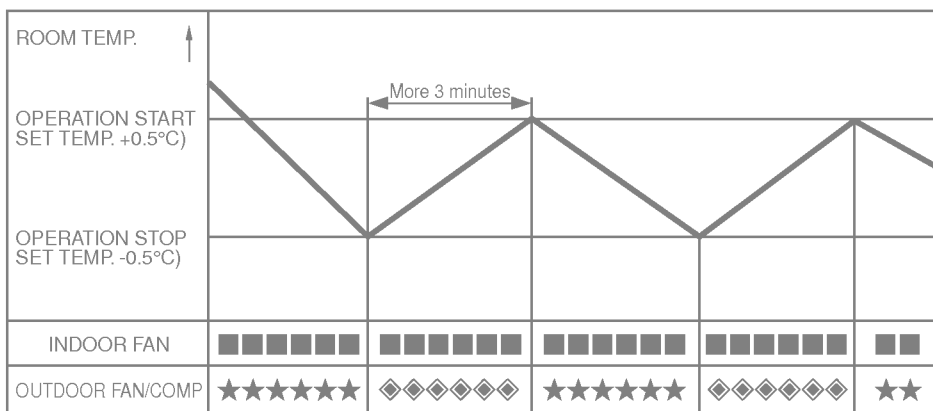

■ : SETTING FAN SPEED    ○ : LOW COOL OPERATION    ★ : COMP ON    ◆ : COMP OFF

'CH' will flash in the remote controller display when a problem occurs. Then please contact your dealer.



**CAUTION:** Before performing any maintenance, turn off the main power to the system.

You can do some of the periodic maintenance for your unit yourself; this includes cleaning air filters, cleaning unit cabinet, clearing the condenser coil, and conducting a general unit inspection on a regular basis.

**⚠ WARNING ⚠**

Before removing access panels to service unit, disconnect power supply. Failure to disconnect power before attempting any servicing can result in severe injury or death.

This product has anti-bacteria washable filters. It is very important to keep air filters clean in the central duct system. Be sure to inspect them at least once each month when the system is in constant operation. (In new buildings, check the filters every week for the first 4 weeks.)

Washable type filters can be cleaned by washing with a mild detergent and water. Ensure that the filters are thoroughly dried before reinstalled them in the unit (or duct system).

Unfiltered air circulates through the unit's condenser coil and can cause the coil's surface to become clogged with dust, dirt, etc.. To clean the coil, vertically (i.e., along the fins) stroke the coil surface with a soft bristled brush.

Keep all vegetation away from the condenser coil area.

To keep your unit operating safely and efficiently, the manufacturer recommends that a qualified serviceman check the entire system at least once each year, or more frequently if conditions warrant. Your serviceman may examine these areas of your unit:

1. Filters (for cleaning)
2. Motors and drive system components
3. Condenser coils (for cleaning)
4. Safety Controls (for mechanical cleaning)
5. Electrical components and wiring (for possible replacement or connection tightness)
6. Condensate drain (for cleaning)
7. Inspect the unit duct connections to ensure they are physically sound and sealed to the unit casing.
8. Inspect the unit mounting support to see that it is sound.
9. Inspect the unit to ensure there is no obvious deterioration.

Complete the unit inspections and service routines described below at the beginning of each heating season.

- Inspect the controller panel wiring to verify that all electrical connections are tight and that wire insulation is intact.

When air conditioner is not going to be used for a long time.

- Operate the air conditioner on Air circulation mode for 2 to 3 hours.
  - This will dry out the internal parts.
- Turn off the circuit breaker.



**CAUTION**

Turn off the circuit breaker when the air conditioner is not going to be used for a long time. Dirt may collect and may cause a fire.

When the air conditioner is to be used.

- Clean the air filter and re-install it in the indoor side.
  - On the filter access panel at the left side of the unit, a "Filter access panel" label is attached.
- Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

**Helpful information**

The air filters and your electric bill. If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

Do not overcool the room.

This is not good for your health and wastes electricity.

Close doors or curtains.

Do not let direct sunshine enter the room when the air conditioner is in operation.

Clean the air filter regularly.

Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects.



**CAUTION**

Before removing access panels to draw out air filters, disconnect power supply. Since the fan rotates at high speed, it may cause a serious injury

Make sure that the doors and windows are closed.

Avoid opening doors and windows as much as possible to keep the cool air in the room.

Open the room occasionally.

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

- ① Clean at least once every month using a vacuum cleaner or washing with a neutral detergent in lukewarm water.

- ② After washing with water, dry it well in the shade.
  - Do not expose the air filter to direct sunlight or heat from a fire when drying it.

Check the following points before requesting repairs or service.... If the fault persists, please contact your dealer or service center.

Case	Explanation	See page
Does not operate.	• Have you made a mistake in timer operation?	9
	• Has the fuse blown or has the circuit breaker been tripped?	-
The room has a peculiar odor.	• Check that this is not a damp smell exuded by the walls, carpet, furniture, or cloth items in the room.	-
It seems that condensation is leaking from the air conditioner.	• Condensation occurs when the airflow from the air conditioner cools the warm air.	-
Air conditioner does not operate for about 3 minutes when restarted.	• This is the Protection device of the air conditioner. • Wait about three minutes and operation will begin.	-
Does not cool or heat effectively.	• Is the air filter dirty? See air filter cleaning instructions.	17
	• The room may have been very hot when the air conditioner was first turned on. Allow time for it to cool down.	-
	• Has the setting temperature been set incorrectly? • Are the unit's air inlet or outlet vents obstructed?	-
The air conditioner operation is noisy.	• For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit.	-
Remote controller display is faint, or no display at all.	• Has the circuit breaker been tripped?	



A series of horizontal dotted lines spanning the width of the page, providing a guide for handwriting practice.

