

型号: G7030



简体中文  
ENGLISH

## GPRS 手机

用户手册

型号: G7030

操作前请仔细阅读该手册。  
留作以后参考。

CE 0168

用户手册



P/N : MMBB0095314

Revision 1.4  
PRINTED IN KOREA

G • P • R • S • P • H • O • N • E • G • P • R • S • P • H • O • N • E

# GPRS手机

用户手册

型号：G7030

操作前请仔细阅读该手册。  
留作以后参考。





所有无线设备在靠近其它电子装备时都会对其产生一些干扰。



在飞机上，请始终关闭GSM手机。



在加油站、燃料仓库、化工厂或爆破活动附近请关机。



在医院内请关机：否则心脏起搏器和助听器电子医疗设备将会受到影响。



手机可能对电视、收音机、电脑等造成轻微干扰。



开车时请不要手持手机。



切勿拆除手机或电池。



手机应置于小孩接触不到的安全地方，以免其可能的小部件造成窒息危害。



不要用湿手触摸充电器。



## 安全措施



只可使用指定电池和充电器以防损坏手机。

### 请注意：



废旧电池应按相关法规进行适当处理。



只可使用原厂附件以防损坏手机。



该手册中所提及的某些服务并非所有网络都支持。

### 重要资讯

本用户指南内含有关本手机之操作与使用的重要资讯。请务必仔细阅读所有资讯，以便能发挥最好的手机性能，并防止手机遭受任何损坏或不当使用。未经本用户指南中明确许可的任何变更或改装，将会使您的产品保修无效。



## 概述

<b>手机部位图解</b> .....	<b>9</b>
手机正面 .....	9
手机背面 .....	10
手机LCD小屏幕 .....	11
<b>按键描述</b> .....	<b>12</b>
侧键 .....	13
字母数字键 .....	14

## 显示信息

<b>显示信息</b> .....	<b>15</b>
屏幕上的图标 .....	15
顶部功能表图标 .....	16

## 第一次使用前

<b>安装</b> .....	<b>17</b>
插入SIM卡 .....	17
安装电池 .....	17
给电池充电 .....	18
断开充电器 .....	19
<b>开关机顺序</b> .....	<b>20</b>
开机 .....	20
关机 .....	20
<b>访问密码</b> .....	<b>21</b>
PIN码 (4至8位数字) .....	21
PIN2码 (4至8位数字) .....	21
PUK码 (4至8位数字) .....	21
PUK2码 (4至8位数字) .....	21
安全密码 (4至8位数字) .....	21



## 目 录

<b>通话中功能表</b> .....	<b>22</b>
拨打电话 .....	22
用  [发送键] 拨打电话 .....	22
国际电话 .....	22
从电话簿拨号 .....	22
快速拨号 .....	22
<b>进入功能表</b>	
<b>电话簿</b> .....	<b>23</b>
<b>菜单结构</b> .....	<b>24</b>
<b>信息[功能表1]</b> .....	<b>26</b>
写信息[功能表1-1] .....	26
收信箱[功能表1-2] .....	33
发信箱[功能表1-3] .....	34
小区广播[功能表1-4] .....	35
语音信息[功能表1-5] .....	36
状态报告[功能表1-6] .....	36
常用短语[功能表1-7] .....	37
设定[功能表1-8] .....	37
<b>通话记录[功能表2]</b> .....	<b>39</b>
未接来电[功能表2-1] .....	39
已接来电[功能表2-2] .....	39
拨出电话[功能表2-3] .....	39
清除近期呼叫[功能表2-4] .....	40
通话计时[功能表2-5] .....	40
通话计费[功能表2-6] .....	41
话费设定[功能表2-7] .....	41
GPRS信息[功能表2-8] .....	42
<b>情景模式[功能表3]</b> .....	<b>43</b>
振动[功能表3-1] .....	43
静音[功能表3-2] .....	43
标准[功能表3-3] .....	43
大声[功能表3-4] .....	44



耳机[功能表3-5] .....	44
车内[功能表3-6] .....	44
<b>设定[功能表4] .....</b>	<b>46</b>
闹钟[功能表4-1] .....	46
日期和时间[功能表4-2] .....	46
手机设定[功能表4-3] .....	47
通话设定[功能表4-4] .....	48
保密设定[功能表4-5] .....	52
网络设定[功能表4-6] .....	54
GPRS设定[功能表4-7] .....	55
恢复初始设定[功能表4-8] .....	55
<b>呼叫转移[功能表5] .....</b>	<b>56</b>
所有语音来电[功能表5-1] .....	56
正在通话时[功能表5-2] .....	56
无应答时转移[功能表5-3] .....	56
无网络或关机[功能表5-4] .....	56
所有数据来电[功能表5-5] .....	56
所有传真来电[功能表5-6] .....	56
取消全部转移[功能表5-7] .....	57
<b>组织管理器[功能表6] .....</b>	<b>58</b>
日程表[功能表6-1] .....	58
备忘录[功能表6-2] .....	58
电话簿[功能表6-3] .....	59
<b>附件[功能表7] .....</b>	<b>64</b>
游戏[功能表7-1] .....	64
计算器[功能表7-2] .....	64
我的文件夹[功能表7-3] .....	64
单位转换器[功能表7-4] .....	65
时区设置[功能表7-5] .....	65
语音录音机[功能表7-6] .....	65
应答电话[功能表7-7] .....	65
红外线[功能表7-8] .....	66



 


## 目 录

<b>互联网[功能表8]</b> .....	<b>67</b>
主页[功能表8-1] .....	67
书签[功能表8-2] .....	67
Push信息[功能表8-3] .....	67
上网设定[功能表8-4] .....	68
转到URL[功能表8-5] .....	70
缓存设定[功能表8-6] .....	70
WAP信息[功能表8-7] .....	70
重设设定名称[功能表8-8] .....	70
<b>在线功能表</b> .....	<b>71</b>
<b>SIM服务[功能表9]</b> .....	<b>72</b>
<b>附件</b> .....	<b>73</b>
<b>保养和维护</b> .....	<b>74</b>
<b>技术规范</b> .....	<b>76</b>




## 手机正面

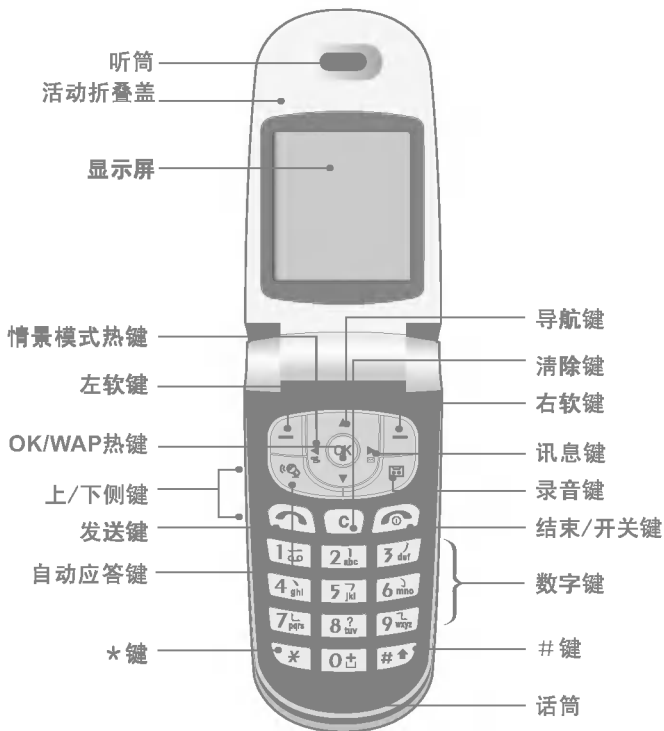




## 手机部位图解
 
### 手机背面

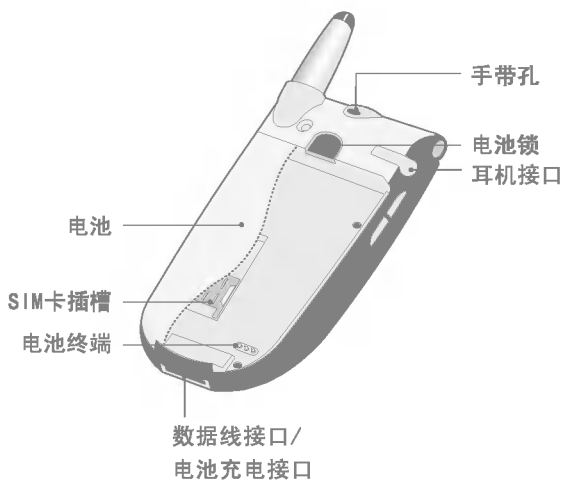



## 手机LCD小屏幕

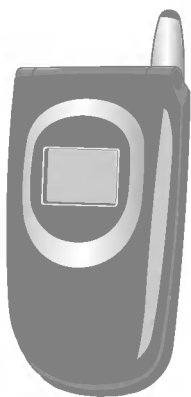 

您不须打开翻盖即可看到接收文字讯息或语音讯息的屏幕图标。此外，您也可在接到来电及拨出电话时查看对方的姓名及号码。

### 注意











 


- 如果接听电话时，对方姓名或电话号码未存在电话簿中，屏幕上会显示「新来电」。




## 按键描述

以下是手机的主要元件。


### 键盘描述

	描 述
	<b>左软键/右软键</b> 此软键执行出现在其上方屏幕上所指示的功能。
	<b>导航键</b> 可在姓名、电话号码、功能表或设定选项中翻阅。 <b>情景模式热键</b> 可直接进入情景模式功能表，长按该键也可以进入振动模式。 <b>讯息键</b> 可直接进入信息功能表。 <b>OK/WAP热键</b> 按该键可以直接连接到WAP。
	<b>自动应答键/录音键</b> 长按  键即可直接进入应答电话子功能表。 长按  键即可启用录音功能。
	<b>删除键</b> 按  键可删除您输入的字符。
	<b>发送键</b> 您可以拨打电话号码及接听来电。如果您直接按该键而没有输入任何号码，您的手机将显示您最后拨打的号码。
	<b>数字键</b> 这些键主要用来在待机模式下拨号以及在编辑模式下输入。数字或字符。如果长按以下各键： <ul style="list-style-type: none"><li>• 长按  拨打国际电话。</li><li>• 长按  至  可以快速拨号。</li><li>• 长按  进入语音信箱。</li></ul>



	描 述
	<b>结束/开关键</b> 用来结束通话或拒接来电。该键也可以用作开关键。按住该键几秒即可开机或关机。

## 侧键

	描 述
	<b>上/下侧键</b> 您可以在待机状态下调整按键音、在通话状态下调整耳机的音量。当手机翻盖合上时，按上/下侧键中任意一键手机外显示屏会显示当时的时间和日期。



## 按键描述

### 字母数字键

字母和数字键的对应关系如下。

	描 述
	. ! ' 1, - ? @ _
	A B C 2 Ä Å Æ Ç a b c ä å æ ç
	D E F 3 È É Ê e f ë è é
	G H I 4 g h i
	J K L 5 j k l
	M N O 6 Ñ Ö Ö Ó Ô Õ m n o ñ ö ø ó ô õ
	P Q R S 7 p q r s
	T U V 8 Ü Û Ú ü ù ú
	W X Y Z 9 w x y z
	0 Ø ø [空格键]



以下为手机屏幕显示的常见图标描述。

### 屏幕上的图标

图标/符号	描 述
	表示网络信号的强度。
	连接成功。
	您正在使用漫游服务。
	此图标表示您可使用GPRS服务。
	闹铃已设定并启动。
	显示电池电量。
	收到文本信息。
	收到语音信息，这需要您申请的网路支持。
	所有音频信号已关闭。
	收到电子邮件。
	音频情景模式中的大声功能表。
	音频情景模式中的静音功能表。
	音频情景模式中的耳机功能表。
	音频情景模式中的车内功能表。
	音频情景模式中的标准功能表。
	你可以通过WAP使用Push信息服务。
	查看日程表。
	显示您有新的记录信息。





 
## 显示信息

### 顶部功能表图标

	描 述
	信息
	通话记录
	情景模式
	设定
	呼叫转移
	组织管理器
	附件
	互联网
	SIM服务(该功能视SIM卡和网络服务而定)



## 1. 插入SIM卡

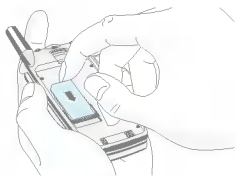


在手机背面查找SIM卡插槽的位置。遵循以下步骤插入SIM卡。

1. 如果装有电池，则先移除电池。
2. 将SIM卡滑入银色弹夹下的插槽中，金色连接器向下，切角向右。


### 注意

 - 安装前请确保手机关机并移除电池。
- SIM卡的金属接触片很容易刮伤。操作和安装过程需要特别小心。请遵循SIM卡安装指南。

## 2. 安装电池

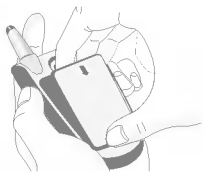

 
1. 将电池置于手机背面。

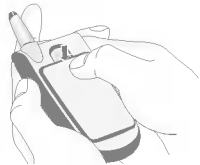


2. 将SIM卡从插槽中小心滑出。

## 3. 给电池充电

 要用旅行充电器为手机充电，您必须先装上电池。

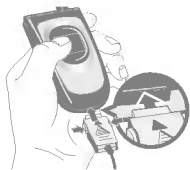

 1. 将旅行充电器的一端插入手机底部。

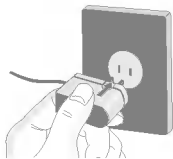

2. 将旅行充电器的另一端连接到墙上的AC电源插座。

**注意：**请只使用由TA-25GC型号的旅行充电器。



### 警告

- 不可强行插入充电接口，因为这将损坏手机和/或旅行充电器。



#### 4. 断开充电器



按充电器适配器两侧的按钮，  
将其与手机断开。

##### 注意

- 更换电池后，记得将已用过的电池充满电。
- 充电时不要移除电池或SIM卡。
- 电池图标的滚动条在完全充电后将停止。


##### 注意

- 电池无法正常充电
  1. 请您使用结束/开关键将手机关机后再尝试充电。
  2. 请您将手机内的电池卸下后再装入，然后尝试充电。

# 开关机顺序

## 1. 开机



1. 按住  键直到听见一声提示音。
2. 取决于要求PIN码设定，您可以输入或不输入PIN码。
3. 如果您的手机连接到网络，则会显示网络名称。

## 2. 关机

在待机模式下，按住  键，直到您听见一声提示音。

您可以使用该节中描述的访问密码来避免他人使用您的手机。可以利用[功能表4-5-4]来更改访问密码(除PUK和PUK2码外)。

### PIN码(4至8位数字)

PIN码(个人识别号码)防止他人在未经授权的情况下使用您的SIM卡。PIN码通常与SIM卡一起提供。当要求PIN码设定为启动时,您的手机每次开机时都会要求您输入PIN码。相反,当要求PIN码设定为关闭时,您的手机则无需PIN码即可直接连接到网络。

### PIN2码(4至8位数字)

某些SIM卡会提供PIN2码,用于访问一些功能,例如:通话费用通知、固定拨打号码。这些功能只有在您的SIM卡支持下才可用。

### PUK码(4至8位数字)

更改锁定的PIN码需要PUK码(私人解锁密码)。PUK码与SIM卡一起提供。否则,请与您的服务提供商联系以索取密码。如果您丢失此密码,请同样与您的服务提供商联系。

### PUK2码(4至8位数字)





某些SIM卡会提供PUK2码,用于更改锁定的PIN2码。如果您丢失了该密码,请同样与您的服务提供商联系。

### 安全密码(4至8位数字)



安全密码可以防止他人在未经授权的情况下使用您的手机。通常与手机一起提供,此密码用于删除所有电话条目和启动恢复初始设定。原始手机安全密码为“0000”。

## 通话中功能表



### 拨打电话

1. 输入电话号码(加上区码)。要修改屏幕上的号码时, 请按 。如果您想删除一个符号, 请按 。
2. 按  键拨打号码。
3. 要结束通话时, 按  键。



### 用 [发送键] 拨打电话

1. 按  [发送键], 您即可查看最近未接、已接及曾拨的电话号码。
2. 选择列表中您要拨打的号码。
3. 按  [发送键]。

### 国际电话

1. 按住  键可输入国际拨号前码。“+”键可取代国际拨号前码。
2. 输入国码、区码和电话号码。
3. 按  键。

### 从电话簿拨号

1. 在待机模式下, 按  键[电话簿]。
2. 当功能表显示的时候, 您可以通过按[选择]来选择**查找**功能。
3. 依姓名或号码搜寻出您要拨号的项目之後, 按  键拨号。

### 快速拨号

请参阅电话簿-快速拨号[功能表6-3-4]的详细说明。



要在电话簿中选择一个功能表，在待机模式下按 **[电话簿]**，然后滚动到所要的项目。您也可以通过组织管理器进入该功能表。

	描 述
1. 查找	允许您查找一个特定的姓名和号码。
2. 添加	添加新姓名。
3. 通话群组	可让您显示群组列表并作选择。您可以编辑其名称，并为每个群组设定铃声、图标。
4. 快速拨号	最多可指定8个 ( <b>[2<sup>nd</sup>]</b> - <b>[9<sup>th</sup>]</b> ) 单键拨号。
5. 设定内存	设定内存并通过变量、姓名和号码查找对象。
6. 全部删除	删除电话簿或SIM卡及手机内存的所有数据。
7. 全部复制	将手机内存中的条目复制到SIM卡或将SIM卡中的条目复制到手机内存。
8. 信息	可以检查内存状态以及本手机号码。





## 菜单结构



### 1 信息

- 1 写信息
- 2 收信箱
- 3 发信箱
- 4 小区广播
- 5 语音信息
- 6 状态报告
- 7 常用短语
- 8 设定



### 2 通话记录

- 1 未接来电
- 2 已接来电
- 3 拨出电话
- 4 清除近期呼叫
- 5 通话计时
- 6 通话计费
- 7 话费设定
- 8 GPRS信息



### 3 情景模式

- 1 振动
- 2 静音
- 3 标准
- 4 大声
- 5 耳机
- 6 车内



### 4 设定

- 1 闹钟
- 2 日期和时间
- 3 手机设定
- 4 通话设定
- 5 保密设定
- 6 网络设定
- 7 GPRS设定
- 8 恢复初始设定



## 5 呼叫转移

- 1 所有语音来电
- 2 正在通话时
- 3 无应答时转移
- 4 无网络或关机
- 5 所有数据来电
- 6 所有传真来电
- 7 取消全部转移



## 6 组织管理器

- 1 日程表
- 2 备忘录
- 3 电话簿



## 7 附件

- 1 游戏
- 2 计算器
- 3 我的文件夹
- 4 单位转换器
- 5 时区设置
- 6 语音录音机
- 7 应答电话
- 8 红外线



## 8 互联网

- 1 主页
- 2 书签
- 3 Push信息
- 4 上网设定
- 5 转到URL
- 6 缓存设定
- 7 WAP信息
- 8 重设定名称



## 9 SIM服务

该功能视SIM卡和  
网络服务而定。





## 信息[功能表1]

该功能表包括与SMS(短信息服务)、语音邮件、及网络服务信息相关的功能。



### 写信息[功能表1-1]

您最多可写入并编辑480个字符的文本信息。此外，您可以在写信息时查看信息的页数。

1. 按  [选择] 进入信息功能表。
2. 如果您想编写新信息，在功能表中选择写信息。
3. 输入信息。
4. 当您写完信息后，按  [选项]。接下来，手机屏幕将显示下列选项。

### 发送

发送文本信息。

1. 输入信息接收方的手机号码。
2. 按  [确定]。如果您不想发送，则按  [返回]。

### 保存

将信息储存到发信箱中。

如果信息保存到发信箱，按  [选择]。

### 用常用短语

您可以添加手机中已设定了的常用短语。



## EMS服务

您的网络必须支援此服务，您才能使用EMS。

## 附加图片

如果您想在发送信息时附加图片，您可以通过EMS选择。

## 附加动画

如果您想在发送信息时附加动画，您可以通过EMS选择。此外，您可以从15种动画中选择想要的一种。

## 附加声音

如果您想在发送信息时附加声音，您可以通过EMS选择。

### 注意

- 因为G7030手机与其它手机未必兼容，您可能无法利用EMS收发讯息。

## 添加号码

当您输入信息时，您可以插入存储在SIM卡或手机的电话本中的电话号码。如果这一号码是存在手机中的，您还可以选择插入家庭电话、公司电话。





## 信息[功能表1]


### eZi字典

您可添加、删除及修改eZi字典内的字辞。如果您将字辞储存在字库内，它的优先顺序将比其它字辞高。

#### • 如何将文字加入字库中

1. 翻阅功能表以标示出eZi字典。
2. 若字库内尚未储存任何文字，屏幕上会出现<无记录>的讯息。当您将一个文字存入字库后，即可看到一个文字表。
3. 按  [添加] 键。
4. 输入一个词之后，按  [确定]。

#### • 如何删除字库中的文字

1. 翻阅功能表以标示出eZi字典。
2. 选择您要删除的文字，然后按  [选项]。
3. 选择删除功能表。

#### • 如何编辑字库中的文字

1. 翻阅功能表以标示出eZi字典。
2. 选择您要修改的文字，然后按  [选项]。
3. 选择编辑功能表。



## 如何使用eZi文本

eZi文本模式可让您快速简单地输入文字。只要每个字符按键一次，即可得到想要的文字。因此，您无需输入所有字符以组成一个字。

### • 如何改变模式

共有4种模式。**eZi**模式、数字模式、字母大写模式、字母小写模式。您可以按 改变并选择其中一种编辑模式。

### 1. 如何使用eZi模式

1. 按 [选择] 选择信息。
2. 按 [选择] 滚动到写信息。
3. 在eZi文本模式中，您只要按键盘上标有字符的键。此外，您可以按 键加入空格。
4. 写完信息后，按 [选项]。



### 示例

- 要输入“Tomorrow”，您只要按顺序按 → → → → 。

### 注意



1. 您可是通过 键改变语言。
2. 一旦您在信息中输入一个字母， 键会变成“更改”。

此时您可以通过 [更改] 来接换字母的大小写。


例如：You→you→y. o. u→Y. O. U→YOU。



## 信息[功能表1]

### 2. 如何使用数字模式





您可以使用该模式输入数字，或按  键更改为其它模式。

### 3. 如何使用字母模式

字母模式中有两种子模式。您可以使用  键更改子模式。



#### 注意

1. 如果您想加入空格，按  。
2. 要删除字母，使用  键。



## 「ㄩㄥ」输入法

### 1) 笔划(ST)：如何使用笔画来输入汉字

随着您逐一地输入汉字笔划，一系列汉字将显示出来。使用 **[\*]** 和 **[#\*]** 键查看其它汉字选项，并按 **[0 选]** 选择一个汉字。同时，使用 **[C]** 和 **[D]** 键查找更多汉字。

例如：要输入‘你好’，依次按数字键 **[3 ㄥ]**，**[2 ㄩ]**，**[3 ㄥ]**；然后您将可以看到第四个字‘你’。按 **[#\*]** 键移动光标，再按 **[0 选]** 按钮选择‘你’，然后该字后面将显示可能出现的第二个字。另外，您也可以从最开始便一笔一划地输入来查找汉字。

按键	笔划	按键	笔划
<b>[1 ㄥ]</b>	一	<b>[6 ㄩ]</b>	丿
<b>[2 ㄩ]</b>	丨	<b>[7 ㄥ]</b>	㇇
<b>[3 ㄥ]</b>	丿	<b>[8 ㄩ]</b>	?
<b>[4 ㄩ]</b>	㇇	<b>[9 ㄥ]</b>	㇇
<b>[5 ㄥ]</b>	㇇	<b>[0 选]</b>	选择键

#### 注意

- **[8 ㄩ]** 键可以帮助用户在输入第一划后直接查找所需汉字。因此，如果您输入第一划后按 **[8 ㄩ]** 键，您将可以从屏幕上显示的完整汉字列表中选择一个汉字。



 




## 信息[功能表1]

### 2) 拼音(PY)：如何使用拼音选择汉字。

‘拼音’可以根据汉字对应的英文字母发音查找汉字。

拼音：在您输入第一个拼音字母后，它可以帮助您直接查找汉字。





例如：要输入‘国民’，依次按数字键  和 ，屏幕上将显示‘guo’的拼音。选择‘guo’后，将出现具有此发音的所有汉字。然后您可以从中选择‘国’。继而将出现多个可能接在国之后的汉字。使用  键选择‘民’。

按键	英文字母	按键	英文字母
			MNO
	ABC		PQRS
	DEF		TUV
	GHI		WXYZ
	JKL		选择键

<汉语拼音表>



## 收信箱[功能表1-2]

当您收到文本信息时， 符号将显示在屏幕上。您可以将它保存在接收的信息列表中。滚动 、 选择想要的信息，您可以选择列表下方的全部删除来删除所有接收的信息。读取信息后，按  [选项] 访问可用选项。

### 回复[功能表1-2-1]

如果您按  [选择]，则可以发送信息回复发送者。

### 转发[功能表1-2-2]

如果您按  [选择]，则可以将所选信息转发给第三方。

### 删除[功能表1-2-3]

如果您按  [选择]，则可以删除信息。

### 保存号码[功能表1-2-4]

如果信息附有电话号码，您可以提取电话号码并将它保存在电话簿中。同样，您也可以通过该号码呼叫对方。

### 保存附件[功能表1-2-5]

您可以保存诸如图片、声音和动画之类的附件。（只有当有附件时，此选项才显示出来。）






### 回复电话[功能表1-2-6]

您可以按  [发送] 回复发送者电话。



## 信息[功能表1]

### 发信箱[功能表1-3]

进入该功能表时，您可以看到发出的信息列表。您可以滚动 、 选择想要的信息，并按  [选择] 读取。如果您想退出发信箱功能表，按  [返回]。此外，您可以选择列表底部的全部删除来删除所有发出的信息。读取信息后，按  [选项] 访问以下子功能表。

### 转发[功能表1-3-1]

您可以将信息转发给第三方。

### 删除[功能表1-3-2]

您可以删除信息。

### 保存号码[功能表1-3-3]

如果信息附有电话号码，您可以提取电话号码并将它保存在电话簿中。同样，您也可以通过该号码呼叫对方。

#### 注意

- 如果您输入数字时隔开，接收方可以分别查看。例如：在示例“12345 67890”中，该号码将在发信箱中显示为 1, 12345 2, 67890



## 小区广播[功能表1-4]

小区广播信息（CB信息）是网络向手机用户提供的文本信息。他们提供大众信息，例如，天气预报、交通新闻、出租车信息、药品信息和股票价格。每种信息类型都配有一个号码；因此，您可以与服务提供商联系。当您接收到CB信息时，您可以按以下顺序读取：

### 接收[功能表1-4-1]

- 是

如果您选择该功能表，您的手机将接收小区广播信息。




- 否

如果您选择该功能表，您的手机将不再接收小区广播信息。

### 收信箱[功能表1-4-2]

您可以读取和删除收到的CB信息。

### 栏目[功能表1-4-3]

如果您想创建新栏目，按  [选择]。然后，您可以按  [选择] 选择新栏目。如果您已经拥有栏目，您可以按  [选项] 以进行删除、编辑和启动。

### 来信提示[功能表1-4-4]

- 开启

如果您选择该功能，当您收到小区广播信息时，手机会发出一声蜂鸣声。

- 关闭

如果您选择该功能表，尽管您收到小区广播信息，您的手机也不会发出蜂鸣声。



## 信息[功能表1]

### 自动显示[功能表1-4-5]

当您收到CB信息时，将在窗口中自动显示。您可以滚动 、 来读取。


- 开启

信息将自动显示在窗口。

- 关闭

信息不会自动显示在窗口。

### 语言[功能表1-4-6]（视网络而定）

您可以按  [选择] 选择语言。然后，团体广播将以您所选的语言显示。如果您使用手机支持的所有语言，选择列表底部的自动。

### 语音信息[功能表1-5]

#### 听取语音信息[功能表1-5-1]

通过该功能表，您可以听取您的语音信息。如果SIM卡或手机中已存有语音邮件中心地址，您的手机将自动连接。否则，手机将要求您输入地址。

#### 语音信箱号码[功能表1-5-2]

您可以输入语音信箱地址号码。

### 状态报告[功能表1-6]

您可以读取和删除信息报告。



## **常用短语[功能表1-7]**

您可以在列表中查看10条预设信息。您可以在编辑前查看10条已保存在列表中的常用短语。其余为<空>。您可以添加新的常用短语。

### **编辑[功能表1-7-1]**

您可以编辑常用短语。

### **删除[功能表1-7-2]**

您可以删除常用短语。

### **发送[功能表1-7-3]**

您可以发送包含常用短语的文本信息。

## **设定[功能表1-8]**

### **短信中心号码[功能表1-8-1]**

您可以输入短信中心地址。

### **信息类型[功能表1-8-2]**

文本、语音、传真、传呼、X400、电子邮件、ERMES

通常，信息类型设定为文本格式。您可以将文本信息转换为其它格式，以配合接收信息的设备。要获取有关该功能的信息，请与您的服务提供商联系。

### **信息有效期[功能表1-8-3]**

该网络服务可让您设定发送给您的文本信息在信息中心的储存期限。



## 信息[功能表1]

### 状态报告[功能表1-8-4]

如果您在该功能表中设定是，您即可查询您的信息是否已成功发送。

### 回复付费[功能表1-8-5]

发送信息时，可以让接收信息者回复并将回复费用记入您的话费清单。

### 内存状态[功能表1-8-6]

如果您选择该功能表，您将可查看已用内存和内存总量。内存总量是SIM卡和手机内存之和。



如果您的网络在服务区内支持呼叫线路识别，您可以查询未接来电、已接来电和拨出电话的记录。

在未接来电、已接来电和拨出电话选项中，您可以：

- 拨打该号码。
- 将号码保存在手机中。
- 查看通话日期和时间。
- 修改、删除列表中的号码，或将它保存在手机中。

### **未接来电[功能表2-1]**

该功能表显示最近的已接的电话。您可以拨打该号码，也可以保存及查看日期和时间。

### **已接来电[功能表2-2]**

该功能表显示最近的已接的电话。您可以拨打该号码，也可以保存及查看日期和时间。

### **拨出电话[功能表2-3]**

该功能表显示最近拨打的电话。您可以拨打该号码，也可以保存及查看日期和时间。

**各目录中的子目录：**

#### **查看详细内容**

您可以查看未接来电、已接来电或拨出电话的细节。

#### **删除**

您可以删除电话号码的记录。





## 通话记录[功能表2]

### 保存

您可以储存拨出号码的资料。

### 呼叫

您可以拨打这个号码。

### 查看其它号码

您可以查看存在电话簿中的电话号码。

### 写信息

您可以给该号码发送一条信息。

### 清除近期呼叫[功能表2-4]

这一功能允许您删除未接、已接或拨出的电话列表。您也可以一次删除所有的呼叫列表。

### 通话计时[功能表2-5]

该功能表可让您查看最后通话、所有通话、已接来电和拨出电话的确切持续时间。您也可以将通话计时器清零。

### 最后通话[功能表2-5-1]

如果按  [重置]，您可删除最后通话时间。

### 已接来电[功能表2-5-2]

如果按  [重置]，您可删除已接来电时间。您需要输入安全密码。

### 拨出电话[功能表2-5-3]

如果按  [重置]，您可以删除拨出电话时间。您需要输入安全密码。



### **所有通话[功能表2-5-4]**

如果按  [重置]，您可以删除最后通话/已接来电/拨出电话时间。您需要输入安全密码。

### **通话计费[功能表2-6]**

在这些子功能表中，您可以查看通话持续时间和通话费用。

#### **最后通话费用[功能表2-6-1]**

该功能可让您查看最后通话费用。您需要输入PIN2码。

#### **所有通话费用[功能表2-6-2]**

该功能表可让您查询最后通话、所有通话的费用，余额并将费用清零。要将费用清零，您需要PIN2码。

#### **注意**

- 您的服务提供商所收取的实际通话费用可能会因网络功能、金额四舍五入和税收等而有所不同。

### **话费设定[功能表2-7]**

#### **通话费用限制[功能表2-7-1]**

该网络服务可让您按照计费单位或货币单位限制通话费用。如果您选择剩余金额，待机模式下将显示费用。只要未超过特定通话费用，您即可拨打或接听电话。



## 通话记录[功能表2]

### 设定费率[功能表2-7-2]

手机可以更改费用单位和货币名称。请联系您的服务提供商以获取单位价格。该功能表中，您可能需要PIN2码来选择货币或单位。

### 自动显示[功能表2-7-3]

当该项设定为开启时，待机模式下将显示提示费用。通话结束时，将显示最后通话费用。

### GPRS信息[功能表2-8]

您可查询已在GPRS网络传送的数据量。而且，您亦可查看网上连接时间。

1. 按 [确定] 或 [选择] 键。
2. 移动光标到您想查询的资料。选择包括如下：

### WAP信息[功能表2-8-1]

您可以查看使用WAP期间的数据量和在线时间。

- 上一次量[功能表2-8-1-1]
- 总量[功能表2-8-1-2]

### 外部设备[功能表2-8-2]

您可以查看使用外部设备（例如串口）而产生的GPRS传输数据量和在线时间。


 
### 全部数据[功能表2-8-3]

您可以查看透过WAP和外置式设备传输的总数据量。

## 情景模式[功能表3]



在该功能表中，您可以为不同事件、环境和来电群组调节并定制电话提示音。（例如：如果您在汽车内，可以选择车内情景模式）

1. 待机模式下，按  [功能表]。
2. 按  直接进入情景模式。

### 振动[功能表3-1]

#### 启动

如果您需要振动模式，可以将情景模式调节为**振动**。

### 静音[功能表3-2]

#### 启动[功能表3-2-1]

如果您在安静的场所，可以将情景模式调节为**静音**。

#### 个性化[功能表3-2-2]

您可以改变音频情景模式子功能表的设定类型。

### 标准[功能表3-3]

#### 启动[功能表3-3-1]

如果您需要普通模式，可以将情景模式调节为**标准**。

#### 个性化[功能表3-3-2]

您可以改变音频情景模式子功能表的设定类型。



## 情景模式 [功能表3]

### 大声 [功能表3-4]

#### 启动 [功能表3-4-1]

如果您处于嘈杂的环境中，可以将情景模式调节为大声。

#### 个性化 [功能表3-4-2]

您可以改变音频情景模式子功能表的设定类型。

### 耳机 [功能表3-5]

当您戴上耳机时，可以将情景模式调节为耳机。

#### 个性化

您可以改变音频情景模式子功能表的设定类型。

### 车内 [功能表3-6]

当您启动免提车用组合时，可以调节该情景模式。

#### 个性化

您可以更改情景模式子功能表的设定类型。

### 一组个性化子功能表 [功能表3-x-x]

个性化功能表的子功能表如下所示。

#### 来电提示 [功能表3-x-x-1]

允许您设来电提示的类型以适应不同的环境。

响铃、振动、响铃并振动、振动后响铃、关闭。

#### 铃声类型 [功能表3-x-x-2]

根据不同环境设定铃声类型。



### 铃声音量[功能表3-x-x-3]

根据不同环境设定铃声音量。

### 短信提示[功能表3-x-x-4]

当收到信息时，根据不同环境发出提示音：响铃一次、定期响铃、振动、响铃并振动、关闭。

### 信息提示铃声[功能表3-x-x-5]

当收到信息时，根据不同环境设定信息提示音。

### 按键音量[功能表3-x-x-6]

根据不同环境设定按键音量。

#### 注意

##### 自动应答

- 该功能只有在您的手机连接到免提车用组合或耳机时启动。
  - 关闭：即使您的手机发出响铃，它也不会自动应答。
  - 5秒后：5秒后您的手机会自动应答。
  - 10秒后：10秒后您的手机会自动应答。



## 设定[功能表4]

### 闹钟[功能表4-1]

在该功能表中，您可以设定手机在规定时间内发出闹铃。

#### • 开启

您可以设定启动闹铃的时间[小时和分钟]。

1. 进入功能表
2. 按  $\{\text{C}\}$ 、 $\{\text{D}\}$  选择开启。
3. 如果您想设定启动闹铃的时间，按  $\{\text{C}\}$ 、 $\{\text{D}\}$ 。
4. 按  $\{\text{C}\}$ 、 $\{\text{D}\}$  选择重复周期：一次、每天、每周和每月。
5. 按  $\square$  [设置]。您将会看到提示信息“设定闹钟”。

#### • 关闭

您可以取消闹铃时间。

1. 进入功能表。
2. 按  $\{\text{C}\}$ 、 $\{\text{D}\}$  选择关闭。
3. 您将会看到提示信息“关闭闹钟”。

### 日期和时间[功能表4-2]

手机自身拥有时钟。在该功能表中，您可以设定时间格式为12小时或24小时。

#### 设定时间[功能表4-2-1]



在该功能表中，您可以设定手机时间。

1. 按  $\square$  [选择] 选择设定时间。
2. 输入您想要设定的时间。
3. 按  $\square$  [设置]。





### 时间格式[功能表4-2-2]

您可以选择时间格式为12小时或24小时。

1. 按  [选择] 滚动到突出显示的时间格式。
2. 按  [选择] 选择您想要的12小时或24小时格式。

### 设定日期[功能表4-2-3]

在该功能表中，您可以设定手机日期。

1. 进入功能表。
2. 按  [选择] 选择设定日期。
3. 输入您想要的日期。
4. 按  [设置]。

### 日期格式[功能表4-2-4]

在该功能表中，您可以设定日期格式。

- 年/月/日
- 日/月/年
- 月/日/年

### 手机设定[功能表4-3]

您可以按需要完成手机设定。滚动屏幕到手机设定功能表，然后按  [选择]。

### 语言[功能表4-3-1]

该功能表可让您选择文本显示使用的语言。





## 设定[功能表4]

### 墙纸[功能表4-3-2]

您可以按  $\{\text{C}\}$ 、 $\{\text{D}\}$  选择一张图片。

### 外屏[功能表4-3-3]

您可以为外屏设置不同的功能。

- **个性化显示[功能表4-3-3-1]**  
您可以设置图案。
- **活动时间[功能表4-3-3-2]**  
您可以设置屏幕滚动的时间间隔。
- **字体颜色[功能表4-3-3-3]**  
您可以设置外屏上字体的颜色。

### 背景灯[功能表4-3-4]

您可以设定按键时或打开翻盖时背景灯开启的时间长度。

### 屏幕对比度[功能表4-3-5]

您可以通过按  $\{\text{C}\}$ 、 $\{\text{D}\}$  设定需要的LCD亮度。

### 通话设定[功能表4-4]

在设定功能表中，您可以按  $\{\text{C}\}$  [选择] 设定和通话相关的功能表。

### 接听模式[功能表4-4-1]

- **翻盖接听[功能表4-4-1-1]**  
如果您选择该功能表，仅需打开手机折叠盖便可接听来电。



- **任意键接听[功能表4-4-1-2]**

如果您选择了这一功能，您可以按除了 ， 外的任意键来接听来电。

- **仅发送键接听[功能表4-4-1-3]**

如果您选择了这一功能，您只能通过按[发送]键来接听来电。

### **发送本机号码[功能表4-4-2]**

(需要网络支持及预先注册)

设定该功能后，您可以将手机号码发送给第三方。

- **通过网络设定[功能表4-4-2-1]**

如果您选择该功能，您可以根据两条服务线路，例如，线路1或线路2，发送您的手机号码。

- **开启[功能表4-4-2-2]**

如果您选择该功能，您可以将手机号码发送给第三方。即，接收方手机上将显示您的手机号码。

- **关闭[功能表4-4-2-3]**

如果您选择该功能，您将不能发送您的手机号码。



## 设定[功能表4]

### 呼叫等待[功能表4-4-3]

如果启用该服务，您可以接收待接来电。如果关闭该服务，您则不能识别待接来电。

- **启动[功能表4-4-3-1]**  
启动相应服务。
- **取消[功能表4-4-3-2]**  
取消相应服务。
- **查看状态[功能表4-4-3-3]**  
查询服务状态。

### 自动重拨[功能表4-4-4]

- **开启[功能表4-4-4-1]**  
如果启动该功能，您的手机会在拨号无法接通后自动重拨10次。
- **关闭[功能表4-4-4-2]**  
您的手机不会在未接通后重拨。

### 分钟提示[功能表4-4-5]

如果您选择开启，可以在通话期间通过每分钟的蜂鸣声检查通话时间。



### 线路选择[功能表4-4-6]

该功能只有在服务提供商支持双线路服务时使用。手机需要注册两个独立的号码。由您选择当前使用的手机号码。如果您的服务提供商支持该功能，会显示下列功能表。

1. **线路1**：选择线路1作为当前的手机号码。
2. **线路2**：选择线路2作为当前的手机号码。

#### 注意

- 如果您在不支持双线路服务的范围内选择线路2，您将无法拨打电话。

### 封闭用户群组[功能表4-4-7]

(视网络而定)

使用该功能可以限制手机拨打属于某个用户组群的号码。当使用该功能时，每个拨出电话会联接一个组群目录。如果已经指定一个组群目录，它将适用于所有拨出电话。如果没有指定组群目录，网络会使用优先目录(一个储存在网络中的特定目录)。

**预设**：设定所选的封闭用户群组目录。

**开启**：启动并编辑封闭用户群组名称和封闭用户群组目录。

**关闭**：删除所选的封闭用户群组。








## 设定[功能表4]

### 保密设定[功能表4-5]

#### 要求PIN码[功能表4-5-1]

在该功能表中，您可以设定手机在开机时是否要求输入SIM卡PIN码。如果启动该功能，手机开机时将要求您输入PIN码。

1. 在待机模式下按  [功能表]。
2. 按  键直接进入或使用  和  进入设定。
3. 滚动到突出显示的**保密设定**功能表。
4. 按  [选择]选择要求PIN码。
5. 您可以查看以下子功能表。
  - 启动：启动PIN码要求。
  - 关闭：关闭PIN码要求。

#### 呼叫限制[功能表4-5-2]

(视网络而定)

呼叫限制服务可以防止您的手机拨打或接听某种电话。该功能需要呼叫限制密码。您可以查看以下子功能表。

- **所有拨出电话[功能表4-5-2-1]**  
所有拨出电话的限制服务。
- **拨打国际长途[功能表4-5-2-2]**  
所有拨出的国际电话的限制服务。
- **国际漫游电话[功能表4-5-2-3]**  
您可以禁止国际漫游时拨打电话。
- **所有来电[功能表4-5-2-4]**  
所有来电的限制服务。



- **漫游时来电[功能表4-5-2-5]**  
您可以禁止您在国际漫游时打入的电话。
- **所有数据来电[功能表4-5-2-6]**  
您可以限制所有数据来电。
- **所有传真来电[功能表4-5-2-7]**  
您可以限制所有传真来电。
- **所有呼叫限制取消[功能表4-5-2-8]**  
您可以取消所有通话限制服务。

#### 呼叫限制服务子功能表

- **启动[功能表4-5-2-x-1]**  
如果您向服务提供商申请呼叫限制服务，即可使用。
- **取消[功能表4-5-2-x-2]**  
您可以取消该功能。
- **查看状态[功能表4-5-2-x-3]**  
您可以查询呼叫限制服务的当前状态。

#### 注意


 




- 如要使用通话限制服务，您必须输入网络密码。



## 设定[功能表4]


 




### 固定拨号[功能表4-5-3] (视SIM卡而定)

您可以限制拨打所选的电话号码。这些号码由PIN2码保护。

1. 在待机模式下按  [功能表]。
2. 按  键直接进入或使用  和  进入设定。
3. 滚动到突出显示的**保密设定**功能表。
4. 按  [选择]选择固定拨号。
5. 输入PIN2码，然后按  [确定]。
6. 如果PIN2码正确，您可以查看以下子功能表。
  - 启动 : 您可以限制拨打所选的电话号码。
  - 关闭 : 您可以不限制号码拨打电话。
  - 固定拨号 : 您可以查看固定拨号并添加、编辑、删除。

### 更改密码[功能表4-5-4]

您可以更改访问密码：PIN、PIN2、安全性密码、限制密码。

1. 在待机模式下按  [功能表]。
2. 按  键直接进入或使用  和  进入设定。
3. 滚动到突出显示的**保密设定**功能表。
4. 按  [选择]选择更改密码。
5. 如果您想更改安全密码/PIN/PIN2/限制密码，按  [确定]。
6. 输入新的安全密码/PIN/PIN2/限制密码（需网络支持）。

### 网络设定[功能表4-6]

您可以选择能够自动或手动注册的网络。通常，网络选择设定为自动。

#### 自动[功能表4-6-1]

手机会自动选择在您区域内的可用网络。



## 手动[功能表4-6-2]

手机会找到可用的网络列表并显示出来。然后您可以选择您想使用的网络，前提是该网络与您本地网络运营商有漫游协议。

## GPRS设定[功能表4-7]

当您使用GPRS接驳互联网时，您可建立数据通讯。为能使用GPRS，您必须先设定以下选项：

### 连接类型[功能表4-7-1]

- 双重服务[功能表4-7-1-1]
- 只适用GPRS[功能表4-7-1-2]
- 只适用GSM[功能表4-7-1-3]

### 接收GPRS传输[功能表4-7-2]

- 自动[功能表4-7-2-1]
- 手动[功能表4-7-2-2]

### 外部设备[功能表4-7-3]

当您利用外置式设备透过GPRS使用互联网时，您可以设定包含APN、IP地址、DNS、使用者ID和密码设定的5组上网设定。网络亦可能会提供您这些资讯。

## 恢复初始设定[功能表4-8]

您可以通过选择恢复初始设定选项将手机恢复为预设配置，然后确认该项选择。另外，要启动该功能，您需要保密码。


 






## 呼叫转移 [功能表5]

(需网络支持)

呼叫转移服务可让您将语音来电、传真来电和数据来电转移到其它号码。要获取更多信息，请联系您的服务提供商。

1. 在待机模式下按  [功能表]。
2. 按  直接进入或使用 { 和 } 进入呼叫转移。

### 所有语音来电 [功能表5-1]

无条件转移语音来电。

### 正在通话时 [功能表5-2]

手机正在通话时转接语音来电。

### 无应答时转移 [功能表5-3]

无人接听时转接语音来电。

### 无网络或关机 [功能表5-4]

手机关机或不在服务区时转接语音来电。

### 所有数据来电 [功能表5-5]

无条件转接到与PC连接的号码。

### 所有传真来电 [功能表5-6]

(需网络支持)

无条件转接到与传真连接的号码。



## **子功能表[功能表5-x-x]**

呼叫转移功能表的子功能表，如下所示。

### **启动[功能表5-x-1]**

启动相应的服务。

- **转到语音信箱**

转发到信息中心。该功能不包括在所有数据来电和所有传真来电功能中。

- **其它号码**

输入接受转移呼叫的电话号码。

- **收藏号码**

您可以查询最近使用过的被转移号码。

### **取消[功能表5-x-2]**

关闭相应服务。

### **查看状态[功能表5-x-3]**

查看相应服务的状态。

### **取消全部转移[功能表5-7]**

取消所有呼叫转接服务。



## 组织管理器 [功能表6]

### 日程表 [功能表6-1]

当您进入该功能表后会出现一个日历。屏幕顶端是日期和图标的部分。您可以通过按 [C、D] 键更改日、月和年。如果您更改日期，日历会按照日期更新。方形光标将定位于某天。如果某天显示为不同的颜色，即代表当天有一个对应的日程表。该功能可以提醒您记住您的日程表、纪念日和这天该做什么。如果您设定了日程表，您可以看到以下子功能表。

#### 编辑 [功能表6-1-1]

您可以在所选日期上添加提示，也可以更改该日期。

#### 删除 [功能表6-1-2]

您可以删除已设定的提示。

#### 添加 [功能表6-1-3]

您最多可以添加30条提示，每条最长为30个字符。

#### 查看所有日程表 [功能表6-1-4]

显示所有日程表中设定的提示。

#### 查看日期 [功能表6-1-5]

您可以查询已经输入了的日期。

### 备忘录 [功能表6-2]

1. 将光标滚动到备忘录。
2. 按 [选择]。
3. 输入一条备忘录，然后按 [保存]。
4. 您可以查看以下子功能表。

#### 编辑 [功能表6-2-1]

您可以编辑所选备忘录。



### 添加[功能表6-2-2]

您最多可以添加20个备忘录，每个备忘录最多40个字符。

### 删除[功能表6-2-3]

您可以删除所选备忘录。

### 全部删除[功能表6-2-4]

您可以删除以前设置的所有备忘录。








## 电话簿[功能表6-3]

您可以创建个人电话簿，将电话号码和相应姓名保存在其中。

拨打电话的简便方法是拨打手机中保存的电话号码和姓名。

### 查找[功能表6-3-1]

(从电话簿呼叫)

1. 首先，在待机模式下按  [电话簿] 打开电话簿。您也可以滚动 、 进入电话簿。
2. 按  [选择] 进入查找。
3. 您可以通过姓名来查找号码。
4. 选择  [列表]。
5. 如果您想编辑、查看、删除、复制和呼叫号码，选择  [选项]。将显示以下功能表。
  - 编辑 : 您可以按  [选择] 来编辑姓名、号码、电子邮件和传真。
  - 查看详细内容 : 您可以查看姓名和号码的详细内容。
  - 删除 : 您可以删除条目。
  - 保存至SIM/手机 : 您可以将记录从SIM卡复制到手机或从手机复制到SIM卡。



## 组织管理器 [功能表6]

- 呼叫 : 您可以呼叫所选记录的电话号码。
- 写信息 : 您可以发送短信到该号码。

### 添加 [功能表6-3-2]

通过这个功能表您可以向电话簿中添加记录, 手机中有两种内存: 电话内存和SIM卡内存。您可以在 [功能表6-3-5] 中选择您要使用的内存。电话内存中可以存储255条记录。每一个条目的名字最多可以是20个英文字母或者10个中文汉字。SIM卡存储记录的能力要视SIM卡而定。

1. 首先, 在待机模式下按 [电话簿] 打开电话簿。您也可以滚动 、 转到电话簿功能表。
2. 滚动屏幕以突出显示添加并按 [选择] 进入。
  - **SIM卡:** 您可以添加条目的姓名和号码。
    - a. 输入要添加的姓名。
    - b. 按 , 然后输入号码。
    - c. 按 , 然后选择群组。
    - d. 按 [保存]。
  - **手机:** 您可以添加姓名、手机号码、家庭电话号码、公司电话号码、电子邮件地址、群组和备忘录。
    - a. 输入要添加的姓名。
    - b. 按 。
    - c. 按 输入以下手机号码、家庭电话、公司电话、电子邮件地址。您也可以按 选择一个群组并输入备忘录 (最长50个字符)。
    - d. 按 [保存]。



### 通话群组[功能表6-3-3]

您可以设定6个群组列表和其它。

1. 在待机模式下按 [电话簿] 进入电话簿。
2. 滚动到通话群组对象，然后按 [选择] 进入该功能表。
3. 将显示每个群组列表：家属、贵宾、朋友、同事、群组1、群组2、其他。
4. 按 [选项] 选择要管理的群组名称。
5. 然后将显示除其他外的下列子功能表。

- **成员列表**

您可以编辑，复制或者呼叫群组中的成员。

- **名称**

您可以修改群组名称。

- **群组铃声类型**

您可以选择每个群组的铃声。

- **群组图标**

您可以选择每个群组的图标。

### 快速拨号[功能表6-3-4]

您可以为姓名列指定 按键 - 中的任一键。长按2-3秒即可直接呼叫。

1. 首先在待机模式下按 [电话簿] 打开电话簿。您也可以滚动 、 进入电话簿。
2. 滚动到快速拨号，然后按 [选择] 进入该功能表。
3. 将显示每个快速拨号。
4. 如果您想添加快速拨号，选择<空>。然后，您可以在电话簿中查找姓名。



## 组织管理器 [功能表6]

5. 如果您选择快速拨号指定的姓名，您可以查看下列子功能表。
  - 更改：您可以更改指定的快速拨号。
  - 删除：您可以删除指定的快速拨号号码。

### 设定内存 [功能表6-3-5]

您可以设定首选内存，包括SIM卡或手机。

1. 首先，在待机模式下按 [电话簿] 打开电话簿。
2. 滚动到设定内存，然后按 [选择] 进入。
3. 然后将显示下列子功能表。
4. 选择SIM卡或手机，然后按 [选择]。

### 全部删除 [功能表6-3-6]

您可以删除SIM卡、手机中的所有条目。该功能需要保密码。

1. 在待机模式下按 [电话簿] 进入电话簿。
2. 滚动到全部删除，然后按 [选择]。
3. 然后选择要清除的内存：SIM卡、手机。
4. 然后您将被要求输入保密码。
5. 按 [结果]，或按 [返回] 取消。

### 全部复制 [功能表6-3-7]

您可以将条目从SIM卡内存复制/移动到手机内存或从手机内存复制/移动到SIM卡内存。

1. 首先，在待机模式下按 [电话簿] 打开电话簿。
2. 滚动到全部复制，然后按 [选择] 进入该功能表。
3. 然后将显示下列子功能表。
  - 从SIM卡转到手机 [功能表6-3-7-1]  
将SIM卡中的记录复制到手机内存。



- **从手机转到SIM卡[功能表6-3-7-2]**

将手机内存中的记录复制到SIM卡。

- **保留原有记录[功能表6-3-7-x-1]**

所有原有记录和重新定位的记录都将保存在内存中。

- **删除原有记录[功能表6-3-7-x-2]**






删除原有记录，将重新定位的记录保存在内存中。

## 信息[功能表6-3-8]

您可以选择查询内存和本手机号码列表。






- **服务号码**

使用该功能访问您的网络提供商提供的特殊服务列表（如果SIM卡支持）。

1. 首先，在待机模式下按  [电话簿] 打开电话簿。
2. 滚动到信息的服务拨号，然后按  [选择] 进入。
3. 将显示可用服务的名称。
4. 使用 、 选择一个服务，按  [发送]。

- **内存状态**

该功能可让您查看电话簿的可用内存和已用内存。

1. 首先，在待机模式下按  [电话簿] 打开电话簿。您也可以滚动 、 转到电话簿功能表。按  [选择] 选择信息。
2. 滚动到查询内存状态，然后按  [选择] 进入该功能表。

- **本机号码(需SIM卡支持)**

您可以通过SIM卡上查询本手机号码。

如果本手机号码为空，您可以添加新号码。您也可以修改和删除号码。













## 附件[功能表7]

### 游戏[功能表7-1]

您的手机为您提供了两款游戏。

### 计算器[功能表7-2]

该功能表包含的标准功能包括：+、-、×、÷：加、减、乘、除。

1. 通过按数字键输入数字。
2. 使用 、、、 选择计算符号。
3. 然后在符号后输入数字。
4. 再按  [结果] 键或  [确定] 键查看计算结果。
5. 如果您想继续计算，重复上述步骤。
6. 使用  [重设] 键清除所有数字或符号。如果您想结束计算过程，按  键。

### 我的文件夹[功能表7-3]

你可以查看，删除以及处理下载的内容。

#### 图片[功能表7-3-1]

#### 动画[功能表7-3-2]

#### 声音[功能表7-3-3]

#### 每一个主要目录的子功能表[功能表7-3-x-x]

- 编辑主题 [功能表7-3-x-1]

你可以查看，删除以及处理下载的内容。

- 删除 [功能表7-3-x-2]

您可以删除某一个下载内容。









 

 


- 全部删除 [功能表7-3-x-3]

您可删除所有下载内容。






## **单位转换器[功能表7-4]**

该功能可将任何单位转换为您需要的单位。有4种可以转换的单位类型：**长度、面积、重量和体积。**

1. 您能通过  [单位] 键选择四种单位类型中的一种, 您也可以使用 、 移动光标然后通过 、 选择单位类型。
2. 通过 、 设置当前需要转换的值, 然后通过 、 选择当前的单位。
3. 通过 、 选择被转换成的单位。
4. 在空格中输入数字。
5. 如果您想退出, 可以按  或  [返回]。

## **时区设置[功能表7-5]**

您可以查看世界各个城市的时间, 也可以设定当前时间为所选的城市时间。

1. 按 、 选择某时区内的一个城市。
2. 您可以设定当前时间为所选的城市时间。按  [返回] 键退出功能表。

## **语音录音机[功能表7-6]**

您可以保存和播放3条语音信息。每条信息最长为30秒。

## **应答电话[功能表7-7]**

您可依据如下不同环境条件激活应答电话功能:

### **取消[功能表7-7-1]**

您可取消此功能。

### **标准[功能表7-7-2]**

如果您激活此项, 主叫用户可听到标准语音向导。

### **会议中[功能表7-7-3]**

如果您激活此项, 主叫用户可听到会议中语音向导。



## 附件[功能表7]

### 正在驾驶[功能表7-7-4]

如果您激活此项，主叫用户可听到正在驾驶语音向导。

### 自定义1/2[功能表7-7-5/7-7-6]

您可记录自己的语音向导。如果您激活此项，主叫用户可听到语音向导。

### 记录信息[功能表7-7-7]

您可查询记录信息。

#### 注意

- 您的手机只能最多存储10条记录信息。  
当您的手机收到10条以上的记录信息时，自动应答功能将不会启动。此时，您应该删除一些信息。

### 响铃时间设置[功能表7-7-8]

您可在应答电话接通来话前设置响铃次数。应答电话可在1次，3次，5次铃音后接听来话。

#### 注意

- 每次当您使用应答电话功能的时候，音频情景模式将自动变为振动。

### 红外线[功能表7-8]

如果您启动该功能，您可以通过红外线使用PC同步。

#### PC同步化(CD)

电脑同步是一个透过数据传输线在电脑与手机之间交换数据的程式。如需更多资讯，请参阅光碟内的电脑同步说明档案。

 


您的手机支持基于无线应用协议(WAP)的服务。您可以访问您的网络运营商所支持的服务。该服务功能表可让您获取有关新闻、天气预报和飞机时刻表之类的信息。

### 主页[功能表8-1]

返回主页。主页可以是所使用的上网设定中定义的网站。如果没有在上网设定中定义，则由服务提供商定义。

### 书签[功能表8-2]

您最多可以保存50个书签。滚动到想要的书签并按  [选项] 键使用下列选项。

- 连接：连接到所选书签。
- 添加：手动保存新书签。
- 编辑：修改所选书签的地址。
- 删除：从书签列表中删除所选书签。

#### 提示

- 如果还没有保存任何书签，则只有“添加”功能表可用。

### Push信息[功能表8-3]

您可以对Push信息功能进行设定和管理收到的Push信息。

#### 收信箱[功能表8-3-1]

你可以读取或删除Push信息。


#### 接收[功能表8-3-2]

你可以设置选项以决定是否接收信息。



## 互联网 [功能表8]

### 上网设定 [功能表8-4]

您最多可以预设5个上网设定，但每次只能启动其中的一个。  
滚动屏幕到所要的上网设定并按  进入可用的选项。

#### 启动 [功能表8-4-1]

启动所选的上网设定。

#### 设定 [功能表8-4-2]

编辑和更改所选上网设定的WAP设置。

- **主页 [功能表8-4-2-1]**

该设定可让您输入您想作为主页使用的网站地址 (URL)。您不需要在每个URL前键入“http://”，因为WAP浏览器会自动加入。

- **显示图像 [功能表8-4-2-2]**

您可以选择是否要显示WAP网页上的图像。

- **连接类型 [功能表8-4-2-3]**

共有两种连接类型。视网关您可以选择使用其中的一种连接类型。

- 自选连接
- 固定连接

- **安全设定 [功能表8-4-2-4]**

该选项可以设定为任意传输或安全传输，视网关而定。需要网关支持此项功能。

- **网关信息 [功能表8-4-2-5]**

大多数的WAP网关不需要用户提供用户名和密码。如果您连接的网关需要用户名或者密码，他们应该由网络运营商提供，而且需要在浏览WAP网站前设置好用户名和密码。

- **连接方式 [功能表8-4-2-6]**

此设置只有在使用GPRS服务时才有用。

- 数据
- GPRS



- 下面功能表[功能表8-4-2-7]中的内容取决于你选择的连接方式。

- **数据设定[功能表8-4-2-7]**

当载体[功能表8-4-2-6]设定为数据时显示该功能表。

**IP 地址** : 输入您所连接的WAP网关的IP地址。

**拨叫号码** : 输入接入WAP网关时所需要的电话号码。

**用户名** : 拨号服务器(不是WAP网关)的用户身份。

**密码** : 拨号服务器(不是WAP网关)识别您身份所需的密码。

**呼叫类型** : 选择数据来电的类型: 模拟或ISDN(数码)。

**连接速度** : 数据连接的速度, 9600或者14400。

- **GPRS设定[功能表 8-4-2-7]**

**IP 地址** : 输入您要登陆的WAP网关的IP地址。

**APN** : 输入连接外部网络的接入点名称。

**用户名** : 在网络接入点认证所需的用户名。

**密码** : 网络接入点认证需要您输入的密码。

- **待机时间[功能表8-4-2-8]**

超过设定的限制时间(30-300秒)后, 如果没有数据传输, 服务连接将自动断开。

### **名称[功能表8-4-3]**

修改上网设定名称。

### **邮件服务器[功能表8-4-4]**

保存您经常使用的电子邮件URL地址。

- **连接**

连接到您配置为电子邮件服务器的URL。

- **修改地址**

输入电子邮件URL地址。



## 互联网[功能表8]

### 转到URL[功能表8-5]

您可直接移至您想要浏览的网站。在此功能表下，您也可以修改网址。

### 缓存设定[功能表8-6]

您可以删除缓存内容或更改缓存模式。

#### 清除缓存[功能表8-6-1]

缓存内容将被清除。

#### 缓存查询[功能表8-6-2]

您可以查询缓存。

- 经常查询[功能表8-6-2-1]

只要下载或浏览URL，就会查询缓存。

- 启动时查询[功能表8-6-2-2]

只有启动WAP时才查询缓存。

- 关闭[功能表8-6-2-3]

从不查询缓存。在该设定中，缓存可以被视作取消。

### WAP信息[功能表8-7]

您可以查看关于G7030WAP的信息。

### 重设定名称[功能表8-8]

您可以重设上网设定，返回初始设定。

#### 提示

- 您可以下载WBMP和GIF87A格式的图片。



在线时，您可以查看下列数据。

### ■ 主页

相同于[功能表8-1]。

### ■ 重新加载

再下载当前页面。

### ■ 书签

与[功能表8-2]相同。

### ■ 存入书签

将当前URL保存为书签。您也可以修改书签标题。

### ■ 信息

与[功能表1]相同。

### ■ 加入信息

与[功能表8-3]相同。

### ■ 转到URL

与[功能表8-5]相同。

### ■ 连接邮件服务器

将当前URL连接到电子邮件服务器。

### ■ 设邮件服务器

将当前URL保存为电子邮件服务器。

### ■ 清除缓存

删除缓存内容。





## SIM服务[功能表9]

您的服务供应商可透过SIM卡提供特殊的应用服务，例如家庭银行、股市等等。如果您已申请这类服务，该服务名称将会出现在主目录的尾端。有了SIM卡服务目录，您的手机即可应付未来的应用需要，而且可支持您的服务供应商提供新增的服务。欲知详情，请联络您的服务供应商。



我们为你的手机准备了多种附件。您可以根据个人的通信要求来选择合适的附件。



### 标准电池



### 便携式耳机

可连接至手机，用于免提通话。

 


### 旅行用适配器

当您不在办公室或家中时，可以使用此充电器为电池充电。



### 手机挂绳



### 数据套件/CD

您可以将手机与PC相连，进行数据交换。

#### 注意

- 确保使用正规的LG配件。
- 仿冒品或替代品及非原厂配件可能会让您丧失保修权益。
- 各个地区的配件可能不同；如有任何疑问，请与我们的地区服务公司或代理查证核实。



## 保养和维护

**使用手机时，请遵循以下基本安全注意事项。**

- 请勿用湿手接触适配器。
- 请勿拆卸手机。（如果需要修理，请找合格的专业技术人员帮忙。）
- 请远离电子仪器，例如：电视机、收音机或个人计算机。
- 请将手机远离热源，例如：电器或电热烹饪设备。
- 小心轻放。
- 请勿使手机受到机械振动或晃动。
- 如果使用手机套或塑料手机套可能会损坏手机外壳涂层。
- 请用干布擦拭手机外壳。（请勿使用溶解物，如：苯、稀释剂或酒精。）
- 请勿将手机暴露在过多烟雾或灰尘的环境中。
- 请勿让手机接近信用卡或其他附有磁带的卡，否则可能损坏磁带内的资料。
- 请勿让硬物碰撞显示屏，以免损坏机身。
- 请勿让手机受潮或弄湿。
- 使用如耳筒等配件时请份外小心，如无必要，请勿触摸天线。



## ■ 保管电池

- 在重新充电前，不必对电池放电。与其他电池不同，本电池不会因内部元素物质而影响性能。
- 请只使用LG电池和充电器。LG充电器是特别为发挥电池最长使用寿命而设计的。
- 请勿拆卸或使电池短路。
- 请保持金属触点和电池清洁。
- 请在电池无法满足性能要求时进行更换。电池可以充数百次电，直到需要更换。
- 如果长时间不用电池，请重新充电，以延长使用时间。
- 请勿在阳光下或在湿度高的地方使用电池充电器，如浴室。
- 请勿将电池放置在过热或过冷的地方，这样会影响电池性能。



## 技术规范

---

### 常规

---

产品名称 : G7030

适用网络 : GSM 900 / DCS 1800

### 环境温度

---

最高 : +55°C

最低 : -10°C





## 备忘录

ENGLISH

 
 
 
# **GPRS Phone**

**USER'S MANUAL**

**MODEL: G7030**

Please read this manual carefully  
before operating your set.  
Retain it for future reference.





## For Your Safety



All radio transmitters carry risks of interference with electronics in close proximity.



Mobile Phones must be switched off at all times in an aircraft.



Avoid pointing active infrared port at eyes.



Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.



Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.



Minor interference may affect TVs, radios, PCs, etc.



Do not hold the phone in your hand while driving.



Do not dismantle the phone or battery.



Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.



## For Your Safety



Do not touch the charger or phone with wet hands.



For your safety, use ONLY specified ORIGINAL batteries and chargers.

### Please note:



Batteries should be disposed of in accordance with relevant legislation.



Only use ORIGINAL accessories to avoid damage to your phone.



Emergency call may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls.

### Important Information

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



## Overview

<b>Parts of the Phone</b> .....	<b>9</b>
• the front .....	9
• the back .....	10
• Sub LCD of the phone .....	11
<b>Key Description</b> .....	<b>12</b>
• Side Keys .....	13
• Alphanumeric Keys .....	14

## Display Information


<b>Display Information</b> .....	<b>15</b>
• On-Screen Icons .....	15
• Top Menu Icons .....	16

## Getting Started

<b>Installation</b> .....	<b>17</b>
• Inserting the SIM Card .....	17
• Installing the Battery .....	17
• Charging the Battery .....	18
• Disconnecting the charger .....	19
<b>Powering On Sequence</b> .....	<b>20</b>
• To get started with the phone .....	20
• To turn off the phone .....	20
<b>Access Codes</b> .....	<b>21</b>
• PIN code (4 to 8 digits) .....	21
• PIN2 code (4 to 8 digits) .....	21
• PUK code (4 to 8 digits) .....	21
• PUK2 code (4 to 8 digits) .....	21
• Security code (4 to 8 digits) .....	21



## Contents

<b>Making and Answering calls</b> .....	<b>22</b>
• Making a call .....	22
• Making a call by  [Send key] .....	22
• International Calls .....	22
• Making a call using the Phonebook .....	22
• Making call by Speed dials .....	22

### Menu Description

<b>Phonebook</b> .....	<b>23</b>
<b>Menu Tree</b> .....	<b>24</b>
<b>Messages [Menu 1]</b> .....	<b>26</b>
• Write message [Menu 1-1] .....	26
• Inbox [Menu 1-2] .....	31
• Outbox [Menu 1-3] .....	32
• Info service [Menu 1-4] .....	33
• Voice messages [Menu 1-5] .....	34
• Delivery reports [Menu 1-6] .....	35
• Templates [Menu 1-7] .....	35
• Settings [Menu 1-8] .....	36
<b>Call register [Menu 2]</b> .....	<b>37</b>
• Missed calls [Menu 2-1] .....	37
• Received calls [Menu 2-2] .....	37
• Dialed calls [Menu 2-3] .....	37
• Clear recent calls [Menu 2-4] .....	38
• Call durations [Menu 2-5] .....	38
• Call costs [Menu 2-6] .....	39
• Cost settings [Menu 2-7] .....	39
• GPRS information [Menu 2-8] .....	40



<b>Profiles [Menu 3]</b> .....	<b>41</b>
• Vibrate only [Menu 3-1] .....	41
• Quiet [Menu 3-2] .....	41
• General [Menu 3-3] .....	41
• Loud [Menu 3-4] .....	42
• Headset [Menu 3-5] .....	42
• Car [Menu 3-6] .....	42
<b>Settings [Menu 4]</b> .....	<b>44</b>
• Alarm clock [Menu 4-1] .....	44
• Date & Time [Menu 4-2] .....	44
• Phone settings [Menu 4-3] .....	46
• Call settings [Menu 4-4] .....	47
• Security settings [Menu 4-5] .....	50
• Network settings [Menu 4-6] .....	53
• GPRS settings [Menu 4-7] .....	53
• Restore factory settings [Menu 4-8] .....	54
<b>Call divert [Menu 5]</b> .....	<b>55</b>
• All voice calls [Menu 5-1] .....	55
• If busy [Menu 5-2] .....	55
• If not answered [Menu 5-3] .....	55
• If out of reach [Menu 5-4] .....	55
• All data calls [Menu 5-5] .....	55
• All fax calls [Menu 5-6] .....	55
• Cancel all divers [Menu 5-7] .....	56
<b>Organizer [Menu 6]</b> .....	<b>57</b>
• Schedule [Menu 6-1] .....	57
• Memo [Menu 6-2] .....	58
• Phonebook [Menu 6-3] .....	59



 
## Contents

<b>Fun &amp; Tools [Menu 7]</b> .....	<b>65</b>
• Game [Menu 7-1] .....	65
• Calculator [Menu 7-2] .....	65
• My folder [Menu 7-3] .....	65
• Unit converter [Menu 7-4] .....	66
• World time [Menu 7-5] .....	66
• Voice recorder [Menu 7-6] .....	67
• Answering phone [Menu 7-7] .....	67
• Infrared [Menu 7-8] .....	68
<b>Internet [Menu 8]</b> .....	<b>69</b>
• Home [Menu 8-1] .....	69
• Bookmarks [Menu 8-2] .....	69
• Push messages [Menu 8-3] .....	69
• Profiles [Menu 8-4] .....	70
• Go to URL [Menu 8-5] .....	72
• Cache settings [Menu 8-6] .....	72
• WAP information [Menu 8-7] .....	73
• Reset profiles [Menu 8-8] .....	73
<b>Internet On-line menu</b> .....	<b>74</b>
<b>SIM service [Menu 9]</b> .....	<b>75</b>
<b>Accessories</b> .....	<b>76</b>
<b>Care and Maintenance</b> .....	<b>77</b>
<b>Technical data</b> .....	<b>79</b>

## Parts of the Phone



### the front

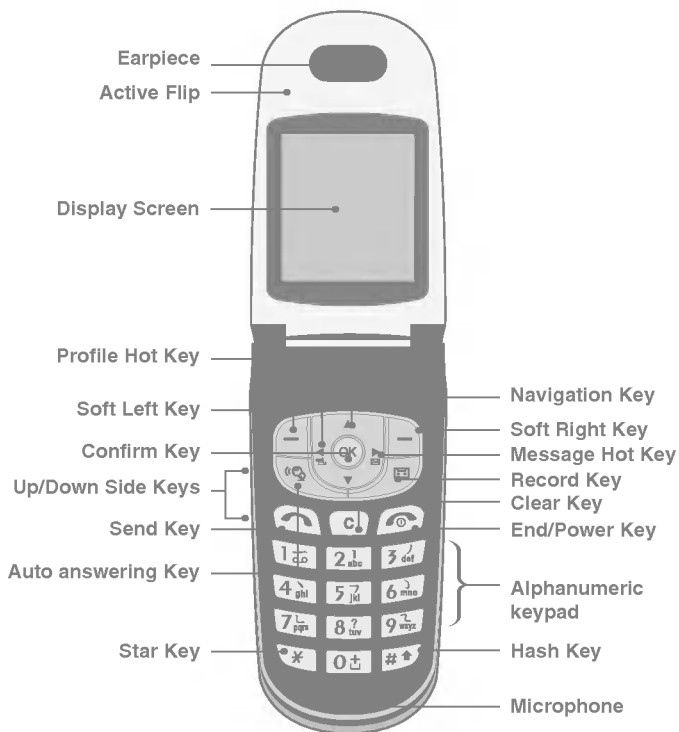







## Parts of the Phone
 
### the back

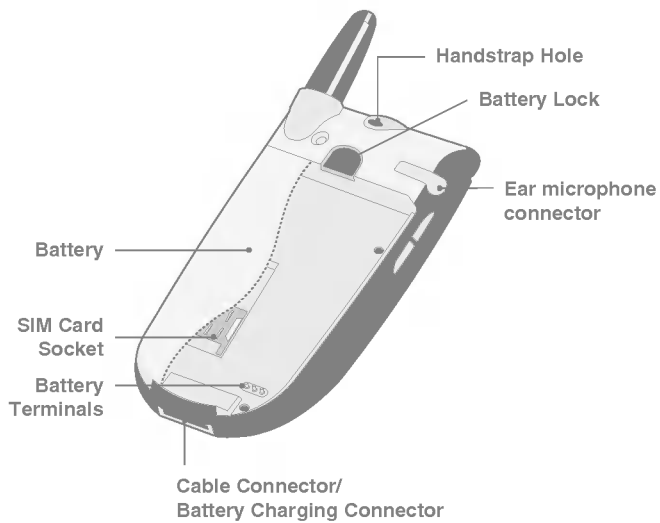



## Sub LCD of the phone

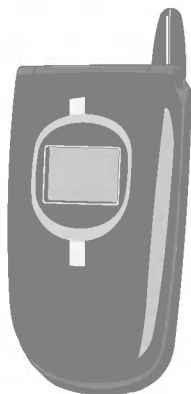 

You can view the icon of receiving text message or voicemail even not flipping the phone open. In addition, you can check the name and number for incoming calls.

### Notice









- If the name or number of entry is not saved in phone book, "New call" will be displayed when receiving a call.






 


## Key Description

The following shows key components of the phone.


### Keypad Description

	Description
	<p><b>Soft Left Key / Soft Right Key</b> Each of these keys performs the function indicated by the text on the display immediately above it.</p>
	<p><b>Navigation Keys</b>  <b>Left navigation key</b> Used to Profile hot key and Menu options key.  <b>Right navigation key</b> Used to Message hot key and Menu options key.  <b>Up/Down navigation key</b> Used to search name of Phonebook and Menu options key.  <b>Confirm key</b> You can go WAP directly if you press this key for a long time.</p>
	<p><b>Auto answering Key / Record Key</b> You can directly go to answering phone menu by pressing . You can use voice memo by pressing and holding  for a few seconds.</p>
	<p>You can delete the characters you input by pressing .</p>
	<p><b>Send Key</b> You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialled, received, and missed numbers.</p>



	Description
	<p><b>Numeric Keys</b> These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time.</p> <ul style="list-style-type: none"> <li>• Used to call for international call by .</li> <li>• Used to call Speed dials by from  to .</li> <li>• Used to check voicemail by .</li> </ul>
	<p><b>END/PWR Key</b> Used to end or reject a call. This key is also used as Power Key pressing and holding this key for a few seconds.</p>

## Side Keys

	Description
	<p><b>Up/Down Side Key</b> You can adjust the volume of key tone in standby mode and the volume of earpiece during a call. With the flip closed, pressing one of these keys shows the current time and date on the sub LCD. When you receive a message, you can read the message on the sub LCD using these keys.</p>



## Key Description

### Alphanumeric Keys

The alphabetic and numerical keypad mapping relation are listed as the following table.

	Description
	. ! ' 1 , - ? @ _
	A B C 2 Ä Å Æ Ç a b c ä å æ ç
	D E F 3 Ë È É ê ë è é ê
	G H I 4 Ì Í Î ï ħ i ï ï ï
	J K L 5 j k l
	M N O 6 Ñ Ò Ó Ô Õ Œ m n o ñ ò ó ô õ œ
	P Q R S 7 p q r s ß
	T U V 8 Ü Û Ú Û ù v ü ù ú û
	W X Y Z 9 w x y z
	0 Ø ø [Space Key]

## Display Information



The screen displays several icons the following describe each of them you may see on the phone.










### On-Screen Icons

	Description
	Tells you the strength of the network signal.
	Call is connected.
	Shows that you are using a roaming service.
	You can use GPRS service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You can set the vibration mode.
	You have received e-mail.
	Loud menu in Profiles.
	Quiet menu in Profiles.
	Headset menu in Profiles.
	Car menu in Profiles.
	General menu in Profiles.
	Shows that you can use push message service.
	You can set your own schedule.
	Shows that you have new recorded messages.



## Display Information

 
### Top Menu Icons

	Description
	Messages
	Call register
	Profiles
	Settings
	Call divert
	Organiser
	Fun & Tools
	Internet
	SIM service (Dependent on SIM card)

## Installation



### 1. Inserting the SIM Card

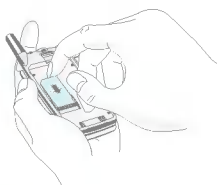

Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right.


#### Notice

 - Before installing always make sure that the phone is switched off and remove the battery.
- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.

### 2. Installing the Battery



1. Place the battery on the back of the phone.

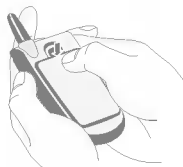

2. Push it until you hear a click.






## Installation
 
### 3. Charging the Battery

To connect the travel adapter to the phone, you must have installed the battery.



1. Insert one end of the travel adapter into the bottom of the phone.

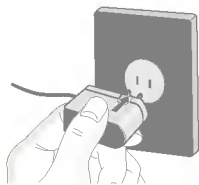

2. Connect the other end of the travel adapter to an AC wall outlet.

**NOTE:** Use only Travel charger type TA-25GC.



#### Warning

- Do not force the connector as this may damage the phone and/or the travel adapter.



#### 4. Disconnecting the charger



Disconnect the travel adapter from the phone by pressing its side buttons.

##### Note

- The battery delivered with your phone has to be fully charged before using it.
- Do not remove your battery or the SIM card while charging.
- The moving bars of battery icon will stop after charging completely.

 
##### Note


- In the case the battery is not properly charged.
  1. After turning on/off the phone using the power key, please try to recharge it.
  2. When the battery is attached to the phone, please detach it from the phone. And then place it back to the phone and try to recharge it.



## Powering On Sequence

### 1. To get started with the phone

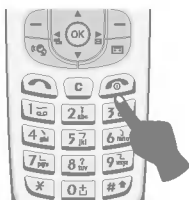

1. Press and hold  [Power/End Key] until you hear a tone.
2. Depending on setting **PIN code request** [Menu 4-5-1], you can enter it or not.
3. If your phone connects to a network, the network name will be displayed shortly.

### 2. To turn off the phone

In standby mode, press and hold  key until you hear a tone.

## Access Codes



You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using **Change codes** [Menu 4-5-4].

### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code request** is set **Enable**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code request** is set **Disable**, your phone connects to the network directly without PIN code.

### PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

### PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.

### PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.

### Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate "Restore factory settings" menu. The default number is "0000". You also can change it in Security settings menu.



## Making and Answering calls

### Making a call

1. Key in phone number including the area code. To edit a number on the display, press [←, →] to move the cursor to the left or right. If you want to delete a character, press [C].
2. Press [Call] to call the number.
3. Press [End] to end the call.

### Making a call by [Call] [Send key]

1. Press [Call] [Send key], and then you can check the latest missed, received, and dialled phone numbers.
2. Select the number you want on the list.
3. Press [Call] [Send key].

### International Calls

1. Press and hold the [0+] key for the international prefix. "+" character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [Call].

### Making a call using the Phonebook


1. In standby mode, press [Names].
2. When the menu is displayed, you select **Search** by pressing [Select].
3. If you find out the desired item through searching by a name or a number, press [Call] to call.


 
### Making call by Speed dials

See the menu **Phonebook – Speed dials** [Menu 6-3-4] in detail.

## Phonebook



To select a menu in phonebook, press  [Names] in standby mode and then scroll to a desired item. You can also access this menu through **Organiser**.

	Description
<b>1. Search</b>	Allows you to search for a specific name and number.
<b>2. Add new</b>	Allows you to add new names and numbers.
<b>3 Caller groups</b>	Allows you to show group list, and select it. You can edit its name, and set a ring and icon for each Group.
<b>4. Speed dials</b>	Allows you to assign up to 8 (  -  ) one-touch dial allocations.
<b>5. Set memory</b>	Allows you to select memory.
<b>6. Delete all</b>	Allows you to erase all data in SIM or Phone memory.
<b>7. Copy all</b>	Allows you to copy entries from your Phone memory to SIM card or from SIM card to Phone memory.
<b>8 Information</b>	Allows you to check the status of memory, SDN (Service Dial Number), and Own number.



## Menu Tree



### 1 Messages

- 1 Write message
- 2 Inbox
- 3 Outbox
- 4 Info service
- 5 Voice messages
- 6 Delivery reports
- 7 Templates
- 8 Settings



### 2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Clear recent calls
- 5 Call durations
- 6 Call costs
- 7 Cost settings
- 8 GPRS information



### 3 Profiles

- 1 Vibrate only
- 2 Quiet
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



### 4 Settings

- 1 Alarm clock
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 GPRS settings
- 8 Restore factory settings



## 5 Call divert

- 1 All voice calls
- 2 If busy
- 3 If not answered
- 4 If out of reach
- 5 All data calls
- 6 All fax calls
- 7 Cancel all diverts



## 6 Organizer

- 1 Schedule
- 2 Memo
- 3 Phonebook



## 7 Fun & Tools

- 1 Game
- 2 Calculator
- 3 My folder
- 4 Unit converter
- 5 World time
- 6 Voice recorder
- 7 Answering phone
- 8 Infrared



## 8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 WAP information
- 8 Reset profiles



## 9 SIM service

This menu depends on SIM and the network services.







## Messages [Menu 1]

This menu includes functions related to SMS (Short Message Service), voice mail, as well as the network's service messages.


### Write message [Menu 1-1]

You can write and edit text message up to 480 characters. In addition, you can check the page number in writing message.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write message** in the menu.
3. Input the message.
4. When you finish writing the message, press  [Options]. Then following option menu will be displayed.

### **Send**

Sends the text message.

1. Enter the phone number to send the message.
2. Press  [OK]. If you don't want to send it, press  [Back].

### **Save**

Stores the message in Outbox.

If you want to save it in Outbox, press  [Select].

### **Insert template**

The template is pre-defined message. You can select one of the templates and add it to the message you will send.



## **EMS function**

You can use EMS only if the network supports this service.

### **Attach picture**

If you want to append the picture on sending message, you can select it through EMS. You can also select one of the various pictures.

### **Attach animation**

If you want to append the animation on sending message, you can select it through EMS. In addition, You can select the one of 15 animations which you want.

### **Attach sound**

If you want to append the sound on sending message, you can select it through EMS.

#### **Note**

- You may not send or receive the message through EMS due to the incompatibility between G7030 phone and the others.

### **Insert number**

When you enter message, you can insert the phone number stored in the SIM card or in the phone. If the number is stored in the phone, you can also insert home number and office number.





## Messages [Menu 1]


### eZi dictionary

You can add, delete and edit a word in eZi dictionary. If you save it in a dictionary, this word has a high priority than others.


#### • How to add a word in a dictionary

1. Scroll to highlight **eZi dictionary**.
2. <No entry> message will be displayed when nothing is saved.  
Once a word is saved in a dictionary, you can view the word list.
3. Press  [Add] .
4. After entering a word, press  [OK].

#### • How to delete a word from a dictionary

1. Scroll to highlight **eZi dictionary**.
2. Select a word you want to delete, and then press  [Options].
3. Select **Delete** menu.

#### • How to edit a word in a dictionary


1. Scroll to highlight **eZi dictionary**.
2. Select a word you want to edit, and then press  [Options].
3. Select **Edit** menu.






## How to Use eZi text

eZi text mode allows you to type a word easily and quickly. Simply pressing each key once for each character, you can get the word you want. Therefore, you don't need to input all characters to make a word.

### • How to change mode






There are 4 modes. : **eZi mode, Numeric mode, Letter mode (Capital and Small)**. You can change and choose one among the editor modes by pressing .

### 1. How to write a message in eZi mode

1. Select **Messages** by pressing  [Select].
2. Select **Write message** by pressing  [Select].
3. In eZi text mode, you just press a key marked a character on the keypad. In addition, you can space out by pressing  key.

 






### Example

- For making "Tomorrow", you just press  →  →  →   
→  in sequence.

4. After writing the message, press  [Options].

### Note

  


1. To change the language, press  key. You can check the selected language below the text box.
2. Once you press the corresponding key,  key will be changed to "Change". Then you can change the capital form with  [Change].  
For example : You → you → y.o.u. → Y.O.U. → YOU. After selecting the desired form by pressing [OK],  key will return to "Symbol".



## Messages [Menu 1]

 
### 2. Numeric mode

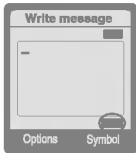

To enter numbers, select this mode using **[123]** key.

### 3. Letter mode

 In this mode, you can input letters. There are capital letter mode and small letter mode.

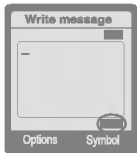





#### Note

1. If you want to space, press **[space]**.
2. To delete a letter, use **[C]** key.




## **Inbox [Menu 1-2]**

When you receive a text message, the symbol  is displayed on the screen. You can save it in the incoming message list. Select the desired message by scrolling  ,  you can delete all incoming messages by selecting **Delete all** at the bottom of the list. After reading the message, press  [Options] to access the available options.

## **Reply [Menu 1-2-1]**

You can reply to the incoming message, if you press  [Select].

## **Forward [Menu 1-2-2]**

You can forward the selected message to other party, if you press  [Select].

## **Delete [Menu 1-2-3]**

You can delete the message if you press  [Select].

## **Get number [Menu 1-2-4]**

If the message has the number, you can not only extract it but also save it in the phonebook. You can also call to this number.

## **Save attachments [Menu 1-2-5]**

You can save attachments such as pictures, sound, or animation. (This option is shown only when there is any attachment.)






## **Return call [Menu 1-2-6]**

You can call back to sender by pressing  [Send].



## Messages [Menu 1]

### Outbox [Menu 1-3]

When you enter this menu, you can see the outgoing message list. You can select the desired message by scrolling  ,  and press  [Select] to read it. And if you want to exit from **Outbox** menu, press  [Back]. In addition, you can delete all outgoing messages by selecting **Delete all** menu at the bottom of the list. After reading a message, press  [Options] to access the following submenus.

### Forward [Menu 1-3-1]

You can forward the message to other party.

### Delete [Menu 1-3-2]

You can delete the message.

### Get number [Menu 1-3-3]

If the message has the phone number, you can not only extract it but also save it in the phonebook. You can call to this number.

#### Note

- If you space out as inputting numbers, the receiver can check them respectively.



## **Info service [Menu 1-4]**

Cell Broadcast messages (CB message) are text ones that are sent by the network to GSM phone users. The network provides general information such as weather reports, traffic news, tax, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider. When you receive CB message, you can view the submenus below:




### **Receive [Menu 1-4-1]**

- **Yes** : If you select this menu, your phone will receive the Cell Broadcast message.
- **No** : If you select this menu, your phone will not receive the Cell Broadcast message.

### **Inbox [Menu 1-4-2]**

You can read and delete received CB messages.

### **Topics [Menu 1-4-3]**

If you want to create new topics, press  [Select]. Then, you select New topics menu by  [Select]. If you have already topics, you can delete, edit, and activate by pressing  [Options].

### **Alert [Menu 1-4-4]**



- **On**  
When Cell broadcast message is arrived, your phone will inform you by beep.
- **Off**  
When Cell broadcast message is arrived, your phone will not beep.





## Messages [Menu 1]

### Auto display [Menu 1-4-5]

When you receive CB message, it is automatically displayed on the window. You can read it by scrolling  ,  .


- **On**

The message will be displayed on the screen automatically.

- **Off**

The message will not be displayed on the screen automatically.

### Language [Menu 1-4-6] (Dependent upon the Network)

You can select the language pressing  [Select]. Then, the cell broadcast message will be displayed in the language that you selected. If you use all languages supported by phone, select **Automatic** at the bottom of the list.

## Voice messages [Menu 1-5]

### Listen to voice messages [Menu 1-5-1]

In this menu, you can listen to your voice messages. If the address of voicemail centre is already saved in phone, your phone connects it automatically. Otherwise, the phone requires entering the address.

### Voice mailbox number [Menu 1-5-2]

You can input voice mailbox address number.



## **Delivery reports [Menu 1-6]**

You can read and delete delivery report messages.

## **Templates [Menu 1-7]**

You can see 10 pre-defined messages in the list. You can view templates already saved in a list before editing it. You can change those ones. The rest ones are **<Empty>**. You can add the new one.

### **Edit [Menu 1-7-1]**

You can edit a template.

### **Delete [Menu 1-7-2]**

You can delete a template.

### **Send [Menu 1-7-3]**

You can send the text message with a template.



## Messages [Menu 1]

### Settings [Menu 1-8]

#### **Message centre number [Menu 1-8-1]**

You can input the address of message centre.

#### **Message types [Menu 1-8-2]**

##### **Text, Voice, Fax, Paging, X.400, E-mail, ERMES**

Usually, the type of message is set to **Text** type. You can replace your text with the alternative formats, which are suitable for the device that will be received the message. Contact your service provider for the availability of this function.

#### **Validity period [Menu 1-8-3]**

This network service allows you to set how long your text messages will be stored at the message center.

#### **Delivery reports [Menu 1-8-4]**

If you set **Yes** in this menu, you can check whether your message is sent to the other party successfully or not.

#### **Pay for reply [Menu 1-8-5]**

When the other party replies to your message, you can pay for this.

#### **Check memory [Menu 1-8-6]**

If you select this menu, you can check the used and total memories. The total memory is the sum of SIM and Phone memory.

## Call register [Menu 2]



(Dependent on the network service)

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area. In the options of missed calls, received calls, and dialled numbers you can:

- Call by this number.
- Save the number in the phonebook.
- View the date and the time of the call.
- Edit, delete or save the number from the list in phonebook.

### Missed calls [Menu 2-1]

This function allows you to view the list of the latest 10 phone numbers you didn't receive.

### Received calls [Menu 2-2]

This function allows you to view the list of the latest 20 phone numbers you have received.

### Dialled calls [Menu 2-3]

This function allows you to view the list of 20 phone numbers that you have recently called or tried to call.

### Submenus in each menu:

#### View detail

You can check the phone number of missed, received or dialled calls in detail.

#### Delete

You can delete the record of the phone number.

#### Save

You can save the phone number.



## Call register [Menu 2]

(Dependent on the network service)

### Call

You can make a call to the number.

### View other number

You can check the phone numbers saved in phonebook.

### Write message

You can send a message to the number.

### Clear recent calls [Menu 2-4]

This function allows you to delete missed, dialled or received call lists. You can also delete all call lists at a time.

### Call durations [Menu 2-5]

This function allows you to view the duration of incoming and outgoing calls. You can clear the duration record by using Reset key after entering the security code.

#### Last call [Menu 2-5-1]

If you press  [Reset], you can delete last call duration.


#### Received calls [Menu 2-5-2]

If you press  [Reset], you can delete received call duration. You need to input Security code.

#### Dialled calls [Menu 2-5-3]

If you press  [Reset], you can delete outgoing call duration. You need to input Security code.

#### All calls [Menu 2-5-4]

If you press  [Reset], you can delete the duration of last call, received call, and outgoing call. You need to input Security code.



## **Call costs [Menu 2-6]**

This network service allows you to check the last call cost and total call cost. To clear the counters, you need the PIN 2 Code.

### **Last call's cost [Menu 2-6-1]**

This function allows you to reset the Last call's cost. You need to input PIN2 code.

### **All calls' cost [Menu 2-6-2]**

This function allows you to reset the All calls' cost. You need to input PIN2 code.

#### **Note**

- The actual cost invoiced for calls by your service provider may vary depending upon network features, rounding-off for billing, taxes, etc.

## **Cost settings [Menu 2-7]**

### **Call cost's limit [Menu 2-7-1]**

This network service allows you to limit the costs of your calls to the number of charging units or units of currency. If you select on the number of remaining, the cost will be displayed in standby mode. You can make or receive a call as far as the specified cost limit is not exceeded.

### **Set tariff [Menu 2-7-2]**

The phone can change units and currency name. Contact your service provider for charging unit price. You may need the PIN2 code to select the currency or unit in this menu.



## Call register [Menu 2]

(Dependent on the network service)

### Auto display [Menu 2-7-3]

When setting **On**, show the reminder cost in standby mode. When call end, show the last call costs.

### GPRS information [Menu 2-8]

You can check the amount of data transferred over the network through GPRS. In addition, you can also view how much time you are online.

1. Press [OK] or [Select].
2. Scroll to the information you want to check. Your options include the following:

### WAP [Menu 2-8-1]

You can check the data volume and the duration through WAP.

- Last session [Menu 2-8-1-1]
- All session [Menu 2-8-1-2]

### External device [Menu 2-8-2]

You can check the data volume and the duration through GPRS by using external device such as serial port.

### Total data [Menu 2-8-3]

You can check the total amount of data through WAP and external device.

## Profiles [Menu 3]



In this menu, you can adjust and customize the phone tones for different events, environments and caller's group. (e.g. When you are in a car, you can choose the Car profile)

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter **Profiles**.

### Vibrate only [Menu 3-1]

#### **Activate [Menu 3-1-1]**

You can adjust the profile to Vibration if you need vibration mode.

### Quiet [Menu 3-2]

#### **Activate [Menu 3-2-1]**

You can adjust the profile to Quiet if you are in a quiet place.

#### **Personalise [Menu 3-2-2]**

You can change the values of Profile submenus.

### General [Menu 3-3]

#### **Activate [Menu 3-3-1]**

You can adjust the profile to General if you need General mode.

#### **Personalise [Menu 3-3-2]**

You can change the values of Profile submenus.





## Profiles [Menu 3]

### Loud [Menu 3-4]

#### **Activate [Menu 3-4-1]**

You can adjust the profile to Loud if you are in a noisy environment.

#### **Personalise [Menu 3-4-2]**

You can change the values of Profile submenus.

### Headset [Menu 3-5]

You can adjust the profile to Headset when you put on a headset.

#### **Personalise**

You can change the values of Profiles submenus.

### Car [Menu 3-6]

You can adjust the profile to Car when you activate Handsfree Kit.

#### **Personalise**

You can change the values of Profile submenus.

#### **Note**

- If you connect headset or handsfree kit to the phone, each profile menu related to them will be displayed automatically.



## A Group of Personalise submenus [Menu 3-x-x]

Each **Personalise** menu has the submenus as shown below.

### Incoming alert type [Menu 3-x-x-1]

Allows to set the incoming call alert type for adjusting environment.

**Ring, Vibrate, Ring & vib., Ring after vib., Off.**

### Ring tone [Menu 3-x-x-2]

Allows to set the ring tone for adjusting environment.

### Ring volume [Menu 3-x-x-3]

Allows to set the ring volume for adjusting environment.

### Message alert type [Menu 3-x-x-4]

Allows to alert when receiving a message for adjusting environment.

**Ring once, Ring periodic, Vibrate, Ring & vib., Off.**

### Message tone [Menu 3-x-x-5]

Allows to set the message alert tone for adjusting environment.

### Key volume [Menu 3-x-x-6]

Allows to set the keypad tone for adjusting environment.

#### Note

#### Automatic answer

- This function will be activated only when your phone is connected to the handsfree kit or headset.

- **Off** : The phone will not answer automatically.
- **After 5 sec** : After 5 seconds, the phone will answer automatically.
- **After 10 sec** : After 10 seconds, the phone will answer automatically.



## Settings [Menu 4]

### Alarm clock [Menu 4-1]

You can set an alarm to go off on your phone.

• **To set the alarm:**

1. Enter the menu.
2. Select **On** using [←, →].
3. Press to move the cursor. Select AM or PM using [←, →].
4. Set the alarm time using the numeric keypad. You can move the cursor using [←, →] in the alarm time space.
5. Press to move the cursor to the next option. Select one from **Once**, **Daily**, **Weekly**, and **Monthly** using [←, →].
6. Press [Set]. You see the prompt, "Alarm is set".

• **To deactivate the alarm:**

1. Enter the menu.
2. Select **Off** using [←, →], then press [Set].
3. You see the prompt, "Alarm off".

### Date & Time [Menu 4-2]

The phone has its own clock. In this menu you can set the time format between 12-hour and 24-hour.

#### **Set the time [Menu 4-2-1]**

You can set time of your phone in this menu.

1. Select **Set the time** by pressing [Select].
2. Enter the number you want to set the time.
3. Press [Set].



### Time format [Menu 4-2-2]

You can select time format between 12-hour and 24-hour.

1. Scroll to highlight **Time format** by pressing [Select].
2. Select 12 hour or 24 hour you want by pressing [Select].

### Set the date [Menu 4-2-3]

In this menu, you can set the date of your phone.

1. Enter the menu.
2. Select **Set the date** by pressing [Select].
3. Enter the number you want to set the date.
4. Press [Set].

### Date format [Menu 4-2-4]

You can set the Date format in this menu.

[Y: Year, M: Month, D: Day]

- YYYY/MM/DD
- DD/MM/YYYY
- MM/DD/YYYY



## Settings [Menu 4]

### Phone settings [Menu 4-3]

You can set the phone as you want. Scroll to highlight **Phone settings** menu, and then press  [Select].

#### **Language [Menu 4-3-1]**

This menu provides you with selection of the language.

#### **Wallpaper [Menu 4-3-2]**

You can select one of the pictures by pressing [ , ].

#### **Sub LCD [Menu 4-3-3]**

You can set the various functions of sub LCD.

- **My display [Menu 4-3-3-1]**

You can set the graphic item.

- **Sliding time [Menu 4-3-3-2]**

You can set the interval of the sliding screen.

- **Font colour [Menu 4-3-3-3]**

You can set the colour of font displayed on Sub LCD.

#### **Backlight [Menu 4-3-4]**


You can set the light-up duration you want every time you press a key or open the flip.

#### **Contrast [Menu 4-3-5]**

You can set the brightness of LCD you want by pressing [ , ].



## **Call settings [Menu 4-4]**


You can set the menu relevant to a call by pressing  [Select] in **Settings** menu.

### **Answer mode[Menu 4-4-1]**

- **Flip open [Menu 4-4-1-1]**

If you select this menu, you can receive an incoming call when only opening folder.

- **Press any key [Menu 4-4-1-2]**

If you select this menu, you can receive an incoming call by pressing any key except ,  key.

- **Send only [Menu 4-4-1-3]**

If you select this menu, you can receive a call only by pressing send key.

### **Own number sending [Menu 4-4-2] (network and subscription dependent)**

You can send your phone number to the other party dependent on setting this function.

- **Set by network [Menu 4-4-2-1]**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

- **On [Menu 4-4-2-2]**

If you select this, you can send your phone number to the other party. That is, your phone number will be displayed on receiver's phone.

- **Off [Menu 4-4-2-3]**

If you select this, you can't send your phone number.



## Settings [Menu 4]

### Call wait service [Menu 4-4-3]

If this service is enabled, you can accept a waiting (incoming) call. If this service is disabled, you cannot recognize the waiting (incoming) call.

- **Activate [Menu 4-4-3-1]**

Activating the corresponding service.

- **Cancel [Menu 4-4-3-2]**

Deactivating the corresponding service.

- **View status [Menu 4-4-3-3]**

Checking the status of the service.

### Automatic redial [Menu 4-4-4]

- **On [Menu 4-4-4-1]**

When this function is activated, your phone will try to make a call in case of failing to connect.

- **Off [Menu 4-4-4-2]**

Your phone will not make any attempts to connect the call after failing to connect.

### Minute minder [Menu 4-4-5]

If you select **On**, you can check the call duration by beep sound every minute during a call.



### Phone line in use [Menu 4-4-6]

This function is only used if **Two-line service** is supported by the Service Provider. Two independent phone numbers are registered for the phone. This function provides you with the selection the currently used phone number.

1. **Line 1** : Select Line 1 as the current phone number.
2. **Line 2** : Select Line 2 as the current phone number.

#### Note

- If you select Line 2 in the area where alternative line service is not supported, you can't make a call.

### Closed user group [Menu 4-4-7] (network dependent)

Use this function to restrict usage of the phone calls with numbers that belong to certain user groups. When this function is used, every outgoing and incoming call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

- A. **Preset** : Setting the selected CUG Index.
- B. **On** : Activating and editing the CUG Index.
- C. **Off** : Deleting the selected CUG.




 





## Settings [Menu 4]

### Security settings [Menu 4-5]

#### **PIN code request [Menu 4-5-1]**

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Press  [Menu] in standby mode.
2. Press key  for direct access or use  and  to enter **Settings**.
3. Scroll to highlight **Security settings** menu.
4. Select **PIN code request** by pressing  [Select].
5. You can view the following submenus.
  - **Enable** : You can activate this function.
  - **Disable** : You can cancel setting this function.

#### **Call barring service [Menu 4-5-2] (Network dependent)**

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing calls [Menu 4-5-2-1]**  
You can bar all outgoing calls.
- **Outgoing international [Menu 4-5-2-2]**  
You can bar outgoing international calls.
- **Outg. intl roam (Outgoing international roaming) [Menu 4-5-2-3]**  
You can bar outgoing international roaming call.



- **Incoming calls [Menu 4-5-2-4]**  
You can bar incoming calls.
- **Inc. when roam (Incoming calls when roaming) [Menu 4-5-2-5]**  
You can bar incoming calls when roaming.
- **All data calls [Menu 4-5-2-6]**  
You can bar all data calls.
- **All fax calls [Menu 4-5-2-7]**  
You can bar all fax calls.
- **Cancel all barrings [Menu 4-5-2-8]**  
You can cancel all call barring services.

### The Submenus of Call Barring Service

- **Activate [Menu 4-5-2-x-1]**  
If you apply call barring service to service provider, you can use it.
- **Cancel [Menu 4-5-2-x-2]**  
You can cancel the function.
- **View status [Menu 4-5-2-x-3]**  
You can check the current status of call barring service.



#### Note

- To use Call barring service, you must input the network password.



## Settings [Menu 4]

### Fixed dial number [Menu 4-5-3] (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

1. Press [Menu] in standby mode.
2. Press key for direct access or use and to enter **Settings**.
3. Scroll to highlight **Security settings** menu.
4. Select **Fixed dial number** by pressing [Select].
5. Input PIN2 code, and then press [OK].
6. If the PIN2 code is correct, you can view the following submenus.
  - **Enable** : You can restrict your outgoing calls to selected phone numbers.
  - **Disable** : You can call without restricting phone numbers.
  - **Number list** : You can view fixed dial numbers and add, edit, delete.

### Change codes [Menu 4-5-4]

You can change the access codes: Security code, PIN1 code, PIN2 code, Barring password .

1. Press [Menu] in standby mode.
2. Press key for direct access or use and to enter **Settings**.
3. Scroll to highlight **Security settings** menu.
4. Select **Change codes** by pressing [Select].
5. If you want to change the Security code/PIN/PIN2/ Barring password, press [OK].
6. Input new Security code/PIN/PIN2/Barring password (Network Dependent).



## **Network settings [Menu 4-6]**

You can select the network, which you will be registered either automatically or manually. Usually, the network selection is set **Automatic**.

### **Automatic [Menu 4-6-1]**

The phone automatically selects available network in the area.

### **Manual [Menu 4-6-2]**

The phone will find the list of available networks and show you them. Then you can select the network that you want to use if this network has a roaming agreement with your home network operator.

## **GPRS settings [Menu 4-7]**

When you use GPRS to connect to the Internet, you can make a data call. In order to use GPRS, you set the following options.

### **Terminal type [Menu 4-7-1]**

- **Dual [Menu 4-7-1-1]**
- **GPRS only [Menu 4-7-1-2]**
- **GSM only [Menu 4-7-1-3]**

### **Incoming GPRS session [Menu 4-7-2]**

- **Automatic [Menu 4-7-2-1]**
- **Manual [Menu 4-7-2-2]**



## Settings [Menu 4]

### External device [Menu 4-7-3]

When you use Internet via GPRS by using external device, you can set APN, IP address, DNS, User ID, and password as to 5 profiles. Otherwise, you may be offered those information by network.

### Restore factory settings [Menu 4-8]


 


You can set the handset to the default configuration by selecting the Settings/Factory reset option. You need a security code to activate this function.

## Call divert [Menu 5]



(network and subscription dependent)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For more information, contact your service provider.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use { and } to enter **Call divert**.

### All voice calls [Menu 5-1]

Diverts voice calls unconditionally.

### If busy [Menu 5-2]

Diverts voice calls when the phone is in progress.

### If not answered [Menu 5-3]

Diverts voice calls which you do not answer.

### If out of reach [Menu 5-4]

Diverts voice calls when the phone is switched off or out of service area.

### All data calls [Menu 5-5]

Diverts to a number with a PC connection unconditionally.

### All fax calls [Menu 5-6] (network and subscription dependent)

Diverts to a number with a fax connection unconditionally.



## Call divert [Menu 5]

(network and subscription dependent)

### The submenus [Menu 5-x-x]

Call Divert menu has the submenus as shown below.

#### Activate [Menu 5-x-1]

Activating the corresponding service.

- **To voice mailbox**

Forwards to message center. This function is not included in **All data calls** and **All fax calls menus**.

- **To other number**

Inputs the number for diverting.

- **Favorite number**

Stores the latest five numbers.

#### Cancel [Menu 5-x-2]

Deactivating the corresponding service.

#### View status [Menu 5-x-3]

Checking the status of the corresponding service.

### Cancel all diverts [Menu 5-7]

Cancels all call divert service.

## Organizer [Menu 6]



### **Schedule [Menu 6-1]**

When you enter this menu Calendar will show up. On top of the screen there are sections for date and icons. You can change the day, month and year by using [←, →]. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be located on the date. If a date is shown in different color, it means there are schedule notes on that day. This function helps to remind you of meetings, memorial days, or what to do. When you add schedule notes on a day, you can view the following submenus.

#### **Edit [Menu 6-1-1]**

You can add the notes on the selected date and change it.

#### **Delete [Menu 6-1-2]**

You can delete the notes you've already set.

#### **Add new [Menu 6-1-3]**

You can input maximum 30 characters and 30 notes.

#### **View all schedules [Menu 6-1-4]**

Shows the notes that are set for all schedules.

#### **Go to date [Menu 6-1-5]**



You can check the date you've already input.





## Organizer [Menu 6]

### **Memo [Menu 6-2]**

1. Scroll to highlight **Memo**.
2. Press  [Select].
3. Input a memo and then press  [Save].
4. You can view the following submenus.

### **Edit [Menu 6-2-1]**

You can edit the selected memo.

### **Add new [Menu 6-2-2]**

You can add a new memo up to 20 memos and 40 characters.

### **Delete [Menu 6-2-3]**

You can delete the selected memo.

### **Delete all [Menu 6-2-4]**








You can delete all the memos you made before.



## Phonebook [Menu 6-3]

You can create a personal phonebook by saving phone numbers and accompanying names. An easy to make calls is by recalling the phone numbers and names saved in your phonebook.

### Search [Menu 6-3-1] (Calling from phonebook)

1. Open the phonebook first by pressing  [Names] in standby mode. You can also go **Organizer – Phonebook** by scrolling  , .
2. **Search** pressing  [Select] to enter.
3. You can find an entry by name.
4. Select  [List].
5. If you want to edit, view, delete, copy and call by the entry, select  [Options]. The below menu will be displayed.
  - **Edit** : You can edit the name, number, E-mail, and fax by pressing  [Select].
  - **View detail** : You can view the name and number in detail.
  - **Delete** : You can delete an entry.
  - **Save to SIM/ phone** : You can copy an entry from SIM to phone or from phone to SIM.
  - **Call** : You can call by the chosen entry.
  - **Write message** : You can send a message to the entry.



## Organizer [Menu 6]

### Add new [Menu 6-3-2]

You can add phonebook entry using this function. There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 6-3-5]. The Phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the Phone memory. But in the SIM card, it depends on the SIM card.

1. Open the phonebook first by pressing [Names] in standby mode. You can also go **Phonebook** by scrolling , .
2. Scroll to highlight **Add new**, and press [Select] to enter.

#### • SIM :

You can add name, number, and group setting for an entry.

- a. Write a name to add.
- b. Press . Then you can input a number.
- c. Press . Then you can select one of the groups by using , .
- d. Press [Save].

#### • Phone :




You can add name, number (mobile, home, office), E-mail address, group and memo.

- a. Write a name to add.
- b. Press .
- c. You can select the number entry you want to input using , and then press .
- d. You can select a group by pressing , .
- e. Press [Save].



### Caller groups [Menu 6-3-3]

There are 6 groups and others you can make lists to.

1. Press  [Names] to enter into the phonebook in standby mode.
2. Scroll to **Caller groups** then press  [Select] to enter this menu.
3. Every Group list will be displayed: **Family, VIP, Friends, Colleague, Group 1, Group 2, Others.**
4. Select Group name that you want to manage by pressing  [Options].
5. Then submenus below will be displayed except **Others.**

- **Member list**

You can edit, copy or call the caller group.

- **Rename**

You can edit a group name.

- **Group ring tone**

You can choose ring sound of each group.

- **Group icon**

You can select Icon of each group.



## Organizer [Menu 6]

### Speed dials [Menu 6-3-4]

You can associate any of the keys  $\boxed{2}$  to  $\boxed{9}$  with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the phonebook first by pressing  $\boxed{\text{Names}}$  in standby mode. You can also go Phonebook menu by scrolling  $\uparrow$ ,  $\downarrow$ .
2. Scroll to **Speed dials**, then press  $\boxed{\text{Select}}$  to enter this menu.
3. Every Speed dial will be displayed.
4. If you want to add Speed dial, select **<Empty>**. Then, you can search the name in phonebook.
5. If you select allocated name by speed dial, you can view following the submenus.
  - **Change** : You can change the allocation of speed dial.
  - **Delete** : You can delete the allocated speed dial number.

### Set memory [Menu 6-3-5]

You can set the preferred memory between SIM memory and Phone memory.

1. Open the phonebook first by pressing  $\boxed{\text{Names}}$  in standby mode.
2. Scroll to **Set memory**, then press  $\boxed{\text{Select}}$  to enter.
3. Select SIM or Phone, then press  $\boxed{\text{Select}}$ .



### Delete all [Menu 6-3-6]

You can delete all entries in **SIM, Phone**. This function requires Security code.

1. Press **[Names]** to enter the phonebook in standby mode.
2. Scroll to **Delete all**, then press **[Select]**.
3. Then select a memory to erase: **SIM, Phone**.
4. And then you will be requested to enter Security code.
5. Press **[Select]** or, press **[Back]** to cancel.

### Copy all [Menu 6-3-7]

You can copy/move entries from SIM card memory to Phone memory or from Phone memory to SIM card memory.

1. Open the phonebook first by pressing **[Names]** in standby mode.
2. Scroll to **Copy all**, then press **[Select]** to enter this menu.
3. Then submenus below will be displayed.

- **SIM to Phone [Menu 6-3-7-1]**

You can copy the entry from SIM Card to Phone memory.

- **Phone to SIM [Menu 6-3-7-2]**

You can copy the entry from Phone memory to SIM Card.

- **Keep original [Menu 6-3-7-x-1]**

Both original and relocated entries are kept in memories.

- **Delete original [Menu 6-3-7-x-2]**

Original entry is deleted whereas relocated entry remains in the memory.



## Organizer [Menu 6]

### Information [Menu 6-3-8]

You can select a service dial number, check memory and own number list

#### • Service dial number

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing [Names] in standby mode.
2. Scroll to **Information** and scroll to service dial number, then press [Select] to enter.
3. The names of the available services will be shown.
4. Use , and to select a service, press [Send].

#### • Check memory

This feature allows you to see how many free and in-use are in your phonebook.

1. Open the phonebook first by pressing [Names] in standby mode. You can also go **Phonebook** menu by scrolling , . Select **Information** by pressing [Select].
2. Scroll to **Check memory**, and then press [Select] to enter this menu.

#### • Own number (SIM dependent)

You can check your own number in SIM card.

If own number is empty, you can add new one. You can also edit and delete it.

## Fun & Tools [Menu 7]



 







### Game [Menu 7-1]

You can enjoy the games in a phone.

### Calculator [Menu 7-2]

This contains the standard functions such as +, -, x, ÷ : **Addition, Subtraction, Multiplication, and Division.**

1. Input the numbers using numeric keys.
2. Use a , , ,  to select a sign for calculation.
3. Then input the numbers followed by the sign.
4. You can view the result by pressing  [Result] key or  [OK] key.
5. If you want to continue the calculation, repeat the process.
6. Use  [Reset] key to erase any numbers or signs. Press  key if you want to end the calculation process.

### My folder [Menu 7-3]

You can view, delete, and control download contents.

#### Picture [Menu 7-3-1]

#### Animation [Menu 7-3-2]

#### Sound [Menu 7-3-3]

#### The Submenus for each main one [Menu 7-3-x-x]

- **Edit title [Menu 7-3-x-1]**

You can edit the title for each download content.

- **Delete [Menu 7-3-x-2]**

You can delete each download content.





## Fun & Tools [Menu 7]

### • Delete all [Menu 7-3-x-3]

You can delete all download contents.

### Unit converter [Menu 7-4]

This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length**, **Surface**, **Weight**, and **Volume**.

1. You can select one of four unit types by pressing  $\square$  [Unit] key.  
You can also move the cursor using  $\overline{\text{←}}$ ,  $\overline{\text{→}}$  and then select the type using  $\{ \text{←} , \text{→} \}$ .
2. Select the current value by using  $\overline{\text{←}}$ ,  $\overline{\text{→}}$  and then, you can set the standard unit by using  $\{ \text{←} , \text{→} \}$ .
3. Select the unit to convert by using  $\{ \text{←} , \text{→} \}$ .
4. Input the numbers in blank.
5. Press  $\text{↵}$  or  $\text{⏪}$  [Back] if you want to finish the process.

### World time [Menu 7-5]

You can view the time for each city around the world. Also, you can set the current time to the city time you select.

1. Select the city belonged to the time zone by pressing  $\{ \text{←} , \text{→} \}$  key.
2. You can set the current time to the city time you select. Press  $\text{⏪}$  [Back] key to exit the menu.

### Voice recorder [Menu 7-6]

You can save and play 3 voice messages and each one can be recorded up to 30 seconds.

### Answering phone [Menu 7-7]

You can activate answering machine on the condition of adjusting each environment as follows:



### **Cancel [Menu 7-7-1]**

You can cancel the function.

### **General [Menu 7-7-2]**

If you activate this, callers will hear the General voice guide.

### **Meeting [Menu 7-7-3]**

If you activate this, callers will hear the Meeting voice guide.

### **Driving [Menu 7-7-4]**

If you activate this, callers will hear the Driving voice guide.

### **User define [Menu 7-7-5 / 7-7-6]**

You can record your own voice guide. If you activate this, callers will hear the voice guide.

### **Recorded messages [Menu 7-7-7]**

You can check recorded messages.

#### **Note**

- The phone can store up to 10 recorded messages. If the phone receives over 10 messages, the auto-answering function doesn't work. Then, you should delete some messages.

### **Ringling duration [Menu 7-7-8]**

You can set the ringing time before the answering system answers incoming calls. The system can answer calls after 1 ring, 3 rings, or 5 rings.

#### **Note**

- Anytime you activate Answering machine, Profile is automatically set as Vibration mode.



## Fun & Tools [Menu 7]

### Infrared [Menu 7-8]

If you activate this function, you can use PC-sync by infrared. In addition, you can't use Handsfree and infrared function at the same time.

#### **PC Sync!**

- PC Sync is a program for data exchange PC and a phone by a data cable. About more detail for using guide refers to PC Sync Help file in CD.

## Internet [Menu 8]




Your phone supports internet services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather forecast, and flight time.

### Home [Menu 8-1]

You can connect the defined homepage in the activated profile.

### Bookmarks [Menu 8-2]

You can save up to 50 bookmarks. Scroll to the desired bookmark and press  [Options] key to operate the following options.

- **Connect** : Connect to selected bookmark.
- **Add new** : Save a new bookmark manually.
- **Edit** : Edit the title and address of bookmark.
- **Delete** : Erase the selected bookmark.

#### Note

- If any bookmarks are not saved yet, only "Add new" menu is available.

### Push messages [Menu 8-3]

You can manage an inbox and a message for using push service.

#### Inbox [Menu 8-3-1]

You can read or delete the push messages.


#### Receive [Menu 8-3-2]

You can set the option whether you will receive the message or not.



## Internet [Menu 8]

### Profiles [Menu 8-4]

You can make up to 5 profiles and activate only one out of them. Scroll to desired profile  and press to access available options.

#### Activate [Menu 8-4-1]

Activate the selected profile.

#### Settings [Menu 8-4-2]

Edit and change WAP settings of selected profile.

##### • Homepage [Menu 8-4-2-1]

This setting allows you to enter the address (URL) of site you want to use as homepage. You do not need to type "http://" at the front of each URL the WAP Browser will automatically add it.

##### • Display image [Menu 8-4-2-2]

You can select whether images on WAP cards are displayed or not.

##### • Connect type [Menu 8-4-2-3]

There are 2 connection types. Depending the gateway you are using, you can select one of them.

**Continuous** : Connection-oriented service

**Temporary** : Connectionless service

##### • Secure setting [Menu 8-4-2-4]

You can select None or Secure depending on the gateway. The gateway should support this option.

##### • Gateway information [Menu 8-4-2-5]

Most WAP gateways do not request user ID and password. If the gateway doesn't have ones, these should be provided by the network. In addition, they must be set before browsing WAP sites.



• **Bearer [Menu 8-4-2-6]**

You can select Data or GPRS as the bearer.

- Data
- GPRS

The next menu [Menu 8-4-2-7] depends on the selected bearer.

• **Data settings [Menu 8-4-2-7]**

- IP address** : Enter the IP address of the WAP gateway you access.
- Dial up number** : Enter the telephone number to dial to access your WAP gateway.
- User ID** : The user's identity for your dial-up server (and NOT the WAP gateway).
- Password** : The password required by your dial-up server (and NOT the WAP gateway) to identify you.
- Call type** : Select the type of data call: Analogue or Digital (ISDN).
- Call speed** : The speed of your data connection.

• **GPRS settings [Menu 8-4-2-7]**

- IP address** : Enter the IP address of the WAP gateway you access.
- APN** : Input the Access point name to connect to the external network.
- User ID** : The user's identity for your dial-up server (and NOT the WAP gateway).
- Password** : The password required by your dial-up server (and NOT the WAP gateway) to identify you.



## Internet [Menu 8]

- **Linger time [Menu 8-4-2-8]**

After setting the limited time (30~300 sec.), the service will be disconnected if there was no inputting or transferring data.

- **Rename [Menu 8-4-3]**

Edit the Profile Name.

- **E-mail server [Menu 8-4-4]**

Save the URL address of the E-mail that you frequently use.

- **Connect**

Connect to the URL that you configured as the E-mail server.

- **Edit address**

Enter the URL address of the E-mail.

- **Go to URL [Menu 8-5]**

You can move to the site that you want. You need to type URL address of the site before connection.

- **Cache settings [Menu 8-6]**

You can remove the contents of Cache memory or change the Cache mode.

- **Clear cache [Menu 8-6-1]**

The contents of Cache memory will be removed.



### **Cache check [Menu 8-6-2]**

You can check Cache memory.

- **Always [Menu 8-6-2-1]**

The cache is always checked whenever URL loading or navigating.

- **Start only [Menu 8-6-2-2]**

The cache is only checked when the WAP is started.

- **Off [Menu 8-6-2-3]**

The cache is never checked.

### **WAP information [Menu 8-7]**

You can view the information about G7030 WAP.

### **Reset profiles [Menu 8-8]**

You can reset all setting values to the factory default.

**Note**

- You can download an image by the format of WBMP and GIF87A.





## Internet On-line menu

If you are on line, you can view the following menus.

■ **Home**

This is the same as [Menu 8-1].

■ **Reload**

This reloads the current page.

■ **Bookmarks**

This is the same as [Menu 8-2].

■ **Save as bookmarks**

Save the current URL as a bookmark. You can also edit the bookmark title.

■ **Messages**

Same to [Menu 1].

■ **Push message**

See [Menu 8-3].

■ **Go to URL**

Same as [Menu 8-5].

■ **Go to e-mail server**

Connect the current URL as an E-mail server.

■ **Set as e-mail server**

Save the current URL as an E-mail server.

■ **Clear cache**

Remove the contents of cache memory.

## SIM service [Menu 9]



Your service provider can offer special application through SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.



## Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.



### Standard Battery



### Portable Handsfree

This connects to your phone, allowing handsfree operation.

 


### Travel Adapter

This charger allows you to charge the battery while away from home or your office.



### Neckstrap



### Data Kit/CD

You can connect your phone to PC to exchange the data between them.

#### Note

- Always use genuine LG accessories.
- Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

## Care and Maintenance



**When using this unit, basic safety precautions as below should be always followed.**

- Do not touch the adapter with wet hands.
- Do not disassemble this unit. (Take it to a qualified service technician when repair work is required.)
- Away from electrical appliance such as a TV, radio or personal computer.
- The unit should be situated from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can be affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.



## Care and Maintenance

### □ Caring for the Battery

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

## Technical data



### General

---

Product name : G7030

System : GSM 900 / DCS 1800

### Ambient temperatures

---

Max : +55°C

Min : -10°C

# Declaration of Conformity



This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

- 1. Health (Article 3.1.a of the R&TTE Directive)
- 2. Safety (Article 3.1.a of the R&TTE Directive)
- 3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
- 4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

If available, write the contact person(s)

Mr. Jin Seog, Kim  
 LG Amsterdam Branch Office  
 Capronilaan 6, 1119 NR Schiphol-rijik,  
 The Netherlands  
 (Tel.) +31-20-655 7774

Mr. Ji Jong, Jeon  
 LG Electronics Inc. GSM Division  
 Emerald BD, 1042 Hogye-Dong, Dongan-Gu  
 Anyang-city, Kyuonki-Do  
 431-080, Korea

# CE 0168

Memo







## Memo