

信譽保證 服務第一

意大利金章牌，大廠製造，信譽昭著，品質當然有所保證。總代理大昌貿易行有限公司，規模龐大，員工眾多，原廠零件齊全，維修保養之效率快捷妥當，為顧客提供最佳的售後服務，確保絕無後顧之憂。

Highest Quality, Best Service.

Zanussi is well known for its high functionality and outstanding quality. All Zanussi products are fully backed by the extensive electrical service network of Dah Chong Hong, Ltd. with experienced technicians ready to serve and ample spare parts from original manufacturers for replacement.



總代理：大昌貿易行有限公司

電器部及服務中心地址：
香港鴨脷洲南道111號鴨脷洲服務中心十二樓
營業部電話：2802 6114 圖文傳真：2873 3911
服務中心電話：2282 1122
廣州服務中心：廣州海珠區南寧東路563號順地電器維修廠
電話：(8620) 444 7075

 
SOLE AGENT: **DAH CHONG HONG, LTD.**

Address of Electrical Appliances Department and Service Centre:
12/F, Ap Lei Chau Service Centre, 111 Lee Nam Road, Ap Lei Chau, Hong Kong
Sales Department, 2802 6114 Fax: 2873 3911
Service Centre, 2282 1122
Guangzhou Service Centre:
YUE JIN Electrical Repairing & Assembling Factory, 563 Nan Ning Road E, Haizhu (Guangzhou) C.S.
Telephone: (8620) 444 7075

ZANUSSI
金章牌



電冰箱 用法指引

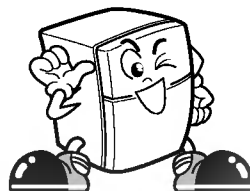

在裝設和使用您的冰箱前，請詳細閱讀
本用法指引並請將其保存以備不時之需。

目錄

放置冰箱 3

冰箱的部分 4

使用電冰箱 5-7

 初次使用

 溫度之調節

 製造冰塊

 新鮮食品存放室

 除霜

 除臭

食品存放指南 8


清潔電冰箱 9

 一般指引 9

 更換燈泡 10

 特別注意事項 10

 
 未請修護人員修理之前 11

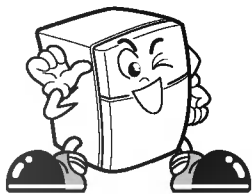

**SERVICE CALLS CAN OFTEN BE AVOIDED!
IF YOU FEEL YOUR REFRIGERATOR IS NOT OPERATING PROPERLY, CHECK THESE POSSIBLE CAUSES FIRST :**

PROBLEM	POSSIBLE CAUSES
REFRIGERATOR DOES NOT OPERATE	Has a house fuse blown or circuit breaker tripped? Has the power cord plug been removed or loosened from the electrical wall outlet?
REFRIGERATOR OR FREEZER COMPARTMENT TEMPERATURE TOO WARM	Temperature control not set on proper position. Appliance is placed close to wall or heat source. Warm weather-frequent door openings. Door left open for a long time. Large amount of foods are kept in the refrigerator.
ABNORMAL NOISE(S)	Refrigerator is installed in a weak or uneven place, or leveling screw needs adjusting. Unnecessary objects placed behind the refrigerator.
REFRIGERATOR HAS ODOR	Foods with strong odors should be tightly covered or wrapped. Interior needs cleaning.
DEW FORMS ON THE CABINET SURFACE	Not unusual during periods of high humidity. Door may have been left ajar.

 1. Unplug the power cord from the outlet.
2. Remove refrigerator shelves.
3. To remove the lamp cover, insert a slotted driver at the one of under hole of the lamp cover and pull it out forwards.
4. Turn the lamp counterclockwise.
5. Assemble in reverse order of disassembly.
Replacement bulb must be the same specification as original.

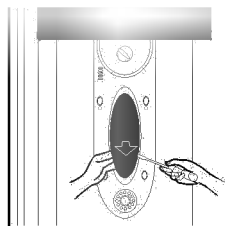

IMPORTANT WARNINGS

DO NOT USE AN EXTENSION CORD

Use this appliance on a dedicated circuit; that is, an outlet that is the only outlet on the circuit. Overloading a circuit causes low voltage, malfunction, possible damage to the equipment, and poor cooling capacity. Check your local electric code or consult a qualified electrician if you have questions.

ACCESSIBILITY SUPPLY PLUG

The refrigerator-freezer should be so positioned that the supply plug is accessible for quick disconnection if an accident happens.

SUPPLY CORD REPLACEMENT

If the supply cord is damaged, it must be replaced by the manufacturer or replacement or a similarly qualified person in order to avoid a hazard.

VERY DANGEROUS ATTRACTION

An empty refrigerator can be a dangerous attraction to children. Remove either gaskets, latches, lids, or the entire door from your unused appliance, or take some other action to make it harmless.

ABOUT GROUNDING (EARTHING)

In the event of an electric short circuit, grounding (earthing) reduces the risk of electric shock by providing an escape wire for the electric current.

In order to prevent possible electric shock, this appliance must be grounded.

Improper use of the grounding plug can result in an electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

This appliance must be grounded (earthed).

DON'T WAIT! DO IT NOW!

Do not store inflammable materials, explosives, or chemicals in the refrigerator.

本冰箱以最新技術精心製造。我們相信您對它的表現及可靠性將非常滿意。在使用冰箱之前，請將本使用說明仔細閱讀有關正確的放置，使用以及維護方法。本說明書亦備有問題排除的指引。

放置冰箱

選擇正確的地點

 
1. 請將冰箱放在方便於使用的地方。
2. 避免將冰箱放在熱源附近，潮濕及陽光直射之處。
3. 請給予冰箱空氣流通空間俾使冰箱能有效的運作。請自牆壁留下5公分或以上的距離，並於其上方留下25公分或以上的空間。冰箱前面的高度，尤其在鋪上地毯的地板最好距離地板2.5公分。
4. 爲了防止振動，請調節其高度。當地板不平時，亦請旋轉高度調節器。請將冰箱前面調整比後方稍高些以便容易關門。將冰箱稍微抬高，然後將調節螺絲旋轉便可達到此目的。將調節螺絲向右旋轉可提高冰箱位置，反之向左轉以降低其高度。

然後

1. 請將冰箱仔細擦乾淨，除去運輸中所堆積的塵垢。
2. 將冰箱的配件，諸如冰塊盒，架子等安裝在其預定位置。
3. 將電線插入插座。請勿將其他電器用品插在同一插座上。
4. 在未放入食品之前，請讓冰箱運轉2-3小時。請檢查冷凍室的溫度。如果已經冷了，便可開始使用。

電冰箱的部分

冷凍室

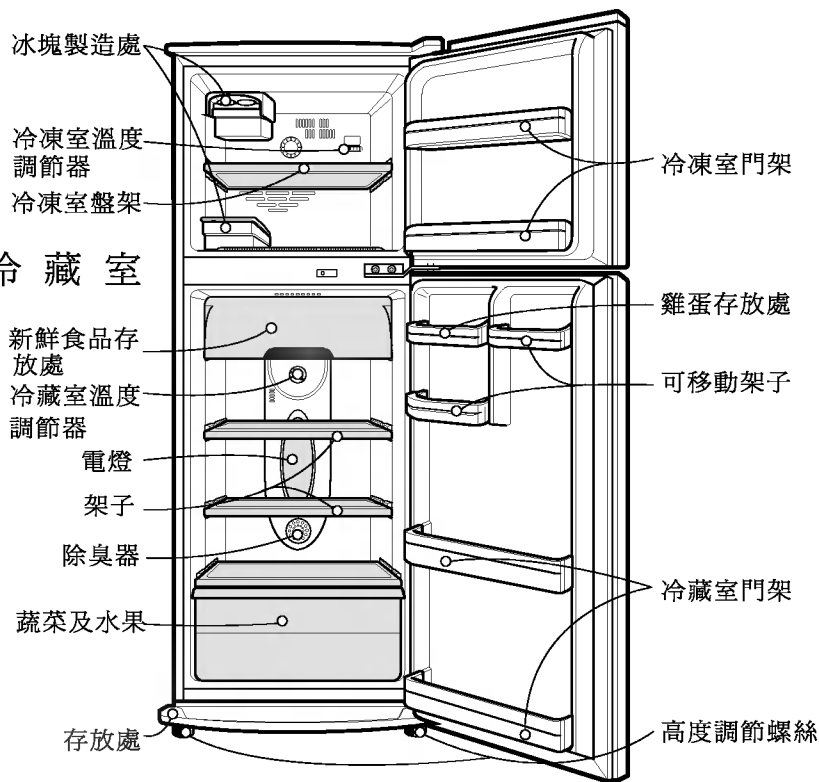

● 不同的型式不一定全部具備以上配件

CLEANING

It is important that your refrigerator be kept clean to prevent undesirable odors. Spilled food should be wiped up immediately, since it may acidify and stain plastic surfaces if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners, or strong alkaline solutions on any surface.

Before you clean, remember that damp objects will stick or adhere to extremely cold surfaces. Do not touch frozen surfaces with wet or damp hands.

EXTERIOR - Use a lukewarm solution of mild soap or detergent to clean the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

INTERIOR - Regular cleaning of the interior and interior parts is recommended. If you have the No Frost model which defrosts automatically, leave both doors open during the entire cleaning process. Disconnect the power supply, and remove food and all compartment shelves, storage trays etc. Wash all compartments with a baking soda solution. Rinse and dry.

INTERIOR PARTS - Wash compartment shelves, door racks, storage trays, and magnetic door seals etc. with the baking soda solution or a mild detergent and warm water. Rinse and dry.

WARNING

Always remove power cord from the wall outlet prior to cleaning in the vicinity of electrical parts (lamps, switches, controls, etc.). Wipe up excess moisture with a sponge or cloth to prevent water or liquid from getting into any electrical part and causing a electric shock. Do not use flammable or toxic cleaning liquids.

GENERAL INFORMATION

VACATION TIME

During average length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you plan to be away for an extended period, remove all food, disconnect the power cord, clean the interior thoroughly, and leave each door OPEN to prevent odor formation.

POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off. During power failures of longer duration, place a block of dry ice on top of your frozen packages.

DRY ICE WARNING

 
When using dry ice, provide adequate ventilation. Dry ice is frozen carbon dioxide(CO₂) When it vaporizes, it can displace oxygen, causing dizziness, light-headedness, unconsciousness, and death by suffocation. Open a window and do not breathe the vapors.

IF YOU MOVE

If you move, empty the refrigerator (freezer) completely and wash a mild solution of baking soda and water. (2 TBS soda to 1 quart water) Be sure the soda is completely dissolved to avoid scratching the inside of the refrigerator (freezer). Secure any loose items, such as racks, bins, ice trays, etc. Do not try to move a loaded refrigerator.

ANTI-CONDENSATION PIPE

The outside wall of the refrigerator cabinet may sometimes get warm, especially just after installation. Don't be alarmed. This is due to the anti-condensation pipe, which pumps hot refrigerant to prevent sweating on the outer cabinet wall.

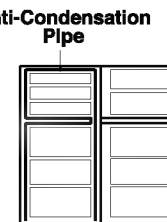

SUGGESTIONS ON FOOD STORAGE

STORING FOOD

- Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in maintaining its freshness and flavor.
- Do not store food which goes bad easily at low temperatures, such as bananas, pineapples, and melons.
- Allow hot food to cool prior to storing. Placing hot food in the refrigerator could spoil other food and lead to higher electric bills!
- When storing, cover food with vinyl wrap or store in a container with a lid. This prevents moisture from evaporating and helps food to keep its taste and nutrients.
- Do not block air vents with food. Smooth circulation of chilled air keeps refrigerator temperatures even.
- Do not open the door frequently. Opening the door lets warm air enter the refrigerator, causing temperatures to rise.

FREEZER COMPARTMENT

- Do not store bottles in the freezer compartment - they may break when frozen.
- Do not refreeze food that has been thawed. This deteriorates taste and nutrition.
- When storing frozen food like ice cream for a long period, place it on the freezer shelf, not in the door rack.

REFRIGERATOR COMPARTMENT

- Avoid placing moist food deep inside refrigerator shelves, it could freeze upon direct contact with chilled air.
- Always clean food prior to refrigeration. Vegetables and fruits should be washed and wiped, and packed food should be wiped clean to prevent adjacent food from spoiling.
- When storing eggs in their storage rack, ensure that they are fresh. Always store them in an upright position, which keeps them fresh longer.

使用電冰箱

初次使用

 
初次使用時，放入食品之前請讓您的冰箱運轉2 - 3小時。

如果在運轉中停電或電線脫落，請稍候5分鐘再將冰箱開動。

調節電冰箱的溫度


- 冰箱內備有冷藏室及冷凍室的溫度調節器
- 冷藏室溫度調節器最初位置位於MID
- 冷凍室溫度調節器最初位置位於4

冷藏室的溫度調節

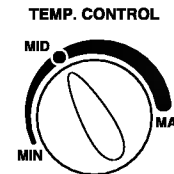

- 如果您希望更冷的溫度，請將溫度調節器轉至MAX的位置。反之，如果希望較高的溫度，請將溫度調節器轉至MIN的位置。

 冷凍室的溫度調節

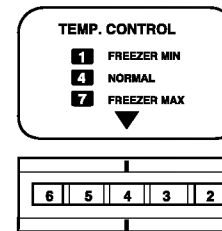

- 溫度調節 - 1, 2, 3, 4, 5, 6, 7 將溫度調節器調節於7的位置將使冷凍室的溫度較冷，但冷藏室的溫度會稍微上升，因為流入冷藏室的空氣將減少。
- 天氣冷的時候，冰箱運作較少。導致冷凍室將較不冷。
- 為使冷凍室溫度較冷，請將溫度調節器轉至6 - 7的位置。如果您在冰箱內存放了許多食品或經常打開冷藏室門戶，其溫度將趨於上升。此時請將溫度調節器轉至6與7之間來降低冷藏室的溫度。溫度下降後，便可將溫度調節器調至原來位置以節約電能。

- 天氣熱或冷藏室存放許多食品的時候，冷藏室將趨於不夠冷。為使其較冷，請將溫度調節器轉至2 - 4的位置，俾使較多空氣流向冷藏室。將溫度調節器轉至6 - 7的位置將導致冷藏室不夠冷。

 
使用電冰箱

製造冰塊


製造冰塊的方法隨冰箱冰塊製造型式而易。

一般型式

- 欲製造冰塊時，請將冰塊盤注入開水，然後將其放於冰塊盒內。

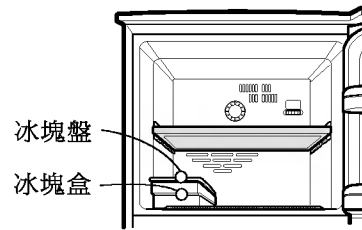


- 欲取用冰塊時，請將手握住冰塊盤的一邊，然後慢慢地將另一邊扭轉。

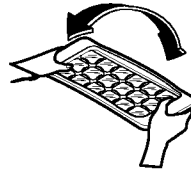 


旋轉型式

 - 欲製造冰塊時，請將冰塊盤注入開水，然後將其放於其位置。

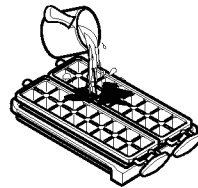


 - 欲取用冰塊時，請將手握住冰塊盤的一邊，然後慢慢地將另一邊扭轉。冰塊將掉入冰塊盒內。

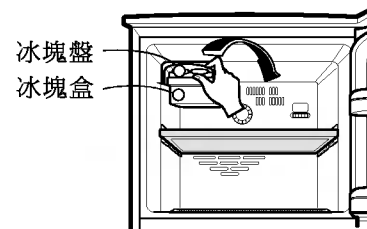

- 為使冷凍室空間較為寬闊，可將冰塊製造箱移開。

 
- 先將冰塊盤及冰塊盒移開，然後將其邊緣往右壓以取下其框架。

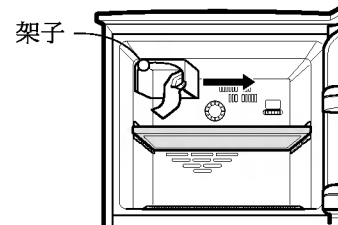

OPERATION

CHILLED COMPARTMENT

 When the door is opened, the warmer air doesn't influence the fresh meat. You can keep food fresher in it.

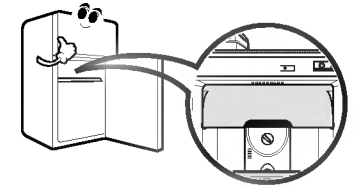

DEFROSTING

 
 
- Defrosting takes place automatically.
- The defrosted water flows down to the evaporating tray which is located in the lower back side of the refrigerator and is evaporated automatically.

DEODORIZER

- By using a catalyst, deodorizing performance is guaranteed.
- Unpleasant odor of food in the fresh food compartment is deodorized with no harm to you and the food.

How to use

- Do not prick the deodorizer with a sharp tip because the deodorizing catalyst may be damaged.
- When storing food with a strong odor, wrap it or store it in a container with a lid because the odor may be passed on to other foods.

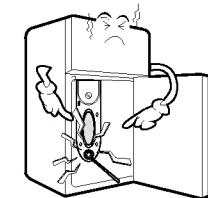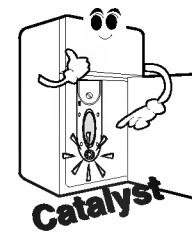


OPERATION

ICE MAKING

Determine which type ice-making system you have.

General Type

 - To make ice cubes, fill the ice tray with water and place it on the ice cube box. Then insert the ice cube box in the freezer compartment.

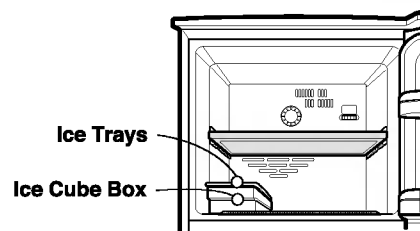


- To remove ice cubes, hold the tray at its ends and twist gently.




Twisting Ice Serve Type

 - To make ice cubes, fill the ice tray with water and insert in its position.

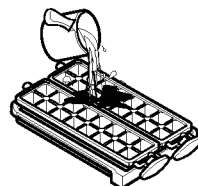


 - To remove ice cubes, hold the knob of the tray and turn gently. Then, ice cubes drop in the ice cube box.

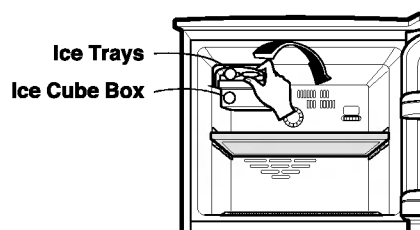

- You can remove the Twisting Ice Serve to make the freezer compartment larger.

 
- You should remove the ice Trays and Ice Cube Box first, then pull the frame out toward the right side.

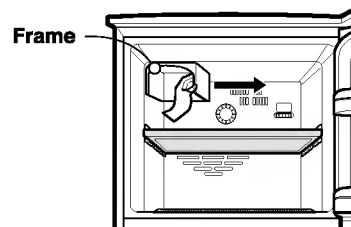

使用電冰箱

新鮮食品存放處

 當您將冷藏室門戶打開時，外氣將不會影響食品的新鮮度。您可將新鮮食品存放於此處。

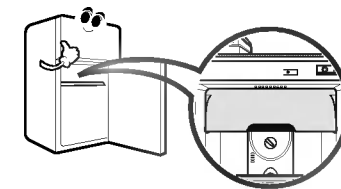

除霜

 
 
- 除霜是自動進行的。
- 除霜過程所產生的水將流入承接盤而將自動蒸發。

除臭

- 使用觸媒的除臭器將正常地操作。
- 在冷藏室之不良味道將以不影響食品及您的健康而被去除。

使用除臭器的方法

- 請勿以尖利之器具取下除臭器，因為如此能使觸媒損壞。
- 當您存放味道較濃烈的食品時，請將其包起或放置於密閉之盒子內，因其味道將影響其他食品。

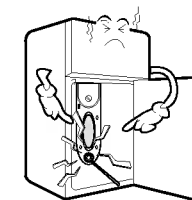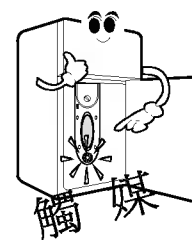

食品存放指南

食品的存放

- 請將新鮮食品存放於冷藏室。冷凍及退冰解凍為食品新鮮度及食品味道保存的重要因素。
- 請勿將易腐爛的食品，如鳳梨，香蕉，哈密瓜等存放於低溫處。
- 放入冰箱前，請將熱食品事先放涼。將熱食品放入冰箱可能使其他食品損壞且將使電費提升。
- 存放食品時，最好能將之包起或放入密閉之盒子內以防止蒸發以保存食品之味道及營養。
- 請勿以食品堵住空氣之通道。冰箱溫度之穩定有賴於冷空氣之循環。請勿經常打開冰箱門戶。外氣能使冰箱內的溫度升高。

冷凍室

- 請勿將瓶裝類食品存放於冷凍室以免冰凍時破裂。
- 請勿將退冰解凍後的食品再度冷凍，因為如此將破壞食品之味道及營養。
- 如果您將長期存放如冰淇淋等之冷凍食品，請將其存放於冷凍室架上而勿放於冷凍室門架。

冷藏室

- 請勿將潮濕的食品存放於冷藏室架之間，因此處將與冷空氣直接接觸。
- 請將食品洗淨後再放入冰箱。蔬菜及水果最好洗淨包起，而有包裝的食品仍然將其與其包裝一起存放以免影響附近的食品。
- 將雞蛋以直立存放於雞蛋架能使雞蛋保存於較長的時間。

OPERATION

STARTING

 
When your refrigerator is first installed, allow it 2-3 hours to stabilize at normal operating temperatures prior to filling it with fresh or frozen foods.

If operation is interrupted, allow 5 minutes delay before restarting.

BEFORE SETTING THE TEMPERATURE


- This refrigerator has one temperature control knob for the refrigerator compartment and one temperature control dial for the freezer compartment.
- The default setting of the temperature control knob for the refrigerator compartment is 'MID'.
- The default setting of the temperature control dial for the freezer compartment is '4'.

CONTROLS FOR REFRIGERATOR COMPARTMENT

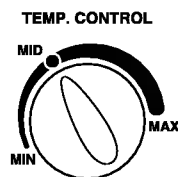


- For colder temperatures, adjust the control knob to MAX, and for warmer temperatures, adjust the control knob to MIN position

 CONTROLS FOR FREEZER COMPARTMENT

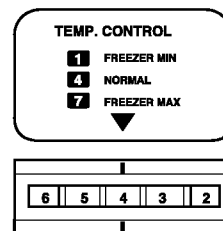

- TEMP. CONTROL - 1, 2, 3, 4, 5, 6, 7
Setting at "7", the freezer compartment becomes colder. But the refrigerator compartment becomes warmer because less cold air flows into the refrigerator compartment.
- In cold weather the unit operates less and the freezer compartment has a tendency to warm up.
For colder freezer, turn the TEMP. CONTROL to "6"~"7".
- If you take a lot of foods in the freezer or open its door frequently, its temperature is apt to be somewhat higher. In this case, set the TEMP. CONTROL dial between 6 and 7 to cool it. Return the TEMP. CONTROL dial to the original position to cut down the consumption of energy.
- In hot weather or to put much foods in the refrigerator compartment, the refrigerator compartment has a tendency to warm up.
For colder refrigerator, turn the TEMP. CONTROL to "2"~"4" to direct more cold air into the refrigerator compartment.
Setting at "6"~"7" of the TEMP. CONTROL, the refrigerator compartment will not be cold enough.

 FEATURE CHART

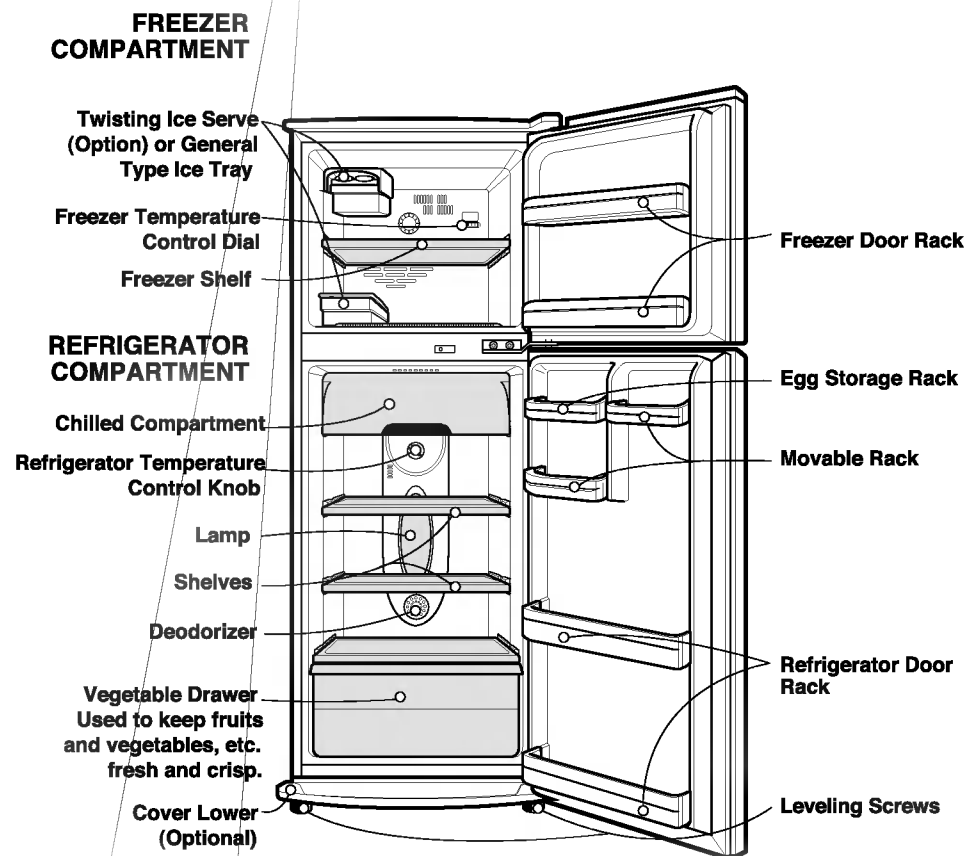

清潔電冰箱

您最好將冰箱定期清潔，以防止不良的味道之產生。請立即將翻倒之食品擦乾淨，否則黏著後其酸性能污染塑膠表面。

請勿使用鞋擦，刷子或其他粗糙的清潔工具及鹼性清潔劑清洗冰箱表面。

清理冰箱之前，請記住各種潮濕的物品將很容易黏附於低溫的表面。請勿以潮濕或骯髒的手觸摸冷凍表面。

外部 - 請使用柔軟之肥皂水或微溫之清潔劑擦拭冰箱外部。然後以濕布擦乾淨。

內部 - 最好能定期擦洗冰箱內部。請將電源插頭取下，然後將所有食品拿出。

內部的配件 - 請以弱蘇打水或軟弱清潔劑及溫水清洗。以清水洗滌後將其擦乾。

注意：

清洗前請務必將電源插頭取下，因冰箱備有電子配件。請將水滴以海綿或抹布擦乾以防止水滴或液體觸致電子配件而造成短路。請勿使用易燃品或酸液清洗冰箱。

一般指引

外出時

長時外出時，最好將冰箱電源關閉。請將所有食品拿出，將電插頭取下，將冰箱內部妥為清洗，然後打開冰箱門戶以防止不良之味道之產生。

停電

一般而言，停電原因將於二小時內被排除而後回復供電，因而不影響冰箱的溫度。既然如此，最好在停電中避免經常打開冰箱門戶。如果停電時間維持過久，可將乾冰放置在您冰凍之食品包裝上。

請小心使用乾冰

當您使用乾冰的時候，請餘留足夠的空氣循環空間。乾冰係凝固的二氧化碳。當其蒸發時，二氧化碳將與氧氣結合而導致眩暈，暈倒甚至因缺氧而死亡。

 
將冰箱移動

請將冰箱鬆動部份取下或綁緊。為了避免高度調節螺絲損壞，請將之旋轉至最低處。


凝結防止管

有時冰箱的外部將感到溫溫暖，尤其在新使用之時。請勿緊張，這是因為凝結防止管正在輸送為防止冰箱外部冒汗的熱冷媒。

凝結防止管

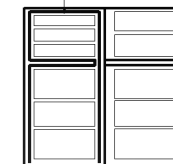

 1. 將電插頭取下。
2. 將冷藏室各架子移開。
3. 以薄起子插入燈蓋和蓋孔下方且將之往前方壓下。
4. 將燈泡以逆時針方向旋轉。
5. 安裝新燈泡的順序即與取出燈泡的順序相反。更換之燈泡規格務必與原品相同。

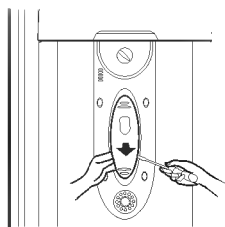

特別警告

請勿使用雙用插座

最好您的冰箱單獨使用一個插座。如此便可避免您屋內其他電器用品或的電燈產生較高的負荷而導致跳脫。

電源線之方便位置

冰箱應放置於在事故發生時其電源線易於取下之位置。

電源線之更換

如果您冰箱的插座壞了，請向製造廠指定的修護所購買

接地電線

當產生短路時，地線將減少流至電子配件過量電流造成的影響。

爲了防止瞬間過量的電流，則本品應予接地。

不正確的地線貼法將引起大量的電流。當您不甚瞭解該地線的連接方法，或者若您猶豫是否應將該地線連接時，請向瞭解地線連接的電匠或修護人員詢問。

危險

空冰箱成爲兒童們關注的處所。請將不使用的冰箱墊板或將部份或整個冰箱門戶拆下。或採取其他使其成爲不危險的措施。

本品應接地。

請勿延誤！請即刻動手

請勿存放化學品或易爆炸品

THIS REFRIGERATOR IS MANUFACTURED WITH GREAT CARE AND UTILIZES THE LATEST IN TECHNOLOGY. WE ARE CONFIDENT THAT YOU WILL BE FULLY SATISFIED WITH ITS PERFORMANCE AND RELIABILITY. BEFORE USING YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT PROVIDES EXACT INSTRUCTIONS FOR INSTALLATION, OPERATION, AND MAINTENANCE, AND ALSO SUPPLIES SOME USEFUL HINTS.

INSTALLATION

SELECT A GOOD LOCATION

1. Place your refrigerator where it is easy to use.
2. Avoid placing the refrigerator near heat sources, direct sunlight or moisture.
3. Air must circulate properly around your refrigerator to ensure efficient operation. If your refrigerator is placed in a recessed area in the wall, allow at least 10 inches (25 cm) or greater clearance above the refrigerator and 2 inches (5 cm) or more from the wall. The refrigerator should be elevated 1 inch (2.5 cm) from the floor, especially if the floor is carpeted.
4. To avoid vibrations, the refrigerator must be level. If necessary, adjust the leveling screw(s) to compensate for unevenness of the floor. To close the doors easily, the front should be slightly higher than the rear. Leveling screw(s) can be turned easily by tipping the cabinet slightly. Turn the leveling screw(s) clockwise to raise the refrigerator, counterclockwise to lower it.

NEXT

1. Wipe off all dust accumulated during shipping and clean your refrigerator thoroughly.
2. Install accessories such as the ice cube box, evaporating tray cover, etc., in their proper places. They are packed together to prevent possible damage during shipping.
3. Connect the power supply cord (or plug) to the outlet. Don't double up with other appliances on the same outlet.
4. Prior to use, let the refrigerator run for 2-3 hours. Check the flow of cold air in the freezer compartment to ensure proper cooling has taken place. Your refrigerator is now ready for use.

CONTENTS

INSTALLATION15

FEATURE CHART16

OPERATION17 -19

Starting

Temperature Control

Ice Making

Chilled Compartment

Defrosting

Deodorizer

SUGGESTIONS ON FOOD STORAGE20


CLEANING21

GENERAL INFORMATION21

LAMP REPLACEMENT22

IMPORTANT WARNINGS22

 BEFORE CALLING FOR SERVICE23

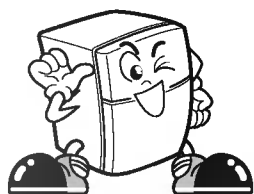

在許多情況下您可能不必請修護人員！
 如果您的電冰箱操作不正常，請先檢查其可能導致異常的原因：

故障項目	可能原因
冰箱無法運轉	<ul style="list-style-type: none"> 請檢查您房子電源保險絲的狀況 再看是否冰箱插頭鬆弛
不冷	<ul style="list-style-type: none"> 溫度調節器未轉至適當位置 冰箱位置太過靠近牆壁或靠近熱源 周圍溫度相當高，經常打開冰箱門戶 冰箱門戶開著過久 冰箱內存放太多食品
產生異響	<ul style="list-style-type: none"> 冰箱放置於不穩定，不平的地板，或者應將冰箱高度調整 有物品留置於冰箱後面
冰箱有異味	<ul style="list-style-type: none"> 濃烈味道的食品未妥善包著 冰箱內部需要清洗
冰箱表面有霧	<ul style="list-style-type: none"> 周圍空氣濕度高時為正常現象 檢查是否冰箱門戶未關緊

信譽保證 服務第一

意大利全車牌，大廠製造，信譽昭著，品質當然有所保證。總代理大昌貿易行有限公司，規模龐大，員工眾多，原廠零件齊全，維修保養之效率快捷妥當，為顧客提供最佳的售後服務，確保絕無後顧之憂。

Highest Quality, Best Service.

Zanussi is well known for its high functionality and outstanding quality. All Zanussi products are fully backed by the extensive electrical service network of Dah Chong Hong, Ltd. with experienced technicians ready to serve and ample spare parts from original manufacturers for replacement.

ZANUSSI



 
總代理：大昌貿易行有限公司

電腦部及服務中心地址：
香港鴨脷洲利南道111號鴨脷洲服務中心十二樓
銷售部電話：2802 6114 圖文傳真：2873 3911
服務中心電話：2282 1122
廣州服務中心：廣州海珠區南寧東路563號順地電器維修廠
電話：(8620) 444 7075

SOLE AGENT: **DAH CHONG HONG, LTD.**

Address of Electrical/Appliances Department and Service Centre:
12/F, Ap Lei Chau Service Centre, 111 Lee Nam Road, Ap Lei Chau, Hong Kong
Sales Department, 2802 6114, Fax: 2873 3911
Service Centre, 2282 1122
Guangzhou Service Centre
YUE JIN Electrical Repairing & Assembling Factory, 563 Nan Ning Road E, 160270 Guangzhou, P.R. China
Telephone: (8620) 444 7075

REFRIGERATOR OWNER'S MANUAL

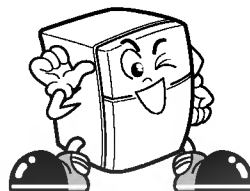

Please read this Owner's Manual thoroughly before operating and keep it handy for reference at all times. Record your Refrigerator model and Serial Number.