

LCD TV | PLASMA TV Quick Setup Guide

LCD TV MODELS

32LC2R*
37LC2R*
42LC2R*
32LB1R*
37LB1R*
42LB1R*

PLASMA TV MODELS

42PC1R*
50PC1R*
50PC3R*

Remote Control Key Functions

INPUT

If you press the button once, the input source OSD will appear on screen. Press the **▲ / ▼** button and then **OK** button to select the desired input source (**TV, AV1, AV2, Component1, Component2, RGB, HDMI/DVI**). Switches the set on from standby.

MENU


Selects a menu.

EXIT

Exits from the Menu screen.

VOL

Adjusts volume.

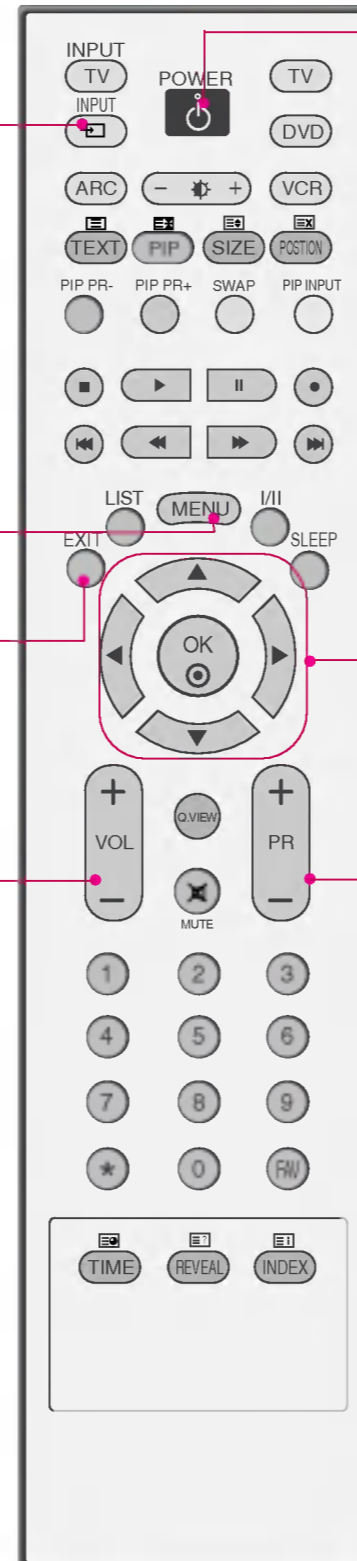

POWER

Switches the set on from standby or off to standby.

Arrow key

(Up/Down/Left/Right/OK)

Allows you to navigate the on-screen menus and adjust the system settings to your preference.


PR

Changes the channel.


2 Auto programme tuning

Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the **PR +/-** or **NUMBER** buttons to scan the stations you have programmed. Stations can be tuned using auto-automatic or manual modes.

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

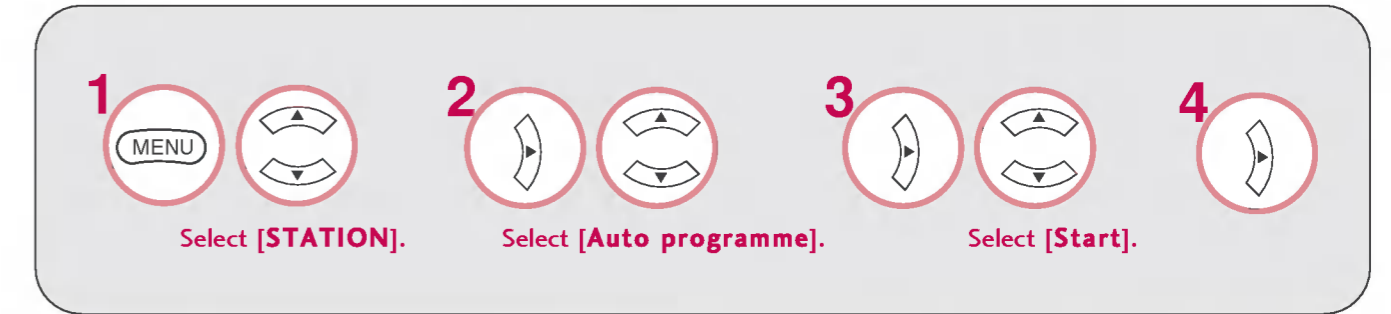


1

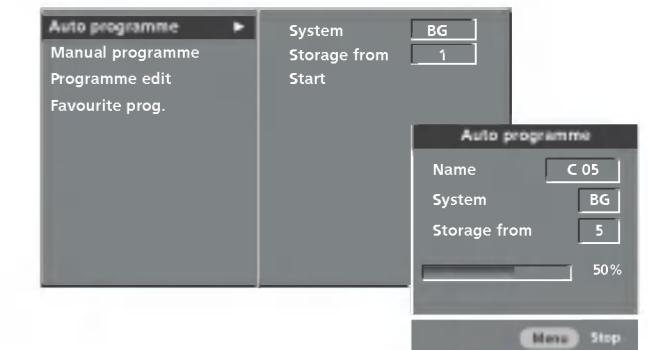 

2

 3

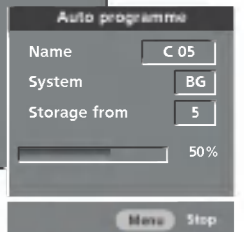

4




Exit from the Menu screen.

Welcome!

Activating and connecting a basic system usually takes less than half an hour.
See Owner's Manual for additional setup examples.


Included Accessories

Make sure you have received all the accessories below with your product.

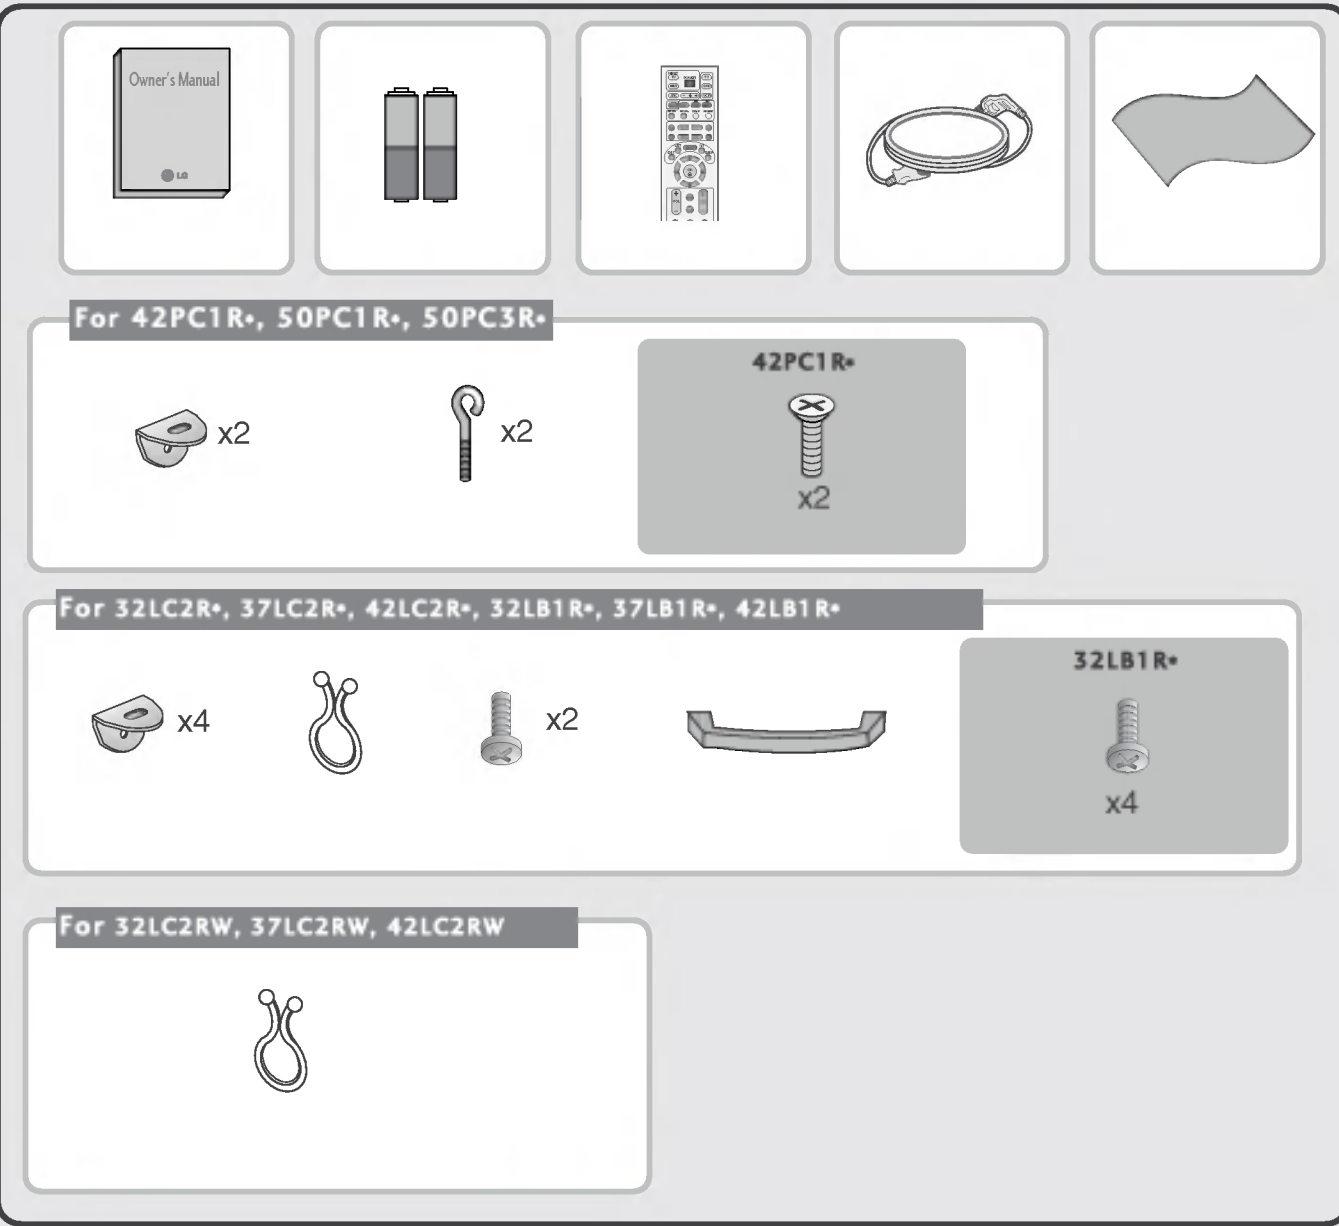

1 Connecting your Unit

■ Here shown may be somewhat different from your TV.

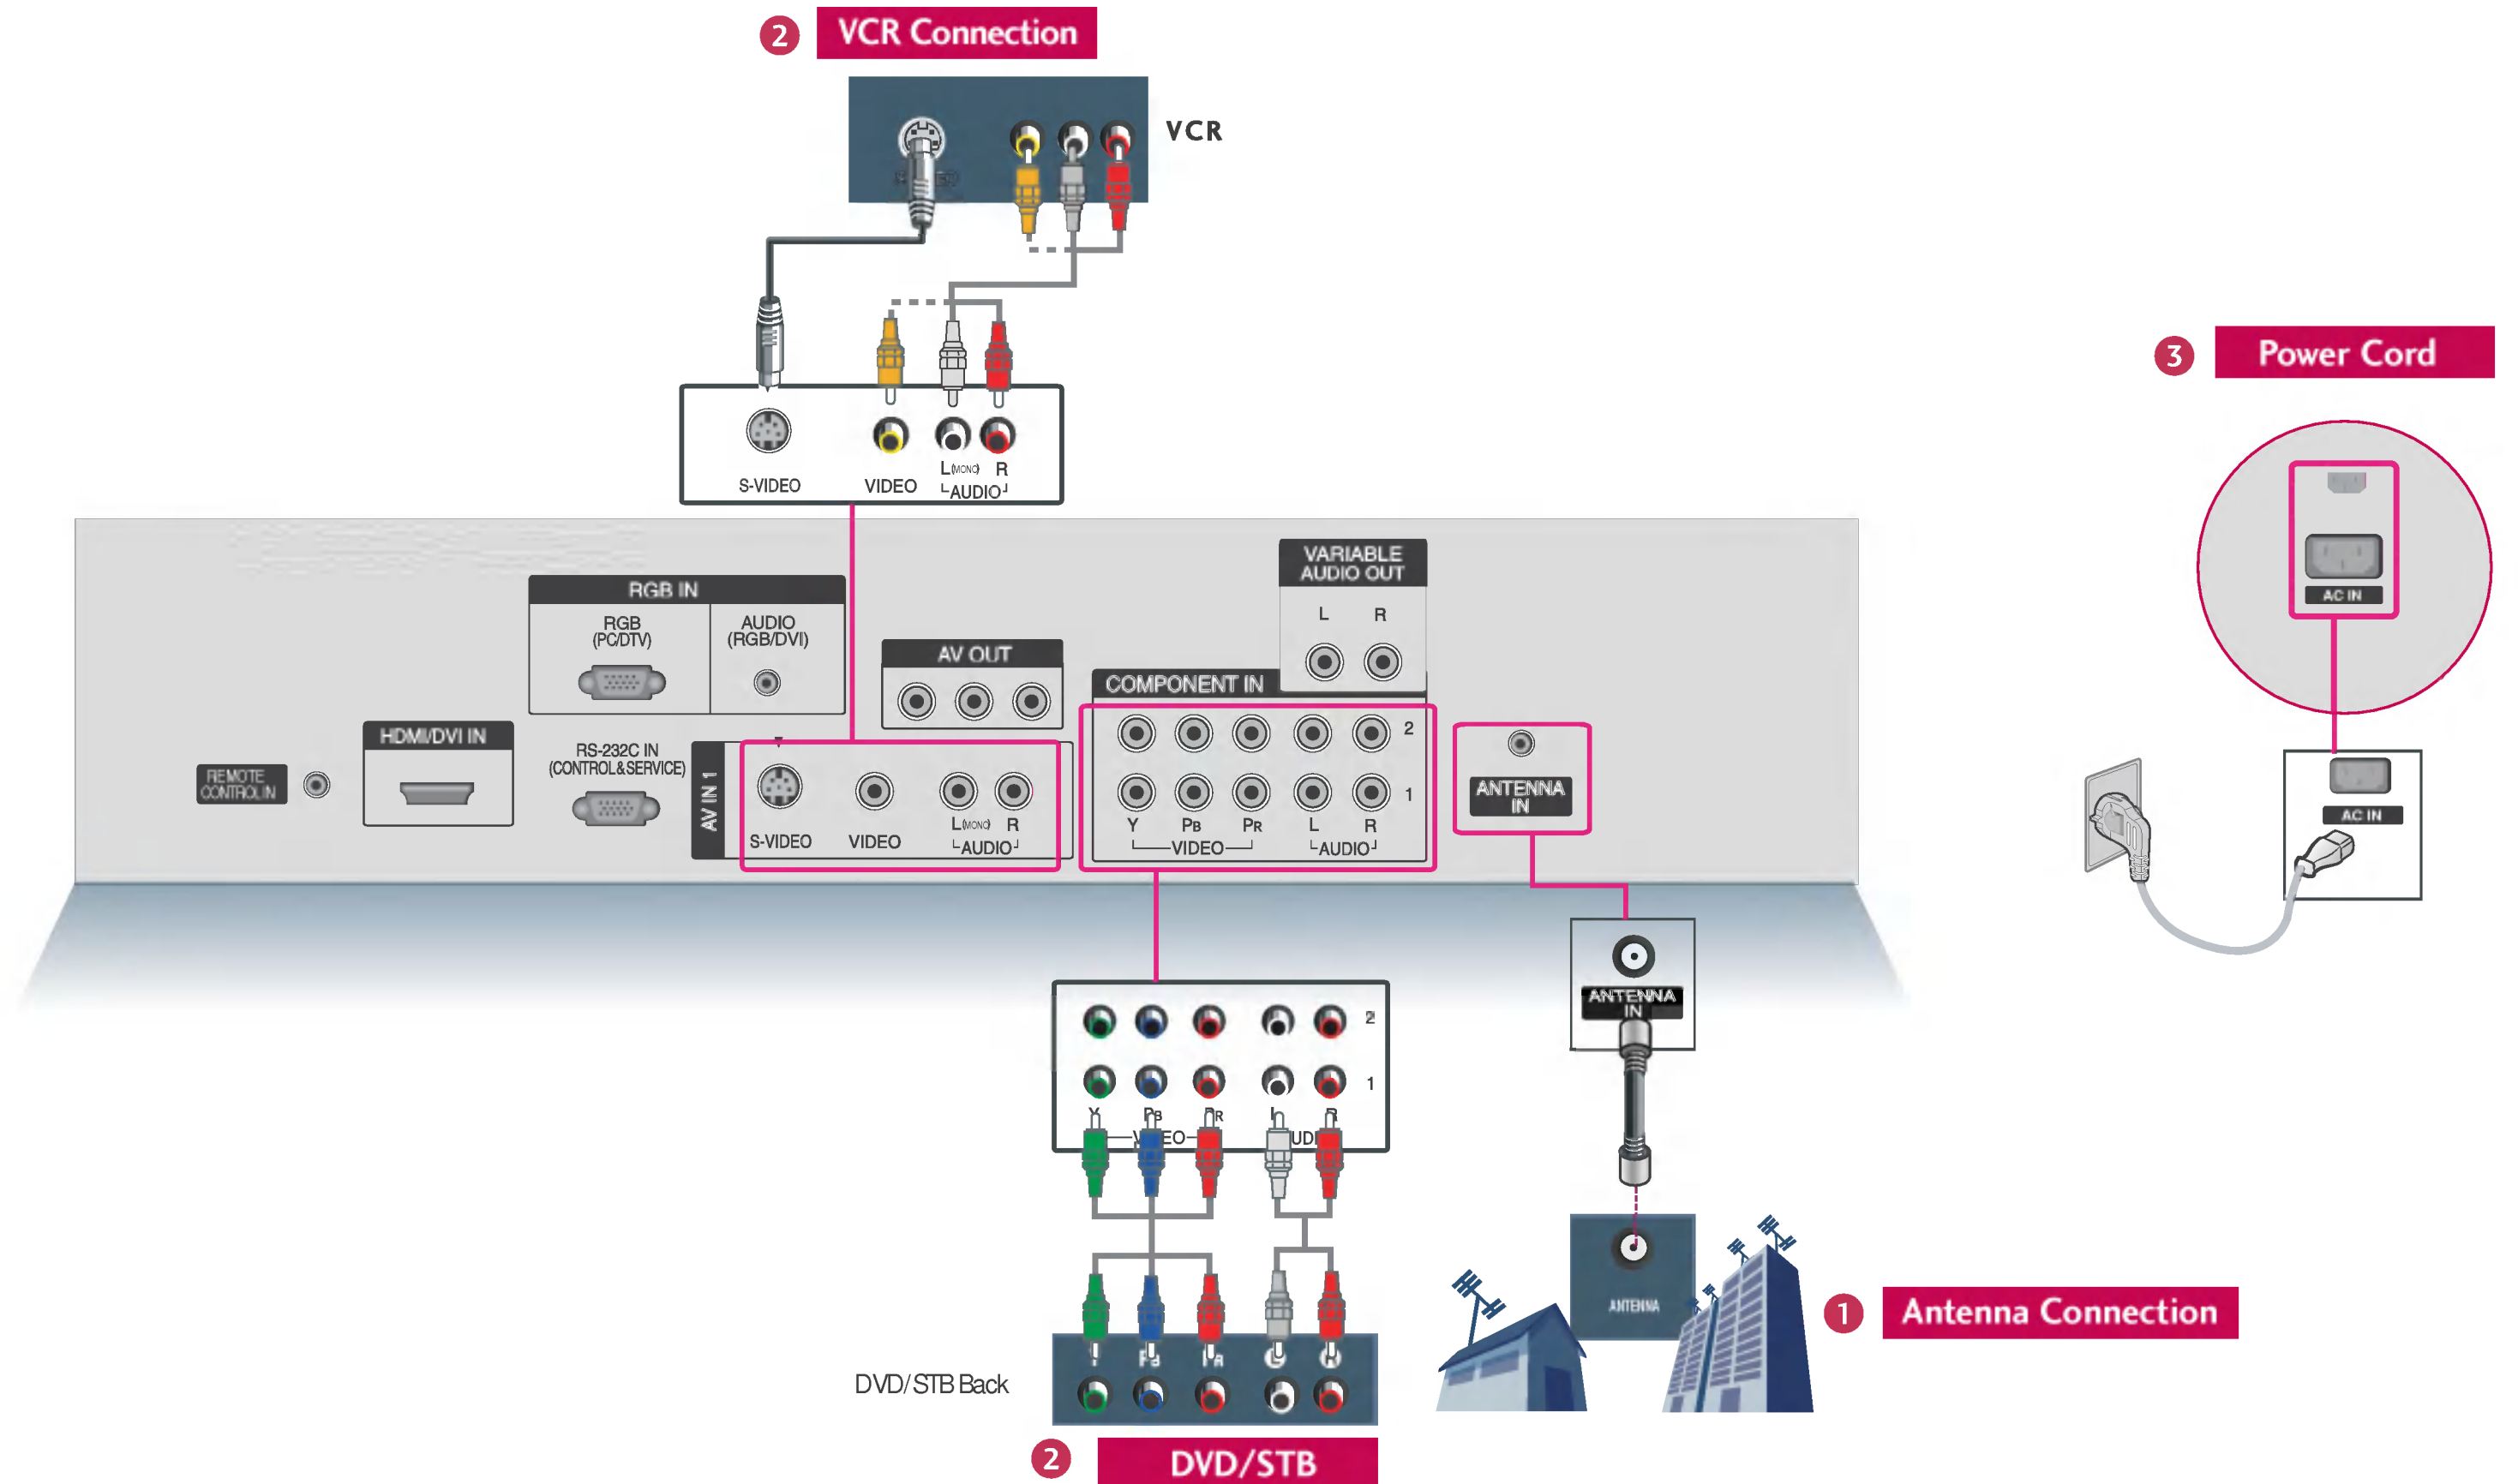

* To connect an additional equipment, see the CONNECTION & SETUP section in Owner's Manual.