



LCD TV | PLASMA TV OWNER'S MANUAL

LCD TV MODELS PLASMA TV MODELS

37LC2RR*

42LC2RR*

42PC1RR*

50PC1RR*

Please read Information Manual included together before reading this manual and operating your set.

Retain it for future reference.

Record model number and serial number of the set.


See the label attached on the back cover and quote this information to your dealer when you require service.

Model number :

Serial number :

ACCESSORIES

Ensure that the following accessories are included with your set. If an accessory is missing, please contact the dealer where you purchased the set.

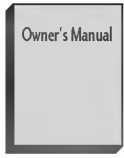

Owner's Manual



 
Batteries



Remote Control



Power Cord



Polishing Cloth
Polish the screen with the cloth
(Option)

Slightly wipe stained spot on the exterior only with the cleansing cloths for the product exterior if there is stain or fingerprint on surface of the exterior.

Do not wipe roughly when removing stain. Please be cautious of that excessive power may cause scratch or discoloration.

For 42PC1RR*, 50PC1RR*



2-Wall brackets



2-eye-bolts



2-bolts for stand assembly
(Refer p.11)

This feature is not available for all models.

For 37LC2RR*, 42LC2RR*



2-TV brackets
2-Wall brackets



Twister Holder
Arrange the wires with the twister holder.



Cable Management



2-bolts

CONTENTS

Accessories 1

INTRODUCTION

Controls / Connection Options 4-7
Remote Control Key Functions 8-9
Home Menu 10

INSTALLATION

Unfolding The Base Stand 11
Basic connection 12-13
How to join the set assembly to the wall to protect the set from tumbling 14
Stand installation 15

CONNECTIONS & SETUP

Antenna Connection 16
VCR Setup 17-18
External Equipment Connections 19
DVD Setup 20-21
STB(SET-TOP BOX) Setup 22-23
PC Setup 24-26

BASIC OPERATION

Turning the set on 27
Volume Adjustment 27
Programme Selection 28
On-Screen Menu Language Selection (option) ... 28

SPECIAL FUNCTIONS

DVR (Digital Video Recorder)

TimeShift 29
Progressing the Timeshift function 30-31
Recording 32-33
Watching & Record 34
Recorded TV 35
Recorded program Selection and Popup Menu .35-36
Playing recorded programs 36
Using the remote control 37
Manual Recording 38
Scheduled List 39
Video Quality 39
Format hard disk 40

PIP/POP/Twin Picture

PIP (Picture-In-Picture) Feature 41
Watching PIP 41
Adjusting PIP Transparency (PIP mode only) 41
Programme Selection for Sub Picture 42
Adjusting the screen for the PIP 42
Selecting an Input Signal Source for the PIP 42
Sub Picture Size Adjustment (PIP mode only) 42
Moving the PIP (PIP mode only) 42
Swapping between main and sub pictures 43
POP (Picture-out-of-Picture: Channel Scan) 43

TELETEXT

Teletext Language Selection (option) 44
Switch on/off 44
SIMPLE Text (option) 45
TOP Text (option) 45
FASTEXT 45
Special Teletext Functions 46

TV MENU

On Screen Menus Selection and Adjustment 47

Setting up TV stations

Auto programme Tuning 48
 Manual programme Tuning 49
 Fine tuning 50
 Assigning a station name 51
 Booster (option) 52
 Programme edit 53
 Favourite programme 54
 Calling the programme table 55

Picture Menu Options

PSM (Picture Status Memory) 56
 CSM (Colour Status Memory) 57
 Manual Colour Temperature Control (CSM - User option) 58
 XD Function 59
 sRGB Function 60
 ACM (Active Colour Management) 61
 Manual Picture Control 62

Sound Menu Options

SSM (Sound Status Memory) 63
 AVL (Auto Volume Leveler) 64
 Adjusting Sound Control 65
 TV Speaker 65
 Stereo/Dual Reception 66
 NICAM Reception (option) 67
 Sound Output Selection 67

Time Menu Options

Setting the Clock 68
 Setting the On/Off Time 69
 Auto Sleep 70
 Sleep Timer 70

Special Menu Options

Child Lock 71
 ISM Method (Image Sticking Minimization) 72
 Low Power 73
 XD Demo 73
 Index (option) 74

Screen Menu Options

Auto Config. 75
 Manual Config. 76
 Selecting Wide XGA/VGA mode 77
 Setting Picture Format 78
 Cinema 79
 NR (Noise Reduction) 80
 Initializing (Reset to original factory settings) 80

Programming the Remote 81
 Programming Codes 82-85
 Troubleshooting Checklist 86-87
 Maintenance 88
 Product Specifications 89-90


INTRODUCTION

CONTROLS

This manual explains the features available on the 42PC1RR*, 50PC1RR* set.

■ This is a simplified representation of a front panel. The illustrations shown here may differ slightly from your set.


Front Panel Controls

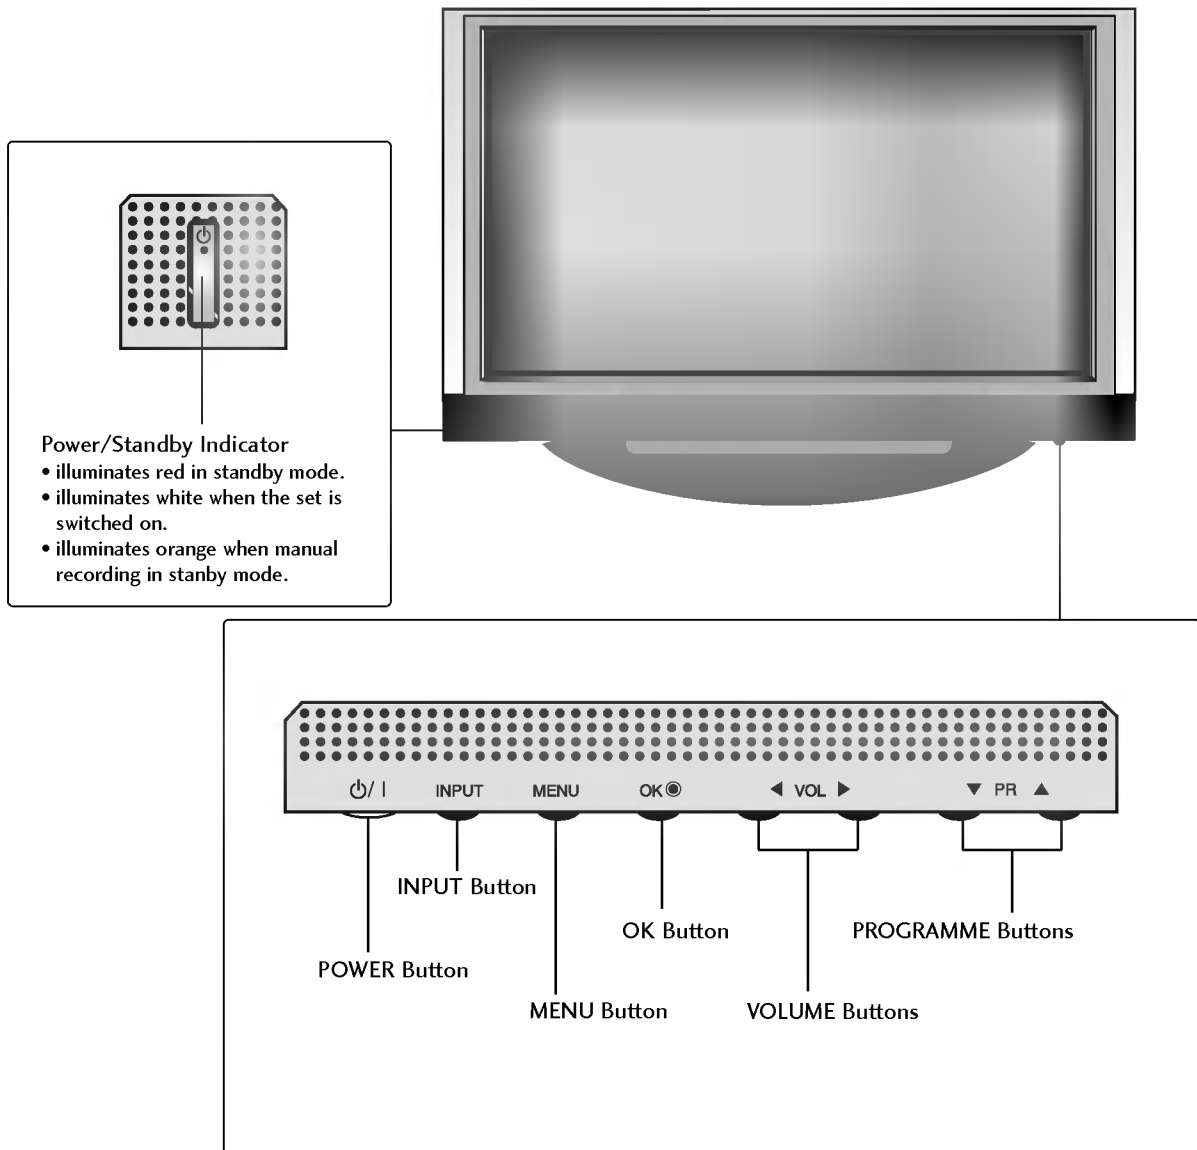

CONNECTION OPTION

This is the back panel of 42PC1RR+, 50PC1RR* sets.

Back Connection Panel

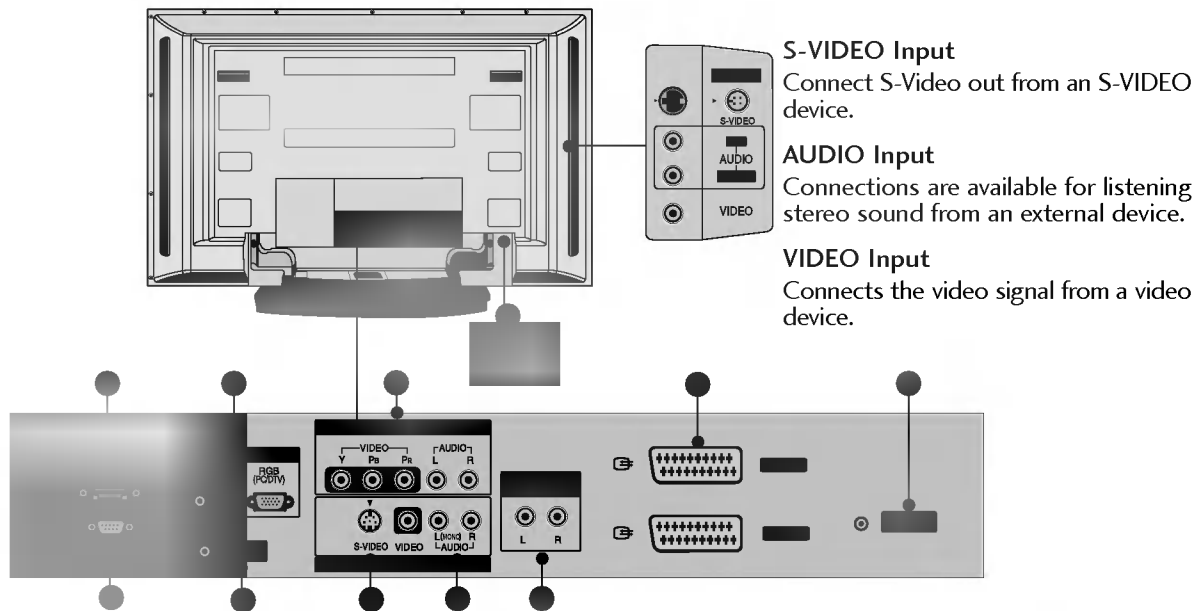


- **HDMI/DVI Input**
Connect an HDMI signal to HDMI/DVI.
- **RGB/Audio Input**
Connect the monitor output from a PC/DTV to the appropriate input port.
- **Component Input**
Connect a component video/audio device to these jacks.
- **Power Cord Socket**
This set operates on AC power. The voltage is indicated on the Specifications page. Never attempt to operate the set on DC power.
- **Euro Scart Socket (AV1/AV2)**
Connect a scart socket input or output from an external device to these jacks.
- **Antenna Input**
- **RS-232C Input (CONTROL & SERVICE) Port**
Connect the serial port of system control devices to the RS-232C jack.
- **Remote Control Port**
- **S-Video Input**
Connect S-Video out from an S-VIDEO device.
- **Audio/Video Input**
Connect audio/video output from an external device to these jacks.
- **Variable Audio Output**
Connect an external amplifier or add a subwoofer to your surround sound system.

INTRODUCTION

CONTROLS


This is the front panel of models **37LC2RR***, **42LC2RR*** sets.

- This is a simplified representation of a front panel. The illustrations shown here may differ slightly from your set.

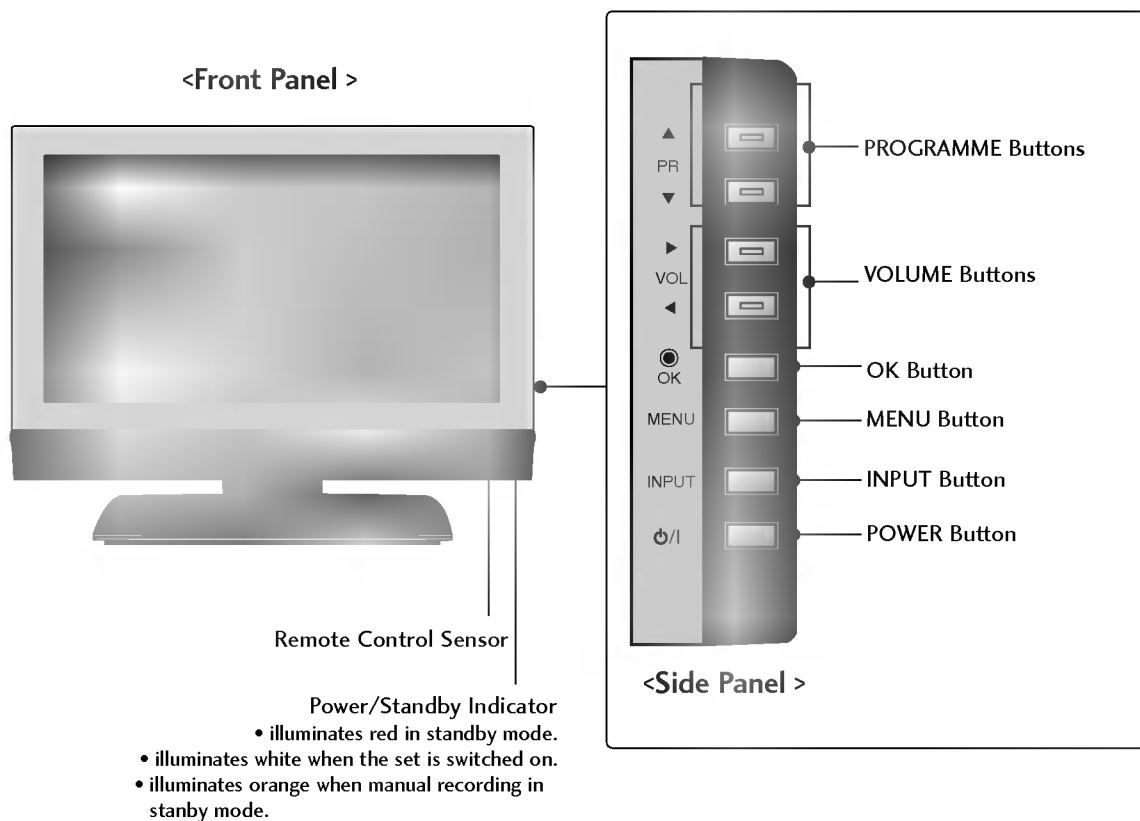

Swivel Stand (42LC2RR * only)

- This feature is not available for all models.

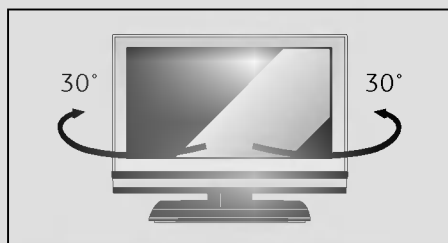


- The set can be conveniently swivelled on its stand 30° to the left or right to provide the optimum viewing angle.

CONNECTION OPTION

This is the back panel of models **37LC2RR***, **42LC2RR*** sets.

Back Connection Panel

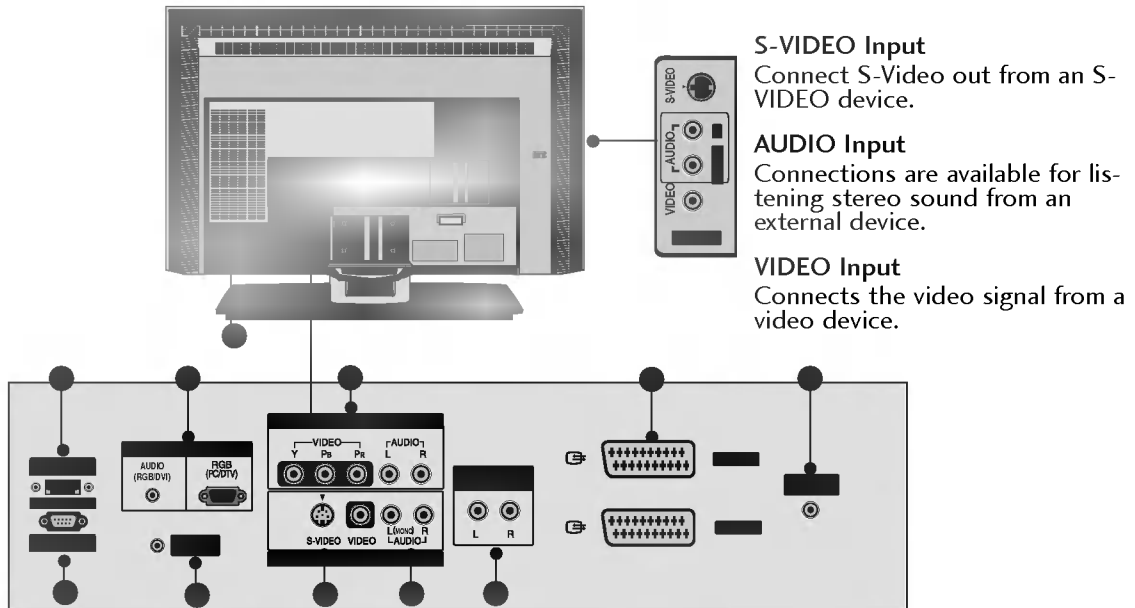

- **HDMI/DVI Input**
Connect an HDMI signal to HDMI/DVI.
- **RGB/Audio Input**
Connect the monitor output from a PC/DTV to the appropriate input port.
- **Component Input**
Connect a component video/audio device to these jacks.
- **Power Cord Socket**
This set operates on AC power. The voltage is indicated on the Specifications page. Never attempt to operate the set on DC power.
- **Euro Scart Socket (AV1/AV2)**
Connect a scart socket input or output from an external device to these jacks.
- **Antenna Input**
- **RS-232C Input (CONTROL & SERVICE) Port**
Connect the serial port of system control devices to the RS-232C jack.
- **Remote Control Port**
- **S-Video Input**
Connect S-Video out from an S-VIDEO device.
- **Audio/Video Input**
Connect audio/video output from an external device to these jacks.
- **Variable Audio Output**
Connect an external amplifier or add a subwoofer to your surround sound system.

INTRODUCTION

REMOTE CONTROL KEY FUNCTIONS

When using the remote control, aim it at the remote control sensor on the set.




- POWER** switches the set on from standby or off to standby.
- INPUT** Selects the TV, AV, Component, RGB or HDMI/DVI modes. switches the set on from standby.
- MULTIMEDIA** Selects the Component, RGB or HDMI/DVI modes. switches the set on from standby.
- MODE** Switches the remote control mode to operate another device.
- VCR BUTTONS** Controls a video cassette recorder. These buttons are also used for X Studio; for further details, see the 'X Studio' section.
- MARK** Check and un-check programs in the recorded TV menu.
- LIVE TV** In TV, AV1, AV2, S-Video2, AV3, AV4 modes, screen returns to the live programme. (Refer to p.37)
- XSTUDIO** Brings up the Home menu.
- MENU** Displays on screen menus one by one. Exits the current menu. Memorizes menu changes.
- EXIT** Clears all on-screen displays and returns to TV viewing from any menu.
- VOL ▲ / ▼ (Volume Up/Down)** Increases/decreases sound level.
- PR ▲ / ▼ (Programme Up/Down)** Select a programme. Switches the set on from standby.
- MUTE** Switches the sound on or off.
- TEXT** These buttons are used for teletext. For further details, see the 'Teletext' section. *Note : In teletext mode, the PIP PR +/-, SWAP and PIP INPUT buttons are used for teletext function.*
- ARC** Changes the picture format.
- I/II** Selects the language during dual language broadcast. Selects the sound output.




REMOTE CONTROL KEY FUNCTIONS

<p>OK accepts your selection or displays the current mode.</p> <p>▲ / ▼ or ◀ / ▶ Adjusts menu settings. (TIME SHIFT) Selects menu item.</p>	
<p>PIP Switches the sub picture on or off. Selects PIP, POP or DW modes.</p> <p>PIP PR +/- Selects a programme for the sub picture.</p> <p>SWAP Alternates between main and sub picture.</p> <p>PIP INPUT Selects the input mode for the sub picture.</p> <p>SIZE Adjusts the sub picture size.</p> <p>POSITION Moves the sub picture to ▲ / ▼ or ◀ / ▶ direction.</p>	
<p>NUMBER buttons Selects a programme. Selects numbered items in a menu. Switches the set on from standby.</p> <p>LIST Displays the programme table.</p> <p>Q.VIEW Returns to the previously viewed programme.</p>	
<p>SLEEP Sets the sleep timer.</p> <p>FAV Selects a favourite programme.</p>	

Installing Batteries

- Open the battery compartment cover on the back side. 
- Insert two batteries observing the correct polarity (+ with +, - with -). Don't mix old or used batteries with new ones. 
- Close the cover. 

Remote control effective range

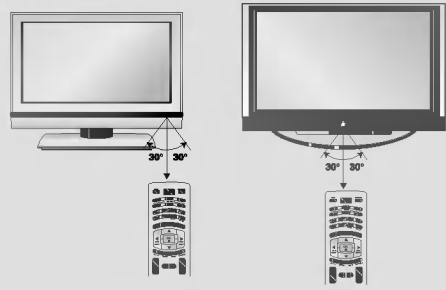
- 
- The remote control will work up to 7 meters away from the receiving window and 30 degrees to the left or right.
 - Dispose of used batteries in a recyclebin to help preserve the environment.

INTRODUCTION

HOME MENU

This menu is a contents guide.


In Home Menu, you enter the Recorded list of DVR, Manual Rec, Scheduled List or TV Menu.

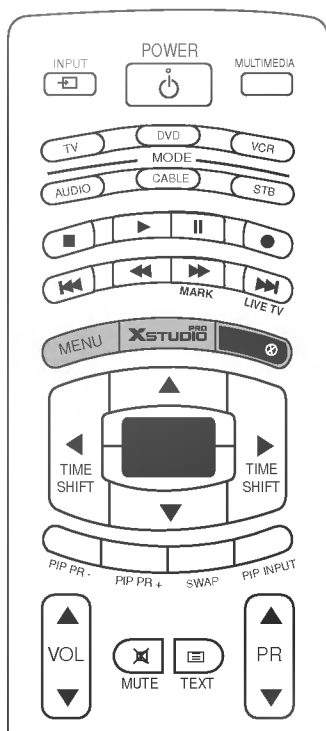

INSTALLATION

UNFOLDING THE BASE STAND (42PC1RR*)

- This feature is not available for all models.

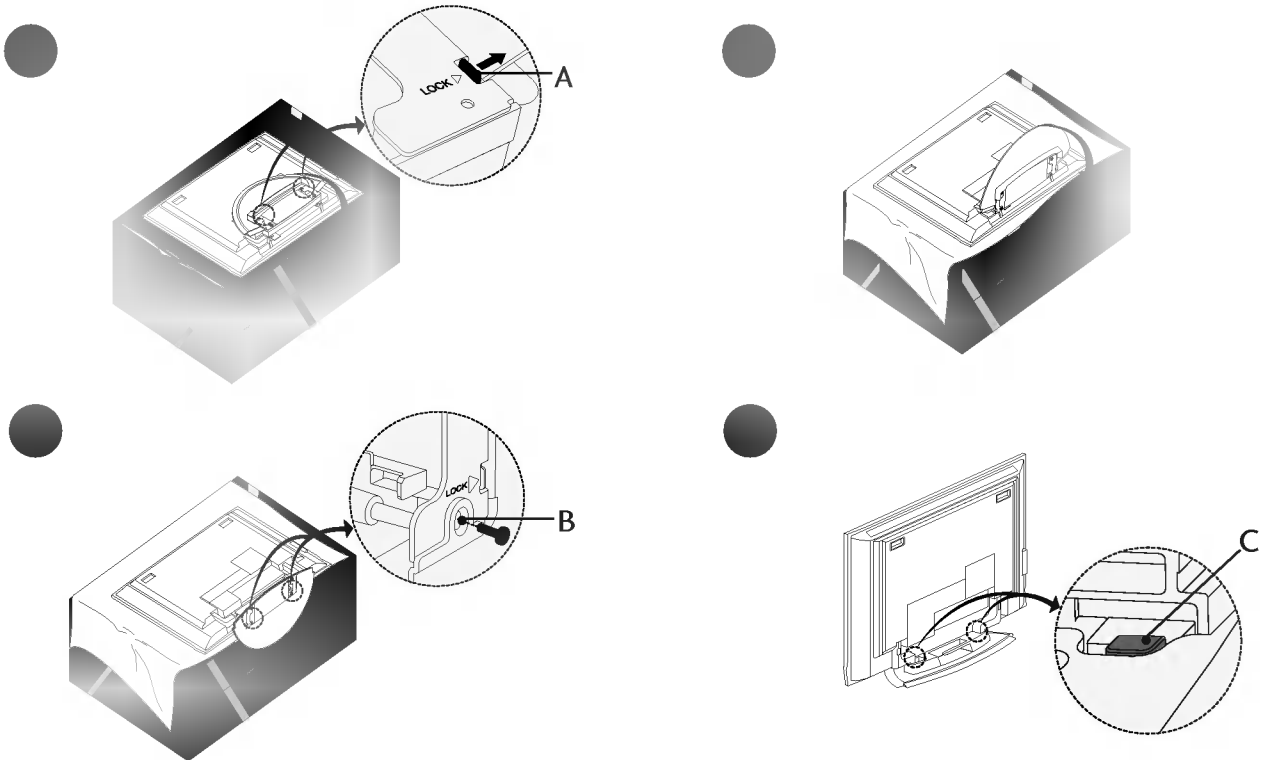

- Place the set with the screen facing down on a cushion or soft cloth as shown in Figure 1. Before unfolding the stand, please make sure two locks (A) on the bottom of the stand are pushed outward.
- Pull the stand out as shown above in Figures 2 ~ 3. After unfolding the stand, insert and tighten the screws in the holes (B) on the bottom of the stand.
- When connecting cables to the set, Do not disengage the lock (C). This may cause the set to fall, causing serious bodily injury and serious damage to the set.


● NOTE

The illustrations shown here may differ slightly from your set.

When closing the stand for storage

First remove the screws in the holes (B) on the bottom of the stand. And then pull two Hooks (D) of the stand bottom and fold the stand into the back of the set.

After folding, push two Locks (A) of the stand bottom outward.

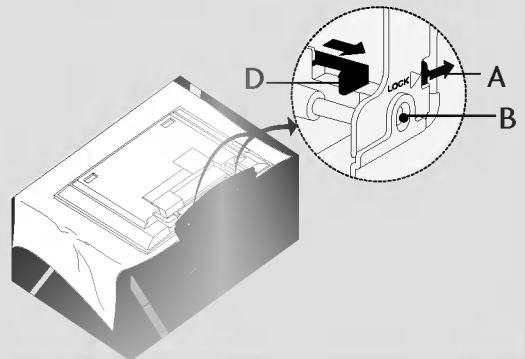


INSTALLATION

BASIC CONNECTION (42PC1RR *, 50PC1RR *)

- These models have two cable arrangement methods according to the stand type.


Stand type 1

Arrange the cables as shown picture.

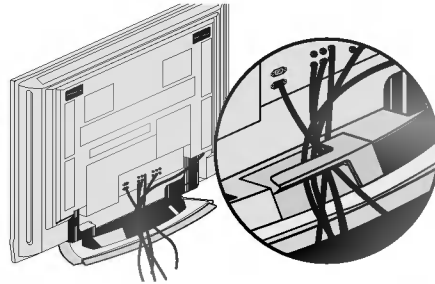


Stand type 2


- Hold the **CABLE MANAGEMENT** with both hands and push it as shown.

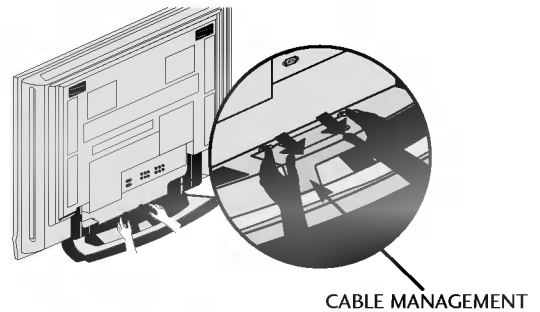

- Connect the cables as necessary.
To connect an additional equipment, see the **External equipment Connections** section.

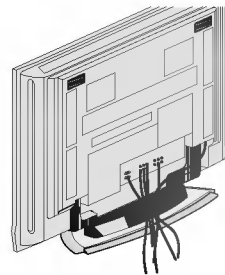


- Reinstall the **CABLE MANAGEMENT** as shown.

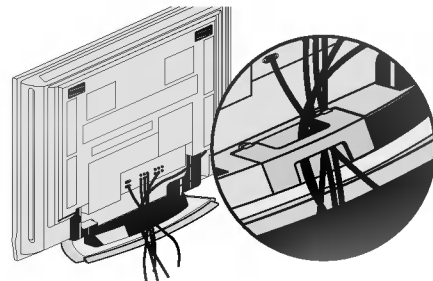


BASIC CONNECTION (37LC2RR*, 42LC2RR*)


- Connect the cables as necessary. After connecting the cables neatly, arrange the cables to the Cable Holder.
- To connect an additional equipment, see the **CONNECTIONS & SETUP** section.

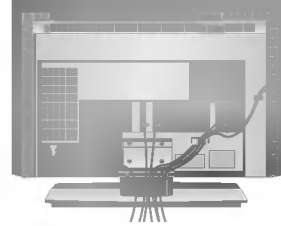

- Install the **CABLE MANAGEMENT** as shown.

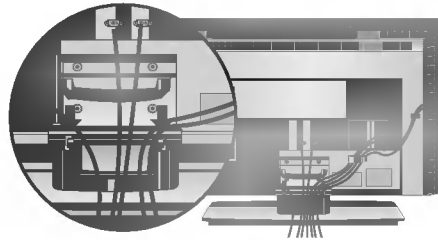

- Bundle the cables using the supplied twister holder.

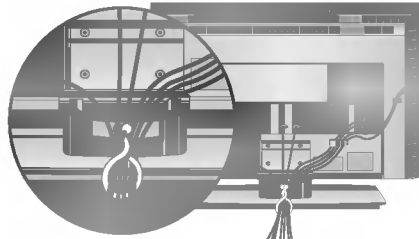

HOW TO REMOVE THE CABLE MANAGEMENT

Hold the **CABLE MANAGEMENT** with both hands and pull it upward.



● NOTE


- ▶ Do not hold the **CABLE MANAGEMENT** when moving the product. If the product is dropped, you may be injured or the product may be broken.

INSTALLATION


HOW TO JOIN THE SET ASSEMBLY TO THE WALL TO PROTECT THE SET FROM TUMBLING

- Place the set close to the wall so that it doesn't fall over if pushed backwards.
- The instructions shown below detail a safer way to secure the set. This method fixes the set to the wall so that it cannot fall over when pulled forward. This will prevent the set from causing injury or damage. Please make sure that children don't climb on or hang from the set.


INSTALLATION

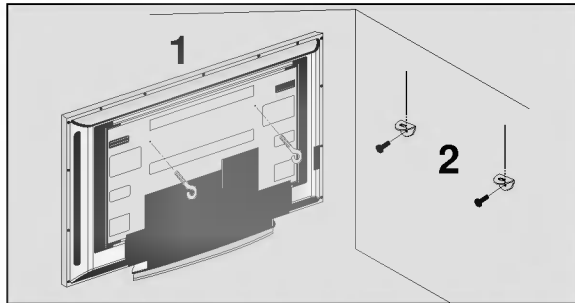

or

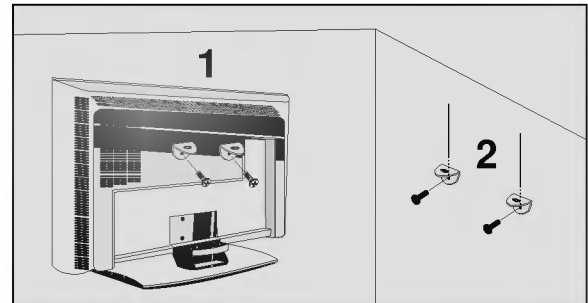

- Use the eye-bolts or set brackets/screws to fix the set to the wall as shown in the picture. (If there are bolts already installed where the eye bolts need to be fitted, remove them first.) Insert the eye-bolts or set brackets/screws and tighten them securely in the upper holes.
- Secure the wall brackets with heavy duty screws (not provided as parts of the set, must purchase separately) onto the wall. Match the height of the brackets that are mounted on the wall.

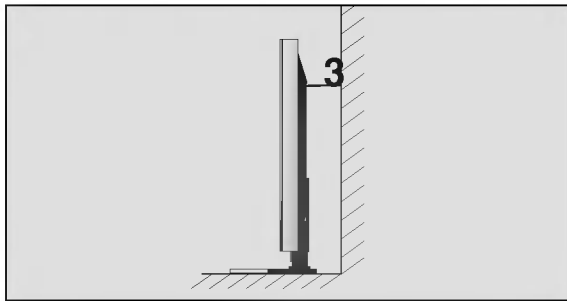

- Use a sturdy rope (not provided as parts of the set, must purchase separately) to tie the set. It is safer to tie the rope so it becomes horizontal between the wall and the set.

● NOTE


- ▶ When moving the set to another place undo the ropes first.
- ▶ Use a set holder or a cabinet that is big and strong enough for the size and weight of the set.
- ▶ To use the set safely make sure that the height of the bracket that is mounted on the wall is same as that of the set.

STAND INSTALLATION

- The set can be installed in various ways such as on a wall, or on a desktop etc.
- The set is designed to be mounted horizontally.


GROUNDING

Ensure that you connect the earth ground wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

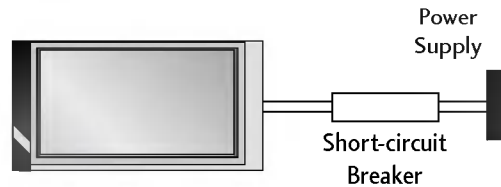



Desktop Pedestal Installation

For proper ventilation, allow a clearance of 4" on each side and from the wall.

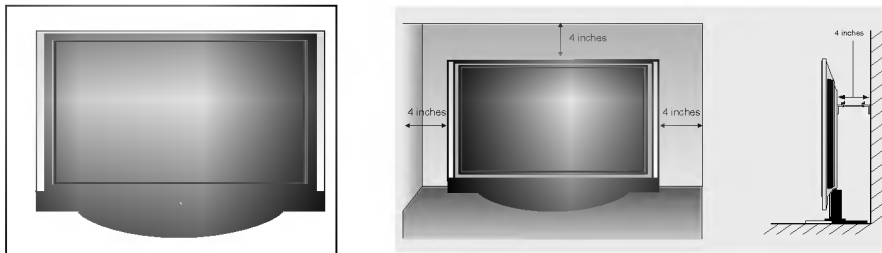

Wall Mount: Horizontal installation

For proper ventilation, allow a clearance of 4" on each side and from the wall. Detailed installation instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

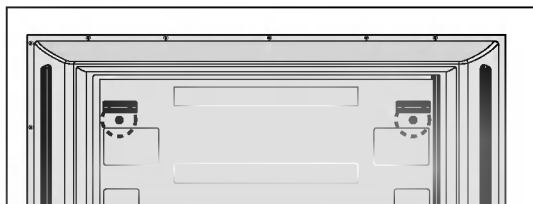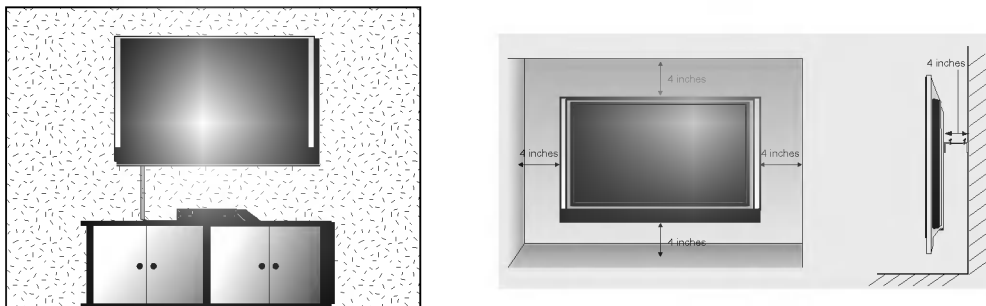

<Only 42PC1RR>


Remove two screws of the backside of the set before installing the wall mounting bracket.

CONNECTIONS & SETUP


- To prevent damage to the set, never plug in any power cords until you have finished connecting all equipment.
- The illustrations shown here may differ slightly from your set.

ANTENNA CONNECTION

- For optimum picture quality, adjust antenna direction.
- An antenna cable and converter are not supplied.

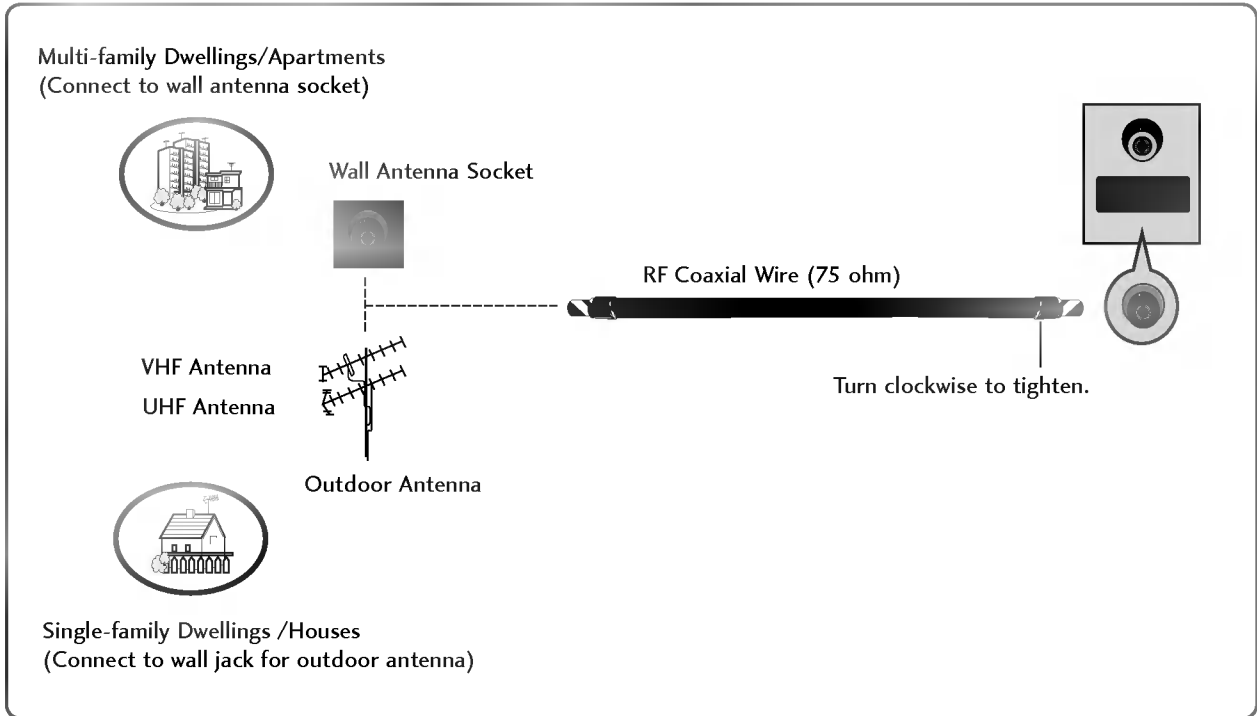


- In poor signal areas, to get better picture quality, install a signal amplifier to the antenna as shown to the right.
- If the signal needs to be split for two TVs, use an antenna signal splitter for connection.

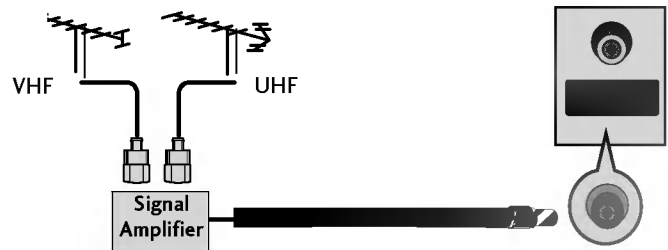


VCR SETUP

- To avoid picture noise (interference), leave an adequate distance between the VCR and TV.
- Typically a frozen still picture from a VCR. If the 4:3 picture format is used; the fixed images on the sides of the screen may remain visible on the screen.

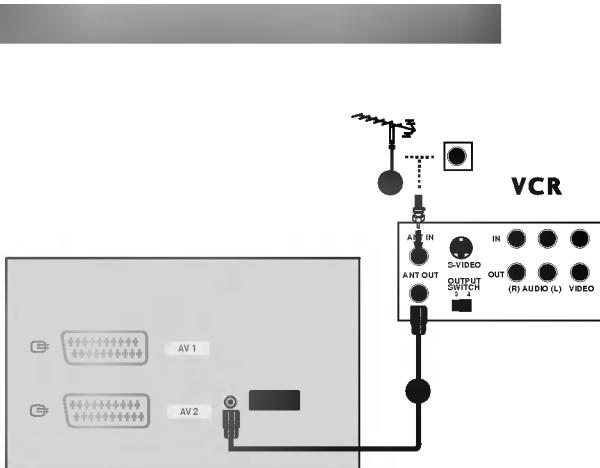

- Connect the **ANT OUT** of the VCR to the **ANTENNA IN** socket on the set.
- Connect the antenna cable to the **ANT IN** antenna socket of the VCR.
- Press the **PLAY** button on the VCR and match the appropriate programme between the TV and VCR for viewing.

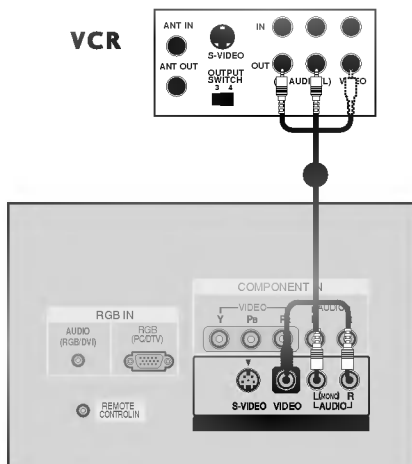


- Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red)
- Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- Select **AV3** input source using the **INPUT** button on the remote control.
 - If connected to **AV IN4**, select **AV4** input source.

● NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the set.

CONNECTIONS & SETUP


VCR SETUP

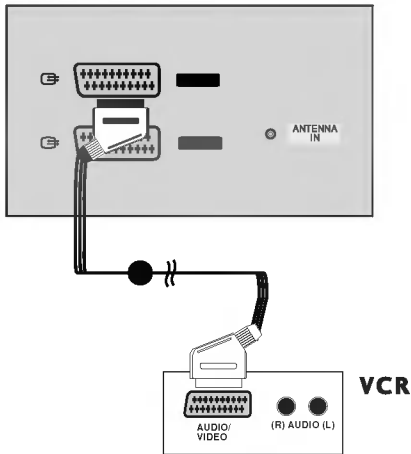

- Connect the Euro scart socket of the VCR to the **AV1** Euro scart socket on the set.
- Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV2** Euro scart socket, select **AV2** input source.

NOTE

- ▶ If the S-VIDEO(Y/C) signal is received through the Euro scart socket 2 (AV2), you must change to the S-Video2 mode.
- ▶ If you want to use the EURO scart cable, you have to use the signal shielded Euro scart cable.

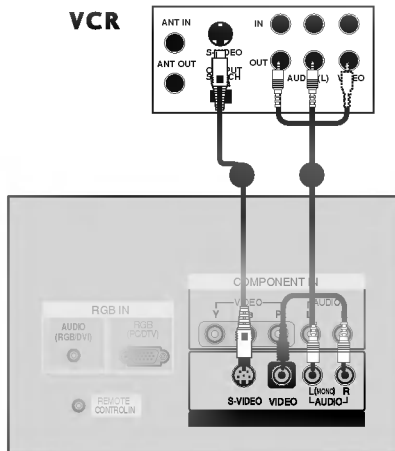


- Connect the S-VIDEO output of the VCR to the **S-VIDEO** input on the set. The picture quality is improved; compared to normal composite (RCA cable) input.
- Connect the audio outputs of the VCR to the **AUDIO** input jacks on the set.
- Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- Select **AV3** input source with using the **INPUT** button on the remote control.

NOTE

- ▶ If both S-Video and VIDEO sockets have been connected to the S-VHS VCR simultaneously, only the S-Video can be received.


EXTERNAL EQUIPMENT CONNECTIONS

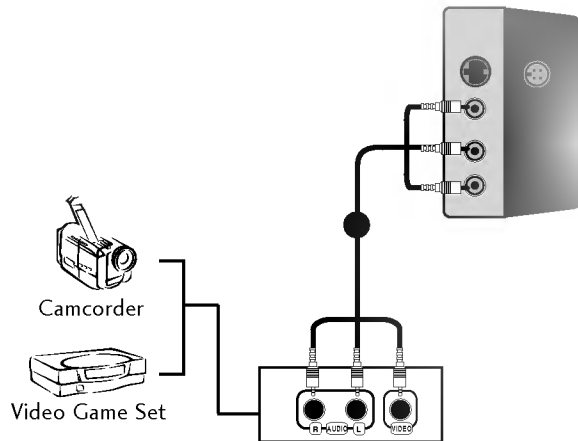


-
- Connect the **AUDIO/VIDEO** jacks between TV and external equipment. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).
 - Select **AV4** input source with using the **INPUT** button on the remote control.
- If connected to **AV IN3** input, select **AV3** input source.
 - Operate the corresponding external equipment. Refer to external equipment operating guide.
-

CONNECTIONS & SETUP

DVD SETUP

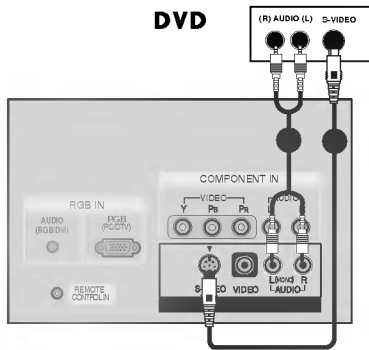

- Connect the S-VIDEO output of the DVD to the **S-VIDEO** input on the set.
- Connect the audio outputs of the DVD to the **AUDIO** input jacks on the set.
- Turn on the DVD player, insert a DVD.
- Select **AV3** input source with using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.

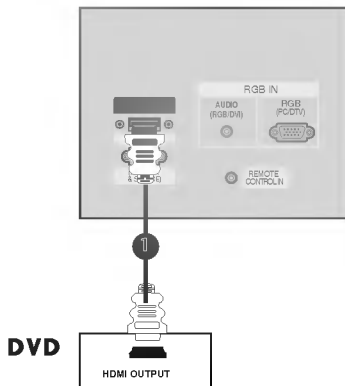


- Connect the HDMI output of the DVD to the **HDMI/DVI IN** jack on the set.
- Select **HDMI/DVI** input source with using the **INPUT** button on the remote control.
- Refer to the DVD player's manual for operating instructions.

NOTE

- ▶ Set can receive the video and audio signal simultaneously with using a HDMI cable.
- ▶ If the DVD supports Auto HDMI function, the DVD output resolution will be automatically set to 1280x720p.
- ▶ If the DVD does not support Auto HDMI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the DVD to 1280x720p.

DVD SETUP

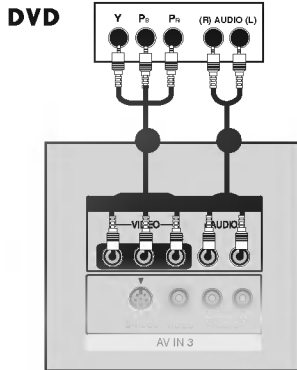


- Connect the video outputs (Y, PB, PR) of the DVD to the **COMPONENT IN VIDEO** jacks on the set.
- Connect the audio outputs of the DVD to the **COMPONENT IN AUDIO** jacks on the set.
- Turn on the DVD player, insert a DVD.
- ④ Select **Component** input source with using the **INPUT** button on the remote control.
- ⑤ Refer to the DVD player's manual for operating instructions.

● NOTE

► Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the SET	Y	P _B	P _R
Video output ports on DVD player	Y	P _b	P _r
	Y	B-Y	R-Y
	Y	C _b	C _r
	Y	P _B	P _R

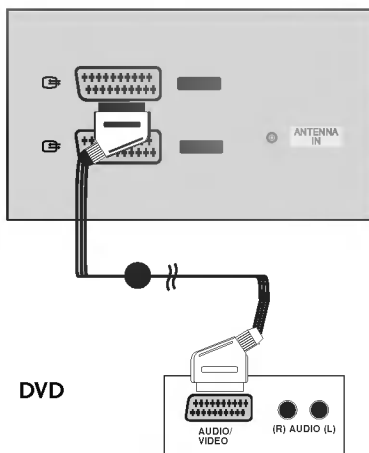

- Connect the Euro scart socket of the DVD to the **AV1** Euro scart socket on the set.
- Turn on the DVD player, insert a DVD.
- Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV2** Euro scart socket, select **AV2** input source.


● NOTE

► Please use the shield scart cable.


CONNECTIONS & SETUP

STB(SET-TOP BOX) SETUP

- This set can receive Digital Over-the-air/Cable signals without an external digital set-top box. However, if you do receive Digital signals from a digital set-top box or other digital external device, refer to the figure as shown below.

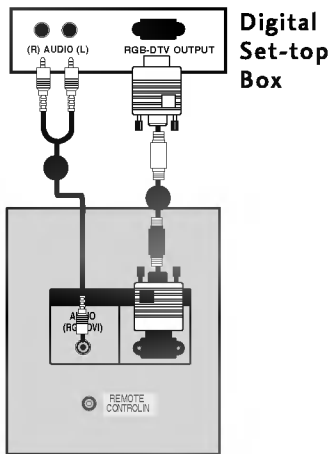

- Connect the RGB output of the digital set-top box to the **RGB IN (PC/DTV)** jack on the set.
- Connect the audio outputs of the set-top box to the **AUDIO (RGB/DVI)** jack on the set.
- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- Select **RGB** input source with using the **INPUT** button on the remote control.

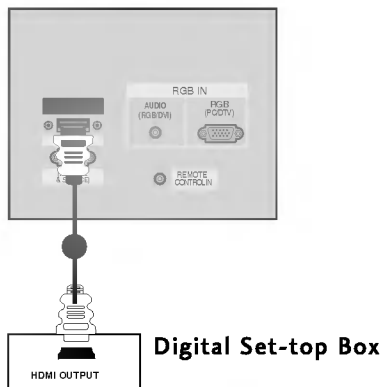


- Connect the HDMI output of the digital set-top box to the **HDMI/DVI IN** jack on the set.
- Select **HDMI/DVI** input source with using the **INPUT** button on the remote control.
- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)

● NOTE

- ▶ Set can receive the video and audio signal simultaneously with using a HDMI cable.
- ▶ If the digital set-top box supports Auto HDMI function, output resolution of the digital set-top box will be automatically set to 1280x720p.
- ▶ If the digital set-top box does not support Auto HDMI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the digital set-top box to 1280x720p.

STB(SET-TOP BOX) SETUP


Digital Set-top Box

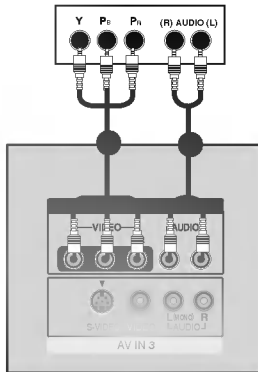

- Connect the video outputs (Y, Pb, Pr) of the digital set-top box to the **COMPONENT IN VIDEO** jacks on the set.
- Connect the audio output of the digital set-top box to the **COMPONENT IN AUDIO** jacks on the set.
- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- ④ Select **Component** input source with using the **INPUT** button on the remote control.

● **NOTE**

Signal	Component	RGB-DTV	HDMI-DTV
480i/576i	Yes	No	No
480p/576p/720p/1080i	Yes	Yes	Yes

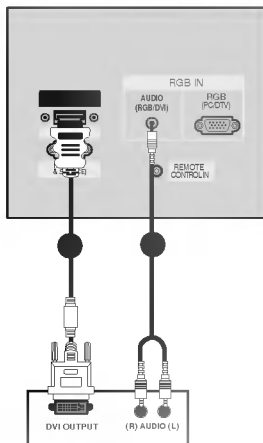

Digital Set-top Box

- Connect the DVI output of the digital set-top box to the **HDMI/DVI IN** jack on the set.
- Connect the audio outputs of the set-top box to the **AUDIO (RGB/DVI)** jack on the set.
- Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- ④ Select **HDMI/DVI** input source with using the **INPUT** button on the remote control.


● **NOTE**

- ▶ If the digital set-top box has a DVI output and no HDMI output, a separated audio connection is necessary.
- ▶ If the digital set-top box supports Auto DVI function, the output resolution of the digital set-top box will be automatically set to 1280x720p.
- ▶ If the digital set-top box does not support Auto DVI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the digital set-top box to 1280x720p.


CONNECTIONS & SETUP

PC SETUP

- This set provides Plug and Play capability, meaning that the PC adjusts automatically to the set's settings.

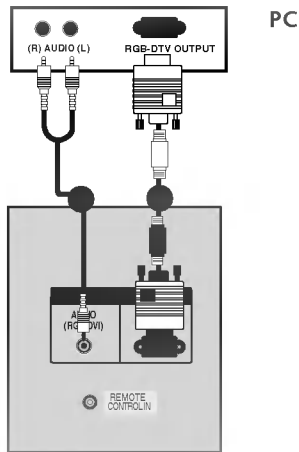

- Connect the RGB output of the PC to the **RGB IN (PC/DTV)** jack on the set.
- Connect the audio outputs of the PC to the **AUDIO (RGB/DVI)** jack on the set.
- Turn on the PC and the set.
- Select **RGB** input source with using the **INPUT** button on the remote control.

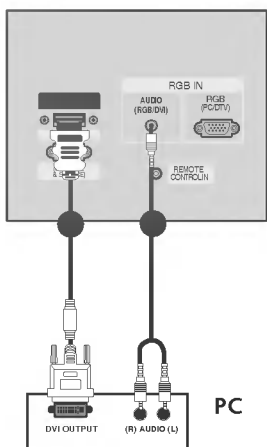

- Connect the DVI output of the PC to the **HDMI/DVI IN** jack on the set.
- Connect the audio outputs of the PC to the **AUDIO (RGB/DVI)** jack on the set.
- Turn on the PC and the set.
- Select **HDMI/DVI** input source with using the **INPUT** button on the remote control.

● NOTE

- ▶ If the PC has a DVI output and no HDMI output, a separated audio connection is necessary.
- ▶ If the PC does not support Auto DVI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of PC graphics card's output resolution to 1024x768, 60Hz.

● NOTE

- ▶ To enjoy vivid picture and sound, connect a PC to the set.
- ▶ Avoid keeping a fixed image on the set's screen for a long period of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- ▶ Connect PC to the RGB (PC/DTV) or HDMI/DVI port of the set; change the resolution output of PC accordingly.
- ▶ There might be noise according to some resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode into another resolution or change the refresh rate into another rate or adjust the brightness and contrast on the menu until the picture is clean. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult it to the manufacturer of the PC graphic card.
- ▶ The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- ▶ In 42PC1RR/50PC1RR models, we recommend using 1024x768, 60Hz for the PC mode, they provide the best picture quality.
- ▶ In 37LC2RR/42LC2RR models, we recommend using 1360x768, 60Hz for the PC mode, they provide the best picture quality.
- ▶ If the resolution of PC is over UXGA, there will be no picture on the set.
- ▶ Connect the signal cable from the monitor output port of the PC to the RGB (PC/DTV) port of the set or the signal cable from the HDMI output port of the PC to the HDMI/DVI port on the set.
- ▶ Connect the audio cable from the PC to the Audio input on the set. (Audio cables are not included with the set).
- ▶ If using a sound card, adjust PC sound as required.
- ▶ This set uses a VESA Plug and Play Solution. The set provides EDID data to the PC system with a DDC protocol. The PC adjusts automatically when using this set.
- ▶ DDC protocol is preset for RGB (Analog RGB), HDMI (Digital RGB) mode.
- ▶ If required, adjust the settings for Plug and Play functionally.
- ▶ If graphic card on the PC does not output analog and digital RGB simultaneously, connect only one of either RGB (PC/DTV) or HDMI/DVI to display the PC on the set.
- ▶ If graphic card on the PC does output analog and digital RGB simultaneously, set the set to either RGB or HDMI; (the other mode is set to Plug and Play automatically by the set.)
- ▶ DOS mode may not work depending on video card if you use a HDMI to DVI cable.
- ▶ When you use too long RGB-PC cable, there might be a noise on the screen. We recommend using under 5m of the cable. It provides the best picture quality.

CONNECTIONS & SETUP

Supported Display Resolution (RGB / HDMI mode)
(37LC2RR *, 42LC2RR *)

720x400	31.468	70.8
640x480	31.469 37.684	59.94 75.00
800x600	37.879 46.875	60.31 75.00
832x624	49.725	74.55
1024x768	48.363 56.47 60.123	60.00 70.00 75.029
1280x768	47.776	59.870
1360x768	47.720	59.799
1366x768	47.720	59.799

Supported Display Resolution (RGB / HDMI mode)
(42PC1RR *, 50PC1RR *)

640x350	31.468 37.861	70.09 85.08
720x400	31.469 37.927	70.08 85.03
640x480	31.469 35.000 37.861 37.500 43.269	59.94 66.66 72.80 75.00 85.00
848x480	31.500 37.799 39.375	60.00 70.00 75.00
852x480	31.500 37.799 39.375	60.00 70.00 75.00
800x600	35.156 37.879 48.077 46.875 53.674	56.25 60.31 72.18 75.00 85.06
832x624	49.725	74.55
1024x768	48.363 56.476 60.023 68.677	60.00 70.06 75.02 85.00
1360x768	47.700	60.00
1366x768	47.700	60.00
1152x864	54.348 63.995	60.05 70.01
1280x768	47.776	59.87

BASIC OPERATION


TURNING THE SET ON

Turning the set on

- First, connect the power cord.
At this moment, the set switches to standby mode.
 - In standby mode to turn the set on, press the **⏻/⏻**, **INPUT**, **PR ▲ / ▼** button on the set or press the **POWER**, **INPUT**, **MULTIMEDIA**, **PR ▲ / ▼**, **NUMBER** button on the remote control and then the set will switch on.

Volume Adjustment

- Press the **VOL ▲ / ▼** button to adjust the volume.
- If you want to switch the sound off, press the **MUTE** button.
- You can cancel this function by pressing the **MUTE**, **VOL ▲ / ▼** or **I/II** button.

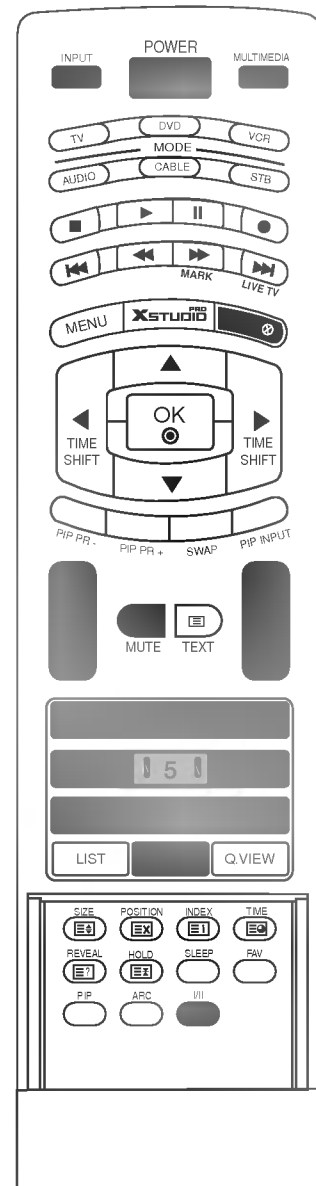

BASIC OPERATION

TURNING THE SET ON


Programme selection

- Press the **PR** ▲ / ▼ or **NUMBER** button to select a programme number.

On-Screen Menu Language Selection (option)

- The menus can be shown on the screen in the selected language. First select your language.

- Press the **MENU** button and then use ▲ / ▼ button to select the **SPECIAL** menu.
- Press the ► button and then use ▲ / ▼ button to select **Language**.
- Press the ► button and then use ▲ / ▼ button to select your desired language. From this point on, the on-screen menus will be shown in the language of your choice.
- Press the **EXIT** button to return to normal TV viewing.

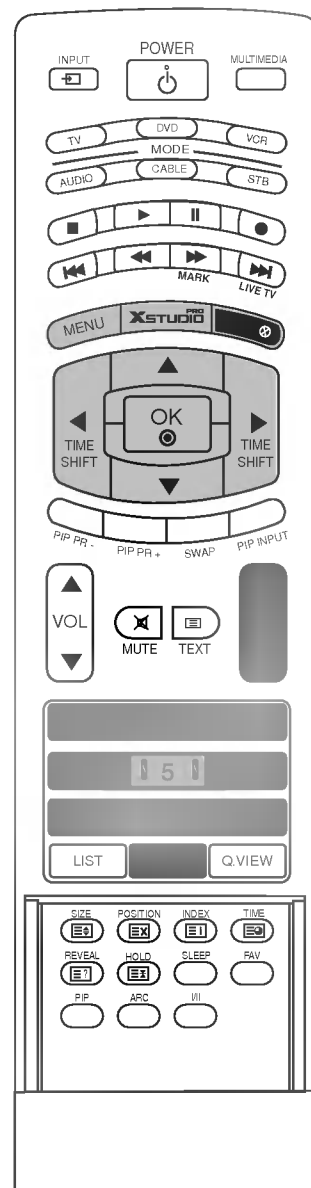


● NOTE

- ▶ If you intend to be away on vacation, disconnect the power plug from wall power outlet.

SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

TIMESHIFT

- This function allows the unit to automatically record live TV and make it available for reviewing at any time.
- With Timeshift turned on, you may pause and rewind normal TV viewing at any time without missing any of the live broadcast.

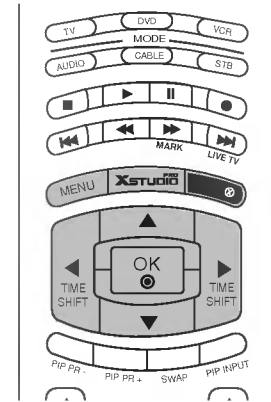

● Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.


● Press the ► button and then use ▲ / ▼ button to select the **Timeshift**

.....

● Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.

.....

● Press the **EXIT** button to return to normal TV viewing.

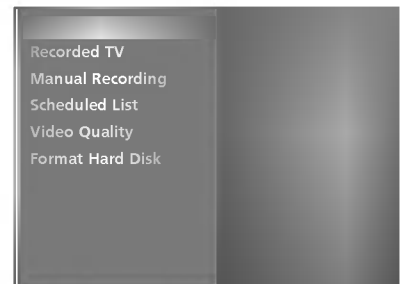

PROGRESSING THE TIMESHIFT FUNCTION



- After selecting the **Timeshift On**, press the **OK** button.
 - As soon as Timeshift starts, a progress bar indicating the current recording status is displayed in the bottom of the screen.
 - Press the **EXIT** button to hide the 'Progress Bar' or press the **OK** button to display the 'Progress Bar'.
 - This function is preserved even change a programme on progressing the Timeshift.

The 'Progress Bar'?

This function indicates a possible DVR reshowing section, a current on-screen and real live broadcasting position.

- Status of current displayed video.
- Current save time.
- 15 minute intervals from Timeshift start time. (Total - one hour).
- Indicates current Timeshift position.



- When finishing the Timeshift function, enter the option menu and turn **Timeshift Off**.

● NOTE

- ▶ DVR (Digital Video Recorder) : A device which records and plays broadcast program contents onto a hard disk in set or SET TOP BOX.
- ▶ In order to save hard-disk space, nothing is saved when there is no signal.
- ▶ The total storage space of the hard-disk is 80 GB. 4 GB minimum is reserved for Timeshift.
- ▶ When turning power on, it may take up to a maximum of 3 minutes to initialize the HDD.
- ▶ The Recording function will not initiate for a copy-protected program.
- ▶ Because an analog broadcast is transferred to a digital signal, video that contains rapid movement may show "cross stripes". This happens when the analog signal is compressed and then restored in the digital signal. The unit will attempt to reduce this excessive picture noise.
- ▶ When using the PIP/DW, POP mode, Timeshift is stopped.
- ▶ Timeshift is available in TV, AV1, AV2, S-Video2, AV3, AV4 mode.
- ▶ Timeshift is not available for Audio only channels.





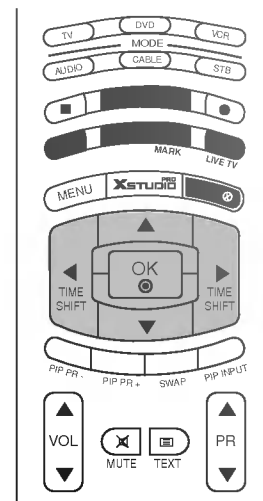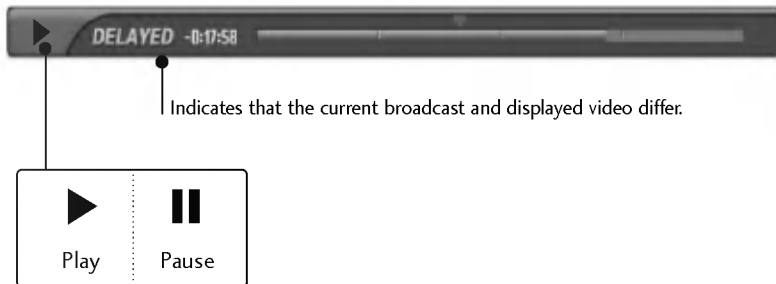









 
 







 
 




Progressing the Timeshift function, play

- When in timeshift mode, the following options are available.



Using the remote control

You can shift playback to any point within the recorded program



	<p>When playing,</p> <p>repeatedly, press the REW() button to speed up  ->  .</p> <p>repeatedly, press the FF() button to speed up  ->  .</p> <ul style="list-style-type: none"> Pressing these buttons repeatedly increases the fast forward/reverse speed.
  	<p>Press the  or  button to move back and forth within the current program.</p> <ul style="list-style-type: none"> Press the  button to jump to the beginning of the programme. Pressing the  button to jump to the end of the programme. <p>Press the  button to jump about 20 seconds forward.</p> <ul style="list-style-type: none"> Pressing the  button to jump about 8 seconds backward.
	<p>During playback, press the Pause() button.</p> <ul style="list-style-type: none"> Still screen is displayed. Repeatedly press the Pause() button to advance frame by frame. Press the Pause() button and then use the FF() button for slow motion (the  icon is displayed.)
	<ul style="list-style-type: none"> When using the  or  button during playback a cursor indicating the position can be viewed on the screen.
	<p>Press the PLAY() button to return to normal playback.</p>
	<p>If you want to return to the current live broadcast, press the  button.</p>

RECORDING


- Use this function to record the program you are watching on the main screen.

 
Instant Record

This function records the currently displayed programme.


- Select the programme you wish to record and then press the  button. During recording  is displayed. Use this feature to record up to 2 hours of programming.


- If you want to stop recording, press the  button.

- While recording, if you press the  button less than 10 seconds after recording started, this message is displayed.





 
Recording is not completed.
Recording time must exceed 10 seconds.

- If you press the  button more than 10 seconds after recording started, this message is displayed.





Recording is completed.

- You can increase or decrease recording time by pressing the  button while recording. After pressing the  button, press the ◀ or ▶ buttons repeatedly to increase or decrease the recording time. Each time you press ◀ or ▶ button the recording duration changes as shown below.

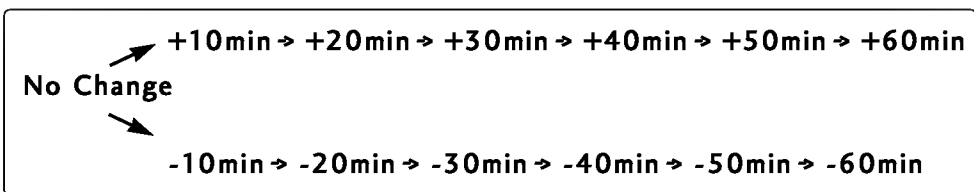


The extra recording time added to existing setting equals the final recording time.

After adjusting the recording time, select **OK**. The Status bar will be displayed.

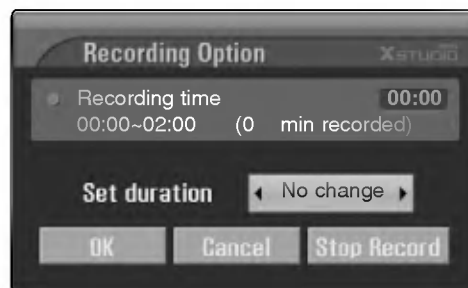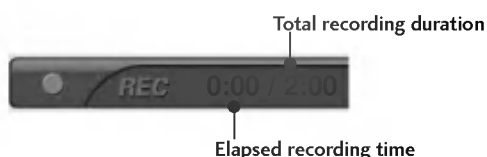


Press the **EXIT** button to hide the Status bar. Press the **OK** button to display the Status bar.

Recording stops when the selected duration is reached or when you press the  button. Although recording has stopped, the Timeshift feature remains active.


NOTE

 - ▶ When recording, if the available storage space becomes low, the recording will be automatically stopped.
- ▶ Recordings of less than 10 seconds will not be saved.
- ▶ To save disk space while recording broadcasts, no data will be saved if there is no signal.
- ▶ The recording function will not initiate for a copy-protected program.
- ▶ The displayed time may differ slightly from the actual time.
- ▶ In there is no signal or a film source is being viewed, the displayed time may differ slightly from the actual time.
- ▶ Timeshift recording is not possible with copy-protected programs.
- ▶ When a poor quality external source is recorded (old VHS tape for example) the quality of the recording will not be as good as it could be.
- ▶ Programmes are stored separately according to the colour system that they are using. e.g. PAL/NTSC.




WATCHING & RECORD

- While recording, you can change programmes or inputs without disturbing the recording. The broadcast being recorded can be shown in the lower-right corner of the main screen.

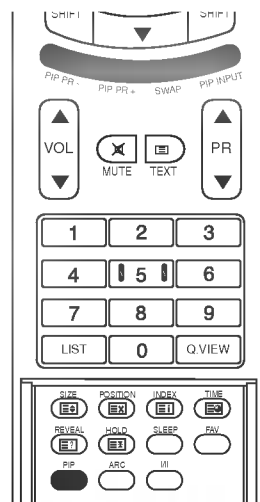

- After starting an Instant Record or Reserved Record, change the programme or input.
 - You can check the show being recorded in the lower-right corner the main screen (as shown below).
 - Press the **PIP** button to hide or show the program being recorded.
 - Press the **SWAP** button to return to the program being recorded in Watching & Record.
 - When changed to the programme recorded in Watching & Record, the screen is changed to Instant Record state or Reserved Record state.

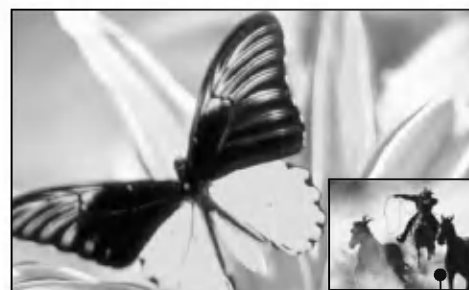

screen being recorded

Analog	0	0	0	0	0	0
AV1	0	0	0	0	0	0
AV2	0	0	0	x	0	0
S-Video2	0	0	x	0	0	0
AV3	0	0	0	0	0	0
AV4	0	0	0	0	0	0
Component	0	0	0	0	0	0
RGB	0	0	0	0	0	0
HDMI/DVI	0	0	0	0	0	0

Watching & Record Input

▲ CAUTION

- ▶ If you turn the power off on recording, this message is displayed as shown below.





- ▶ If you selects No, recording stops and then power is off.
- ▶ If you selects Yes, recording continues and the power is turned off.
- ▶ If you press the **EXIT** button to disappear this message.

RECORDED TV

- You can view the recorded program list at a glance.
- This function is also available in DVR menu.



- Press the **XStudio** button to display HOME menu.
- Use the **▲** or **▼** button to select **Recorded TV** and then use the **OK** or **▶** button.

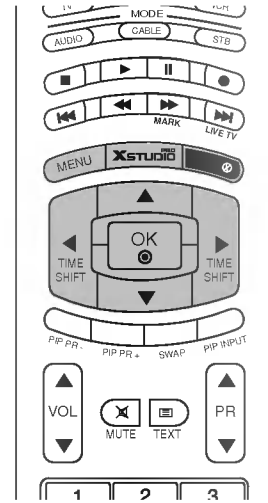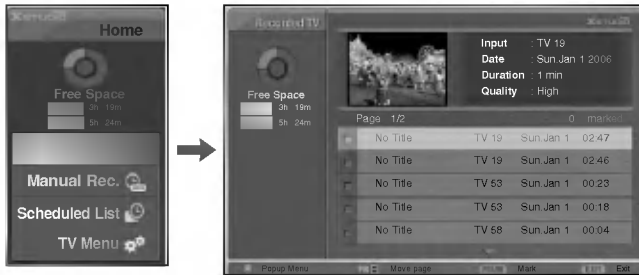

RECORDED PROGRAM SELECTION AND POPUP MENU

- The thumbnail recorded list is shown above.

- Use the **▲** or **▼** button for page up/down navigation.
- Use the **MARK** button to delete from the list. A **■** is displayed next to the thumbnail photo if an item is marked.

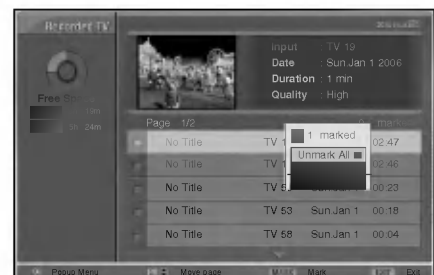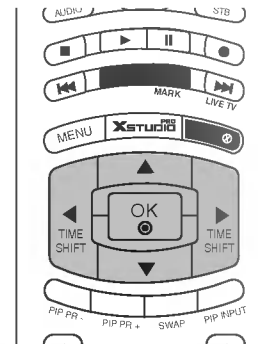

SPECIAL FUNCTIONS | DVR (Digital Video Recorder)

 
 
● Use ▲▼◀▶ button to navigate the appropriate thumbnail photo, then press the **OK** button to open the Pop-up Menu.

- ▶ **Play** : Begin playback of the selected recording.
- ▶ **Mark All** : mark all recordings on the screen.
- ▶ **Unmark All** : Change marked recordings to unmarked recordings.
- ▶ **Delete** : Delete the selected recording.
- ▶ **Rename** : Edit the recorded program title.
- ▶ **Cancel** : Close the Pop-up Menu.



● Repeatedly, press **EXIT** button to return to TV viewing or press **Xenon** button to return to the **Home** menu.

- If the HDD has a problem performing a recording related function, this message is displayed.
- If the temperature is below zero (0°), a warning message is displayed and you will not be able to use the DVR functions.



PLAYING RECORDED PROGRAMS

- You can play the selected program in the recorded program list.

● Play a recorded program.

● While playing, You will see a playback screen as shown below.

- Initially, an icon showing the current playback mode is displayed **▶ PLAYING**. Press the **OK** button to display the progress bar
- To stop displaying the recorded programs icon, press the **EXIT** button.






 












 




 



 







The 'Progress Bar'?

This function indicates a possible DVR reshowing section, a current on-screen and real on-broadcasting position, a section of section-recording.

- Indicates movement of recorded program.
- Indicates status of recorded program.
- Indicates elapsed playback time.
- Indicates total playback time.
- Indicates a quarter of program runtime.
- Indicates current playback position.


USING THE REMOTE CONTROL

 You can shift playback to any point within playing the recorded program.


	<p>When playing, repeatedly, press the REW() button to speed up  ->  .</p> <p>repeatedly, press the FF() button to speed up  ->  ->  .</p> <ul style="list-style-type: none"> Pressing these buttons repeatedly increases the fast forward/reverse speed.
 	<p>Press the  or  button to move back and forth within the current program.</p> <ul style="list-style-type: none"> Press the  button to jump at the front of the programme. Pressing the  button to jump at the end of the programme.
 	<p>Press the  button to jump about 20 seconds forward.</p> <ul style="list-style-type: none"> Pressing the  button to jump about 8 seconds backward.
	<p>During playback, press the Pause() button.</p> <ul style="list-style-type: none"> Still screen is displayed. Repeatedly press the Pause() button to advance frame by frame. Press the Pause() button and then use the FF() button for slow motion (as showing the  .)
	<ul style="list-style-type: none"> When using the  or  button during playback the cursor can be viewed on the screen.
	<p>Press the PLAY() button to return to normal playback.</p>
	<p>If you want to return to the current live broadcast, press the  button.</p>
	<ul style="list-style-type: none"> If you press the STOP() button, you can watch set.

MANUAL RECORDING

- This function is easy to register to reserved recording.
- This function is available to use in DVR menu.
- When Manual Recording, it's stored the default sound of the set.

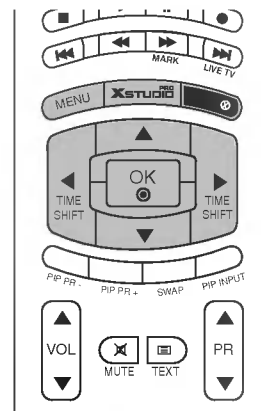

- Press the button to display **Home** menu. Use the ▲ or ▼ button to select the **Manual Rec** and then use the OK or ► button.

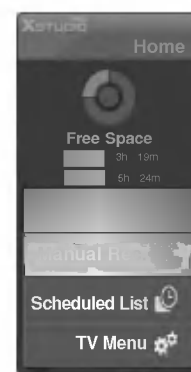

- **Manual Rec** screen is displayed as shown below. Use the ▲▼◀▶ button to set the **Input, PR, Date, Time, Duration, Frequency** .


- ▶ **Input** : Select the input source from the TV, AV1, AV2, S-Video2, AV3, AV4.
- ▶ **PR** : Select either the current programme or a scanned programme.
- ▶ **Date** : You can select a date up to one month in the future.
- ▶ **Time /Duration** : Ensure you have set correctly.
- ▶ **Frequency** : Choose among Once, Daily and Weekly.



- After setting the **Manual Rec** , press the **OK** button.


SCHEDULED LIST

- You can store up to 8 programmes.
- This function is available to use in DVR menu.

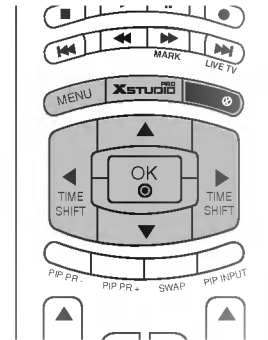

Press the **MENU** button to display **Home** menu. Use the **▲** or **▼** button to select the **Scheduled List** and then use the **OK** or **▶** button.

Scheduled List screen is displayed as shown below. Use the **▲▼** button to select recorded programme.

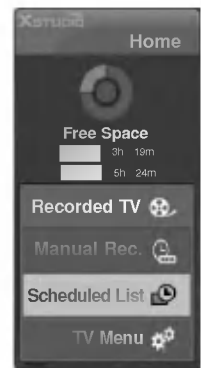

Scheduled List

PR	Date	Time	Duration	Frequency
AV2	Sun, Jan 1	00:02 - 00:32 (30 min)		Sun, Jan 1 00:01
AV2	Sun, Jan 1	00:02	30 min	Once
S-Video2	Sun, Jan 1	02:05	240 min	Once
TV 53	Sun, Jan 1	20:00	240 min	Daily
TV 53	Sun, Jan 1	00:05	240 min	Daily
TV 53	Sun, Jan 1	04:00	240 min	Daily
TV 53	Sun, Jan 1	08:00	240 min	Daily
TV 53	Sun, Jan 1	12:50	240 min	Daily
TV 53	Sun, Jan 1	16:50	30 min	Daily

VIDEO QUALITY


- This function is not available while a recording is taking place.

Press the **MENU** button and then use **▲ / ▼** button to select the **DVR** menu.


Press the **▶** button and then use **▲ / ▼** button to select **Video Quality**.

Press the **▶** button and then use **▲ / ▼** button to select **High** or **Normal**.

Press the **EXIT** button to return to normal TV viewing.

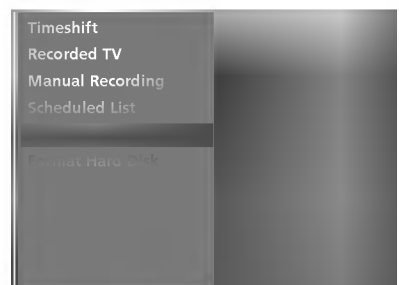


FORMAT HARD DISK

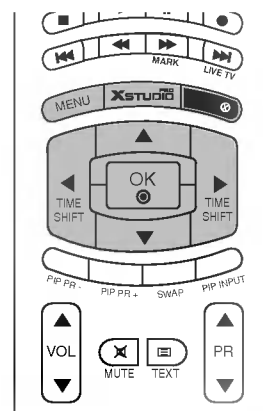


- Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.
- Press the ► button and then use ▲ / ▼ button to select **Format Hard Disk**.
- Press the ► button to start **Format Hard Disk**.



 
■ if you press the ► button, this message is displayed.



 ■ if you select Yes, this message is displayed.



 ■ When completing, this message is displayed.




- Press the **EXIT** button to return to normal TV viewing.



SPECIAL FUNCTIONS | PIP / POP / Twin Picture

PIP (PICTURE-IN-PICTURE) FEATURE

PIP lets you view 2 different inputs (sources) on your set screen at the same time. One source will be large, and the other source will show a smaller inset image. It's not available to use this function in TELETEXT mode. Twin Picture mode splits the screen into two images, allowing two picture sources to be shown on the set screen at the same time. Each source is given half the screen. When recording or playing, it's not available to use this function.

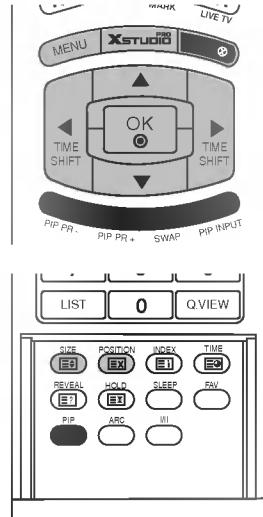


NOTE

- ▶ When the sub picture size is 1/2 of the main picture, the picture quality may decrease.
- ▶ The motion of the sub picture can be unnatural because the set displays full screen by synchronizing the main picture source when the refresh rate between the main picture source and the sub picture source is different in PIP mode.

WATCHING PIP

Press the PIP button to access the sub picture.

Each press of PIP changes the PIP options as shown below.

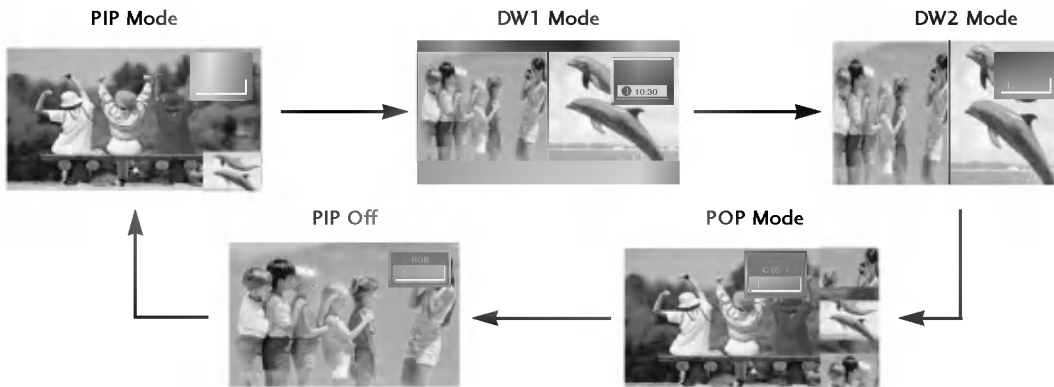

ADJUSTING PIP TRANSPARENCY (PIP MODE ONLY)

- Press the **MENU** button and then **▲ / ▼** button to select the **PIP/DW** menu.
- Press the **▶** button and then **▲ / ▼** button to select **PIP Transparency**.
- Press the **▶** button and then **◀ / ▶** button to adjust PIP transparency.
- Press the **EXIT** button to return to normal TV viewing.

PROGRAMME SELECTION FOR SUB PICTURE

 
- Press the **PIP PR +/-** button to select a programme for the sub picture.

ADJUSTING THE SCREEN FOR THE PIP

- In TV or AV modes for the main picture and RGB[PC] for the sub picture, you can use Auto config and Manual config to adjust the screen of the sub picture.
 - In TV or AV modes for main picture and HDMI[DTV] or Component 480p, 576p, 720p, 1080i for the sub picture, you can use Manual config to adjust the screen of the sub picture.

SELECTING AN INPUT SIGNAL SOURCE FOR THE PIP

- Press the **PIP INPUT** button to select the input source for the sub picture.
 - In some models, when the sub picture quality get poor for sub picture, select Auto, PAL, SECAM or NTSC in PIP System menu.
 - Each press of **PIP INPUT** button is pressed, each input source for the sub picture is displayed as shown below.



SUB PICTURE SIZE ADJUSTMENT (PIP MODE ONLY)

- Press the **SIZE** button and then ◀ / ▶ button to adjust the sub picture size.
 - With **SIZE** button in DW1, DW2 modes, main and sub picture is adjusted simultaneously. With **SIZE** button in PIP mode, sub picture is adjusted.




MOVING THE PIP (PIP MODE ONLY)

- Press the **POSITION** button.
 - Repeatedly press the ▲ / ▼ or ◀ / ▶ button until desired position is achieved. The sub picture moves up/down or left/right.



SWAPPING BETWEEN MAIN AND SUB PICTURES

● Press the **SWAP** button to exchange the main and sub pictures.

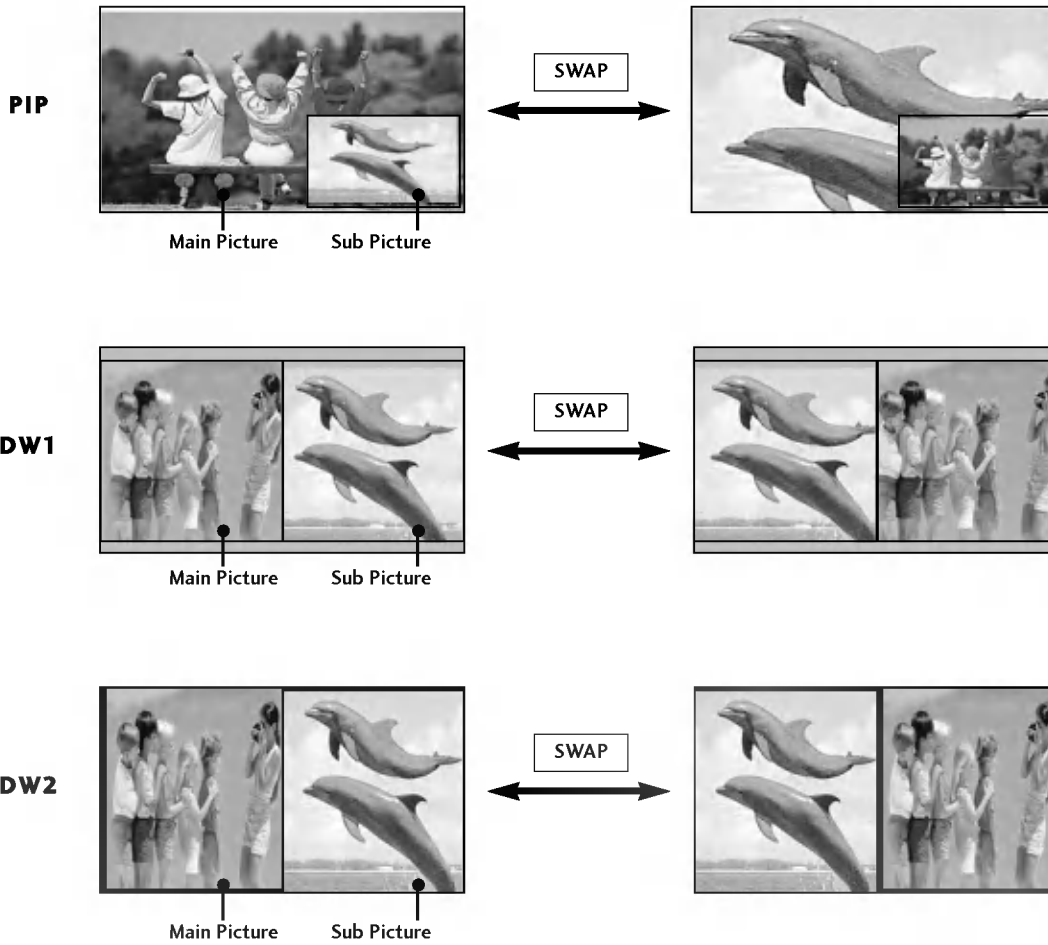

POP (PICTURE-OUT-OF-PICTURE: CHANNEL SCAN)

● Use POP to search the programmes of all the memorized channels one-by-one on the 3 PIP screen display, (while the main picture source remains the current programme). The pictures of all the programmed channels are searched with the 3 POP screen.



SPECIAL FUNCTIONS | Teletext

- Teletext (or TOP text) is an optional function, therefore only the set with the teletext system can receive the teletext broadcast.
- Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.
- The teletext decoder of this set can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

TELETEXT LANGUAGE SELECTION (OPTION)

- Press the **MENU** button and then use ▲ / ▼ button to select the **SPECIAL** menu.
- Press the ► button and then use ▲ / ▼ button to select **Language** .
- Press the ► button and then use ► button to select **Teletext Language** .
- Press the ▲ / ▼ button to select the required language.
- Press the **EXIT** button to return to normal TV viewing.

● NOTE

- Please select your local teletext language.
- If the local language is not selected, teletext may not appear correctly on the screen.
- This feature is not available in all countries.

SWITCH ON/OFF

- Press the **TEXT** button to switch to teletext. The initial page or last page appears on the screen. Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed. Press the **TEXT** button to switch off teletext. The previous mode reappears.

SIMPLE TEXT (OPTION)

■ Page selection

- 1 Enter the desired page number as a three digit number with the NUMBER buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
 - 2 The PR ▲ / ▼ button can be used to select the preceding or following page.
-

TOP TEXT (OPTION)

- The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

■ Block / group / page selection

- 1 With the blue button you can progress from block to block.
 - 2 Use the yellow button to proceed to the next group with automatic overflow to the next block.
 - 3 With the green button you can proceed to the next existing page with automatic overflow to the next group.
 - Alternatively the PR ▲ button can be used.
 - 4 The red button permits you to return to the previous selection. Alternatively the PR ▼ button can be used.
-


■ Direct page selection

- 1 Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.
-

FASTEXT

- The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

■ Page selection

- 1 Press the  button to select the index page.
 - 2 You can select the pages which are colour coded along the bottom line with the same coloured buttons.
 - 3 Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
 - 4 The PR ▲ / ▼ button can be used to select the preceding or following page.
-

SPECIAL TELETEXT FUNCTIONS

REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.

Press this button again to remove the information from the display.

SIZE

Selects double height text.

Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.

UPDATE

Displays the TV picture on the screen while waiting for the new teletext page.

Press this button to view the updated teletext page.

HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited.

To continue press this button again.

TIME

This button has two functions:

a) When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display.


b) In teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/ GREEN or **PR ▲ / ▼** buttons. Press this button again to exit this function.

TV MENU

ON SCREEN MENUS SELECTION AND ADJUSTMENT

Your set's OSD (On Screen Display) may differ slightly from what is shown in this manual.

- Press the **MENU** button and then **▲ / ▼** button to display each menu.
- Press the **▶** button and then **▲ / ▼** button to select a menu item.
- Change the setting of an item in the sub or pull-down menu with **◀ / ▶** button.
You can move to the higher level menu by pressing the **OK** or **MENU** button.

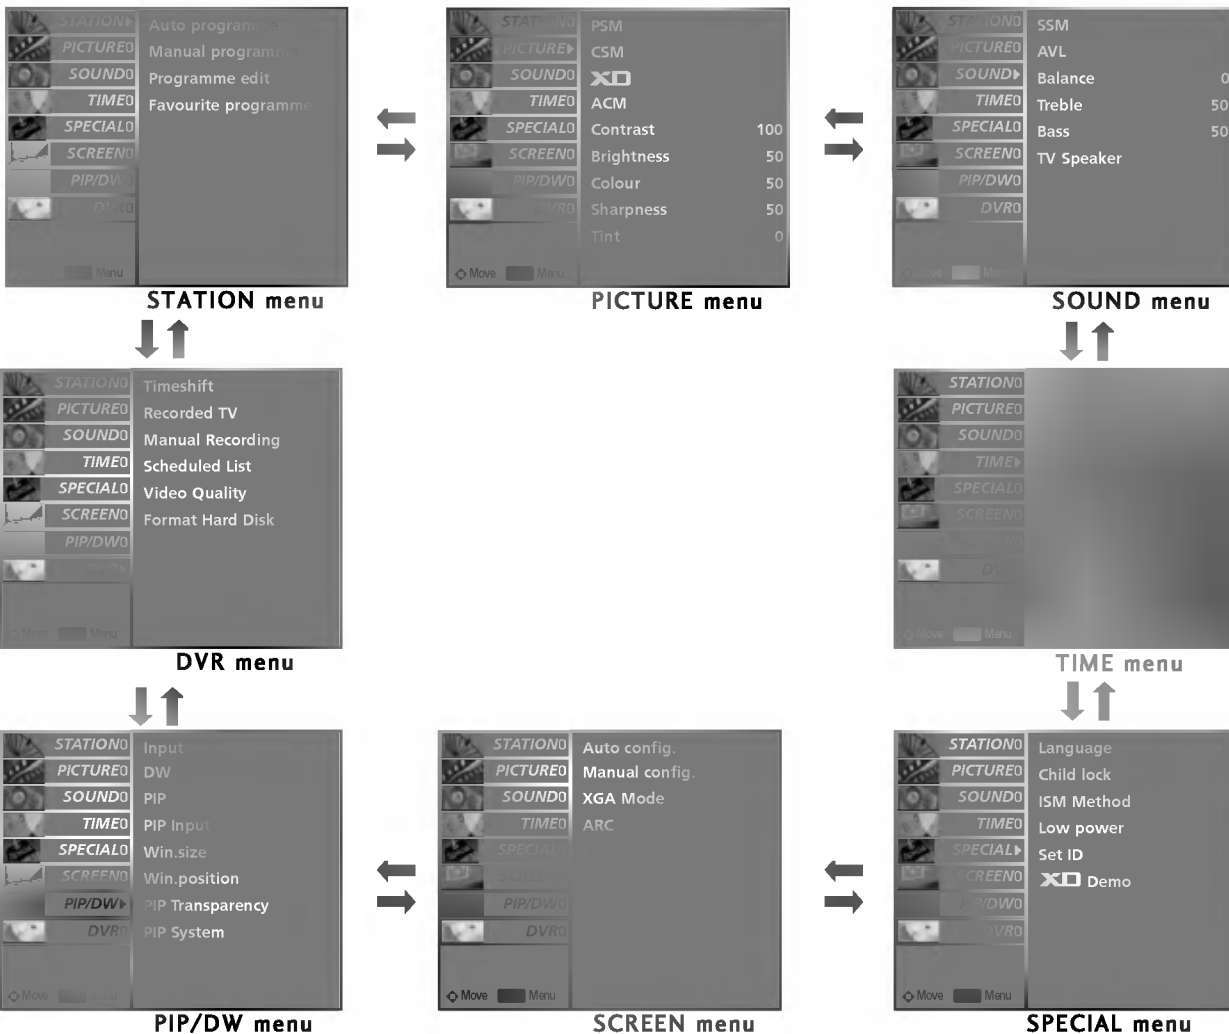


TV MENU

● NOTE

- a. In the teletext mode, menus are not displayed.
- b. When playing back a recorded programme; Station, PIP/DW menu items will be unavailable.

AUTO PROGRAMME TUNING

- All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.
- This function is not available when recording a programme.

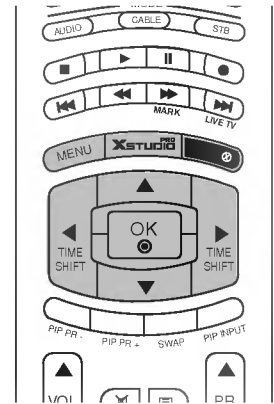

● Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.

● Press the **▶** button and then **▲ / ▼** button to select **Auto programme**.

● Press the **▶** button to select **System**.

● Select a TV system with the **◀ / ▶** button;

- L** : SECAM L/L' (option)
- BG** : PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M.East / Africa / Australia)
- I** : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
- DK** : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)
- M** : (USA / Korea / Philippines) (option)

● Press the **▼** button to select **Storage from**.

● Select the beginning programme number with the **◀ / ▶** button or **NUMBER** buttons on the **Storage from** menu.

● Press the **▼** button to select **Start**.



● Press the **▶** button to begin auto programming.
All receivable stations are stored.

NOTE

In some models, the station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or TELETEXT data. If no station name can be assigned to a station, the channel number is assigned and stored as C (V/UHF 01-69) or S (Cable 01-47), followed by a number.


● To stop auto programming, press the **MENU** button.
When auto programming is completed, the **Programme edit** menu appears on the screen. See the 'Programme edit' section to edit the stored programme.

● Press the **EXIT** button to return to normal TV viewing.

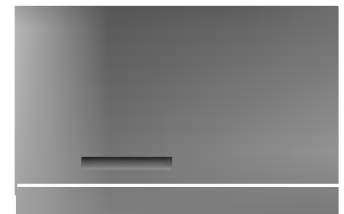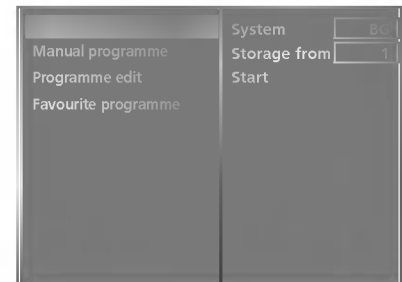


MANUAL PROGRAMME TUNING

- Manual programme lets you manually tune and arrange the stations in whatever order you desire. Also you can assign a station name with five characters to each programme number.
- It's not available to use this function in Timeshift **On** mode.
- It's not available to use this function on recording programme.

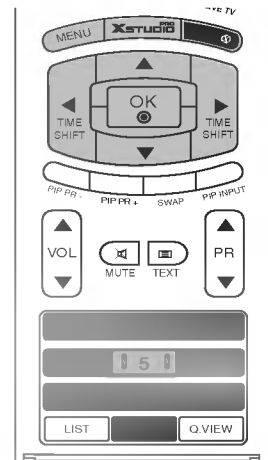


- Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.
- Press the **▶** button and then **▲ / ▼** button to select **Manual programme**.
- Press the **▶** button to select **Storage**. Select the desired programme number with the **◀ / ▶** button or **NUMBER** buttons on the **Storage** menu.
- Press the **▼** button to select **System**.
- Select a TV system with the **◀ / ▶** button;
 - L** : SECAM L/L' (option)
 - BG** : PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M.East / Africa / Australia)
 - I** : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
 - DK** : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)
 - M** : (USA / Korea / Philippines) (option)
- Press the **▼** button to select **Band**.
- Press the **◀ / ▶** button to select **V/UHF** or **Cable** as required.
- Press the **▼** button to select **Channel**.
- You can select the desired channel number with the **◀ / ▶** button or **NUMBER** buttons. If possible, select the channel number directly with the number buttons.
- Press the **▼** button to select **Search**.
- Press the **◀ / ▶** button to commence searching. If a station is found the search will stop.
- Press the **OK** button to store it.
- To store another station, repeat steps **3** to **12**.
- Press the **EXIT** button to return to normal TV viewing.

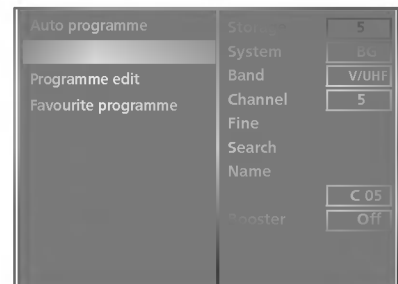

FINE TUNING

- Normally fine tuning is only necessary if reception is poor.

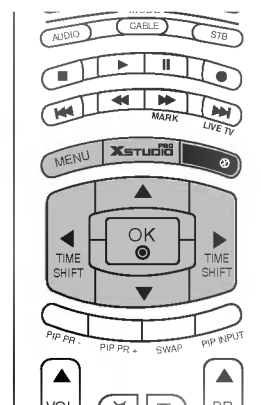

- Press the **MENU** button and then ▲ / ▼ button to select the **STATION** menu.



- Press the ► button and then ▲ / ▼ button to select **Manual programme**.

- Press the ► button and then ▲ / ▼ button to select **Fine**.

- Press the ◀ / ▶ button to to fine tune for the best picture and sound.


- Press the **OK** button.

- Press the **EXIT** button to return to normal TV viewing.
The finely tuned programme will be indicated by yellow number during programme selection.

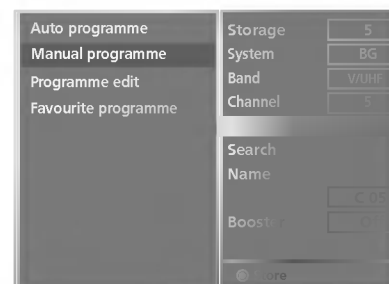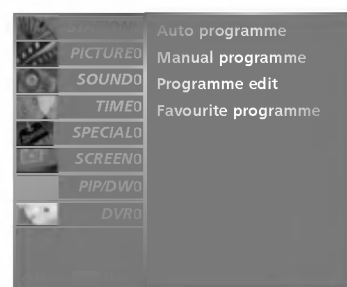

ASSIGNING A STATION NAME

- You can assign a station name with five characters to each programme number.

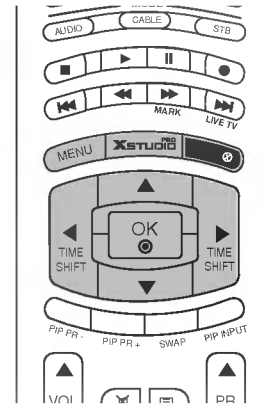

- Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.

- Press the **▶** button and then **▲ / ▼** button to select **Manual programme**.

- Press the **▶** button to display the **Name** menu.

- Press the **▲** button. You can use a blank, +, -, the alphabet **A to Z** and the numeric **0 to 9**.
With the **▼** button you can select in the opposite direction.

- Select the next position by pressing the **▶** button and then take your choice of the second character, and so on.


- Press the **OK** button in twice.

- Press the **EXIT** button to return to normal TV viewing.




BOOSTER (OPTION)

- In some models, **Booster** is an optional function. Only a set with **Booster** can perform this function.
- If the reception is poor at the fringe area of TV signal, select **Booster to On**.

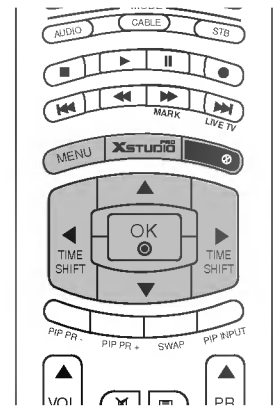


- Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.
- Press the **▶** button and then **▲ / ▼** button to select **Manual programme**.
- Press the **▶** button and then use **▲ / ▼** button to select **Booster**.
- Press the **◀ / ▶** button to select **On** or **Off**.
- Press the **OK** button.
- Press the **EXIT** button to return to normal TV viewing.

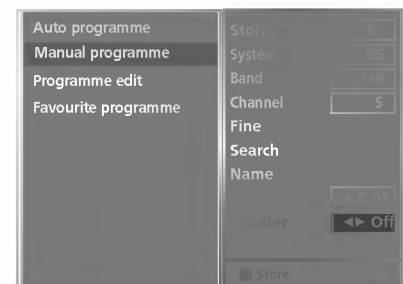

PROGRAMME EDIT

- This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or copy a blank station data into the selected programme number.
- It's not available to use this function on recording programme.

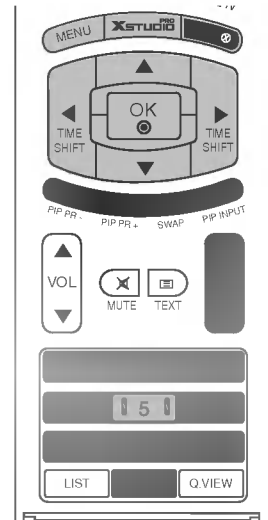

- Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.
- Press the **▶** button and then **▲ / ▼** button to select **Programme edit**.
- Press the **▶** button to display the **Programme edit** menu.

■ Deleting a programme

1. Select a programme to be deleted with the **▲ / ▼ / ◀ / ▶** button.
2. Press the **RED** button twice.
The selected programme is deleted, all the following programmes are shifted up one position.

■ Copying a programme

1. Select a programme to be copied with the **▲ / ▼ / ◀ / ▶** button.
2. Press the **GREEN** button.
All the following programmes are shifted down one position.


■ Moving a programme

1. Select a programme to be moved with the **▲ / ▼ / ◀ / ▶** button.
2. Press the **YELLOW** button.
3. Move the programme to the desired programme number with the **▲ / ▼ / ◀ / ▶** button.
4. Press the **YELLOW** button again to release this function.

■ Skipping a programme number

1. Select a programme number to be skipped with the **▲ / ▼ / ◀ / ▶** button.
2. Press the **BLUE** button. The skipped programme turns to blue.
3. Press the **BLUE** button again to release the skipped programme.
When a programme number is skipped it means that you will be unable to select it using the **PR ▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.


- Press the **EXIT** button to return to normal TV viewing.

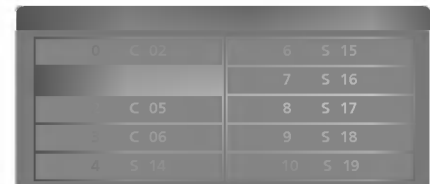

FAVOURITE PROGRAMME


This function lets you select your favourite programmes directly. Repeatedly press the **FAV** button to select stored favourite programmes.

- Press the **MENU** button and then **▲ / ▼** button to select the **STATION** menu.
- Press the **▶** button and then **▲ / ▼** button to select **Favourite programme**.
- Press the **▶** button to display the **Favourite programme** menu.
- Press the **▲ / ▼** button to select - - - - -.
- Select a desired programme with the **◀ / ▶** button or **NUMBER** buttons. Any number under 10 is entered with a numeric '0' (or '00') in front of it, i.e. '05' (or '005') for 5.
- To store another programme, repeat steps 4 to 5. You can store up to 8 programmes.
- Press the **OK** button.
- Press the **EXIT** button to return to normal TV viewing.

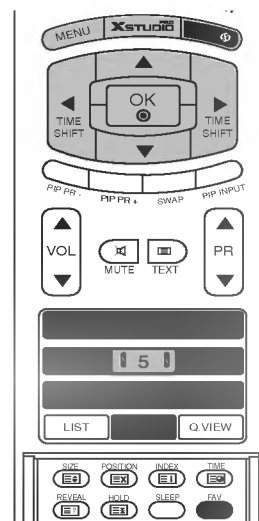

CALLING THE PROGRAMME TABLE

- You can check the programmes stored in the memory by displaying the programme table.

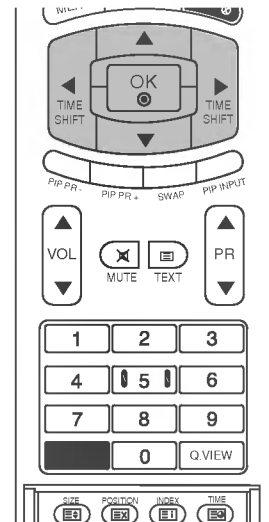

■ Displaying programme table

Press the **LIST** button to display the Programme table menu.
The programme table appears on the screen.

● NOTE

- You may find some blue highlighted programmes shown. They have been set up in the programme edit mode.
- Some programmes with the channel number shown in the programme table indicate there is no station name assigned.


■ Selecting a programme in the programme table

Select a programme with the **▲ / ▼ / ◀ / ▶** button.
Then press the **OK** button.
The set switches to the chosen programme number.


■ Paging through a programme table

There are 10 programme table pages in which contain 100 programmes.
Pressing the **▲ / ▼ / ◀ / ▶** button repeatedly turns the pages.

Press the **LIST** button to return to normal TV viewing.

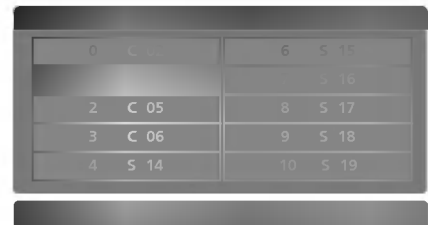

PSM (PICTURE STATUS MEMORY)

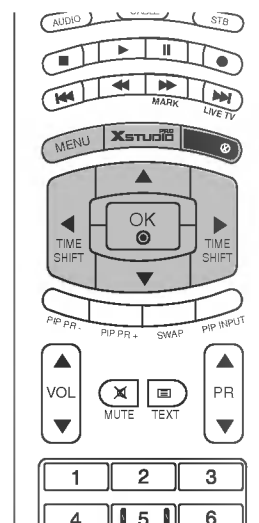

● Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.

● Press the ► button and then ▲ / ▼ button to select **PSM**.

● Press the ► button and then ▲ / ▼ button to select **Dynamic, Standard, Mild or User**.


● Press the **EXIT** button to return to normal TV viewing.

- This function adjusts the set to the best picture appearance. Select the preset value in the **PSM** menu based on the programme category.
- When adjusting picture options (contrast, brightness, colour, sharpness and tint (NTSC input only)) manually, **PSM** is automatically changed to **User**.
- Picture options **Dynamic, Standard, Mild and User** are preset and programmed for good picture quality at the factory and cannot be changed.



CSM (COLOUR STATUS MEMORY)

- To initialize values (reset to default settings), select the **Normal** option.
- When adjusting colour temperature options (red, green, or blue) manually, CSM automatically changes to **User**.
- Choose one of three automatic colour adjustments. Set to warm to enhance hotter colours such as red, or set to cool to see less intense colours with more blue.

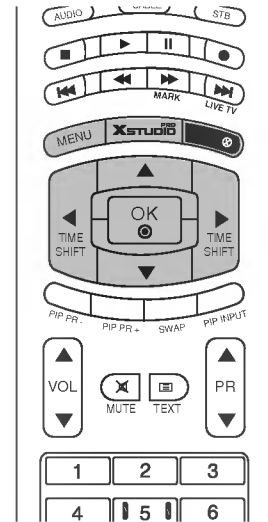


- Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.
- Press the ► button and then ▲ / ▼ button to select **CSM**.
- Press the ► button and then use ▲ / ▼ button to select the desired colour temperature.
- Press the **EXIT** button to return to normal TV viewing.



TV MENU

MANUAL COLOUR TEMPERATURE CONTROL (CSM - USER OPTION)

- You can adjust red, green, blue to any colour temperature you prefer.

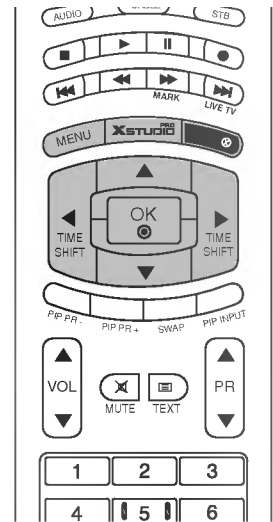

- Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.

- Press the ► button and then ▲ / ▼ button to select **CSM**.

- Press the ► button and then ▲ / ▼ button to select **User**.


- Press the ► button and then use ▲ / ▼ / ◀ / ▶ button to make appropriate adjustments.

- Press the **EXIT** button to return to normal TV viewing.



XD FUNCTION

- XD is LG Electronic's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.
- You can enjoy the vivid and hi-definition picture with LG's Excellent Digital Reality processor technology.
- It's not available to use this function in RGB[PC] or HDMI[PC] modes.
- When selecting picture options (Dynamic, Standard and Mild) in PICTURE menu, XD is automatically changed to On.

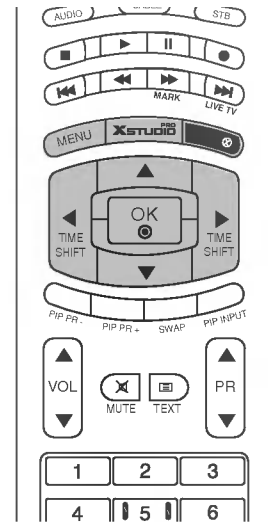


- Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.
- Press the ► button and then ▲ / ▼ button to select **XD**.
- Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.



sRGB FUNCTION

- When the set is connected to external equipment with the sRGB function, the colour difference is adjusted the equal image of each other.
- This function works in the following mode : RGB[PC], HDMI[PC].

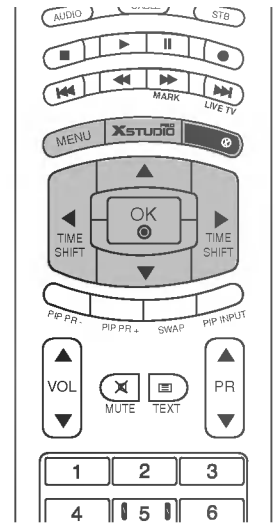


- Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.
- Press the ► button and then ▲ / ▼ button to select **sRGB**.
- Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.



ACM (ACTIVE COLOUR MANAGEMENT)

- Adjust the ACM to select the desired skin colour option.
- This function works in the following mode:
TV, AV1, AV2, S-Video2, AV3, AV4, COMPONENT, RGB[DTV], HDMI[DTV].
- It's not available to use this function in XD Off mode.

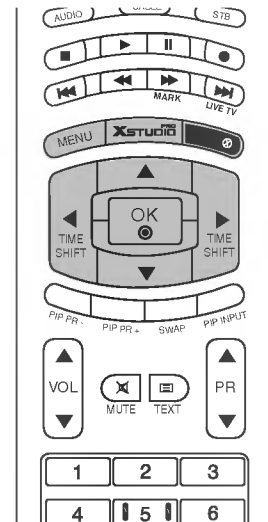


- Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.
- Press the ► button and then ▲ / ▼ button to select **ACM**.
- Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.
- Press the **EXIT** button to return to normal TV viewing.



MANUAL PICTURE CONTROL

- You can adjust picture contrast, brightness, colour, sharpness and tint (NTSC input only) to the levels you prefer.
- It's not available to use colour, sharpness function in RGB[PC], HDMI[PC] mode.
- In the broadcasting system PAL/SECAM, the picture item Tint doesn't work.

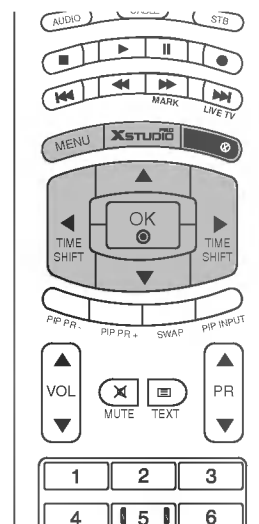


- Press the **MENU** button and then **▲ / ▼** button to select the **PICTURE** menu.
- Press the **▶** button and then use **▲ / ▼** button to select the desired picture option.
- Press the **▶** button and then use **◀ / ▶** button to make appropriate adjustments.
- Press the **EXIT** button to return to normal TV viewing.




SSM (SOUND STATUS MEMORY)

- This function lets you enjoy the best sound without any special adjustment because the set automatically selects the appropriate sound option based on the program content.
- When adjusting sound options (treble and bass) manually, SSM is automatically changed to User.
- The sound **SRS TSXT**, **Flat**, **Music**, **Movie** and **Sports** are programmed for good sound reproduction at the factory and cannot be changed.

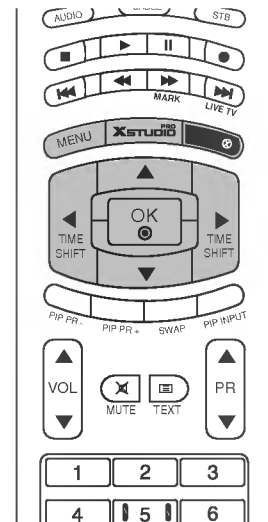

- Press the **MENU** button and then **▲ / ▼** button to select the **SOUND** menu.
- Press the **▶** button and then **▲ / ▼** button to select **SSM**.
- Press the **▶** button and then **▲ / ▼** button to select **SRS TSXT**, **Flat**, **Music**, **Movie**, **Sports** or **User**.
- Press the **EXIT** button to return to normal TV viewing.


NOTE

-  is a trademark of SRS Labs, Inc.
- TruSurround XT technology is incorporated under license from SRS Labs, Inc.




AVL (AUTO VOLUME LEVELER)

- AVL automatically keeps on an equal volume level even if you change programmes.

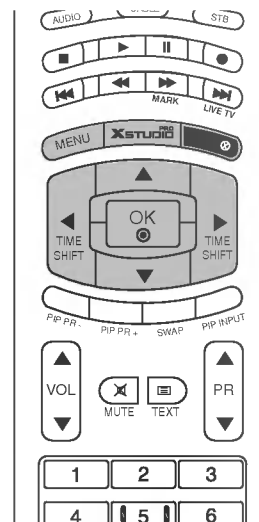

- Press the **MENU** button and then ▲ / ▼ button to select the **SOUND** menu.
- Press the ► button and then ▲ / ▼ button to select **AVL**.
- Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.



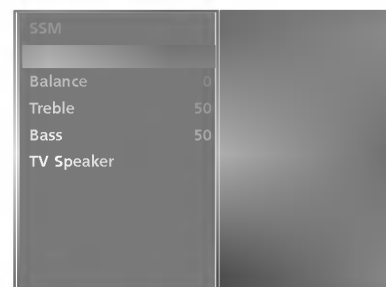


ADJUSTING SOUND CONTROL

- Press the **MENU** button and then ▲ / ▼ button to select the **SOUND** menu.
- Press the ► button and then use ▲ / ▼ button to select the desired sound item.
- Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.
- Press the **EXIT** button to return to normal TV viewing.

● **NOTE**



a. Treble or Bass aren't suitable for use with **SRS TSXT**.

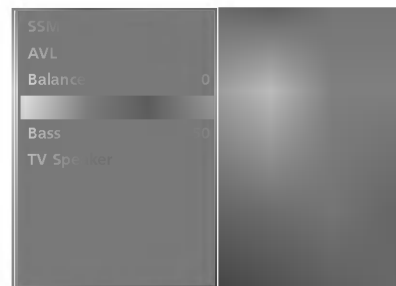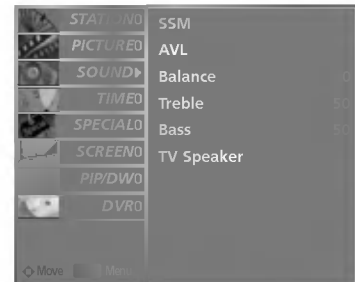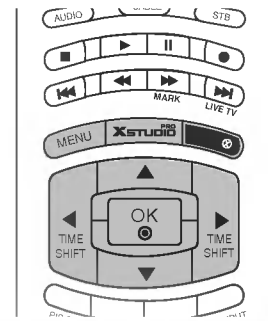

TV SPEAKER


You can adjust the internal speaker status.
In AV1, AV2, S-Video2, AV3, AV4, COMPONENT, RGB and HDMI/DVI with HDMI to DVI cable, TV speaker and/or variable audio can be outputted even though there is no video signal.
If you want to use your external hi-fi stereo system, turn off the internal speakers of the set.

- Press the **MENU** button and then ▲ / ▼ button to select the **SOUND** menu.
- Press the ► button and then ▲ / ▼ button to select **TV Speaker**.
- Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.

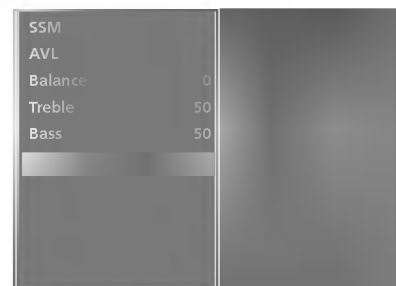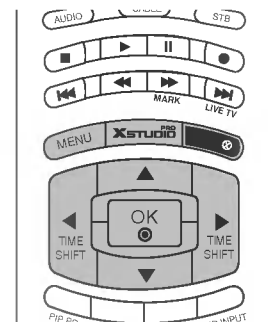

STEREO/DUAL RECEPTION

- When a programme is selected, the sound information for the station appears after the programme number and station name disappear.

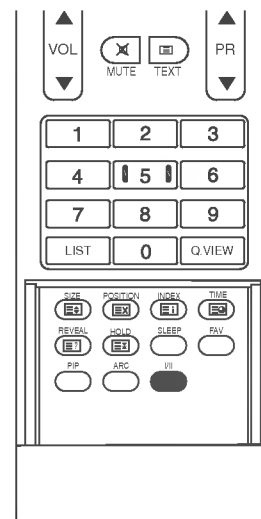

● On Screen Display

Press the I/II button to received broadcast state.

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I

● Mono sound selection

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the I/II button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the I/II button twice again.

● Language selection for dual language broadcast

If a programme received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the I/II button repeatedly.

- **DUAL I** sends the primary broadcast language to the loudspeakers.
- **DUAL II** sends the secondary broadcast language to the loudspeakers.
- **DUAL I+II** sends a separate language to each loudspeaker.

NICAM RECEPTION (OPTION)

If the set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II** button repeatedly.

-
- 1 When NICAM mono is received, you can select **NICAM MONO** or FM MONO.
 - 2 When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.
 - 3 When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II**, **NICAM DUAL I + II**, or **MONO**. When FM mono is selected the display **MONO** appears on the screen.
-

SOUND OUTPUT SELECTION


- In AV, Component, RGB or HDMI/DVI mode, you can select output sound for the left and right loudspeakers.

Repeatedly press the **I/II** button to select the sound output.

- **L+R** : Audio signal from audio L input is sent to left loud-speaker and audio signal from audio R input is sent to right loud-speaker.
- **L+L** : Audio signal from audio L input is sent to left and right loud-speakers.
- **R+R** : Audio signal from audio R input is sent to left and right loud-speakers.

SETTING THE CLOCK

- If current time setting is erased by a power failure or the set is unplugged, reset the clock.

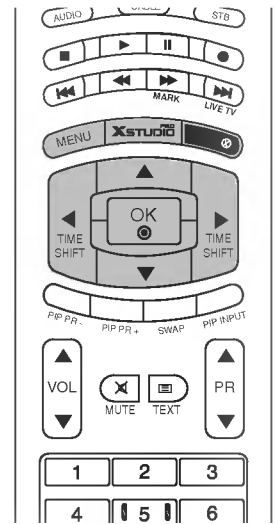



- Press the **MENU** button and then use ▲ / ▼ button to select the **TIME** menu.

- Press the ► button and then use ▲ / ▼ button to select **Clock**.

- Press the ► button and then use ▲ / ▼ button to adjust the hour.


- Press the ► button and then use ▲ / ▼ button to adjust the minute.

- Press the **EXIT** button to return to normal TV viewing.

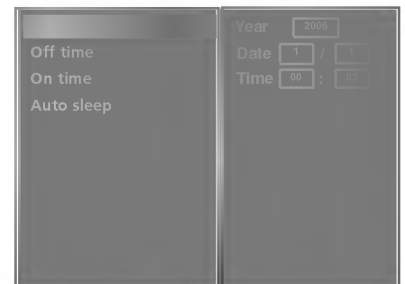
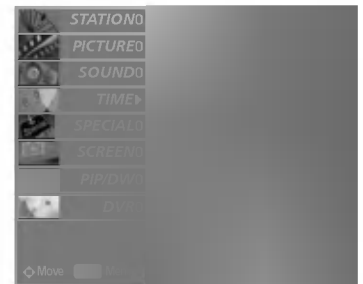


SETTING THE ON/OFF TIME

- Time function operates only if current time has been already set.
- Off Time function overrides On Time function if they are set to the same time.
- The set must be in standby mode for the On Time to work.

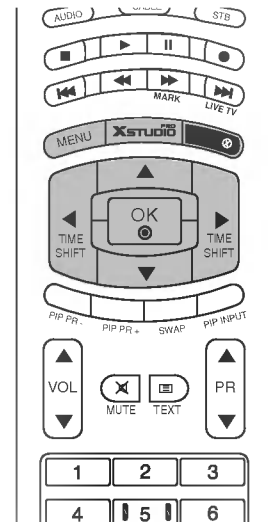

- Press the **MENU** button and then use ▲ / ▼ button to select the **TIME** menu.
- Press the ► button and then use ▲ / ▼ button to select **Off time** or **On time**.
- Press the ► button and then use ▲ / ▼ button to select **On**.
- Press the ► button and then use ▲ / ▼ button to adjust the hour.
- Press the ► button and then use ▲ / ▼ button to adjust the minute.
- Only **On time** function; Press the ► button and then use ▲ / ▼ button to adjust programme number or volume level.
- Press the **EXIT** button to return to normal TV viewing.

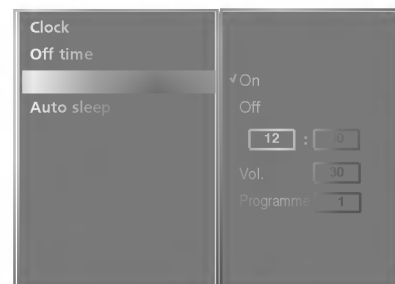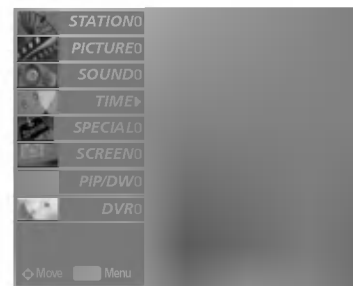




NOTE

- a. To cancel **Off/On time** function. Press the ▲ / ▼ button to select **Off** in step 3.
- b. Two hours after the set is switched on by the **On time** function it will automatically switch back to standby mode unless a button has been pressed.

AUTO SLEEP

If set to on and there is no input signal, the set turns off automatically after 10 minutes.



- Press the **MENU** button and then use ▲ / ▼ button to select the **TIME** menu.
- Press the ► button and then use ▲ / ▼ button to select **Auto sleep**.
- Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.

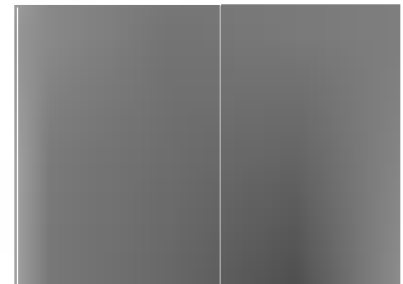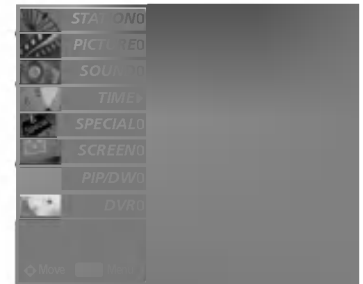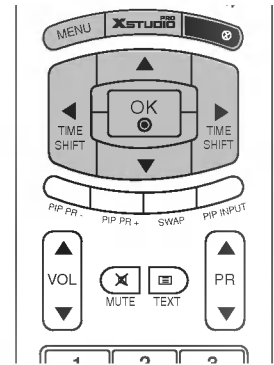

SLEEP TIMER

- Sleep timer turns the set off at the preset time.
- Press the **SLEEP** button to select the number of minutes. The display **L^{zz} --- Min** will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240** minutes. The timer begins to count down from the number of minutes selected.


- To check the remaining sleep timer, press the **SLEEP** button once.
- To cancel the sleep timer, repeatedly press the **SLEEP** button until the display **L^{zz} --- Min** appears.
- If you turn the set off after setting the sleep timer, the setting will be erased.

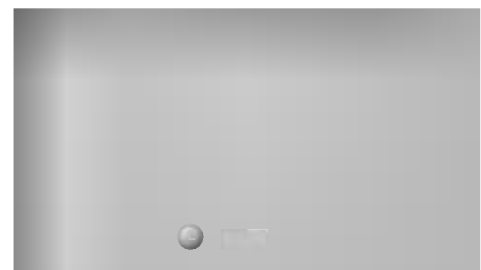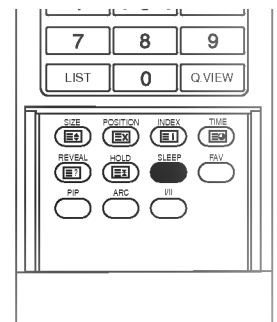


TV MENU | Special Menu Options

CHILD LOCK

- The set can be set so that the remote control handset is needed to control it.
- This feature can be used to prevent unauthorized viewing.

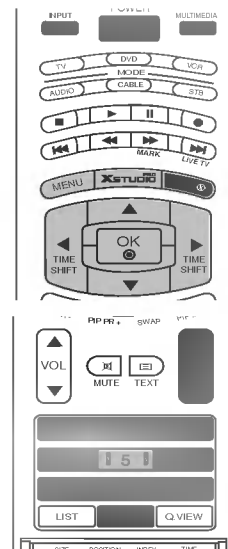

- Press the **MENU** button and then use **▲ / ▼** button to select the **SPECIAL** menu.
- Press the **▶** button and then use **▲ / ▼** button to select **Child lock**.
- Press the **▶** button and then use **▲ / ▼** button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.

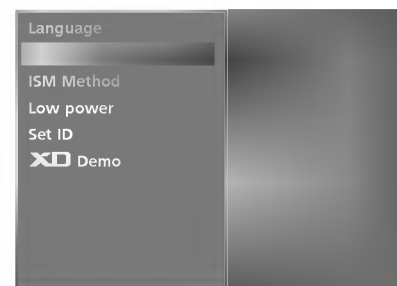


TV MENU

NOTE

- The set is programmed to remember which option it was last set to even if you turn the set off.
- In **Child lock 'on'**, if the set is turned off, press the **⏻/I**, **INPUT**, **PR ▲ / ▼** button on the set or **POWER**, **INPUT**, **MULTIMEDIA**, **PR ▲ / ▼** or **NUMBER** buttons on the remote control.
- With the **Child lock on**, the display '**Child lock on**' appears on the screen if any button on the front panel is pressed while viewing the set.

ISM (IMAGE STICKING MINIMIZATION) METHOD

- A frozen or still picture from a PC/video game displayed on the screen for prolonged periods will result in a ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the set's screen for a long period of time.
- It's not available to use this function in LCD TV models.

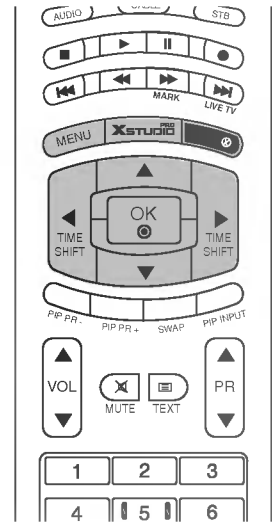

● Press the **MENU** button and then use ▲ / ▼ button to select the **SPECIAL** menu.

● Press the ► button and then ▲ / ▼ button to select **ISM Method**.

● Press the ► button and then ▲ / ▼ button to select either **Normal**, **White wash**, **Orbiter** or **Inversion**. If you don't need to set this function, set **Normal**.

● **White wash :**

White Wash removes permanent images from the screen.
 Note: An excessive permanent image may be impossible to clear entirely with White Wash.

● **Orbiter :**

Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.


● **Inversion :**

This is the function to invert the panel colour of the screen. The panel colour is automatically inverted every 30 minutes.

● **Normal :**


When input signal is constantly static or temperature is high, brightest level will be decrease automatically for image sticking minimalization.

● Press the **EXIT** button to return to normal TV viewing.

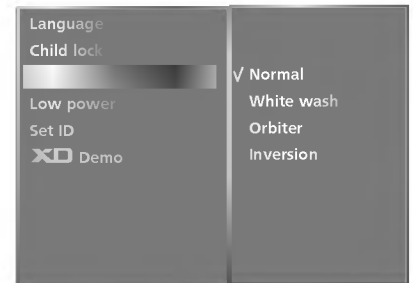


LOW POWER

- This is the function to reduce the power consumption of the set.
- It's not available to use this function in LCD TV models.

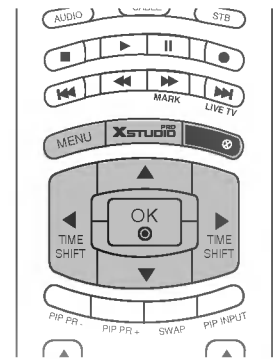


- Press the **MENU** button and then use ▲ / ▼ button to select the **SPECIAL** menu.
- Press the ► button and then use ▲ / ▼ button to select **Low power**.
- Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.
- Press the **EXIT** button to return to normal TV viewing.

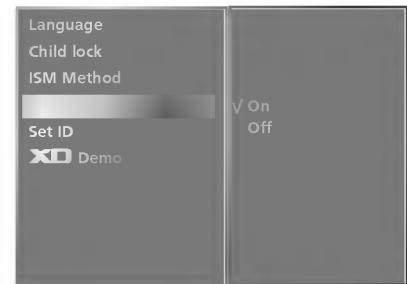

XD DEMO


- Use it to see the difference between XD Demo on and XD Demo off.
- It's not available to use this function in RGB[PC], HDMI[PC] mode.

- Press the **MENU** button and then use ▲ / ▼ button to select the **SPECIAL** menu.
- Press the ► button and then use ▲ / ▼ button to select **XD Demo**.
- Press the ► button to begin **XD Demo**.
- To stop **XD Demo**, press the **MENU** or **EXIT** button.

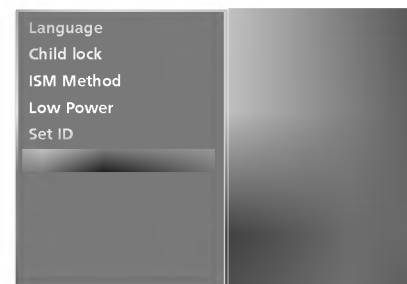

INDEX (OPTION)

- You can switch FRONT DISPLAY on or off.

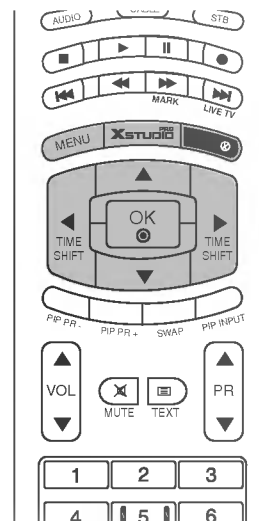


- Press the **MENU** button and then use ▲ / ▼ button to select the **SPECIAL** menu.

- Press the ► button and then use ▲ / ▼ button to select **Index**.

- Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.

When you select **On** mode, The FRONT DISPLAY illuminates brightly.


- Press the **EXIT** button to return to normal TV viewing.

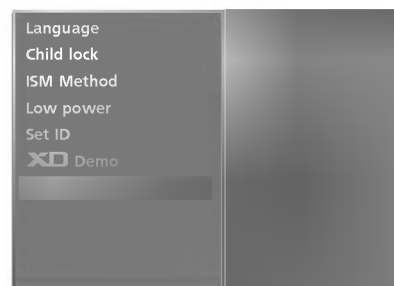



TV MENU | Screen Menu Options

AUTO CONFIG.

- Automatically adjusts picture position and minimizes image shaking.
- Although the image is still not correct, your set is functioning properly but needs further adjustment.
- The **Auto config.** functions don't need to be run for HDMI/DVI mode.
- This function works in the following mode : RGB[PC]
- This function is for the automatic adjustment of the screen position, clock, and phase. The displayed image will disappear for a few seconds while the auto configuration is in progress.

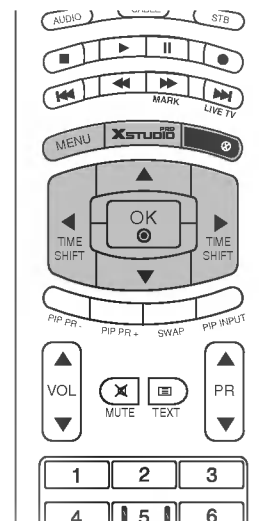

- Press the **MENU** button and then use ▲ / ▼ button to select the **SCREEN** menu.
- Press the ► button and then use ▲ / ▼ button to select **Auto config.**
- Press the ► button to start **Auto config.**.
 - When **Auto config.** has finished, **OK** will be shown on screen.
 - If the position of the image is still not correct, try Auto adjustment again.
- If picture needs to be adjusted more after Auto adjustment in RGB (PC), you can adjust the **Manual config.**
- Press the **EXIT** button to return to normal TV viewing.

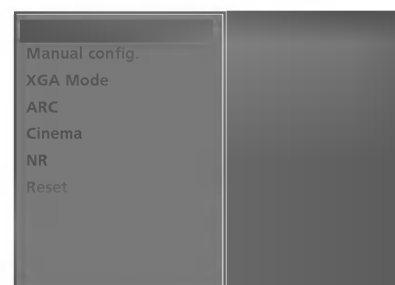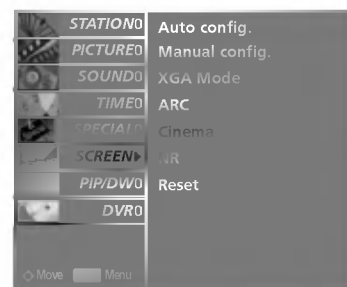



MANUAL CONFIG.

- If the picture isn't clear after auto adjustment and especially if characters are still trembling, adjust the picture phase manually.
- To correct the screen size, adjust **Clock**.
- This function works in the following mode:
RGB[PC], RGB[DTV], HDMI[DTV], COMPONENT[DTV] mode only
- It's not available to use **Phase, Clock** function in **RGB[DTV], HDMI[DTV], COMPONENT[DTV]** mode.

Mini Glossary

Clock This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.


Phase This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

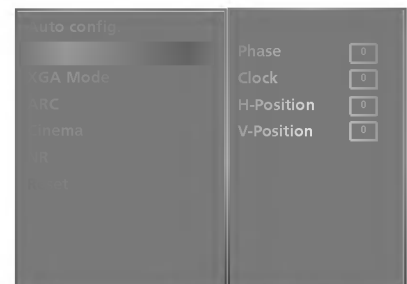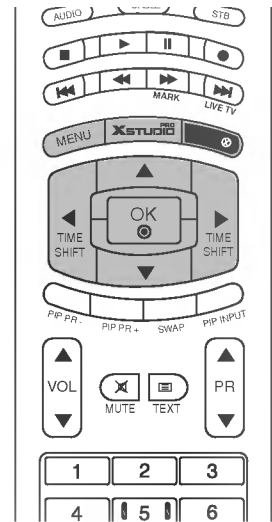


- Press the **MENU** button and then ▲ / ▼ button to select the **SCREEN** menu.
- Press the ► button and then ▲ / ▼ button to select **Manual config.**
- Press the ► button and then ▲ / ▼ button to select **Phase, Clock, H-Position** or **V-Position**.
- Press the ◀ / ▶ button to make appropriate adjustments.
- Press the **EXIT** button to return to normal TV viewing.

SELECTING WIDE XGA/VGA MODE

- To see a normal picture, match the resolution of RGB mode and selection of VGA/XGA mode.
- In some models, it's not available for selecting VGA mode.
- This function works in the following mode : RGB[PC]

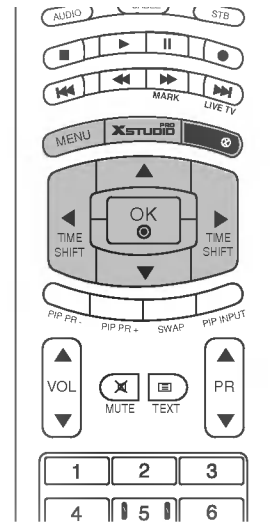


- Press the **MENU** button and then use ▲ / ▼ button to select the **SCREEN** menu.
- Press the ► button and then use ▲ / ▼ button to select **XGA Mode (VGA Mode)**.
- Press the ► button and then use ▲ / ▼ button to select the desired XGA/VGA resolution.
- Press the **EXIT** button to return to normal TV viewing.

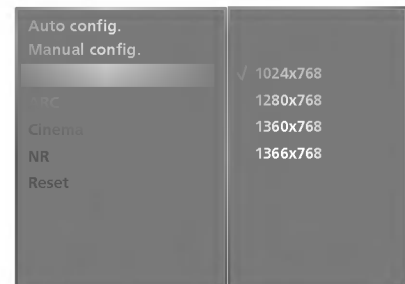

SETTING PICTURE FORMAT

- You can watch the screen in various picture formats; **Spectacle**, **Full** (option), **Original**, **4:3**, **16:9** (Wide), **14:9** and **Zoom**.
- *If a fixed image is displayed on the screen for a long time, that fixed image may become imprinted on the screen and remain visible.*
- You can only select **4:3** and **16:9** (Wide) in RGB[PC], HDMI[PC] mode only.
- You can only select **4:3**, **16:9** (Wide) and **Zoom** in RGB[DTV], HDMI[DTV], Component [DTV] mode only.
- You can only select **Spectacle**, **Full**, **4:3**, **16:9** (Wide), **14:9** and **Zoom** in Component [480i/576i] mode only.
- It might be uncomfortable in full mode. Then change into other mode.
- You can adjust the enlarge proportion using **▲ / ▼** button.
- This function works in the following signal.

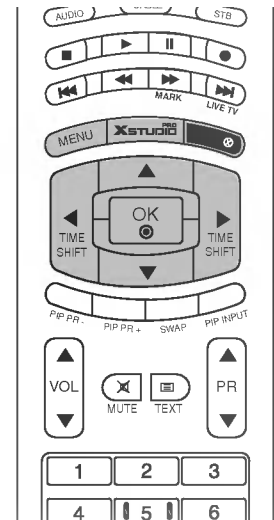

- Press the **MENU** button and then **▲ / ▼** button to select the **SCREEN** menu.
- Press the **▶** button and then use **▲ / ▼** button to select **ARC**.
- Press the **▶** button and then use **▲ / ▼** button to select **Spectacle**, **Full** (option), **Original**, **4:3**, **16:9** (Wide), **14:9** or **Zoom**.

- **Spectacle**

When your set receives the wide screen signal, when selected it will adjust the picture horizontally, in non-linear proportion, to fill the entire screen.

- **Full** (option)

When your set receives the wide screen signal, when selected it will adjust the picture horizontally or vertically, in a linear proportion, to fill the entire screen fully.

- **Original**

When your set receives the wide screen signal, it will be automatically changed to the picture format to be sent.

- **4:3**

Following selection will lead you to view a picture with an original 4:3 aspect ratio, with gray bars appearing at both the left and right sides.

- **16:9** (Wide)

Following selection will lead you to adjust the picture horizontally, in a linear proportion, to fill the entire screen (useful for viewing 4:3 formatted DVDs).

- **14:9**

You can enjoy the picture format of 14:9 or general set programme through the 14:9 mode. The screen 14:9 is viewed just like that the screen 4:3 is magnified to the left / right.

- **Zoom**


Following selection will lead you to view the picture without any alternation, while filling the entire screen. However, the top and bottom portions of the picture will be cropped.

- Press the **EXIT** button to return to normal TV viewing.




CINEMA

- When you watch the movie, this function adjusts the set to the best picture appearance.
- This function works in the following mode: TV, AV1, AV2, S-VIDEO2, AV3, AV4 or COMPONENT (480i/576i).

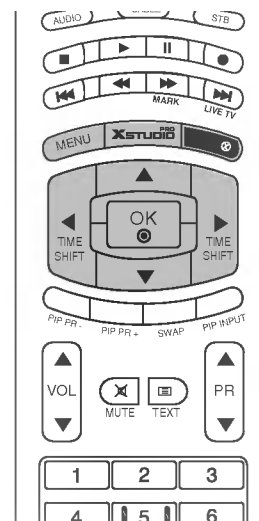


-
- Press the **MENU** button and then ▲ / ▼ button to select the **SCREEN** menu.
-
- Press the ► button and then use ▲ / ▼ button to select **Cinema**.
-
- Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.
-
- Press the **EXIT** button to return to normal TV viewing.
-

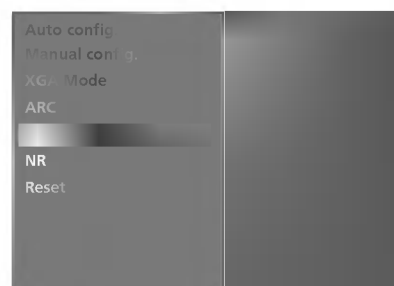


NR (NOISE REDUCTION)

- You can select **3D NR** or **MPEG NR** to reduce the picture noise which may appear on the screen during watching the set.
- This function is not available for use in **RGB[PC], HDMI[PC] mode.**
- **3D NR** is not available for use in **RGB, HDMI and Component[DTV] mode.**

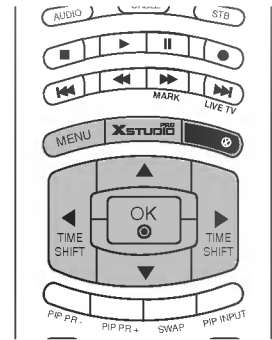



- Press the **MENU** button and then use **▲ / ▼** button to select the **SCREEN** menu.
- Press the **▶** button and then use **▲ / ▼** button to select **NR**.
- Press the **▶** button and then use **▲ / ▼** button to select **3D NR** or **MPEG NR**.
- Press the **◀ / ▶** button to make appropriate adjustments.
- Press the **EXIT** button to return to normal TV viewing.

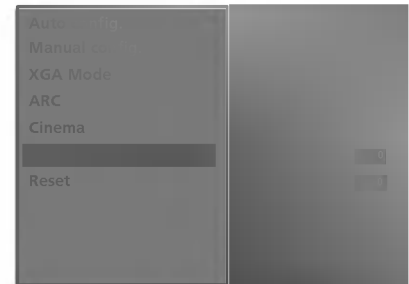

INITIALIZING (RESET TO ORIGINAL FACTORY SETTINGS)

- This function operates in current mode.
- To initialize the adjusted values.

- Press the **MENU** button and then use **▲ / ▼** button to select the **SCREEN** menu.
- Press the **▶** button and then **▲ / ▼** button to select **Reset**.
- Press the **▶** button.
 - You can initialize Phase, Clock, H-Position, V-Position, Position, Win. size, Win. position, PIP Transparency and sub picture size of twin picture.

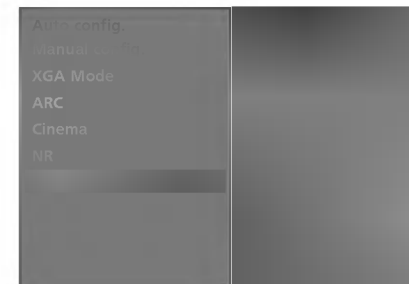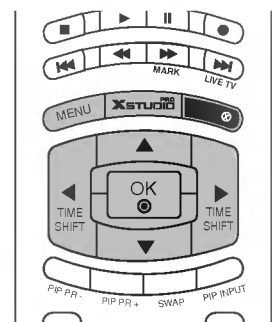

APPENDIX

PROGRAMMING THE REMOTE

The remote is a multi-brand or a universal remote. It can be programmed to operate most remote-control-able devices of other manufacturers.

Note that the remote may not control all models of other brands.

Programming a code into a remote mode

- 1** To find out whether your remote can operate the device without programming, turn on the device such as a VCR and press the corresponding mode button on the remote. After that, press the POWER button. If the device is turned off then it responds properly and the remote need not to be programmed. If not, the remote should be programmed to operate the device. The programming procedures are explained below.
- 2** Press the MENU and MUTE button continuously at the same time for 2 seconds, the current selected device button will be illuminated. If you don't press any button for 20 seconds, the light on the mode button will be turned off. In that case, you have to repeat from step 2.
- 3** Enter code numbers using the number button on the remote by referring the code table on the following pages. When pressing the button, the light blinks at a time. If the device turned off, the programming is successful.
- 4** Press the MENU button to store the code. After blinking twice, this code is stored.
- 5** Test the remote functions to see if the device responds properly. If not, repeat from step 2.

APPENDIX

PROGRAMMING CODES

VCRs

AIWA	034				MAGNAVOX	031	033	034	041	SAMSUNG	032	040	102	104
AKAI	016	043	046	124		067	068				105	107	109	112
	125	146			MARANTZ	012	031	033	067		113	115	120	122
AMPRO	072					069					125			
ANAM	031	033	103		MARTA	101				SANSUI	022	043	048	135
AUDIO DYNAMICS	012	023	039	043	MATSUI	027	030			SANYO	003	007	010	014
BROKSONIC	035	037	129		MEI	031	033				102	134		
CANON	028	031	033		MEMOREX	003	010	014	031	SCOTT	017	037	112	129
CAPEHART	108					033	034	053	072		131			
CRAIG	003	040	135			101	102	134	139	SEARS	003	008	009	010
CURTIS MATHES	031	033	041		MGA	045	046	059			013	014	017	020
DAEWOO	005	007	010	064	MINOLTA	013	020				031	042	073	081
	065	108	110	111	MITSUBISHI	013	020	045	046		101			
	112	116	117	119		049	051	059	061	SHARP	031	054	149	
DAYTRON	108					151				SHINTOM	024			
DBX	012	023	039	043	MTC	034	040			SONY	003	009	031	052
DYNATECH	034	053			MULTITECH	024	034				056	057	058	076
ELECTROHOME	059				NEC	012	023	039	043		077	078	149	
EMERSON	006	017	025	027		048				SOUNDESIGN	034			
	029	031	034	035	NORDMENDE	043				STS	013			
	036	037	046	101	OPTONICA	053	054			SYLVANIA	031	033	034	059
	129	131	138	153	PANASONIC	066	070	074	083		067			
FISHER	003	008	009	010		133	140	145		SYMPHONIC	034			
FUNAI	034									TANDY	010	034		
GE	031	033	063	072	PENTAX	013	020	031	033	TATUNG	039	043		
	107	109	144	147		063				TEAC	034	039	043	
GO VIDEO	132	136			PHILCO	031	034	067		TECHNICS	031	033	070	
HARMAN KARDON		012	045		PHILIPS	031	033	034	054	TEKNIKA	019	031	033	034
HITACHI	004	018	026	034		067	071	101			101			
	043	063	137	150	PILOT	101				THOMAS	034			
INSTANTREPLAY	031	033			PIONEER	013	021	048		TMK	006			
JCL	031	033			PORTLAND	108				TOSHIBA	008	013	042	047
JCPENNY	012	013	015	033	PULSAR	072					059	082	112	131
	040	066	101		QUARTZ	011	014			TOTEVISION	040	101		
JENSEN	043				QUASAR	033	066	075	145	UNITECH	040			
JVC	012	031	033	043	RCA	013	020	033	034	VECTOR RESEARCH	012			
	048	050	055	060		040	041	062	063	VICTOR	048			
	130	150	152			107	109	140	144	VIDEO CONCEPTS	012	034	046	
KENWOOD	014	034	039	043		145	147			VIDEOSONIC	040			
	047	048			REALISTIC	003	008	010	014	WARDS	003	013	017	024
LG (GOLDSTAR)	001	012	013	020		031	033	034	040		031	033	034	040
	101	106	114	123		053	054	101			053	054	131	
LLOYD	034				RICO	058				YAMAHA	012	034	039	043
LXI	003	009	013	014	RUNCO	148				ZENITH	034	048	056	
	017	034	101	106	SALORA	014					058	072	080	101
MAGIN	040													

APPENDIX

PROGRAMMING CODES

CATV

ABC	003 004 039 042 046 052 053	LG (GOLDSTAR)	001 106 101 005	SHERITECH	022
AJIN	112	M-NET	037	SIGNAL	030
ANTRONIK	014	MACOM	033	SIGNATURE	052
ARCHER	005 007 014 024	MAGNAVOX	010 012 064 079	SL MARX	030
CABLE STAR	026	MEMOREX	100	SPRUCER	047 078
CENTURION	092	MOVIE TIME	028 032	STARCOM	002 004 008 009
CENTURY	007	NSC	015 028 038 071	STARGATE	008 030
CITIZEN	007	OAK	016 031 037 053	TADIRAN	030
COLOUR VOICE	065 090	PANASONIC	044 047	TAEKWANG	110
COMBANO	080 081	PARAGON	100	TAIHAN	105
COMTRONICS	019 030	PHILIPS	006 012 013 020	TANDY	017
DIAMOND	023		065 085 090	TEXSCAN	029
EAGLE	020 030 040	PIONEER	034 051 052 063	TOCOM	039 040 056
EASTERN	057 062 066		076	TOSHIBA	100
ELECTRICORD	032	POST NEWS WEEK	016	UNIKA	007 014 024
GE	072	PRUCER	059	UNITED CABLE	004 053
GEMINI	008 022 025 054	PTS	011 048 071 072	UNIVERSAL	005 007 014 024 026 027 032 035
GI	052 074		073 074	VIEWSTAR	012 015 018 086 087 088 089
GOLDEN CHANNEL	030	PULSAR	100	ZENITH	100 114 060 093
HAMLIN	049 050 055	RCA	047		
HITACHI	052 055	REGAL	049 050		
HOSPITALITY	070 077	REGENCY	057		
JERROLD	002 003 004 008 009 010 052 069 074	REMBRANT	025		
		SAMSUNG	102 107 030 068		
		SCIENTIFIC ATLANTA	003 011 041 042 043 045 046		

APPENDIX

HDSTB

ALPHASTAR DSR	123				HOUSTON TRACKER	033	037	039	051	PROSAT	072
AMPLICA	050					057	104			RCA	066 106
BIRDVIEW	051	126	129		HUGHES	068				REALISTIC	043 074
CHANNEL MASTER	013	014	015	018	JANIEL	060	147			SAMSUNG	123
	036	055			JERROLD	061				SATELLITE SERVICE CO	028 035 047 057
CHAPARRAL	008	009	012	077	KATHREIN	108					085
CITOH	054				LEGEND	057				SCIENTIFIC ATLANTA	032 138
CURTIS MATHES	050	145			LG	001				SONY	103
DRAKE	005	006	007	010	LUTRON	132				STARCAST	041
	011	052	112	116	LUXOR	062	144			SUPER GUIDE	020 124 125
	141				MACOM	010	059	063	064	TEECOM	023 026 075 087
DX ANTENNA	024	046	056	076		065					088 090 107 130
ECHOSTAR	038	040	057	058	MEMOREX	057					137
	093	094	095	096	NEXTWAVE	028	124	125		TOSHIBA	002 127
	097	098	099	100	NORSAT	069	070			UNIDEN	016 025 042 043
	122				PACE SKY SATELLITE	143					044 045 048 049
ELECTRO HOME	089				PANASONIC	060	142				078 079 080 086
EUROPLUS	114				PANSAT	121					101 135 136
FUJITSU	017	021	022	027	PERSONAL CABLE	117				VIEWSTAR	115
	133	134			PHILIPS	071				WINEGARD	128 146
GENERAL INSTRUMENT	003	004	016	029	PICO	105				ZENITH	081 082 083 084
	031	059	101		PRESIDENT	019	102				091 120
HITACHI	139	140			PRIMESTAR	030	110	111			

DVD

APEX DIGITAL	022				mitsubishi	002				RCA	005 006
DENON	020	014			NAD	023				SAMSUNG	011 015
GE	005	006			ONKYO	008	017			SONY	007
HARMAN KARDON	027				PANASONIC	003	009			THOMPSON	005 006
JVC	012				PHILIPS	013				TOSHIBA	019 008
LG	001	010	016	025	PIONEER	004	026			YAMAHA	009 018
MAGNAVOX	013				PROCEED	021				ZENITH	010 016 025
MARANTZ	024				PROSCAN	005	006				

APPENDIX

PROGRAMMING CODES

Audio

AIWA	014 028 070 096	NAD	045 046	SANYO	019 083 234
	125 129 139 229	LOTTE	014 016 036 098	SCOTT	106 186
	230		100 172 173 174	SHARP	031 032 051 052
AKAI	163		175 176 177 178		072 082 117 119
ANAM	003 014 017 023		179 180 181 183		156 184 199 200
	059 106 189 216		201 202 208 213		206 209
	217 235 236		214 219 223 232	SHERWOOD	005 006 158
BURMECTER	252		238 240	SONY	044 045 109 114
CARVER	086	LXI	103		118 126 248 249
CLARION	199	MAGNAVOX	111	TAEKWANG	012 020 073 074
DAEWOO	027 053 060 084	MARANTZ	002 018 020 025		076 077 105 161
	102 148 198 221		034 041 081 090		162 163 164 165
DENON	015 075 130 143		097 112		166 167 168 169
FANTASIA	071	MCINTOSH	049		205 231 233 242
FINEARTS	022	MCS	104	TEAC	010 085 106 136
FISHER	089 099	MEMOREX	107		185 187 237
LG(GOLDSTAR)	001 021 024 029	NAD	046	TECHNICS	101 113 128 134
	087 107 108 110	ONKYO	013 040 041 047		147 218
	190 191 192 210		048 056 057 132	TOSHIBA	137
	211 212 239		133 140	THE	061
HAITAI	034 035 188 222	OPTIMUS	158	VICTOR	088 131
HARMAN/KARDON	068	PANASONIC	007 033 064 113	WARDS	089
INKEL	037 058 062 069		142 220 241 251	YAMAHA	054 055 066 092
	078 079 095 121	PENNEY	104		199
	122 149 150 151	PHILIPS	026 112 143		
	152 153 154 155	PIONEER	039 042 043 063		
	157 158 159 160		065 091 093 094		
	189 207 222 224		115 123 127 250		
	225 226 227 243	QUASAR	113		
	247	RCA	080		
JVC	004 013 141	RCX	092		
KEC	185 186 187	REALISTIC	103 106		
KENWOOD	038 050 067 089	SAMSUNG	124 145 146 182		
	170 171 197 206		193 194 195 203		
	215 222		204 244 245 246		
KOHEL	030	SANSUI	011 135 138 144		

APPENDIX

TROUBLESHOOTING CHECKLIST

<p>The remote control doesn't work</p>	<ul style="list-style-type: none"> ■ Check to see if there is any object between the set and the remote control causing an obstruction. ■ Are batteries installed with correct polarity (+ to +, - to -)? ■ Is the correct remote operating mode set: TV, VCR etc.? ■ Are the batteries flat?
<p>Power is suddenly turned off</p>	<ul style="list-style-type: none"> ■ Is the sleep timer set? ■ Check the power control settings. Power interrupted? ■ Auto off is activated and no signal is being received.

<p>No picture & No sound</p>	<ul style="list-style-type: none"> ■ Check whether the set is turned on. ■ Try another programme. The problem may be with the broadcast. ■ Is the power cord inserted into a wall power outlet? ■ Check your antenna direction and/or location. ■ Test the wall power outlet, plug another set's power cord into the outlet where the set's power cord was plugged in.
<p>Picture appears slowly after switching on</p>	<ul style="list-style-type: none"> ■ This is normal, the image is muted during the set startup process. Please contact your service center if the picture has not appeared after five minutes.
<p>No or poor colour or poor picture</p>	<ul style="list-style-type: none"> ■ Adjust Colour in the menu. ■ Keep a sufficient distance between the set and the VCR. ■ Try another programme. The problem may be with the broadcast. ■ Are the video cables installed properly? ■ Activate any function to restore the brightness of the picture.
<p>Horizontal/vertical bars or picture shaking</p>	<ul style="list-style-type: none"> ■ Check for local interference such as an electrical appliance or power tool.
<p>Poor reception on some channels</p>	<ul style="list-style-type: none"> ■ Station or cable set experiencing problems, tune to another station. ■ Station signal is weak, reorient antenna to receive weaker stations. ■ Check for sources of possible interference.
<p>Lines or streaks in pictures</p>	<ul style="list-style-type: none"> ■ Check antenna (Change the direction of the antenna).

APPENDIX

TROUBLESHOOTING CHECKLIST

Picture OK & No sound	<ul style="list-style-type: none">■ Press the VOL ▲ / ▼ button.■ Sound muted? Press MUTE button.■ Try another programme. The problem may be with the broadcast.■ Are the audio cables installed properly?
No output from one of the speakers	<ul style="list-style-type: none">■ Adjust Balance in menu option.
Unusual sound from inside the set	<ul style="list-style-type: none">■ A change in ambient humidity or temperature may result in an unusual noise when the set is turned on or off and does not indicate a fault with the set.

The signal is out of range	<ul style="list-style-type: none">■ Adjust resolution, horizontal frequency, or vertical frequency.■ Check the input source.
Vertical bar or stripe on background & Horizontal Noise & Incorrect position	<ul style="list-style-type: none">■ Work the Auto configure or adjust clock, phase, or H/V position. (Option)
Screen colour is unstable or single colour	<ul style="list-style-type: none">■ Check the signal cable.■ Reinstall the PC video card.

APPENDIX

MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can extend the lifetime of your new set. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the Screen

- Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- Make sure the excess water is off the screen, and then let it air-dry before you turn on your set.

Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry and lint-free cloth.
- Please be sure not to use a wet cloth.

Extended Absence

▲ CAUTION

- ▶ If you expect to leave your set dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

APPENDIX

PRODUCT SPECIFICATIONS

Dimensions (Width x Height x Depth)	with stand	1129.0 x 748.5 x 380.0 mm 44.5 x 29.5 x 15.0 inches	1302.6 x 872 x 355.8 mm 51.2 x 34.3 x 14 inches
	without stand	1129.0 x 695.0 x 108.9 mm 44.5 x 27.4 x 4.3 inches	1302.6 x 810 x 108.7 mm 51.2 x 31.8 x 4.3 inches
Weight	including stand	29.1 kg/64.2 lbs	51.7 kg/114.0 lbs
	excluding stand	25.6 kg/56.5 lbs	42.9 kg/94.6 lbs
Power requirement	AC100-240V~ 50/60Hz		
Power consumption	310 W		450W
Television System	PAL/SECAM B/G/D/K, PAL I/II, SECAM L/L'		
External Antenna Impedance	75 Ω		
Environment condition	Operating Temperature	0 ~ 40°C / 32 ~ 104°F	
	Operating Humidity	Less than 80%	
	Storage Temperature	-20 ~ 60°C / -4 ~ 140°F	
	Storage Humidity	Less than 85%	

- The specifications shown above may be changed without prior notice for quality improvement.

APPENDIX

PRODUCT SPECIFICATIONS

Dimensions (Width x Height x Depth)	with stand	944.0 x 729 x 286 mm 37.1 x 28.7 x 11.2 inches	1054 x 813 x 286 mm 41.4 x 32 x 11.2 inches
	without stand	944.0 x 659.3 x 129.7 mm 37.1 x 26 x 5.1 inches	1054 x 746 x 136.8 mm 41.4 x 29.3 x 5.3 inches
Weight	including stand	30.4 kg/67.0 lbs	42.3kg/93.2 lbs
	excluding stand	25.9 kg /57.1 lbs	35.7kg/78.7 lbs
Power requirement		AC100-240V~ 50/60Hz	
Power consumption		200W	250W
Television System		PAL/SECAM B/G/D/K, PAL I/II, SECAM L/L'	
External Antenna Impedance		75 Ω	
Environment condition	Operating Temperature	0 ~ 40°C / 32 ~ 104°F	
	Operating Humidity	Less than 80%	
	Storage Temperature	-20 ~ 60°C / -4 ~ 140°F	
	Storage Humidity	Less than 85%	

- The specifications shown above may be changed without prior notice for quality improvement.

LG Electronics Inc.

APPENDIX


EXTERNAL CONTROL DEVICE SETUP

- Connect the RS-232C input jack to an external control device (such as a computer or an A/V control system) and control the set's functions externally.

How to connect external control equipment


- Connect the serial port of the control device to the RS-232C jack on the Monitor back panel.
- RS-232C connection cables are not supplied with the set.
- The set remote control and front panel controls (except main power) will not be functional if the Monitor is controlled by a PC computer or other external device.

RS-232C Setup

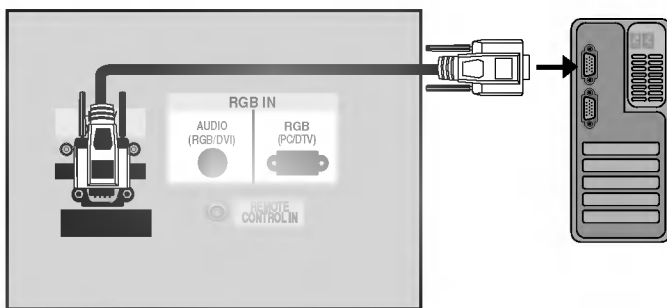



Type of Connector; D-Sub 9-Pin Male

1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

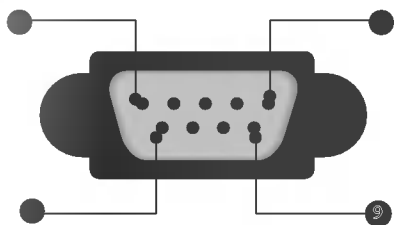


APPENDIX

RS-232C Configurations

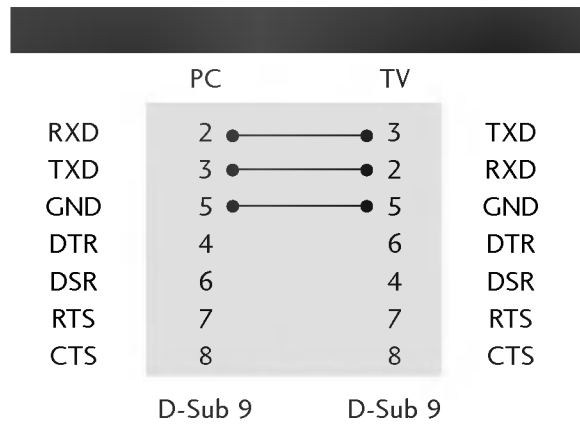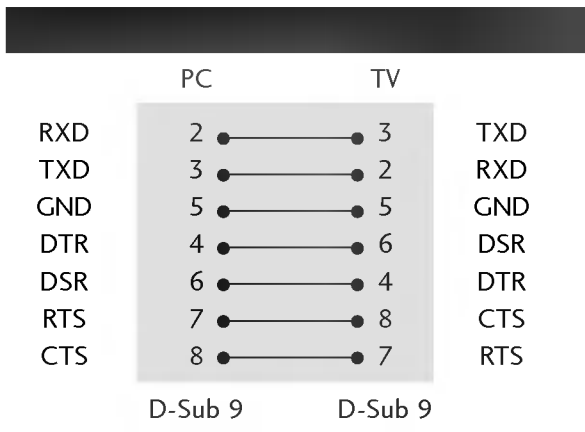


Set ID

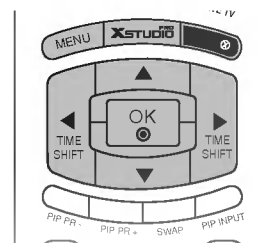

Use this function to specify a set ID number.
Refer to 'Real Data Mapping 1'. See page 6.

- Press the **MENU** button and then use the ▲ / ▼ button to select the **SPECIAL** menu.
- Press the ► button and then use ▲ / ▼ button to select **Set ID**.
- Press the ► button and then use ◀ / ▶ button to adjust **Set ID** to choose the desired monitor ID number.
 - The adjustment range of **Set ID** is 1 ~ 99.
- Press the **EXIT** button to return to normal TV viewing.

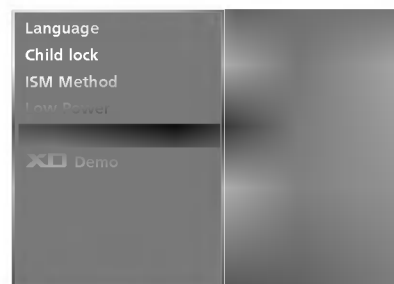

Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Use a crossed (reverse) cable.
- Stop bit : 1 bit
- Communication code : ASCII code

Command Reference List

01. Power	k	a	0 ~ 1	18. Balance	k	t	0 ~ 64
02. Input Select	k	b	0 ~ 8	19. Colour Temperature(CSM)	k	u	0 ~ 3
03. Aspect Ratio	k	c	Refer to p.4	20. Red Adjustment	k	v	0 ~ 50
04. Screen Mute	k	d	0 ~ 1	21. Green Adjustment	k	w	0 ~ 50
05. Volume Mute	k	e	0 ~ 1	22. Blue Adjustment	k	\$	0 ~ 50
06. Volume Control	k	f	0 ~ 64	23. PIP input Source	k	y	0 ~ 8
07. Contrast	k	g	0 ~ 64	24. Abnormal Status	k	z	0 ~ 9
08. Brightness	k	h	0 ~ 64	25. ISM Method (option)	j	p	0 ~ 3
09. Colour	k	i	0 ~ 64	26. Low Power (option)	j	q	0 ~ 1
10. Tint (option)	k	j	0 ~ 64	27. Orbiter Time Setting (option)	j	r	1 ~ FE
11. Sharpness	k	k	0 ~ 64	28. Orbiter Pixel Setting (option)	j	s	1 ~ 3
12. OSD Select	k	l	0 ~ 1	29. Picture Size (option)	j	t	0 ~ 20
13. Remote Control Lock Mode	k	m	0 ~ 1	30. Auto Configure (option)	j	u	1
14. PIP/DW	k	n	Refer to p.5	31. Programme selection	m	a	0 ~ 63
15. PIP Position	k	q	0 ~ 3	32. Send IR Code	m	c	Key Code
16. Treble	k	r	0 ~ 64	33. Input select (Main)	x	b	Refer to p.7
17. Bass	k	s	0 ~ 64	34. Input select (PIP)	x	y	Refer to p.7

Transmission / Receiving Protocol

[Command1][Command2][][Set ID][][Data][Cr]

- [Command 1] : First command to control set. (j, k, m or x)
 [Command 2] : Second command to control set.
 [Set ID] : You can adjust the set ID to choose desired set ID number in special menu. Adjustment range is 1 ~ 99. When selecting Set ID '0', every connected set is controlled. Set ID is indicated as decimal (1~99) on menu and as Hexa decimal (0x0~0x63) on transmission/receiving protocol.
- * [DATA] : To transmit command data. Transmit 'FF' data to read status of command.
- * [Cr] : Carriage Return
 ASCII code '0x0D'
- * [] : ASCII code 'space (0x20)'

[Command2][][Set ID][][OK][Data][x]

The set transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

[Command2][][Set ID][][NG][Data][x]

The set transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

- Data1: Illegal Code
 Data2: Not supported function
 Data3: Wait more time

12. OSD Select (Command2:l)

To select OSD (On Screen Display) on/off when controlling remotely.

Transmission [k][l][][Set ID][][Data][Cr]

Data 0: OSD off

Data 1: OSD on

Acknowledgement [l][][Set ID][][OK][Data][x]

13. Remote Control Lock Mode (Command2:m)

To lock the remote control and the front panel controls on the set.

Transmission [k][m][][Set ID][][Data][Cr]

Data 0: Lock off Data 1: Lock on

Acknowledgement [m][][Set ID][][OK][Data][x]

If you're not using the remote control and front panel controls on the set, use this mode. When main power is on/off, remote control lock is released.

14. PIP / DW (Command2:n)

To control the PIP (Picture In picture)/DW.

You can also control the PIP/DW using the PIP button on the remote control or in the PIP/DW menu.

Transmission [k][n][][Set ID][][Data][Cr]

Data 0: PIP/DW off Data 1: PIP

Data 2: DW1 Data 3: DW2

Data 5: POP

Acknowledgement [n][][Set ID][][OK][Data][x]

15. PIP Position (Command2:q)

To select sub picture position for PIP.

You can also adjust the sub picture position using POSITION button on the remote control or in the PIP/DW menu.

Transmission [k][q][][Set ID][][Data][Cr]

Data 0: Right down on screen

Data 1: Left down on screen

Data 2: Left up on screen

Data 3: Right up on screen

Acknowledgement [q][][Set ID][][OK][Data][x]

16. Treble (Command 2 :r)

To adjust treble.

You can also adjust treble in the SOUND menu.

Transmission [k][r][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 64

Refer to 'Real data mapping 1'. See page 6.

Acknowledgement [r][][Set ID][][OK][Data][x]

17. Bass (Command 2 : s)

To adjust bass.

You can also adjust bass in the SOUND menu.

Transmission [k][s][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 64

Refer to 'Real data mapping 1'. See page 6.

Acknowledgement [s][][Set ID][][OK][Data][x]

18. Balance (Command2:t)

To adjust balance.

You can also adjust balance in the SOUND menu.

Transmission [k][t][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 64

Refer to 'Real data mapping 1'. See page 6

Acknowledgement [t][][Set ID][][OK][Data][x]

19. Colour Temperature (Command2:u)

To adjust colour temperature.

You can also adjust CSM in the PICTURE menu.

Transmission [k][u][][Set ID][][Data][Cr]

Data 0: Cool 1: Normal 2: Warm 3: User

Acknowledgement [u][][Set ID][][OK][Data][x]

20. Red Adjustment (Command2:v)

To adjust red in colour temperature.

Transmission [k][v][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 50

Refer to 'Real data mapping 2'. See page 6

Acknowledgement [v][][Set ID][][OK][Data][x]

21. Green Adjustment (Command2:w)

To adjust green in colour temperature.

Transmission [k][w][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 50

Refer to 'Real data mapping 2'. See page 6

Acknowledgement [w][][Set ID][][OK][Data][x]

22. Blue Adjustment (Command2:\$)

To adjust blue in colour temperature.

Transmission [k][\$][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 50

Refer to 'Real data mapping 2'. See page 6

Acknowledgement [\$][][Set ID][][OK][Data][x]

23. PIP Input Select (Command 2 : y)

To select input source for sub picture in PIP/DW picture mode. You can also adjust input source for sub picture using PIP INPUT button on remote control.

Transmission [k][y][][Set ID][][Data][Cr]

Data 0: TV Data 1: AV1

Data 2: AV2 Data 3: S-Video2

Data 4: AV3 Data 5: AV4

Data 6: Component Data 7: RGB

Data 8: HDMI/DVI

Acknowledgement [y][][Set ID][][OK][Data][x]

APPENDIX

24. Abnormal State (Command2:z)

To recognize an abnormal state.

This feature is not available for all models.

Transmission [k][z][][Set ID][][Data][][Cr]

Data FF: Read

Acknowledgement [z][][Set ID][][OK][Data][x]

Data 0: Normal (Power on and signal exist)

Data 1: No signal (Power on)

Data 2: Turn the set off by remote control

Data 3: Turn the set off by sleep time function

Data 4: Turn the set off by RS-232C function

Data 5: 5V down

Data 6: AC down

Data 7: Turn the set off by Fan Alarm function (option)

Data 8: Turn the set off by Off time function

Data 9: Turn the set off by Auto sleep function

* This function is "read only".

25. ISM Method (Command1:j, Command2:p) (option)

To control the ISM method. You can also adjust ISM Method in SPECIAL menu.

This feature is not available for all models.

Transmission [j][p][][Set ID][][Data][Cr]

Data 0: Normal Data 1: White Wash

Data2: Orbiter Data3: Inversion

Acknowledgement [p][][Set ID][][OK][Data][x]

26. Low power (Command1:j, Command2:q) (option)

To reduce the power consumption of the monitor. You can also adjust Low power in SPECIAL menu.

This feature is not available for all models.

Transmission [j][q][][Set ID][][Data][][Cr]

Data 0: Off Data 1: On

Acknowledgement [q][][Set ID][][OK][Data][x]

27. Orbiter Time Setting (Command1:j, Command2:r) (option)

To adjust orbiter operation time term.

This feature is not available for all models.

Transmission [j][r][][Set ID][][Data][][Cr]

Data Min: 1 ~ Max: FE

Refer to 'Real data mapping 1'.

Acknowledgement [r][][Set ID][][OK][Data][x]

28. Orbiter Pixel Setting (Command1:j, Command2:s) (option)

To adjust pixel number in orbiter function.

This feature is not available for all models.

Transmission [j][s][][Set ID][][Data][Cr]

Data Min: 1 ~ Max: 3

Refer to 'Real data mapping 1'.

Acknowledgement [s][][Set ID][][OK][Data][x]

29. Picture Size Setting for Twin Picture Mode (Command 1 : j, Command 2 : t) (option)

To adjust pixel number in orbiter function.

This feature is not available for all models.

Transmission [j][t][][Set ID][][Data][Cr]

Data Min: 0 ~ Max: 20

Refer to 'Real data mapping 1'.

Acknowledgement [t][][Set ID][][OK][Data][x]

30. Auto Configure (Command1:j, Command2:u) (option)

To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.

Transmission [j][u][][Set ID][][Data][Cr]

Data 1: To set

Acknowledgement [u][][Set ID][][OK][Data][x]

31. Programme selection (Command1:m, Command2:a)

To select a programme for the main picture.

Transmission [m][a][][Set ID][][Data0][][Data1][][Data2][Cr]

Data 0: Min: 0 ~ Max: 63 (0 ~ C7, 200Pr is on)

Refer to 'Real data mapping 1'.

Data 1: Don't care

Data 2: 0 : Main

1 : Sub

Acknowledgement [a][][Set ID][][OK][Data0][x]

* Real data mapping 1

0 : Step 0
 ⋮
 A : Step 10 (Set ID 10)
 ⋮
 F : Step 15 (Set ID 15)
 10 : Step 16 (Set ID 16)
 ⋮
 64 : Step 100
 ⋮
 6E : Step 110
 ⋮
 73 : Step 115
 74 : Step 116
 ⋮
 C7 : Step 199
 ⋮
 FE : Step 254
 FF : Step 255

* Real data mapping 2

0 : -40
 1 : -39
 2 : -38
 ⋮
 28 : 0
 ⋮
 4E : +38
 4F : +39
 50 : +40

32. Send IR Code (Command1:m, Command2:c)

To send IR remote key code.

Transmission [m][c][][Set ID][][Data][Cr]

Data: Key code - Refer to page 9


Acknowledgement [c][][Set ID][][OK][Data][x]

33. Input select (Command1:x, Command2:b) (Main Picture Input)

To select input source for set

Transmission [x][b][][Set ID][][Data][Cr]

Data: Structure

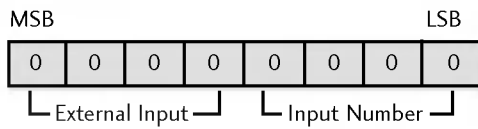

0	0	0	1	Analog
0	0	1	0	AV
0	0	1	1	S-Video
0	1	0	0	Component
0	1	0	1	RGB-DTV
0	1	1	0	RGB-PC
1	0	0	1	HDMI/DVI

0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4


Acknowledgement [b][][Set ID][][OK][Data][x]

34. Input select (Command1:x, Command2:y)

To adjust input source for sub picture in PIP mode

Transmission [x][y][][Set ID][][Data][Cr]

Data: Structure

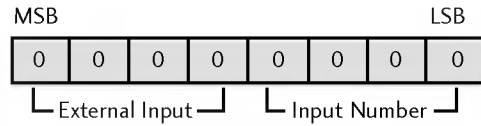

0	0	0	1	Analog
0	0	1	0	AV
0	0	1	1	S-Video
0	1	0	0	Component
0	1	0	1	RGB-DTV
0	1	1	0	RGB-PC
1	0	0	1	HDMI/DVI

0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4

Acknowledgement [y][][Set ID][][OK][Data][x]

APPENDIX

IR CODES


1. How to Connect

- Connect your wired remote control to the Remote Control port on the set.

2. Remote Control IR Codes (NEC Format)


■ Output waveform

Single pulse, modulated with 37.917KHz signal at 455KHz

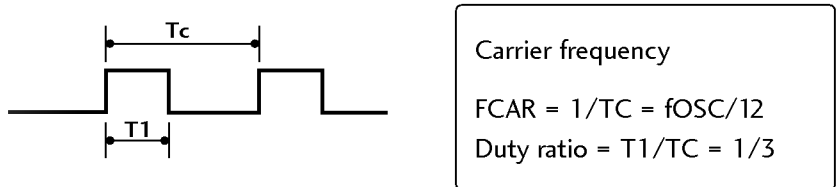


■ Configuration of frame

 
1st frame




Repeat frame

 

■ Lead code

 


■ Repeat code

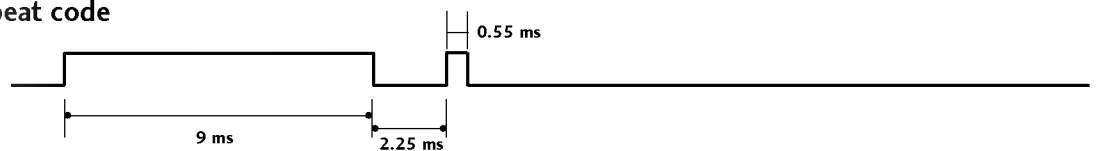

■ Bit description

Bit "0"

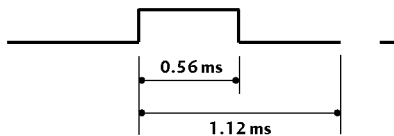

Bit "1"



■ Frame interval: Tf

The waveform is transmitted as long as a key is depressed.



REMOTE CONTROL IR CODES

00	PR ▲	R/C Button	1A	Q.VIEW	R/C Button
01	PR ▼	R/C Button	0A	I/II	R/C Button
02	VOL ▲	R/C Button	0E	SLEEP	R/C Button
03	VOL ▼	R/C Button	43	MENU	R/C Button
40	▲	R/C Button	44	OK(⊙)	R/C Button
41	▼	R/C Button	4D	PSM	R/C Button
06	▶	R/C Button	52	SSM	R/C Button
07	◀	R/C Button	53	LIST	R/C Button
08	POWER	R/C Button (Power On/Off)	20	TEXT	R/C Button
C4	POWER ON	Discrete IR Code (Only Power On)	2A	REVEAL	R/C Button
C5	POWER OFF	Discrete IR Code (Only Power Off)	22	MODE	R/C Button
09	MUTE	R/C Button	24	MIX	R/C Button
10	Number Key 0	R/C Button	26	TIME	R/C Button
11	Number Key 1	R/C Button	62	UPDATE / POSITION	R/C Button
12	Number Key 2	R/C Button	64	SIZE	R/C Button
13	Number Key 3	R/C Button	65	HOLD	R/C Button
14	Number Key 4	R/C Button	70	INDEX	R/C Button
15	Number Key 5	R/C Button	60	PIP	R/C Button
16	Number Key 6	R/C Button	61	PIP INPUT	R/C Button
17	Number Key 7	R/C Button	63	SWAP	R/C Button
18	Number Key 8	R/C Button	71	PIP PR+	R/C Button
19	Number Key 9	R/C Button	72	PIP PR-	R/C Button
0B	INPUT	R/C Button	79	ARC	R/C Button
98	MULTIMEDIA	R/C Button	76	ARC (4:3)	Discrete IR Code (Only 4:3 mode)
BF	COMPONENT	Discrete IR Code (Input COMPONENT Selection)	77	ARC (16:9)	Discrete IR Code (Only 16:9 mode)
C6	HDMI	Discrete IR Code (Input HDMI Selection)	AF	ARC (Zoom)	Discrete IR Code (Only Zoom mode)
D5	RGB	Discrete IR Code (Input RGB Selection)	B5	MARK	R/C Button
D6	TV	Discrete IR Code (Input TV Selection)	B0	PLAY	R/C Button
5A	AV1	Discrete IR Code (Input AV1 Selection)	B1	STOP	R/C Button
D0	AV2	Discrete IR Code (Input AV2 Selection)	BA	PAUSE	R/C Button
1E	FAV (Favorite)	R/C Button			