



# DVD MINI KARAOKE SYSTEM

## OWNER'S MANUAL

**MODEL : LF-K5932**

LF-K5932A, LF-KP5932

LFS-K5932V, LFS-K5932C, LFS-K5932T



Please read this manual carefully before operating your set.  
Retain it for future reference.

Designs and specifications are subject to change without  
notice for improvement.

## Safety Precautions



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.




This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

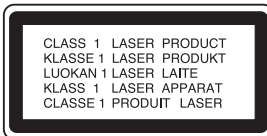

### CAUTION:

This product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference, should the unit require maintenance, contact an authorized service location—see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus shall not be exposed to water, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

### CAUTION concerning the Power Cord

**Most appliances recommend they be placed upon a dedicated circuit;**

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

# Table of Contents

## Introduction

Safety Precautions	2
Table of Contents	3
Before Use	4-5
Playable Discs	4
Precautions	5
Notes on Discs	5
About Symbols	5
Front Panel	6
Rear Panel	7
Remote Control	8
Display Window	9

## Preparation

Connections	10-15
Fitting the system connection cables	10
Connecting to a TV	11
Connecting to Antenna	12
Connecting to Auxiliary Equipment	12
Connecting to Optional Equipment	13
Connecting to the Wireless microphone antenna	13
Setting the Wireless microphone Channel	13
Speaker System Connection	14
Speaker Positioning	15
Before Operation	16-25
Volume Adjustment	16
Sound Quality Adjustment	16
MUTE	16
SURROUND	16
XDSS (Extreme Dynamic Sound System)	16
OAO (Orientation Acoustic Optimizer) ON/OFF	16
SPECTRUM Effect	16
DIMMER	16
DEMO	16
Setting the Clock	17
Sleep Timer Function	17
Using Microphone	17
Timer Function	18
Mini Glossary for Audio Stream & Surround Mode	19
Sound Mode	19
General Explanation	20
On-Screen Display	20
Initial Settings	21-25
• General Operation	21
• LANGUAGE	21
• DISPLAY	22
• AUDIO	23-24
• OTHERS	24
• LOCK (Parental Control)	25

## Operation

Operation with RADIO	26
Presetting the radio stations	26
Listening to the radio	26
Operation with TAPE	27
Basic Playback	27
To Stop Play	27
Tape Counter Reset	27
To Play Rewind or Fast Forward	27
Dubbing	27
Recording	27
Basic Setting	27
Recording from Radio, CD or Auxiliary source	27
CD to Tape Synchronized Recording	27

## Operation with DVD and Video CD

Playing a DVD and Video CD	28-30
General Features	28-29
• Moving to another TITLE	28
• Moving to another CHAPTER/TRACK	28
• Search	28
• Still Picture and Frame-by-Frame Playback	29
• Slow Motion	29
• Repeat	29
• Repeat A-B	29
• Time Search	29
• Last Scene Memory	29
Special DVD Features	30
• Title Menu	30
• Disc Menu	30
• Camera Angle	30
• Changing the Audio Language	30
• Changing the Audio Channel	30
• Subtitle	30

## Operation with Audio CD and MP3/WMA Disc

Playing an Audio CD and MP3/WMA Disc	31-32
• Pause	32
• Moving to another Track	32
• Repeat Track/ All/ Off	32
• Search	32

## Operation with JPEG Disc

Viewing a JPEG disc	33
• Slide Show	33
• Moving to another File	33
• Still Picture	33

## Programmed Playback

• Repeat Programmed Tracks	34
• Erasing a Track from Program List	34
• Erasing the Complete Program List	34

## Operation with DivX Disc

## Operation with KARAOKE

Karaoke Basic Playback	36
Karaoke Advanced Playback	36-37
Karaoke MENU Playback	37-38
• SETUP	37
• MUSIC LIST	38
• RANDOM	39
• CHALLENGE	39

## Reference

Troubleshooting	40
Language Code List	41
Country Code List	42
Specifications	43

## About the symbols for instructions



Indicates hazards likely to cause harm to the unit itself or other material damage.






Indicates special operating features of this unit.



Indicates tips and hints for making the task easier.

## Before Use

### Playable Discs

	DVD (8 cm / 12 cm disc)
	Video CD (VCD) (8 cm / 12 cm disc)
	Audio CD (8 cm / 12 cm disc)

In addition, this unit can play a DVD±R, DVD±RW, SVCD, and CD-R or CD-RW that contains audio titles, MP3, WMA, JPEG or DivX files.

#### Notes

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.

#### Notes on DVDs and Video CDs

Some playback operations of DVDs and Video CDs may be intentionally fixed by software manufacturers. As this unit plays DVDs and Video CDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available or other functions may be added.

Refer also to the instructions supplied with the DVDs and Video CDs. Some DVDs made for business purposes may not be played on the unit.

#### Regional code of the DVD player and DVDs

This DVD player is designed and manufactured for playback of region “5” encoded DVD software. The region code on the labels of some DVD discs indicates which type of player can play those discs. This unit can play only DVD discs labeled “5” or “ALL”. If you try to play any other discs, the message “Check Regional Code” will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.



#### Note on DTS-encoded CDs

When playing DTS-encoded CDs, excessive audio level may be heard from the analog stereo output. To avoid possible damage to the audio system, turn down the volume before playing back such discs, adjust the volume gradually, and keep the volume level low. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output of the unit.

#### Disc-related terms

##### Title (DVD only)

The main film content or accompanying feature content or additional feature content, or music album.

Each title is assigned a title reference number enabling you to locate it easily.

##### Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles. A title is composed of one or several chapters. Each chapter is assigned a chapter number, enabling you to locate the chapter you want. Depending on the disc, chapters may not be recorded.

##### Track (Video CD and audio CD only)

Sections of a picture or a musical piece on a video CD or an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

##### Scene

On a video CD with PBC (Playback control) functions, moving pictures and still pictures are divided into sections called “Scenes”. Each scene is displayed in the menu screen and assigned a scene number, enabling you to locate the scene you want.

A scene is composed of one or several tracks.

#### Types of video CDs

There are two types of video CDs:

##### Video CDs equipped with PBC (Version 2.0)

PBC (Playback control) functions allow you to interact with the system via menus, search functions, or other typical computer-like operations. Moreover, still pictures of high resolution can be played if they are included in the disc.

##### Video CDs not equipped with PBC (Version 1.1)

Operated in the same way as audio CDs, these discs allow playback of video pictures as well as sound, but they are not equipped with PBC.

## Before Use (Cont'd)

### Precautions

#### Handling the unit

##### When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

##### When setting up the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

##### To keep the exterior surfaces clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

#### Cleaning the unit

##### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

##### To obtain a clear picture

The DVD player is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

For details, please contact your nearest dealer.

### Notes on Discs

#### Handling discs

Do not touch the playback side of the disc.  
Hold the disc by the edges so that fingerprints will not get on the surface.  
Do not stick paper or tape on the disc.




#### Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

#### Cleaning discs


Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

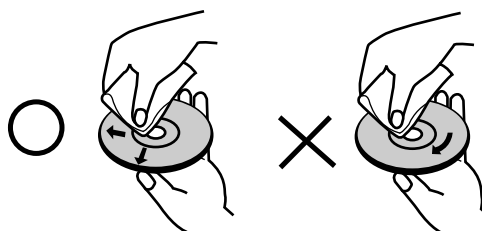

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.


### About Symbols

#### About the symbol display

“” may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific DVD video disc.


#### About the disc symbols for instructions

A section whose title has one of the following symbol is applicable only to the disc represented by the symbol.

-  DVD
-  Video CDs
-  Audio CDs
-  MP3 disc
-  WMA disc
-  JPEG disc
-  DivX disc

## Front Panel

### Cassette tape player/ DVD/KARAOKE player

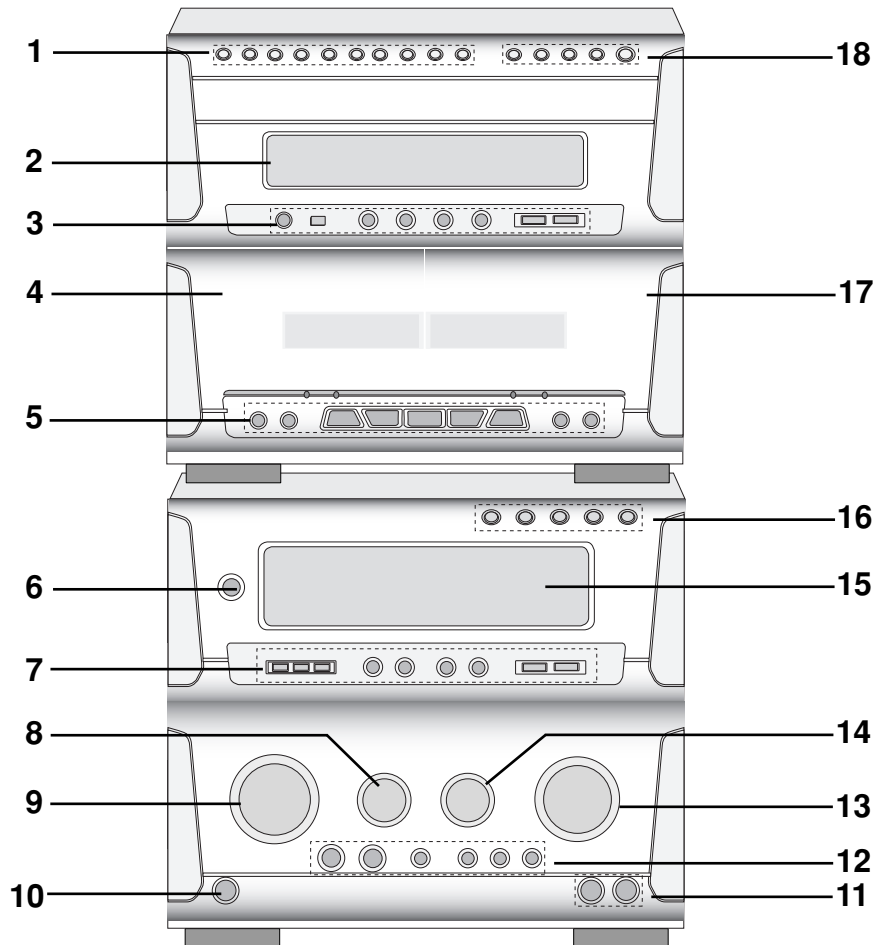


### Tuner/ Amplifier

- |  |  |
|--|--|
| 1. NUMERIC buttons (0~9)                                 | 8. ECHO VOLUME KNOB (ECHO VOL.)  |
| 2. DISPLAY WINDOW  | 9. MULTI JOG DIAL  |
| 3. • PLAY MODE/ REPEAT buttons                           | • CD SKIP (◀◀/▶▶)  |
| • CD SEARCH (◀◀/▶▶) buttons                              | • MANUAL TUNING  |
| • CD STOP (■STOP)/ CD PLAY (▶) buttons                   | • CLOCK ADJUST   |
| • CD PAUSE (  )/ PROGRAM button                          | 10. HEADPHONE SOCKET (🎧 PHONES) - ∅6.3mm                                       |
| 4. ▲ PUSH EJECT position (TAPE 1)                        | 11. MIC JACKS (MIC1, MIC2)   |
| 5. TAPE FUNCTION buttons                                 | 12. XDSS/ OAO/ SURROUND/ MUSIC/ DANCE/ USER buttons                            |
| • COUNTER RESET (COUNT. RESET) button                    | 13. VOLUME knob  |
| • RECORD/ RECORD PAUSE (●REC/  ) button                  | 14. MIC VOLUME KNOB (MIC VOL.)   |
| • REWIND/ FAST FORWARD (◀◀/▶▶) buttons                   | 15. DISPLAY WINDOW   |
| • REVERSE PLAY (◀)/ PLAY (▶) buttons                     | 16. FUNCTION SELECT buttons (TUNER/BAND, TAPE 1-2, DVD/CD/KARAOKE, AUX1/ AUX2) |
| • STOP (■) button  | 17. ▲ PUSH EJECT position (TAPE 2)   |
| • NORMAL DUBBING/ CD SYNCHRO RECORDING (CD SYNC.) button | 18. • DISC DIRECT PLAY buttons (DISC1, DISC2, DISC3)                           |
| • HIGH DUBBING button                                    | • DISC SKIP button (D. SKIP)   |
| 6. POWER (⏻ STANDBY/ON) button                           | • CD OPEN/CLOSE button (▲ OPEN/CLOSE)  |
| 7. • CLOCK/ TIMER/ MEMORY/ CLEAR buttons                 |  |
| • PRESET (▼/▲) buttons                                   |  |
| • AUTO TUNING (▼/▲) buttons                              |  |
| • SET button   |  |
| • MODE/RIF/DEMO button                                   |  |


## Rear Panel

### Cassette tape player/ DVD/KARAOKE Player

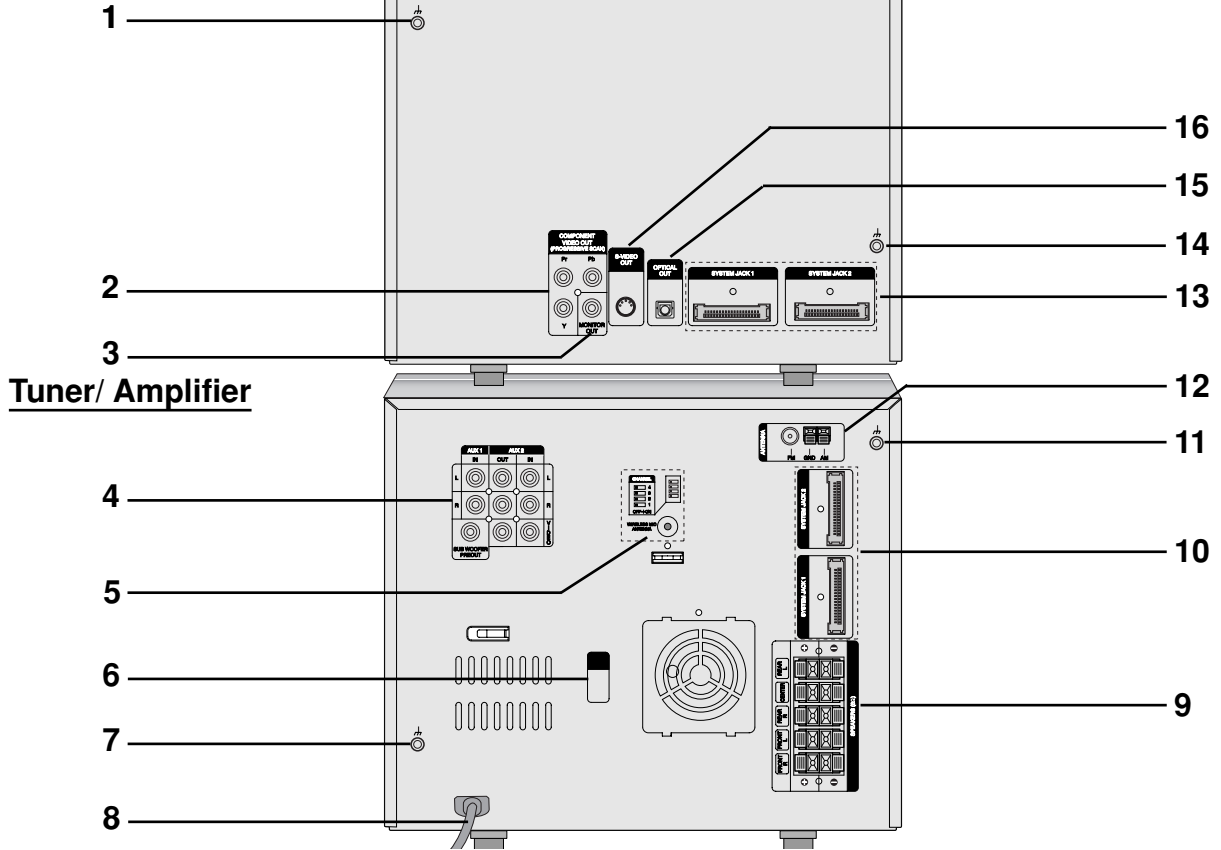

- |   |   |
|---|---|
| 1. LUG Connector  | 7. LUG Connector                                  |
| 2. COMPONENT VIDEO OUT (PROGRESSIVE SCAN) (Y Pb Pr) Connector | 8. POWER CORD                                     |
| 3. MONITOR OUT Connector                                      | 9. SPEAKER Connector                              |
| 4. • VIDEO INPUT/OUTPUT                                       | 10. SYSTEM Connector (SYSTEM JACK1/ SYSTEM JACK2) |
| • AUX 1 INPUT (L/R)   | 11. LUG Connector                                 |
| • AUX 2 INPUT/OUTPUT (L/R)                                    | 12. ANTENNA Connector                             |
| • SUB WOOFER OUTPUT   | 13. SYSTEM Connector (SYSTEM JACK1/ SYSTEM JACK2) |
| 5. • WIRELESS MIC CHANNEL SWITCH                              | 14. LUG Connector                                 |
| • WIRELESS MIC ANTENNA Connector                              | 15. OPTICAL OUT Connector                         |
| 6. VOLTAGE SELECTOR : OPTIONAL                                | 16. S-VIDEO OUT Connector                         |

## Remote Control

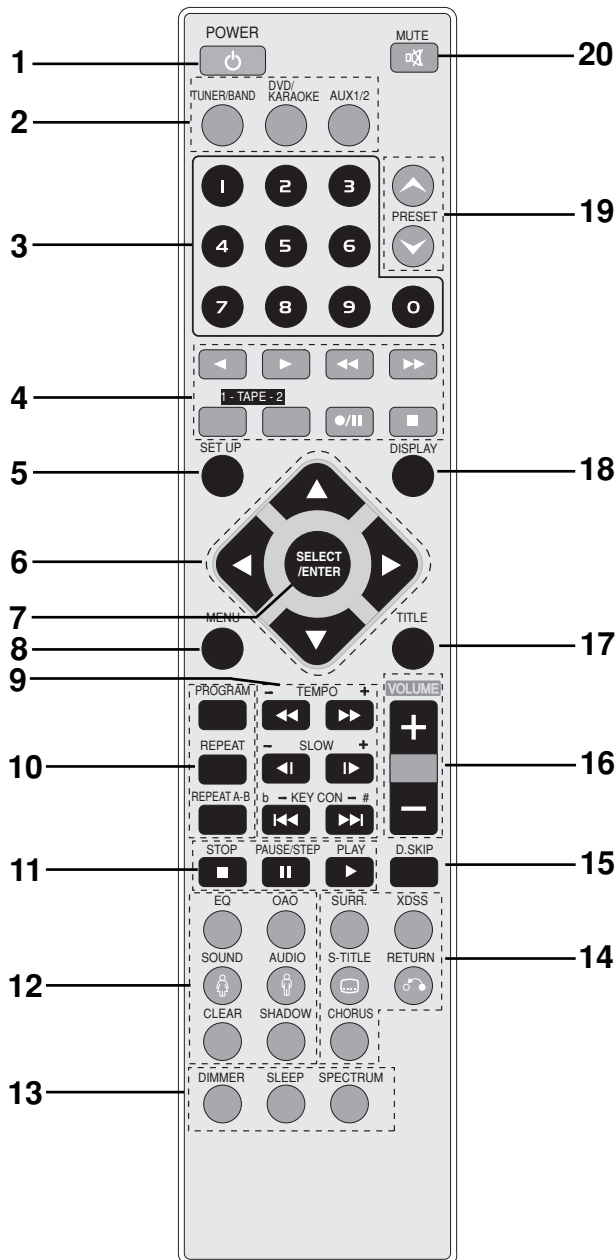


1. POWER button
2. FUNCTION SELECT buttons (TUNER/BAND, DVD/KARAOKE, AUX1/2)
3. NUMERIC buttons (0-9)
4. TAPE FUNCTION buttons
  - REVERSE PLAY (◀)
  - PLAY (▶)
  - REWIND/ FAST FORWARD PLAY (◀◀/▶▶)
  - TAPE 1/2 SELECT buttons
  - RECORD/ RECORD PAUSE (●/||)
  - TAPE STOP (■)
5. SET UP button
6. ARROW buttons (▲ / ▼ / ◀ / ▶)
- (For use in highlighting a selection on a GUI menu screen, TITLE and MENU screen.)
7. SELECT/ENTER button
8. MENU button
- (Use the MENU button to display the menu screen included on DVD video discs.)
9. SCAN (◀◀/▶▶)/ TEMPO (-/+)/ SLOW (◀/||/▶)/ KEY CONTROL (#/b)/ SKIP (◀◀/▶▶) buttons
10. PROGRAM/ REPEAT/ REPEAT A-B buttons
11. STOP (■), PAUSE(||)/ STEP, PLAY (▶) buttons
12. EQUALIZER (EQ)/ OAO/ SOUND/ FEMALE (♀) AUDIO/ MALE (♂) / CLEAR/ SHADOW buttons
13. DIMMER/ SLEEP/ SPECTRUM buttons
14. • SURROUND (SURR.)/ XDSS/ SUBTITLE (S-TITLE)/ RETURN buttons
- CHORUS button
- (When a Song with chorus function is played, use this button.)
15. DISC SKIP (D.SKIP) buttons
16. VOLUME +/- buttons
17. TITLE button
- (Use the TITLE button to display the title screen included on DVD video discs.)
18. DISPLAY button
19. PRESET (▼ / ▲) buttons
20. MUTE button

### Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction of the front of the remote sensor

### Remote control battery installation

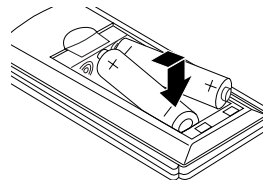

Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with + and - aligned correctly.


### ⚠ Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).




## Display Window

### Cassette tape player/ DVD/KARAOKE Player

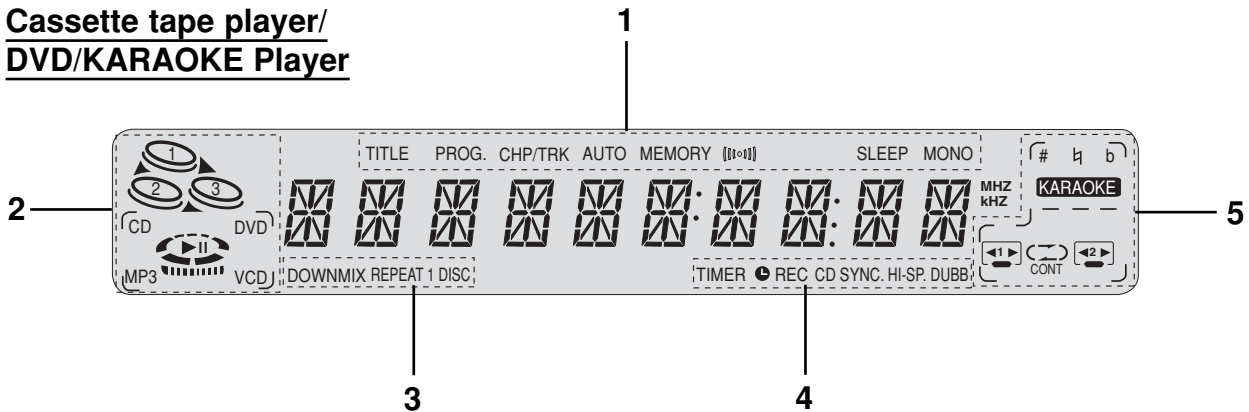

1.
  - TITLE indicator
  - PROGRAM (PROG.) indicator
  - CHAPTER/ TRACK indicator
  - AUTO SEARCH indicator
  - MEMORY indicator
  - FM STEREO RECEIVING indicator
  - SLEEP indicator
  - MONO indicator
2.
  - DISC NUMBER indicator
  - DISC TYPE indicator (MP3/DVD/CD/VCD)
  - PLAY/ PAUSE indicator
3.
  - DOWNMIX indicator
  - REPEAT indicator
4.
  - TIMER indicator
  - RECORD/ RECORD PAUSE indicator
  - CD SYNCHRO RECORDING indicator
  - DUBBING indicator
5.
  - KEY CONTROL (b#) indicator
  - KARAOKE indicator
  - TAPE 1/2 SELECT indicator
  - PLAY MODE indicator
  - TAPE PLAY DIRECTION indicator

### Tuner/ Amplifier

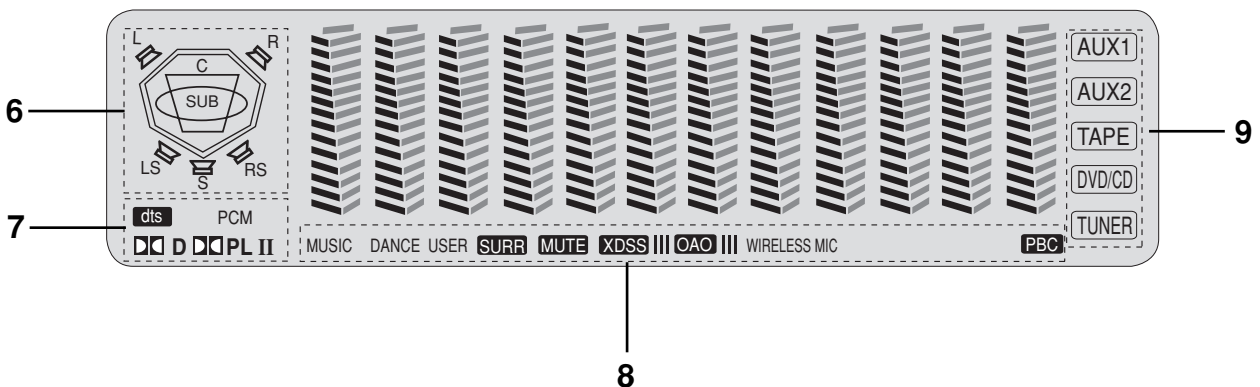

6.
  - LEFT FRONT SPEAKER indicator (L)
  - RIGHT FRONT SPEAKER indicator (R)
  - RIGHT SURROUND SPEAKER indicator (RS)
  - LEFT SURROUND SPEAKER indicator (LS)
  - SUB WOOFER indicator (SUB)
  - CENTER SPEAKER indicator (C)
7.
  - DTS/ PCM indicator
  - DOLBY DIGITAL/ DOLBY PRO LOGIC (II) indicator
8.
  - MUSIC/ DANCE/ USER indicator
  - SURROUND/ MUTE/ XDSS/ OAO indicator
  - MICROPHONE/ WIRELESS MICROPHONE indicator
  - PBC indicator
9.
  - FUNCTION SELECT indicator (AUX1, AUX2, TAPE, DVD/CD, TUNER)


## Connections

### Fitting the system connection cables

- Your unit consists of two separate parts, Cassette tape player/DVD/KARAOKE player and an integrated Tuner/ Amplifier.
- Before you can use your unit, the separate parts must be connected with the supplied system connection cables.
- Make sure that all connections are made with your unit unplugged from the mains supply.

### Cassette tape player/ DVD/KARAOKE Player

### Tuner/ Amplifier

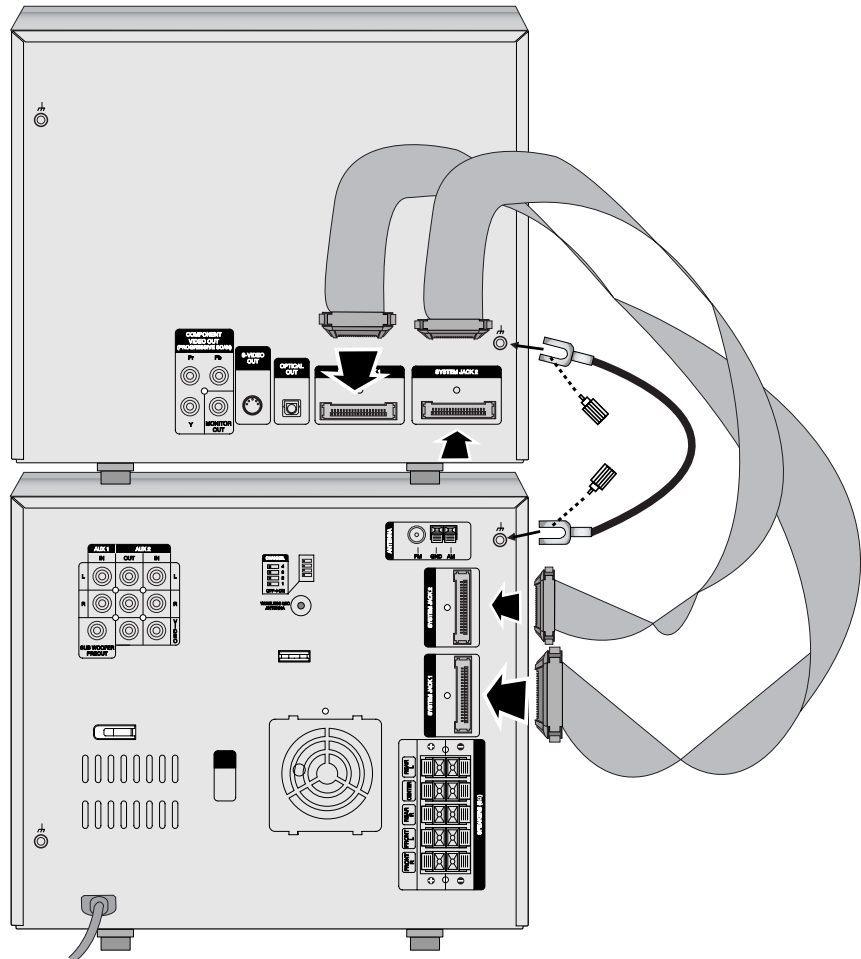

#### 1 Stack the parts of your unit in the order shown above.

Position your unit so that you have easy access to the rear of it.


#### 2 Connect the SYSTEM JACK1 on the Cassette tape player/DVD/KARAOKE Player to the SYSTEM JACK1 connector on the Tuner/ Amplifier.

#### 3 Connect the SYSTEM JACK2 connector on the Cassette tape player/DVD/KARAOKE Player to the SYSTEM JACK2 connector on the tuner/ Amplifier.

#### 4 Connect the LUG cable to the LUG connector on the unit with the supplied hand screw.

#### Notes

- The system connection cables will only connect and should 'click' into place, do not try to force them.
- If you need to unplug the system connection cables, squeeze both sides of each plug before pulling it out - this will 'unlock' the plug and allow it to be released.

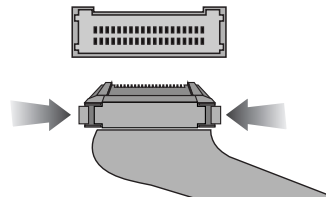

## Connections

### Connecting to a TV

- Make one of the following connections, depending on the capabilities of your existing equipment.

#### Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the unit. Use one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

#### Caution

- Make sure the unit is connected directly to the TV. Select the correct AV input on your TV.
- Do not connect your unit to TV via your VCR. The DVD image could be distorted by the copy protection system.

#### Video connection

Connect the MONITOR OUT jack from the unit to the VIDEO IN jack on the TV using the video cable supplied (V).

#### S-Video connection

Connect the S-VIDEO OUT jack on the unit to the S-VIDEO IN jack on the TV using the S-Video cable (S).

#### Component Video (Color Stream®) connection

Connect the COMPONENT VIDEO (PROGRESSIVE SCAN) jacks from the unit to the corresponding in jacks on the TV using an Y Pb Pr cable (C).


#### Progressive Scan (ColorStream® pro) connection

- If your television is a high-definition or “digital ready” television, you may take advantage of the unit’s progressive scan output for the highest video resolution possible.
- If your TV does not accept the Progressive Scan format, the picture will appear scrambled if you try Progressive Scan on the unit.

Connect the COMPONENT VIDEO OUT (PROGRESSIVE SCAN) jacks from the unit to the corresponding in jacks on the TV using an optional Y Pb Pr cable (C).

#### Note

- Set the Progressive to “On” on the Setup menu for progressive signal, see page 22.

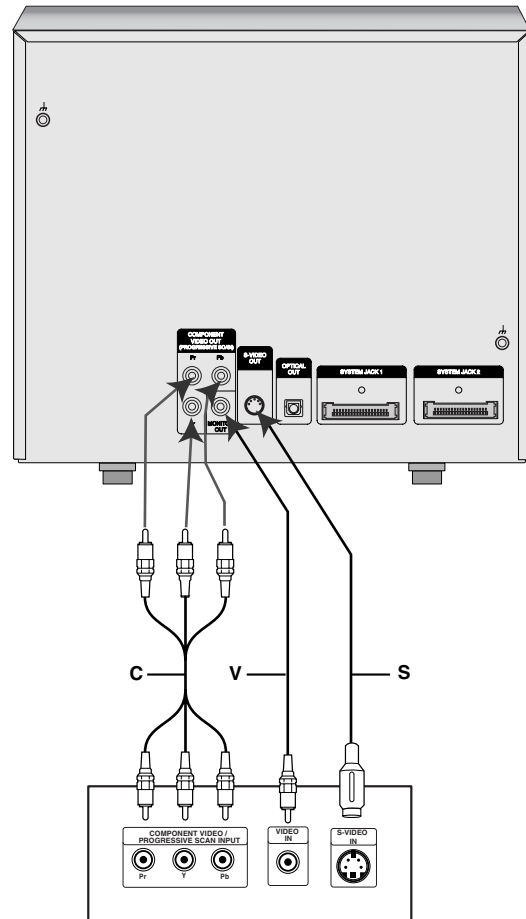


Rear of TV

## Connections

### Connecting to Antenna

Connect the supplied FM/AM antennas for listening to the radio.

- Connect the AM loop antenna to the AM antenna connector.
- Connect the FM wire antenna to the FM antenna connector.

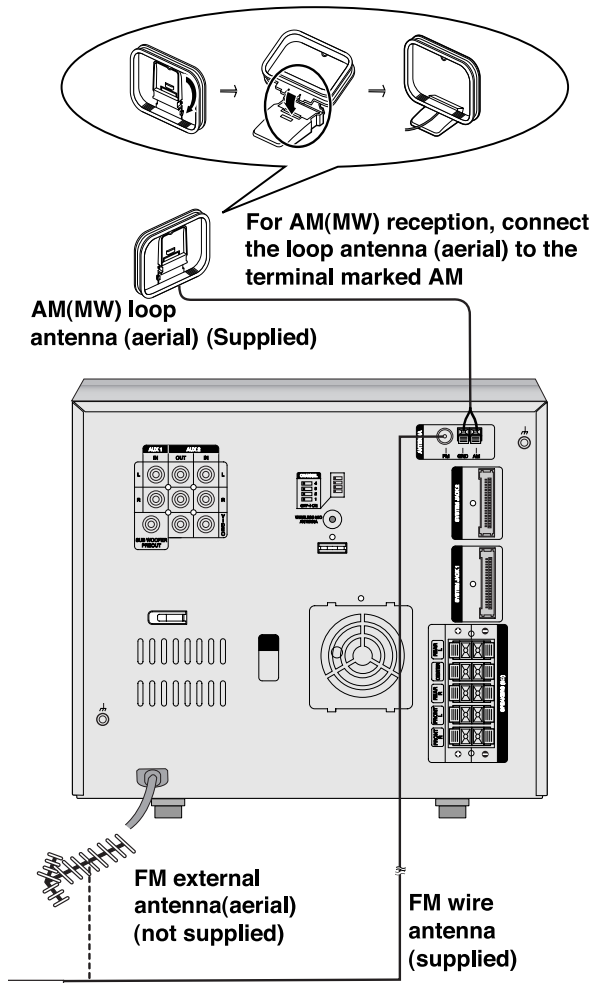


### Notes

- To prevent noise pickup, keep the AM loop antenna away from the unit and other component.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

### Connecting to Auxiliary Equipment

You can use VCR or other unit connected to the AUX1, AUX2 connector.


#### VCR (or Auxiliary Device, etc)

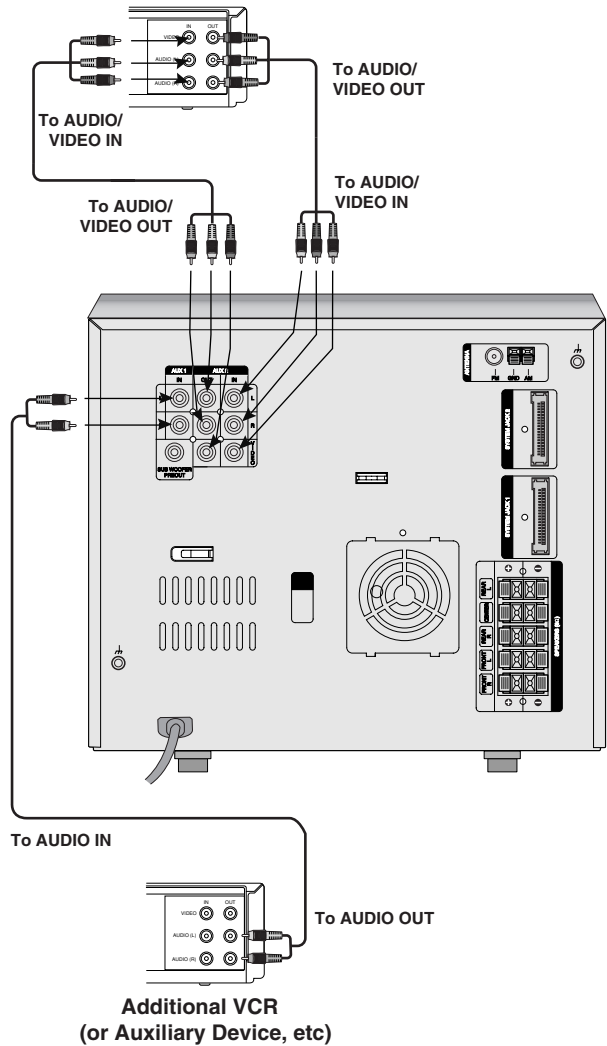

- 1 Connect a VCR or auxiliary device, etc to the AUX 1 connector.
- 2 Connect a additional VCR or auxiliary device, etc to the AUX 2 connector.
- 3 Select AUX1 or AUX2 pressing the AUX button on the Tuner/ Amplifier or the AUX1/2 button on the remote control.

# Connections

## Connecting to Optional Equipment

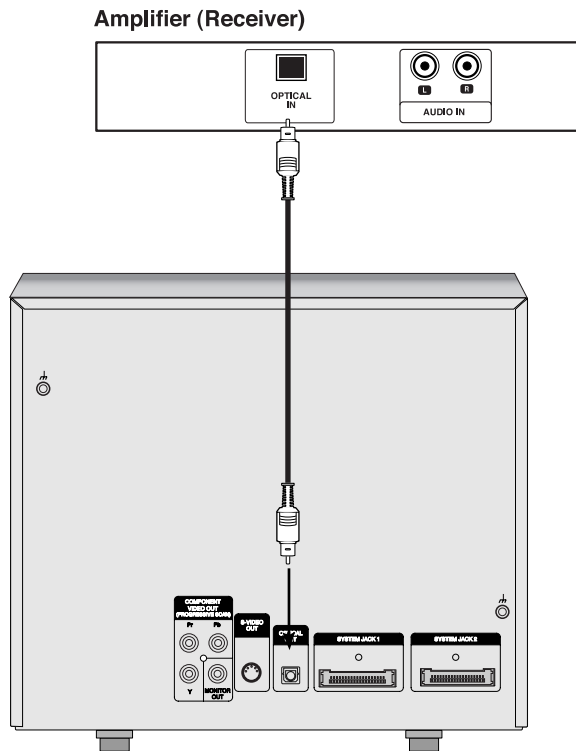

[Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2 or DTS)]

Connect the OPTICAL OUT jack on the unit to the OPTICAL IN jack on your amplifier. Use an optional audio cable.

**Caution:**


Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected. The sound is muted during playback on an audio CD recorded in dts.

**Notes**

- If the audio format of the digital output does not match the capabilities of your unit, the DVD Karaoke will produce a strong, distorted sound or no sound at all.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your unit is equipped with a Digital Multi-channel decoder.
- To see the audio format of the current unit in the On-Screen Display, press AUDIO.

## Connecting to the Wireless microphone antenna

When you use the wireless microphone, connect the supplied wireless microphone antenna to the wireless microphone antenna jack of the unit.

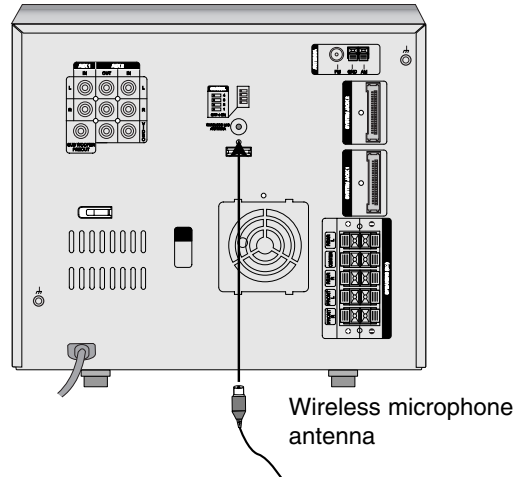


## Setting the Wireless microphone Channel

- If there is a similar wireless microphone product nearby, interference may occur. In this case, change the channel switch to other channel, and turn off the power, then turn on again.

By using the Channel Switch, set the same channel.

[Wireless microphone]

[Rear panel of the unit]

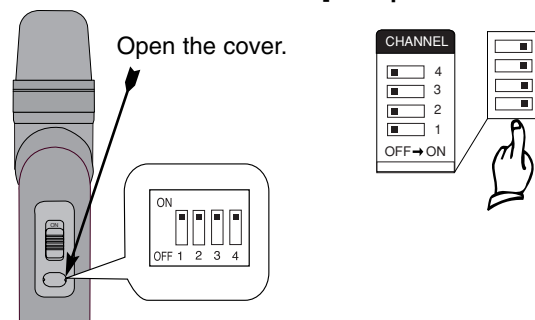


- You can set the channel change with 10 types.

Channel switch number				Channel number
1	2	3	4	
ON	OFF	OFF	OFF	CH1
OFF	ON	OFF	OFF	CH2
ON	ON	OFF	OFF	CH3
OFF	OFF	ON	OFF	CH4
ON	OFF	ON	OFF	CH5
OFF	ON	ON	OFF	CH6
ON	ON	ON	OFF	CH7
OFF	OFF	OFF	ON	CH8
ON	OFF	OFF	ON	CH9
OFF	ON	OFF	ON	CH10

## Connections

### Speaker System Connection

Connect the speakers using the supplied speaker cords by matching the colors of the terminals and those of the cords. To obtain the best possible surround sound, adjust the speaker parameters (distance, level, etc.).

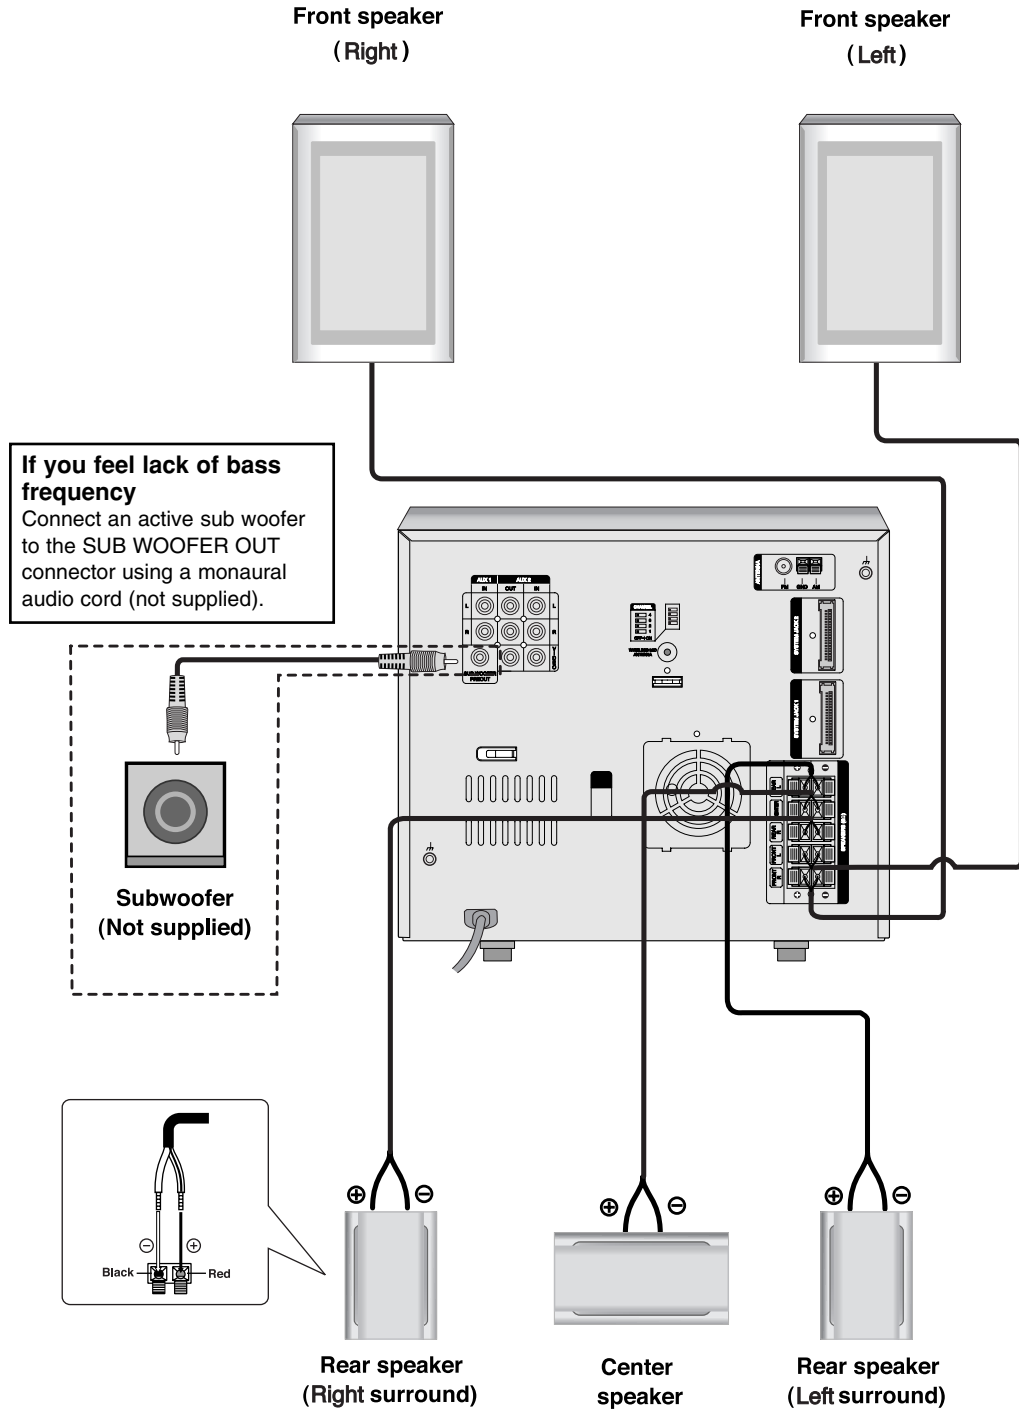

#### Notes

- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and – to –. If the cords are reversed, the sound will be distorted and will lack base.
- If you use front speakers with low maximum input rating, adjust the volume carefully to avoid excessive output on the speakers.

## Connections

### Speaker Positioning

In the case of normal position use the 6 speakers (2 front speakers, center speaker, 2 rear speakers and subwoofer).

If you want to play the excellent bass sound or Dolby Digital surround, you should connect a subwoofer.

- **Front speakers**

According to your listening position set up the speakers for equal distance. And by hearing position set up the interval between speakers to 45 degree.

- **Center speaker**

It is ideal that the center speakers and front speakers are same height. But normally place it above or below the television.

- **Rear speakers**


Place left and right behind the listening area.

These speakers recreate sound motion and atmosphere required for surround playback. For best results, do not install the rear speakers too far behind the listening position and install them at or above the level of the listener's ears. It is also effective to direct the rear speakers towards a wall or ceiling to further disperse the sound.

In the case of a smaller room size, if the audience is near to the rear wall set the rear speakers opposite each other, and set the rear speakers above 60-90cm than the listener's ears.

- **Subwoofer**

This can be placed in any front position.

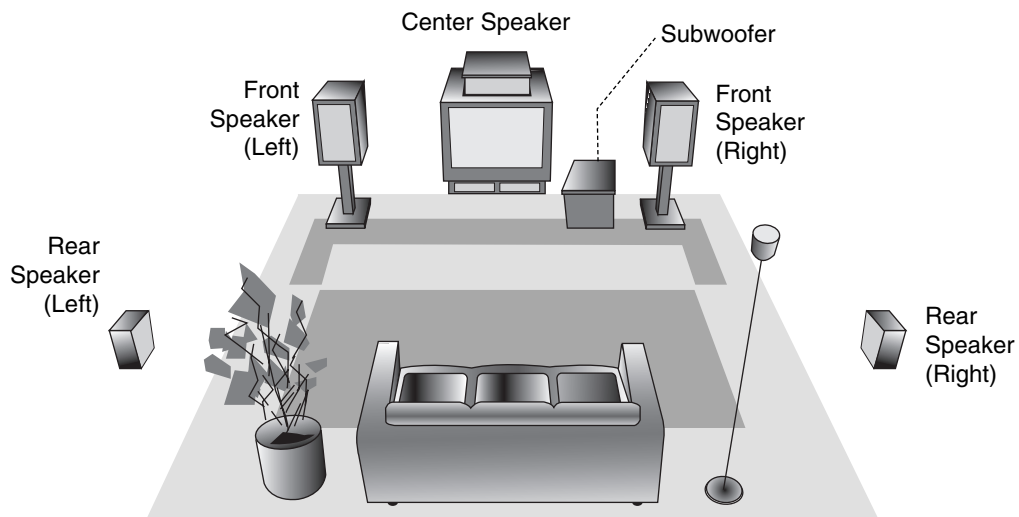

Speaker Positioning Example

## Before Operation

### Volume Adjustment

- Turn VOLUME knob clockwise to increase the sound level, or counterclockwise to decrease it.
- Press VOLUME + to increase the sound level, or use VOLUME - to decrease it on the remote control.

### Sound Quality Adjustment

#### • To activate stereo sound

- You can choose between 8 fixed sound impressions and 1 USER MODE.

Select a desired sound mode by using the **EQ** button on the remote control.

- Each you press the button the indication changes as follows in the display window.

USER → FLAT → POP → CLASSIC → ROCK

↑ ↓  
SAMBA ← JAZZ ← SALSA ← VOCAL

- If you press the MUSIC button, the indication changes as follows in the display window.

FLAT → POP → CLASSIC → ROCK → VOCAL

↑

- If you press the DANCE button, the indication changes as follows in the display window.

SALSA → JAZZ → SAMBA

↑

#### **N**ote

This function is only available to the "BYPASS" sound mode.

#### • Headphone Jack

Connect a stereo headphone plug (∅6.3mm) into the headphone jack.

The speakers are automatically disconnected when you plug in the headphones (not supplied).

### MUTE

Press MUTE to turn off the sound, press again to restore. You can mute your unit in order, for example, to answer the telephone, "MUTE" indicator flashes in the display window.

### SURROUND

#### To activate surround mode

- You can choose between 6 fixed sound impressions.
- Select a desired surround mode by using the **SURROUND** button on the front panel or the **SURR.** button on the display window.
- Each you press the button the indication changes as follows.

SURROUND OFF → SIMULATED LOW → SIMULATED HIGH

↑ ↓  
MOVIE HIGH ← MOVIE LOW ← MUSIC HIGH ← MUSIC LOW

#### **N**ote

This function is only available to the "BYPASS" sound mode.

### XDSS (Extreme Dynamic Sound System)

Press XDSS button repeatedly to reinforce treble and bass.

XDSS 1 ON → XDSS 2 ON → XDSS OFF

#### **N**ote

This function is only available to the "BYPASS" sound mode.

### OAO (Orientation Acoustic Optimizer) ON/OFF

Press OAO to reinforce the bass sound.

The "OAO ON" or "OAO OFF" indicator lights. To cancel, press OAO again.

### SPECTRUM Effect

Whenever you press the SPECTRUM button on the remote control, you can enjoy the spectrum change with 6 types in the display.

### DIMMER

This function will change the brightness of the display window on the front panel in power-on status.

Press the DIMMER button on the remote control.

### DEMO

 
Press **DEMO** in power off state to demonstrate the function in the display window.

To cancel it, press **POWER** or **DEMO** again. During demonstration in power-on status you can cancel it by using the other buttons.



## Before Operation

### Setting the Clock

- 1 Press CLOCK.**  
(If the clock requires setting, press and hold **CLOCK** for more than 2 seconds.)  
- The hours display begins to blink.
- 2 Select either the 12 hour cycle or the 24 hour cycle by turning MULTI JOG DIAL.**  
  
(12HR) or (24HR)
- 3 Press SET to confirm the selected hour cycle.**
- 4 Use MULTI JOG DIAL to set the current hour.**
- 5 Press SET.**
- 6 Use MULTI JOG DIAL to set current minutes.**
- 7 Press SET and the correct time is shown on the display.**
- 8 Press CLOCK at any time to show the time on the display, for about 5 seconds.**

### Sleep Timer Function

When the sleep timer is set, the unit automatically turns off after the specified time has elapsed.

- 1 To specify the time delay before the power is turned off, press SLEEP.**  
In the display window you can see *SLEEP 90* for about 5 seconds. This means that the system turns off automatically after 90 minutes.  
Each time the button is pressed the time interval before it turns off is reduced by 10 minutes. i.e. 80...70... etc. Select the desired time to turn off.
- 2 To check the remaining time until the power is turned off.**  
While the sleep function is active press **SLEEP** briefly. The time remaining until the unit turns off is displayed for about 5 seconds.

#### Note

If you press **SLEEP** while the sleep time is displayed, the **SLEEP** time is reset.

### To cancel Sleep Timer setting

If you wish to stop the function, press the **SLEEP** button repeatedly until "*SLEEP 10*" appears, and then press **SLEEP** once again after "*SLEEP 10*" shows on the display.

### Using Microphone

You can sing to a music source by connecting a microphone to the unit.

- 1 Connect your microphone to the MIC socket.**  
"MIC" will be shown in the display window.
- 2 Play a music you want.**
- 3 Sing along with the accompaniment.**  
Adjust the microphone volume by turning MIC VOLUME KNOB.

#### For your reference


You can record during using microphone. Refer to the "Recording" explanation section.

#### Notes

- When not using the microphone, set the MIC volume knob to minimum or turn off the MIC and remove the microphone from the MIC socket.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the MIC volume control.
- If sound through the microphone is extremely loud, it may be distorted. In this case, turn the MIC volume control toward minimum.

### Using the wireless microphone

Before you use the wireless microphone, detach the cover on the rear of the wireless microphone and insert three R06 (size AA) batteries with  $\oplus$  and  $\ominus$  aligned correctly.

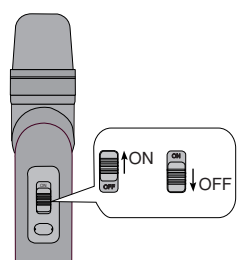- 1 Connect the supplied wireless microphone antenna. (Page 13)**
- 2 Turn the wireless microphone on.**  

- 3 Set the wireless microphone channel. (Page 13)**

### To Adjust ECHO Volume

You can give an echo effect to the sound from the microphones.

Turn **ECHO VOLUME KNOB (ECHO VOL.)** on the front panel the echo volume clockwise to increase the sound level, or counterclockwise to decrease it.

## Before Operation

### Timer Function

With the TIMER function you can have the radio reception and recording, CD or tape playing turned on and off at the time desired.

**1** Press **CLOCK** to check the current time.

#### For your reference

If you don't set clock, timer function doesn't work.

**2** Press **TIMER** to enter the timer setting mode. TUNER-CD-TAPE flash in the display window in turn.

#### For your reference

If you want to correct the previous memorized TIMER setting, press and hold the **TIMER** button more than 2 seconds.

- The previous memorized timer setting for on Time and "TIMER" indicators appear in the display.

**3** Press **SET** when the desired function flashes.

**4** 1. a. When you select **TUNER** function, 'PLAY' and 'REC' indicator flash in the display window alternately for about 3 seconds.

'PLAY' indicator : TUNER play only

'REC' indicator : TUNER play and recording

b. Select the previous memorized preset number with **MULTI JOG DIAL** on the front panel and press **SET**.

'ON TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

2. When you select **CD** or **TAPE** function, 'ON TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

**5** Set the turn on hour turning **MULTI JOG DIAL**.

**6** Press **SET** to confirm the turn on hour time.

**7** Set the turn on minutes time turning **MULTI JOG DIAL**.

**8** Press **SET** to confirm the turn on minutes time.

'OFF TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

**9** Set the turn off hour time turning **MULTI JOG DIAL**.

**10** Press **SET**.

**11** Set the turn off minutes turning **MULTI JOG DIAL**.

**12** Press **SET**.

**13** Adjust the volume level turning **MULTI JOG DIAL**.

**14** Press **SET**.

"TIMER" appear in the display window and the timer setting has been completed.

**15** Turn the system off.

The selected timer functions are automatically switched on and off at the preset times.

### To cancel or check the timer

Each time the **TIMER** button is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the **TIMER** button repeatedly so that "TIMER" appears in the display window.

To cancel the **TIMER**, press the **TIMER** button repeatedly so that "TIMER" disappears from the display window.

### Note

If the disc is inserted the DVD, VCD or MP3 except audio CD on the DVD/VCD/CD player, the timer function plays to the TUNER.

## Before Operation


### Mini Glossary for Audio Stream & Surround mode

#### dts

Allows you to enjoy 5.1(or 6) discrete channels of high quality digital audio from DTS program sources such as discs, DVD and compact discs, etc.bearing the trademark. DTS Digital Surround delivers up to 6 channels of transparent audio(which means identical to the original masters) and results in exceptional clarity throughout a true 360 degree sound field.

“DTS” and “DTS Digital Surround” are registered trademarks of Digital Theater Systems, Inc.

#### DIGITAL

The Dolby Digital surround format lets you enjoy up to 5.1 channels of digital surround sound from a Dolby Digital program source. If you play DVDs with “” mark, you can enjoy even better sound quality, greater spatial accuracy, and improved dynamic range.

Manufactured under license from Dolby Laboratories. “Dolby”, “Pro Logic” and double-D symbol are trademarks of Dolby Laboratories.

#### PRO LOGIC II

Dolby Pro Logic II creates five full-bandwidth output channels from two-channel sources. This is done using an advanced, high-purity matrix surround decoder that extracts the spatial properties of the original recording without adding any new sounds or tonal colorations.

#### MOVIE mode:

The Movie mode is for use with stereo television shows and all programs encoded in Dolby Surround. The result is enhanced soundfield directionality that approaches the quality of discrete 5.1-channel sound.

#### BYPASS



Outputs the sound from the front left and right speakers and subwoofer.

 
### Sound Mode




You can enjoy surround sound simply by selecting one of the pre-programmed sound fields according to the program you want to listen to.

#### When DVD is inserted

You can change the Digital Audio Output mode by pressing the **AUDIO** button on the remote control during playback. Although the DVD contents differ from disc to disc, the following explains the basic operation when this feature is used.

- a) After you select 2 channel (For example  or ) by pressing AUDIO button, press SOUND button repeatedly.



- b) After you select 5.1 channel (For example  or ) by pressing AUDIO button, press SOUND button.
- “” indicator will be displayed on the TV screen.
  - “NORMAL (BYPASS)” indicator will be only displayed on the display window.

#### When Video CD is inserted

Each time you press SOUND button, the sound mode of Video CD is changed on the display window as the following order.

NORMAL (BYPASS) → STUDIO → CLUB → HALL → THEATER 1 → CHURCH → PL 2 MOVIE → NORMAL (BYPASS)...

#### Note



After you select the “Bypass” of sound mode by pressing SOUND button, press AUDIO button. The Left, Right and Stereo of audio channel will be displayed on the TV screen.

#### When CD is inserted

Each time you press SOUND button, the sound mode of Audio CD is changed on the display window as the following order.

NORMAL (BYPASS) → STUDIO → CLUB → HALL → THEATER 1 → CHURCH → PL 2 MOVIE → NORMAL (BYPASS)...

#### For your reference

- The unit memorizes the last mode settings for each source individually.
- You can identify the encoding format of program software by looking at its packaging.
  - Dolby Digital discs are labelled with the  logo.
  - Dolby Surround encoded programs are labelled with the  logo.
  - DTS Digital Surround discs are marked with DTS.

#### Note

When you play sound tracks with 96kHz sampling frequency, the output signals will be converted to 48kHz (sampling frequency).

## Before Operation




### Caution:

Before using the remote control, press the **DVD/CD /KARAOKE** (or **DVD/KARAOKE**) button to select the device to be operated.

## General Explanation

This manual gives basic instructions for operating the unit. Some DVDs require specific operation or allow only limited operation during playback.



When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the unit or is not available on the disc.



## On-Screen Display

General playback status can be displayed on the TV screen. Some items can be changed on the menu.





### On-screen display operation

**1** Press **DISPLAY** during playback.

**2** Press  /  to select an item.  
The selected item will be highlighted.

**3** Press  or  to change the setting of an item.  
The number buttons can be also be used for setting numbers (e.g., title number). For some functions, press **SELECT/ENTER** to execute the setting.






















### Temporary Feedback Field Icons

-  **Title** Repeat title
-  **A - B** Repeat sequence
-  Resume play from this point
-  Action prohibited or not available













### Notes

- Some discs may not provide all of the features on the on-screen display example shown below.
- If no button is pressed for 10 seconds, the on-screen display disappears.

### Example: On-Screen Display during playing DVD

Items	Function / Action using  /  to select item	Selection Method
Title Number	 1 / 3	 /  , Numbers, or <b>SELECT/ENTER</b>
Chapter Number	 1 / 12	 /  , Numbers, or <b>SELECT/ENTER</b>
Time search	 0:20:09	Numbers, <b>SELECT/ENTER</b>
Audio language and Digital Audio Output mode	 1 ENG D DD 5.1 CH	 /  or <b>AUDIO</b>
Subtitle language	 1 ENG	 /  or <b>S-TITLE</b>
Angle	 1 / 3	 / 
Sound	 Bypass	 /  or <b>SOUND</b>

### Example: On-Screen Display during playing VCD

Items	Function / Action using  /  to select item	Selection Method
Track Number	 1 / 3	 /  , Numbers, or <b>SELECT/ENTER</b>
Time	 0:20:09	-
Audio Channel	 Stereo	 /  or <b>AUDIO</b>
Sound	 Bypass	 /  or <b>SOUND</b>

## Before Operation

### Initial Settings

By using the Setup menu, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, see pages 21 to 25.

#### To display and exit the Menu:

Press **SETUP** to display the menu. A second press of **SETUP** will take you back to initial screen.

#### To go to the next level:

Press **▶** on the remote control.


#### To go back to the previous level:

Press **◀** on the remote control.

### General Operation

- 1 Press SETUP.**  
The setup menu appears.
- 2 Use ▲ / ▼ to select the desired option then press ▶ to move to the second level.**  
The screen will be shown the current setting for the selected item, as well as alternate setting(s).
- 3 Use ▲ / ▼ to select the second desired option then press ▶ to move to the third level.**
- 4 Use ▲ / ▼ to select the desired setting then press SELECT/ENTER to confirm your selection.**  
Some items require additional steps.
- 5 Press SETUP or PLAY to exit the setup menu.**

### LANGUAGE

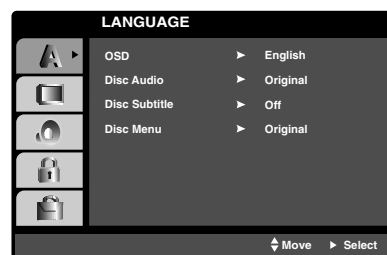

#### OSD

Select a language for the Setup menu and on-screen display.

#### Disc Audio / Subtitle / Menu **DVD**


Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

**Original:** Refers to the original language in which the disc was recorded.

**Other:** To select another language, press number buttons to enter the corresponding 4-digit number according to the language code list on page 41. If you enter the wrong language code, press **CLEAR** on the remote control.

## Before Operation

### DISPLAY

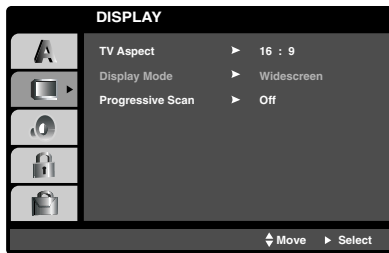

#### TV Aspect **DVD**

**4:3:** Select when a standard 4:3 TV is connected.  
**16:9:** Select when a 16:9 wide TV is connected.

#### Display Mode **DVD**

Display Mode setting works only when the TV Aspect mode is set to "4:3".

**Letterbox:** Displays a wide picture with bands on the upper and lower portions of the screen.

**Panscan:** Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.


#### Progressive Scan **DVD**

Progressive Scan Video provides the highest quality pictures with less flickering.  
If you are using the Component Video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to On.

#### To Turn ON progressive scan:

Connect component out of the DVD to the input of your monitor/television, set your television or monitor to Component Input.

1. Select "Progressive Scan" on the DISPLAY menu then press **▶**.
2. Select "On" using the **▲** / **▼** buttons.
3. Press SELECT/ENTER to confirm your selection. The confirm menu will appear.

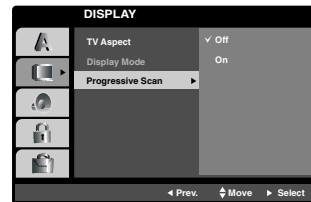

4. When the confirm menu appears on your screen Cancel is highlighted as default. Use the **◀** / **▶** buttons to highlight Enter.
5. Pressing ENTER will set the player to Progressive scan mode.

#### **⚠ Caution**


Once the setting for progressive scan output is entered, an image will only be visible on a progressive scan compatible TV or monitor. If you set Progressive Scan to On in error, you must reset the unit.

- 1) Remove any disc from the unit and close the disc tray. See that "NO DISC" is displayed on the display window
- 2) Press and hold STOP (**■**) for five seconds then release it. The video output will be restored to the standard setting, and a picture will once again be visible on a conventional analog TV or monitor.

## Before Operation

### AUDIO

Each DVD disc has a variety of audio output options. Set the player's AUDIO options according to the type of audio system you use.

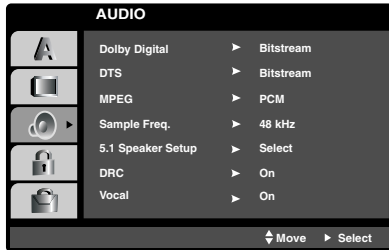

### Dolby Digital / DTS / MPEG **DVD**

**Bitstream:** Select "Bitstream" if you connect the DVD Player's DIGITAL OUT jack to an amplifier or other equipment with a Dolby Digital, DTS or MPEG decoder.

**PCM :** Select when connected to a two-channel digital stereo amplifier. DVDs encoded in Dolby Digital or MPEG will be automatically downmixed to two-channel PCM audio.

### Sample Freq. (Frequency) **DVD**

If your receiver or amplifier is NOT capable of handling 96 kHz signals, select 48 kHz. When this choice is made, this unit automatically converts any 96 kHz signals to 48 kHz so your system can decode them.

If your receiver or amplifier is capable of handling 96 kHz signals, select 96 kHz. When this choice is made, this unit passes each type of signal through without any further processing.

Check the documentation for your amplifier to verify its capabilities.


### 5.1 Speaker Setup **DVD**

Select speaker settings, including volume balance and distance, or test the speaker settings.

Speaker settings are only active on the Analog Multi-Channel Output.

#### Speaker Setup

Make the following settings for the built-in 5.1 channel surround decoder.

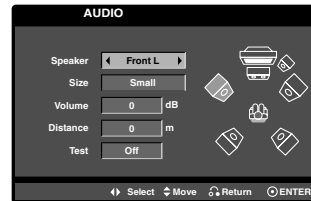

1. Press SETUP. The setup menu appears.
2. Use / to select the AUDIO option then press to move to the second level.
3. Use / to select the Speaker Setup option then press to move to the third level. "Select" is highlighted.
4. Press SELECT/ENTER and 5.1 Speaker Setup menu appears.
5. Use / to select the desired speaker.
6. Adjust options using / / / buttons.
7. Press SELECT/ENTER to confirm your selection. Returns to the previous menu.

#### Speaker selection

Select a speaker that you want to adjust. [Front speaker (Front L), Center Speaker (Center), Front speaker (Front R), , Rear speaker (Rear R), Rear speaker (Rear L) or Subwoofer (Woofer)]

#### Size

Press / to set a mode. (Large, Small or None)

- The size of the Front L/R speaker can be selected to "Large" or "Small".
- The size of the Subwoofer can be selected to "Large" or "None".
- Since the size of the Center and Rear L/R speaker are fixed to "Small", you can not change settings.
- If you have connected the system to a speaker with low frequency of 100Hz or below, select to "Large" the size of the Front L/R speaker. The size of the Subwoofer is selected to "None" automatically.
- If you have connected the system to a speaker without low frequency of 100Hz or below, select to "Small" the size of the Front L/R speaker. The size of the Subwoofer is selected to "Large" automatically. But if you haven't connected to subwoofer, always select to "Large" the size of Front L/R Speaker.



## Before Operation

### Volume

Press / to adjust the output level of the selected speaker. (-5dB ~ 5dB)

### Distance

If you have connected speakers to your DVD Player, setting the Distance lets the speakers know how far the sound has to travel to reach your set listening point. This allows the sound from each speaker to reach the listener at the same time.

Press / to adjust the Distance of the selected speaker (Center, Rear L and Rear R).

### Test

Select "All" to test the signals of each speaker. Adjust the volume to match the volume of test signals memorized in the system. (When the size of the Front L/R speaker is selected to "Large", the subwoofer (Woofer) is not available.)  
Front L → Center → Front R → Rear R → Rear L → Woofer

You can adjust the volume during operating the test tone, first use / to select Volume or Speaker option then use / buttons to select volume or speaker, so that all speaker's volume is same from the listener's position.

### Dynamic Range Control (DRC)

With the DVD format, you can hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing dialog intelligibility. Set DRC to On for this effect.


### Notes

- The DRC function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Compression may differ depending on the DVD disc.

### Vocal

Set Vocal to On only when a multi-channel Karaoke DVD is playing. The karaoke channels on the disc will mix into a normal stereo sound.

## OTHERS

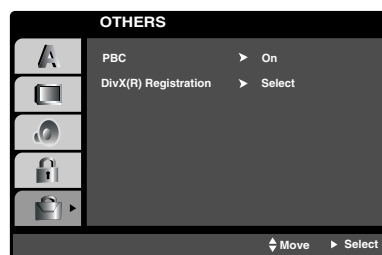

### PBC


Set Playback Control (PBC) to On or Off.

**On:** Video CDs with PBC are played according to the PBC.

**Off:** Video CDs with PBC are played the same way as Audio CDs.

### DivX(R) Registration

You can show the DivX DRM (Digital Right Management) Registration code for your unit only.

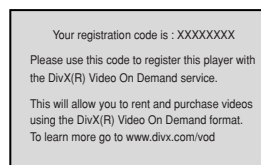


The Registration code is used for VOD (Video-On-Demand) service agent. You can purchase or rental an encrypt movie file.


### Notes

If you rent the DivX VOD file, it has several options of viewing limits as show below.


- Display the number which you can watch the file.

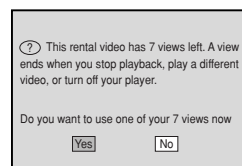

- The rental has been expired.

 


- Display the authorization error.

 



## Before Operation

### LOCK (Parental Control)

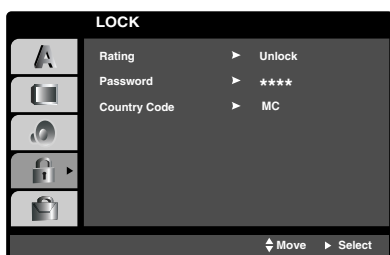

#### Rating **DVD**

Some movies contain scenes that may not be suitable for children to view. Many of these discs contain parental control information that applies to the complete disc or to certain scenes on the disc. Movies and scenes are rated from 1 to 8, depending on the country. Some discs offer more suitable scenes as an alternative.

The parental control feature allows you to block access to scenes below the rating you input, thereby preventing your children from being able to view material you believe is unsuitable.

**1** Select "Rating" on the LOCK menu then press **▶**.

**2** To access the Rating, Password and Country Code features, you must input the 4-digit security code you created.

If you have not yet entered a security code you are prompted to do so.

Input a 4-digit code and press SELECT/ENTER. Enter it again and press SELECT/ENTER to verify. If you make a mistake before pressing SELECT/ENTER, press CLEAR.

**3** Select a rating from 1 to 8 using the **▲** / **▼** buttons.

**Rating 1-8:** Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

#### Unlock

If you select unlock, parental control is not active and the disc plays in full.

#### **N**ote

If you set a rating for the player, all disc scenes with the same rating or lower are played. Higher rated scenes are not played unless an alternate scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback stops. You must enter the 4-digit password or change the rating level in order to play the disc.

**4** Press SELECT/ENTER to confirm your rating selection, then press SETUP to exit the menu.

### Password (Security Code)

You can enter or change password.

- 1 Select Password on the LOCK menu then press **▶**.
- 2 Follow step 2 as shown left (Rating). "Change" or "New" is highlighted.
- 3 Enter the new 4-digit code, then press SELECT/ENTER. Input it again to verify.
- 4 Press SETUP to exit the menu.

#### *If you forget your Security Code*

If you forget your security code you can clear it using the following steps:

- 1 Input the 6-digit number "210499" on the setup menu and the security code is cleared.
- 2 Enter a new code as described above.

#### **N**ote

When "INPUT PASSWD ■■■■■■" appears on the TV screen, press STOP (**■**) and then press SETUP to move to the setup menu.

#### Country Code **DVD**

Enter the code of the country/area whose standards were used to rate the DVD video disc, based on the list in the reference chapter.

**1** Select "Country Code" on the LOCK menu then press **▶**.

**2** Follow step 2 as shown left (Rating).

**3** Select the first character using **▲** / **▼** buttons.

**4** Shift the cursor using **▶** button and select the second character using **▲** / **▼** buttons.

**5** Press SELECT/ENTER to confirm your country code selection.

## Operation with RADIO

### Presetting the radio stations

You can preset 50 stations for FM and AM. Before tuning, make sure that you have turned the volume down to the minimum level.

- 1 Press TUNER/BAND to show either FM or AM in the display window.**  
Every time you press this button, AM and FM changes alternately.
- 2 Turn the MULTI JOG DIAL on the front panel until the frequency indication starts to change.**

#### Notes

- **Automatic Tuning**  
Press the AUTO TUNING (▼/▲) buttons.
    - Scanning stops when the unit tunes in a station.
  - **Manual Tuning**  
Use the MULTI JOG DIAL.
- 3 Press MEMORY on the front panel.**  
A preset number will flash in the display window.
  - 4 Press PRESET ▲/▼ (or PRESET ▼/▲ on the remote control) to select the preset number you want.**
  - 5 Press MEMORY again.**  
The station is stored.
  - 6 Repeat steps 2 to 5 to store other stations.**

### To clear all memorized stations

Press and hold **MEMORY** on the front panel for about two seconds, "CLEAR" appears in the display window and then press CLEAR on the front panel, the stations are cleared.

#### For your reference

If all stations have already been entered, "FULL" message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 4-5 .

### To recall preset numbers

Press and hold PRESET ▲/▼ (or PRESET ▼/▲ on the remote control) until the desired preset number appears or press the button repeatedly.

### Listening to the radio

- 1 Press TUNER/BAND to select either AM or FM in the display window.**  
The last received station is tuned in.
- 2 Press PRESET ▲/▼ (or PRESET ▼/▲ on the remote control) repeatedly to select the preset station you want.**  
Each time you press this button, the unit tunes in the next preset station.
- 3 Adjust the volume by rotating VOLUME knob (or pressing VOLUME +/- on the remote control) repeatedly.**

### To listen to non-preset radio stations

- For manual tuning, see "Manual Tuning".
- For automatic tuning, see "Automatic Tuning".

### To turn the radio off

Press POWER to turn off the unit or select another function mode (TAPE, DVD/CD/KARAOKE or AUX).

#### For your reference




- **If a FM program is noisy**  
Press MODE/RIF repeatedly so that "|||||" disappears in the display window. There will be no stereo effect, but the reception will improve. Press MODE/RIF again to restore the stereo effect.
- **To improve reception**  
Reposition the supplied antennas.

#### Notes

- Use MODE/RIF (Radio Interference Filter) function to switch to Mono reception if stereo reception is distorted by noise.
- While recording weak AM broadcasts, if noises occurs, press MODE/RIF once.





## Operation with TAPE

### Basic Playback



- 1** Press TAPE1-2 to select tape function.  
("NO TAPE" appears in the display window.)
- 2** Open cassette TAPE1-2 by pushing to the  PUSH EJECT position.
- 3** Insert one or two cassettes with the tape side to the bottom and then close the TAPE 1 (and/or 2) door.
- 4** Press  (or : OPTIONAL).

### AUTO REVERSE DECK (TAPE 1 or 2): OPTIONAL

You can select direction of the cassette you want by pressing PLAY MODE.

Pressing	Display	Function
-		After the cassette of TAPE 1 or 2 plays front or reverse (backward play) side, stops automatically.
Once		After the cassette of TAPE 1 or 2 plays front and reverse side, stops automatically.
Twice		After the cassette of TAPE 1 or 2 plays six times repeatedly front and reverse side, stops automatically.
Three times		After a cassette of TAPE 1 and 2 plays six times repeatedly front and reverse side, stops automatically.





### To Stop Play

Press STOP() on the front panel or TAPE STOP() on the remote control during playback.

### Tape Counter Reset


Press COUNT. RESET during playback. Playing time appears "TAP -1 (or 2) 0000" in display window.

### To Play Rewind or Fast Forward

After press /  on the front panel or on the remote control during playback, press  (or :optional) at the tape position you want.

### Dubbing

This function shows how to record from tape to tape.




- 1** Press TAPE1-2.
    - Cassette TAPE 1- Insert the playback tape to dub.
    - Cassette TAPE 2- Insert a blank tape to copy on.
  - 2** Press NORMAL DUBBING/HIGH DUBBING.
    - NORMAL DUBBING - Normal speed copying
    - HIGH DUBBING - Double speed copying
- To stop recording, press STOP ().

## Recording

### Basic Setting

- 1** Press CD or TUNER to select source.
- 2** Open the cassette deck TAPE 2 and insert a blank cassette into the cassette compartment.  
Set the recording direction : OPTIONAL  
Press PLAY MODE repeatedly to set the recording direction.

### Recording from Radio, CD or Auxiliary source

- 1** Press  on the front panel.  
"REC" flashes and holds the cassette in pause mode.
- 2** Press  (or : OPTIONAL).  
The recording is begun.

#### To pause the recording

Press .

#### To Stop the recording

Press STOP().

### CD to Tape Synchronized Recording

The CD synchro recording function dubs a complete CD and programmed titles automatically into a cassette.

- 1** Press CD SYNC. in stop mode.  
"REC" flashes and "CD SYNCHRO" displays in the display window.
- 2** The synchronized recording is started automatically after about 7 seconds.

#### Notes

- If you wish to record from the desired track, select the desired track with MULTI JOG DIAL before commencing CD synchro recording.
- A function change is not possible during recording.

## Operation with DVD and Video CD


### Playing a DVD and Video CD

#### Playback Setup

- Turn on the TV and select the video input source connected to the unit.
- Audio system: Turn on the audio system and select the input source connected to the unit.

**1** Press **▲ OPEN/CLOSE** button to open the disc tray.

**2** Load your chosen disc in the tray, with the playback side facing down.

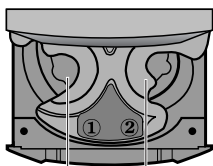

Number 1 disc    Number 2 disc

- **Playing one or two discs**

Place discs on trays 1 and 2.

- **Playing three discs**

After placing two discs, press the D.SKIP button to rotate the trays. Place the next disc on tray 3.

**3** Press **▲ OPEN/CLOSE** button to close the tray. Playback starts automatically. If playback does not start, press PLAY.

In some cases, the disc menu might appear instead.

#### **DVD**

Use the **▲** / **▼** / **◀** / **▶** buttons to select the title/chapter you want to view, then press SELECT/ENTER to start. Press TITLE or MENU to return to the menu screen.

#### **VCD**

Use the number buttons to select the track you want to view and press RETURN to return to the menu screen. Menu settings and operating procedures may differ. Follow the instructions on the each menu screen. You also may set PBC to Off (See "PBC" on page 24).

#### **N** Notes

- If parental control is set and the disc is not within the rating settings you must input the password. (See "Lock Menu" on page 25.)
- DVDs may have a region code. Your player will not play discs that have a region code different from your player. The region code for this player is 5 (five).

#### To Select a disc directly

Press DISC 1, DISC 2 or DISC 3 during playing or stopping.

When you press DISC 1,2 or 3 before playing a disc, the unit will automatically start playing the selected disc.

### General Features

#### **N**ote

Unless stated otherwise, all operations described use the remote control. Some features may also be available on the Setup menu.

#### Moving to another TITLE **DVD**

When a disc has more than one title, you can move to another title. Press DISPLAY while playback is stopped then the appropriate number (0-9) or use **◀** / **▶** to move to another title.

You can play any title by inputting its number while playback is stopped.

#### Moving to another CHAPTER/TRACK

##### **DVD** **VCD**

When a title on a disc has more than one chapter or a disc has more than one track, you can move to another chapter/track as follows:

- Press **◀◀** or **▶▶** briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press **◀◀** twice briefly to step back to the previous chapter/track.
- To go directly to any chapter during DVD playback, press DISPLAY and press **▲** / **▼** to select the chapter/track icon. Then, input the chapter/track number or use **◀** / **▶**.

#### Search **DVD** **VCD**

- 1 Press **◀◀** or **▶▶** during playback.  
The player will now go into SEARCH mode.
- 2 Press **◀◀** or **▶▶** repeatedly to select the required speed: **◀◀X2**, **◀◀X4**, **◀◀X8**, **◀◀X16**, **◀◀X100** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8**, **▶▶X16**, **▶▶X100** (forward).  
With a Video CD, the Search speed changes: **◀◀X2**, **◀◀X4**, **◀◀X8**, **◀◀X16** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8**, **▶▶X16** (forward).
- 3 To exit SEARCH mode, press PLAY.

## Operation with DVD and Video CD

### General Features (continued)

#### Still Picture and Frame-by-frame playback

**DVD VCD**

- 1 Press PAUSE/STEP on the remote control during playback.  
The player will now go into PAUSE mode.
- 2 You can advance the picture frame-by-frame by pressing PAUSE/STEP repeatedly on the remote control.
- 3 To exit still motion mode, press PLAY.

#### Slow Motion **DVD VCD**

- 1 Press PAUSE/STEP on the remote control during playback.  
The player will enter SLOW mode.
- 2 Use the ◀ or ▶ to select the required speed: ◀ 1/2, ◀ 1/4, ◀ 1/8 or ◀ 1/16 [(backward) - DVD only] or ▶ 1/2, ▶ 1/4, ▶ 1/8 or ▶ 1/16 (forward).
- 3 To return to normal PLAY, press PLAY.

#### **Note**

Slow motion playback in reverse is not applicable for Video CD.

#### Repeat **DVD VCD**

You can play a title/chapter/all/track on a disc.

Press REPEAT during playback to select a desired repeat mode.

##### **DVD Video Discs - Repeat Chapter/Title/Off**

- Chapter: repeats the current chapter.
- Title: repeats the current title.
- Off : does not play repeatedly.

##### **Video CDs - Repeat Track/All/Off**

- Track : repeats the current track
- All : repeats all the tracks on a disc.
- Off : does not play repeatedly.

#### **Note**

- On a Video CD with PBC, you must set PBC to Off on the setup menu to use the repeat function (See “PBC” on page 24).

#### Repeat A-B **DVD VCD**

To repeat a sequence in a title:

- 1 Press REPEAT A-B at your chosen starting point.  
“ A - ” appears briefly on the TV screen.
- 2 Press REPEAT A-B again at your chosen end point.  
“A - B” appears briefly on the TV screen, and the repeat sequence begins.
- 3 To cancel the sequence, press REPEAT A-B.

#### Time Search **DVD VCD**

The Time Search function allows you to start playing at any chosen time on the disc.

- 1 Press DISPLAY during playback. The on-screen display appears on the screen.  
The Time Search box shows the elapsed playing time of the current disc.
- 2 Within 10 seconds, press ▲ / ▼ to select the Time Search icon in the on-screen display.  
The “-:--:--” appears in the Time Search box.
- 3 Within 10 seconds, use the number buttons to enter the required start time. Enter hours, minutes, and seconds from left to right in the box.  
If you enter the wrong numbers, press CLEAR to remove the numbers you entered. Then enter the correct numbers.
- 4 Within 10 seconds, press SELECT/ENTER to confirm the start time.  
Playback starts from the selected time on the disc. If you enter an invalid time, playback will continue from the current point.

#### Last Scene Memory **DVD**

This player memorizes last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the player or switch off the player. If you load a disc that has the scene memorized, the scene is automatically recalled.





#### **Note**

This player does not memorize the scene of a disc if you switch off the player before commencing to play the disc.

## Operation with DVD and Video CD

### Special DVD Features **DVD**

#### Checking the contents of DVD Video discs: Menu

DVDs may offer menus that allow you to access special features. To use the disc menu, press MENU. Then, press the appropriate number button to select an option. Or, use the  /  /  /  buttons to highlight your selection, then press SELECT/ENTER.

#### Title Menu **DVD**





- 1 Press TITLE.  
If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu may appear.
- 2 The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- 3 To remove the title menu, press TITLE again.

#### Disc Menu **DVD**

Press MENU.  
The disc menu is displayed.

### Camera Angle **DVD**

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.

- 1 Press DISPLAY and then press the  /  to select a angle.  
The number of the current angle appears on the display window.
- 2 Select a desired angle pressing the  /  buttons.

### Changing the Audio Language **DVD**

Press AUDIO repeatedly during playback to hear a different audio language or audio track.


### Changing the Audio Channel **VCD**

Press AUDIO repeatedly during playback to hear a different audio channel (STER., LEFT or RIGHT).

### Subtitle **DVD**

Press S-TITLE repeatedly during playback to see the different subtitle languages.

#### Note

If  appears, the feature is not available on the disc.

## Operation with Audio CD and MP3/WMA Disc

### Playing an Audio CD and MP3/WMA

#### Disc **CD** **MP3** **WMA**

The unit can play MP3/WMA formatted recordings on CD-ROM, CD-R, or CD-RW discs.

#### Audio CD

Once you insert an audio CD a menu appears on the TV screen. Press **▲** / **▼** to select a track then press **PLAY** or **SELECT/ENTER** and playback starts.



#### MP3 / WMA

1. Press **▲** / **▼** to select a folder, and press **SELECT/ENTER** to see the folder contents.
2. Press **▲** / **▼** to select a track then press **PLAY** or **SELECT/ENTER**. Playback starts.



#### **N**otes

- If you are in a file list on the MP3/WMA menu and want to return to the Folder list, use the **▲** / **▼** to highlight **⏪** on the stop mode and press **SELECT/ENTER**.
- Press and hold **▲** / **▼** to go to the next / previous page.
- On a CD with MP3/WMA file and JPEG file, you can switch MP3/WMA and JPEG menu. Press **TITLE** on the stop mode and MP3/WMA or JPEG word on top of the menu is highlighted. Then, use **◀** / **▶** to select MP3/WMA or JPEG then press **SELECT/ENTER**.

#### MP3 / WMA disc compatibility with this player is limited as follows:

- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)
- The player cannot read an MP3/WMA file that has a file extension other than ".mp3" / ".wma".
- CD-R physical format should be ISO 9660
- If you record MP3 / WMA files using software that cannot create a file system (eg. Direct-CD) it is impossible to playback MP3 / WMA files. We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.
- File names should have a maximum of 8 letters and must incorporate an .mp3 or .wma extension.
- They should not contain special letters such as / ? \* : " < > | etc.
- The total number of files on the disc should be less than 999.

This unit requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback.

**Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.**

## Operation with Audio CD and MP3/WMA Disc

### Pause **CD** **MP3** **WMA**

- 1 Press PAUSE/STEP during playback.
- 2 To return to playback, press PLAY or press PAUSE/STEP again.

### Moving to another Track **CD** **MP3** **WMA**

- Press **I◀◀** or **▶▶I** briefly during playback to go to the next track or to return to the beginning of the current track.
- Press **I◀◀** twice briefly to step back to the previous track.
- In case of audio CD, to go directly to any track, enter the track number using the numbered buttons (0-9) during playback.

### Repeat Track/All/Off **CD** **MP3** **WMA**

You can play a title/chapter/all/track on a disc.

- 1 Press REPEAT when playing a disc. The repeat icon appears.
- 2 Press REPEAT to select a desired repeat mode.
  - Track: repeats the current track
  - All: repeats all the tracks on a disc.
  - Off(No display): does not play repeatedly.

### Search **CD** **MP3** **WMA**

- 1 Press **◀◀** or **▶▶** during playback.  
The player will now go into SEARCH mode.
- 2 Press **◀◀** or **▶▶** repeatedly to select the required speed: **◀◀X2**, **◀◀X4**, **◀◀X8** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8** (forward).
- 3 To exit SEARCH mode, press PLAY.




## Operation with JPEG Disc

### Viewing a JPEG disc **JPEG**

This unit can play discs with JPEG files. Before playing JPEG recordings, read the notes on JPEG Recordings on right.

- 1 Insert a disc and close the tray.**  
The JPEG menu appears on the TV screen.

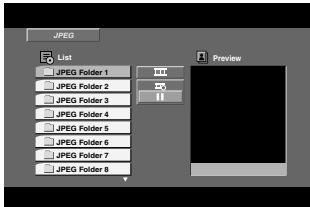

- 2 Press ▲ / ▼ to select a folder, and press SELECT/ENTER. A list of files in the folder appears.**

#### **T** Tip

If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight “...” and press SELECT/ENTER to return to the previous menu screen.

- 3 If you want to view a particular file, press ▲ / ▼ to highlight a file and press SELECT/ENTER or PLAY.**

Slide Show starts from the selected file if Speed option is not Off.

While viewing a file, you can press STOP(■) to move to the previous menu (JPEG menu).

#### **T** Tip

- Press MENU to move to the next page.
- There are four Slide Speed options: ■ : > (Slow), >> (Normal), >>> (Fast) and II (off).  
Use ▲ / ▼ / ◀ / ▶ to highlight the Speed. Then, use ◀ / ▶ to select the option you want to use then press SELECT/ENTER.
- If you set Speed option to Off, Slide Show is not active.

### Slide Show

Use ▲ / ▼ / ◀ / ▶ to highlight the ■ (Slide Show) then press SELECT/ENTER.

### Moving to another File

Press ◀◀ or ▶▶ once during viewing a picture to advance to the next file or to the previous file.

### Still Picture

- 1 Press PAUSE/STEP during slide show.  
The player will now go into PAUSE mode.
- 2 To return to the slide show, press PLAY or press PAUSE/STEP again.

#### **JPEG disc compatibility with this player is limited as follows:**

- Depending upon the size and number of JPEG files, it could take a long time for the DVD player to read the disc's contents. If you don't see an on-screen display after several minutes, some of the files may be too large — reduce the resolution of the JPEG files to less than 2760 x 2048 pixels and burn another disc.
- The total number of files and folders on the disc should be less than 999.
- Some discs may be incompatible due to a different recording format or the condition of disc.
- Ensure that all the selected files have the “.jpg” extensions when copying into the CD layout.
- If the files have “.jpe” or “.jpeg” extensions, please rename them as “.jpg” file.
- File names without “.jpg” extension will not be able to be read by this DVD player. Even though the files are shown as JPEG image files in Windows Explorer.


## Programmed Playback **CD** **MP3** **WMA**

The Program function enables you to store your favorite tracks from any disc in the player memory. A program can contain 300 tracks (Audio CD/MP3/WMA).

### 1 Insert a disc.

#### Audio CD and MP3/WMA Discs:

Audio CD or MP3/WMA menu appears as below.

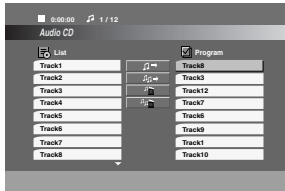

Audio CD Menu




MP3/WMA Menu

### 2 Select a track on the List.
 
### 3 Press PROGRAM. Or, select “ (Add)” icon then SELECT/ENTER to place the selected track on the Program list. Repeat to place additional tracks on the list.

#### Note

You can add all tracks in the disc. Select “ (Add All)” icon then press SELECT/ENTER.

### 4 Select the track you want to start playing on the Program list.

#### Tip

Press MENU to move to the next page.

### 5 Press PLAY or SELECT/ENTER to start.






Playback begins in the order in which you programmed the tracks and “PROG.” appears on the display window. Playback stops after all of the tracks on the Program list have played once.

### Repeat Programmed Tracks


You can play a title/chapter/all/track on a disc.

- 1 Press REPEAT when playing a disc. The repeat icon appears.
- 2 Press REPEAT to select a desired repeat mode.
  - Track: repeats the current track
  - All: repeats all the tracks on a disc.
  - Off (No display): does not play repeatedly.

### Erasing a Track from Program List

- 1 Use  /  /  /  to select the track that you wish to erase from the Program list.
- 2 Press CLEAR. Or, select “ (Delete)” icon then Press SELECT/ENTER to place the selected track on the Program list. Repeat to erase additional tracks on the list.

### Erasing the Complete Program List

Select “ (Del all)”, then press SELECT/ENTER. The complete Program for the disc is erased.

#### Note

The programs are also cleared when the disc is removed.


*To resume normal playback from programmed playback*  
Select a track on the List then press SELECT/ENTER. “PROG.” disappears from the display window.

## Operation with DivX Disc

The unit can play the MPEG4 encoded files (.avi, mpg, .mpeg, .divx etc) and subtitle files (.srt, .smi, sub).

### 1 Insert the MPEG4 encoded disc and close the tray.

The DivX menu appears on the TV screen.

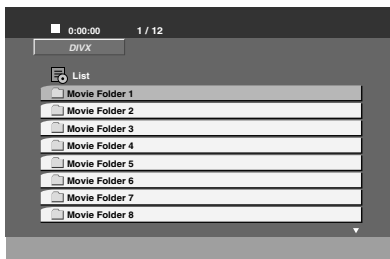

### 2 Press **▲** / **▼** to select a folder, and press **SELECT/ENTER** to see the folder contents.

### 3 Press **▲** / **▼** to select a track then press **PLAY** or **SELECT/ENTER**.

Playback starts.

## Pause **DivX**

1. Press PAUSE/STEP during playback.
2. To return to playback, press PLAY.

## Repeat Track/All/Off **DivX**

You can play a title/chapter/all/track on a disc.

- 1 Press REPEAT when playing a disc. The repeat icon appears.
- 2 Press REPEAT to select a desired repeat mode.
  - Track: repeats the current track
  - All: repeats all the tracks on a disc.
  - Off (No display): does not play repeatedly.

## Subtitle **DivX**

Press S-TITLE repeatedly during playback to see the different subtitle language.

## Search **DivX**

- 1 Press SCAN **◀◀** or **▶▶** during playback.
- 2 Press SCAN **◀◀** or **▶▶** repeatedly to select the required speed.
- 3 To exit SEARCH mode, press PLAY.

## Display **DivX**

Press DISPLAY during playback.

General playback status can be displayed on the TV screen.

### DivX disc compatibility with this player is limited as follows:

- Available resolution size of the DivX file is under 720x576 (W x H) pixel.
- The file name of the DivX subtitle is available by 20-40 characters (differs from language).
- If there is impossible code to express in the DivX file, it may be displayed as " \_ " mark on the display.
- **If the number of the screen frame is over 30 per 1 second, this unit may not operate normally.**
- **If the video and audio structure of recorded file is not interleaved, either video or audio is out-putted.**
- **If the file is recorded with GMC, the unit supports some of 1-point of the record level.**
  - \* GMC?  
GMC is the acronym for Global Motion Compensation. It is an encoding tool specified in MPEG4 standard. Some MPEG4 encoders, like DivX or Xvid, have this option. There are different levels of GMC encoding, usually called 1-point, 2-point, or 3-point GMC.

### Playable DivX subtitle file

- ".srt ", ".smi ", ".sub "

### Playable DivX file

- ".avi ", ".mpg ", ".mpeg "

### Playable Codec format

- "DIVX3.xx ", "DIVX4.xx ", "DIVX5.xx ", "XVID ", "MP43 ", "3IVX ", "MP42 "

### Playable Audio format

- "AC3 ", "DTS ", "PCM ", "MP3 ", "WMA "
  - Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
  - Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)


## Operation with KARAOKE

You can play KARAOKE (singing along) with karaoke disc by connecting a microphone to the unit.  
You can enjoy KARAOKE with a stereo-recorded disc, even if it is a non-karaoke disc, by reducing the singer's voice.

### Karaoke Basic Playback

- 1** Check if the system is connected.  
(Refer to the page 10-15.)
- 2** Turn on the powers of TV (or Amplifier) and DVD Karaoke and enter to the video mode on TV.
- 3** Press **▲ OPEN/CLOSE** to open the disc tray and load supplied karaoke disc in the tray with the label facing up.
- 4** Press **▲ OPEN/CLOSE** to close the tray.
- 5** Press **KARAOKE/DVD** twice to enter to the karaoke mode.

[TV Screen]

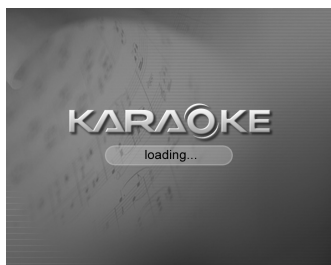

- 6** Turn on the powers of the wireless microphone or connect the microphone to the MIC 1 or MIC 2 jack.
- 7** Select the melody number you want by pressing **NUMERIC** buttons.  
If you cancel the selected melody number, press the **CLEAR**.
- 8** Press **PLAY (▶)**.  
The selected melody number is played.  
Sing in tone with microphone.  
After melody ends, it is stopped automatically and score appears.

### Karaoke Advanced Playback

#### To Adjust MIC Volume

Turn the **MIC VOLUME CONTROL** on the front panel clockwise to increase the volume, or counterclockwise to decrease it.

#### To Adjust ECHO Volume

You can give an echo effect to the sound from the microphones.

Turn **ECHO VOLUME KNOB (ECHO VOL.)** clockwise to increase the sound level, or counterclockwise to decrease it.

#### Key Control

You can change the key to suit your vocal range.  
You can adjust the key to 13 steps (6steps higher, 6steps lower and the original key).  
- The setting appears on the screen.

Press **KEY CONTROL (b/#)** repeatedly on the remote control or turn **KEY CONTROL (b/#)** on the front panel to find the key that suits your vocal range.

- To flatten the key one by one, press the **KEY CONTROL (b)** repeatedly during playback.
- To sharp the key one by one, press the **KEY CONTROL (#)** repeatedly during playback.
- To return to the original key, press the **KEY CONTROL (b/#)** repeatedly to appear the original key.

## Operation with KARAOKE

### Reserving the Songs

When you want to make a reservation of next melody, you can enjoy the most 8 melodies reservation Without waiting.

**1** Press the **NUMERIC** buttons to reserve melody number you want in the karaoke disc play mode.

Melody number appears on the TV screen.

**2** Press **PROGRAM**.  
The melody number is made a reservation.

**3** Repeat steps 1-2.  
You can reserve 8 songs.



After the one song finishes its playback, the next song will be playback automatically.

#### To cancel the reserved song

Each time you press **CLEAR**, the reserved song will be cancelled one by one.

#### To cancel or change the wrong reserved song

Press the **PROGRAM** to move to the desired position, then press the **CLEAR** to cancel the reserved song.

### Male/Female Function

If you want to sing a song of **MAN's** or **WOMEN's** key, press **MALE**(♂)/**FEMALE**(♀) button repeatedly to change **MAN's** or **WOMEN's** key.

### Tempo Change

You can use this function when you want to play fast or slow.

- Press **TEMPO +** repeatedly during singing to play faster.
- Press **TEMPO -** repeatedly during singing slower.

### Screen Change Function **VCD** **DVD**

This function is used when you want to change the current screen during playing karaoke disc.

Press the **DISC SELECT** (**DISC 1**, **DISC 2**, **DISC 3**) or **D.SKIP** button during playing karaoke disc.

It is played a screen existing another disc.

### Shadow Function

If Video CD caption and the song's subtitle are mixed up, the song's subtitle may be invisible. In this case, to highlight the song's subtitle, press **SHADOW**.

- It will be highlighted by background shadow image.

## Karaoke MENU Playback

### Preparation

Press **MENU** on the karaoke mode.

The main MENU appears on the screen.


#### Main MENU (On the TV screen)



### SETUP

**1** Select "1. SETUP" by pressing **▲** / **▼** on the main menu.

**2** Use **◀** / **▶** to select the desired option, and press **SELECT/ENTER**.

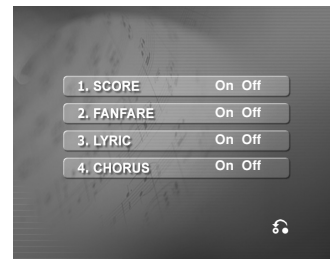

#### SCORE On/Off

**On** : When singing by selection of melody, song score comes out after one piece of song is ended.

To cancel it, select the **Off** .

#### FANFARE On/Off

**On** : In condition of **POWER ON**, scoring fanfare operates. The fanfare sound comes out after singing finished.

To cancel it, select the **Off** .

#### LYRIC On/Off

**On** : When singing by selection of melody, song lyric appears on the TV screen.

To cancel it, select the **Off** .

#### CHORUS On/Off

**On** : When singing by selection of melody, song chorus is heard a sound.

To cancel it, select the **Off** .




To move to the main menu, press **MENU** or **RETURN**.

# Operation with KARAOKE


## MUSIC LIST

### LOCAL SONG and POP SONG

- 1 Select "2. MUSIC LIST" by pressing the / on the main menu. The LOCAL SONG and POP SONG menu will be shown on the TV screen.

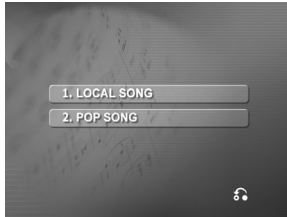


- 2 Select "1. LOCAL SONG" or "2. POP SONG" by pressing the / , and press SELECT/ ENTER. SONG LIST and SINGER LIST menu will be shown on the TV screen.

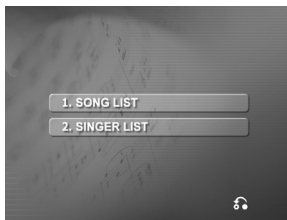


### SONG LIST

- 1 Select "1. SONG LIST" and select the initial of the song title you want by pressing the / , then press SELECT/ ENTER.

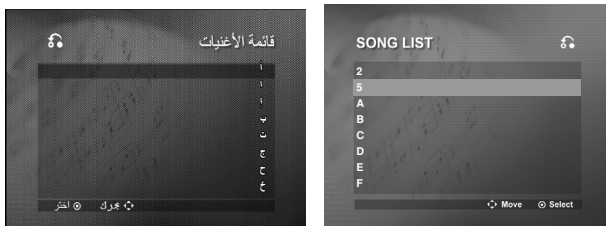

"1. LOCAL SONG" Menu      "2. POP SONG" Menu


- 2 Select the song title you want by pressing the / , and press SELECT/ ENTER.

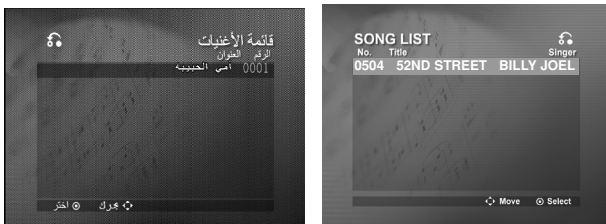

"1. LOCAL SONG" Menu      "2. POP SONG" Menu


### SINGER LIST

- 1 Select "2.SINGER LIST" and select the initial of the singer you want by pressing the / , and press SELECT/ ENTER.

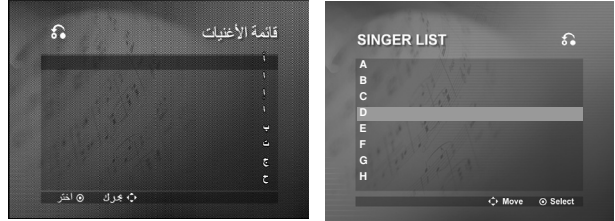


"1. LOCAL SONG" Menu      "2. POP SONG" Menu

- 2 Select the singer you want by pressing the / , and press SELECT/ ENTER.

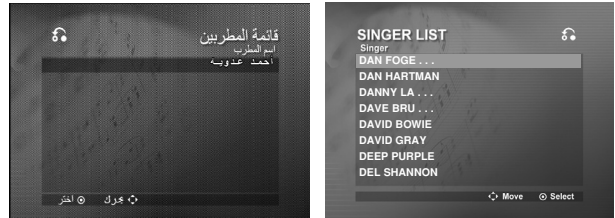

"1. LOCAL SONG" Menu      "2. POP SONG" Menu

- 3 Select the song title of the singer you want by pressing the / , and press SELECT/ ENTER.

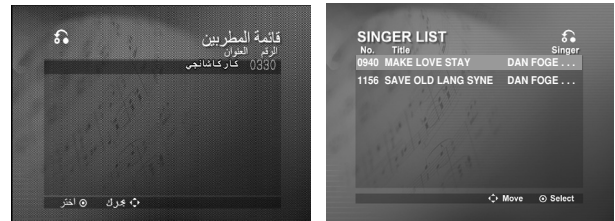

"1. LOCAL SONG" Menu      "2. POP SONG" Menu

### Note

To move the previous mode, select the by pressing the / , then press SELECT/ ENTER.



## Operation with KARAOKE

### RANDOM

- 1 Select "3. RANDOM" by pressing / on the main menu.




- 2 Press SELECT/ENTER to begin randomly.

### CHALLENGE

It has a function which enjoy a song game dividing by two teams of red team & blue team.

- 1 Select "4. CHALLENGE" by pressing / on the main menu.  
It appears as below.

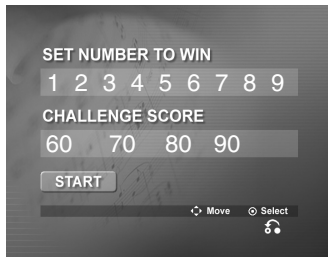

- 2 Select "SET NUMBER TO WIN" by pressing / , and select one of NUMERIC buttons 1~9 by pressing / to select winner's number, then press SELECT/ ENTER.
- 3 Select "CHALLENGE SCORE" by pressing / , and select one of 60,70,80 or 90 by pressing / to select success score, then press SELECT/ ENTER.
- 4 Select "START" by pressing / , then press SELECT/ ENTER.  
It appears as below.



- 5 Select number you want by pressing / and press SELECT/ ENTER.  
Sing along with the accompaniment.

- 6 Repeat step 4~5.  
Change the team of red team or blue team alternately.

- 7 When reaching the targeted winning number, the "CONGRATULATION!" will be shown on the TV screen.  
It appears as below.



- 8 Whether you keep going the song game or not, select "1. YES" or "2. NO" by pressing / as below.



## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the power cord into the wall outlet securely.</li> </ul>
The power is on, but the unit does not work.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD or, audio CD indicator in the DVD display is lit.)</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>
There is no sound or only a very low-level sound is heard.	<ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the correct input mode of the audio so you can listen to the sound from the unit.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio connecting cord is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Replace it with new one.</li> </ul>
The playback picture is poor.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
The unit does not start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD, or audio CD indicator in the DVD display is lit.)</li> </ul>
	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system and Regional code.)</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>A menu is on the TV screen.</li> </ul>	<ul style="list-style-type: none"> <li>Press the SET-UP button to turn off the menu screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>
Severe hum or noise is heard.	<ul style="list-style-type: none"> <li>The plugs and jacks are dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Wipe them with a cloth slightly moistened with alcohol.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>The speakers and components are connected poorly.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the speakers and components securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The unit is located with too close to the TV.</li> </ul>	<ul style="list-style-type: none"> <li>Move your TV away from the audio components.</li> </ul>
Radio stations cannot be tuned in.	<ul style="list-style-type: none"> <li>The antenna is positioned or connected poorly.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the antenna securely.</li> <li>Adjust the antennas and connect an external antenna if necessary.</li> </ul>
	<ul style="list-style-type: none"> <li>The signal strength of the stations is too weak (when tuning in with automatic tuning).</li> </ul>	<ul style="list-style-type: none"> <li>Tune in the station manually.</li> </ul>
	<ul style="list-style-type: none"> <li>No stations have been preset or preset stations have been cleared (when tuning by scanning preset stations).</li> </ul>	<ul style="list-style-type: none"> <li>Preset the stations.</li> </ul>
The remote control does not work properly.	<ul style="list-style-type: none"> <li>The remote control is not pointed at the remote sensor of the unit.</li> </ul>	<ul style="list-style-type: none"> <li>Point the remote control at the remote sensor of the unit.</li> </ul>
	<ul style="list-style-type: none"> <li>The remote control is too far from the unit.</li> </ul>	<ul style="list-style-type: none"> <li>Operate the remote control within about 23 ft (7 m).</li> </ul>
	<ul style="list-style-type: none"> <li>There is an obstacle in the path of the remote control and the unit.</li> </ul>	<ul style="list-style-type: none"> <li>Remove the obstacle.</li> </ul>
	<ul style="list-style-type: none"> <li>The batteries in the remote control are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the batteries with new ones.</li> </ul>
The sound mode or Pro Logic II mode cannot be changed.	<ul style="list-style-type: none"> <li>The system cannot change while playing a MP3 or WMA disc.</li> </ul>	<ul style="list-style-type: none"> <li>Insert such a CD disc.</li> </ul>



## Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 21).

Code	Language	Code	Language	Code	Language	Code	Language
6566	Abkhazian	7074	Fiji	7678	Lingala	8373	Singhalese
6565	Afar	7073	Finnish	7684	Lithuanian	8375	Slovak
6570	Afrikaans	7082	French	7775	Macedonian	8376	Slovenian
8381	Albanian	7089	Frisian	7771	Malagasy	8379	Somali
6577	Ameharic	7176	Galician	7783	Malay	6983	Spanish
6582	Arabic	7565	Georgian	7776	Malayalam	8385	Sudanese
7289	Armenian	6869	German	7784	Maltese	8387	Swahili
6583	Assamese	6976	Greek	7773	Maori	8386	Swedish
6588	Aymara	7576	Greenlandic	7782	Marathi	8476	Tagalog
6590	Azerbaijani	7178	Guarani	7779	Moldavian	8471	Tajik
6665	Bashkir	7185	Gujarati	7778	Mongolian	8465	Tamil
6985	Basque	7265	Hausa	7865	Nauru	8484	Tatar
6678	Bengali; Bangla	7387	Hebrew	7869	Nepali	8469	Telugu
6890	Bhutani	7273	Hindi	7879	Norwegian	8472	Thai
6672	Bihari	7285	Hungarian	7982	Oriya	6679	Tibetan
6682	Breton	7383	Icelandic	8065	Panjabi	8473	Tigrinya
6671	Bulgarian	7378	Indonesian	8083	Pashto, Pushto	8479	Tonga
7789	Burmese	7365	Interlingua	7065	Persian	8482	Turkish
6669	Byelorussian	7165	Irish	8076	Polish	8475	Turkmen
7577	Cambodian	7384	Italian	8084	Portuguese	8487	Twi
6765	Catalan	7465	Japanese	8185	Quechua	8575	Ukrainian
9072	Chinese	7487	Javanese	8277	Rhaeto-Romance	8582	Urdu
6779	Corsican	7578	Kannada	8279	Rumanian	8590	Uzbek
7282	Croatian	7583	Kashmiri	8285	Russian	8673	Vietnamese
6783	Czech	7575	Kazakh	8377	Samoan	8679	Volapük
6865	Danish	7589	Kirghiz	8365	Sanskrit	6789	Welsh
7876	Dutch	7579	Korean	7168	Scots Gaelic	8779	Wolof
6978	English	7585	Kurdish	8382	Serbian	8872	Xhosa
6979	Esperanto	7679	Laothian	8372	Serbo-Croatian	7473	Yiddish
6984	Estonian	7665	Latin	8378	Shona	8979	Yoruba
7079	Faroese	7686	Latvian, Lettish	8368	Sindhi	9085	Zulu

## Country Code List

Enter the appropriate code number for the initial setting "Country Code" (See page 25).

Code	Country	Code	Country	Code	Country	Code	Country
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SC	Seychelles
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SD	Sudan
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SE	Sweden
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SG	Singapore
AI	Anguilla	FJ	Fiji	LS	Lesotho	SH	Saint Helena
AL	Albania	FK	Falkland Islands	LT	Lithuania	SI	Slovenia
AM	Armenia	FM	Micronesia	LU	Luxembourg	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SK	Slovak Republic
AO	Angola	FR	France	LY	Libya	SL	Sierra Leone
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SM	San Marino
AR	Argentina	GA	Gabon	MC	Monaco	SN	Senegal
AS	American Samoa	GB	Great Britain	MD	Moldavia	SO	Somalia
AT	Austria	GD	Grenada	MG	Madagascar	SR	Suriname
AU	Australia	GE	Georgia	MH	Marshall Islands	ST	Saint Tome and Principe
AW	Aruba	GF	French Guyana	MK	Macedonia	SU	Former USSR
AZ	Azerbaijan	GH	Ghana	ML	Mali	SV	El Salvador
BA	Bosnia-Herzegovina	GI	Gibraltar	MM	Myanmar	SY	Syria
BB	Barbados	GL	Greenland	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GM	Gambia	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GP	Guadeloupe (French)	MQ	Martinique (French)	TF	French Southern Territories
BG	Bulgaria	GQ	Equatorial Guinea	MR	Mauritania	TG	Togo
BH	Bahrain	GR	Greece	MS	Montserrat	TH	Thailand
BI	Burundi	GS	S. Georgia & S. Sandwich Isls.	MT	Malta	TJ	Tadjikistan
BJ	Benin	GT	Guatemala	MU	Mauritius	TK	Tokelau
BM	Bermuda	GU	Guam (USA)	MV	Maldives	TM	Turkmenistan
BN	Brunei Darussalam	GW	Guinea Bissau	MX	Mexico	TN	Tunisia
BO	Bolivia	GY	Guyana	MY	Malaysia	TO	Tonga
BR	Brazil	HK	Hong Kong	MZ	Mozambique	TP	East Timor
BS	Bahamas	HM	Heard and McDonald Islands	NA	Namibia	TR	Turkey
BT	Bhutan	HN	Honduras	NC	New Caledonia (French)	TT	Trinidad and Tobago
BV	Bouvet Island	HR	Croatia	NE	Niger	TV	Tuvalu
BW	Botswana	HT	Haiti	NF	Norfolk Island	TW	Taiwan
BY	Belarus	HU	Hungary	NG	Nigeria	TZ	Tanzania
BZ	Belize	ID	Indonesia	NI	Nicaragua	UA	Ukraine
CA	Canada	IE	Ireland	NL	Netherlands	UG	Uganda
CC	Cocos (Keeling) Islands	IL	Israel	NO	Norway	UK	United Kingdom
CF	Central African Republic	IN	India	NP	Nepal	UM	USA Minor Outlying Islands
CG	Congo	IO	British Indian Ocean Territory	NR	Nauru	US	United States
CH	Switzerland	IQ	Iraq	NU	Niue	UY	Uruguay
CI	Ivory Coast	IR	Iran	NZ	New Zealand	UZ	Uzbekistan
CK	Cook Islands	IS	Iceland	OM	Oman	VA	Vatican City State
CL	Chile	IT	Italy	PA	Panama	VC	Saint Vincent & Grenadines
CM	Cameroon	JM	Jamaica	PE	Peru	VE	Venezuela
CN	China	JO	Jordan	PF	Polynesia (French)	VG	Virgin Islands (British)
CO	Colombia	JP	Japan	PG	Papua New Guinea	VI	Virgin Islands (USA)
CR	Costa Rica	KE	Kenya	PH	Philippines	VN	Vietnam
CS	Former Czechoslovakia	KG	Kyrgyzstan	PK	Pakistan	VU	Vanuatu
CU	Cuba	KH	Cambodia	PL	Poland	WF	Wallis and Futuna Islands
CV	Cape Verde	KI	Kiribati	PM	Saint Pierre and Miquelon	WS	Samoa
CX	Christmas Island	KM	Comoros	PN	Pitcairn Island	YE	Yemen
CY	Cyprus	KN	Saint Kitts & Nevis Anguilla	PR	Puerto Rico	YT	Mayotte
CZ	Czech Republic	KP	North Korea	PT	Portugal	YU	Yugoslavia
DE	Germany	KR	South Korea	PW	Palau	ZA	South Africa
DJ	Djibouti	KW	Kuwait	PY	Paraguay	ZM	Zambia
DK	Denmark	KY	Cayman Islands	QA	Qatar	ZR	Zaire
DM	Dominica	KZ	Kazakhstan	RE	Reunion (French)	ZW	Zimbabwe
DO	Dominican Republic	LA	Laos	RO	Romania		
DZ	Algeria	LB	Lebanon	RU	Russian Federation		
EC	Ecuador			RW	Rwanda		
EE	Estonia			SA	Saudi Arabia		
EG	Egypt			SB	Solomon Islands		
EH	Western Sahara						

## Specifications

### General

Power supply	Refer to the main label.
Power consumption	210W

### Tuner/Amplifier

FM Tuning Range	87.5 - 108.0 MHz or 65 -74 MHz, 87.5 -108.0 MHz
Intermediate Frequency	10.7 MHz
Signal to Noise Ratio	60/55 dB (Mono/Stereo)
Frequency Response	60 - 10000 Hz
AM Tuning Range	522 - 1611 kHz or 530 - 1610 kHz or 530 - 1720 kHz
Intermediate Frequency	450 kHz
Signal to Noise Ratio	35 dB
Frequency Response	100 - 1800 Hz
Output Power	Front: 100W + 100W (6Ω, THD 10 %), Center: 40W (6Ω, THD 10%) Rear: 40W + 40W (6Ω, THD 10 %)
T.H.D	0.2%
Frequency Response	42 - 25000 Hz
Signal-to-noise ratio	80 dB
Mass	5.5kg
External dimensions (W x H x D)	272 x 225 x 330 mm

### Cassette tape player/DVD/VCD/CD player

Mass	6.5kg
External dimensions (W x H x D)	272 x 225 x 330 mm

### DVD/VCD/CD player

Frequency response (audio)	40 - 18000 Hz
Signal-to-noise ratio (audio)	More than 70 dB (1 kHz)
Signal-to-noise ratio (video)	More than 60 dB (1 kHz)
Dynamic range (audio)	More than 70 dB
Video output	1.0 V (p-p), 75 Ω
S-video output	(Y) 1.0 V (p-p), 75 Ω (C) 0.3 V (p-p), 75 Ω
Component Video output	(Y) 1.0 V (p-p), 75 Ω (Pb)/(Pr) 0.7 V (p-p), 75 Ω

### Cassette tape player

Tape Speed	3 kHz ± 3%
Wow Flutter	0.25% (MTT -111, JIS-WTD)
F.F/REW. Time	120sec (C-60)
Frequency Response	125 - 8000Hz
Signal to Noise Ratio	43dB(P/B)/43dB(R/B)
Channel Separation	45dB(P/B)/42dB(R/P)
Erase Ratio	52dB (MTT-5511)

### Speakers

Speaker Name	Front Speaker (L/R)	Center Speaker	Rear Speaker (L/R)
Type	3 Way 3 Speaker	2 Way 2 Speaker	2 Way 2 Speaker
Impedance	6 Ω	6 Ω	6 Ω
Frequency Response	60 - 20000 Hz	120 - 20000 Hz	150 - 20000 Hz
Sound Pressure Level	86 dB/W (1m)	84 dB/W (1m)	84 dB/W (1m)
Rated Input Power	100 W	40 W	40 W
Max. Input Power	200 W	80 W	80 W
Net Dimensions (W x H x D)	260X470X235.5mm	200X108X110mm	108X150X110mm
Net Weight	6.31 kg	0.85 kg	0.80 kg



P/NO : MFL37641078