



**CAR CD/MP3/WMA Receiver**  
**OWNER'S MANUAL**  
**MODEL : LAC7700RS**

Please read this instruction booklet carefully and completely before installing, operating or adjusting this product.



# Safety note



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT SPLIT COVER(OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving, and always be fully aware of all driving condition. Do not change settings, or any functions. Pull over in a safe and legal manner before attempting such operations.



Do not use for many hours at extremely low or high temperature. (-10~60°C)



 
To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture.



The temperature of unit's outside can be extremely high, please use the unit after proper installation in your vehicle.



**CAUTION :** This product uses a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain it for future reference. Should the unit require maintenance, contact an authorized service center.

Performing controls, adjustments, or carrying out procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure.

Visible laser radiation when open. DO NOT STARE INTO BEAM.

## Safety note



- A defective or soiled disc inserted into unit can cause sound to drop out during playback.
- Handle the disc by holding its inner and outer edges.
- Do not touch the surface of the unlabeled side of the disc.



Do not stick paper or tape etc. on the surface.



 
Do not expose the disc to direct sunlight or excessive heat.



This unit cannot play 8cm disc (use 12cm disc only).



- Clean the disc before playback. Wipe the disc from the center outward with a cleaning cloth.
- Never use solvents such as benzine or alcohol to clean the disc.



Periodically wipe the contacts on the back of the control panel with a cotton swab moistened with alcohol.



**Bluetooth**

Bluetooth® wireless technology is a system which allows radio contact between electronic devices within a max. range of 10 meters. Connecting individual devices under Bluetooth® wireless technology does not incur any charges. A mobile phone with Bluetooth® wireless technology can be operated via the Cascade if the connection was made via Bluetooth® wireless technology.

### Operating condition for using a Bluetooth function

- Close windscreen.
- Turn off the air conditioner/ heater.
- Stop the vehicle or drive at low speed.
- Make the call in a quiet location.
- There may be differences in call quality depending on phone type, road conditions weather, etc.
- Using the phone while driving may cause unexpected accidents.
- The Bluetooth function may not operate properly with certain types of Bluetooth phones.



# Table of contents

Safety note	2-3
Table of contents	4
Before use	5
Control panel	6
Remote control	7
Installation	8
Connection diagram	9
Connection	10
Basic operation	11-14
Bluetooth operation	15-19
Radio operation	20
RDS operation	21
CD/MP3/WMA operation	22-23
Aux operation	24
Troubleshooting	25
Specifications	26
Bluetooth phone compatibility list	27

A section whose title has one of the following symbols is applicable only to the disc represented by the symbol.

 Audio CDs

 MP3 files

 WMA files



### Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.




This product is manufactured to comply with Directive 2005/83/EEC(ANNEX I , 3.2.9), 72/245/EEC, and 2006/95/EC.

## Before use


### Detaching the control panel

You can detach the control panel when leaving the car. When detaching or attaching the control panel, be careful not to damage the connectors on the back of the control panel and on the panel holder.

1. Press the “▲” button to unlock the control panel.
2. Push the control panel to right.
3. Pull the control panel out of the unit.
4. Put the detached control panel into the protective case.

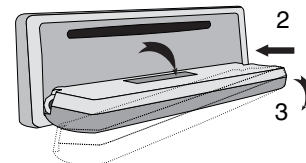

Protective Case

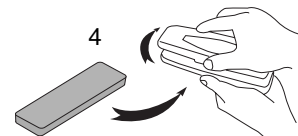




Control panel

### Attachable control panel


- 1 Attach part **A** of the control panel to part **B** of the unit.
- 2 Attach part **C** of the control panel to part **D** of the unit while pushing the control panel to right.
- 3 Close the front panel.

#### **Caution**

- When detaching or attaching the control panel, do not press the display or control buttons.
- The control buttons may not work properly if the control panel is not attached properly. If this occurs, gently press the control panel.
- Do not leave the control panel in any area exposed to high temperatures or direct sunlight.
- Do not drop the control panel or otherwise subject it to strong impact.
- Do not allow such volatile agents as benzine, thinner, or insecticides to come into contact with the surface of the control panel.
- Do not try to disassemble the control panel.

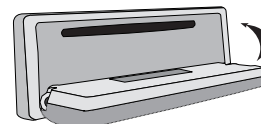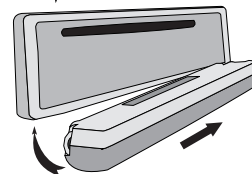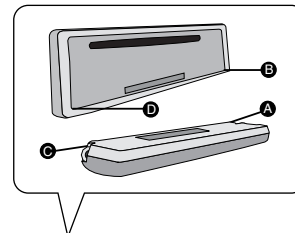



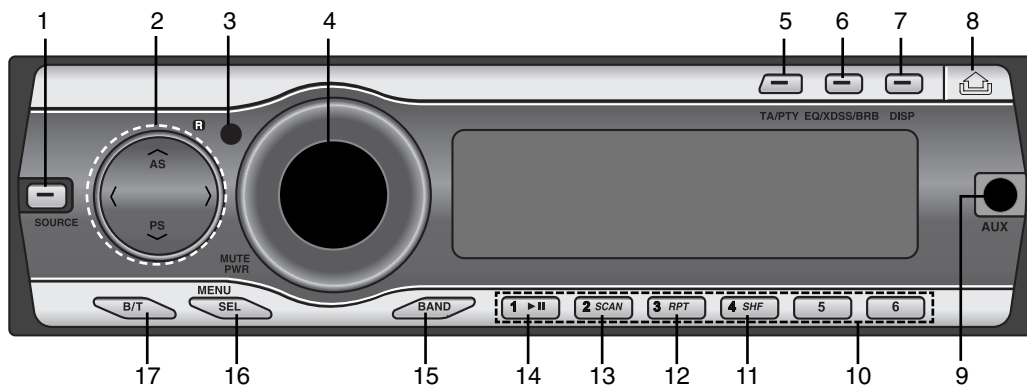












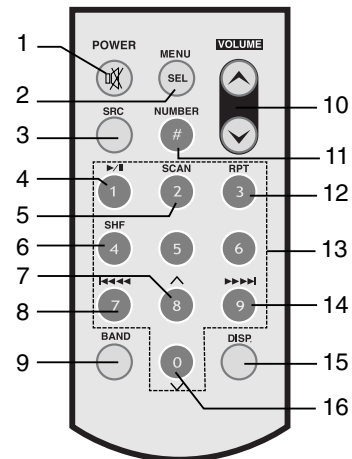
# Control Panel



- |   |   |    |                      |
|---|---|----|----------------------|
| 1 | [SOURCE]                                    | 9  | AUX In [AUX]         |
| 2 | • Skip / Search </>                         | 10 | Preset Station [1-6] |
|   | • Seek/ Tune                                | 11 | Shuffle [SHF]        |
|   | • Auto Store [AS]                           | 12 | Repeat [RPT]         |
|   | • Preset Scan [PS]                          | 13 | Intro Scan [SCAN]    |
|   | • MP3 Track +10/-10 $\Delta/\nabla$ MP3 WMA | 14 | Play/Pause >/        |
|   | • Folder Up/Down $\Delta/\nabla$ MP3 WMA    | 15 | [BAND]               |
| 3 | Remote Sensor                               | 16 | • [MENU]             |
| 4 | • Volume                                    |    | • Select [SEL]       |
|   | • [MUTE]                                    | 17 | Bluetooth [B/T]      |
|   | • Power [PWR]                               |    |                      |
| 5 | • Traffic Announcement [TA]                 |    |                      |
|   | • Programme Type [PTY]                      |    |                      |
| 6 | • Equalizer [EQ]                            |    |                      |
|   | • Extreme Dynamic Sound System [XDSS]       |    |                      |
|   | • Bass Reverb Blaster [BRB]                 |    |                      |
| 7 | Display [DISP]                              |    |                      |
| 8 | Release/Eject $\blacktriangle$              |    |                      |

# Remote control

- 1 Power [POWER] / Mute 
- 2 Select [MENU/SEL]
- 3 Source [SRC]
- 4 Play / Pause 
- 5 Intro Scan [SCAN]
- 6 Shuffle [SHF]
- 7 • MP3 Track +10    
 • Folder Up   
- 8 • CD Skip / Search   
 • Seek / Tune 
- 9 [BAND]
- 10 Volume Up  / Down 
- 11 Number [#]
- 12 Repeat [RPT]
- 13 Number [0 -9]
- 14 • CD Skip / Search   
 • Seek / Tune 
- 15 Display [DISP.]
- 16 • MP3 Track -10    
 • Folder Down   

 
 
 


## Battery installation

- 1 Remove the battery holder with a sharp product like a ball point pen.
- 2 Install the battery on the battery holder.
- 3 Install the battery holder back into its original position.

### Note

- Use only one CR2025 (3V) lithium battery.
- Remove the battery if the remote control is not used for a long period of time.
- Do not leave the product in a hot or humid place.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic materials.




# Installation

## Basic Installation

Before installing, make sure that the ignition-switch is set to OFF and remove the terminal of the car battery to avoid short-circuiting.


- 1 Remove the existing receiver unit.
- 2 Make the necessary connections.
- 3 Install the installation sleeve.
- 4 Install the unit into the installation sleeve.

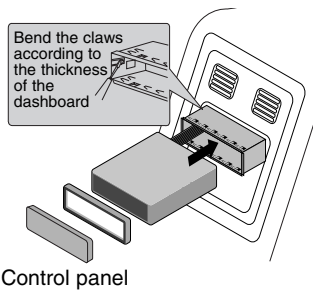

## Removing the existing receiver unit.


If there is already an installation sleeve for the receiver unit in the dashboard, it must be removed.

- 1 Remove the rear support from the unit.
- 2 Remove the control panel and trim ring from the unit.
- 3 Insert the lever **A** into the hole on one side of the unit. Perform the same operation on the other side and pull the unit out from the mounting sleeve.

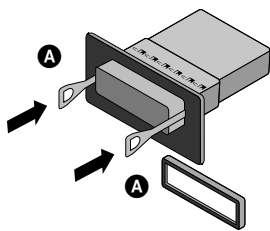

## ISO-DIN Installation


- 1 Slide the unit into the ISO-DIN frame.
- 2 Fit screws removed from the old unit.
- 3 Slide the unit and frame into the dash opening.
- 4 Install the dash panel or adapter plate.
- 5 Install the trim ring to the unit.
- 6 Install the control panel to the unit.

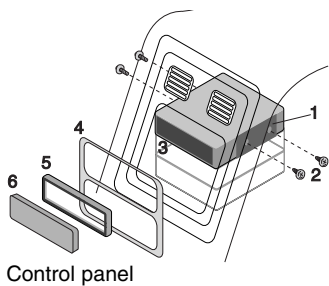



# Connection diagram


Before connecting, make sure that the ignition switch is set to OFF, and remove the battery  $\ominus$  terminal to avoid short circuits.

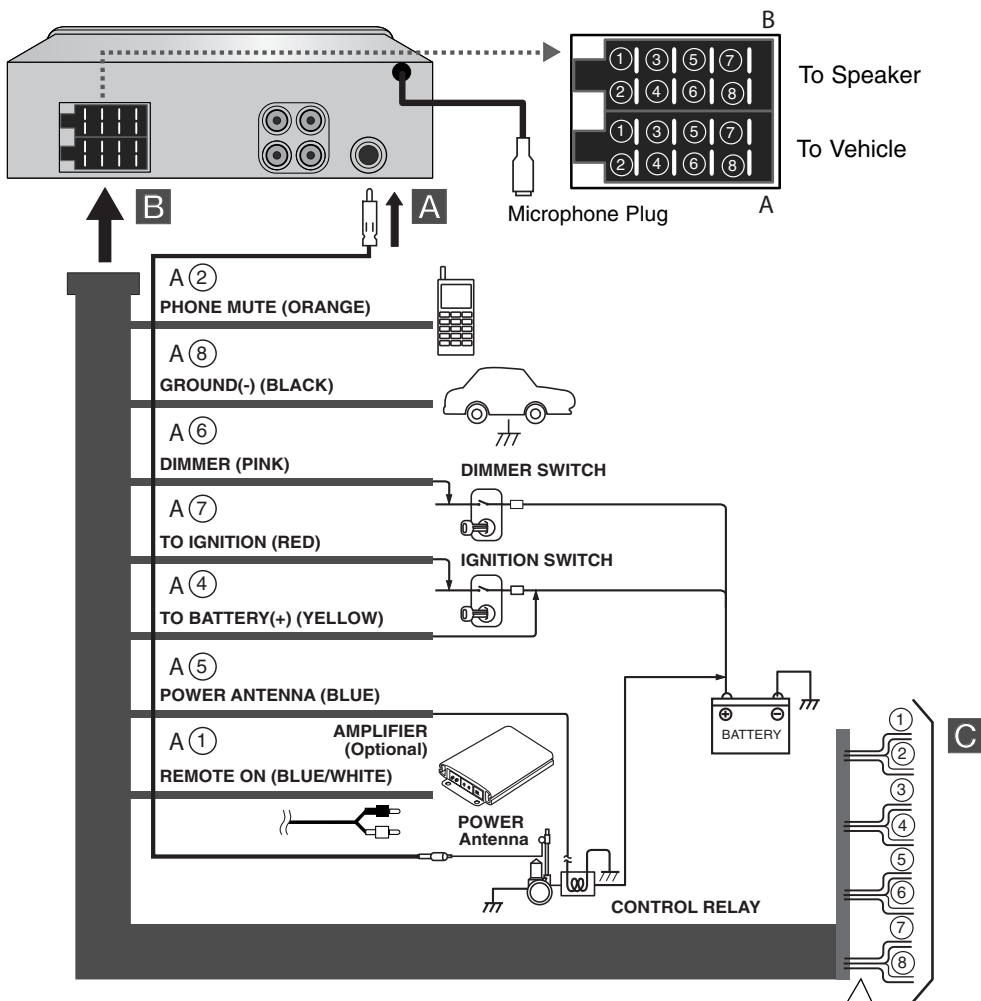

- B ①. Violet : Rear Right +
- B ②. Violet/ Black Stripe : Rear Right -
- B ③. Gray : Front Right +
- B ④. Gray / Black Stripe : Front Right -
- B ⑤. White : Front Left +
- B ⑥. White/Black Stripe : Front Left -
- B ⑦. Green : Rear Left +
- B ⑧. Green/ Black Stripe : Rear Left -

# Connection

## C Speaker Connections

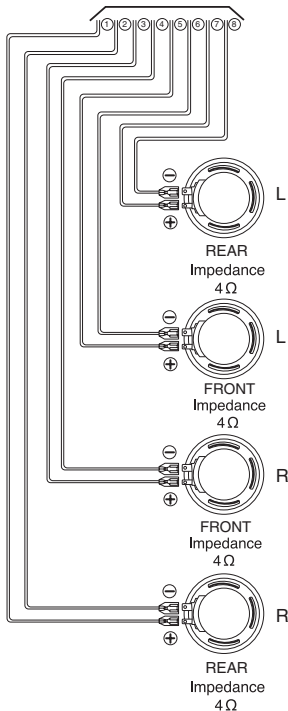


## A From antenna

## B To the wiring of the vehicle colors of leads.

- **BLACK** : This lead is for the ground connection.
- **ORANGE** : This lead is for the phone line connection.
- **PINK** : This lead is for the dimmer line connection.
- **RED** : This lead is for connection to the power supply terminal when the ignition switch is set to ACC.
- **YELLOW** : This lead is for connection to the battery (back-up) terminal from which power is always supplied.
- **BLUE** : This lead is for the power antenna connection.
- **BLUE/WHITE** : This lead is for the remote amplifier on connection.

## Connecting to Auxiliary Equipment (Optional)


Connect the **AUDIO OUTPUT** jack of this unit to the **AUDIO INPUT** jack of the Auxiliary Equipment.

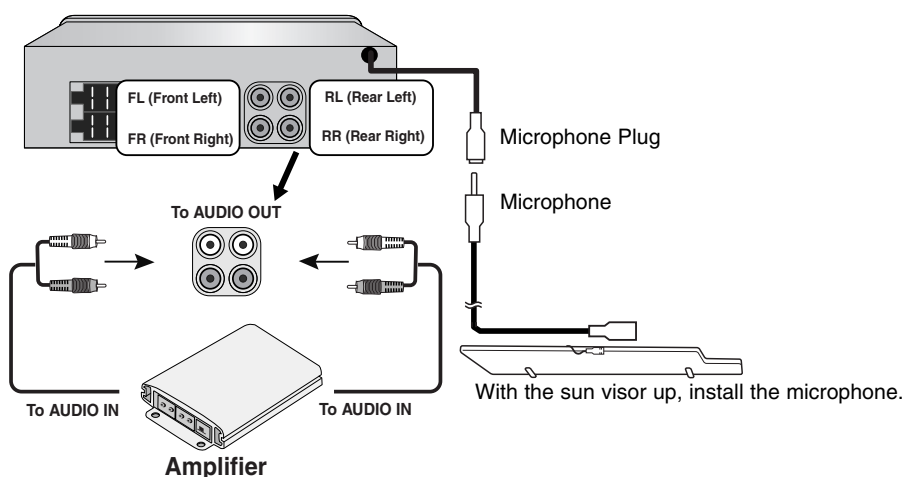

# Basic operation



## Turning the unit on

Press **MUTE/PWR (POWER/**  on the remote control) or any other button.


### **Note**

When you insert the CD in the CD slot, the unit turns on.

## Turning the unit off


Press and hold **MUTE/PWR (POWER/**  on the remote control).

## Insert a disc

- 1 Press  to open the control panel.
- 2 Draws the disc, and starts playback automatically.

## Eject a disc

Press  to open the control panel. The disc automatically ejects from the loading slot.

When the disc is ejected by pressing  during playback, it will be loaded automatically after 10 seconds unless you pull out disc from the unit.

## Selecting a source



Press **SOURCE** repeatedly to select a source.

The indicator lights up in the following order. TUNER → CD → AUX → TUNER...

### **Note**

You cannot select a source if it is not ready.

 
## Adjusting the volume

Rotate **MUTE/PWR** (Press **VOLUME**   on the remote control) to adjust the sound level.

### **Note**

When you turn the unit off, the current volume level is automatically memorized. Whenever you turn the unit back on, it will operate at the memorized volume level.

## Mute

- 1 Press **MUTE/PWR (POWER/**  on the remote control) to cut the sound.
- 2 To cancel it, press again.

## Checking the clock

You can see the clock pressing **DISP (DISP.** on the remote control).

# Basic operation

## Changing the general settings

- 1 Press and hold **MENU/SEL** (**MENU/SEL** on remote control) so that one of menu items appears.
- 2 Press **MENU/SEL** (**MENU/SEL** on remote control) to scroll between menus.  
AF ON → REG ON → TA ALARM → PI SOUND → AUX ON → AUX 00dB → DEMO ON → BEEP 2ND
- 3 Rotate **MUTE/PWR** clockwise or unclockwise to select one of the settings specified belows.  
(Press **VOLUME** ^ v on the remote control.)
- 4 Press and hold **MENU/SEL** (**MENU/SEL** on remote control) to finish the setting.

### ● **AF(Alternative frequency) ON / OFF**

When the reception quality drops, the tuner automatically changes to another station in the network, broadcasting a better reception quality, using the PI and AF codes.

#### **AF ON :**

wherever you drive, you can continue to listen to the same program without interruptions.

#### **AF OFF :**

Only station name will be displayed. In case of poor reception no alternative station can be used.

### ● **REG (Region) ON / OFF**

#### **REG ON :**

The unit switches to another station, within the same network, broadcasting the same program when the receiving signals from the current station become weak.

#### **REG OFF :**

The unit switches to another station, within the same network when the receiving signals from the current station become weak. (This mode, the program may differ from the one currently received.)

### ● **TA(Traffic Announcement) ALARM / SEEK**

#### **TA ALARM :**

When a newly tuned station has no TP information for 5 seconds, a double beep sound is output.

#### **TA SEEK :**

When the newly tuned station does not receive TP information for 5 seconds, the receiver retunes to the next station which has the same PI as the last station, but has the TP information.

### ● **PI (Programme Identification) SOUND / MUTE**

#### **PI SOUND :**

If the sound of a station with different PI is heard intermittently, the receiver mutes the sound after 1 second.

#### **PI MUTE :**

If the sound of a station with different PI is heard intermittently, the receiver mutes the sound right now.

## Basic operation

- **AUX (Auxiliary) ON / OFF**

It is possible to use auxiliary equipment with this unit. Activate the auxiliary setting when using auxiliary equipment connected to this unit.

- **AUX ON**

- When using a auxiliary equipment.

- **AUX OFF**

- When not using a auxiliary equipment.

- **AUX (Auxiliary) 00dB / +6dB**

You can adjust the volume level of each source to prevent radical changes in volume when switching between sources.

You can set to 0 dB or +6 dB

If the input level of the connected component is not high enough, increase the input level properly. Without adjusting the line input level, you may be surprised at a loud sound when you change the source from the external component to another source.

- **DEMO ON / OFF**

You can change the initial indication on the display to information name (function name, EQ name, etc...) while listen to a source.

- **DEMO ON**

- Displays information name while listening to source.

- **DEMO OFF**

- Cancels the function.

- **BEEP 2ND / ALL**

Sets the beep sound every time a button is pressed.

- **BEEP 2ND**

- The beep is generated when a key is long pressed. (1 sec)

- **BEEP ALL**

- The beep is generated when any key is pressed.

### Using the EQ (Equalizer)

Press **EQ/XDSS/BRB** repeatedly. The indicator lights up in the following order.

Pop → Classic → Rock → Jazz → Vocal → Salsa → Samba → User1 → User2 → Off

- Pop : Optimized for R&B, Soul and Country music.
- Classic : Optimized for orchestral music.
- Rock : Optimized for Hard Rock and Heavy Metal music.
- Jazz : Sweet sound with soft feeling.
- Vocal : Powerful realism with strong sound quality.
- Salsa : Reproduces salsa music acoustics.
- Samba : Reproduces samba music acoustics.
- User1 : Use the menu to set the sound level you want.
- User2 : Use the menu to set the sound level you want.

You can adjust each sound level to your preference. Once you select a USER mode and then make an adjustment, it automatically stored for the currently selected USER mode.

Refer to the "Adjusting the sound level" on the page 14.



## Basic operation

### Adjusting the sound level

- 1 Press **MENU/SEL** (**MENU/SEL** on the remote control) repeatedly to select the mode you want to adjust from volume, bass, middle, treble, balance and fader.  
The indicator lights up in the following order.  
VOL → BAS → MID → TRB → BAL → FAD
- 2 Rotate the **MUTE/PWR.** (Press **VOLUME** ^ v on the remote control) to adjust the sound quality.

Indication	Turn right	Turn left
<b>VOL</b>	Increase the volume level.	Decrease the volume level.
<b>BAS</b>	Increase the bass level.	Decrease the bass level.
<b>MID</b>	Increase the middle level.	Decrease the middle level.
<b>TRB</b>	Increase the treble level.	Decrease the treble level.
<b>BAL</b>	Decrease the level of the left speaker(s).	Decrease the level of the right speaker(s).
<b>FAD</b>	Decrease the level of the front speaker(s).	Decrease the level of the rear speaker(s).

#### **Note**

When EQ, BRB or XDSS+ is set to "Off", you can adjust the sound level (BAS, MID, TRB) settings.

### XDSS+ (Extreme Dynamic Sound System)

- 1 Press and hold **EQ/XDSS/BRB**.
- 2 Each time you press and hold the button, the modes change as follows.  
XDSS+ → BRB (TBB → 3D → SBB)  
XDSS+ : Improve the treble, bass sound.

### BRB (Bass Reverb Blaster)

- 1 Press and hold **EQ/XDSS/BRB**.
- 2 Each time you press and hold the button, the modes change.
- 3 Press **EQ/XDSS/BRB** repeatedly to select sub BRB.
  - TBB (Turbo-Bass Blaster) : Improve the bass sound to make it spectacular.
  - 3D (3D-TremD Blaster) : Positions audio effects real time in 3D space.
  - SBB (Sound field Boost Blaster) : Extremely wide stereo imaging and improved low frequency bass.

# Bluetooth operation

## Using a Bluetooth wireless connection

Your unit supports Bluetooth wireless connections. You can set up a wireless link with Bluetooth phone.

## Starting Bluetooth on your phone

Your phone's Bluetooth feature may be set to off by default. To use your car Bluetooth feature, Bluetooth must be turned on in your phone.


### Note

Refer to your phone's user guide.



## Pairing your unit and Bluetooth phone

Pairing links your unit and Bluetooth phone, and is required only once for the initial setup. Before you start the pairing procedure, make sure the Bluetooth feature is turned on in your Bluetooth phone. Refer to your Bluetooth phone's user guide.

- 1 Press and hold **B/T** to connect your Bluetooth phone.  
If connecting through a Bluetooth phone, the handsfree connection or headset connection may operate depending on the type of phone.  
With connection via Bluetooth technology, HFP (Hands Free Profile) is prioritized over HSP (Head Set Profile).
- 2 The unit displays the PIN code enter screen. PIN : 1234
- 3 The unit may request permission to bond with your phone.  
The  indicator flashes.  
To cancel, press and hold **B/T** again.
- 4 You can set up a wireless link with Bluetooth phone.  
Refer to your phone's user guide.
- 5 The Bluetooth phone displays the device name, select the device.
- 6 The Bluetooth phone displays the PIN code enter screen, enter the PIN code 1234.
- 7 If the connection is successful, the Bluetooth phone is registered (Device 1–5).
- 8 When your unit successfully paired with your Bluetooth phone, the flashing of indicator stops.

### Note

- Your unit keeps lists of pairing you recently connected. A maximum of 5 pairing numbers can be saved.
- Unlike the Hands-free functionality, Headset connection will allow only two functions "answering calls" and "making a call from the latest call".

# Bluetooth operation

## Changing the Bluetooth settings

- 1 Press **B/T** so that one of menu items appears.
- 2 Press **▲/AS** or **▼/PS** to scroll between menus.  
Connection ↔ BT Setting
- 3 Press **B/T** to enter the "BT Setting" menu.
- 4 Press **▲/AS** or **▼/PS** up or down to scroll between sub menus.  
Auto Connection On ↔ Auto Answer On ↔ HF VOL
- 5 Press **<** or **>** left or right to select the settings of your choose.

### ● Auto Connection On / Off

#### ON :

Bluetooth phone with a previous record showing that it has successfully connected will automatically start the connection process when starting the car.

#### OFF :

Cancels the function.

### ● Auto Answer On / Off

#### ON :

If you set the automatic answering function on, hands-free answering call is possible.

#### OFF :

Cancels the function.

### ● HF VOL (Setting range : 0-35)

After connected, it is necessary to adjust the volume of Bluetooth's voice.

It is possible to adjust the volume using the **MUTE/PWR** button when talking on the phone.

## Connecting a Bluetooth phone

After being registered, it is necessary to connect your Bluetooth phone from this unit.

- 1 Press **B/T** to enter the "Connection" menu.
- 2 Press **B/T** to connect a Bluetooth phone to this unit.  
The message "Connect?" is displayed.
- 3 Press **B/T** again.  
While connecting, the "Connected" is displayed.

### ✦ Note

Your unit keeps lists of pairing you recently connected. A maximum of 5 pairing numbers can be saved.

## Disconnecting a Bluetooth phone

It is possible to disconnect your Bluetooth phone from this unit.

- 1 Press **B/T** so that one of menu items appears.
- 2 Press **▲/AS** or **▼/PS** up or down to select the message "Discon?".
- 3 Press **B/T** to disconnect a Bluetooth phone from the unit.



# Bluetooth operation



## Answering and Ending a call

Your unit, Bluetooth phone, or both may ring when you receive a call, press **B/T** to answer a call. To end a call, press and hold **B/T**.

### **Note**

If the Call-ID service is available, the caller's phone number is displayed.

## Rejecting a call

When your unit rings, press and hold **B/T**.

### **Note**

If "REJECT" function is unusable, then the phone connected to the device does not support the reject call function.

## Missed call notification

When an incoming call is not answered, the missed call message is displayed on the your screen.

- 1 The "?☒" appears on the screen.
- 2 Press **B/T** to place a call.
- 3 Press **B/T** to place a call to entered phone number.
- 4 To end the call and hang up the phone, press and hold **B/T** button.

## Auto transfer

It is possible to select the automatic connection between your Bluetooth phone and this unit.

- 1 Press **B/T** to answer the call.
- 2 Press **B/T** again.

The "Private" is displayed.

If the private mode is selected on the unit, press **B/T** to return to the call to hands-free mode. (This feature is only available on phones with Hands-free profile.)

Or press and hold **B/T** to return to the call to hands-free mode. (This feature is only available on phones with Headset profile.)

## Making a call from the latest call : Last call?

Your phone keeps a lists of your recently received and dialed even if the calls did not connected. The lists are sorted from newest to oldest entries.

Your unit keeps recorded of your recently received and dialed on phone.

- 1 Press **B/T** to place a call.
- 2 Press **B/T** to place a call to entered phone number.

The "Calling" appears on the screen.

There is case that sending is done by pressing **B/T** button for a long time depending on type of Bluetooth phone. (For basic setting, press **B/T** button shortly.)

### **Note**

- When you want to make an international call, press **>** to add "+".  
Press **<** to delete "+".
- "+" can only be added when the detail list of Missed call, Dialed call or Received call is selected.

# Bluetooth operation

## Dial using a number from the last answered :

Your unit keeps a record of your recently received and display.

- 1 Press **B/T** to enter the menu.
- 2 Press **▲/AS** or **▼/PS** up or down to select the call number.
- 3 Press **B/T** to place a call to entered phone number.  
The "Calling" appears on the screen.

### Note

- When you want to make an international call, press **>** to add "+".  
press **<** to delete "+".
- "+" can only be added when the detail list of Missed call, Dialed call or Received call is selected.

## Storing a call number in last answered.

If you press any of the preset button 1~6, you can easily store up to 6 phone numbers and later recall with the press the button.

- 1 Press **B/T** to enter the menu.
- 2 Press **▲/AS** or **▼/PS** up or down to select the call number.
- 3 Press one of preset buttons 1~6 and hold until the beep sound.  
The "Save to.." appears on the screen.
- 4 The selected phone number has been stored in memory.  
The next time, you press the same preset button, the phone number is recalled from memory.

## Making a call from the preset list

It is possible to make a call from the preset phone number list.

- 1 Press **B/T** to enter the menu.
- 2 Press the preset button 1~6, the phone number is recalled from memory.
- 3 Press **B/T** to place a call.

## Pairing your unit and Bluetooth device (MP3 Player, MP3 Phone...)

When you activate your Bluetooth device's linked unit, you can listen to MP3 with wireless connections.

The method of use for a Bluetooth device is the same as when using a Bluetooth phone.

- Refer to the page 15 for details.

## Playing MP3 files

When you turn Bluetooth on, your Bluetooth device displays "Bluetooth" on the home screen.

The Bluetooth remains on until you turn the device off.

Press **SOURCE** repeatedly to select Bluetooth.

The indicator lights up in the following order.

TUNER → CD → AUX → BT → TUNER...

To play an MP3 file stored on your Bluetooth device, refer to your Bluetooth device's user guide.

# Bluetooth operation



## Bluetooth Profiles

In order to use Bluetooth technology, devices must be able to interpret certain profiles.

This unit is compatible with following profiles.

GAP (Generic Access Profile)

HSP (Hands Set Profile)

HFP (Hands Free Profile)

GAVDP (Generic Audio/Video Distribution Profile)

A2DP (Advanced Audio Distribution Profile)

AVDTP (Audio/Video Distribution Transport Profile)

AVRCP (Audio/Video Distribution Remote Control Profile)

### GAP

GAP is short for Generic Access Profile. This is a basic profile of Bluetooth wireless technology.

### HFP

HFP is short for Hands-Free Profile. This profile is used for hands-free phoning with the devices featuring Bluetooth wireless technology.

### HSP

HSP is short for Head Set Profile. This profile is used for connecting a headset and for communicating terminal wireless technology.

### GAVDP

This profile uses an Initiator (INT), a device (such as a portable player) that initiates a signalling procedure to send a request to an Acceptor (ACP), - such as headphones etc. Although this profile specifies signalling transaction procedures between two devices to set up, terminate and reconfigure streaming channels, using GAVDP alone, it is required to use GAVDP in combination with profiles that depend on this profile - the AVRCP and the VDP.

### A2DP

Mobile phones and devices with A2DP high quality stereo bluetooth profile.

This profile is based on the GAVDP, and allows advanced audio to be transmitted (audio streaming) from a Source (SRK) - such as a CD player, to a Sink (SNK), such as headphones.

### AVRCP

Based on the GAP Profile, this uses a Controller (CT) - PDA, computer mobile phone etc., which sends a command to a Target (TG) - TV, discman, headphone etc. The command can be to Play, record, colour control, volume control etc., depending on the nature of the devices involved and the scenario. The commands are transported by a new additional protocol, called the Audio/Video Control Transport Protocol (AVCTP). Some scenarios defined are Remote Control from a Separate Controller, Remote Control and Audio Stream Between Two Devices, and Remote Controller with LCD.

# Radio operation

## Listening to radio stations

- 1 Press **SOURCE** to select the tuner.
- 2 Press the **BAND** repeatedly to select a band.  
The indicator lights up in the following order. FM1 → FM2 → FM3 → MW(AM)
- 3 **Auto Search** : Press </> (|◀◀ ◀◀/▶▶ ▶▶| on the remote control).  
When a station is received, searching stops.  
**Manual Search** : Press and hold </> (|◀◀ ◀◀/▶▶ ▶▶| on the remote control) until "MANUAL" appears, and then press it repeatedly.  
The frequencies move up or down step by step.

## Storing and recalling broadcast frequencies

You can easily store up to 6 broadcast frequencies for later recall at the touch of a button.

- 1 Press **BAND** to select desired band you want to store.
- 2 Select the desired frequency.
- 3 Press one of preset buttons 1~6 and hold until the beep sound.  
The number you have pressed will flash in the preset number indicator and then remain lit. The selected radio station frequency has been stored in memory.
- 4 Repeat steps 1 ~ 3 to preset other stations.  
The next time, you press the same preset button, the radio station frequency is recalled from the memory.

### Note

- Up to 18 FM stations, 6 for each of three FM bands and 6 MW(AM) stations can be stored in the memory.
- When a station is stored on the preset numbers on which another station of the same band has already been preset, the previously preset station is automatically erased.

## Auto search memory

This function lets you automatically store the 6 strongest broadcast frequencies.

- 1 Press **∧/AS** until "AUTO STORE" appears.  
The six strongest broadcast frequencies will be stored under preset button 1~6 in the order of their signal strength.
- 2 To cancel, press **∧/AS**.

## To scan the preset stations

Press **V/PS**. Each preset station appears. To cancel, press **V/PS**.

## To tune in the preset stations

Press **BAND** to select the desired band and press the desired preset button 1~6.  
The preset station of the preset button 1~6 is displayed and the preset station is received.

# RDS operation

## RDS Display options

In normal RDS operation the display will indicate the station name. Pressing **DISP** enables you to cycle through the various data types in the following sequence:

CT → FREQUENCY → PTY → RT → PS

- **CT** (Time controlled by the channel)
- **PTY** (Programme type recognition)
- **RT** (Radio text recognition)
- **PS** (Programme Service name)
- **PI** (Programme Identification)
- **AF** (Alternative Frequencies for the actual programme)
- **TP** (Traffic programme Identification)
- **TA** (Traffic Announcement Identification)

## PTY (Programme Type) function

To select a certain program type out of the reception band, the following procedure can be used.

- 1 Press and hold **TA/PTY** to select a programme types.
- 2 After, press and hold **TA/PTY** repeatedly for selecting each mode.  
Music group → Speech group → Search off

- 3 Press one of preset buttons 1~6

Each time this button is pressed, the display mode changes as follows.

No	Music group	No	Speech group
1.	Pop M, Rock M	1.	News, Affairs, Info
2.	Easy M, Light M.	2.	Sport, Educate, Drama
3.	Classics, Other M	3.	Culture, Science, Varied
4.	Jazz, Country	4.	Weather, Finance, Children
5.	Nation M, Oldies	5.	Social, Religion, Phone In
6.	Folk M	6.	Travel, Leisure, Document

### Note

RDS is only available for FM reception.

## TA (Traffic Announcement) function

TA reception allows the unit to switch temporarily to a Traffic Announcement from the current source (another FM station, CD, or other connected components).

To switch the TA (Traffic Announcement) function on or off, press **TA/PTY**.

### • **TA ON**

Traffic programs and announcements can be automatically received using TP/TA features.

### • **TA OFF**

Traffic programs and announcements can not be received using TP/TA features.

# CD/MP3/WMA operation

## Playing an Audio CD and MP3/WMA Disc

The unit can play MP3/WMA formatted recordings on CD-ROM, CD-R or CD-RW discs. Before playing MP3/WMA recordings, read the notes on MP3/WMA Recordings on page 26. If you change the source, CD play also stops (without ejecting the CD). Next time you select "CD" as the source, CD play starts from where playback has been stopped previously.

- To directly play a file, press **NUMBER (#)** on remote control and then press the track number with **0-9** number.

### Pause

- 1 Press **▶/||** during playback.
- 2 To return to playback, press **▶/||** again.

### Skip to next track/file

Press briefly **>** (**▶▶▶▶▶** on the remote control) to select the next track or file.

### Skip to previous track/file

Press briefly **<** (**◀◀◀◀◀** on the remote control) within 3 seconds of playing time.

### Return to the beginning of the current track/file






Press briefly **<** (**◀◀◀◀◀** on the remote control) after 4 seconds of playing time.

### Search

Press and hold **</>** (**◀◀◀◀/▶▶▶▶▶** on remote control) for about 1 second during playback and then release at the point you want.






## Intro scan

The first 10 seconds of each tracks/files (**SCAN**) or each files in the current selected folder (**■ SCAN**) on the disc are played.

- 1 Press **SCAN**.
  - **■ SCAN**   (or **SCAN** ) appears on the display window. Press and hold **SCAN** for about 2 seconds during playback.
  - **SCAN** appears on the display window.  
- 2 Press **SCAN** again.
  - **SCAN** or **■ SCAN** disappear from the display window and The intro scan is cancelled.

## Repeat

The current selected tracks/files (**1 RPT**) or folder (**■ RPT**) on the disc is played repeatedly.

- 1 Press **RPT** during playback.
  - **1 RPT** appears on the display window.   
- 2 Press and hold **RPT** for about 2 seconds during playback.
  - **■ RPT** appears on the display window.  
- 3 Press **RPT** again.
  - **1 RPT** or **■ RPT** disappear from the display window and the repeat mode is cancelled.

# CD/MP3/WMA operation

## Shuffle

All of the tracks/files (**SHF**) or the current selected folder (■ **SHF**) on the disc is played randomly.

- 1 Press **SHF** during playback.
  - ■ **SHF** (MP3 WMA) (or **SHF** CD) appears on the display window.Press and hold **SHF** for about 2 seconds during playback.
  - **SHF** appears on the display window. (MP3 WMA)
- 2 Press **SHF** again.
  - **SHF** or ■ **SHF** disappear from the display window and the random playback is cancelled.

### Note

During random playback, if you press < (I-◀◀ ◀◀ on remote control), you won't go back to the previous track.

## CD TEXT / ID3 TAG (CD MP3 WMA)

When playing a disc containing information, you can see the CD TEXT/ID3 TAG information.

In CD TEXT, information about the disc (disc title, performer and track title) is recorded.

In a ID3 TAG, information about the file (album title, Performer name, song title) is recorded.

In a WMA Content, information about the file (song title, Performer name) is recorded.

If there is no information, "NO TEXT" will be shown in the display window.

Press **DISP** repeatedly during MP3/WMA/CD TEXT file playback.

## To go to a particular quickly (+10/-10 buttons) (MP3 WMA)

(If there is no folder or one folder.)

Press **▲/AS** (▲ on remote control) to skip to the next 10 track, and press **▼/PS** (▼ on remote control) to skip to the previous 10 track.

## To skip to the next or previous folder (MP3 WMA)

(If there are more than two folders.)

Press **▲/AS** (▲ on remote control) to skip to the next folder, and press **▼/PS** (▼ on remote control) to skip to the previous folder.


### Note

Time display appearing on the display part when playing VBR file may vary and there may be some difference from actual time (both progress time and VBR are displayed at the same time when playing file).

# AUX operation

## Playing an Auxiliary Equipment

You can connect Auxiliary Equipment to this unit.  
Connect one to the external device jack using the line input cable (not supplied), and the other to the AUX input jack on the control panel.

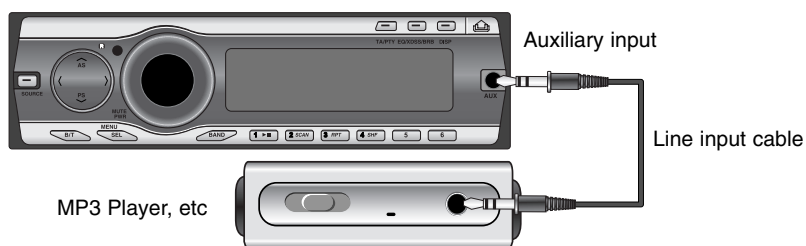

- 1 Press **SOURCE** to select the AUX as source.  
AUX IN appears in the display.
- 2 Turn on the connected Auxiliary Equipment and start playing the source.
- 3 Adjust the volume.

### Note

- Before operating the Auxiliary Equipment using the following procedure, select the external input correctly. (Refer to the page 13 for details.)
- If the input level of the Auxiliary Equipment connected to the AUX input jack is not high enough, adjust the input level properly. (Refer to the page 13 for details.)



# Troubleshooting



Symptom	Cause	Correction
Power doesn't turn on. The unit doesn't operate.	<ul style="list-style-type: none"> <li>Leads and connectors are not properly connected.</li> <li>The fuse is blown.</li> <li>Noise and other factors are causing the built-in microprocessor to operate incorrectly.</li> </ul>	<ul style="list-style-type: none"> <li>Confirm once more that all connections are correct.</li> <li>Rectify the problem that caused the fuse to blow, and then replace it. Be very sure to install the correct fuse with the same rate.</li> <li>Turn the unit off and then on.</li> </ul>
Playback is not possible.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> <li>The loaded disc is of a type this unit cannot play.</li> </ul>	<ul style="list-style-type: none"> <li>Clean disc.</li> <li>Check what type the disc.</li> </ul>
No sound is heard. The volume level will not rise.	<ul style="list-style-type: none"> <li>Cables are not connected correctly.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the cables correctly.</li> </ul>
There's no sound.	<ul style="list-style-type: none"> <li>The volume level is low.</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the volume.</li> </ul>
There's audio skipping.	<ul style="list-style-type: none"> <li>This unit is not firmly secured.</li> </ul>	<ul style="list-style-type: none"> <li>Secure this unit firmly.</li> </ul>
The unit does not operate correctly even when the appropriate remote control buttons are pressed.	<ul style="list-style-type: none"> <li>Battery power is low.</li> </ul>	<ul style="list-style-type: none"> <li>Load new battery.</li> </ul>



# Specifications

**MP3/WMA Disc compatibility with this unit is limited as follows:**

1. Sampling Frequency / 8 - 48kHz (MP3) 22.05 - 48kHz (WMA)
2. Bit rate / within 8 - 320kbps (include VBR) (MP3) 32 - 320kbps (WMA)
3. CD-R/CD-RW file system should be "ISO 9660"
4. If you record MP3/WMA files using software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it will not be possible to playback MP3/WMA files. We recommend that you use "Easy-CD Creator" which creates an ISO9660 file system.

**Customers should also note that permission is required in order to download MP3/WMA files and music from the Internet.**

**Our company has no right to grant such permission.**

**Permission should always be sought from the copyright owner.**

**GENERAL**

Output Power	.50W x 4CH (Max.)
Power Source	.DC 12V
Speaker impedance	.4Ω
Ground System	Negative
Dimensions (W x H x D)	.180 x 51 x 171 mm (Without Control Panel)
Net Weight	.2.0 kg

**CD SECTION**

Frequency Response	.20 Hz-20 kHz
S/N Ratio	.85 dB
Distortion	.0.05%
Channel Separation (1kHz)	.60 dB

**RADIO SECTION**

<b>FM</b>	
Frequency Range	.87.5-107.9 or 87.5-108 MHz
S/N Ratio	.53 dB
Distortion	.0.7%
Usable Sensitivity	.12 dBμV
<b>AM (MW)</b>	
Frequency Range	.520-1720 or 522-1620 kHz
S/N Ratio	.45 dB
Distortion	.1.0%
Usable Sensitivity	.28 dBμV

**AUX SECTION**

Frequency Response	.20 Hz-20 kHz
S/N Ratio	.80 dB
Distortion	.0.05 %
Channel Separation (1kHz)	.45 dB
Max Input Level (1kHz)	.1.2 V (35 KΩ)

**BLUETOOTH SECTION**

TX POWER	.4 dBm
Frequency Range	.2400-2483.5 MHz
Version	.Bluetooth 2.0 certified

# Bluetooth phone compatibility list



Bluetooth list and manufacturing company applicable

NR : Not Recommended

NC : Not Compatible

Company List		Company List		Company List	
Nokia	3230	Motorola	6060	Sony-	K750i (NR)
	3250		A1000	Ericsson	K800i (NR)
	3650		A760 (NR)		P990i (NR)
	5300		A780i (NR)		S700i
	5500		E1000		T610
	6021		E1070 (NR)		T628
	6103		E680 (NR)		V600i
	6131		E680i (NR)		V800
	6230		KRZR K1 (NR)		W550i
	6230i		L6		W710i (NR)
	6233		L7		W810i
	6270		RAZA V3i		W850i (NR)
	6280		ROKR E2 (NR)		Z600
	6600		U6		Z608
	6630		V360	Siemens	EF81
	6650		V3ROHS (NR)		S65
	6670	V3X (NR)		SK65	
	6680	V500		SL75	
	6681	V525		SX1	
	6820a	V600i		SXG75	
	7370	Samsung	SGH-D500	Panasonic	X800
	7600		SGH-D600	Sazem	myX6-2
	7610		SGH-D820	Pantech	PG8000 (NR)
	8800		SGH-D900		PG6200
	8910i		SGH-E788	NEC	N850
	9500		SGH-E900		N930
	E50		SGH-X820		N730 (NR)
E61	SGH-Z540V		Blackberry	7130v (NC)	
E62	LG		KG245		8070v
E70			KG800	SHARP	GX15
N71		M4410 (NR)			
N73		U890			
N80					
N90					
N93					
N-Gage					
N-Gage QD					




***STEERING REMOTE CONTROL***

# Table of Contents

<b>Attachment Parts</b> .....	<b>30</b>
<b>Specifications</b> .....	<b>30</b>
<b>Safety Precautions</b> .....	<b>31</b>
<b>Appellation</b> .....	<b>32</b>
<b>Before Use</b> .....	<b>33</b>
Install the specified battery in this unit. ....	33
Replacing the battery .....	33
<b>Installation</b> .....	<b>34-35</b>
Installing the unit on a Left-Hand-Drive Car. ....	35

## Attachment Parts

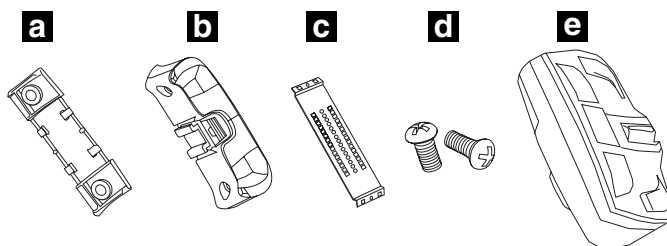

- a** Cover holder
- b** Holder Wheel
- c** Belt
- d** Screw
- e** Remote control

## Specifications

Power source .....	3 V DC
Dimensions .....	31(W) X 59(H) X 27.6(D)mm
Weight .....	45g
Wavelength .....	940 nm ± 50nm
Output .....	type;12 mw/sr per Infrared LED

- Design and specifications are subject to change without notice.

# Safety Precautions


## WARNING

- Keep the lithium battery out of reach of children. Should the battery be swallowed, immediately consult a doctor.
- Avoid installing this unit in such a location where the operation of safety devices such as airbags is prevented by this unit. Otherwise, there is danger of a fatal accident.
- Avoid installing this unit in such a location where the operation of the steering wheel and the gearshift lever may be prevented. Otherwise, it may result in a traffic accident.
- In case you operate this unit unavoidably during driving, do not neglect ahead carefully. Otherwise, you will be ready to run the risk of being involved in a traffic accident.
- If any of the following troubles occurs, immediately stop the use of this unit and consult with a dealer from whom you purchased unit:
  - the unit is smoking.
  - the unit is emitting abnormal odor.
  - a foreign object has entered the unit.
  - liquid has been spilled on or into the unit.If you continue to use this unit without a remedy, the unit may be damaged badly, which leads to a serious accident or fire.

## CAUTION

- Do not recharge, disassemble, heat or dispose of battery in fire.
- Use a CR2025 (3 V) lithium battery only. Never use other type of battery with this unit.
- Do not handle the battery with metallic tools.
- When disposing of used batteries, please comply with governmental regulation or environmental public institution's rules that apply in your country /area.
- Always check carefully that you are loading battery with its (+) and (-) poles facing in the proper directions.
- Installation of this unit requires specialized skills and experience. Installation of this unit should be entrusted to a dealer from whom you purchased this unit.
- Install this unit using only the parts supplied with this unit. If other parts are used, this unit may be damaged or dismounted itself, which leads to an accident or trouble.
- Install this unit as required by this manual. Failure to do so may cause an accident.
- Do not install this unit near the doors where rainwater is likely to be spilled on the unit. Incurring of water into the unit may cause smoking or fire.
- The volume of the car stereo should be so adjusted that you can hear a loud sound occurring outside your car. If any happening sound outside your car is deafened by music from the car stereo when you are driving, this condition can be a factor of being involved in a traffic accident.
- Do not leave this unit free inside the car. When the car stops or turns a curve, the unit might drop on the floor. If the unit is rolled and put under the brake pedal, it might prevent the driver from braking well, causing a serious trouble. Be sure to fix this unit to the steering wheel.
- Do not disassemble or modify this unit. To do so may cause a fault.

# Appellation

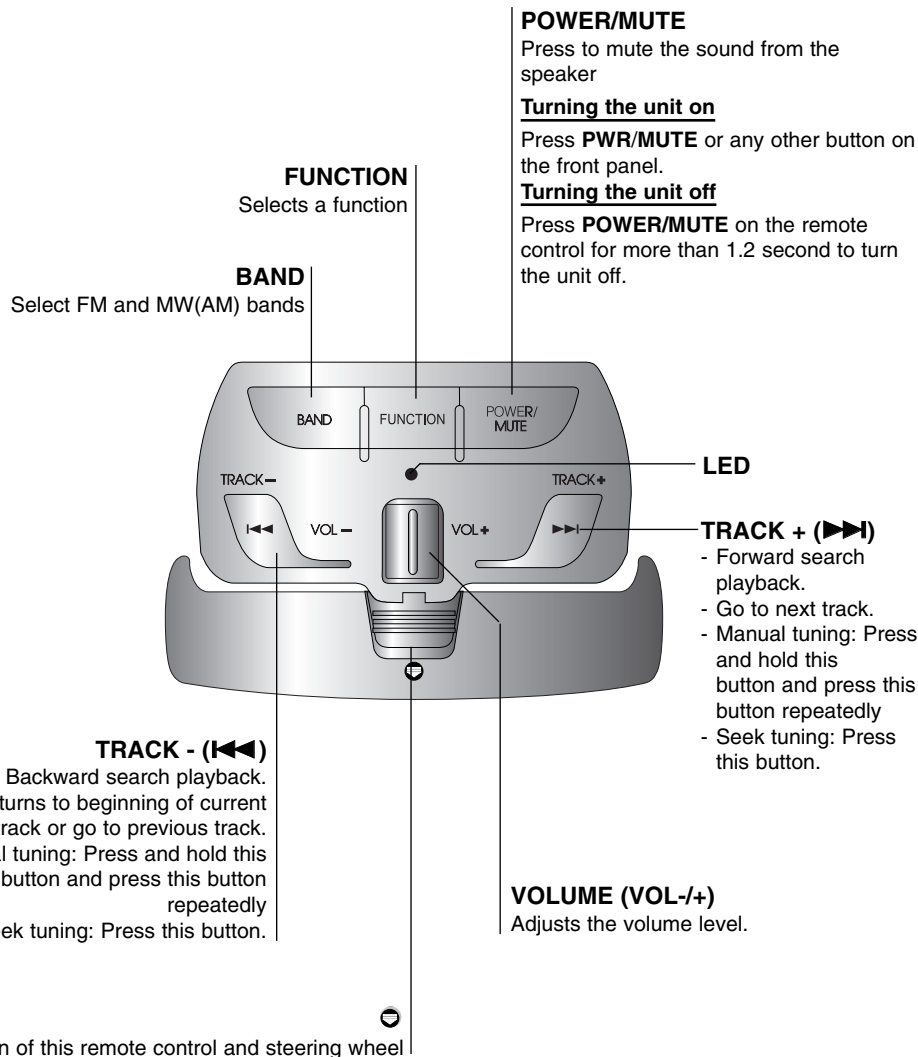

## NOTES


- Button on the car receiver head unit and remote control unit with same name have the same function.
- Depending on the car receiver, there may not be some buttons with the same names as those on this unit.
- This unit can not be used for a car receiver that does not accept a remote control unit.



## Before Use

### Install the specified battery in this unit

Open the back lid of this unit and place a lithium battery “CR2025” in this unit with its positive (+) side up.

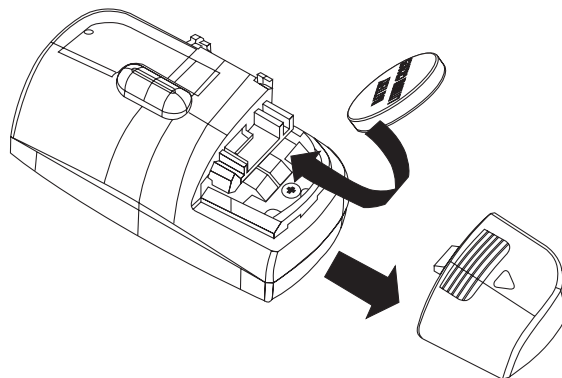


### NOTES

- Use only one CR2025 (3V) lithium battery.
- Remove the battery if the remote control is not used for long.
- Do not recharge, disassemble, heat or dispose of the battery in fire.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic materials.
- In the event of battery leakage, wipe the remote control completely clean and install a new battery.
- Always check carefully that you are loading battery with its (+) and (-) poles facing in the proper directions.
- Do not eat lithium battery.

### Replacing the battery


Replace the battery in the unit using non metallic tapered bar.

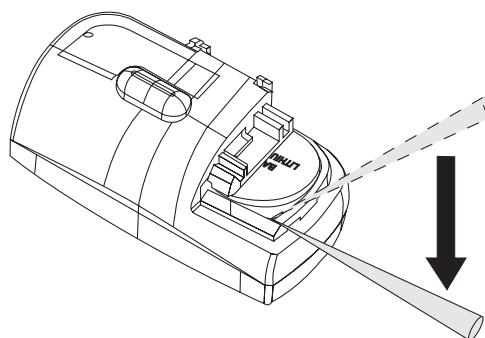

# Installation

## ⚠ WARNING


- Avoid installing this unit in such a location where the operation of safety devices such as airbags is prevented by this unit. Otherwise, there is danger of a fatal accident.
- Fix this unit securely to the steering wheel with the belt attached to the unit. If this unit is loose, it disturbs driving stability, which may result in a traffic accident.
- Do not attach this unit to the outer circumference of the steering wheel. Otherwise, it disturbs driving stability, causing a traffic accident. Always attach this unit to the inner circumference of steering wheel as shown.

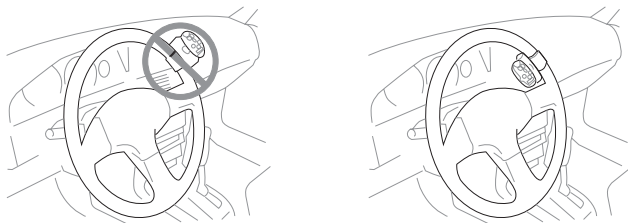


## NOTES

- Do not install this unit in such a place as may obstruct the driver's view.
- Since interior layout differs depending on the type of vehicle, the ideal installation location for the unit also differ. When installing the unit, select a location that assures optimum transmission of signals from the unit to car receiver.

## Left-Hand-Drive Car

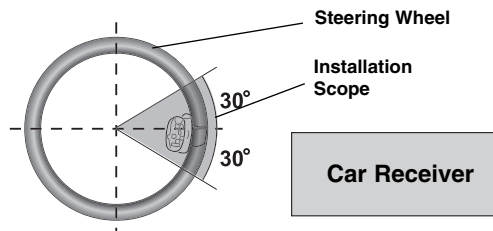

## Right-Hand-Drive Car

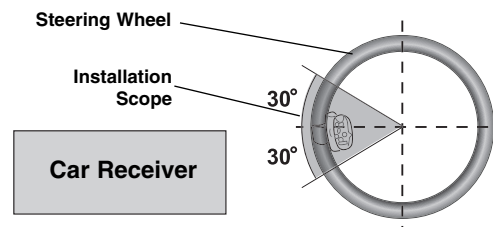

- If you install in place other than installation scope, this unit is not operated.


# Installation

## Installing the unit on a Left-Hand-Drive Car.


- When the unit is installed on a Right-Hand-Drive car, the horizontal position are inverted.

1. Secure Cover holder **a** to the inner circumference of the steering wheel with belt **c**.


Fit the Cover holder **a** to the steering wheel so that the arrow-marked side faces the driver as shown by picture.

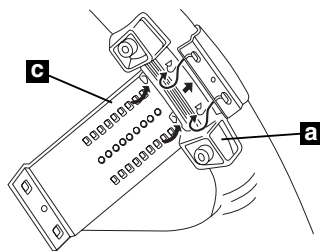


2. Cut the extra portion of the belt at the center of the cover holder.

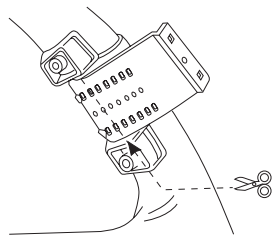

3. Install holder wheel **b** on the cover holder **a** and secure with screws **d**.  
Tighten the screw with driver.

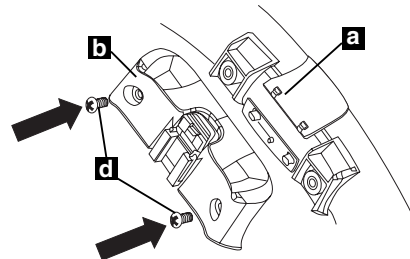

4. Install the remote control unit **e** in the holder.  
When removing the remote control unit from the holder, move the corrugated release section toward the steering wheel as far as possible before sliding the remote control unit toward you.

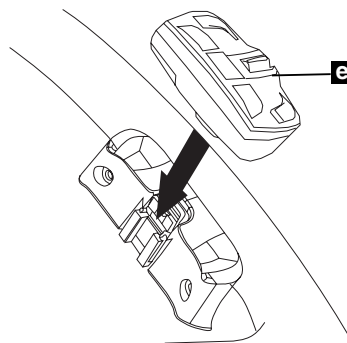



P/NO : MFL36538228