



LCD TV | PLASMA TV | OWNER'S MANUAL

LG Electronics Inc.

LCD TV | PLASMA TV OWNER'S MANUAL

LCD TV MODELS	PLASMA TV MODELS
32LC2D	42PC1D
32LC2DB	50PC1D
37LC2D	
37LC2DB	
42LC2D	
42LC2DB	

Please read Information Manual included together before reading this manual and operating your set. Retain it for future reference. Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service.

LG Electronics Inc.



Trade Mark of the DVB Digital Video Broadcasting Project (1991 to 1996)

ID Number(s): 3948 : 32LC2D 4008: 32LC2DB
3949 : 37LC2D 4010 : 37LC2DB
3947 : 42PC1D 4106 : 42LC2D
4108 : 50PC1D 4107 : 42LC2DB

ACCESSORIES

 
Ensure that the following accessories are included with your set. If any accessory is missing, please contact the dealer from where you purchased the set.




Power Cord



75Ω RF Coaxial



Owner's Manual

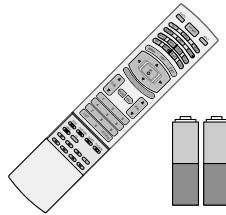

Remote Control /
Batteries



Polishing Cloth
(except 32LC2D/ 2DB*)

Polish the screen with the cloth.

Slightly wipe stained spot on the exterior only with the cleansing cloths for the product exterior if there is stain or fingerprint on surface of the exterior.

Do not wipe roughly when removing stain. Please be cautious of that excessive power may cause scratch or discoloration.

For 42PC1D *, 50PC1D *



2-Wall brackets



2-eye-bolts



2-bolts for stand assembly
(Refer p.11)
(42PC1D* only)

For 32/37/42LC2D*, 32/37/42LC2DB *



2-TV brackets
2-Wall brackets



Cable
Management



2-bolts




Twister Holder
Arrange the wires
with the twister holder.




4-bolts (32LC2D/2DB* only)
See below for detail
information.

Stand Installation for 32LC2D/2DB *


- 1 Carefully place the set screen side down on a cushioned surface that will protect set and screen from damage.

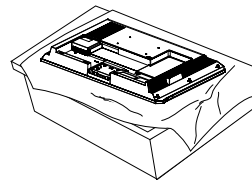

- 2 Place the hook of the stand in the back of the set as shown.

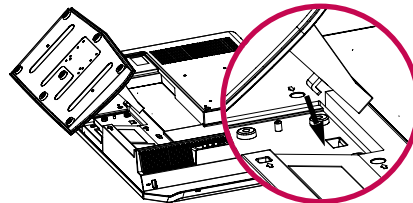

- 3 Install the 4 bolts provided securely, in the back of the set.

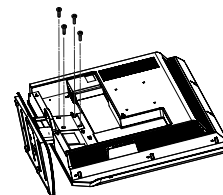

CONTENTS

ACCESSORIES 1

INTRODUCTION

Controls (Model Name: 32/37/42LC2D *)	4
Connection Options (Model Name: 32/37/42LC2D *)	5
Controls (Model Name: 42/50PC1D *)	6
Connection Options (Model Name: 42/50PC1D *)	7
Remote Control Key Functions	8-10

INSTALLATION

Unfolding The Base Stand	11
Basic connection	12-14
How to join the product assembly to the wall to protect the set tumbling	15

CONNECTIONS & SETUP

Antenna Connection	16
Picture Out Setup	16
VCR Setup	17-18
External AV Source Setup	19
DVD Setup	20-21
HDSTB Setup	22-24
Digital Audio Output	24
PC Setup	25-27

BASIC OPERATION

Turning on the set	28
Programme Selection	29
Volume Adjustment	29

SPECIAL FUNCTIONS

PIP/POP/Twin Picture

Watching PIP/Double Window/POP	30
Programme Selection for Sub Picture	30
Input Source Selection for Sub Picture	31
Sub Picture Size Adjustment	31
Moving the Sub Picture (PIP mode only)	31
Adjusting PIP Transparency (PIP mode only)	32
Swapping between main and sub pictures	32
POP (Picture-out-of-Picture: Programme Scan)	32

TELETEXT

Switch on/off	33
SIMPLE Text	33
TOP Text	34
FASTEXT	34
Special Teletext Functions	35

EPG (Electronic Programme Guide) (In Digital mode)

Switch on/off EPG	36
Select a programme	36
Button Function in NOW/NEXT Guide Mode	36
Button Function in Extended Description Box	36
Button Function in 8 Days Guide Mode	37
Button Function in Date Change Mode	37
Button Function in Record/Remind Setting Mode	37
Button Function in Timer List Mode	37

TV MENU

On Screen Menus Selection and Adjustment 38

STATION

Auto programme (In Digital Mode) 39
 Manual Programme Tuning (In Digital Mode) 40
 Programme Edit (In Digital Mode) 41-42
 5V Antenna Power (In Digital Mode only) 43
 Booster (In Digital Mode only) 44
 Diagnostics (In Digital Mode only) 45
 Auto Programme Tuning (In Analogue Mode) 46
 Manual Programme Tuning (In Analogue Mode) 47
 Fine Tuning (In Analogue Mode) 48
 Assigning a Station Name (In Analogue Mode) 48
 Programme Edit (In Analogue Mode) 49-50
 Favourite Programme (In Analogue Mode) 51
 Calling the Programme Table 52

PICTURE

PSM (Picture Status Memory) 53
 Picture Adjustment (PSM-User option) 54
 CSM (Colour Status Memory) 55
 Manual Colour Temperature Control (CSM - User option) 55
 XD Function 56
 XD - User Option 56
 NR (Noise Reduction) 57
 Advanced 57
 Reset 57

SOUND

SSM (Sound Status Memory) 58
 Sound Frequency Adjustment (SSM - User option) 58
 AVL (Auto Volume Leveler) 59
 Balance Adjustment 59
 TV Speaker 60
 Digital audio out 61
 Stereo/Dual Reception (In Analogue mode only) 62
 NICAM Reception (In Analogue mode only) 62
 Speaker Sound Output Selection (In Analogue mode only) .. 62

TIME

Clock Setup 63
 On/Off Time 64
 Auto Sleep 65
 Sleep Timer 65

SPECIAL

Language 66
 System Lock Setting 67
 Child Lock 68
 ISM Method (Image Sticking Minimization) (option) ... 69
 Low Power (option) 70
 Factory Reset 70

SCREEN

Auto Config. (RGB [PC] mode only) 71
 Manual Config. 72
 Setting the Picture Format 73
 Selecting Wide XGA mode 74
 XD Demo 74
 Initializing (Reset to original factory settings) 75

APPENDIX

External Control Device Setup 76-83
 IR Codes 84-85
 Programming the Remote 86
 Programming Codes 87
 Troubleshooting Checklist 88-89
 Maintenance 90
 Product Specifications 91-92


INTRODUCTION

CONTROLS (MODEL NAME: 32/37/42LC2D *)


This is the front panel of 32/37/42LC2D *.

- This is a simplified representation of front panel.
- Here shown may be somewhat different from your set.

Front Panel Controls

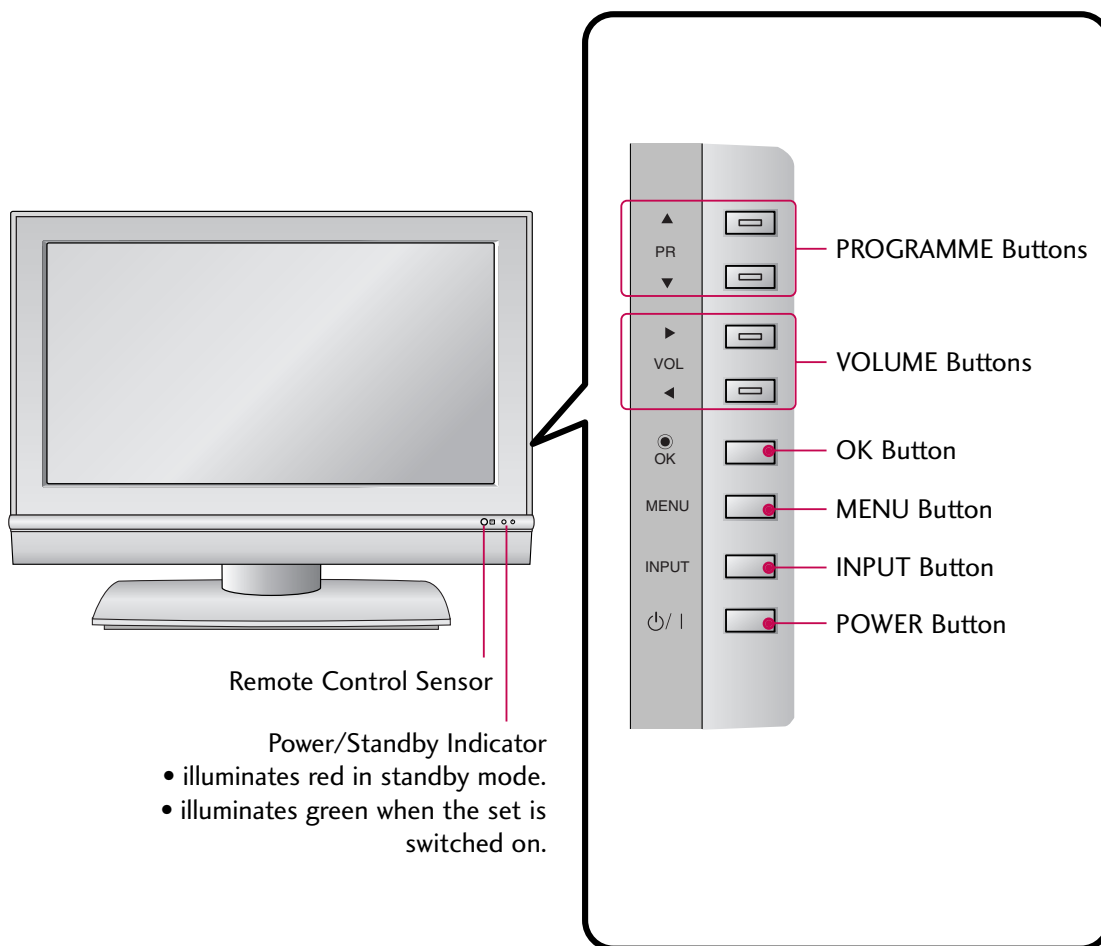

Swivel Stand (42LC2D series only)

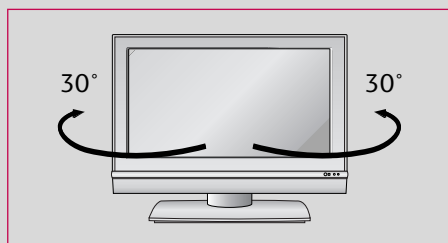


- The set can be conveniently swivelled on its stand 30° to the left or right to provide the optimum viewing angle.

CONNECTION OPTIONS

- Here shown may be somewhat different from your set.
- This manual explains the features available on the 32/37/42LC2D *.

Back Connection Panel

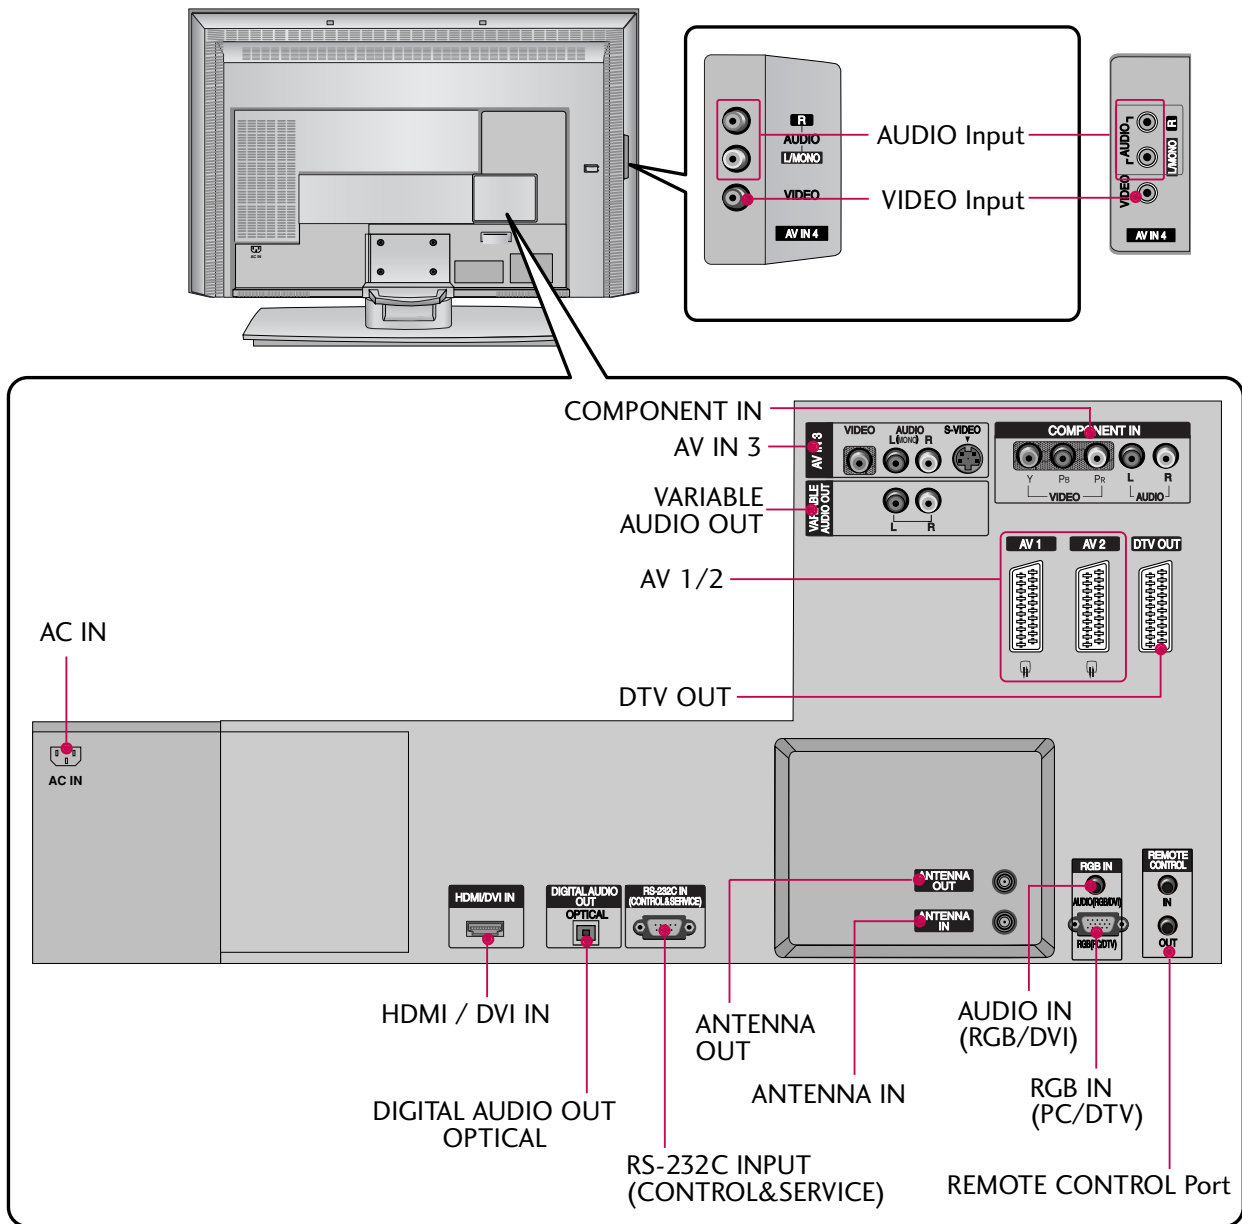


INTRODUCTION

CONTROLS (MODEL NAME: 42/50PC1D *)

- This is a simplified representation of front panel.
- Here shown may be somewhat different from your set.


Front Panel Controls

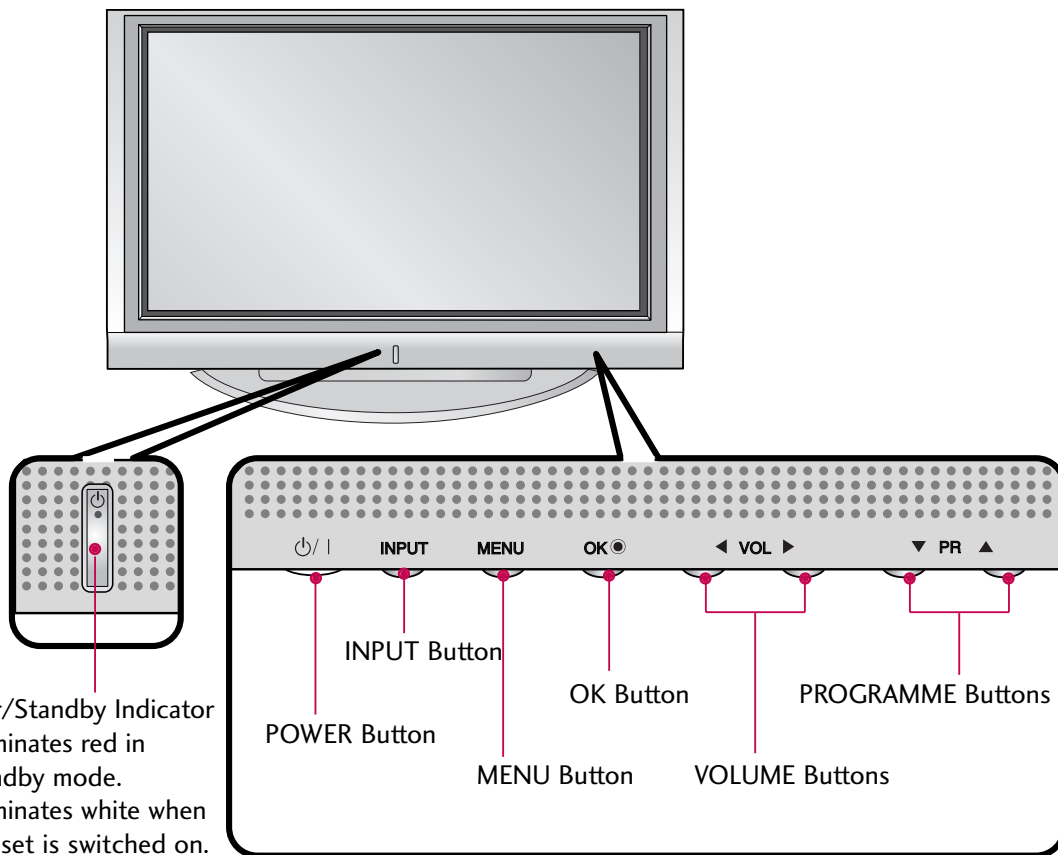

CONNECTION OPTIONS

- Here shown may be somewhat different from your set.
- This manual explains the features available on the 42/50PC1D *.

Back Connection Panel

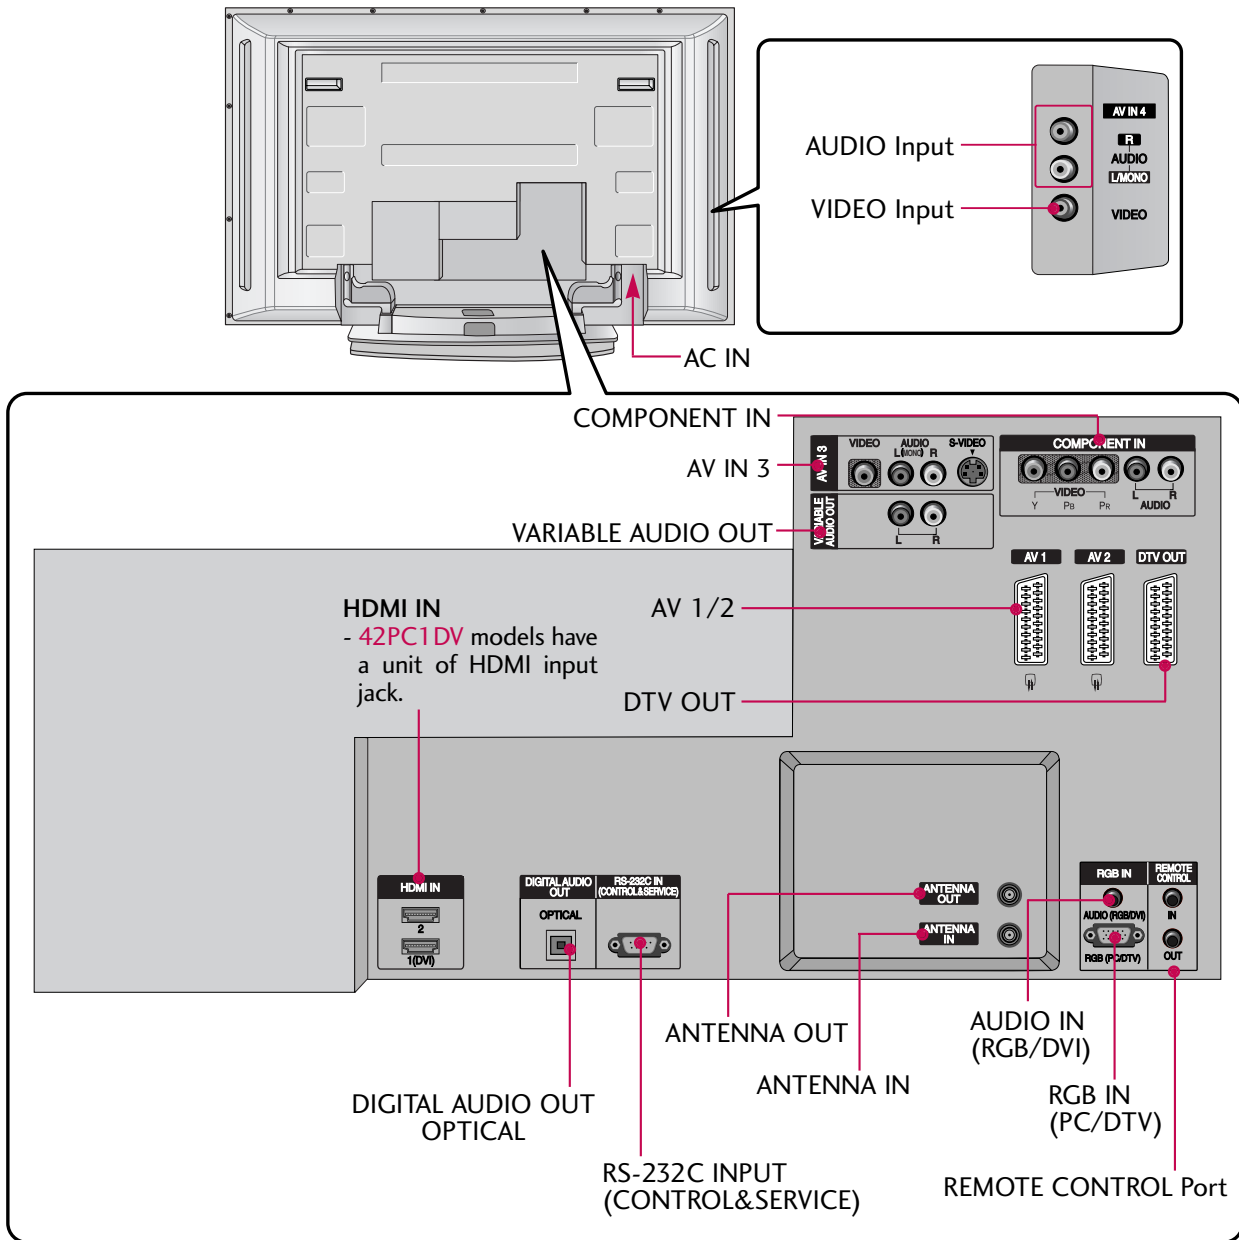

INTRODUCTION

REMOTE CONTROL KEY FUNCTIONS



POWER

Switches the set between ON and STANDBY.

D/A TV (Digital TV / Analogue TV)

Selects digital or analogue mode.

INPUT

Selects the DTV, TV, AV, Component, RGB or HDMI/DVI modes. switches the set on from standby.

TV, DVD, VCR

Selects the remote operating mode: TV, VCR, DVD. Select other operating modes, for the remote to operate external devices.

GUIDE (Refer to p.36~37)

Shows programme schedule.

ARC (Aspect Ratio Control) (Refer to p.73)

Selects your desired picture format.

SUBTITLE/* (Refer to p.66)

Recalls your preferred subtitle in digital mode.

PIP (Refer to p.30)

Switches the sub picture on or off,select PIP, DW1/2 or POP modes.

SIZE (Refer to p.31)

Adjusts the sub picture size.

POSITION (Refer to p.31)

Moves the sub picture position.

PIP PR +/- (Refer to p.30)

Selects a programme for the sub picture.

SWAP (Refer to p.32)

Alternates between main and sub picture.

PIP INPUT (Refer to p.31)


Selects the input mode for the sub picture.

BACK

Allow the user to move back one step in an interactive application, EPG or other user interaction function.

SLEEP (Refer to p.65)

Sets the sleep timer.

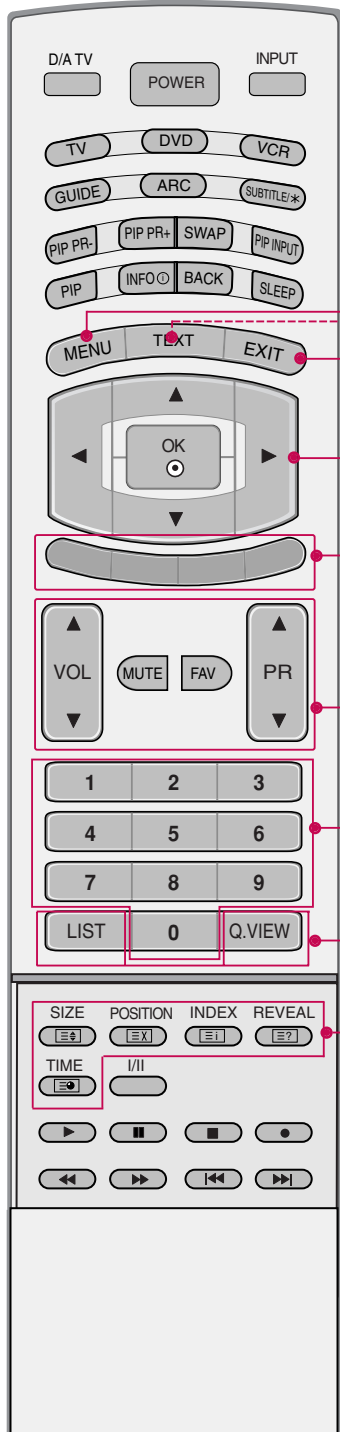

MENU

Displays on screen menus one by one.
Exits the current menu.
Memorizes menu changes.

TELETEXT BUTTONS

These buttons are used for teletext.
Text button is used to enable teletext services while other buttons are for teletext functions. * For further details, see the 'Teletext' section. (Refer to p.33~35)

EXIT

Clears all on-screen displays and returns to TV viewing from any menu.

OK

Accepts your selection or displays the current mode.



Adjusts menu settings.
Selects menu item.

COLOURED BUTTONS

They are used as per the indications or functions displayed on TV screen in case of Text displays (Teletext, EPG) and programme edit.

VOL ▲ / ▼ (Volume Up/Down)

Increases/decreases sound level.

PR ▲ / ▼ (Programme Up/Down)

Selects a programme.

MUTE

Switches the sound on or off.

FAV (FAVOURITE)

Displays the selected favourite programmes.

NUMBER BUTTONS


LIST (Refer to p.52)

Displays the programme table.

Q.VIEW

Returns to the previously viewed programme.

INTRODUCTION

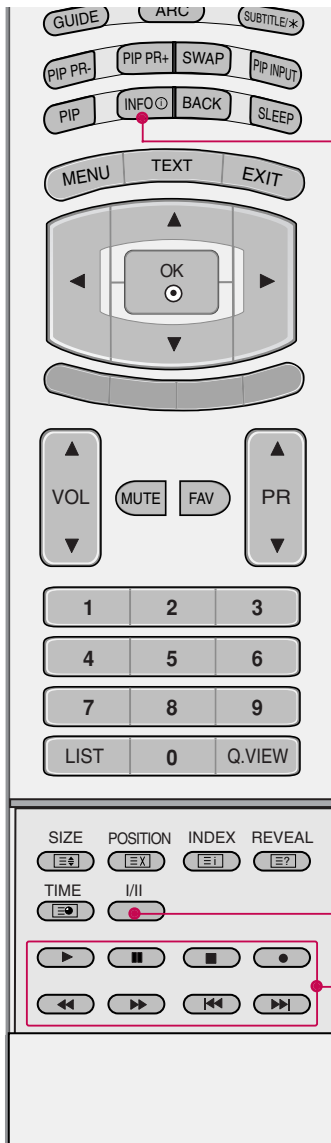


Brief Info.

What is Brief Info?

- : Brief Info shows the present screen information.
- : On Watching with the upper Input signal, press the **INFO** button.

How to use?

1. Press the **INFO** button to show the Brief Info on the screen.
2. Press the **INFO** button or **EXIT** button to exit.

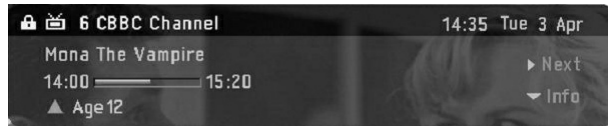

Signing SCA	Correspondance	Field rating DVB hexadecimal (decimal)
GREEN ROUND	All public	0x10(16)
BLUE ROUND	Desirable parental Agreement	0x11 (17)
ORANGE TRIANGLE	Prohibited at least 12 years	0x09(9)
RED SQUARE	Prohibited at least 16 years	0x0D(13)
VIOLET CROSS	Prohibited at least 18 years	0x0F(15)

Icon Function in Info. description Box

	Teletext Programme
	Subtitle Programme
	Scramble Programme
	Dolby Programme

Remote Control Buttons	Function
	Change to Now/Next
	The detail information on or off

I/II

 
- Selects the language during dual language broadcast. (Refer to p.62)
- Selects the sound output. (Refer to p.62)

VCR/DVD BUTTONS


- Controls a LG video cassette recorder.
- Controls a LG DVD player.

Installing Batteries



- 1 Open the battery compartment cover on the back side.



- 2 Insert two batteries in correct polarity (+ with +, - with -). Don't mix old or used batteries with new ones.

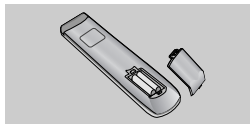

- 3 Close the cover.

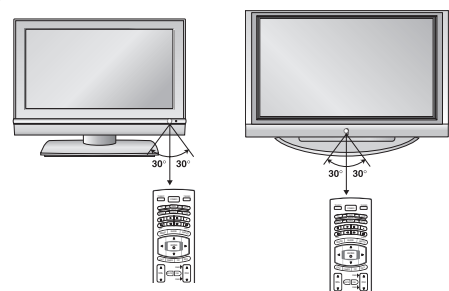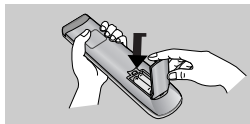


- * Use a remote control 7 meter distance and 30 degree (left/right) within the receiving unit scope.
- * Dispose of used batteries in a recycle bin to prevent environment.

INSTALLATION

UNFOLDING THE BASE STAND

■ This feature is not available for all models (42PC1D *)

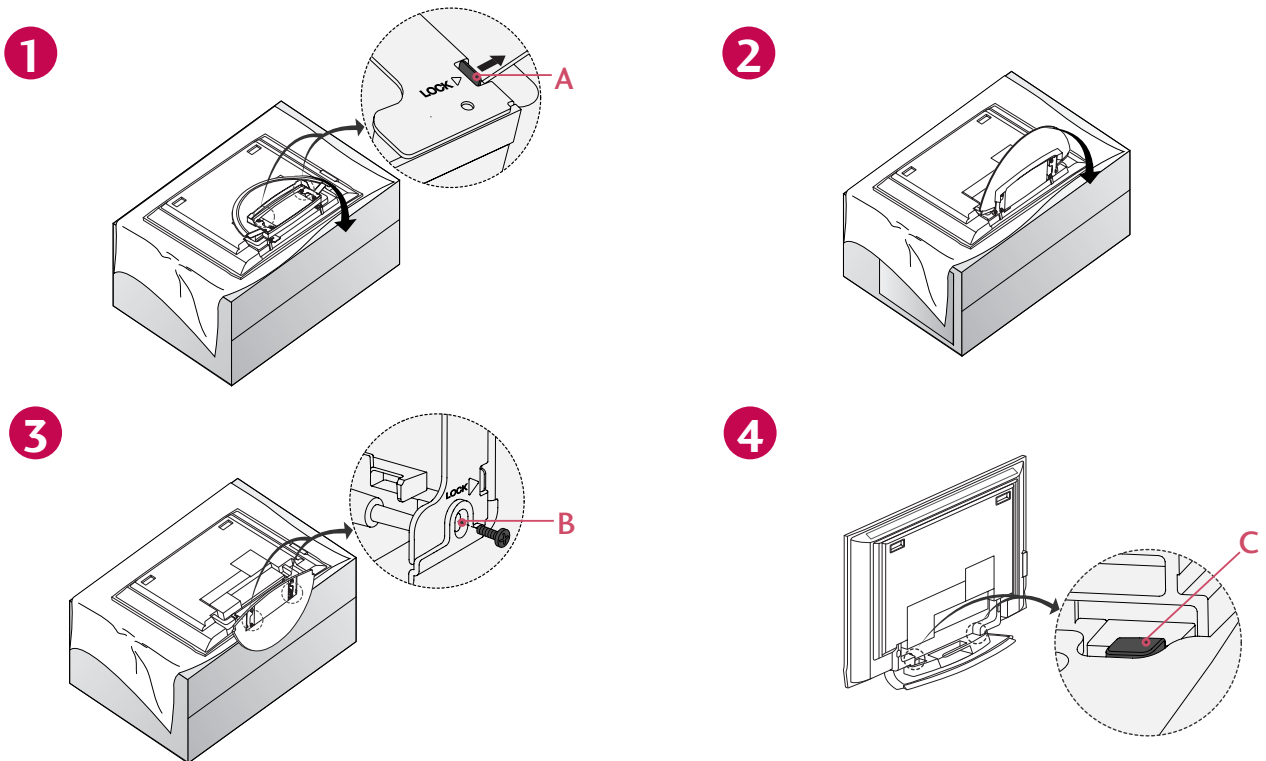

- Place the set with the screen facing down on a cushion or soft cloth as shown in Figures 1. Before unfolding the stand, please make sure two locks (A) on the bottom of the stand push outward.
- Pull the stand out as shown above in Figures 2 ~ 3. After unfolding the stand, please insert and tighten the screws in the holes (B) on the bottom of the stand.
- When connecting cables to the set, Do not disengage the lock (C). This may cause the set to fall, causing serious bodily injury and serious damage to the set.


! NOTE

Figures shown here may be slightly different from your set.

When closing the stand for storage

First remove the screws in the holes (B) on the bottom of the stand. And then pull two Hooks (D) of the stand bottom and fold the stand into the back of the set.

After folding, push two Locks (A) of the stand bottom outward.

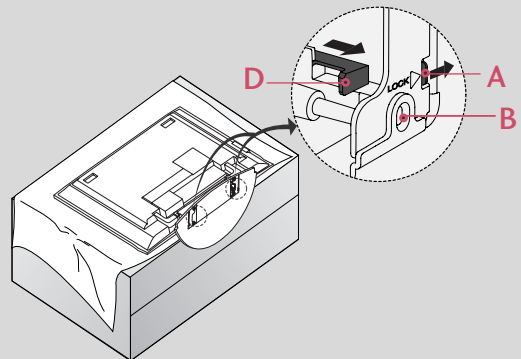


INSTALLATION

BASIC CONNECTION (Only 42/50PC1D *)

- These models have two cable arrangement methods according to the stand type.


Stand type 1

Arrange the cables as shown picture.

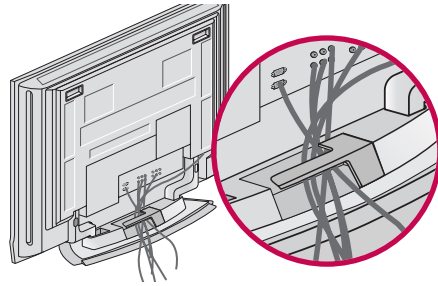


Stand type 2


- 1** Hold the **CABLE MANAGEMENT** with both hands and push it as shown.

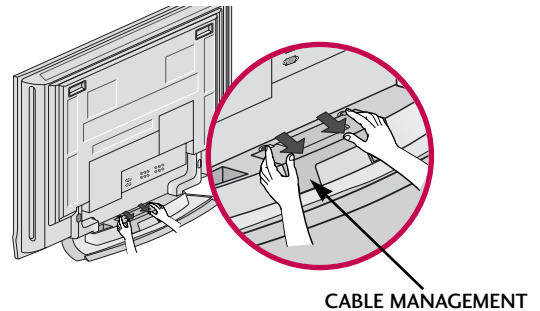

- 2** Connect the cables as necessary.
To connect an additional equipment, see the **External equipment Connections** section.

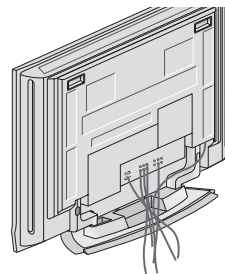


- 3** Reinstall the **CABLE MANAGEMENT** as shown.

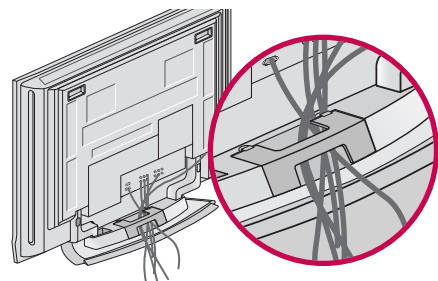


BASIC CONNECTION (Only 32/37/42LC2D *)

- 1 Connect the cables as necessary. After connecting the cables neatly, arrange the cables to the Cable Holder.

To connect an additional equipment, see the **External equipment Connections** section.

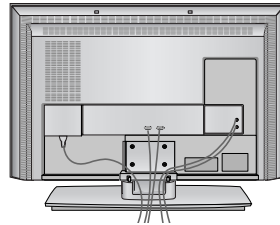


32LC2D *

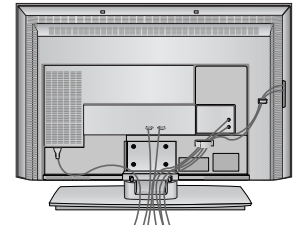

37/42LC2D *


- 2 Install the **CABLE MANAGEMENT** as shown.

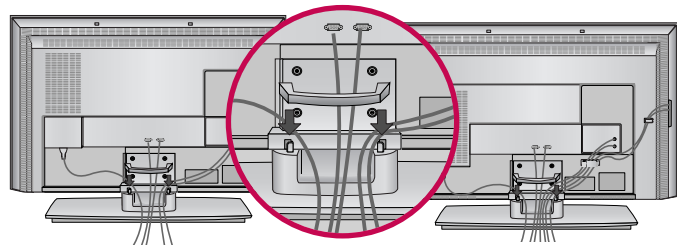

32LC2D *

37/42LC2D *

- 3 Bundle the cables using the supplied twister holder.

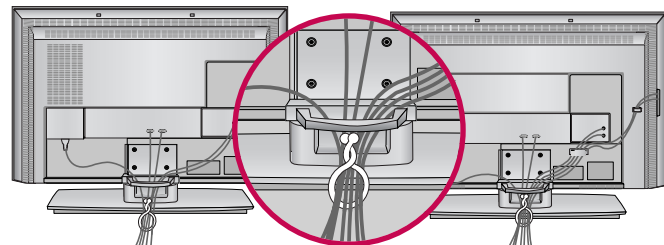

32LC2D *


37/42LC2D *

HOW TO REMOVE THE CABLE MANAGEMENT

Hold the **CABLE MANAGEMENT** with both hands and pull it backward.

! NOTE

- ▶ Do not hold the **CABLE MANAGEMENT** when moving the product.
- If the set is dropped, you may be injured or the product may be broken.

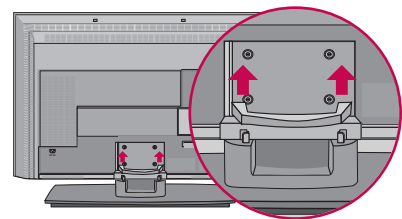


INSTALLATION

- The set can be installed in various ways such as on a wall, or on a desktop etc.
- The set is designed to be mounted horizontally.


GROUNDING

Ensure that you connect the earth ground wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

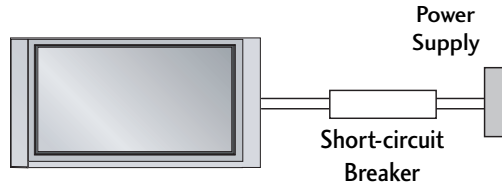



Desktop Pedestal Installation

For proper ventilation, allow a clearance of 4" on each side and from the wall.

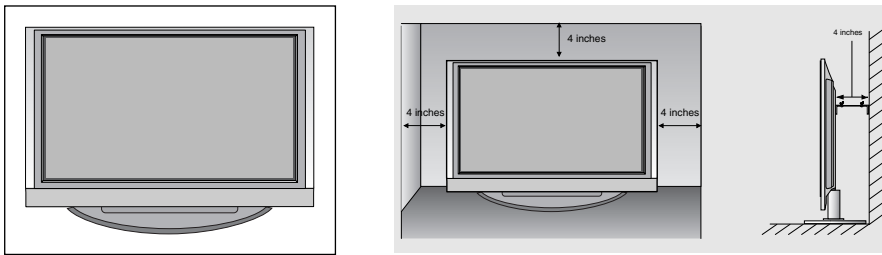

Wall Mount: Horizontal installation

For proper ventilation, allow a clearance of 4" on each side and from the wall. Detailed installation instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

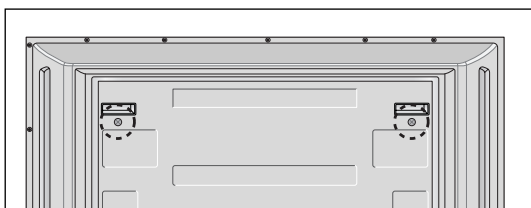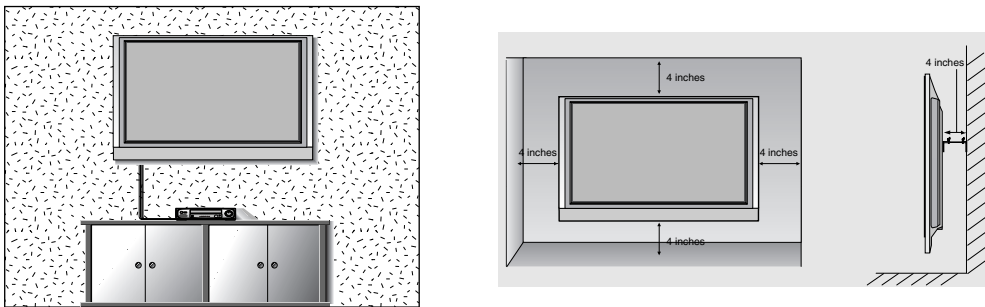


<Only 42PC1D *>

Remove two screws of the backside of the set before installing the wall mounting bracket.


HOW TO JOIN THE PRODUCT ASSEMBLY TO THE WALL TO PROTECT THE SET TUMBLING

- Set it up close to the wall so the product doesn't fall over when it is pushed backwards.
- The instructions shown below is a safer way to set up the product, which is to fix it on the wall so the product doesn't fall over when it is pulled in the forward direction. It will prevent the product from falling forward and hurting people. It will also prevent the product from damage caused by fall. Please make sure that children don't climb on or hang from the product.


For 42/50PC1D *

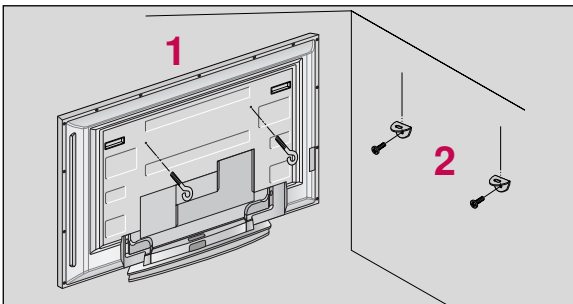

For 32/37/42LC2D *

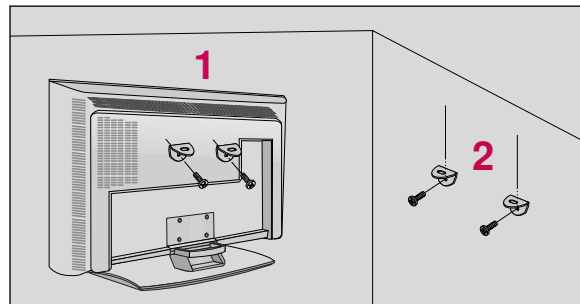

- 1 Use the eye-bolts or TV brackets/bolts to fix the set to the wall as shown in the picture.
(If your set has the bolts in the eye-bolts position before inserting the eye-bolts, loosen the bolts.)
* Insert the eye-bolts or TV brackets/bolts and tighten them securely in the upper holes.
- 2 Secure the wall brackets with the bolts (not provided as parts of the set, must purchase separately) on the wall. Match the height of the bracket that is mounted on the wall.

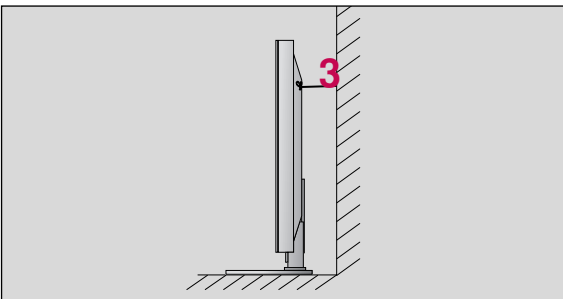

- 3 Use a sturdy rope (not provided as parts of the set, must purchase separately) to tie the set. It is safer to tie the rope so it becomes horizontal between the wall and the set.

! NOTE


- ▶ When moving the set to another place undo the ropes first.
- ▶ Use a set holder or a cabinet that is big and strong enough for the size and weight of the set.
- ▶ To use the set safely make sure that the height of the bracket that is mounted on the wall is same as that of the set.

CONNECTIONS & SETUP


- All cables shown are not included with the TV
- This part of CONNECTION & SETUP mainly use picture for the 42PC1D *.

ANTENNA CONNECTION

- For optimum picture quality, adjust antenna direction if needed.

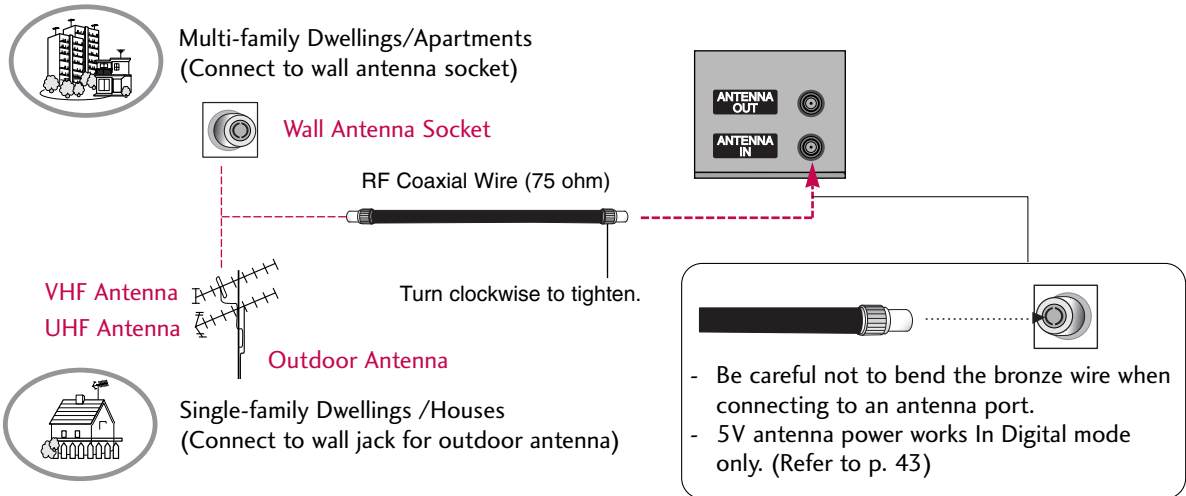

NOTE

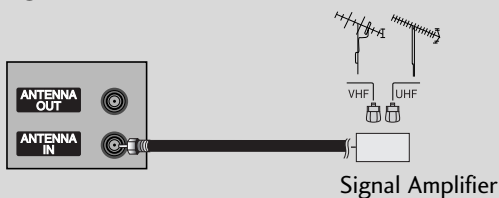


- In a poor signal area to improve picture quality, purchase and install a signal amplifier.
- If the antenna needs to be split for two TV's, install a "2-Way Signal Splitter" in the connections.
- If the antenna is not installed properly, contact your dealer for assistance.

PICTURE OUT SETUP

- The set has a special signal output capability which allows you to hook up a second TV or monitor.

Back panel of the set

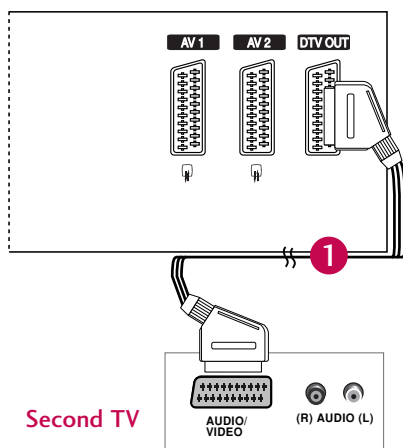


- 1 Connect the second TV or monitor to the TV's **DTV OUT** jacks.
- 2 See the Operating Manual of the second TV or monitor for further details regarding that device's input settings.

VCR SETUP


- To avoid picture noise (interference), leave an adequate distance between the VCR and TV.
- Typically a frozen still picture from a VCR. If the 4:3 picture format is used; the fixed images on the sides of the screen may remain visible on the screen.

1. When connecting with an antenna

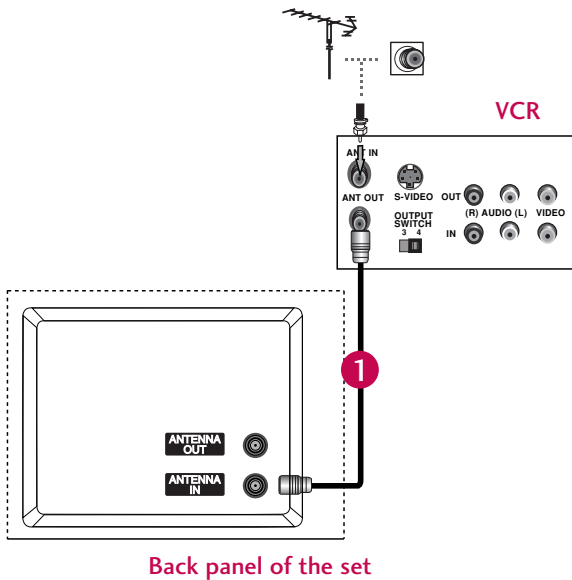

- 1 Connect the RF out socket of the VCR to the Antenna socket on the set.
- 2 Connect the antenna cable to the RF antenna socket of the VCR.
- 3 Press the **PLAY** button on the VCR and match the appropriate programme between the TV and VCR for viewing.

2. When connecting with a RCA cable

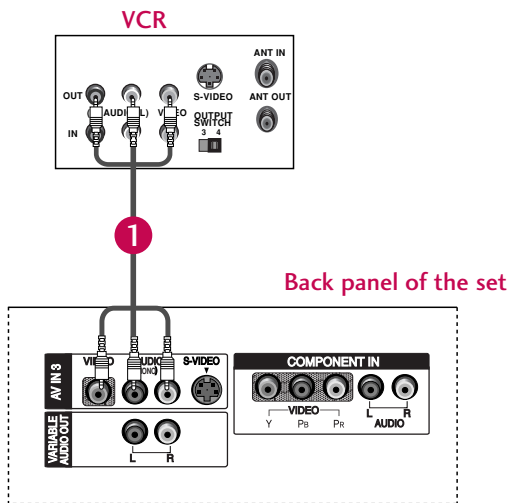


- 1 Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red)
- 2 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 3 Select **AV3** input source using the **INPUT** button on the remote control.
- If connected to **AV IN4**, select **AV4** input source.

! NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the set.

CONNECTIONS & SETUP

3. When connecting with a Euro Scart

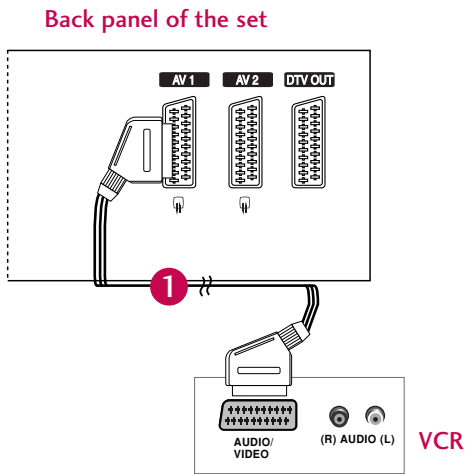


- 1 Connect the Euro scart socket of the VCR to the **AV1** Euro scart socket on the set.
- 2 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 3 Select **AV1** input source with using the **INPUT** button on the remote control.
- If connected to **AV2** Euro scart socket, select **AV2** input source.

! NOTE

- ▶ If the **S-VIDEO(Y/C)** signal is received through the Euro scart socket 2 (**AV2**), you must change to the **SAV2** mode.
- ▶ If you want to use the **EURO** scart cable, you have to use the signal shielded Euro scart cable.

4. When connecting with an S-Video cable

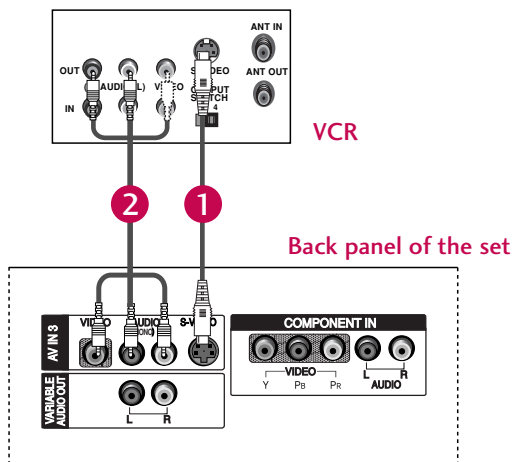


- 1 Connect the S-VIDEO output of the VCR to the **S-VIDEO** input on the set. The picture quality is improved; compared to normal composite (RCA cable) input.
- 2 Connect the audio outputs of the VCR to the **AUDIO** input jacks on the set.
- 3 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 4 Select **AV3** input source with using the **INPUT** button on the remote control.

! NOTE

- ▶ If both **S-VIDEO** and **VIDEO** sockets have been connected to the S-VHS VCR simultaneously, only the **S-VIDEO** can be received.

EXTERNAL AV SOURCE SETUP

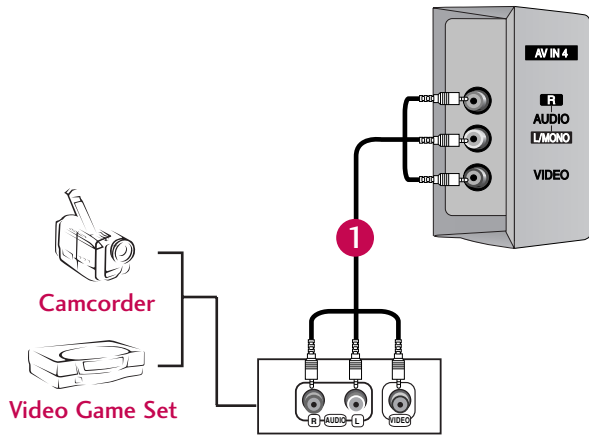


- 1 Connect the **AUDIO/VIDEO** jacks between TV and external equipment. Match the jack colors (Video = yellow, Audio Left = white, and Audio Right = red).
- 2 Select **AV4** input source with using the **INPUT** button on the remote control. If connected to **AV IN3** input, select **AV3** input source.
- 3 Operate the corresponding external equipment. Refer to external equipment operating guide.

CONNECTIONS & SETUP

DVD SETUP


1. When connecting with a S-Video cable

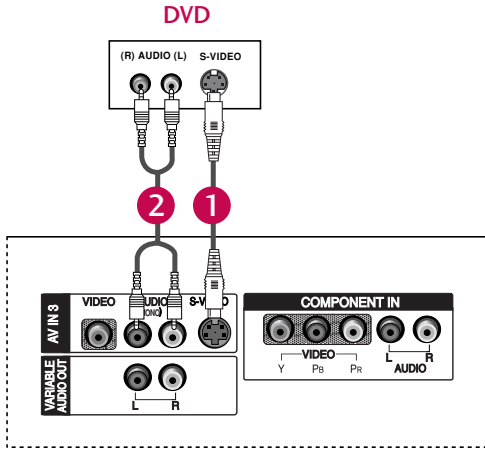

Back panel of the set

- 1 Connect the S-VIDEO output of the DVD to the **S-VIDEO** input on the set.
- 2 Connect the audio outputs of the DVD to the **AUDIO** input jacks on the set.
- 3 Turn on the DVD player, insert a DVD.
- 4 Select **AV3** input source with using the **INPUT** button on the remote control.
- 5 Refer to the DVD player's manual for operating instructions.

2. When connecting with a HDMI cable

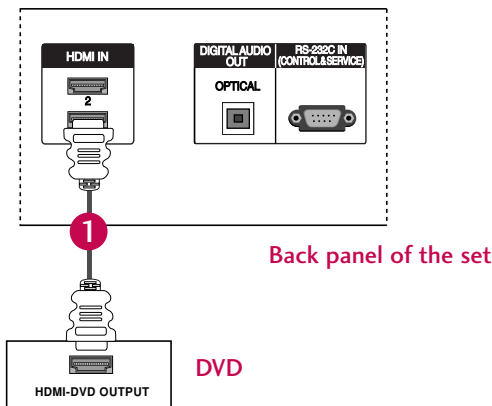


Back panel of the set

- 1 Connect the HDMI output of the DVD to the **HDMI IN** (or **HDMI/DVI IN**) jack on the set.
- 2 Select **HDMI/DVI** (or **HDMI1/DVI** or **HDMI2**) input source with using the **INPUT** button on the remote control.
- 3 Refer to the DVD player's manual for operating instructions.

! NOTE

- ▶ TV can receive the video and audio signal simultaneously with using a HDMI cable.
- ▶ If the DVD supports Auto HDMI function, the DVD output resolution will be automatically set to 1280x720p.
- ▶ If the DVD does not support Auto HDMI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the DVD to 1280x720p.

3. When connecting with a component cable

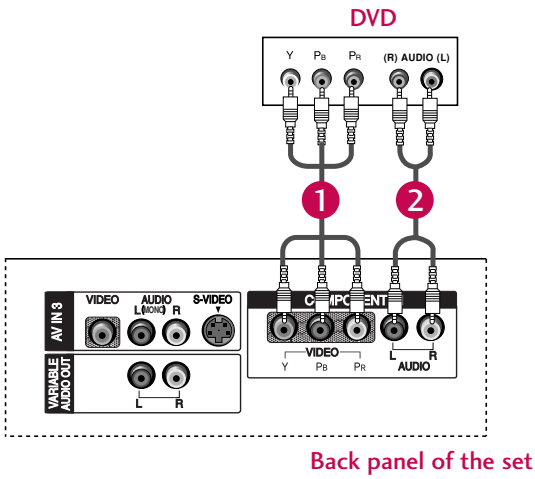

- 1 Connect the video outputs (Y, PB, PR) of the DVD to the **COMPONENT IN VIDEO** jacks on the set.
- 2 Connect the audio outputs of the DVD to the **COMPONENT IN AUDIO** jacks on the set.
- 3 Turn on the DVD player, insert a DVD.
- 4 Select **Component** input source with using the **INPUT** button on the remote control.
- 5 Refer to the DVD player's manual for operating instructions.


- **Component Input ports**

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the TV	Y	P _B	P _R
Video output ports on DVD player	Y	P _B	P _R
	Y	B-Y	R-Y
	Y	C _b	C _r
	Y	P _b	P _r

4. When connecting with a Euro scart

Back panel of the set

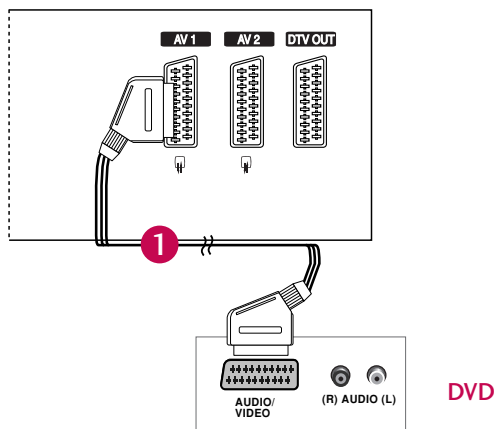

- 1 Connect the Euro scart socket of the DVD to the **AV1** Euro scart socket on the set.
- 2 Turn on the DVD player, insert a DVD.
- 3 Select **AV1** input source with using the **INPUT** button on the remote control.
 - If connected to **AV2** Euro scart socket, select **AV2** input source.


* Please use the shield scart cable.

CONNECTIONS & SETUP

HDSTB SETUP


- This TV can receive Digital Over-the-air/Cable signals without an external digital set-top box. However, if you do receive Digital signals from a digital set-top box or other digital external device, refer to the figure as shown below.

1. When connecting with a D-sub 15 pin cable

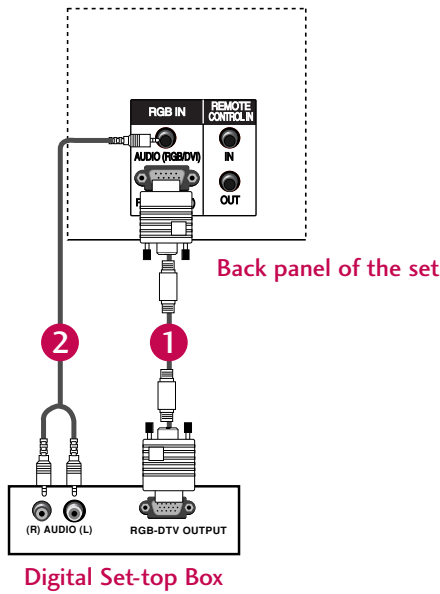

- 1 Connect the RGB output of the digital set-top box to the **RGB (PC/DTV)** jack on the set.
- 2 Connect the audio outputs of the set-top box to the **AUDIO (RGB/DVI)** jack on the set.
- 3 Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- 4 Select **RGB** input source with using the **INPUT** button on the remote control.

2. When connecting with a HDMI cable

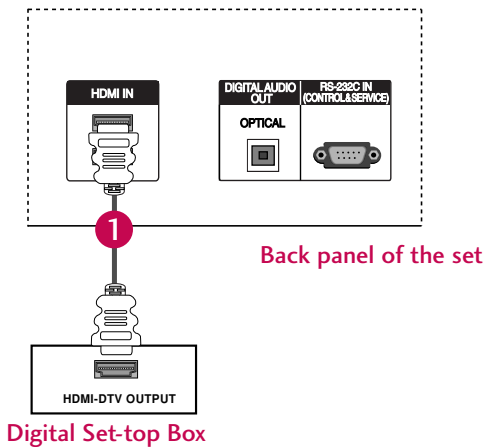


- 1 Connect the HDMI output of the digital set-top box to the **HDMI IN** (or **HDMI/DVI IN**) jack on the set.
- 2 Select **HDMI/DVI** (or **HDMI1/DVI** or **HDMI2**) input source with using the **INPUT** button on the remote control.
- 3 Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)

! NOTE

- ▶ TV can receive the video and audio signal simultaneously with using a HDMI cable.
- ▶ If the digital set-top box supports Auto HDMI function, output resolution of the digital set-top box will be automatically set to 1280x720p.
- ▶ If the digital set-top box does not support Auto HDMI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the digital set-top box to 1280x720p.

3. When connecting with a Component cable

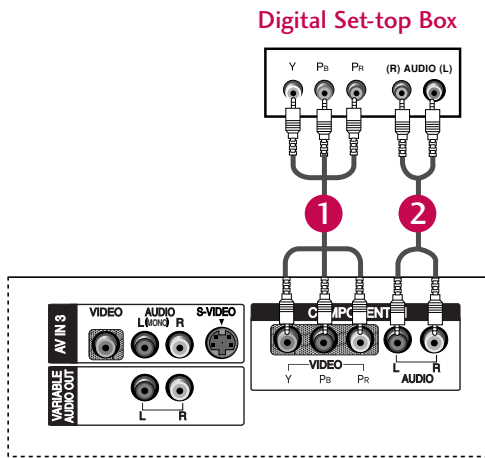


Back panel of the set

- 1 Connect the video outputs (Y, PB, PR) of the digital set-top box to the **COMPONENT IN VIDEO** jacks on the set.
- 2 Connect the audio output of the digital set-top box to the **COMPONENT IN AUDIO** jacks on the set.
- 3 Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- 4 Select **Component** input source with using the **INPUT** button on the remote control.

Signal	Component	RGB-DTV, HDMI/DVI
480i/576i	Yes	No
480p/576p/720p/1080i	Yes	Yes

4. When connecting with a HDMI to DVI cable

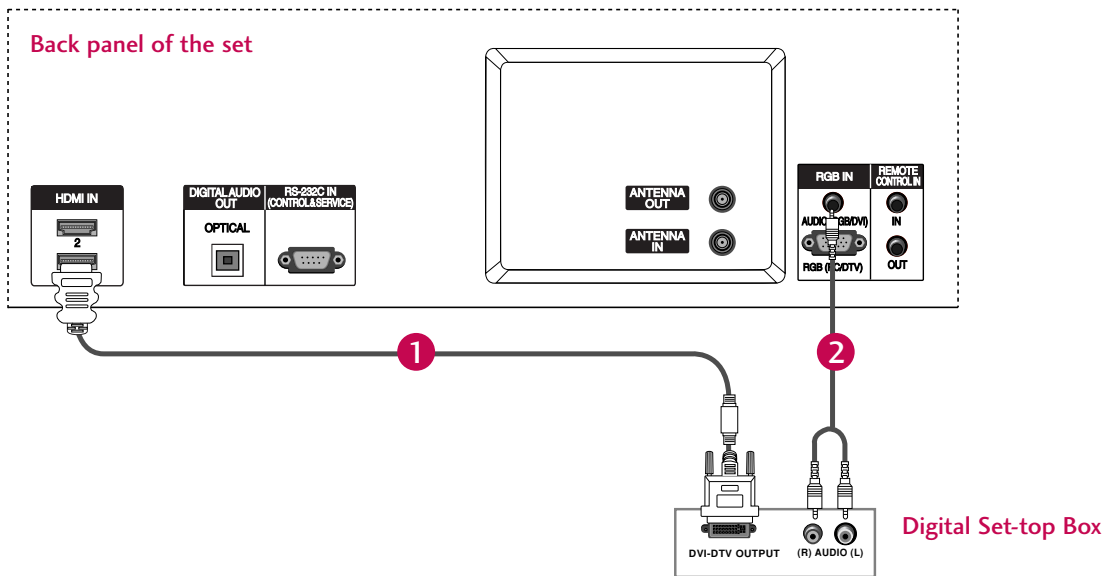

- 1 Connect the DVI output of the digital set-top box to the **HDMI IN** (or **HDMI/DVI IN**) jack on the set.
- 2 Connect the audio outputs of the set-top box to the **AUDIO (RGB/DVI)** jack on the set.
- 3 Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)
- 4 Select **HDMI1/DVI** (or **HDMI/DVI**) input source with using the **INPUT** button on the remote control.


CONNECTIONS & SETUP

! NOTE

- ▶ If the digital set-top box has a DVI output and no HDMI output, a separated audio connection is necessary.
- ▶ If the digital set-top box supports Auto DVI function, the output resolution of the digital set-top box will be automatically set to 1280x720p.
- ▶ If the digital set-top box does not support Auto DVI, you need to set the output resolution appropriately. To get the best picture quality, adjust the output resolution of the digital set-top box to 1280x720p.

DIGITAL AUDIO OUTPUT

- Send the TV's audio to external audio equipment (stereo system) via the Digital Audio Output Optical port.

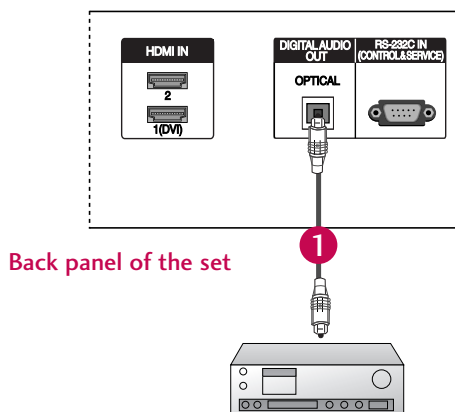

Back panel of the set

- 1 Connect one end of an optical cable to the TV Digital Audio Optical Output port.
- 2 Connect the other end of the optical cable to the digital audio optical input on the audio equipment.
- 3 See the external audio equipment instruction manual for operation. When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off. (Refer to p.60)




CAUTION

Do not look into the optical output port. Looking at the laser beam may damage your vision.

PC SETUP


- This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings.

1. When connecting with a D-sub 15 pin cable

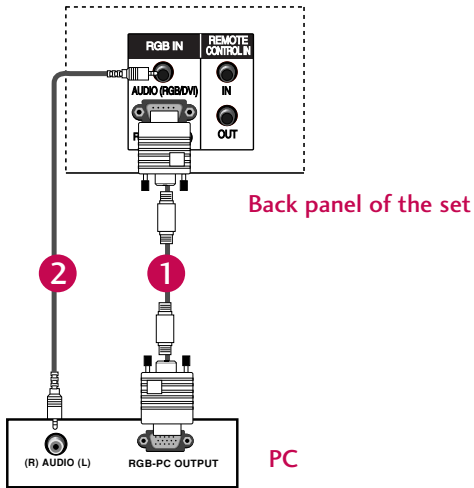

- 1 Connect the RGB output of the PC to the **RGB (PC/DTV)** jack on the set.
- 2 Connect the PC audio outputs to the **AUDIO (RGB/DVI)** jack on the set.
- 3 Turn on the PC and the set.
- 4 Select **RGB** input source with using the **INPUT** button on the remote control.

2. When connecting with a HDMI to DVI cable

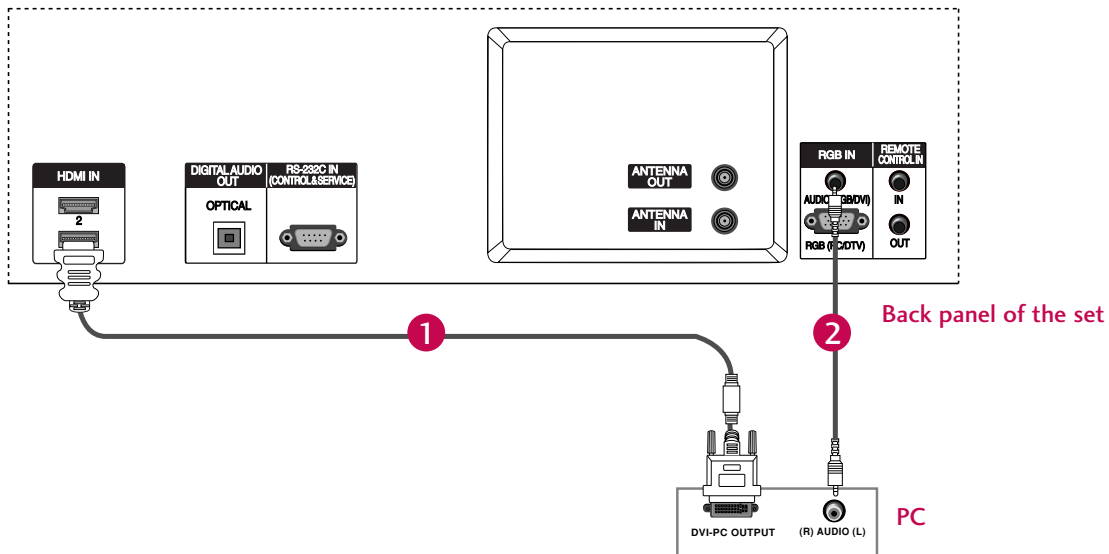

- 1 Connect the DVI output of the PC to the **HDMI IN** (or **HDMI/DVI IN**) jack on the set.
- 2 Connect the audio outputs of the PC to the **AUDIO (RGB/DVI)** jack on the set.
- 3 Turn on the PC and the set.
- 4 Select **HDMI1/DVI** (or **HDMI/DVI**) input source with using the **INPUT** button on the remote control.

CONNECTIONS & SETUP

! NOTE

- ▶ To enjoy vivid picture and sound, connect a PC to the set.
- ▶ Avoid keeping a fixed image on the set's screen for a long period of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- ▶ Connect PC to the RGB (PC/DTV) or HDMI IN (or HDMI/DVI IN port of the set; change the resolution output of PC accordingly.
- ▶ There might be noise according to some resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode into another resolution or change the refresh rate into another rate or adjust the brightness and contrast on the menu until the picture is clean. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult it to the manufacturer of the PC graphic card.
- ▶ The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- ▶ In 42/50PC1D *, we recommend using 1024x768, 60Hz for the PC mode, they provide the best picture quality.
- ▶ If the resolution of PC is over UXGA, there will be no picture on the set.
- ▶ Connect the signal cable from the monitor output port of the PC to the RGB (PC/DTV) port of the set or the signal cable from the HDMI output port of the PC to the HDMI IN (or HDMI/DVI IN port on the set.
- ▶ Connect the audio cable from the PC to the Audio input on the set. (Audio cables are not included with the set).
- ▶ If using a sound card, adjust PC sound as required.
- ▶ This set uses a VESA Plug and Play Solution. The set provides EDID data to the PC system with a DDC protocol. The PC adjusts automatically when using this set.
- ▶ DDC protocol is preset for RGB (Analog RGB), HDMI (Digital RGB) mode.
- ▶ If required, adjust the settings for Plug and Play functionally.
- ▶ If graphic card on the PC does not output analog and digital RGB simultaneously, connect only one of either RGB (PC/DTV) or HDMI IN (or HDMI/DVI IN to display the PC on the set.
- ▶ If graphic card on the PC does output analog and digital RGB simultaneously, set the set to either RGB or HDMI; (the other mode is set to Plug and Play automatically by the set.)
- ▶ DOS mode may not work depending on video card if you use a HDMI to DVI cable.
- ▶ When you use too long RGB-PC cable, there might be a noise on the screen. We recommend using under 5m of the cable. It provides the best picture quality.

Supported Display Resolution (for 32LC2D * / 37LC2D * / 42LC2D *)

RGB[PC] / HDMI[PC] mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
720x400	31.468	70.8
640x480	37.684	75.00
	31.469	59.94
800x600	46.875	75
	37.879	60.31
832x624	49.725	74.55
	48.363	60
1024x768	56.47	70
	60.123	75.029
1280x768	47.776	59.870
1360x768	47.720	59.799
1366x768	47.720	59.799

RGB[DTV] / HDMI[DTV] mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
720x576	31.25	50.00
640x480	31.5	59.94/60
	31.47	59.94/60
1280x720	45.00	50.00
	44.96	59.94/60
1920x1080	28.13	50.00
	33.72	59.94/60

! NOTE

- ▶ The set is supported to 640x480 in HDMI[DTV] mode.

Supported Display Resolution (for 42PC1D * / 50PC1D *)

RGB[PC] / HDMI[PC] mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
720x400	31.469	70.08
640x480	31.469	59.94
	35.000	66.66
	37.861	72.80
	37.500	75.00
	43.269	85.00
720x480	31.47	59.94
1280x768	47.78	59.87
800x600	35.156	56.25
	37.879	60.31
	48.077	72.18
	46.875	75.00
	53.674	85.06
832x624	49.725	74.55
1024x768	48.363	60.00
	56.476	70.06
	60.023	75.02
	68.677	85.00
1152x864	54.348	60.05
	63.995	70.01
	67.500	75.00
1280x720	44.77	59.85
1280x960	60.023	60.02
1280x1024	63.981	60.02
1360x768	47.72	59.8
1366x768	47.56	59.6

RGB[DTV] / HDMI[DTV] mode

Resolution	Horizontal Frequency(KHz)	Vertical Frequency(Hz)
640x480	31.469	59.94
	31.469	60.00
720x480	31.47	59.94
	31.50	60.00
720x576	31.25	50.00
1280x720	44.96	59.94
	45.00	60.00
	37.50	50.00
1920x1080	33.72	59.94
	33.75	60.00
	28.125	50.00

! NOTE

- ▶ The set is supported to 640x480 [85Hz] and 720x480 in HDMI[PC] mode only.
- ▶ The set is supported to 800x600 [85.06Hz], 1280x768, 1360x768 and 1366x768 in RGB[PC] mode only.
- ▶ The set is supported to 640x480 in HDMI[DTV] mode.

BASIC OPERATION

TURNING ON THE SET

- When using the remote control, aim it at its sensor on the set.


- 1 Connect power cord correctly, the set is switched to standby mode.
- 2 Press the **⏻ / I**, **INPUT** or **PR ▲** or **▼** button on the set or press the **POWER**, **INPUT**, **D/A TV**, **PR ▲** or **▼** or **NUMBER** buttons on the remote control and then the set will switch on.

Initializing setup



After selecting the desired language, you can adjust the Auto Programme tuning. If the OSD (On Screen Display) is displayed on the screen as figure after turning on the set, you can adjust the Auto Programme tuning.


Note: It will automatically disappear after approx. 40 seconds unless a button is pressed.

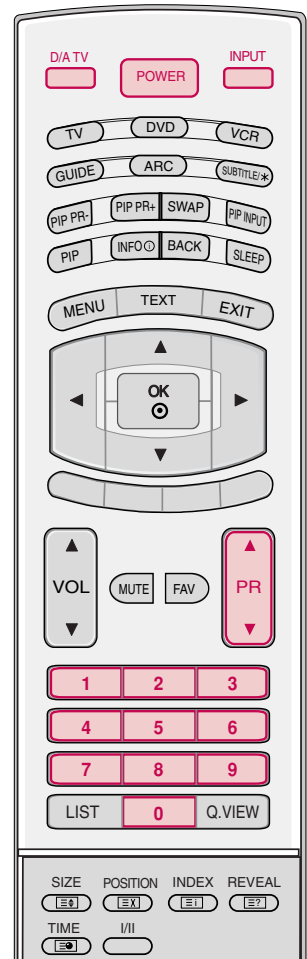

PROGRAMME SELECTION

Automatically finds all channels available through antenna or cable inputs, and stores them in memory on the channel list.

- 1 Press the **PR** ▲ or ▼ or **NUMBER** buttons to select a programme number.

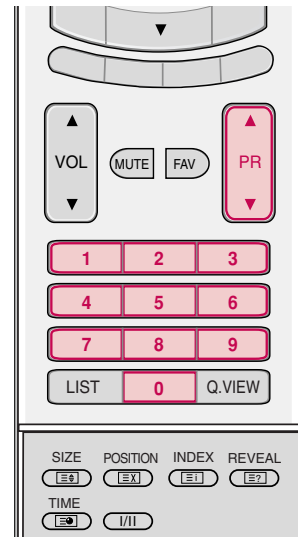


VOLUME ADJUSTMENT

Adjust the volume to suit your personal preference.

- 1 Press the **VOL** ▲ or ▼ button to adjust the volume.

If you want to switch the sound off, press the **MUTE** button.

You can cancel this function by pressing the **MUTE**, **VOL** ▲ or ▼, or **I/II** button.

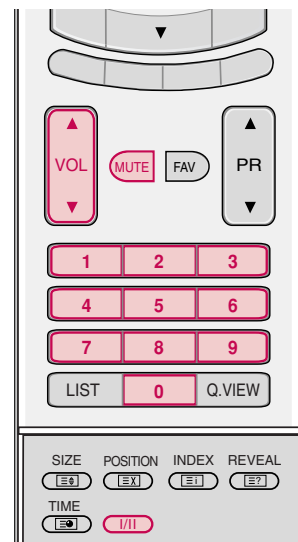

SPECIAL FUNCTIONS



PIP / POP / TWIN PICTURE

PIP lets you view 2 different inputs (sources) on the screen at the same time. One source will be large, and the other source will show a smaller inset image.

Double window mode splits the screen into 2, allowing 2 picture sources to be shown on the screen at the same time. Each source is given half the screen.

Watching PIP/Double Window/POP

Press the **PIP** button to access the sub picture. Each press of PIP changes the PIP options as shown below.

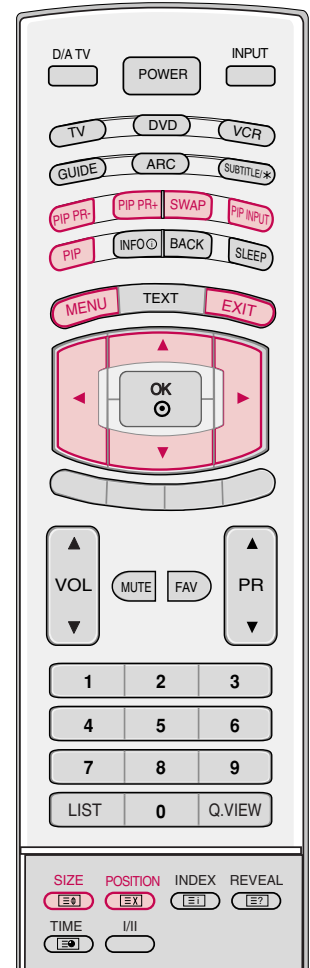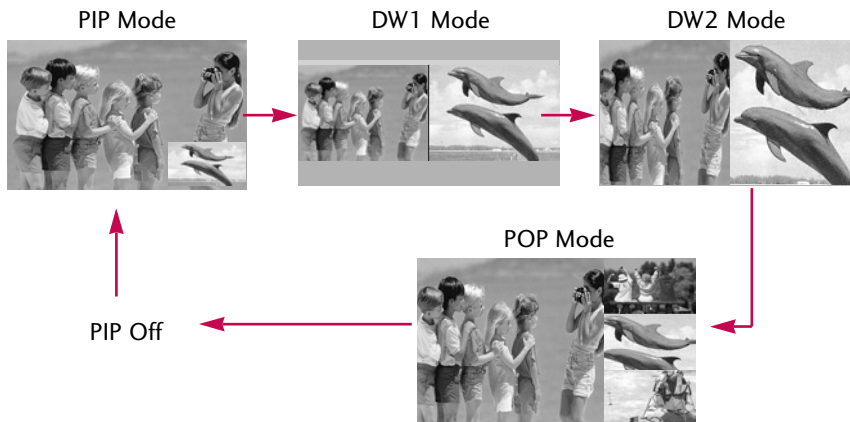

Programme Selection for Sub Picture

- 1 Press the **PIP** button.
- 2 Press the **PIP PR +/-** button to select a programme for the sub picture.
(You can't select DTV for main and sub picture simultaneously).

PIP / POP / TWIN PICTURE

Input Source Selection for Sub Picture

Press the **PIP INPUT** button to select the input source for the sub picture. Each press of **PIP INPUT** button is pressed, each input source for the sub picture is displayed. In some models, when the sub picture quality get poor for sub picture, select Auto, PAL, SECAM or NTSC in PIP System menu.

! NOTE

- ▶ You can't select the same modes for main picture and sub picture simultaneously.
- ▶ When the main picture is DTV or HDMI mode, the sub picture isn't available to select DTV and HDMI modes.
- ▶ When the main picture is RGB mode, the sub picture isn't available to select HDMI modes.
- ▶ When the main picture is HDMI mode, the sub picture isn't available to select RGB modes.
- ▶ It's not available to use this function in Vertical Frequency 85Hz/85.06Hz for sub picture.
- ▶ It's not available to use 1280x720, 60Hz in HDMI[PC] for sub picture.

Sub Picture Size Adjustment

- 1 Press the **SIZE** button and then ◀ or ▶ button to adjust the sub picture size.

With **SIZE** button in DW1 modes, main and sub picture is adjusted simultaneously. With **SIZE** button in PIP mode, sub picture is adjusted.



Moving the Sub Picture (PIP mode only)

- 1 Press the **POSITION** button.
- 2 Repeatedly press the ▲ or ▼ or ◀ or ▶ button until desired position is achieved.

The sub picture moves up/down or left/right.




SPECIAL FUNCTIONS

PIP / POP / TWIN PICTURE

Adjusting PIP Transparency (PIP mode only)

- 1 Press the **MENU** button and then **▲** or **▼** button to select the PIP/DW menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select PIP Transparency.
- 3 Press the **▶** button and then **◀** or **▶** button to adjust PIP transparency.
- 4 Press the **EXIT** button to return to normal TV viewing.

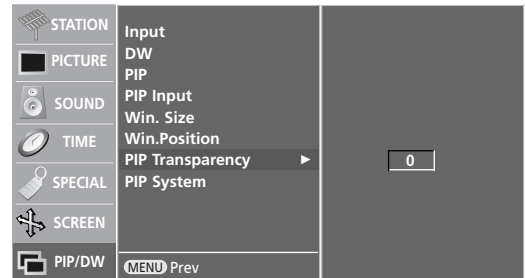

Swapping between main and sub pictures

Press the **SWAP** button to exchange the main and sub pictures.



POP (Picture-out-of-Picture: Programme Scan)

Use POP to search the programmes of all the memorized channels one-by-one on the 3 PIP screen display, (while the main picture source remains the current channel). The pictures of all the programmed channels are searched with the 3 POP screen.



TELETEXT

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this set can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

Switch on/off

- 1 Press the **TEXT** button to switch to teletext. The initial page or last page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

- 2 Press the **TEXT** or **EXIT** button to switch off teletext. The previous mode reappears.
-

SIMPLE Text

■ Page selection

- 1 Enter the desired page number as a three digit number with the **NUMBER** buttons.

If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.

- 2 The **PR ▲** or **PR ▼** button can be used to select the preceding or following page.
-

SPECIAL FUNCTIONS

TELETEXT

TOP Text

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

■ Block / group / page selection

- 1 With the **BLUE** button you can progress from block to block.
 - 2 Use the **YELLOW** button to proceed to the next group with automatic overflow to the next block.
 - 3 With the **GREEN** button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the **PR ▲** button can be used.
 - 4 The **RED** button permits to return to previous selection. Alternatively the **PR ▼** button can be used.
-

 
■ Direct page selection

- 1 Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the **NUMBER** buttons in TOP mode.
-

FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

■ Page selection

- 1 Press the  button to select the index page.
 - 2 You can select the pages which are colour coded along the bottom line with the same coloured buttons.
 - 3 Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the **NUMBER** buttons in FASTEXT mode.
 - 4 The **PR ▲** or **PR ▼** button can be used to select the preceding or following page.
-

Special Teletext Functions



REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.
Press this button again to remove the information from the display.

SIZE

Selects double height text.
Press this button to enlarge the top half of the page.
Press this button again to enlarge the bottom half of the page.
Press this button again to return to the normal display.

POSITION

Displays the picture on the screen while waiting for the new teletext page.
The display  will appear at the top left hand corner of the screen.
When the updated page is available then display  will change to the page number.
Press this button to view the updated teletext page.

TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen.
Press this button again to remove the display.
In the teletext mode, press this button to select a sub page number.
The sub page number is displayed at the bottom of the screen.
To hold or change the sub page, press the **RED/GREEN**, **◀** or **▶** or **NUMBER** buttons.
Press again to exit this function.

SPECIAL FUNCTIONS

EPG (ELECTRONIC PROGRAMME GUIDE) (IN DIGITAL MODE)

This system has an Electronic Programme Guide (EPG) to help your navigation through all the possible viewing options.

The EPG supplies information such as programme listings, start and end times for all available services. In addition, detailed information about the programme is often available in the EPG (the availability and amount of these programme details will vary, depending on the particular broadcaster).

This function can be used only when the EPG information is broadcasted by broadcasting companies.

The EPG displays the programme description for next 8 days.

Switch on/off EPG

- 1 Press the **GUIDE** button to switch on EPG.
- 2 Press the **GUIDE** or **EXIT** button again to switch off EPG and return to TV viewing.

Select a programme

- 1 Press the **▲** or **▼**, **◀** or **▶**, **PR ▲** or **▼** button to select desired programme, then press the **OK** button to display the selected programme.

Button Function in NOW/NEXT Guide Mode

Remote Control Buttons	Function
RED	Change EPG mode
YELLOW	Enter Timer Record/Remind setting mode
BLUE	Enter Timer Record/Remind list mode
●	Change to the selected channel
◀ or ▶	Select NOW or NEXT Programme
▲ or ▼	Select the Broadcasting Programme
PR ▲ or ▼	Page Up/Down
GUIDE/EXIT	Switch off EPG
FAV	Displayed when the Favourite Programme.
i	The detail information on or off

Button Function in Extended Description Box

Remote Control Buttons	Function
▲ or ▼	Text Up/Down
i	The detail information on or off
GUIDE/EXIT	Switch off EPG

Button Function in 8 Days Guide Mode

Remote Control Buttons	Function
RED	Change EPG mode
GREEN	Enter Date setting mode
YELLOW	Enter Timer Record/Remind setting mode
BLUE	Enter Timer Record/Remind list mode
○	Change to the selected channel
◀ or ▶	Select NOW or NEXT Programme
▲ or ▼	Select the Broadcasting Programme
PR ▲ or ▼	Page Up/Down
GUIDE/EXIT	Switch off EPG
FAV	Displayed when the Favourite Programme.
i	The detail information on or off

Button Function in Date Change Mode

Remote Control Buttons	Function
GREEN	Switch off Date setting mode
○	Change to the selected date
◀ or ▶	Select a date
▼	Switch off Date setting mode
GUIDE/EXIT	Switch off EPG

Button Function in Record/Remind Setting Mode

- This function is available only when recording equipment that use pin8 recording signalling has been connected to the DTV-OUT terminal, using a SCART cable.

Remote Control Buttons	Function
RED	Change to Guide or Timer list mode
○	Save Timer Record/Remind
◀ or ▶	Select Type, Service, Date or Start/End time
▲ or ▼	Function setting



Button Function in Timer List Mode







Remote Control Buttons	Function
RED	Add new Manual Timer setting mode
GREEN	Enter Timer list editing mode
YELLOW	Delete the selected item
BLUE	Change to Guide mode
▲ or ▼	Select Timer list

TV MENU

ON SCREEN MENUS SELECTION AND ADJUSTMENT

Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

- 1 Press the **MENU** button and then use **▲** or **▼** button to select each menu.
- 2 Press the **▶** button and then use **▲** or **▼** or **◀** or **▶** button to display the available menus.

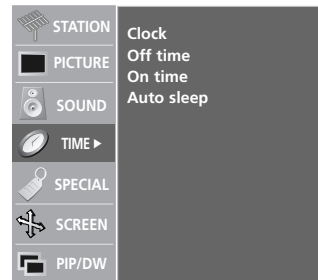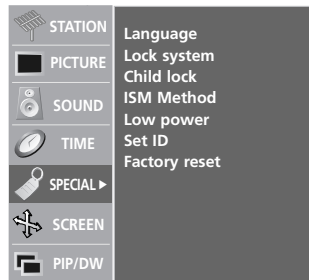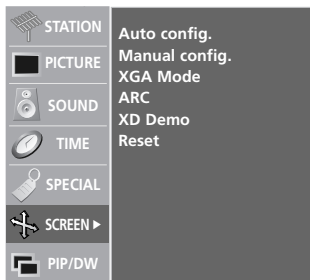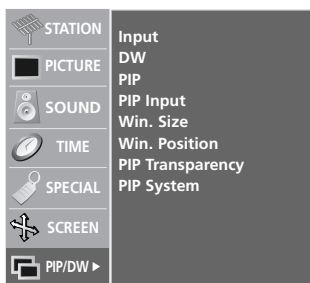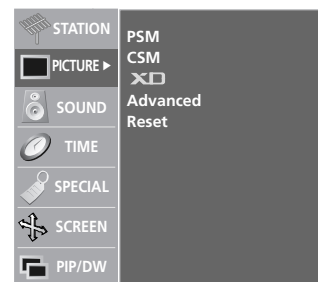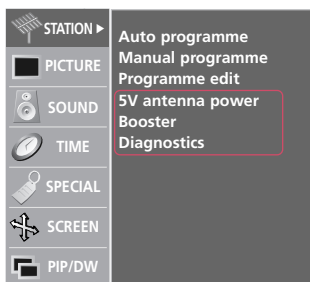

! NOTE


- ▶ It's not available to use ISM Method and Low power in **32/37/42LC2D** models.
- ▶ In Analogue mode, 5V antenna power, Booster or Diagnostics will not display.
- ▶ In Digital mode, Favourite programme will not display.

TV MENU / STATION MENU OPTIONS

AUTO PROGRAMME (IN DIGITAL MODE)

Use it to automatically find and store all of the programmes.

When you start auto programming in digital mode, all the stored service information will be deleted.

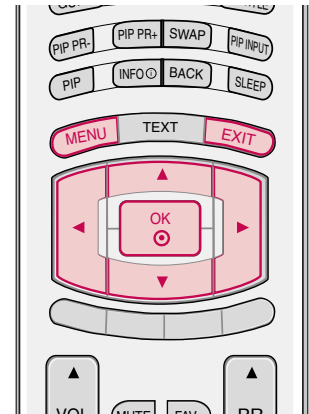

1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.

2 Press the **▶** button and then **▲** or **▼** button to select **Auto programme**.




3 Press the **▶** button and then **▶** button to begin auto programming.

The message “All (of your) channel setup information will be updated. Continue?” will appear.

If you want to keep on auto programming select **YES** with using the **◀** or **▶** button. Then, press the **OK** button. Otherwise select **NO**.

To stop auto programming, press the **MENU** button.


4 Press the **EXIT** button to return to normal TV viewing.

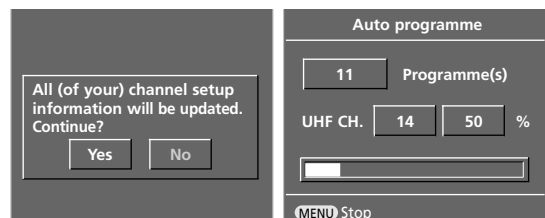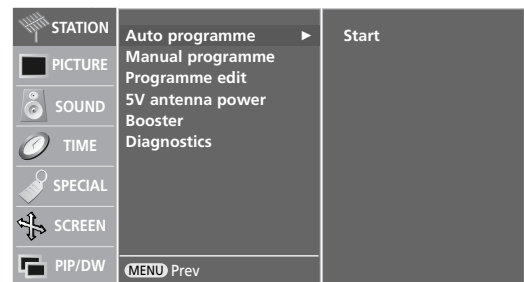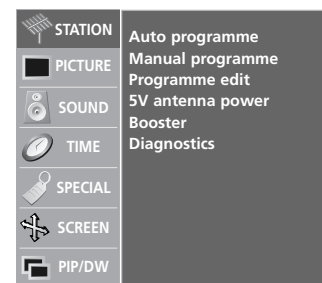

TV MENU / STATION MENU OPTIONS

MANUAL PROGRAMME TUNING (IN DIGITAL MODE)

Manual programme lets you manually add a programme to your programme list.

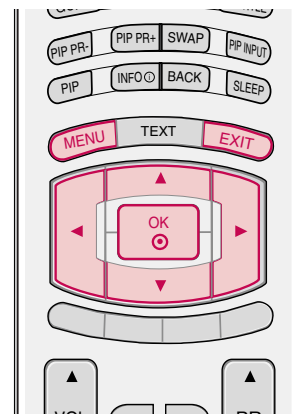

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Manual programme**.
- 3 Press the **▶** button and then **▲** or **▼** button or **NUMBER** buttons to select the desired channel number.


- 4 Press the **OK** button to save.

When the channel number you want to add is already added in programme list, the message “Setup information of the channel will be updated. Continue?” will appear.


If you want to keep on manual programming, select **YES** with using the **◀** or **▶** button.

Then, press the **OK** button. Otherwise select **NO**.


- 5 Press the **EXIT** button to return to normal TV viewing.

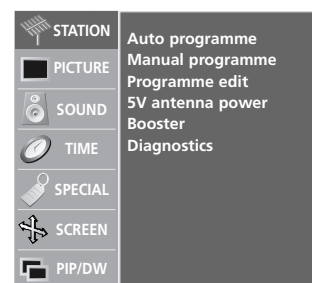

1

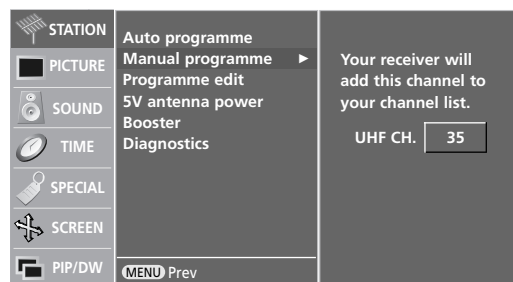

2

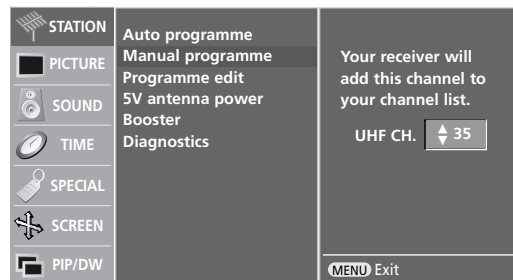


3 4

PROGRAMME EDIT (IN DIGITAL MODE)

When a programme number is skipped, it means that you will be unable to select it using **PR** ▲ or ▼ button during TV viewing.

If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the Programme edit menu.


This function enables you to skip the stored programmes.

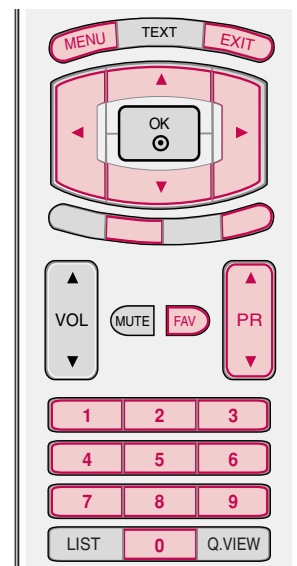


- 1 Press the **MENU** button and then ▲ or ▼ button to select the **STATION** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Programme edit** menu.
- 3 Press the ► button to enter the **Programme edit** menu.
- 4 Select a programme to be stored or skipped with the ▲ or ▼ or ◀ or ▶ button.
- 5 Press the **BLUE** button repeatedly to have the programme skipped or stored.

In case of programmes to be skipped, skipped programme shows in blue colour and these programmes will not be selected by the **PR** ▲ or ▼ buttons during TV viewing.

- 6 Press the **EXIT** button to return to normal TV viewing.

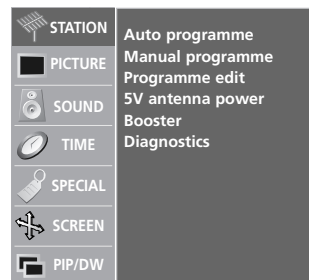

1

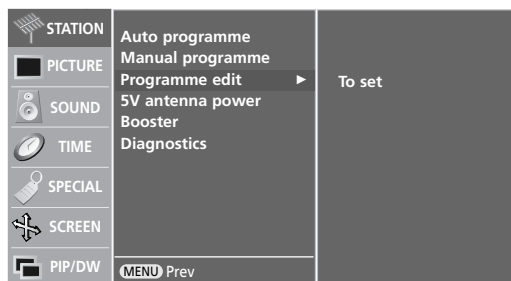

2 3








4 5

TV MENU / STATION MENU OPTIONS

PROGRAMME EDIT (IN DIGITAL MODE)

Mini Glossary

-  Displayed when the TV Programme.
-  Displayed when the Favourite Programme.
-  Displayed when the Locked Programme.
-  Displayed when the Radio Programme.
-  Displayed when the Teletext Programme.

■ Skipping a programme number

1 Select a programme number to be skipped with the ▲ or ▼ or ◀ or ▶ button.

2 Press the **BLUE** button. The skipped programme number turns to blue.

3 Press the **BLUE** button again to release the skipped programme.

When a programme number is skipped it means that you will be unable to select it using the **PR** ▲ or ▼ button during normal TV viewing.

If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or EPG.

4 Press the **EXIT** button to return to TV viewing or press the **MENU** button to return to the previous menu.

■ Locking a programme (In Lock System On mode only)

1 Select a programme to be locked with the ▲ or ▼ or ◀ or ▶ button.

2 Press the **GREEN** button. The lock mark will appear in front of that programme number.

3 Press the **GREEN** button again to release this function.

Note :

- ▶ To watch a locked programme, input a 4-digit password in Lock system. Be sure to remember this number!
- ▶ If you forgot your password, press '7', '7', '7', '7' on the remote control handset.
- ▶ If you select other programme after releasing a locked programme and then return to the locked programme within 1 minute, you needn't input a password to select the locked programme.


■ Selecting favourite programme

1 Select your favourite programme number by pressing ▲ or ▼ or ◀ or ▶ button and then press the **FAV** button on your remote control handset.

It will automatically include the selected programme into your favourite programme list and heart-mark will appear in front of that programme number.

5V ANTENNA POWER (IN DIGITAL MODE ONLY)

Even if there isn't a special 5V adapter power in the external antenna, this function can output 5V in the set.

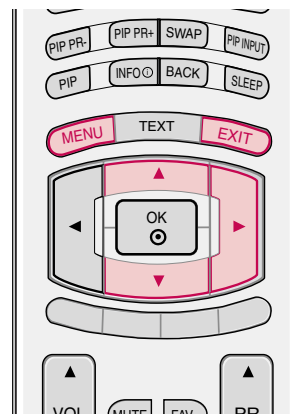

1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.


2 Press the **▶** button and then use **▲** or **▼** button to select **5V antenna power**.

3 Press the **▶** button and then use **▲** or **▼** button to select **On** or **Off**.


In **5V antenna power On**, if the set is short-circuit, it will automatically return to **Off**.

The message “**Antenna feed overloaded. Automatically switched off.**” will appear.

4 Press the **EXIT** button to return to normal TV viewing.

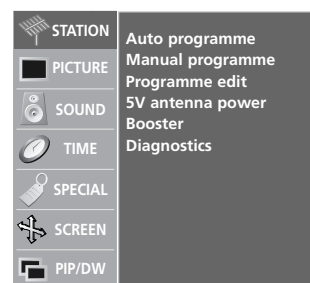

1

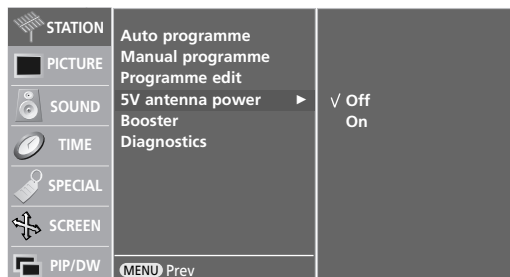


2 3

TV MENU / STATION MENU OPTIONS


Booster (In Digital Mode only)

In some models, **Booster** is an optional function. Only a set with **Booster** can perform this function.


If the reception is poor at the fringe area of TV signal, select **Booster** to **On**.

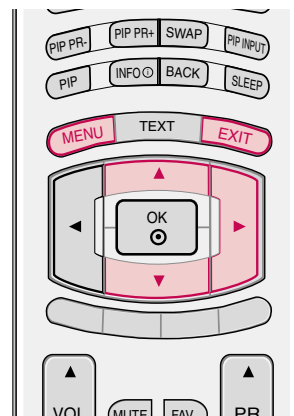

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **STATION** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **Booster**.
- 3 Press the ► button and then use ▲ or ▼ button to select **On** or **Off**.

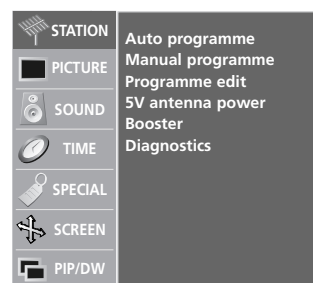

- 4 Press the **EXIT** button to return to normal TV viewing.

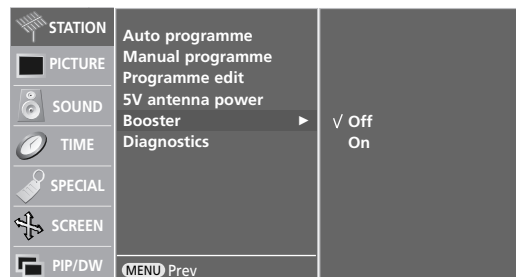


DIAGNOSTICS (IN DIGITAL MODE ONLY)

This function enables you to watch Manufacturer, Model/Type, Serial Number and Software Version.

It's displayed the information and signal strength of the turned MUX.

It's displayed the signal information and service name of the selected MUX.

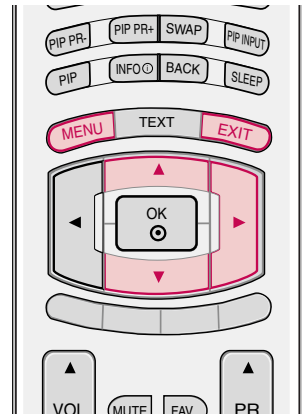


- 1 Press the **MENU** button and then ▲ or ▼ button to select the **STATION** menu.


- 2 Press the ► button and then use ▲ or ▼ button to select **Diagnostics**.

- 3 Press the ► button to display Manufacturer, Model/Type, Serial Number and Software Version.


- 4 Press the **EXIT** button to return to normal TV viewing.

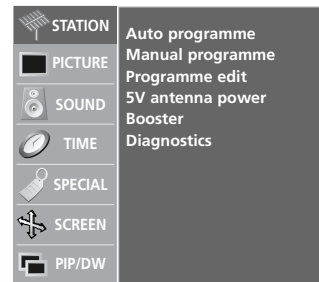

1

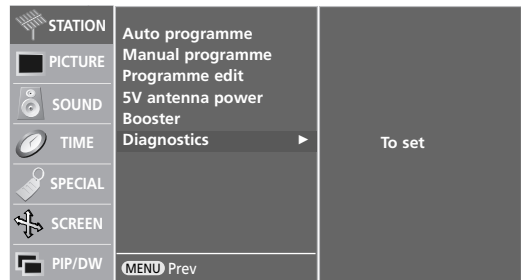


2

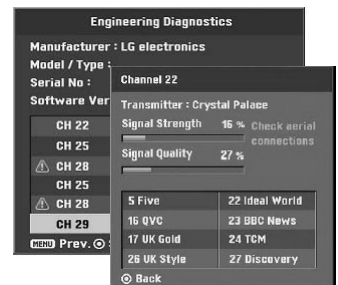

3

AUTO PROGRAMME TUNING (IN ANALOGUE MODE)

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

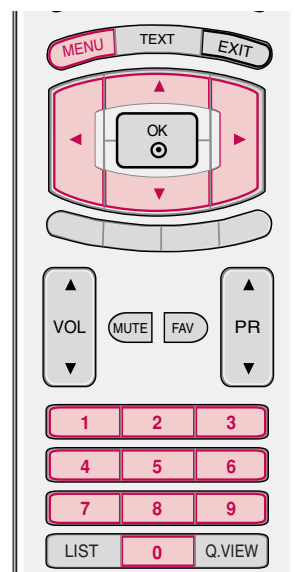

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **STATION** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Auto programme**.
- 3 Press the ► button to select **System**. Select a TV system with the ◀ or ► button;

L: SECAM L/L' (France)
 BG : PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M.East / Africa / Australia)
 I: PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
 DK : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)

- 4 Press the ▼ button to select **Storage from**.

Select the beginning programme number with the ◀ or ► button or **NUMBER** buttons on the **Storage from** menu.

- 5 Press the ▼ button to select **Start**.

The station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or TELETEXT data.

If no station name can be assigned to a station, the channel number is assigned and stored as **C** (V/UHF 01-69) or **S** (Cable 01-47), followed by a number.


To stop auto programming, press the **MENU** button.

When auto programming is completed, the **Programme edit** menu appears on the screen.

See the 'Programme edit' section to edit the stored programme.




1

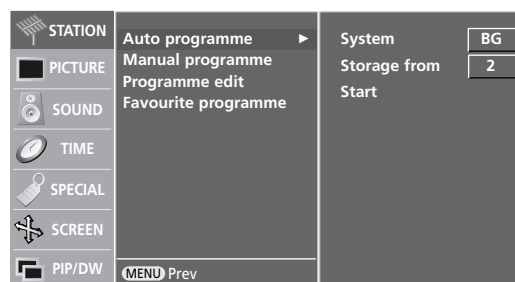

2 ~ 5

MANUAL PROGRAMME TUNING (IN ANALOGUE MODE)

Manual programme lets you manually tune and arrange the stations in whatever order you desire. Also you can assign a station name with five characters to each programme number.

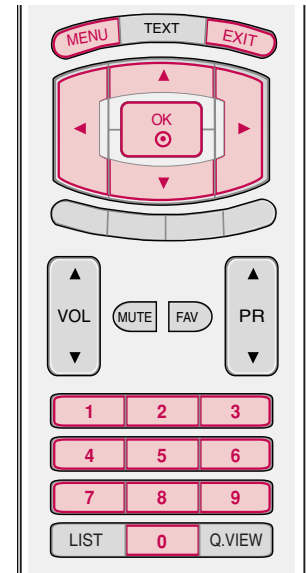

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Manual programme**.
- 3 Press the **▶** button to select **Storage**.

Select the desired programme number with the **◀** or **▶** button or **NUMBER** buttons on the **Storage** menu.

- 4 Press the **▼** button to select **System**. Select a TV system with the **◀** or **▶** button;

L : SECAM L/L' (France)
 BG : PAL B/G, SECAM B/G (Europe / East Europe / Asia / New Zealand / M.East / Africa / Australia)
 I : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
 DK : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)

- 5 Press the **▼** button to select **Band**. Press the **◀** or **▶** button to select **V/UHF** or **Cable** as required.

- 6 Press the **▼** button to select **Channel**. You can select the desired channel number with the **◀** or **▶** button or **NUMBER** buttons.


If possible, select the channel number directly with the **NUMBER** buttons.

- 7 Press the **▼** button to select **Search**. Press the **◀** or **▶** button to commence searching. If a station is found the search will stop.


- 8 Press the **OK** button to store it.

- 9 To store another station, repeat steps 3 to 8.

- 10 Press the **EXIT** button to return to normal TV viewing.

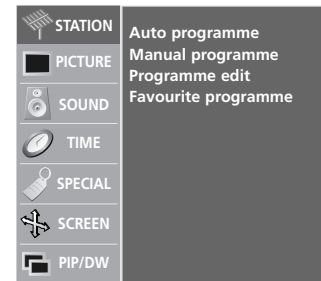

1

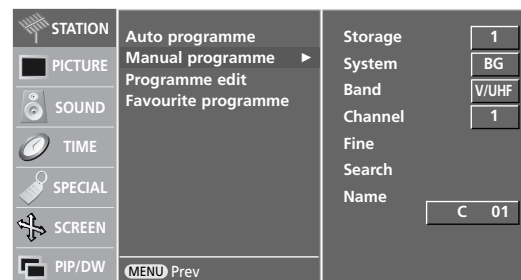



2 ~ 10

TV MENU / STATION MENU OPTIONS

FINE TUNING (IN ANALOGUE MODE)

Normally fine tuning is only necessary if reception is poor. The finely tuned programme will be indicated by a yellow number during programme selection.


- 1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Manual programme**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Fine**.
- 4 Press the **▶** button and then **◀** or **▶** button to fine tune for the best picture and sound.
- 5 Press the **OK** button to store it.
- 6 Press the **EXIT** button to return to normal TV viewing.

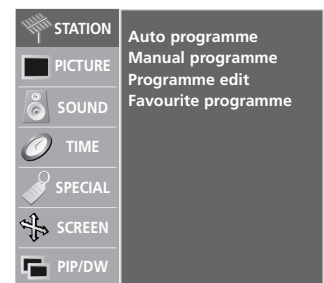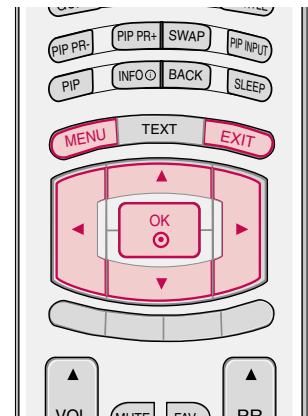


ASSIGNING A STATION NAME (IN ANALOGUE MODE)

You can assign a station name with five characters to each programme number.

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Manual programme**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Name**.
- 4 Press the **▶** button and then **▲** or **▼** button. You can use the alphabet **A** to **Z**, the number **0** to **9**, **+/-**, and blank.
- 5 Press the **◀** or **▶** button to select the position and make your choice of the second character, and so on.
- 6 Press the **OK** button to store it.
- 7 Press the **EXIT** button to return to normal TV viewing.

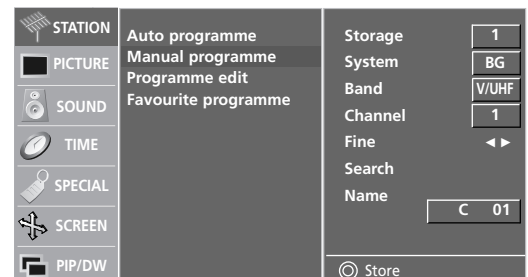


2 ~ 6

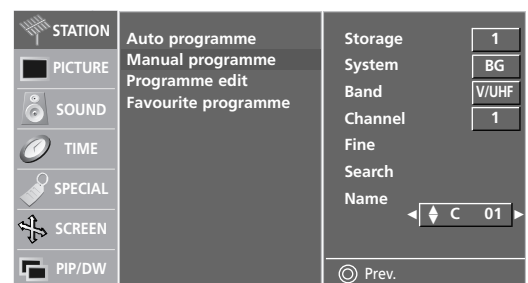


2 ~ 7

PROGRAMME EDIT (IN ANALOGUE MODE)

This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or copy a blank station data into the selected programme number.

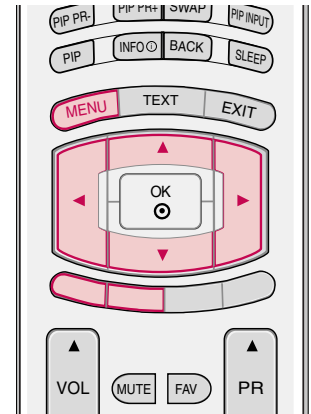


- 1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Programme edit**.
- 3 Press the **▶** button.

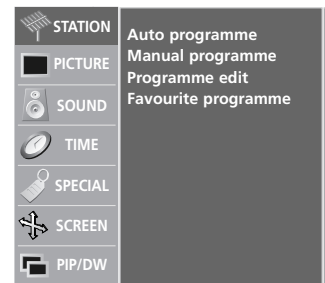

1

■ Deleting a programme


- a Select a programme to be deleted with the **▲** or **▼** or **◀** or **▶** button.
- b Press the **RED** button twice. The selected programme is deleted, all the following programmes are shifted up one position.

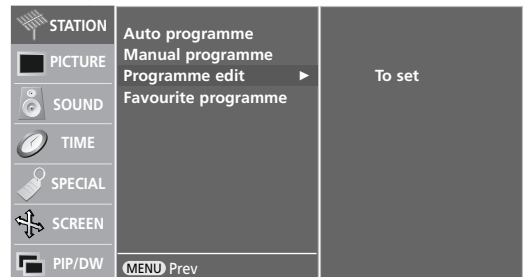

2

■ Copying a programme


- a Select a programme to be copied with the **▲** or **▼** or **◀** or **▶** button.
- b Press the **GREEN** button. All the following programmes are shifted down one position.

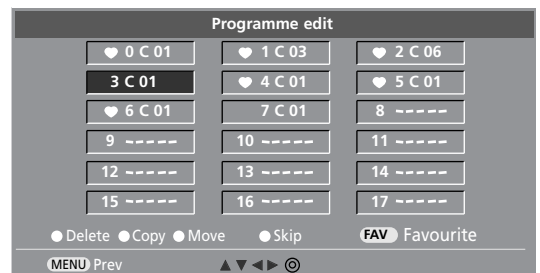

3

TV MENU / STATION MENU OPTIONS

PROGRAMME EDIT (IN ANALOGUE MODE)

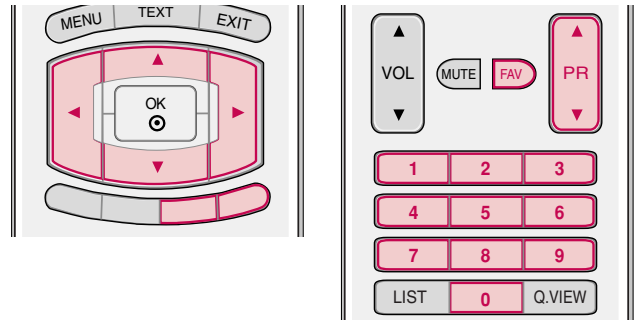

■ Moving a programme

- a Select a programme to be moved with ▲ or ▼ or ◀ or ▶ button.
- b Press the **YELLOW** button.
- c Move the programme to the desired programme number with the ▲ or ▼ or ◀ or ▶ button.
- d Press the **YELLOW** button again to release this function.

■ Skipping a programme number

- a Select a programme number to be skipped with ▲ or ▼ or ◀ or ▶ button.
- b Press the **BLUE** button. The skipped programme number turns to blue.
- c Press the **BLUE** button to release the skipped programme.
- d When a programme number is skipped it means that you will be unable to select it using the **PR** ▲ or ▼ button during normal TV viewing.

If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.

■ Selecting Favourite Programme


- a Select your favourite programme number with ▲ or ▼ or ◀ or ▶ button.
- b Press the **FAV** button.

The selected programme will be added to the favourite programme list and heart-mark will appear in front of that programme number.


FAVOURITE PROGRAMME (IN ANALOGUE MODE)

This function lets you select your favourite programmes directly.


Repeatedly press the **FAV** button to select stored favourite programmes.

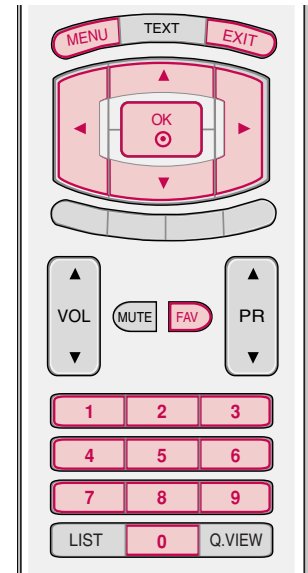

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **STATION** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Favourite programme**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **---**.
- 4 Select a desired programme with the **◀** or **▶** button or **NUMBER** buttons.
Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
- 5 To store another programme, repeat steps 3 to 4.
You can store up to 18 programmes.
- 6 Press the **EXIT** button to return to normal TV viewing.

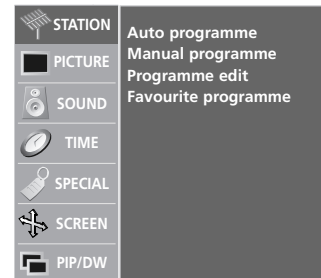

1

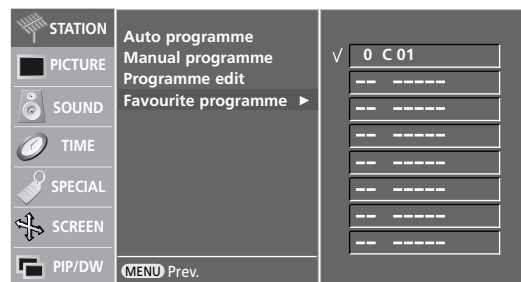


2 ~ 6

TV MENU / STATION MENU OPTIONS

CALLING THE PROGRAMME TABLE

You can check the programmes stored in the memory by displaying the programme table.

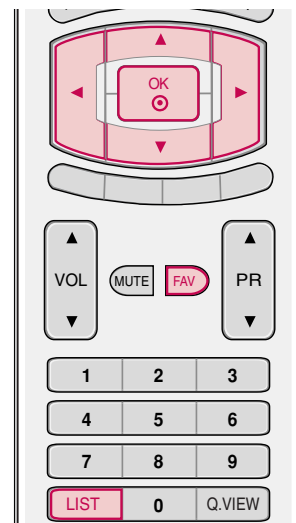

■ Displaying programme LIST

- 1 Press the **LIST** button to display the **PROGRAMME LIST** menu.

The programme list appears on the screen.

- You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.
- Some programmes with the channel number shown in the programme LIST indicate there is no station name assigned.



< In Digital Mode >

■ Selecting a programme in the programme list

- 1 Select a programme with the **▲** or **▼** or **◀** or **▶** button.
- 2 Press the **OK** button. The set switches to the chosen programme number.


■ Paging through a programme list

There are 5 programme LIST pages which total contain 100 programmes.

- 1 Press the **▲** or **▼** or **◀** or **▶** button repeatedly to turns the pages.
- 2 Press the **LIST** button to return to TV viewing.

■ Displaying favourite programme table

Press the **FAV** button to display the Favourite Programme table menu.

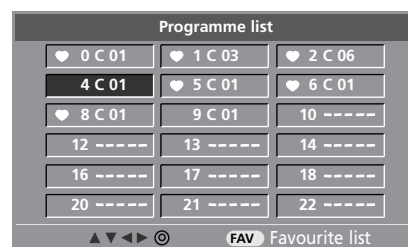

< In Analogue Mode >

Mini Glossary

- ♥ Displayed when the Favourite Programme.
- 🔒 Displayed when the Locked Programme.


TV MENU / PICTURE MENU OPTIONS

PSM (PICTURE STATUS MEMORY)

PSM adjusts the set for the best picture appearance. Select the preset value in the PSM menu based on the programme category.

When adjusting User options (contrast, brightness, colour, and sharpness or tint) manually, PSM automatically changes to User 1/2.

Dynamic, Standard and Mild are programmed for optimum picture reproduction at the factory and cannot be changed.

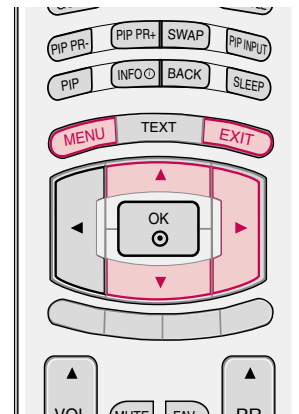

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **PSM**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Dynamic**, **Standard**, **Mild**, **User 1**, or **User 2**.

Dynamic

Select this option to display with a sharp image.

Standard

The most general and natural screen display status.



Mild

Select this option to display with a mild image.

User 1/2


Select this option to use the user-defined setting.

- 4 Press the **EXIT** button to return to normal TV viewing.

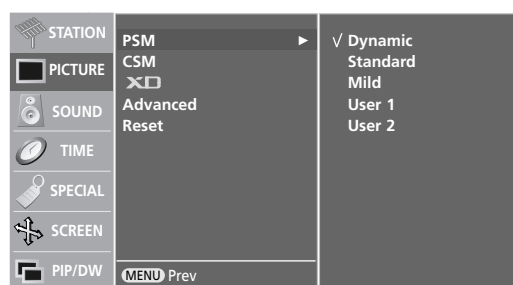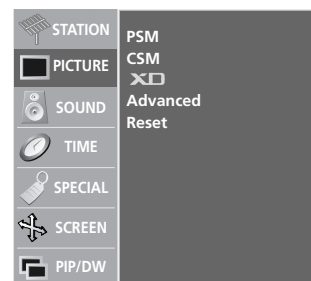

PICTURE ADJUSTMENT (PSM-USER OPTION)

You can adjust picture contrast, brightness, colour intensity, sharpness and tint to the levels you prefer.

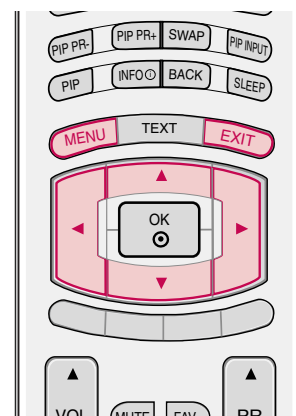

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **PSM**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **User 1**, or **User 2**.
- 4 Press the **▶** button and then **▲** or **▼** button to select the desired picture option (**Contrast**, **Brightness**, **Colour**, **Sharpness**, or **Tint**).

Contrast

Adjusts the difference between the light and dark levels in the picture.

Brightness

Increases or decreases amount of white in the your picture.

Colour

Adjusts intensity of all colours.


Sharpness

Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.


Tint

Adjusts the balance between red and green levels.


- 5 Press the **▶** button and then **◀** or **▶** button to make appropriate adjustments.
- 6 Press the **EXIT** button to return to normal TV viewing.

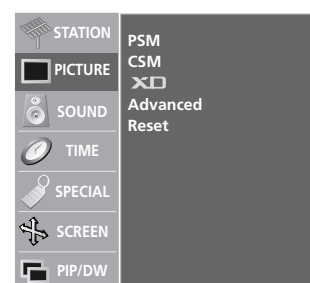

1

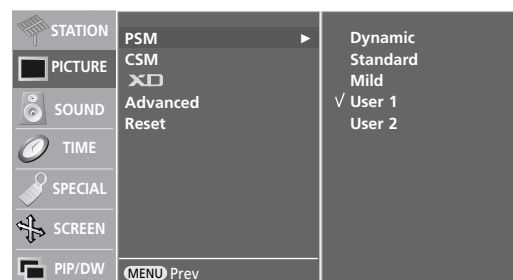

2 ~ 3

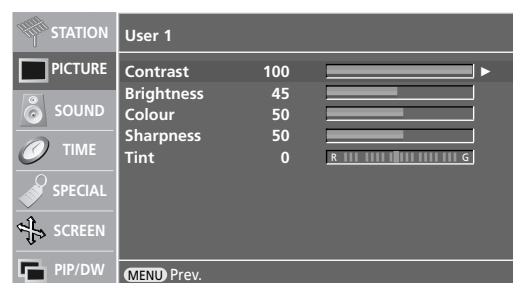


4 ~ 6

CSM (COLOUR STATUS MEMORY)


To initialize values (reset to default settings), select the **Normal** option.

When adjusting colour temperature options (red, green, or blue) manually, **CSM** automatically changes to **User**.

Choose one of three automatic colour adjustments. Set to warm to enhance hotter colours such as red, or set to cool to see less intense colours with more blue.

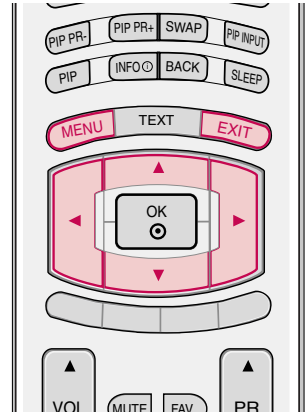

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **CSM**.
- 3 Press the **▶** button and then **▲** or **▼** button to select either **Cool**, **Normal**, **Warm**, or **User**.
- 4 Press the **EXIT** button to return to normal TV viewing.

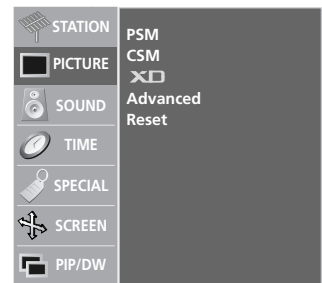


1


MANUAL COLOUR TEMPERATURE CONTROL (CSM - USER OPTION)

You can adjust red, green, blue to any colour temperature you prefer.

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **CSM**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **User**.
- 4 Press the **▶** button and then **▲** or **▼** button to select **Red**, **Green**, or **Blue**.
- 5 Press the **▶** button and then **◀** or **▶** button to make appropriate adjustments.
- 6 Press the **EXIT** button to return to normal TV viewing.

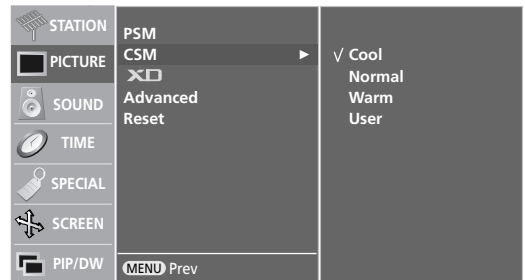

2 ~ 3

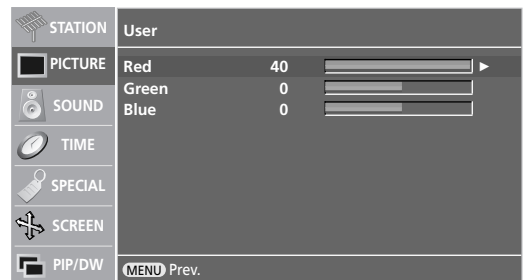



4 ~ 6

TV MENU / PICTURE MENU OPTIONS

XD FUNCTION

XD is LG Electronic's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **XD**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **On** or **Off**.
- 4 Press the **EXIT** button to return to normal TV viewing.

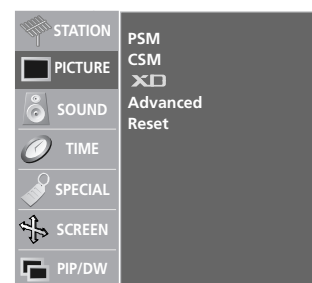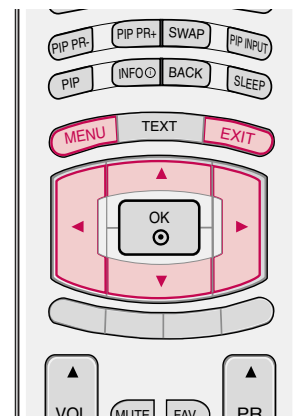

1


XD - USER OPTION

This function can adjust to select the desired skin colour option.


This function is not available for use in RGB[PC], HDMI[PC] mode.

It's not available to use this function in XD Off mode.

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **XD**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Fleshtone**, **Greentone** or **Bluetone**.
- 4 Press the **▶** button and then use **◀** or **▶** button to make appropriate adjustments.
- 5 Press the **EXIT** button to return to normal TV viewing.

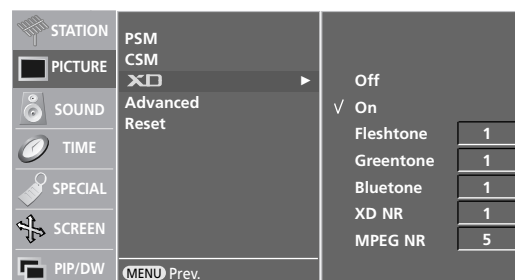


2 ~ 4

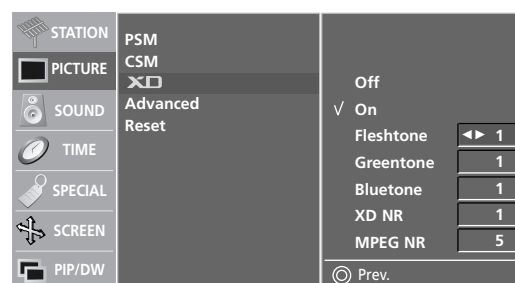


2 ~ 5

NR (NOISE REDUCTION)

You can select XD NR or MPEG NR to reduce the picture noise which may appear on the screen during watching the TV.
This function is not available for use in RGB[PC], HDMI[PC] mode.
XD NR is not available for use in RGB, HDMI, COMPONENT[DTV] mode.

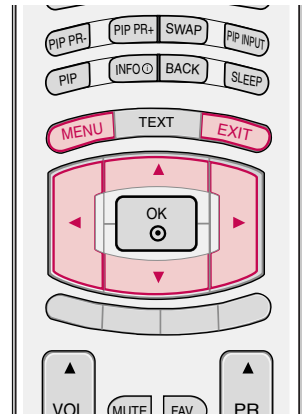

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **XD**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **XD NR** or **MPEG NR**.
- 4 Press the **▶** button and then use **◀** or **▶** button to make appropriate adjustments.
- 5 Press the **EXIT** button to return to normal TV viewing.

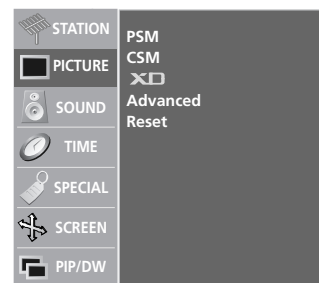


1

ADVANCED

When you watch the movie, this function adjusts the set to the best picture appearance.
Cinema function works in the following mode: TV, AV1, AV2, SAV2, AV3, AV4 or COMPONENT 480i/576i.
Black level is available for use in HDMI mode.


- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Advanced**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Cinema** or **Black level**.
- 4 Press the **◀** or **▶** button to make appropriate adjustments.
- 5 Press the **EXIT** button to return to normal TV viewing.

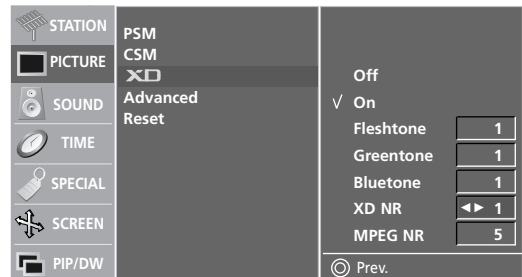

2 ~ 5

RESET

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Reset**.
- 3 Press the **▶** button to initialize the adjusted value.
 - You can initialize PSM, CSM, XD and Advanced.

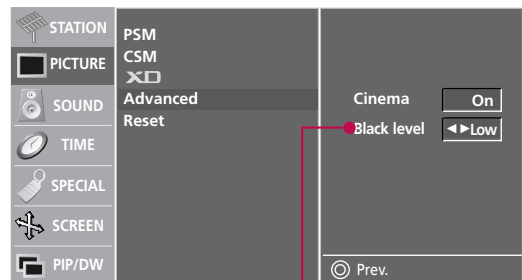

2 ~ 5

- **Low:** The reflection of the screen gets darker.
- **High:** The reflection of the screen gets brighter.


TV MENU / SOUND MENU OPTIONS

SSM (SOUND STATUS MEMORY)

You can select your preferred sound setting; Flat, Music, Movie or Sports and you can also adjust the sound frequency of the equalizer. SSM lets you enjoy the best sound without any special adjustment because the set sets the appropriate sound options based on the programme content.

When adjusting sound equalizer manually, SSM automatically switches User.

SRS TSXT, Flat, Music, Movie, and Sports are preset for good sound quality at the factory and are not adjustable.

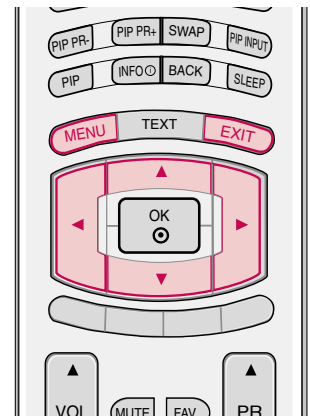

1 Press the **MENU** button and then **▲** or **▼** button to select the **SOUND** menu.

2 Press the **▶** button and then **▲** or **▼** button to select **SSM**.

3 Press the **▶** button and then **▲** or **▼** button to select **SRS TSXT, Flat, Music, Movie, Sports, or User**.

Flat The most commanding and natural audio.


Music Select this option to enjoy the original sound when listening to the music.

Movie Select this option to enjoy sublime sound.

Sports Select this option to watch sports broadcasting.

User Select this option to use the user-defined audio settings.


4 Press the **EXIT** button to return to normal TV viewing.

 is a trademark of SRS Labs, Inc.

TruSurround XT technology is incorporated under license from SRS Labs, Inc.



1

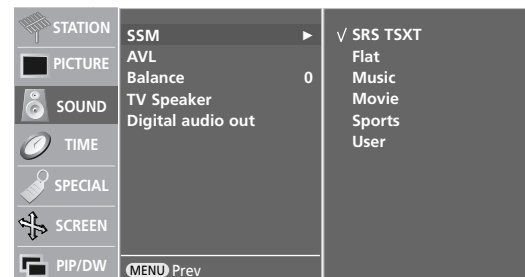

2 ~ 3

SOUND FREQUENCY ADJUSTMENT (SSM - USER OPTION)

Adjust the sound equalizer.

1 Press the **MENU** button and then **▲** or **▼** button to select the **SOUND** menu.


2 Press the **▶** button and then **▲** or **▼** button to select **SSM**.

3 Press the **▶** button and then **▲** or **▼** button to select **User**.

4 Press the **▶** button.

5 Make appropriate sound level with the **▲** or **▼** button. Select a sound band by pressing the **◀** or **▶** button.


6 Press the **EXIT** button to return to normal TV viewing.

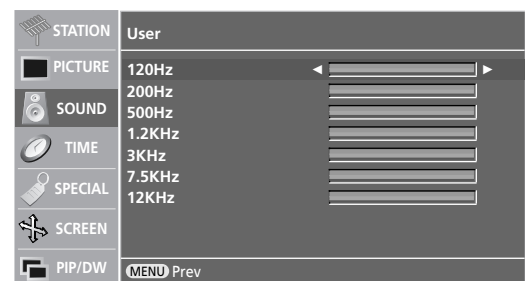

4 ~ 6

AVL (AUTO VOLUME LEVELER)

AVL automatically keeps on an equal volume level even if you change programmes.

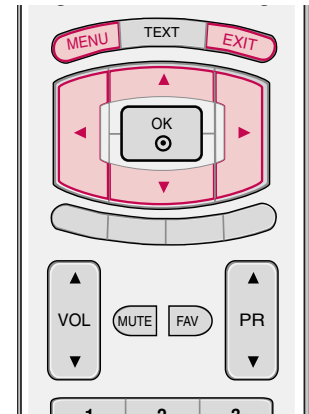

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **SOUND** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **AVL**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Off** or **On**.
- 4 Press the **EXIT** button to return to normal TV viewing.




1


BALANCE ADJUSTMENT

You can adjust the sound balance of speaker to the levels you prefer.

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **SOUND** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Balance**.
- 3 Press the **▶** button and then **◀** or **▶** button to make desired adjustment.
- 4 Press the **EXIT** button to return to normal TV viewing.

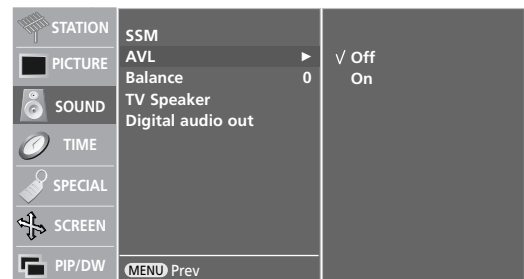

2 ~ 4

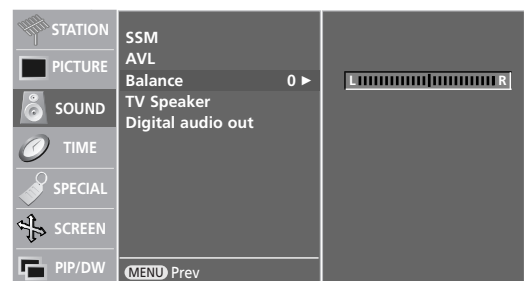

2 ~ 4


TV MENU / SOUND MENU OPTIONS

TV SPEAKER



You can adjust the internal speaker status.

In AV1, AV2, SAV2, AV3, AV4, COMPONENT, RGB and HDMI/DVI (or HDMI1/DVI) with HDMI to DVI cable, TV speaker and/or variable audio can be outputted even though there is no video signal.

If you want to use your external hi-fi stereo system, turn off the internal speakers of the set.

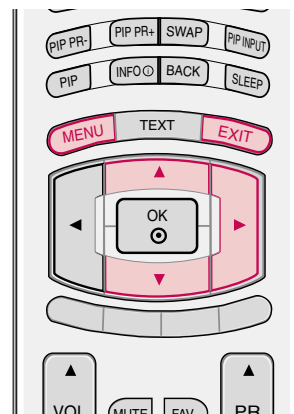

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **SOUND** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **TV Speaker**.
- 3 Press the ► button and then ▲ or ▼ button to select **Off** or **On**.
- 4 Press the **EXIT** button to return to normal TV viewing.

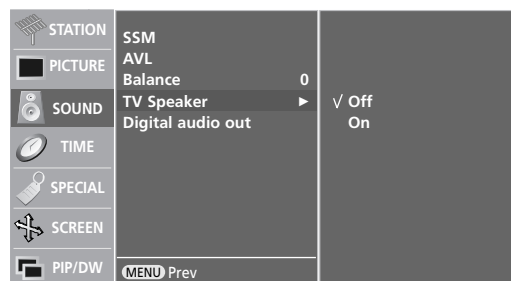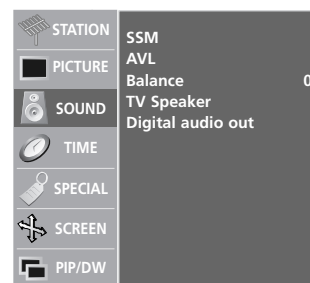

DIGITAL AUDIO OUT


This function lets you select your preferred Digital Audio Output. The set can output Dolby Digital in a channel only which broadcast Dolby Digital Audio.

When it's applied the Dolby Digital format, if you select Dolby Digital on Digital audio out menu, SPDIF Output will be outputted Dolby Digital.


Even if it's selected Dolby Digital, when it doesn't apply Dolby Digital format, SPDIF Output will be outputted PCM. Even if both Dolby Digital and Audio language have been set in a channel which broadcast Dolby Digital Audio, only Dolby Digital will be played.




Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

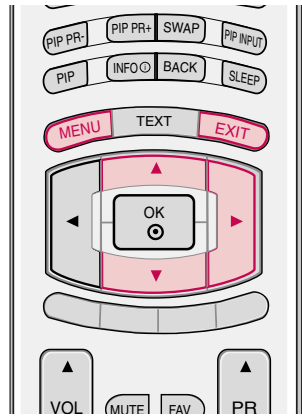

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **SOUND** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Digital audio out**.
- 3 Press the ► button and then ▲ or ▼ button to select **Dolby Digital** or **PCM**.
- 4 Press the **EXIT** button to return to normal TV viewing.

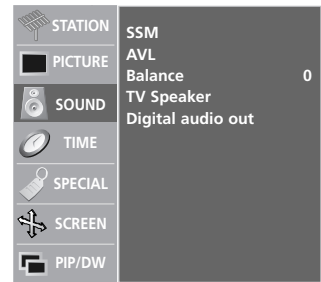

1

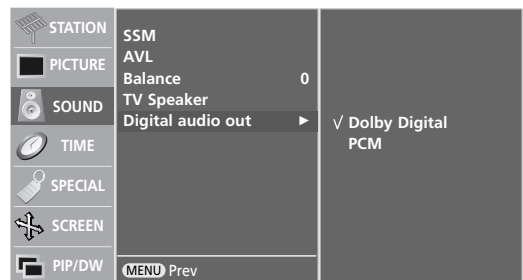

2 ~ 4

TV MENU / SOUND MENU OPTIONS

STEREO/DUAL RECEPTION (IN ANALOGUE MODE ONLY)

When a programme is selected, the sound information for the station appears after the programme number and station name disappear.

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I

■ Mono sound selection

If the stereo signal is weak in stereo reception, you can switch to mono by pressing the **I/II** button twice.

In mono reception, the depth of sound is improved.

To switch back to stereo, press the **I/II** button twice again.

■ Language selection for dual language broadcast

If a programme received two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II** button repeatedly.

DUAL I Sends the primary broadcast language to the loudspeakers.

DUAL II Sends the secondary broadcast language to the loudspeakers.

DUAL I+II Sends a separate language to each loudspeaker.

NICAM RECEPTION (IN ANALOGUE MODE ONLY)

If the set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II** button repeatedly.

- 1 When NICAM mono is received, you can select **NICAM MONO** or **MONO**.
- 2 When NICAM stereo is received, you can select **NICAM STEREO** or **MONO**. If the stereo signal is weak, switch to **MONO**.
- 3 When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**.

SPEAKER SOUND OUTPUT SELECTION (IN ANALOGUE MODE ONLY)


In **AV1**, **AV2**, **SAV2**, **AV3**, **AV4**, **Component**, **RGB** and **HDMI/DVI** (or **HDMI1/DVI** or **HDMI2**) mode, you can select output sound for the left and right loudspeakers.

- 1 Repeatedly press the **I/II** button to select the sound output.
 - L+R**: Audio signal from audio L input is sent to the left loud speaker and audio signal from audio R input is sent to the right loud speaker.
 - L+L**: Audio signal from audio L input is sent to left and right loud speakers.
 - R+R**: Audio signal from audio R input is sent to left and right loud speakers.

TV MENU / TIME MENU OPTIONS

CLOCK SETUP


The clock is set automatically when receiving the digital signal.
(You can set the clock if the TV has no DTV signal.)
You must set to the time correctly before using on/off time function.

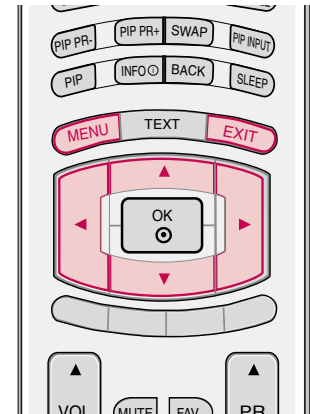


- 1 Press the **MENU** button and then **▲** or **▼** button to select the **TIME** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Clock**.
- 3 Press the **▶** button and then **◀** or **▶** button to select either the year, date, or time option.

Once selected, use the **▲** or **▼** button to set the year, date, and time options.

- 4 Press the **EXIT** button to return to normal TV viewing.

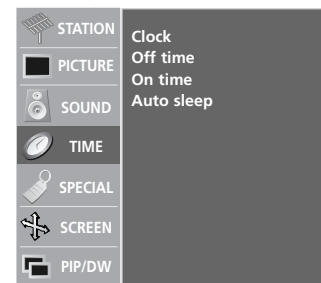

1

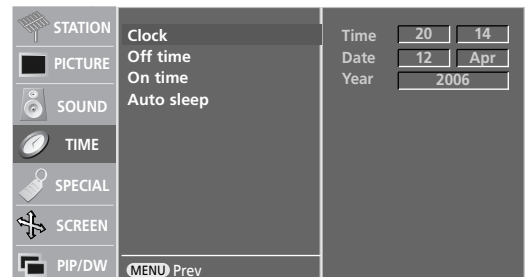

2 ~ 4

TV MENU / TIME MENU OPTIONS

ON/OFF TIME


The Off time automatically switches the set to standby at the preset time.

Two hours after the set is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed.

Once the on time/off time is set, these functions operate daily at the preset time.

Off time function overrides On timer function if they are set both to the same time.

The set must be in standby mode for the On timer to work.

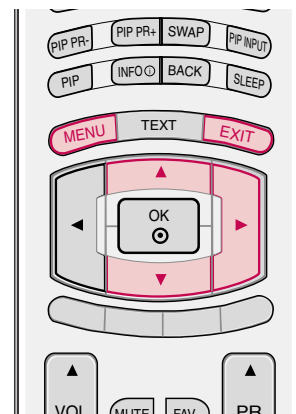

1 Press the **MENU** button and then **▲** or **▼** button to select the **TIME** menu.

2 Press the **▶** button and then **▲** or **▼** button to select **Off time/On time**.

3 Press the **▶** button and then **▲** or **▼** button to select **On**.

• To cancel On/Off timer function, select **Off**.

4 Press the **▶** button and then **▲** or **▼** button to set the hour.

5 Press the **▶** button and then **▲** or **▼** button to set the minutes.

6 For only On timer function


• **Programme:** Press the **▶** button and then **▲** or **▼** button to select **TV** or **DTV**. And then, Press the **▶** button and then **▲** or **▼** button to select the programme.

• **Volume:** Press the **▶** button and then **▲** or **▼** button to adjust volume level at turn-on.

7 Press the **EXIT** button to return to normal TV viewing.



1


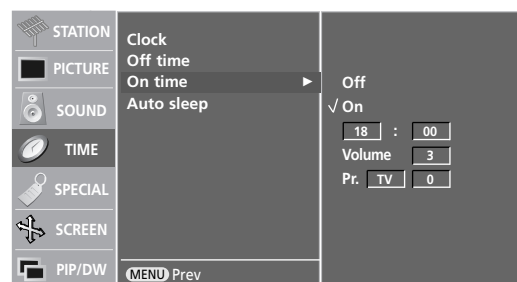


2 ~ 7

AUTO SLEEP

If set to on and there is no input signal, the set turns off automatically after 10 minutes.

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **TIME** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Auto sleep**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Off** or **On**.
- 4 Press the **EXIT** button to return to normal TV viewing.

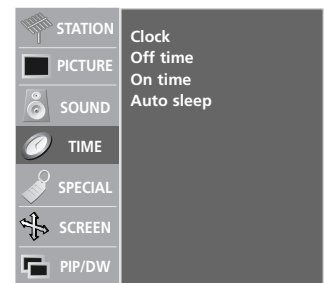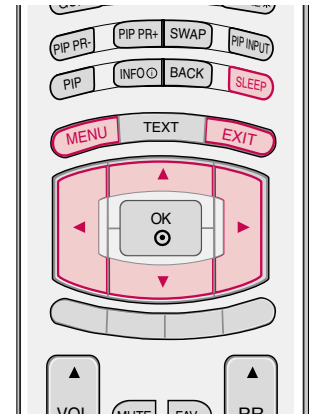

1


SLEEP TIMER

You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time has elapsed.

- a Press the **SLEEP** button repeatedly to select the number of minutes.
The display '**L^{zz} --- Min**' will appear on the screen, followed by 10, 20, 30, 60, 90, 120, 180 and 240.
- b When the number of minutes you want is displayed on the screen, the timer begins to count down from the number of minutes selected.
- c To view the remaining sleep time, press the **SLEEP** button once.
- d To cancel the sleep time, repeatedly press the **SLEEP** button until the display '**L^{zz} --- Min**' appears.
- e When you switch the set off, the set releases the pre-set sleep time.



2 ~ 4

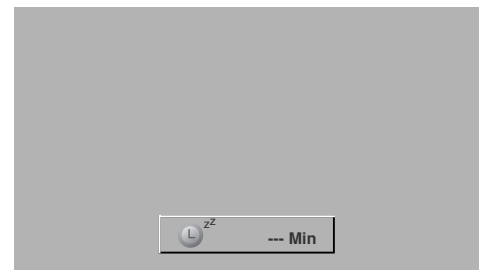


TV MENU / SPECIAL MENU OPTIONS

LANGUAGE


This function lets you select your preferred language for audio.

If the audio data in selected language is not broadcasted, default audio which is broadcasted in current channel will be played.


At first, select PCM in Digital audio out menu to play German, English, French, Spanish or Italian of Language.

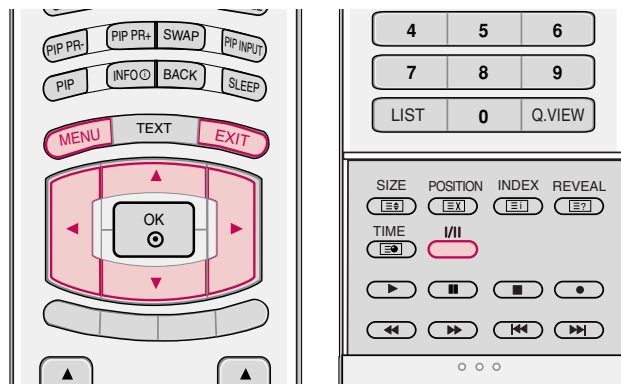

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **SPECIAL** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Language**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Menu**, **Audio** or **Subtitle**.
- 4 Press the **EXIT** button to return to normal TV viewing.

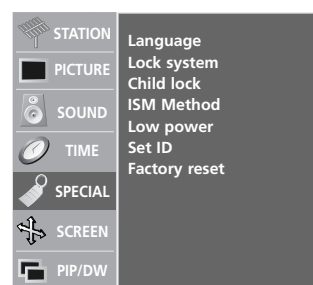

1

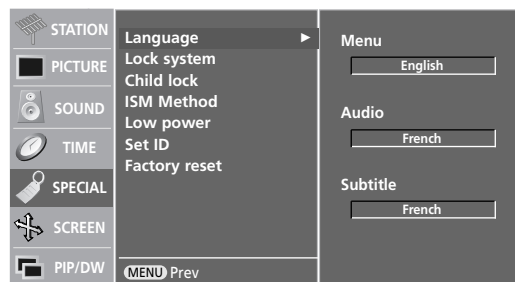

2 ~ 4

- When two or more audio languages are broadcasted, you can select audio language with the **I/II** button on the remote control.
- Press the **▲** or **▼** button to select an audio language.
- Press the **◀** or **▶** button to select **L+R**, **L+L** or **R+R**.




OSD (On-screen Display) Information	
Display	Status
N.A	Not Available
Audio	Audio only service
	Audio for Visual Impaired
	Audio for Hearing Impaired

Notes: The audio which it has not a language code will be displayed a 3 character.

SYSTEM LOCK SETTING

If you first enter the password, press '0', '0', '0', '0' on the remote control handset.

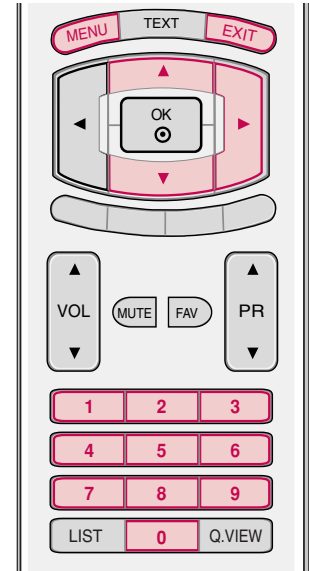

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **SPECIAL** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Lock system**.
- 3 Press the ► button and then ▲ or ▼ button to select **On**.

To set the password


Press the ► button and then use **NUMBER** buttons to input a 4-digit password.

Be sure to remember this number!


Re-enter new password for confirm.

If you forgot your password, press '7', '7', '7', '7' on the remote control handset.

- 4 Press the **EXIT** button to return to normal TV viewing.

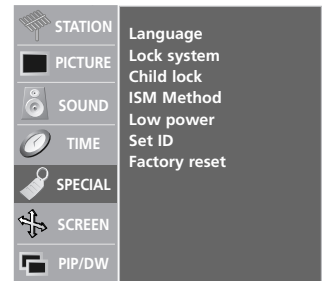

1

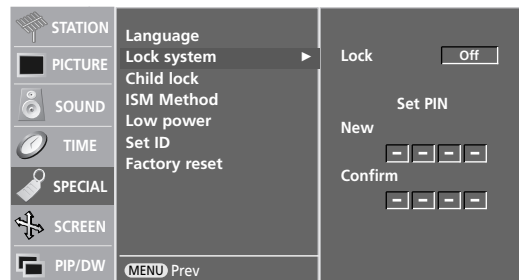

2 ~ 4


TV MENU / SPECIAL MENU OPTIONS

CHILD LOCK

The set can be set so that the remote control is needed to control it.

This feature can be used to prevent unauthorized viewing.

This set is programmed to remember which option it was last set to even if you turn the set off.

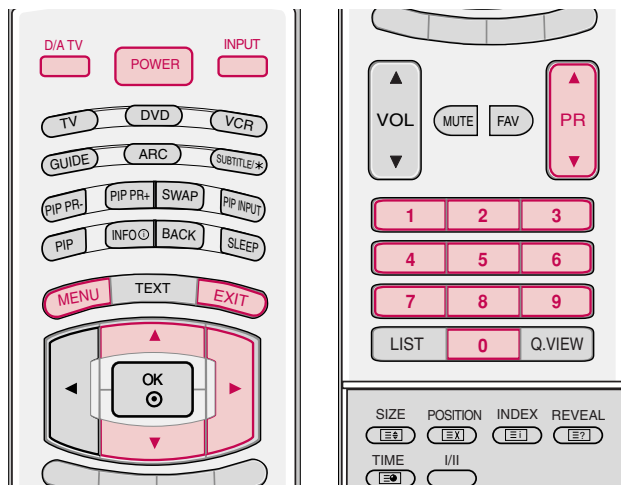


- 1 Press the **MENU** button and then **▲** or **▼** button to select the **SPECIAL** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **Child lock**.
- 3 Press the **▶** button and then **▲** or **▼** button to select **Off** or **On**.


In **Child lock 'On'**, if the set is turned off, press the **⏻ / I**, **INPUT**, **PR ▲** or **▼** button on the set or **POWER**, **INPUT**, **D/A TV**, **PR ▲** or **▼** or **NUMBER** buttons on the remote control.

With the **Child lock On**, the display '**⚠ Child lock on**' appears on the screen if any button on the front panel is pressed while viewing the set.

- 4 Press the **EXIT** button to return to normal TV viewing.

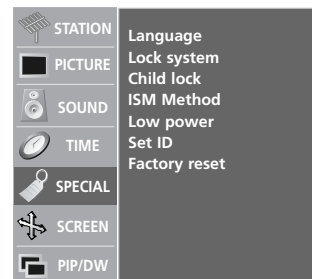

1

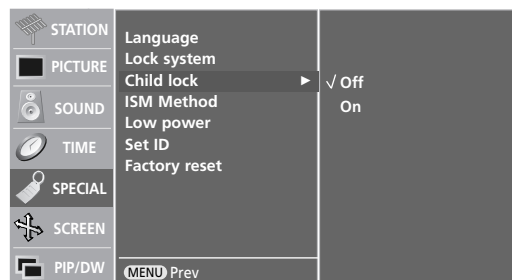


2 ~ 4

ISM METHOD (OPTION) (IMAGE STICKING MINIMIZATION)

A frozen or still picture from a PC/video game displayed on the screen for prolonged periods will result in a ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the screen for a long period of time.

It's not available to use this function in **32/37/42LC2D** *.

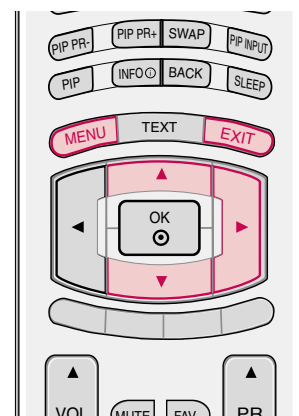

- 1 Press the **MENU** button and then **▲** or **▼** button to select the **SPECIAL** menu.
- 2 Press the **▶** button and then **▲** or **▼** button to select **ISM Method**.
- 3 Press the **▶** button and then **▲** or **▼** button to select either **Normal**, **White wash**, **Orbiter** or **Inversion**.

If you unnecessary to set this function, set **Normal**.

White wash

White wash removes permanent images from the screen.

Note: An excessive permanent image may be impossible to clear entirely with White Wash.

Orbiter


Orbiter may help prevent ghost images.

However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.


Inversion

This is the function to invert the panel colour of the screen. The panel colour is automatically inverted every 30 minutes.

- 4 Press the **EXIT** button to return to normal TV viewing.

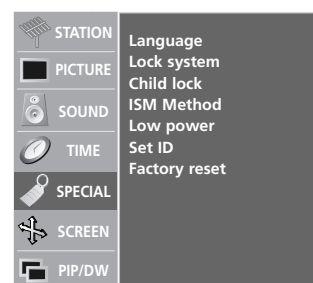

1

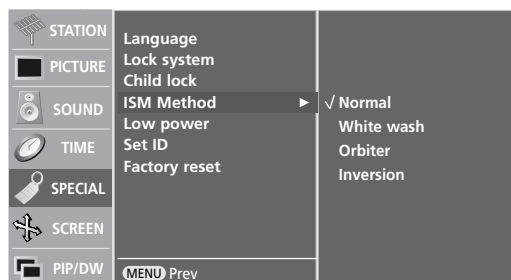

2 ~ 4



TV MENU / SPECIAL MENU OPTIONS

LOW POWER (OPTION)

This is the function to reduce the power consumption of the set.

It's not available to use this function in 32/37/42LC2D *.

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **SPECIAL** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Low power**.
- 3 Press the ► button and then ▲ or ▼ button to select **Off** or **On**.
- 4 Press the **EXIT** button to return to normal TV viewing.

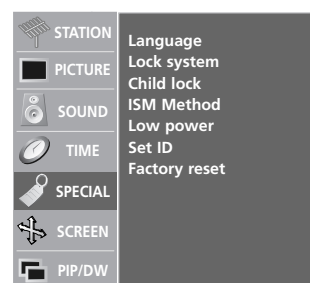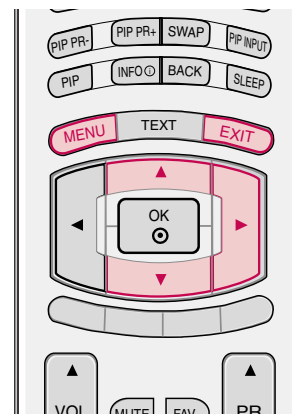

1

FACTORY RESET

Use to quickly reset all the menu options to their original factory preset values.


This function deletes all TV programmes.

To begin Factory Reset, input a 4-digit password in Lock system. Be sure to remember this number!


If you forgot your password, press '7', '7', '7', '7' on the remote control handset.

- 1 Press the **MENU** button and then ▲ or ▼ button to select the **SPECIAL** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Factory reset**.
- 3 Press the ► button to reset the menu options to original values.

After finishing Factory Reset, the set will reboot.

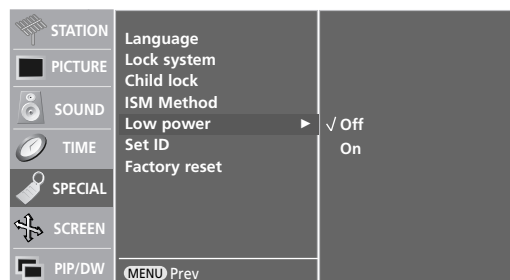

2 ~ 4

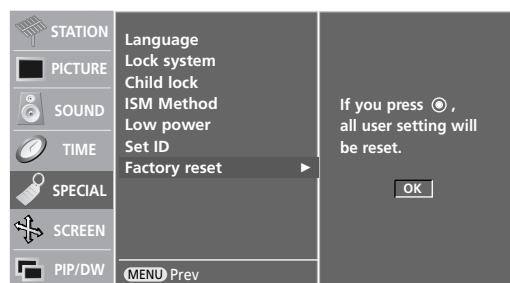

2 ~ 3

TV MENU / SCREEN MENU OPTIONS


AUTO CONFIG. (RGB [PC] MODE ONLY)

This function is for the automatic adjustment of the screen position, clock, and phase.

The displayed image will disappear for a few seconds while the auto configuration is in progress.

Although the image is still not correct, your set is functioning properly but needs further adjustment.

The Auto config. functions don't need to be run for HDMI mode.

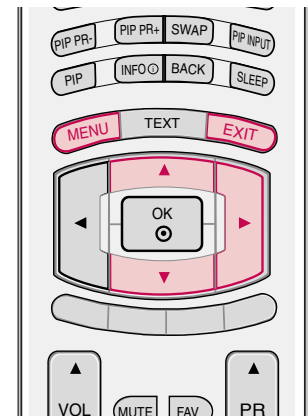


- 1 Press the **MENU** button and then use **▲** or **▼** button to select the **SCREEN** menu.
- 2 Press the **▶** button and then use **▲** or **▼** button to select **Auto config.**
- 3 Press the **▶** button to start **Auto config.**

When **Auto config.** has finished, **OK** will be shown on screen.

If the position of the image is still not correct, try **Auto adjustment** again.

If picture needs to be adjusted more after **Auto adjustment** in RGB (PC), you can adjust the **Manual config.**

- 4 Press the **EXIT** button to return to normal TV viewing.

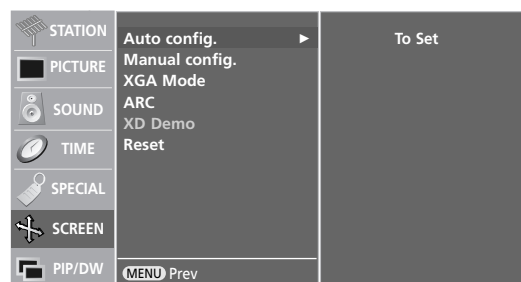


2 ~ 4

TV MENU / SCREEN MENU OPTIONS

MANUAL CONFIG.

If the picture isn't clear after auto adjustment and especially if characters are still trembling, adjust the picture phase manually.

To correct the screen size, adjust **Clock**.

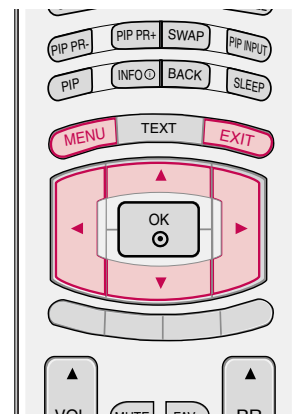

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SCREEN** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Manual config.**.
- 3 Press the ► button and then ▲ or ▼ button to select **Phase, Clock, H-Position** or **V-Position**.


Clock This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

Phase This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

- 4 Press the ◀ or ▶ button to make appropriate adjustments.
- 5 Press the **EXIT** button to return to normal TV viewing.



1

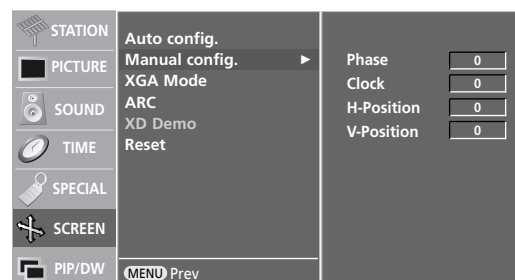

2 ~ 5


- This function works in the following mode : RGB[PC], RGB[DTV], COMPONENT (480p/576p/720p/1080i), HDMI (480p/576p/720p/1080i).
- It's not available to use Phase, Clock function in RGB[DTV], COMPONENT (480p/576p/720p/1080i), HDMI (480p/576p/720p/1080i) mode.

SETTING THE PICTURE FORMAT

You can watch the screen in various picture formats; **Spectacle**, **Full** (option), **Original**, **4:3**, **16:9 (Wide)**, **14:9** and **Zoom**.

If a fixed image is displayed on the screen for a long time, that fixed image may become imprinted on the screen and remain visible.

There might be uncomfortable in **Full** mode. Then change into other mode. You can adjust the enlarge proportion of picture using ▲ or ▼ button.

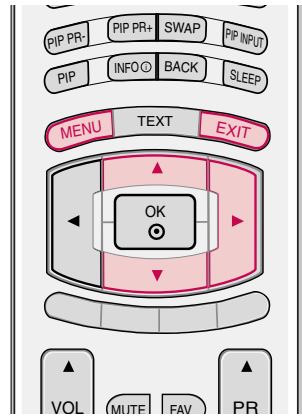

- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SCREEN** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **ARC**.
- 3 Press the ► button and then use ▲ or ▼ button to select **Spectacle**, **Full** (option), **Original**, **4:3**, **16:9 (Wide)**, **14:9** or **Zoom**.

- **Spectacle**

When your set receives the wide screen signal, when selected it will adjust the picture horizontally, in non-linear proportion, to fill the entire screen.

- **Full** (option)

When your set receives the wide screen signal, when selected it will adjust the picture horizontally or vertically, in a linear proportion, to fill the entire screen fully.

- **Original**

When your set receives the wide screen signal, it will be automatically changed to the picture format to be sent.

- **4:3**

Following selection will lead you to view a picture with an original 4:3 aspect ratio, with gray bars appearing at both the left and right sides.

- **16:9 (Wide)**

Following selection will lead you to adjust the picture horizontally, in a linear proportion, to fill the entire screen (useful for viewing 4:3 formatted DVDs).


- **14:9**

You can enjoy the picture format of 14:9 or general TV programme through the 14:9 mode. The screen 14:9 is viewed just like that the screen 4:3 is magnified to the left / right.

- **Zoom**

Following selection will lead you to view the picture without any alternation, while filling the entire screen. However, the top and bottom portions of the picture will be cropped.

- 4 Press the **EXIT** button to return to normal TV viewing.

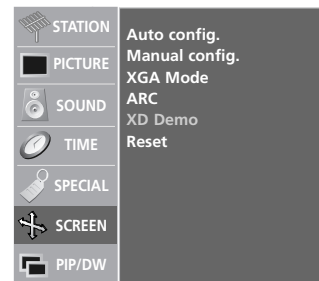

1



2 ~ 4

- You can only select **4:3** and **16:9 (Wide)** in RGB[PC], HDMI[PC] mode only.
- You can only select **4:3**, **16:9 (Wide)** and **Zoom** in RGB[DTV], HDMI[DTV], Component [DTV] mode only.
- You can only select **Spectacle**, **Full** (option), **4:3**, **16:9 (Wide)**, **14:9** and **Zoom** in Component [480i/576i] mode only.



TV MENU / SCREEN MENU OPTIONS

SELECTING WIDE XGA MODE

To see a normal picture, match the resolution of RGB mode and selection of XGA mode.

This function works in the following mode: RGB[PC], HDMI[PC] mode


- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SCREEN** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **XGA Mode**.
- 3 Press the ► button and then use ▲ or ▼ button to select the desired XGA resolution.
- 4 Press the **EXIT** button to return to normal TV viewing.

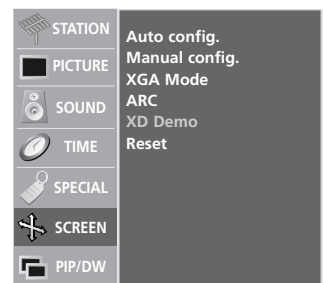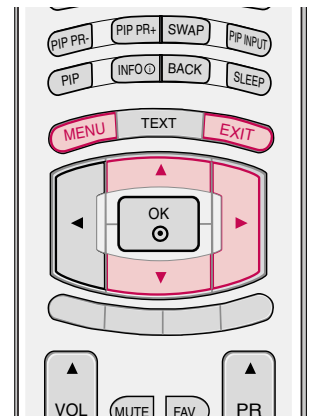

1


XD DEMO

- Use it to see the difference between XD Demo on and XD Demo off.
- It's not available to use this function in RGB[PC], HDMI[PC] mode.

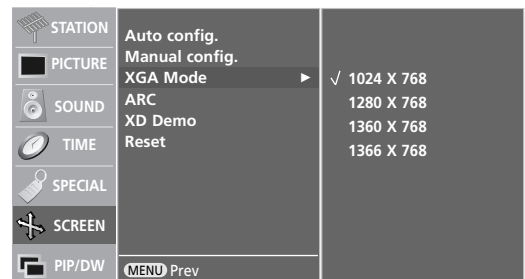

2 ~ 5


- 1 Press the **MENU** button and then use ▲ or ▼ button to select the **SCREEN** menu.
- 2 Press the ► button and then use ▲ or ▼ button to select **XD Demo**.
- 3 Press the ► button to begin **XD Demo**.
- 4 To stop **XD Demo**, press the **EXIT** button.

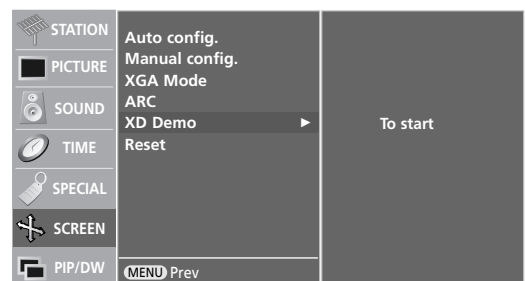

2 ~ 5

INITIALIZING (RESET TO ORIGINAL FACTORY SETTINGS)

This function operates in current mode.
To initialize the adjusted value

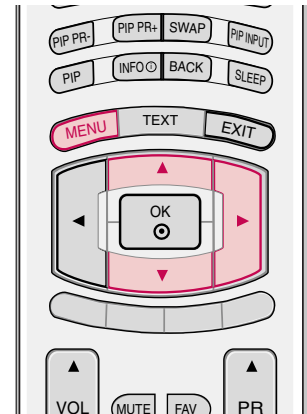


- 1 Press the **MENU** button and then ▲ or ▼ button to select the **SCREEN** menu.
- 2 Press the ► button and then ▲ or ▼ button to select **Reset**.
- 3 Press the ► button.

You can initialize **Manual config.**, **Win. Size**, **Win. Position**, **PIP Transparency** and sub picture size of twin picture.



1

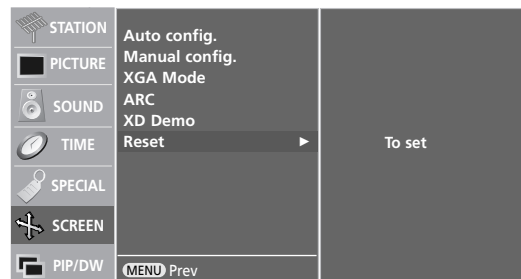

2 ~ 3

APPENDIX


EXTERNAL CONTROL DEVICE SETUP

Connect the RS-232C (serial port) input jack to an external control device (such as a computer or an A/V control system) to control the product's functions externally.

Connect the serial port of the control device to the RS-232C jack on the product back panel.


Note: RS-232C connection cables are not supplied with the product.

RS-232C Setup

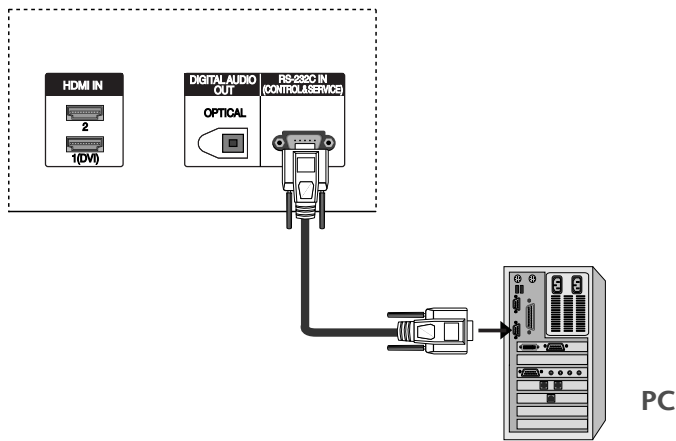


Type of Connector; D-Sub 9-Pin Male

No.	Pin Name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

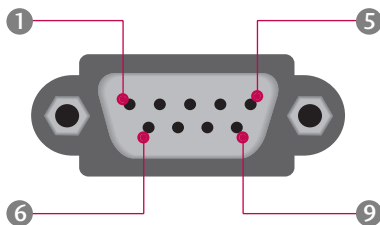


RS-232C Configurations

7-Wire Configurations (Standard RS-232C cable)

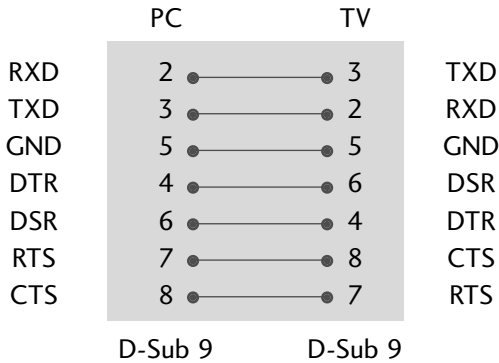


3-Wire Configurations (Not standard)

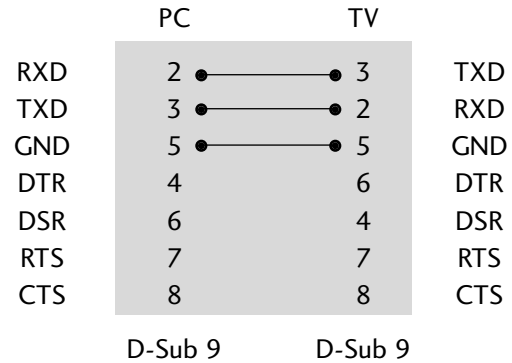

Set ID

Use this function to specify a TV ID number.
Refer to 'Real Data Mapping'. ▶ p.83

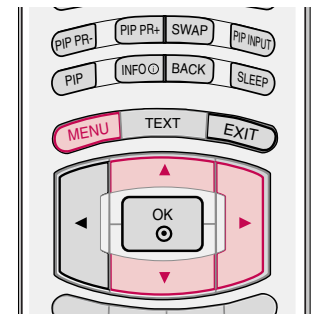


1 Press the **MENU** button and then use ▲ or ▼ button to select the **SPECIAL** menu.


2 Press the ► button and then use ▲ or ▼ button to select **Set ID**.

3 Press the ► button and then use ▲ or ▼ button to adjust **Set ID** to choose the desired TV ID number. The adjustment range of Set ID is 1~99.

4 Press the **EXIT** button to return to normal TV viewing.

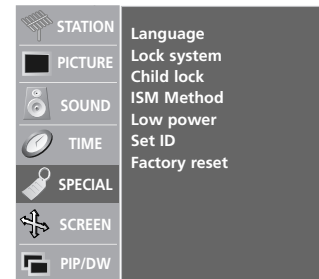

1

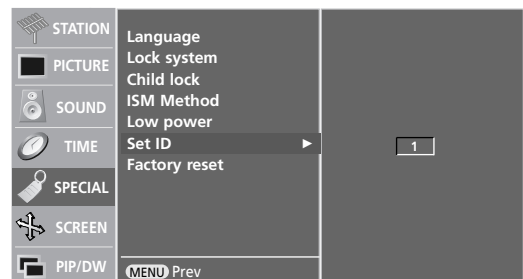

2 ~ 4

Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

Command Reference List

	COMMAND 1	COMMAND 2	DATA (Hexadecimal)
01. Power	k	a	0 ~ 1
02. Input Select	k	b	Refer to p. 79
03. Aspect Ratio	k	c	Refer to p. 79
04. Screen Mute	k	d	0 ~ 1
05. Volume Mute	k	e	0 ~ 1
06. Volume Control	k	f	0 ~ 64
07. Contrast	k	g	0 ~ 64
08. Brightness	k	h	0 ~ 64
09. Colour	k	i	0 ~ 64
10. Tint (option)	k	j	0 ~ 64
11. Sharpness	k	k	0 ~ 64
12. OSD Select	k	l	0 ~ 1
13. Remote control lock mode	k	m	0 ~ 1
14. PIP/DW	k	n	0 ~ 3
15. PIP Position	k	q	0 ~ 3
16. Balance	k	t	0 ~ 64
17. Colour Temperature	k	u	0 ~ 3
18. Red Adjustment	k	v	0 ~ 50
19. Green Adjustment	k	w	0 ~ 50
20. Blue Adjustment	k	\$	0 ~ 50
21. PIP input Source	k	y	Refer to p. 81
22. Abnormal Status	k	z	0 ~ a
23. ISM Method (option)	j	p	Refer to p. 81
24. Low Power (option)	j	q	0 ~ 1
25. Orbiter Time Setting (option)	j	r	1 ~ FE
26. Orbiter Pixel Setting (option)	j	s	1 ~ 3
27. Picture Size Setting for DW Mode	j	t	0 ~ 20
28. Auto Configure	j	u	1
29. Channel Select Command	m	a	Refer to p. 82
30. Send IR Code	m	c	Key Code
31. Input select (Main)	x	b	Refer to p. 83
32. Input select (PIP)	x	y	Refer to p. 83

* When setting the 22 ~ 32, a menu doesn't display on screen.

Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

- * [Command 1] : First command to control the set.
(j, k, m or x)
- * [Command 2] : Second command to control the set.
- * [Set ID] : You can adjust the Set ID to choose desired monitor ID number in special menu.
Adjustment range is 1 ~ 99.
When selecting Set ID '0', every connected the set is controlled.
Set ID is indicated as decimal (1~99) on menu and as Hexa decimal (0x0~0x63) on transmission/receiving protocol.
- * [DATA] : To transmit command data.
Transmit 'FF' data to read status of command.
- * [Cr] : Carriage Return
ASCII code '0x0D'
- * [] : ASCII code 'space (0x20)'

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

- * The set transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

- * The set transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

Data 1: Illegal Code
2: not support function
3: Wait more time

01. Power (Command 2 : a)

- ▶ To control Power On/Off of the set.

Transmission

```
[k][a][ ][Set ID][ ][Data][Cr]
```

Data 0 : Power Off 1 : Power On

Ack

```
[a][ ][Set ID][ ][OK][Data][x]
```

- ▶ To show Power On/Off.

Transmission

```
[k][a][ ][Set ID][ ][FF][Cr]
```

Ack

```
[a][ ][Set ID][ ][OK][Data][x]
```

* In like manner, if other functions transmit '0xFF' data based on this format, Acknowledgement data feed back presents status about each function.

02. Input Select (Command 2 : b)

- ▶ To select input source for the set.
You can also select an input source using the **INPUT** button on the set's remote control.

Transmission

```
[k][b][ ][Set ID][ ][Data][Cr]
```

Data 0 : DTV	4 : Component
1 : Analogue	6 : RGB-DTV
2 : AV1	7 : RGB-PC
3 : AV2	

Ack

```
[b][ ][Set ID][ ][OK][Data][x]
```

03. Aspect Ratio (Command 2 : c) (Main Picture Size)

- ▶ To adjust the screen format. (Main picture format)
You can also adjust the screen format using the **ARC** (Aspect Ratio Control) button on remote control or in the **SCREEN** menu.

Transmission

```
[k][c][ ][Set ID][ ][Data][Cr]
```

Data 1 : Normal screen (4:3)
2 : Wide screen (16:9)
3 : Horizon (Spectacle)
4 : Zoom
6 : Original
7 : 14:9
8 : Full

Ack

```
[c][ ][Set ID][ ][OK][Data][x]
```

* Using the PC input, you select either 16:9 or 4:3 screen aspect ratio.

04. Screen Mute (Command 2 : d)

- ▶ To select screen mute on/off.

Transmission

```
[k][d][ ][Set ID][ ][Data][Cr]
```

Data 0 : Screen mute off (Picture on)
1 : Screen mute on (Picture off)

Ack

```
[d][ ][Set ID][ ][OK][Data][x]
```

05. Volume Mute (Command 2 : e)

- ▶ To control volume mute on/off.
You can also adjust mute using the **MUTE** button on remote control.

Transmission

```
[k][e][ ][Set ID][ ][Data][Cr]
```

Data 0 : Volume mute off (Volume on)
1 : Volume mute on (Volume off)

Ack

```
[e][ ][Set ID][ ][OK][Data][x]
```

06. Volume Control (Command 2 : f)

- ▶ To adjust volume.
You can also adjust volume with the **VOLUME** buttons on remote control.

Transmission

```
[k][f][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 83.

Ack

```
[f][ ][Set ID][ ][OK][Data][x]
```

07. Contrast (Command 2 : g)

- ▶ To adjust screen contrast.
You can also adjust contrast in the **PICTURE** menu.

Transmission

```
[k][g][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 83.

Ack

```
[g][ ][Set ID][ ][OK][Data][x]
```

08. Brightness (Command 2 : h)

- ▶ To adjust screen brightness.
You can also adjust brightness in the **PICTURE** menu.

Transmission

```
[k][h][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 83.

Ack

```
[h][ ][Set ID][ ][OK][Data][x]
```


09. Colour (Command 2 : i)

- ▶ To adjust the screen colour.
You can also adjust colour in the PICTURE menu.

Transmission

[k][i][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 64
* Refer to 'Real data mapping 1'. See page 83.

Ack

[i][][Set ID][][OK][Data][x]

10. Tint (Command 2 : j) (option)

- ▶ To adjust the screen tint.
You can also adjust tint in the PICTURE menu.

Transmission

[k][j][][Set ID][][Data][Cr]

Data Red : 0 ~ Green : 64
* Refer to 'Real data mapping 1'. See page 83.

Ack

[j][][Set ID][][OK][Data][x]

11. Sharpness (Command 2 : k)

- ▶ To adjust the screen sharpness.
You can also adjust sharpness in the PICTURE menu.

Transmission

[k][k][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 64
* Refer to 'Real data mapping 1'. See page 83.

Ack

[k][][Set ID][][OK][Data][x]

12. OSD Select (Command 2 : l)

- ▶ To select OSD (On Screen Display) on/off when controlling remotely.

Transmission

[k][l][][Set ID][][Data][Cr]

Data 0 : OSD off 1 : OSD on

Ack

[l][][Set ID][][OK][Data][x]

13. Remote control lock mode (Command 2 : m)

- ▶ To lock the front panel controls on the monitor and remote control.

Transmission

[k][m][][Set ID][][Data][Cr]

Data 0 : Lock off 1 : Lock on

Ack

[m][][Set ID][][OK][Data][x]

* If you're not using the remote control, use this mode.
When main power is on/off, external control lock is released.

14. PIP / DW (Command 2 : n)

- ▶ To control the PIP (Picture In picture)/DW.
You can also control the PIP/DW using the PIP/DW button on the remote control or in the PIP/DW menu.

Transmission

[k][n][][Set ID][][Data][Cr]

Data 0: PIP/DW off 3: DW2
1: PIP 5: POP
2: DW1

Ack

[n][][Set ID][][OK][Data][x]

15. PIP Position (Command 2 : q)

- ▶ To select sub picture position for PIP. You can also adjust the sub picture position using **POSITION** button on the remote control or in the PIP/DW menu.

Transmission

[k][q][][Set ID][][Data][Cr]

Data 0 : Right down on screen
1 : Left down on screen
2 : Left up on screen
3 : Right up on screen

Ack

[q][][Set ID][][OK][Data][x]

16. Balance (Command 2 : t)

- ▶ To adjust balance.
You can also adjust balance in the SOUND menu.

Transmission

[k][t][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 64
* Refer to 'Real data mapping 1'. See page 83.

Ack

[t][][Set ID][][OK][Data][x]

17. Colour Temperature (Command 2 : u)

- ▶ To adjust colour temperature.
You can also adjust CSM in the PICTURE menu.

Transmission

[k][u][][Set ID][][Data][Cr]

Data 0: Cool 1: Normal 2: Warm 3: User

Ack

[u][][Set ID][][OK][Data][x]

18. Red Adjustment (Command 2 : v)

► To adjust red in colour temperature.

Transmission

[k][v][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 50

* Refer to 'Real data mapping 2'. See page 83.

Ack

[v][][Set ID][][OK][Data][x]

19. Green Adjustment (Command 2 : w)

► To adjust green in colour temperature.

Transmission

[k][w][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 50

* Refer to 'Real data mapping 2'. See page 83.

Ack

[w][][Set ID][][OK][Data][x]

20. Blue Adjustment (Command 2 : \$)

► To adjust blue in colour temperature.

Transmission

[k][\$][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 50

* Refer to 'Real data mapping 2'. See page 83.

Ack

[\$][][Set ID][][OK][Data][x]

21. PIP Input Select (Command 2 : y)

► To select input source for sub picture in PIP/Twin picture mode. You can also adjust input source for sub picture using **PIP INPUT** button on remote control.

Transmission

[k][y][][Set ID][][Data][Cr]

Data 0 : DTV	4 : Component
1 : Analogue	6 : RGB-DTV
2 : AV1	7 : RGB-PC
3 : AV2	

Ack

[y][][Set ID][][OK][Data][x]

22. Abnormal State (Command 2 : z)

► To recognize an abnormal state.

Transmission

[k][z][][Set ID][][FF][][Cr]

Data FF : Read

Ack

[z][][Set ID][][OK][Data][x]

Data 0: Normal (Power on and signal exist)

1: No signal (Power on)

2: Turn the monitor off by remote control

3: Turn the monitor off by sleep time function

4: Turn the monitor off by RS-232C function

5: 5V down

6: AC down

7: Turn the monitor off by Fan Alarm function

8: Turn the monitor off by Off time function

9: Turn the monitor off by Auto sleep function

a: Turn the monitor off by AV board detect

* This function is "read only".

23. ISM Method (option) (Command 1 : j, Command 2 : p)

► To control the ISM method. You can also adjust ISM Method in SPECIAL menu.

It's not available to use this function in 32/37/42LC2D models.

Transmission

[j][p][][Set ID][][Data][Cr]

Data 1 : Inversion

2 : Orbiter

4 : White Wash

8 : Normal

Ack

[p][][Set ID][][OK][Data][x]

24. Low Power (option) (Command 1 : j, Command 2 : q)

- ▶ To reduce the power consumption of the set. You can also adjust Low Power in SPECIAL menu.
It's not available to use this function in 32/37/42LC2D models.

Transmission

```
[j][q][ ][Set ID][ ][Data][ ][Cr]
```

Data 0 : Off
1 : On

Ack

```
[q][ ][Set ID][ ][OK/NG][Data][x]
```

25. Orbiter Time Setting (option) (Command 1 : j, Command 2 : r)

- ▶ To adjust orbiter operation time term.
It's not available to use this function in 32/37/42LC2D models.

Transmission

```
[j][r][ ][Set ID][ ][Data][ ][Cr]
```

Data Min: 1 ~ Max: FE
* Refer to 'Real data mapping 1'.

Ack

```
[r][ ][Set ID][ ][OK/NG][Data][x]
```

26. Orbiter Pixel Setting (option) (Command 1 : j, Command 2 : s)

- ▶ To adjust pixel number in orbiter function.
It's not available to use this function in 32/37/42LC2D models.

Transmission

```
[j][s][ ][Set ID][ ][Data][Cr]
```

Data Min: 1 ~ Max: 3
* Refer to 'Real data mapping 1'.

Ack

```
[s][ ][Set ID][ ][OK/NG][Data][x]
```

27. Picture Size Setting for DW Mode (Command 1 : j, Command 2 : t)

- ▶ To select the PIP picture format.
You can also select the PIP picture format using the **SIZE** on the remote control.

Transmission

```
[j][t][ ][Set ID][ ][Data][Cr]
```

Data Min: 0 ~ Max: 20
* Refer to 'Real data mapping 1'.

Ack

```
[t][ ][Set ID][ ][OK/NG][Data][x]
```

28. Auto Configure (Command 1 : j, Command 2 : u)

- ▶ To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.

Transmission

```
[j][u][ ][Set ID][ ][Data][Cr]
```

Data 1: To set

Ack

```
[u][ ][Set ID][ ][OK/NG][Data][x]
```

29. Channel Select Command (Command 1 : m, Command 2 : a)

- ▶ Select channel to following physical number.

Transmission

```
[m][a][ ][Set ID][ ][Data0][ ][Data1][ ][Data2][Cr]
```

Data0 :High channel data
Data1 :Low channel data
ex. No. 47 -> 00 2F (2FH)
No. 394 -> 01 88 (188H)
Data2 0x00 : ATV Main
0x01 : ATV Sub
0x10 : DTV Main
0x11 : DTV Sub

Channel data range

Analogue - Min: 00 ~ Max: 63 (0~99)
Digital - Min: 00 ~ Max: 3E7 (0~999)

- ex) In ATV Main and DTV Sub mode
1. Auto Programme or Manual Programme
2. "ma 1 00 08 00" --> Select 8 channel (ATV Main)
3. "ma 1 00 0E 11" --> Select 14 channel (DTV Sub)

Ack

```
[a][ ][Set ID][ ][OK/NG][Data][x]
```

Data Min: 00 ~ Max: FF

30. Send IR Code (Command 1 : m, Command 2 : c)

- ▶ To send IR remote key code.

Transmission

```
[m][c][ ][Set ID][ ][Data][Cr]
```

Data Key code - Refer to page 84.

Ack

```
[c][ ][Set ID][ ][OK/NG][Data][x]
```


31. Input select (Command 1 : x, Command 2 : b) (Main Picture Input)

► To select input source for main picture.

Transmission

[x][b][][Set ID][][Data][Cr]

Data Structure

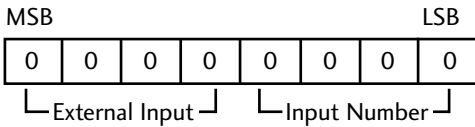

External Input				Data
0	0	0	0	DTV
0	0	0	1	Analogue
0	0	1	0	AV
0	0	1	1	SAV
0	1	0	0	Component
0	1	0	1	RGB-DTV
0	1	1	0	RGB-PC
1	0	0	1	HDMI-DTV
1	0	1	0	HDMI-PC

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4
0	1	0	0	Input5
0	1	0	1	Input6

Ack

[b][][Set ID][][OK/NG][Data][x]


32. Input select (Command 1 : x, Command 2 : y)

► To adjust input source for sub picture in PIP mode.

Transmission

[x][y][][Set ID][][Data][Cr]

Data Structure

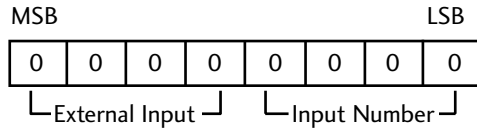

External Input				Data
0	0	0	0	DTV
0	0	0	1	Analogue
0	0	1	0	AV
0	0	1	1	SAV
0	1	0	0	Component
0	1	0	1	RGB-DTV
0	1	1	0	RGB-PC
1	0	0	1	HDMI-DTV
1	0	1	0	HDMI-PC

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4
0	1	0	0	Input5
0	1	0	1	Input6

Ack

[y][][Set ID][][OK/NG][Data][x]

*** Real data mapping 1**

- 0 : Step 0
- ⋮
- A : Step 10 (Set ID 10)
- ⋮
- F : Step 15 (Set ID 15)
- 10 : Step 16 (Set ID 16)
- ⋮
- 64 : Step 100
- ⋮
- 6E : Step 110
- ⋮
- 73 : Step 115
- 74 : Step 116
- ⋮
- C7 : Step 199
- ⋮
- FE : Step 254
- FF : Step 255

*** Real data mapping 2**

- 0 : -40
- 1 : -39
- 2 : -38
- ⋮
- 28 : 0
- ⋮
- 4E : +38
- 4F : +39
- 50 : +40

APPENDIX

IR CODES


1. How to Connect

- Connect your wired remote control to the Remote Control port on the TV.

2. Remote Control IR Codes

■ Output waveform

Single pulse, modulated with 37.917KHz signal at 455KHz

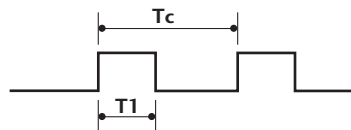

Carrier frequency

$$FCAR = 1/TC = fOSC/12$$

 
$$\text{Duty ratio} = T1/TC = 1/3$$

■ Configuration of frame


1st frame




Repeat frame





■ Lead code

 

■ Repeat code

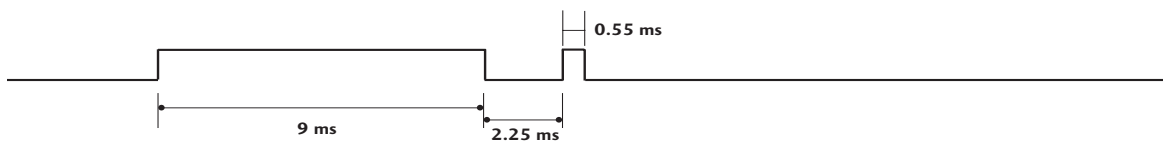


■ Bit description

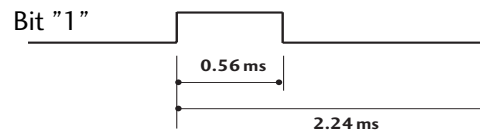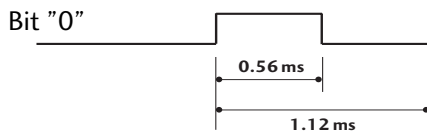

■ Frame interval: Tf

 The waveform is transmitted as long as a key is depressed.



Code (Hexa)	Function	Note
00	PR ▲	R/C BUTTON
01	PR ▼	R/C BUTTON
02	VOL ▲	R/C BUTTON
03	VOL ▼	R/C BUTTON
40	Up (▲)	R/C BUTTON
41	Down (▼)	R/C BUTTON
06	Right (▶)	R/C BUTTON
07	Left (◀)	R/C BUTTON
08	POWER	R/C BUTTON (POWER ON/OFF)
C4	POWER ON	Discrete IR Code (Only Power On)
C5	POWER OFF	Discrete IR Code (Only Power Off)
09	MUTE	R/C BUTTON
10	Number Key 0	R/C BUTTON
11	Number Key 1	R/C BUTTON
12	Number Key 2	R/C BUTTON
13	Number Key 3	R/C BUTTON
14	Number Key 4	R/C BUTTON
15	Number Key 5	R/C BUTTON
16	Number Key 6	R/C BUTTON
17	Number Key 7	R/C BUTTON
18	Number Key 8	R/C BUTTON
19	Number Key 9	R/C BUTTON
0B	INPUT	R/C BUTTON
BF	COMPONENT	Discrete IR Code (Input COMPONENT Selection)
C6	HDMI	Discrete IR Code (Input HDMI Selection)
D5	RGB	Discrete IR Code (Input RGB Selection)
D6	TV	Discrete IR Code (Input TV Selection)
5A	AV1	Discrete IR Code (Input AV1 Selection)
D0	AV2	Discrete IR Code (Input AV2 Selection)
D1	AV3	Discrete IR Code (Input AV3 Selection)
D2	AV4	Discrete IR Code (Input AV4 Selection)
D3	SAV2	Discrete IR Code (Input SAV2 Selection)
AA	INFO ⓘ	R/C BUTTON
AB	GUIDE	R/C BUTTON
39	SUBTITLE	R/C BUTTON
5B	EXIT	R/C BUTTON
1E	FAV	R/C BUTTON
1A	Q.VIEW	R/C BUTTON
50	D/A TV	R/C BUTTON
0A	I/II	R/C BUTTON
0E	SLEEP	R/C BUTTON
43	MENU	R/C BUTTON
44	OK(⊙)	R/C BUTTON
53	LIST	R/C BUTTON
20	TEXT	R/C BUTTON
2A	REVEAL	R/C BUTTON
26	TIME	R/C BUTTON
28	BACK	R/C BUTTON
62	UPDATE / POSITION	R/C BUTTON
64	SIZE	R/C BUTTON
70	INDEX	R/C BUTTON
60	PIP	R/C BUTTON
C3	PIP INPUT	R/C BUTTON
C2	SWAP	R/C BUTTON
C0	PIP PR+	R/C BUTTON
C1	PIP PR-	R/C BUTTON
61	BLUE Key	R/C BUTTON
63	YELLOW Key	R/C BUTTON
71	GREEN Key	R/C BUTTON
72	RED Key	R/C BUTTON
79	ARC	R/C BUTTON
76	ARC (4:3)	Discrete IR Code (Input 4:3 mode)
77	ARC (16:9)	Discrete IR Code (Input 16:9 mode)
AF	ARC (Zoom)	Discrete IR Code (Input Zoom mode)

PROGRAMMING THE REMOTE

The remote is a multi-brand or a universal remote. It can be programmed to operate most remote-controllable devices of other manufacturers.

Note that the remote may not control all models of other brands.

- 1 To find out whether your remote can operate the device without programming, turn on the device such as a VCR and press the corresponding mode button on the remote.

After that, press the **POWER** button. If the device is turned off then it responds properly and the remote need not to be programmed.

If not, the remote should be programmed to operate the device. The programming procedures are explained below.

- 2 Press the **MENU** and **MUTE** button continuously at the same time for 2 seconds, the current selected device button will be illuminated.


If you don't press any button for 20 seconds, the light on the mode button will be turned off. In that case, you have to repeat from step 2.

- 3 Enter code numbers using the number button on the remote by referring the code table on the following pages. When pressing the button, the light blinks at a time.

If the device turned off, the programming is successful.

- 4 Press the **MENU** button to store the code. After blinking twice, this code is stored.

- 5 Test the remote functions to see if the device responds properly. If not, repeat from step 2.

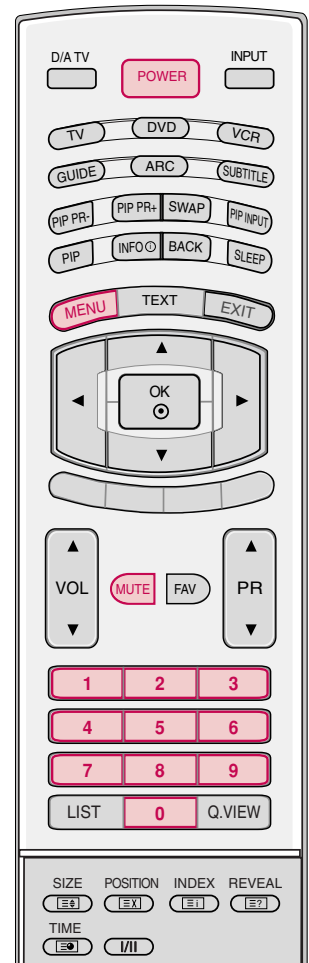

PROGRAMMING CODES

■ VCRs

Brand	Codes	Brand	Codes	Brand	Codes	Brand	Codes
AIWA	034	KENWOOD	014 034 039 043	PORTLAND	108	TATUNG	039 043
AKAI	016 043 046 124 125 146		047 048	PULSAR	072	TEAC	034 039 043
AMPRO	072	LG (GOLDSTAR)	001 012 013 020 101 106 114 123	QUARTZ	011 014	TECHNICS	031 033 070
ANAM	031 033 103	LLOYD	034	QUASAR	033 066 075 145	TEKNIKA	019 031 033 034 101
AUDIO DYNAMICS	012 023 039 043	LXI	003 009 013 014 017 034 101 106	RCA	013 020 033 034 040 041 062 063 107 109 140 144 145 147	THOMAS	034
BROKSONIC	035 037 129	MAGIN	040	REALISTIC	003 008 010 014 031 033 034 040 053 054 101	TMK	006
CANON	028 031 033	MAGNAVOX	031 033 034 041 067 068			TOSHIBA	008 013 042 047 059 082 112 131
CAPEHART	108	MARANTZ	012 031 033 067 069	RICO	058	TOTEVISION	040 101
CRAIG	003 040 135	MARTA	101	RUNCO	148	UNITECH	040
CURTIS MATHES	031 033 041	MATSUI	027 030	SALORA	014	VECTOR RESEARCH	012
DAEWOO	005 007 010 064 065 108 110 111 112 116 117 119	MEI	031 033	SAMSUNG	032 040 102 104 105 107 109 112 113 115 120 122 125	VICTOR	048
DAYTRON	108	MEMOREX	003 010 014 031 033 034 053 072 101 102 134 139			VIDEO CONCEPTS	012 034 046
DBX	012 023 039 043	MGA	045 046 059	SANSUI	022 043 048 135	VIDEOSONIC	040
DYNATECH	034 053	MINOLTA	013 020	SANYO	003 007 010 014 102 134	WARDS	003 013 017 024 031 033 034 040 053 054 131
ELECTROHOME	059	MITSUBISHI	013 020 045 046 049 051 059 061 151	SCOTT	017 037 112 129 131	YAMAHA	012 034 039 043
EMERSON	006 017 025 027 029 031 034 035 036 037 046 101 129 131 138 153	MTC	034 040	SEARS	003 008 009 010 013 014 017 020 031 042 073 081 101	ZENITH	034 048 056 058 072 080 101
FISHER	003 008 009 010	MULTITECH	024 034				
FUNAI	034	NEC	012 023 039 043 048	SHARP	031 054 149		
GE	031 033 063 072 107 109 144 147	NORDMENDE	043	SHINTOM	024		
GO VIDEO	132 136	OPTONICA	053 054	SONY	003 009 031 052 056 057 058 076 077 078 149		
HARMAN KARDON	012 045	PANASONIC	066 070 074 083 133 140 145	SOUNDESIGN	034		
HITACHI	004 018 026 034 043 063 137 150	PENTAX	013 020 031 033 063	STS	013		
INSTANTREPLAY	031 033	PHILCO	031 034 067	SYLVANIA	031 033 034 059 067		
JCL	031 033	PHILIPS	031 033 034 054 067 071 101	SYMPHONIC	034		
JCPENNY	012 013 015 033 040 066 101	PILOT	101	TANDY	010 034		
JENSEN	043	PIONEER	013 021 048				
JVC	012 031 033 043 048 050 055 060 130 150 152						

■ DVD

Brand	Codes	Brand	Codes	Brand	Codes	Brand	Codes
APEX DIGITAL	022	MAGNAVOX	013	PHILIPS	013	SONY	007
DENON	020 014	MARANTZ	024	PIONEER	004 026	THOMPSON	005 006
GE	005 006	MITSUBISHI	002	PROCEED	021	TOSHIBA	019 008
HARMAN KARDON	027	NAD	023	PROSCAN	005 006	YAMAHA	009 018
JVC	012	ONKYO	008 017	RCA	005 006	ZENITH	010 016 025
LG	001 010 016 025	PANASONIC	003 009	SAMSUNG	011 015		

TROUBLESHOOTING CHECKLIST

The operation does not work normally.	
The remote control doesn't work	<ul style="list-style-type: none"> ■ Check to see if there is any object between the product and the remote control causing obstruction. Ensure you are pointing the remote control directly at the TV. ■ Ensure that the batteries are installed with correct polarity (+ to +, - to -). ■ Ensure that the correct remote operating mode is set: TV, VCR etc. ■ Install new batteries.
Power is suddenly turned off	<ul style="list-style-type: none"> ■ Is the sleep timer set? ■ Check the power control settings. Power interrupted. ■ No broadcast on station tuned with Auto sleep activated.

The video function does not work.	
No picture & No sound	<ul style="list-style-type: none"> ■ Check whether the product is turned on. ■ Try another channel. The problem may be with the broadcast. ■ Is the power cord inserted into wall power outlet? ■ Check your antenna direction and/or location. ■ Test the wall power outlet, plug another product's power cord into the outlet where the product's power cord was plugged in.
Picture appears slowly after switching on	<ul style="list-style-type: none"> ■ This is normal, the image is muted during the product startup process. Please contact your service centre, if the picture has not appeared after five minutes.
No or poor colour or poor picture	<ul style="list-style-type: none"> ■ Adjust Colour in menu option. ■ Keep a sufficient distance between the product and the VCR. ■ Try another channel. The problem may be with the broadcast. ■ Are the video cables installed properly? ■ Activate any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> ■ Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> ■ Station or cable product experiencing problems, tune to another station. ■ Station signal is weak, reorient antenna to receive weaker station. ■ Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> ■ Check antenna (Change the direction of the antenna).

TROUBLESHOOTING CHECKLIST

The audio function does not work.	
Picture OK & No sound	<ul style="list-style-type: none"> ■ Press the VOL ▲ or ▼ button. ■ Sound muted? Press MUTE button. ■ Try another channel. The problem may be with the broadcast. ■ Are the audio cables installed properly?
No output from one of the speakers	<ul style="list-style-type: none"> ■ Adjust Balance in menu option.
Unusual sound from inside the product	<ul style="list-style-type: none"> ■ A change in ambient humidity or temperature may result in an unusual noise when the product is turned on or off and does not indicate a fault with the product.

There is a problem in PC mode. (Only PC mode applied)	
The signal is out of range (Invalid format)	<ul style="list-style-type: none"> ■ Adjust resolution, horizontal frequency, or vertical frequency. ■ Check the input source.
Vertical bar or stripe on background & Horizontal Noise & Incorrect position	<ul style="list-style-type: none"> ■ Work the Auto configure or adjust clock, phase, or H/V position. (Option)
Screen colour is unstable or single colour	<ul style="list-style-type: none"> ■ Check the signal cable. ■ Reinstall the PC video card.

APPENDIX

MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you can enjoy your new TV.

Caution: Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the Screen

- 1 Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- 2 Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Please be sure not to use a wet cloth.

Extended Absence

CAUTION

- ▶ If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

PRODUCT SPECIFICATIONS

MODELS			32LC2D-FC/32LC2DB-FC 37LC2D-FC/37LC2DB-FC 42LC2D-FC/42LC2DB-FC
32LC2D 32LC2DB	Dimensions (Width x Height x Depth)	with stand	811.0 x 630.0 x 235.0 mm 31.9 x 24.8 x 9.3 inches
		without stand	811 x 566.8 x 123.5 mm 32.0 x 22.4 x 4.9 inches
	Weight	with stand	21.9 kg / 48.2 lbs
		without stand	18.5 kg / 40.8 lbs
37LC2D 37LC2DB	Dimensions (Width x Height x Depth)	with stand	944.0 x 729.5 x 286.0 mm 37.2 x 28.7 x 11.3 inches
		without stand	944 x 659.3 x 129.7 mm 37.2 x 26.0 x 5.2 inches
	Weight	with stand	31.0 kg / 68.3 lbs
		without stand	24.9 kg / 54.9 lbs
42LC2D 42LC2DB	Dimensions (Width x Height x Depth)	with stand	1054 x 813.5 x 302 mm 41.5 x 32.1 x 11.9 inches
		without stand	1054 x 746 x 136.8 mm 41.5 x 29.4 x 5.4 inches
	Weight	with stand	37 kg / 81.6 lbs
		without stand	30.4 kg / 67.1 lbs
Power requirement Television System Programme Coverage External Antenna Impedance			AC100-240V -50/60Hz PAL/SECAM B/G/D/K, PAL I/II, SECAM L/L' VHF: E2 ~ E12, UHF: E21 ~ E69, CATV: S1 ~ S20, HYPER: S21 ~ S47 75 ohm
Environment condition	Operating Temperature Operating Humidity		0 ~ 40°C / 32 ~ 104°F Less than 80%
	Storage Temperature Storage Humidity		-20 ~ 60°C / -4 ~ 140°F Less than 85%

■ The specifications shown above may be changed without prior notice for quality improvement.

APPENDIX

PRODUCT SPECIFICATIONS

MODELS			42PC1D-FC 50PC1D-FC
42PC1D	Dimensions (Width x Height x Depth)	with stand	1129 x 748.5 x 380 mm 44.5 x 29.5 x 15 inches
		without stand	1129 x 695 x 103.7 mm 44.5 x 27.4 x 4.1 inches
	Weight	with stand	29.3 kg / 64.6 lbs
		without stand	25.4 kg / 56.0 lbs
50PC1D	Dimensions (Width x Height x Depth)	with stand	1302.6 x 872 x 355.8 mm 51.3 x 34.4 x 14.0 inches
		without stand	1302.6 x 810 x 108.7 mm 51.3 x 31.9 x 4.3 inches
	Weight	with stand	51.5 kg / 113.5 lbs
		without stand	44.3 kg / 97.7 lbs
Power requirement Television System Programme Coverage External Antenna Impedance			AC100-240V -50/60Hz PAL/SECAM B/G/D/K, PAL I/II, SECAM L/L' VHF: E2 ~ E12, UHF: E21 ~ E69, CATV: S1 ~ S20, HYPER: S21 ~ S47 75 ohm
Environment condition	Operating Temperature Operating Humidity	0 ~ 40°C / 32 ~ 104°F Less than 80%	
	Storage Temperature Storage Humidity	-20 ~ 60°C / -4 ~ 140°F Less than 85%	

■ The specifications shown above may be changed without prior notice for quality improvement.