



PORTABLE MUSIC PLAYER

QUICK SETUP GUIDE

MODEL : FM17

Before connecting, operating or adjusting this product, please read this instruction booklet carefully and completely

Designs and specifications are subject to change without notice for improvement.

P/NO:MBM35706605

Table of Contents








Important safety instructions	3
Package contents	3
Name of each component	4
Inserting battery	4
Battery Info	5
Connecting the player to the PC	5
Installing software	6
Basic operation	7
Home menu screen	7
Selecting language	8
Download	8



This product is manufactured in compliance with the radio interference requirements of EEC DIRECTIVE 89/336/EEC, 93/68/EEC and 73/23/EEC.

Important safety instructions

Please follow the safety instructions closely to reduce the risk of accidents or damage to equipment.

 Warning	
 Do not place an object on the product.	 Keep your computing environment clean and free of dust.
 Do not drop an object or give shock on the product.	 Do not use this product while driving.
 Keep this product away from heat.	 Do not disassemble, repair, or remodel the product.

Package contents



Main body



USB cable



Software CD



Quick setup guide



Battery AAA-type




Earphones


- Contents of the product are subject to change without prior notice for functional improvement.

Name of each component

Front / Side view

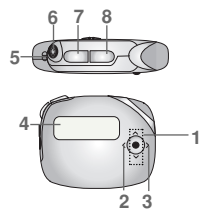

Rear / Side view

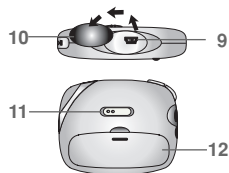



- | | |
|---|--|
| <ol style="list-style-type: none"> 1. • Menu (M) / Select button
- Goes to Home menu (upon pressing the button for two seconds or longer.)
• Volume Control / Search
 ∧ button
 ∨ button 2. REW / Search < button 3. FF / Search > button 4. Display 5. Neck strap holder 6. Earphones connector | <ol style="list-style-type: none"> 7. Playlist (P.LIST) button 8. • ON/OFF
 • PLAY/PAUSE (▶/)
 • FM Recording (FM REC) 9. USB connector 10. USB connector lid 11. HOLD switch 12. Battery cover |
|---|--|

Inserting battery

1. Open the battery cover by pull out it .
2. Insert one AAA-type battery with +/- aligned.
3. Close the battery cover.


Battery Info

This product dose not come with an AC adapter.

- Playback time: Max 18 hrs (In the case of MP3 128Kbps/44.1KHz, EQ FLAT, Volume 15 and alkaline battery)
- When the battery is almost used up,  icon will appear.
- When the battery is at a certain level,  icon will be displayed for two seconds and the player will be turned off.


Connecting the player to the PC

1. Connect one end of the USB cable to the USB port of the PC and the other to the USB port of the player.
 - Check whether both ends are correctly plugged in.

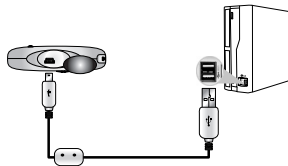

2. When the cable is connected, the following will be displayed on the LCD



3. In case of a correct connection, the  icon will be displayed on the task bar of the PC.

Note

The icon shapes on the task bar may differ depending on the operating environment of the PC.

Installing software

Check the specifications of your PC before using LG portable Flash MP3 Player.

Minimum system requirements

- CD ROM Drive
- Pentium 3 or higher level CPU / 128MB or larger memory
- 100MB or larger hard disk space, 800 X 600 mode
- Hi-color (16 bit) or higher level vide card, Sound card

Before the initial use of MP3 player, install first the firmware updater to your PC.

1. Insert the operation program CD into the CD ROM.
2. Available software list for the installation will be shown.
3. Click on the application program to install, and follow the displayed instructions.
4. During the installation of the LG Media Center, you can install the Windows Media Player and the Internet Explorer for the operating environment.
5. After the installation is completed, click [Finish] to exit the setup.
6. The manager program icon will be created on the Desktop and under Start > All Programs Menu is completed.



- ✓ Please make reference to the page 13 of main manual for detailed info.

Basic operation






Turning on/off the power

- Press ON/OFF (▶/||) button for more than 1 second to turn on, and repeat it to turn off for more than 3 seconds.

Volume control

- Control the volume by moving the volume control button to the direction of ◀.

Hold function

1. Push  button in arrow directions to lock the player.
 - Upon locked status,  will be displayed on the LCD. Upon pressing of each button,  will appear for two seconds and disappear.
2. Push  button to the opposite direction of the arrow key and unlock the device.
 -  icon will appear and then disappear.

Home menu screen



1. Press and hold Menu (**M**) button to open home menu.
2. Push Volume ◀ button to select the mode.
3. Press Menu (**M**) button to display the selected mode.
 - The initial screen consists of total four modes.
 - Home menu appears if Menu (**M**) button is pressed for longer than 2 seconds during Play / Pause mode.

Selecting language


Language: The user can set the language.

- English, 中文 (繁體), Español, Português, Français, Deutsch, Русский, Italiano, Svenska, Suomi, Norsk, Dansk, Nederlands, Polski, Magyar, Українська
- Select Home > Settings > Display Setting > Language to change the language setting.

Download

Using the removable storage device

1. Connect one end of the USB cable to the USB port of the PC and the other to the USB port of the player.
 - ✓ Check whether both ends of the cable are correctly plugged in.
2. Check whether a new drive has been added in the Windows Explorer in the PC.
 - ✓ The driver name may differ depending on the OS.
3. Drag the file you want to copy to the removable disk.

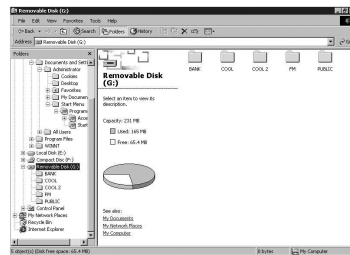

- ✓ Disconnecting the USB cable while the file is being copied may cause malfunctioning of the player.