



website <http://www.lgservice.com>  
e-mail <http://lgservice.com/techsup.html>

LG

# LG Multi-Type Air Conditioner(Ceiling Duct Type) *OWNER'S MANUAL*

Prior to installation, this air-conditioning unit must be submitted for approval by the utility service which provides electricity (EN 61000-2 Norm, EN 61000-3 Norm).

ENGLISH

ESPAÑOL

## IMPORTANT

- Please read this owner's manual carefully and thoroughly before installing and operating your room air conditioner.
- Please retain this owner's manual for future reference after reading it thoroughly.

# TABLE OF CONTENTS

Safety Precautions.....	3
Operating Instructions.....	8
Care and maintenance.....	26
Before you call for service.....	28



## FOR YOUR RECORDS

Write the model and serial numbers here:

**Model #** \_\_\_\_\_

**Serial #** \_\_\_\_\_

You can find them on a label on the side of each unit.

**Dealer's Name** \_\_\_\_\_

**Date Purchased** \_\_\_\_\_

■ Staple your receipt to this page in the event you need it to prove date of purchase or for warranty issues.



## READ THIS MANUAL

Inside you will find many helpful hints on how to use and maintain your air conditioner properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your air conditioner.

You'll find many answers to common problems in the chart of troubleshooting tips. If you review our chart of **Troubleshooting Tips** first, you may not need to call for service at all.



## PRECAUTION

- Contact the authorized service technician for repair or maintenance of this unit.
- Contact the installer for installation of this unit.
- The air conditioner is not intended for use by young children or invalids without supervision.
- Young children should be supervised to ensure that they do not play with the air conditioner.
- When the power cord is to be replaced, replacement work shall be performed by authorized personnel only using only genuine replacement parts.
- Installation work must be performed in accordance with the National Electric Code by qualified and authorized personnel only.



# Safety Precautions

To prevent injury to the user or other people and property damage, the following instructions must be followed.

- Incorrect operation due to ignoring instruction will cause harm or damage. The seriousness is classified by the following indications.

**⚠ WARNING** This symbol indicates the possibility of death or serious injury.

**⚠ CAUTION** This symbol indicates the possibility of injury or damage to properties only.

- Meanings of symbols used in this manual are as shown below.

 
	<b>Be sure not to do.</b>
	<b>Be sure to follow the instruction.</b>

## ⚠ WARNING

### ■ Installation


**Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit.**

- There is risk of fire or electric shock.

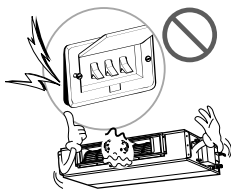


**For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center.**

 - Do not disassemble or repair the product. There is risk of fire or electric shock.

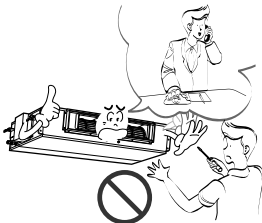


**Always ground the product.**

 - There is risk of fire or electric shock.

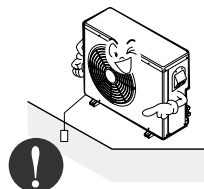

**Install the panel and the cover of control box securely.**

 - There is risk of fire or electric shock.

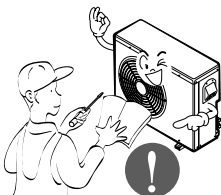


**Always install a dedicated circuit and breaker.**

- Improper wiring or installation may cause fire or electric shock




**Use the correctly rated breaker or fuse.**

 - There is risk of fire or electric shock.

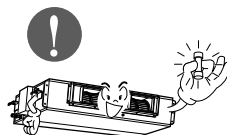


**Do not modify or extend the power cable.**

 - There is risk of fire or electric shock.

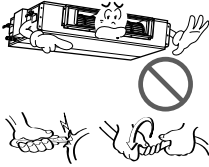

**Do not install, remove, or re-install the unit by yourself (customer).**

 - There is risk of fire, electric shock, explosion, or injury.

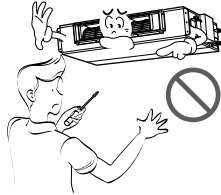


**Be cautious when unpacking and installing the product.**

- Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.



**For installation, always contact the dealer or an Authorized Service Center.**

 - There is risk of fire, electric shock, explosion, or injury.

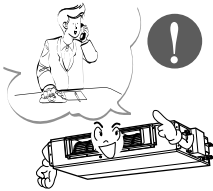


**Do not install the product on a defective installation stand.**

- It may cause injury, accident, or damage to the product.



**Be sure the installation area does not deteriorate with age.**

 - If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.

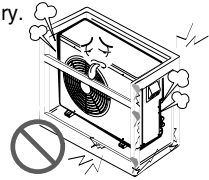

**■ Operation**

 
**Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open.**

- Moisture may condense and wet or damage furniture.




**Take care to ensure that power cable could not be pulled out or damaged during operation.**

- There is risk of fire or electric shock.

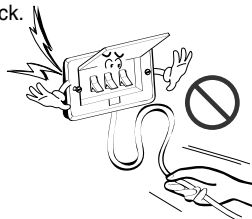


**Do not place anything on the power cable.**

 - There is risk of fire or electric shock.

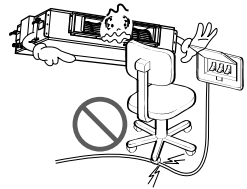

**Do not plug or unplug the power supply plug during operation.**

 - There is risk of fire or electric shock.

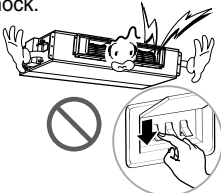


**Do not touch(operate) the product with wet hands.**

- There is risk of fire or electrical shock.




**Do not place a heater or other appliances near the power cable.**

 - There is risk of fire and electric shock.

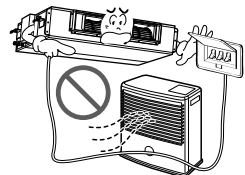


**Do not allow water to run into electric parts.**

 - It may cause There is risk of fire, failure of the product, or electric shock.

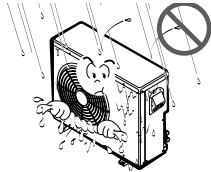


**Do not store or use flammable gas or combustibles near the product.**

 - There is risk of fire or failure of product.

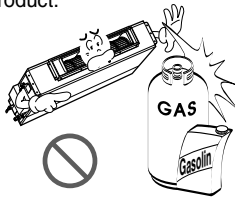


**Do not use the product in a tightly closed space for a long time.**

 - Oxygen deficiency could occur.

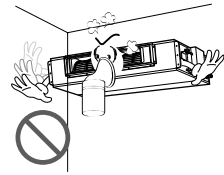

**When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on.**

 - Do not use the telephone or turn switches on or off. There is risk of explosion or fire

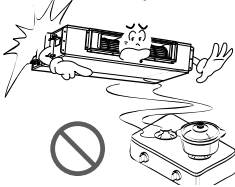


**If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable.**

- There is risk of electric shock or fire.




**Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives.**

 - There is risk of property damage, failure of product, or electric shock.

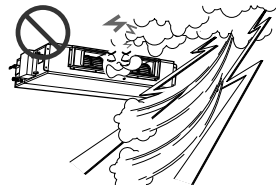


**Do not open the inlet grill of the product during operation. (Do not touch the electrostatic filter, if the unit is so equipped.)**

 - There is risk of physical injury, electric shock, or product failure.

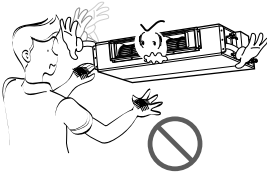


**When the product is soaked (flooded or submerged), contact an Authorized Service Center.**

 - There is risk of fire or electric shock.

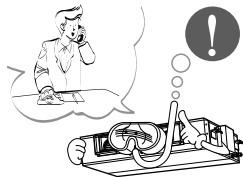


**Be cautious that water could not enter the product.**

 - There is risk of fire, electric shock, or product damage.

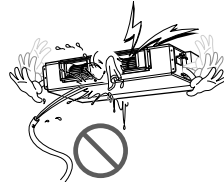


**Ventilate the product from time to time when operating it together with a stove, etc.**

 - There is risk of fire or electric shock.

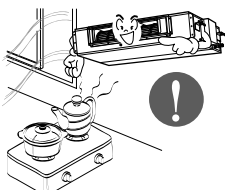


**Turn the main power off when cleaning or maintaining the product.**

 - There is risk of electric shock.

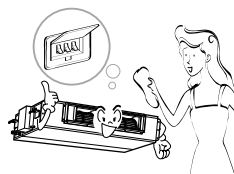

**When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker.**

 - There is risk of product damage or failure, or unintended operation.

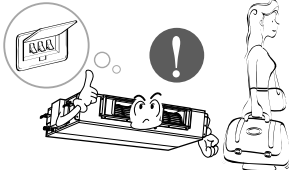

**Take care to ensure that nobody could step on or fall onto the outdoor unit.**

- This could result in personal injury and product damage.

 


## CAUTION

### Installation


**Always check for gas (refrigerant) leakage after installation or repair of product.**

- Low refrigerant levels may cause failure of product.

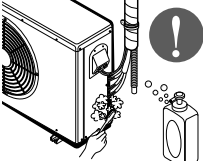


**Install the drain hose to ensure that water is drained away properly.**

 - A bad connection may cause water leakage.

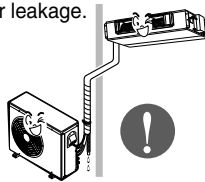

**Keep level even when installing the product.**

 - To avoid vibration or water leakage.

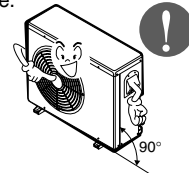


**Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods.**

- It may cause a problem for your neighbors.




**Use two or more people to lift and transport the product.**

 - Avoid personal injury.

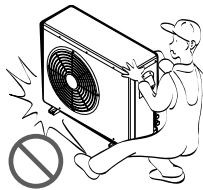

**Do not install the product where it will be exposed to sea wind (salt spray) directly.**

 - It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

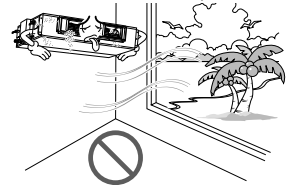

### Operation

 
**Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.)**

- This could harm to your health.




**Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system.**

- There is risk of damage or loss of property.

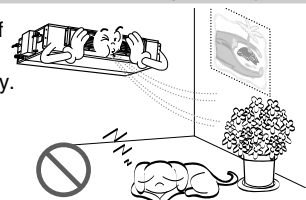

**Do not block the inlet or outlet of air flow.**

 - It may cause product failure.

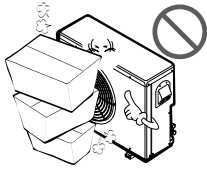

**Use a soft cloth to clean. Do not use harsh detergents, solvents, etc.**

- There is risk of fire, electric shock, or damage to the plastic parts of the product.



**Do not touch the metal parts of the product when removing the air filter. They are very sharp!**

- There is risk of personal injury.



 
**Do not step on or put anything on the product. (outdoor units)**

- There is risk of personal injury and failure of product.




**Always insert the filter securely. Clean the filter every two weeks or more often if necessary.**

- A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.

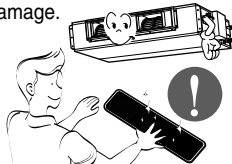

**Do not insert hands or other objects through the air inlet or outlet while the product is operated.**

 - There are sharp and moving parts that could cause personal injury.

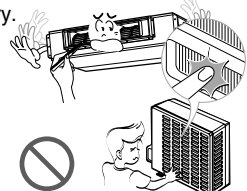


**Do not drink the water drained from the product.**

- It is not sanitary and could cause serious health issues.




**Use a firm stool or ladder when cleaning or maintaining the product.**

 - Be careful and avoid personal injury.

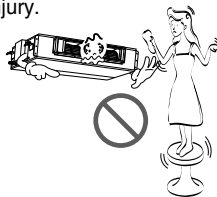


**Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries.**

 - There is risk of fire or explosion injury.

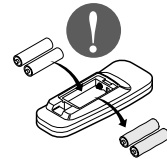

**Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire.**

 - They may burn or explode.

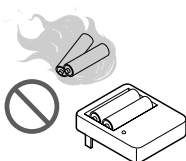

**If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked.**

 
- The chemicals in batteries could cause burns or other health hazards.



# Operating Instructions

## Name and Function of Remote Controller

### Duct Type Remote Controller

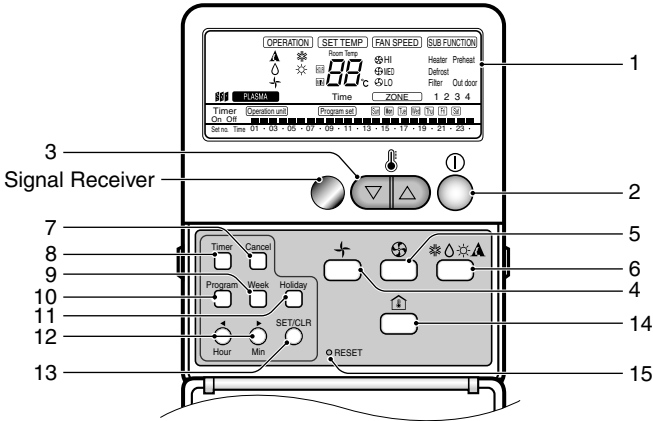

#### 1. Operation display

Displays the operation conditions.

#### 2. On/Off Button

Operation starts when this button is pressed, and stops when the button is pressed again.

#### 3. Set Temperature Button

Used to set the temperature when the desired temperature is obtained.

#### 4. FAN Operation Button

Used to circulate room air without cooling or heating.

#### 5. Fan Speed Button

Used to set desired fan speed.

#### 6. Operation Mode Selection Button

Used to select the operation mode.

- Auto Operation Mode.
- Cooling Operation Mode.
- Soft Dry Operation Mode.
- Heating Operation Mode.(except cooling model)

#### 7. Timer Cancel Button

Used to cancel the timer.

#### 8. Timer Set Button

Used to set the timer when the desired time is obtained.

#### 9. Week Button

Used to set a day of the week.

#### 10. Program Button

Used to set the weekly timer.

#### 11. Holiday Button

Used to set a holiday of the week.

#### 12. Time Set Button

Used to set the time of the day and change the time in the weekly timer Function.

#### 13. Set and Clear Button

Used to set and clear the weekly timer.

#### 14. Room Temperature Checking Button

Used to check the room temperature.

 
#### 15. Reset Button

Used to set the current time and clear the setting time.

\* Display temperature can be different from actual room temperature if the remote controller is installed at the place where sun-rays are falling directly or the place nearby heat source.



## Name and Function of Remote Controller('06 Model)

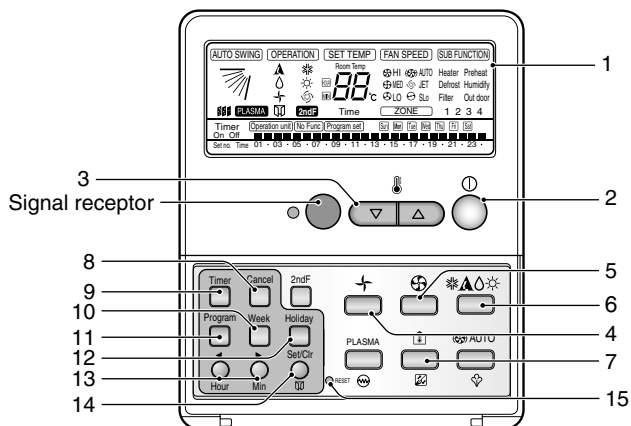

### 1. Operation display

Displays the operation conditions.

### 2. On/Off Button

Operation starts when this button is pressed, and stops when the button is pressed again.

### 3. Set Temperature Button

Used to set the temperature when the desired temperature is obtained.

### 4. FAN Operation Button

Used to circulate room air without cooling or heating.

### 5. Fan Speed Button

Used to set the desired fan speed.

### 6. Operation Mode Selection Button

Used to select the operation mode.

- Auto Operation Mode
- Cooling Operation Mode
- Soft Dry Operation Mode
- Heating Operation Mode(except cooling model)

### 7. Room Temperature Checking Button

Used to check the room temperature.

### 8. Timer Cancel Button

Used to cancel the timer.

### 9. Timer Set Button

Used to set the timer when the desired time is obtained.

### 10. Week Button

Used to set a day of the week.

### 11. Program Button

Used to set the weekly timer.

### 12. Holiday Button

Used to set a holiday of the week.

### 13. Time Set Button

Used to set the time of the day and change the time in the weekly timer Function.

### 14. Set and Clear Button

Used to set and clear the weekly timer.

### 15. Reset Button

Used to set the current time and clear the setting time.

### '06 MODEL :

AMNH09GB1A0, AMNH12GB1A0, AMNH18GB2A0, AMNH24GB2A0

 
## Optional Function

### • WIRELESS REMOTE CONTROLLER

This air-conditioner is equipped with wired remote controller basically. But if you want to have the wireless remote controller, you pay for it.

#### Signal transmitter

Transmits the signals to the signal receptor.

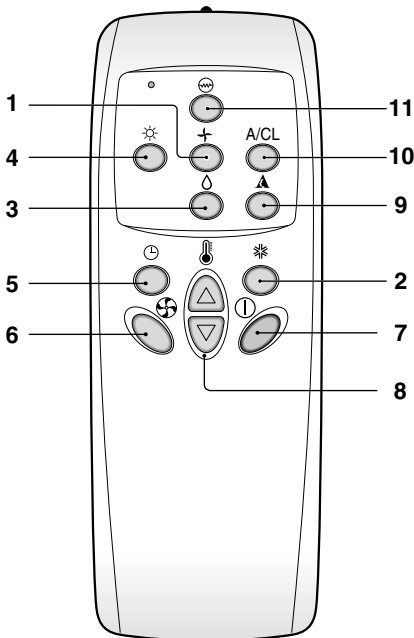

#### 1. FAN Operation Button

Used to circulate room air without cooling or heating.

#### 2. Cooling Operation Button

#### 3. Soft Dry Operation Button

Used to dehumidify without overcooling.

#### 4. Heating Operation Button

(Heat pump model only)

#### 5. Timer Set Button

Used to set the timer when the desired time is obtained.

Then the wired remote controller is set up to 24 hours by an hour but the wireless remote controller is set up to 7 hours by an hour. Therefore, if you want to set over 7 hours, use the wired remote controller.

#### 6. Fan Speed Button

Used to set the desired fan speed.

#### 7. On/Off Button

Operation starts when this button is pressed, and stops when the button is pressed again.

#### 8. Set Temperature Button

Used to set the temperature when the desired temperature is obtained

#### 9. Auto Operation Button

#### 10. Plasma Air Clean Button(Optional)

#### 11. Electric Heater Button(Optional) Used to set the Electric Heater.



#### CAUTION : for handling the Remote Controller

- Aim at the signal receptor on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7m.
- Be sure that there are no obstructions between the remote controller and the signal receptor.
- Do not drop or throw the remote controller.
- Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.
- Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation. (ex:electronic quick start, ELBA, inverter type fluorescent lamp)

 
## Optional Function('06 Model)

### • WIRELESS REMOTE CONTROLLER

This air-conditioner is equipped with wired remote controller basically. But if you want to have the wireless remote controller, you pay for it.

#### Signal transmitter

Transmits the signals to the signal receptor.

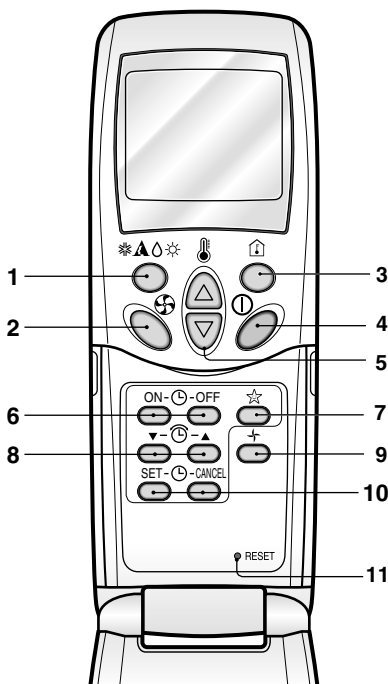

#### 1. OPERATION MODEL SELECTION BUTTON

Used to select the operation mode

#### 2. FAN SPEED BUTTON

Used to set the desired fan speed.

#### 3. ROOM TEMPERATUR BUTTON

Used to set desired horizontal airflow direction.

#### 4. ON/OFF BUTTON

Operation start when this button is pressed, and stops when the button is pressed again.

#### 5. SET TEMPERATURE BUTTON

Used to set the temperature when the desired temperature is obtained.

#### 6. ON/OFF TIMER BUTTON

Used to set time of starting operation.

#### 7. SLEEP MODE AUTO BUTTON

Used to set sleep mode auto operation.

#### 8. TIME SETTING BUTTON

#### 9. AIR CIRCULATION BUTTON

Used to circulate the room air without cooling or heating.

#### 10. TIME SET/CANCEL BUTTON

#### 11. RESET



**CAUTION :** for handling the Remote Controller

- Aim at the signal receptor on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7m.
- Be sure that there are no obstructions between the remote controller and the signal receptor.
- Do not drop or throw the remote controller.
- Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.
- Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation. (ex:electronic quick start, ELBA, inverter type fluorescent lamp)

 
'06 MODEL :


AMNH09GB1A0, AMNH12GB1A0, AMNH18GB2A0, AMNH24GB2A0

Set the Current Time and a day of the Week



**1** Press the '  ' button.

Each time the button is pressed, the number is changed from 00 to 23.  
You can set the number of the current hour.

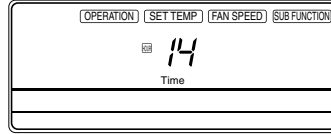


**2** Press the '  ' button.

  
Each time the button is pressed, the number is increased from 00 to 59.  
You can set the number of the current minute.

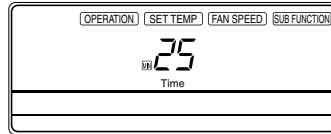


**3** Press the '  ' button.

  Each time the button is pressed, a day of the week is shifted from Sunday to Saturday.  
You can set the day of the week.

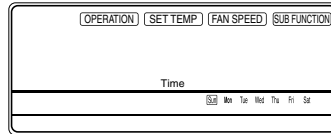

**4** Press the '  ' button.


 
If you want to reset the current time and a day of the week, click the Reset button.

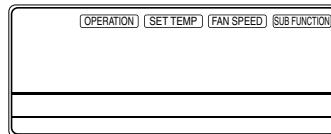


## Weekly Programming

**1** Press the Program button.

  
The remote controller is displayed like a picture. Then ' (Program set) ', ' Sun ' and '01' is blinked.

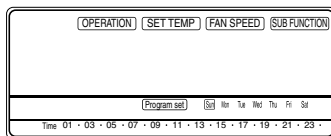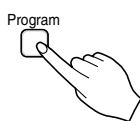



**2** Press the ' Week ' button.


Press  button repeatedly until desired mode appears.



For example, if you want Thu, press  button 4 times.

 
**3** Select the time you want.

Press  or  button, then blinking letter is shown.


If you press  button, then ' ■ ' shape appears.

' ■ ' shape means that five o'clock is reserved.

Using below buttons, you can reserve time.



 \* For example, the air-conditioner is on 6,7,8 and 13-22 o'clock.

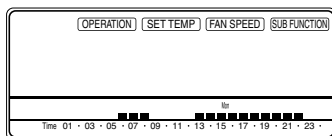

**4** Press the Program button again to finish weekly programming.



## Holiday Setting

If Tuesday is a holiday in this week, you may set a holiday.

1. Press the Program button.



 
2. Press the Week button.  
Select the Tuesday.



3. Press the Holiday button.



Then the remote controller will be displayed 'Tue'.  
The outside rectangular means holiday.

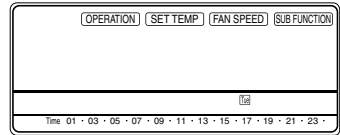


4. Press the Program button again to finish holiday setting.




## Timer Setting(Delay start/Pre-set stop)

 This function is used to turn on or turn off in several hours.


1. Press the Timer button  
to turn Timer on or off.




 
2. Change the timer setting until the desired time is set.



 3. If you want to cancel the timer setting, press the Cancel button.



## Operation Mode

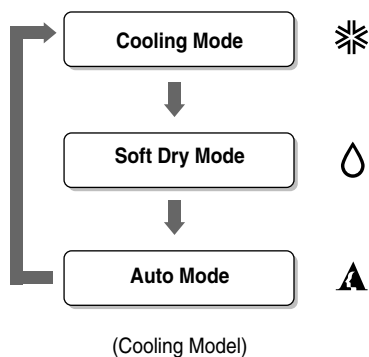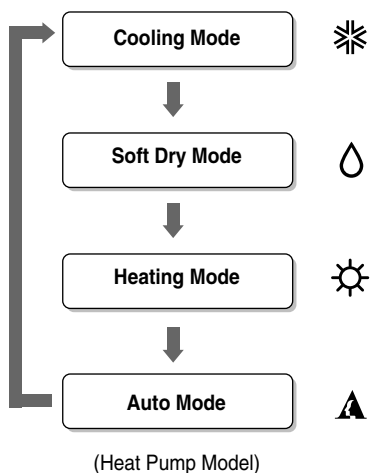  


## Operation Procedure

**1<sup>st</sup>** On/Off Button

**2<sup>nd</sup>** Operation Mode Selection Button


**3<sup>rd</sup>** Room Temperature Setting Button

 **4<sup>th</sup>** Indoor Fan Speed Selection Button

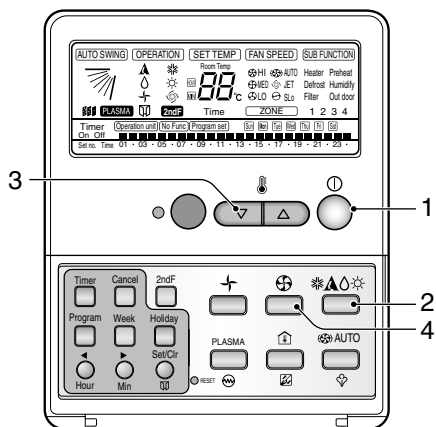

## Cooling Operation Mode

 **1** Press the On/Off Button.




**2** Select Cooling Operation.


Press the Operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.


### HEAT PUMP MODEL

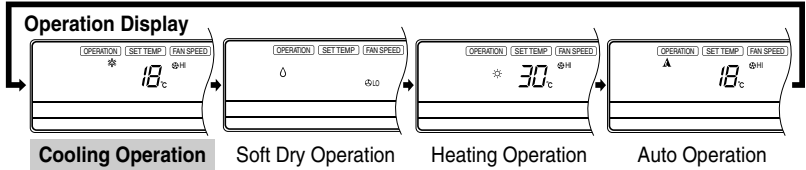 


### COOLING MODEL

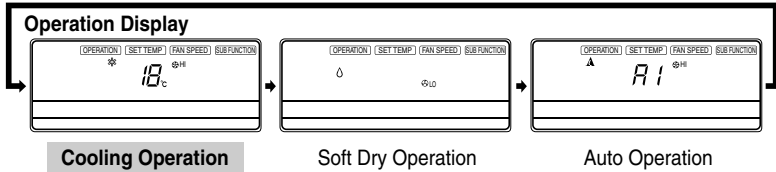 

 **3** Set the temperature lower than the room temperature.

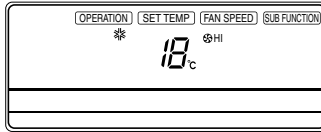

 
• The temperature can be set within a range of 18°C ~ 30°C by 1°C.



To raise the Temperature.

To lower the Temperature.

 **4** Set the fan speed.

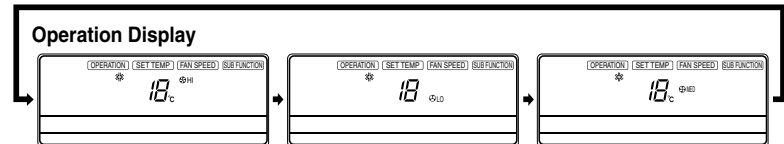

- Select the fan speed in three steps- high, low, medium.
- The display shows high fan speed.
- Each time the button is pressed, the fan speed mode is shifted.



## Soft Dry Operation Mode

This mode dehumidifies without overcooling.

**1** Press the On/Off Button.

 


**2** Select Soft Dry Operation.


Press the operation Mode Selection Button.

Each time the button is pressed, the operation mode is shifted in the arrow direction.

### HEAT PUMP MODEL

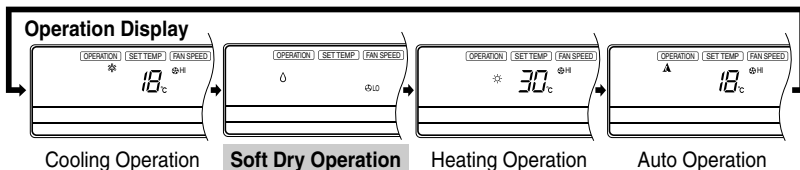

### COOLING MODEL

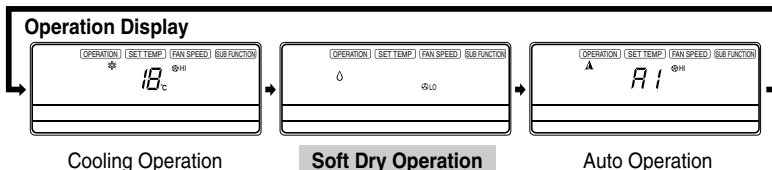 


**3** During Soft Dry Operation.

- The indoor fan speed is automatically set to the low, so the shift of the indoor fan speed is impossible because it's already being set to the best speed for Dry Operation by Micom Control.

## Heating Operation Mode (Heat pump model only)

 
**1** Press the On/Off Button.




**2** Select Heating Operation.

Press the Operation Mode Selection Button.

 
Each time the button is pressed, the operation mode is shifted in the arrow direction.

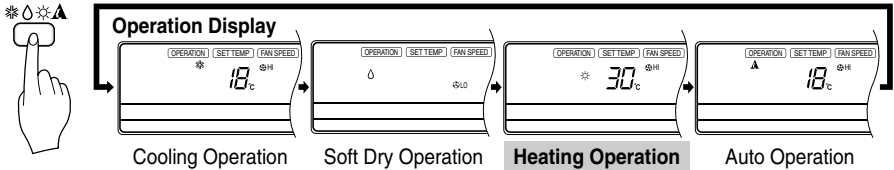

**3** Set the temperature.

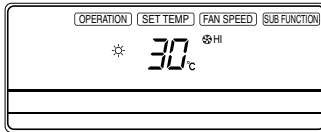 

 
• The temperature can be set within a range of 16°C ~ 30°C by 1°C.



To raise the Temperature.


To lower the Temperature.

 **4** Set the fan speed.

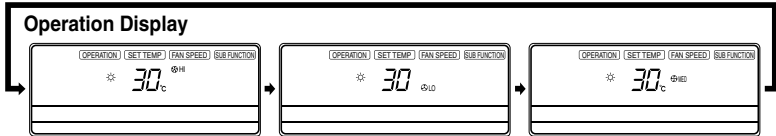


- Select the fan speed in three steps - high, low, medium.
- The display shows high fan speed
- Each time the button is pressed, the fan speed mode is shifted.

 **5** This air-conditioner is set to the hot start control in order not to discharge the cold air during the heating operation. This time, the remote controller indicates 'Preheat'.

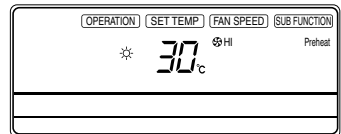


 **6** If the outdoor temperature is too low during the heating operation, this air-conditioner is set to the defrosting operation and the remote controller indicates 'Defrost'.

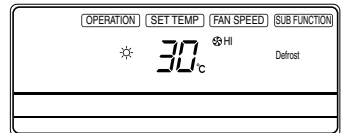


## Auto Operation Mode

 **1** Press the On/Off Button.




**2** To select **Auto Operation**, press the Operation Mode Selection button. Each time the button is pressed, the operation mode is shifted in the direction of the arrow.

### HEAT PUMP MODEL

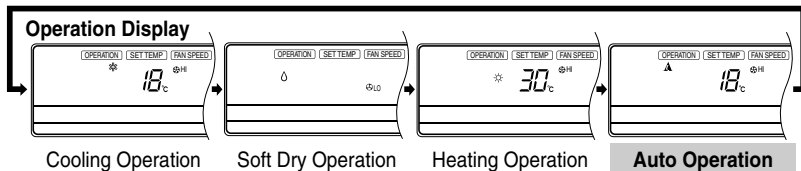 


### COOLING MODEL

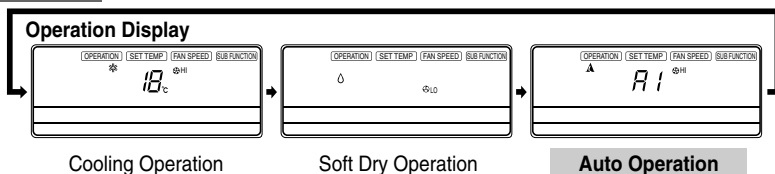 

**3**

### HEAT PUMP MODEL

 Set the temperature lower than the room temperature. The temperature can be set within a range of 18°C ~ 30°C by 1°C.


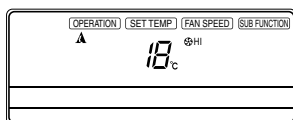


To raise the Temperature.

To lower the Temperature.

### COOLING MODEL

  Set the temperature upper or lower than the standard temperature. The temperature can be set within a range of -2 ~ 2 by 1 level.



To raise the Temperature.  
(When you feel too cool or cold.)

To lower the Temperature.  
(When you feel too warm or hot.)

(This indication will be shifted to the initial Auto Mode Display state after 4 seconds.)

### During Auto Operation:

- You can switch the indoor fan speed.
- If the system is not operating as desired, manually switch to another mode. The system will not automatically switch from the cooling mode to the heating mode, or from heating to cooling, then you must set the mode and the desired temperature again.

# FAN Operation

 
**1** Press the On/Off Button.



**2** Press FAN Operation Button.




**3** Each time Indoor Fan Speed button is pressed, the fan speed mode is shifted in the arrow direction.

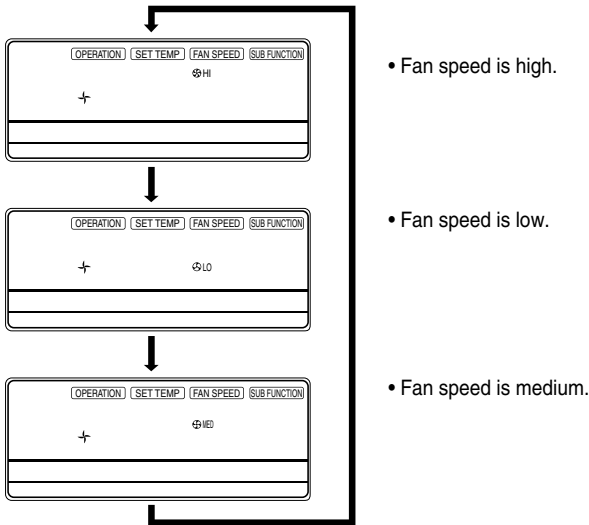

\* You can't set the temperature in Fan Operation mode. To exit this mode, press 'Operation Mode' button.

## Electric Heater Operation Mode(Optional)

 
**1** Press the On/Off Button.




**2** Select heating+ E/heater Operation.

Press the Operation Mode Selection Button.

 Press the Heater Operation Button on the remote controller.(When the unit operates in heating mode.)

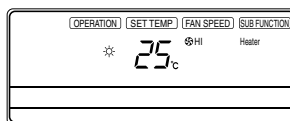


 **3** Set the temperature upper than the room temperature.  
The temperature can be set within a range of 16°C~30°C by 1°C.



To raise the Temperature.

 To lower the Temperature.

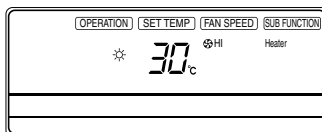


**4** Set the Fan Speed.





- Each time the Button is pressed, the Fan Speed mode is shifted.

## PLASMA Purification Operation (Optional)

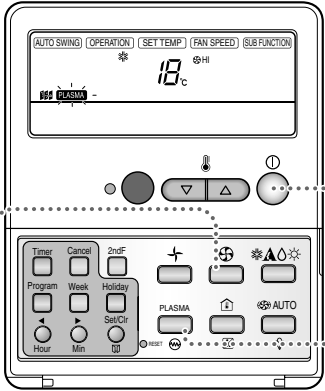 

 
- 1** Press the On/Off button. The unit will start.


- 2** Open the door on the remote control. Press the PLASMA On/OFF button. Operation will start when the button is pressed and stop when the button is pressed again.


- 3** New Fan speed can be set after opening the door of the remote control. You can select the fan speed in three steps-low, medium or high. Each time the button is pressed, the fan speed mode is shifted.

\* Air purifying operation (PLASMA) is available during cooling, heating or any other operations.



## Child Lock Function

This is the Function that any children cannot use to the air-conditioner.

### Operation procedure

 
#### 1. To set the Child-Lock Function

Press the Timer button and Minute Set button for three seconds. Then the operation mode shift to child lock mode and it is displayed 'CL' in the operation display.

When you press any button in this time, the remote controller is not converted to any selected mode and the 'CL' is displayed in the remote controller for about three seconds. But the Room Temperature function is operated in spite of child lock mode.

#### 2. To cancel the Child-Lock Function

Press the Timer button and Minute Set button for three seconds. Then the child-lock mode is cancelled and the preselected mode is displayed in the remote controller.

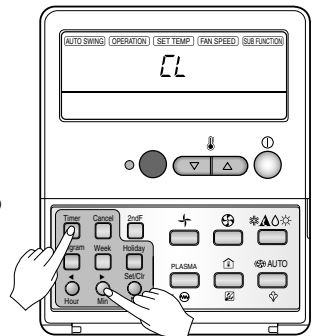

## Telephone Control Operation(optional)

Calling from outside, you can start the air conditioner to keep the room comfortable.  
Even though you went out with the air conditioner on, you can turn it off using the phone outside.

### TURN ON



1. Dial the number which is connected with the air conditioner.
2. After ringing 5 times.
3. You can hear the "Beep" sound (if the air conditioner is off), then press "0" "0" "7" "8" accordingly.
4. With the sound "Beep, Beep" the air conditioner starts on.
5. Hang up the phone.

### TURN OFF



1. Dial the number which is connected with the air conditioner.
2. After ringing 5 times.
3. You can hear the "Beep Beep" sound (if the air conditioner is on), then press "0" "0" "7" "9" accordingly.
4. With the sound "Beep---" the air conditioner is turned off.
5. Hang up the phone.

#### NOTICE

- This product works after telephone rings 5 times.
- If internal user picks up the phone before 5 rings, Telephone control function does not work.
- If user doesn't push the telephone button 25 seconds after beep, Telephone control function doesn't work.
- If it is connected through EPABX system, Tele control doesn't work.

## Telephone Control Operation(When using along with ARS telephone)

Calling from outside, you can start the air conditioner to keep the room comfortable.  
Even though you went out with the air conditioner on, you can turn it off using the phone outside.

### TURN ON



1. Dial the number which is connected with the air conditioner.
2. OGM guide is provided after signal sound rings four times and then "Beep"(sounds from telephone itself) sounds so that outside recording can be done.
3. Slowly press password "0" "0" "7" and "8" in order.
4. With the sound "Beep, Beep" the air conditioner starts on.
5. Hang up the phone.

### TURN OFF



1. Dial the number which is connected with the air conditioner.
2. OGM guide is provided after signal sound rings four times and then "Beep"(sounds from telephone itself) sounds so that outside recording can be done.
3. Slowly press password "0" "0" "7" and "9" in order.
4. With the sound "Beep---" the air conditioner is turned off.
5. Hang up the phone.

#### NOTICE

 
- The numbers of response bell should be adjusted to four times if pressing "Out-of-office" button or taking other action for automatic response.
- The recording time of OGM (Outgoing Message) should be less than approximately 15 seconds.
- If it is connected to key phone, it cannot be worked.



## Operation Details

### • Cooling Operation Mode

When the room temperature is higher than the set temperature, it operates in cooling mode at the set temperature, the set fan speed, and then it will be in automatically turn off when the room temperature reaches the set temperature +0.5°C.

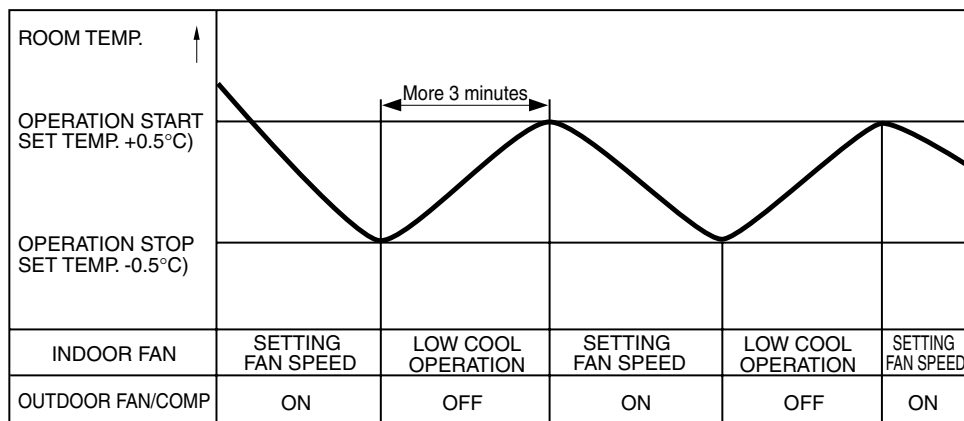


### Helpful information

Airflow speed and cooling capacity.

The cooling capacity indicated in the specification is the value when the fan speed is set to high, and the capacity will be lower at low or medium fan speed.

 High fan speed is recommended when you wish to cool the room quickly.

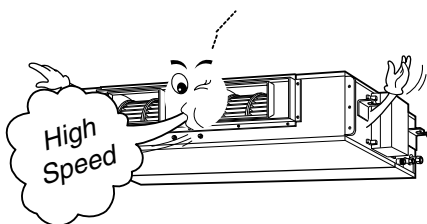

- After main power is on, Fan will start 7 seconds later.

## Self-Diagnosis Function

'CH' will flash in the remote controller display when a problem occurs. Then please contact your dealer.

# Care and maintenance

**Caution:** Before performing any maintenance, turn off the main power to the system.

 
## Indoor Unit

### Grille, Case, and Remote Control

- Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.


#### Note:

Supply power must be disconnected before cleaning the indoor unit.

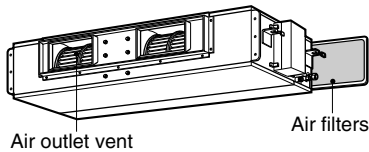


### Air Filter

 The air filters behind Indoor unit (the suction side) should be checked and cleaned once every 2 weeks or more often if necessary.

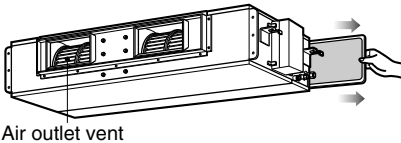

### PLASMA Filter (Optional)

 The PLASMA filter should be checked and cleaned, once every month or more often, if necessary.

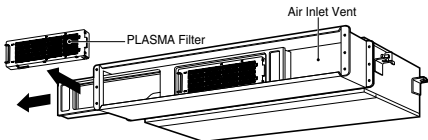

Don't touch this PLASMA Filter within 10 seconds after drawing out Air Cleaner Bracket, it may cause an electric shock.

- Never use any of the followings:

- Water hotter than 40°C  
Could cause deformation and/or discoloration.
- Volatile substances  
Could damage the surfaces of the air conditioner.



1. Clean the filter with a vacuum or warm, soapy water.

- If very dirty, wash with a solution of detergent in lukewarm water.
- If hot water (50°C or more) is used, filter may be deformed.

2. After washing with water, dry well in the shade.

3. Re-install the air filter.

1. After removing the Panel-Cover, draw the Air Cleaner Bracket slightly sideward to remove the PLASMA filter.

2. Dip the PLASMA filter into the water mixed with mild detergent, for 20~30 minutes.

3. Dry the PLASMA filter in the shade for a day. (Especially, the humidity must be removed perfectly from this parts).

4. Be careful not to cut the electric discharge lines while washing.

5. Re-install the PLASMA filter to the original position.

**When the air conditioner is not going to be used for a long time.****When air conditioner is not going to be used for a long time.**

1. Operate the air conditioner on Air circulation mode for 2 to 3 hours.
  - This will dry out the internal parts.
2. Turn off the circuit breaker.



**CAUTION** Turn off the circuit breaker when the air conditioner is not going to be used for a long time. Dirt may collect and may cause a fire.

**When the air conditioner is to be used again.**

- Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.

**Operation Tips****Do not overcool the room.**

 
This is not good for your health and wastes electricity.

**Keep blinds or curtains closed.**

Do not let direct sunshine enter the room when the air conditioner is in operation.

**Make sure that the doors and windows are shut tight.**

Avoid opening doors and windows as much as possible to keep the cool air in the room.

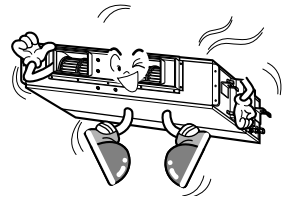**Clean the air filter regularly.**

Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.

**Ventilate the room occasionally.**

Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

# Before you call for service...

## Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

Case	Explanation	See page
The air conditioner does not operate.	• Have you made a mistake in timer operation?	14
	• On first starting, the indoor unit operates in fifteen seconds.	-
The room has a peculiar odor.	• Has the fuse blown or has the circuit breaker been tripped?	-
	• Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.	-
It seems that condensate is leaking from the air Conditioner.	• Condensation occurs when the airflow from the air conditioner cools the warm room air.	-
Air conditioner does not operate for about 3 minutes when restart.	• This is the protector of the mechanism.	-
	• Wait about three minutes and operation will begin.	-
Does not cool or heat effectively.	• Is the air filter dirty? See air filter cleaning instructions.	26
	• The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down.	-
	• Has the setting temperature been set incorrectly?	16, 18
	• Are the indoor unit's air inlet or outlet vents obstructed?	-
The air conditioner operation is noisy.	• For a noise that sounds like water flowing. -This is the sound of freon flowing inside the air conditioner unit.	-
	• For a noise that sounds like the compressed air releasing into atmosphere. -This is the sound of the dehumidifying water being processed inside the air conditioning unit.	-
Crack sound is heard.	• This sound is generated by the expansion/contraction of the inlet grille, etc. due to changes of temperature.	-
Remote control display is faint, or no display at all.	• Has the circuit breaker been tripped?	-

