



**LG**

**XB12**

XB12-A0U/D0U/X0U

XBS12V

**English**

## Mini Home Theater

Read the manual carefully before using the unit.

**GERMAN**

## Mini-Heimkinosystem

Lesen Sie diese Bedienungsanleitung vor Gebrauch des Gerätes sorgfältig durch

**SLOVENIAN**

## Mini sistem za domači kino

Pazljivo preberite ta navodila, preden začnete uporabljati enoto.



**USB**





**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

**CAUTION:** Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating.

The openings should be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.

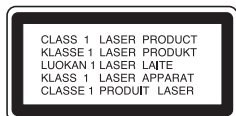

**CAUTION:**

This Product employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference, should the unit require maintenance, contact an authorized service location-see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus shall not be exposed to water, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

**CAUTION:**

VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED

②

**CAUTION concerning the Power Cord**

**Most appliances recommend they be placed upon a dedicated circuit;**

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire.

Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.



**Disposal of your old appliance**


1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.




This product is manufactured to comply with the radio interference requirements of EEC DIRECTIVE 2004/108/EC and 2006/95/EC.

**POWER SAVE MODE**

You can set up the unit into an economic power save mode.

In power-on status, press and hold /(POWER) button for about 3 seconds.

- Nothing is displayed in the display window when the unit goes into the power save mode.

To cancel power save mode, press /(POWER).

# Introduction

## Installation

|                           |   |
|---------------------------|---|
| TV Connection             | 4 |
| Antenna Connection        | 4 |
| Speaker system connection | 4 |

## Operation

|                                    |     |
|------------------------------------|-----|
| Operation using the front Panel    | 5   |
| Operation using the Remote Control | 6-8 |
| Additional features                | 8   |

## Setup

|                  |      |
|------------------|------|
| Initial Settings | 8-10 |
|------------------|------|

## Playing an Audio CD or MP3/WMA/JPG/DivX file

|                                     |    |
|-------------------------------------|----|
| Playing an Audio CD or MP3/WMA file | 10 |
| Programmed Playback                 | 10 |
| Viewing a JPEG file                 | 11 |
| Playing a DivX Movie file           | 11 |

## Timer function

|                   |    |
|-------------------|----|
| Setting the Clock | 11 |
| Timer Function    | 12 |

## TUNER

|                           |    |
|---------------------------|----|
| Presetting radio stations | 12 |
| Listening to the radio    | 13 |

## RDS Operation -Optional

## Reference






|                 |    |
|-----------------|----|
| Language Codes  | 14 |
| Area Codes      | 14 |
| Troubleshooting | 15 |
| Specifications  |    |

## About the 🖱️ symbol display

“ 🖱️ ” may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

## About the disc symbols for instructions

A section of which title has one of the following symbols is applicable only to the disc represented by the symbol.




-  DVD
-  Video CDs
-  Audio CDs
-  MP3 file
-  WMA file
-  JPEG file
-  DivX file

## About the symbols for instructions

**Caution** Indicates hazards likely to cause harm to the unit itself or other material damage.

**Note Tip** Indicates special operating features of this unit. Indicates tips and hints to make the task easier

## Playable Discs

|   |                                       |
|---|---------------------------------------|
|  | DVD<br>(8 cm / 12 cm disc)            |
|  | Video CD (VCD)<br>(8 cm / 12 cm disc) |
|  | Audio CD<br>(8 cm / 12 cm disc)       |

In addition, this unit can play a DVD±R, DVD±RW, SVCD, and CD-R or CD-RW that contains audio titles, MP3, WMA, JPEG or DivX files.

## Note :

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.


## Regional Code

This unit has a regional code printed on the rear of the unit. This unit can play only DVD discs labeled as the same as the rear of the unit or “ALL”.

## Note on Regional Codes

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from your player, the message “Check Regional Code” appears on the TV screen.

## Installation

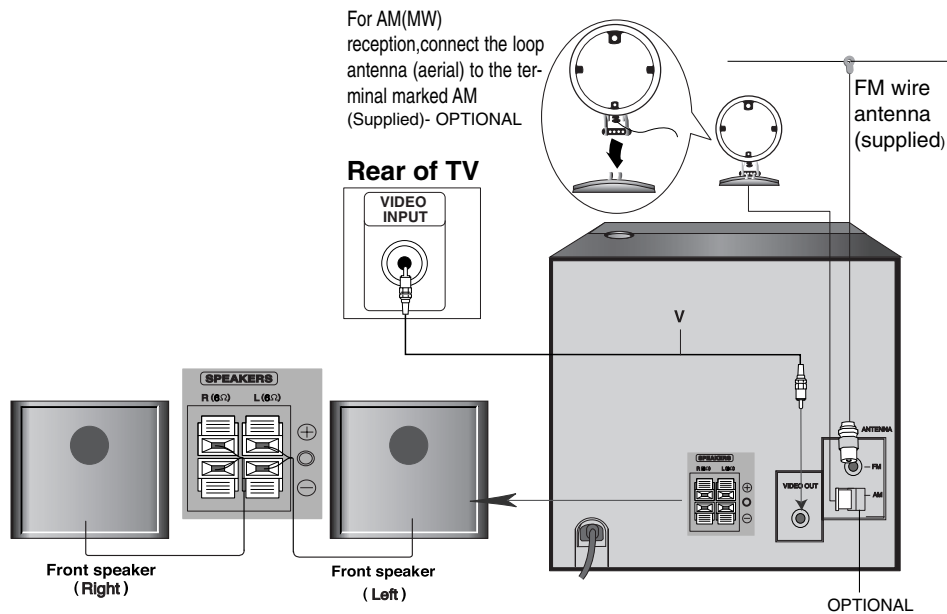

### TV Connection

#### Video connection

Connect the VIDEO OUT jack from the unit to the VIDEO IN jack on the TV using the video cable supplied (V).

#### Tip

- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

#### Caution

- Make sure the unit is connected directly to the TV. Select the correct AV input on your TV.
- Do not connect your unit to TV via your VCR. The DVD image could be distorted by the copy protection system.

### Antenna (Aerial) Connection

Connect the supplied FM/AM(optional) antennas to listen to the radio.

- Connect the AM loop antenna to the AM antenna connector. (optional)
- Connect the FM wire antenna to the FM antenna connector.

#### Note :

- To prevent noise pickup, keep the AM loop(optional) antenna away from the unit and other component.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

### Speaker System Connection


Connect the speaker wires to the speaker terminals.

#### Note :

- Be sure to match the speaker wires to the appropriate terminal on the components, + to + and - to -. If the cables are reversed, the sound will be distorted and will lack bass.
- If you use front speakers with low maximum input rating, adjust the volume carefully to avoid excessive output on the speakers.

## Operation

### Operation using the front Panel

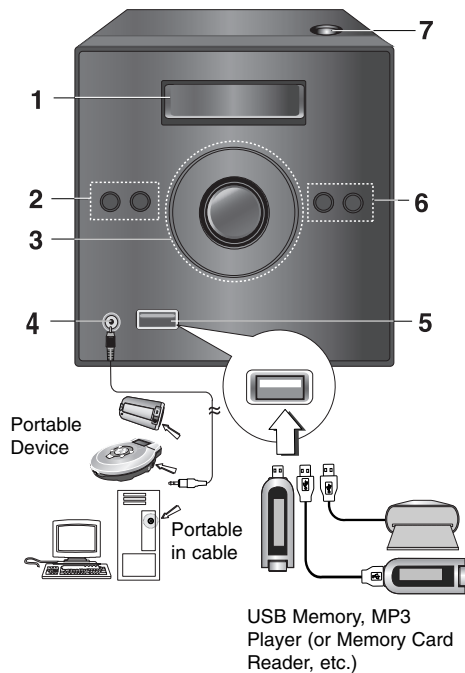

#### 1. DISPLAY WINDOW

#### 2. POWER

**FUNC.** (function select) button  
(DVD/CD, PORTABLE, FM,  
AM (optional), USB)

#### 3. • STOP /MO./ ST. SET (■)

• PLAY /PAUSE (▶/||)

• TUNING (-) - Tuner  
CD SKIP/ SCAN (◀◀) **ALL**

• TUNING (+) - Tuner  
CD SKIP/ SCAN (▶▶) **ALL**

• Volume control knob

#### 4. PORTABLE IN Jack

##### Using PORTABLE device

When you connect a portable music playing device to the PORTABLE IN jack on this device by using a (∅3.5mm) mini stereo cable (not supplied), you can here the sound being outputted from the portable device through the speaker.

1. Connect the PORTABLE IN jack on this device to a headphone jack on another portable one by using a cable.

2. Press **FUNC.** on the front panel repeatedly or PORTABLE (on the remote control) button.

3. Start playing the connected portable device.

4. Adjust the volume by using VOLUME.

#### 5. USB port

##### USB Function

You can enjoy the media files such as tunes (MP3/WMA/PHOTO/VIDEO file) saved in an MP3 player or USB memory by connecting the storage device to the USB port of this unit.

##### Compatible Devices

- Devices which require additional program installation when you have connected it to a computer, are not supported.
- MP3 Player : Flash type MP3 player.  
The MP3 player requiring installation of a driver is not supported.
- USB Flash Drive : Devices that support USB2.0 or USB1.1.

##### To Remove the USB from the unit

- Choose the other functions except USB function in order to remove the USB.
- Remove the USB from the unit.

##### Do not extract the USB device in operating.


- A back up demands to prevent a data damage.
- If you use a USB extension cable or USB hub, the USB device might not be recognized.
- A device using NTFS file system is not supported. (Only FAT (16/32) file system is supported.)
- The USB function of this unit does not support all USB devices.
- Digital camera and mobile phone are not supported.
- This unit is not supported when the total number of files is 1000 or more.
- If the drive of USB device is two or more, a drive folder is displayed on the screen. If you want to move to the previous menu after you select a folder, press RETURN.

#### 6. • TIMER

• CLOCK

#### 7. DISC door

## Operation using the Remote Control

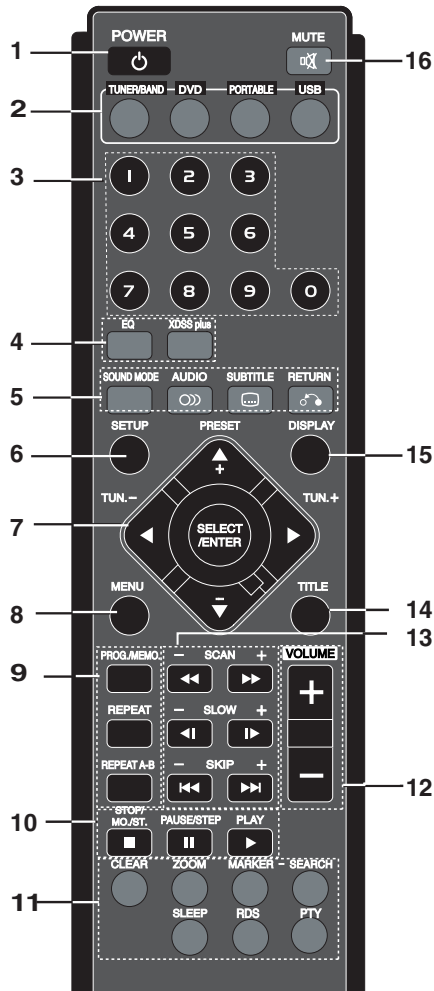

1. **POWER** (⏻)
2. **FUNCTION SELECT**  
(TUNER/BAND, DVD, PORTABLE, USB)
3. **NUMERIC buttons (0-9)**  
Selects a service, program number directly or selects numbered options in a menu.
4. **EQ (EQUALIZER Effect)**  
You can choose 4 fixed sound impressions  
Each time you press the button the setting changes in the display window as shown below.  
NORMAL → ROCK → POP → CLASSIC → NORMAL...

- **XDSS plus**  
XDSS (Extreme Dynamic Sound System)  
Press **XDSS plus** to reinforce treble, bass and the surround effect. The "XDSS" or "NORMAL" indicator lights.

**DVD/VCD/DivX/ACD** : XDSS ↔ NORMAL

**MP3/WMA** : XDSS → MP3 -- OPT  
→ NORMAL → XDSS

5. **SOUND MODE**  
You can enjoy surround sound simply by selecting one of the pre-programmed sound fields according to the program you want to listen to (2 ch. sound only).

Press **SOUND MODE** repeatedly.  
BYPASS → STUDIO → CLUB → HALL → THEATER 1 → CHURCH → BYPASS...

**Note:**  
Initial sound mode is BYPASS.

- **AUDIO**  
AUDIO language: During playback, press AUDIO repeatedly to hear a different audio language or audio track. **DVD DivX**

AUDIO channel: Press AUDIO repeatedly during playback to hear a different audio channel (Stereo., Left or Right). **VCD**

- **SUBTITLE**  
During playback, press **SUBTITLE** repeatedly to select a desired subtitle language. **DVD DivX**

- **RETURN** (↶)  
Removes the setup menu.

6. **SETUP**
7. **◀/▶/▲/▼ (left/right/up/down)**  
(Selects an option in the menu)

- **PRESET +/- (▲/▼)**  
(Selects program of radio)  
Press PRESET +/- (▲/▼) repeatedly to select the preset station you want.  
Each time you press the button, the unit tunes in one preset station at a time.  
Preset radio stations in the unit's memory first. (see "Presetting radio stations" on the page 12)

- **TUN. +/- (◀/▶)**  
For manual tuning, press TUN. +/- (◀/▶) repeatedly  
For automatic tuning, press and hold TUN. +/- (◀/▶) for about two seconds.

- **SELECT/ ENTER**  
Acknowledges the menu selection.

## 8. MENU

The disc menu appears on the screen.

## 9. • PROG./MEMO.

Accesses or removes Program menu.  
Enter a radio station's frequency into the tuner.

### • REPEAT

During playback, press **REPEAT** repeatedly to select a desired repeat mode.

DVD Video discs: Chapter/Title/Off  
Video CD, Audio CD, DivX/MP3/WMA discs:  
Track/All/Off

### • REPEAT A-B **DVD VCD**

During playback, press **REPEAT A-B** to select a point A and a point B and repeats a sequence from point A (Starting point) to point B (End point). Press **REPEAT A-B** to exit.

#### **Note :**

The A-B repeat function is available only in the current title.

## 10. • STOP/MO./ST. (■)

### For your reference

- If an FM program is noisy;  
Press **MO./ST. (■)** that "STEREO" disappears in the display window. There will be no STEREO effect, but the reception will be improved.  
Press **MO./ST. (■)** again to restore the stereo effect.
- To improve reception;  
Reposition the supplied antennas.

### • PAUSE/ STEP(II)

During playback, press **PAUSE/ STEP(II)** to pause playback. **ALL**

Press **PAUSE/ STEP (II)** repeatedly to play Frame-by-Frame.

**DVD VCD DivX**

### • PLAY (▶) - To Play disc and file

## 11. • CLEAR

Removes a track number on the program menu or a mark on the MARKER SEARCH menu.

### • ZOOM

During playback or in the pause mode, press **ZOOM** to enlarge the video image (3 steps). You can move through the zoomed picture using **◀/▶/▲/▼** buttons.

#### **Note :**

Zoom may not work on some DVDs.

### • MARKER - SEARCH

#### To enter a Marker

You can start playback from up to nine memorized points. To enter a marker, press **MARKER** at the desired point on the disc. The Marker icon appears on the TV screen briefly. Repeat to enter up to nine markers.

### To Recall or Clear a Marked Scene

1. During disc playback, press **SEARCH**.  
The marker search menu appears on the screen.
2. Within 10 seconds, press **◀/▶** to select a marker number that you want to recall or clear.
3. Press **SELECT/ENTER** and playback starts from the marked scene. Or press **CLEAR** and the marker number is erased from the list.
4. You can play any marker by inputting its number on the marker search menu.

### • SLEEP

You can set the unit to turn off automatically at a specified time .

1. Press **SLEEP** to set the desired sleep time.  
The **SLEEP** indicator and the sleep time appears in the display window.
2. Each time you press **SLEEP** the setting changes in the following order.

**SLEEP180 →150 → 120 →90→80→70 → 60→  
50 → 40 → 30 → 20 →10 → OFF (No display)  
→SLEEP 180...**

#### **Note :**

You can check the remaining time before the unit turns off. Press **SLEEP**. The remaining time appears in the display window.

### • RDS,PTY - OPTIONAL

Views the various displays of the RDS options.

## 12. VOLUME -/+

Adjusts speaker volume.

## 13. • SKIP (◀◀ / ▶▶)

During playback, press **SKIP (◀◀ or ▶▶)** to go to the next chapter/track or to return to the beginning of the current chapter/track.

Press **SKIP ◀◀** twice briefly to step back to the previous chapter/track.

### • SCAN (◀◀ / ▶▶)

During playback, press **SCAN (◀◀ or ▶▶)** repeatedly to select the required scan speed.

DVD : 5 steps

(▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶, ▶▶▶▶▶▶),  
(◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀, ◀◀◀◀◀◀)

Video CD :4 steps

(▶▶, ▶▶▶, ▶▶▶▶, ▶▶▶▶▶)

(◀◀, ◀◀◀, ◀◀◀◀, ◀◀◀◀◀)

WMA/MP3, Audio CD ◀◀ (X2, X4, X8) or

▶▶ (X2, X4, X8)

### • SLOW

In the pause mode, press **◀I** or **I▶** to select required speed.

DVD : ◀I (1/2, 1/4, 1/8, 1/16) or

I▶ (1/2, 1/4, 1/8, 1/16)

Video CD : I▶ (1/2, 1/4, 1/8, 1/16)

## 14. TITLE

(Use the **TITLE** button to display the title screen included on DVD video discs.)

## 15.DISPLAY

You can display various information about the disc loaded on-screen.

- 1.Press **DISPLAY** to show various information about the disc loaded on-screen.  
The displayed items differ depending on the disc type or playing status.
- 2.You can select an item by pressing **▲ / ▼** and change or select the setting by pressing **◀ / ▶**.
  - Title (Track) –Current title (or track) number/total number of titles (or tracks).
  - Chapter –Current chapter number/ total number of chapters.
  - Time – Elapsed playing time.
  - Audio – Selected audio language or channel.
  - Subtitle – Selected subtitle.
  - Angle – Selected angle/ total number of angles.
  - Sound – Selected sound mode.

### Note :

If a button is not pressed for a few seconds, the on-screen display disappears.

## 16. MUTE( )

- Press **MUTE** to mute your unit.  
You can mute your unit in order, for example, to answer the telephone.

## Additional features

### Time Search **DVD VCD DivX**

To start playing at any chosen time on the disc:

1. Press **DISPLAY** during playback.
2. Press **▲ / ▼** to select the time clock icon and “--:--:--” appears.
3. Input the required start time in hours, minutes, and seconds from left to right. If you enter the wrong numbers, press **CLEAR** to remove the numbers you entered. Then input the correct numbers.
4. Press **SELECT/ENTER** to confirm. Playback starts from the selected time.

### Screen Saver

The screen saver appears when you leave the unit in Stop mode for about five minutes.

## Last Scene Memory **DVD**

This unit memorizes the last scene from the last disc that is viewed. The last scene remains in the memory even if you remove the disc from the unit or switch off the unit. If you load a disc that has the scene memorized, the scene is automatically recalled.

### Note :

This unit does not memorize the scene of a disc if you switch off the unit before commencing to play the disc.

## 1.5 speed playback

### **DVD VCD MP3 WMA ACD**

You can enjoy a music and movie at a faster speed. The 1.5 speed allows you to watch the pictures and listen to the sound quicker than playing at a normal speed on the disc.

1. Press **PLAY** during the normal playback. The screen will appear at 1.5 speed with sound .
2. To return to the normal **PLAY**, press **PLAY**.

## System Select

You must select an appropriate system mode for your TV system. If **NO DISC** appears in the display window, press and hold **PAUSE/STEP (II)** on remote control or **PLAY /PAUSE (▶/II)** on the front panel for more than 5 seconds to be able to select a system (**PAL**, **NTSC** or **AUTO**).

- When the selected system is not compatible with the system of your TV, normal colour picture may not be displayed.

**NTSC:** Select when the unit is connected with NTSC-TV.

**PAL:** Select when the unit is connected with PAL-TV.

**AUTO:** Select when the unit is connected with Multi system TV.

## Camera Angle **DVD**

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.

- 1.Press **DISPLAY** and then press the **▲ / ▼** to select a angle.  
The number of the current angle appears in the display window.
- 2.Select a desired angle pressing the **◀ / ▶** buttons

## Setup

### Initial Settings

By using the Setup menu, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, read the page 8 to 10





**To display and exit the Menu:**

Press **SETUP** to display the menu. A second press of **SETUP** will take you back to initial screen.

**To go to the next level:** Press **▶**.

**To go back to the previous level:** Press **◀**.

**GENERAL OPERATION**

1. Press **SETUP**. The Setup menu appears.
2. Use **▲ / ▼** to select the desired option then press **▶** to move to the second level. The screen shows the current setting for the selected item, as well as alternate setting(s).
3. Use **▲ / ▼** to select the second desired option and then press **▶** to move to the third level.
4. Use **▲ / ▼** to select the desired setting then press **SELECT/ENTER** to confirm your selection. Some items require additional steps.
5. Press **SETUP** or **PLAY** to exit the Setup menu.

**1 LANGUAGE****OSD**

Select a language for the Setup menu and the on-screen display.

**Disc Audio / Subtitle / Menu**

Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

**Original** – Refers to the original language in which the disc was recorded.

**Other** – To select another language, press numeric buttons and then **SELECT/ENTER** to enter the corresponding 4-digit number according to the language code list on the page 14. If you enter the wrong language code, press **CLEAR**.

**2 DISPLAY****TV Aspect**

**4:3** – Select when a standard 4:3 TV is connected.

**16:9** – Select when a 16:9 wide TV is connected.

**Display Mode**

The display Mode setting works only when the TV Aspect mode is set to "4:3".

**Letterbox** – Displays a wide picture with bands on the upper and lower portions of the screen.

**Panscan** – Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

**3 AUDIO**

Each DVD disc has a variety of audio output options. Set the unit's **AUDIO** options according to the type of audio system you use.

**To display and exit the Menu:**

Press **SETUP** to display the menu. A second press of **SETUP** will take you back to initial screen.

**Dynamic Range Control (DRC)**

With the DVD\*\* format, you can hear a program's soundtrack in the most accurate and realistic presentation, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set **DRC to On** for this effect.

\*1: Dolby Digital only

**Vocal**

Set **Vocal** to **On** only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into normal stereo sound.

**4 LOCK (Parental Control)****Rating**

Blocks playback of rated DVDs based on their contents. Not all discs are rated.

1. Select "Rating" on the **LOCK** menu then press **▶**.
2. To access the **LOCK** options, you must input the password you have created. If you have not yet entered password, you are prompted to do so.

Input a password and press **SELECT/ENTER**. Enter it again and press **SELECT/ENTER** to verify. If you make a mistake before pressing **SELECT/ENTER**, press **CLEAR**.

3. Select a rating from 1 to 8 using the **▲ / ▼** buttons.

**Rating 1-8:** Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

**Unlock:** If you select unlock, parental control is not active and the disc plays in full.

4. Press **SELECT/ENTER** to confirm your rating selection, then press **SETUP** to exit the menu.

**Password**

You can enter or change password.

1. Select **Password** on the **LOCK** menu and then press **▶**.
2. Follow the step 2 as shown above (Rating).  
To change the password, press **SELECT/ENTER** when the "Change" option is highlighted. Input a password and press **SELECT/ENTER**. Enter it again and press **SELECT/ENTER** to verify.
3. Press **SETUP** to exit the menu.

**If you forget your password**

If you forget your password, you can clear it using the following steps:

1. Press **SETUP** to display the Setup menu.
2. Input the 6-digit number "210499" and press **SELECT/ENTER**. The password is cleared.

### Area Code

Enter the code of the area whose standards were used to rate the DVD video disc, based on the list on page 14.

1. Select "Area Code" on the LOCK menu then press ►.
2. Follow step 2 as shown in rating section.
3. Select the first character using ▲ / ▼ buttons.
4. Press ► and select the second character using ▲ / ▼ buttons.
5. Press **SELECT/ENTER** to confirm your Area code selection.

### 5 OTHERS

#### PBC

Set Playback Control (PBC) to On or Off.

**On:** Video CDs with PBC are played according to the PBC.

**Off:** Video CDs with PBC are played in the same way as Audio CDs.

### DivX(R) Registration

We provide you the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos based on the DivX® VOD service. For more information, visit [www.divx.com/vod](http://www.divx.com/vod).

1. Select "DivX(R) Registration" option and then press ►.
2. Press **SELECT/ENTER** while "Select" is selected and the registration code will appear. Use the registration code to purchase or rent the videos from DivX® VOD service at [www.divx.com/vod](http://www.divx.com/vod). Follow the instructions and download the video onto a disc for playback on this unit.
3. Press **SELECT/ENTER** to exit.

**Note :** All the downloaded videos from DivX® VOD can only be played back on this unit.

## Playing an Audio CD or MP3/WMA/JPG/DivX file

### Playing an Audio CD or MP3/WMA file

This unit can play Audio CDs or MP3/WMA files.

#### MP3/ WMA/ Audio CD

Once you insert a cd with MP3/WMA files or Audio, a menu appears on the TV screen.

Press ▲ / ▼ to select a track/file and then press PLAY or **SELECT/ENTER**, and playback starts. You can use variable playback functions. Refer to the Remote control page .

#### ID3 TAG

When playing a file containing information such as track titles, you can see the information by pressing DISPLAY.

[ Song, Artist, Album, Genre, Comment ]

#### Tip

- Press MENU to move to the next page.
- On a CD with MP3/WMA and JPEG, you can switch MP3/WMA and JPEG. Press TITLE, and MUSIC or PHOTO top of the menu is highlighted.

### Programmed Playback

The program function enables you to store your favorite tracks from any disc in the unit memory. A program can contain 300 tracks.

1. Insert a disc.  
Audio CD and MP3/WMA Discs:
2. Select a track on the "List", and then press PROG./MEMO. or select "►➔ (Add)" icon and then press **SELECT/ENTER** to place the selected track on the "Program" list. Repeat to place additional tracks on the list.

**Note:** You can add all tracks in the disc. Select "►➔ (Add All)" icon then press **SELECT/ENTER**.

3. Select the track you want to start playing on the "Program" list. Press MENU to move to the next page.
4. Press PLAY or **SELECT/ENTER** to start. Playback begins in the order in which you programmed the tracks. Playback stops after all of the tracks on the "Program" list have played once.
5. To resume normal playback from programmed playback, select a track of AUDIO CD (or MP3/WMA) list and then press PLAY.

#### Repeat Programmed Tracks

1. Press REPEAT when playing a disc. The repeat icon appears.
2. Press REPEAT to select a desired repeat mode.
  - TRACK: repeats the current track
  - ALL: repeats all the tracks on programmed list.
  - Off(No display): does not play repeatedly.

#### Erasing a Track from "Program" List

1. Use ▲ ▼ to select the track that you wish to erase from the Program list.
2. Press **CLEAR**. Alternatively, select "⌫ (Delete)" icon then press **SELECT/ENTER** to place the selected track on the Program list. Repeat to erase additional tracks on the list.


#### Erasing the Complete Program List

Use ▲ / ▼ to select "⌫ (Del all)" and then press **SELECT/ENTER**.


**Note:** The programs are also cleared when the disc is removed

## Viewing a JPEG file


This unit can play discs with JPEG files. Before playing JPEG recordings, read the notes on JPEG Recordings on the page 16.

1. Insert a disc and close the tray.  
The PHOTO menu appears on the TV screen.
2. Press ▲ / ▼ to select a folder, and then press **SELECT/ENTER**. A list of files in the folder appears. If you are in a file list and want to return to the previous Folder list, use the ▲ / ▼ buttons on the Remote to highlight  and press **SELECT/ENTER**.
3. If you want to view a particular file, press ▲ / ▼ to highlight a file and press **SELECT/ENTER** or **PLAY**. While viewing a file, you can press **STOP**(■) to move to the previous menu (JPEG menu).

### Tip

- There are four Slide Speed options  : > (Slow), >> (Normal), >>> (Fast) and II (off). Use ▲ / ▼ / ◀ / ▶ to highlight the Speed. Then, use ◀ / ▶ to select the option you want to use and then press **SELECT/ENTER**.
- If you set Speed option to Off, the slide is not active.

### Slide Show

Use ▲ ▼ ◀ ▶ to highlight the  (Slide Show) then press **SELECT/ENTER**.

### Still Picture

1. Press **PAUSE/STEP** during the slide show. The Unit will now go into the PAUSE mode.
2. To return to the slide show, press **PLAY** or press **PAUSE/STEP** again.

### Moving to another File

Press **SKIP** (◀◀ or ▶▶) once during viewing a picture to advance to the next or previous file.

### Rotating the picture

Press ▲ / ▼ / ◀ / ▶ during showing a picture to rotate the picture clockwise or counter-clockwise.

## Zoom


Each time ZOOM is pressed the setting changes in the following order.

Zoom on ↔ Zoom off

Press ▲, ▶ or ▶▶ to enlarge the video image.  
Press ▼, ◀ or ◀◀ to reduce the video image.

## Playing a DivX Movie file

Using this DVD/CD unit you can play DivX disc.

1. Insert a disc and close the tray. The MOVIE menu appears on the TV screen.
2. Press ▲ / ▼ to select a folder and then press **SELECT/ENTER**. A list of files in the folder appears. If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight  and press **SELECT/ENTER**.
3. If you want to view a particular file, press ▲ / ▼ to highlight a file and press **SELECT/ENTER** or **PLAY**.
4. Press **STOP**(■) to exit.

### Tip

- Press **MENU** to move to the next page.
- On a CD with MP3/WMA, JPEG and MOVIE file, you can switch **MUSIC**, **PHOTO** and **MOVIE** menu. Press **TITLE** and **MUSIC**, **PHOTO** and **MOVIE** word on top of the menu is highlighted.

### Note :

- Be sure to select "SUBTITLE ON" mode by pressing the subtitle file every time before playing a DivX file .
- When the subtitle has more than two languages in the file, original subtitle is only available.
- You can not adjust sound mode while the DivX file playing.
- The DivX subtitle file name has to be identified with the DivX file name to display by this unit.

### Notice for displaying the Divx subtitle

If the subtitle does not display properly during playback, press and hold **SUBTITLE** for about 3 seconds then press **SUBTITLE** to select another language code until the subtitle is displayed properly .

## Timer function

### Setting the Clock

1. Press **CLOCK**.
2. Select a 24 hour cycle or 12 hour cycle by pressing ◀◀ ▶▶ on the front panel.
3. Press **SET**(■) to confirm the selected hour cycle.
4. Use ◀◀ ▶▶ on the front panel to set the correct hours then press **SET**(■).
5. Use ◀◀ ▶▶ on the front panel to set the correct minutes press **SET**(■).
6. Press **CLOCK** at any time to display the time for about 5 seconds.

**Note :** If you want to reset the clock , press and hold **CLOCK** for more than 2 seconds.

## Timer Function

With the **TIMER** function you can turn CD, USB play and radio reception on or off at a desired time.

1. Press **CLOCK** to check the current time.  
(If you don't set clock, the timer function doesn't work.)
2. Press **TIMER** to enter the timer setting mode. If you want to correct the previously memorized **TIMER** setting, press and hold **TIMER** for more than 2 seconds. (If you want to check the previous memorized **TIMER** setting, press **TIMER** button briefly.)
  - The previous memorized time and "⊙" indicator appear on display window.
3. Each function (TUNER → DVD → USB ) flashes on display window in turn. Press **SET** when the desired function is flashing.
4. a. When you select the **TUNER** function, select the previously memorized preset number by pressing **I◀▶I** on the front panel and then, press **SET**.  
b. When you select the **DVD, USB** function,
  - 'ON TIME' appears for about 0.5 seconds on display window and then disappears.
5. Set the hour to switch on pressing **I◀▶I** on the front panel and press **SET**.
6. Set the minute to switch on pressing **I◀▶I** on the front panel and press **SET**.
  - 'OFF TIME' appears for about 0.5 seconds on display window and then disappears.

7. Refer to the steps 5 - 6 and set the hour/ minute to switch off.
8. Adjust the volume level by pressing **I◀▶I** on the front panel and press **SET**.
9. Switch the system off.  
The selected function is automatically switched on or off at the time set.

### To cancel or check the timer

Each time the **TIMER** button is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the **TIMER** button repeatedly so that "⊙" appears in the display window.

To cancel the **TIMER**, press the **TIMER** button repeatedly so that "⊙" disappears from the display window.

### Note:

- If you insert the DVD,VCD or DivX except audio CD/MP3/WMA on the unit, the timer function will be operated to the **TUNER**.
- This is not supported in the multi card reader.

## TUNER

### Presetting radio stations

You can preset 50 stations for FM and AM (optional) (MW). Before tuning, make sure that you have turned down the volume.

1. Press **TUNER/BAND** to select the frequency (AM or FM) you want.
2. Select a station you want by pressing **TUN. +/- (◀▶)**.  
**Tuning in automatically**
  - Press **TUN. +/- (◀▶)** for more than 0.5 second. Scanning stops when the unit tunes in a stations.**Tuning in manually**
  - Press **TUN. +/- (◀▶)** briefly and repeatedly.
3. Press **PROG./MEMO.**  
A preset number will flash in the display window.
4. Press **PRESET +/- (▲▼)** to select the preset number you want.
5. Press **PROG./ MEMO.** again. The station is stored.

6. Repeat the steps 1 (or 2) to 5 to store other stations.

### To delete all the memorized stations

Press and hold **PROG./ MEMO.** for about two seconds "CLEAR" appears in the display window and then **PROG./ MEMO.** again, the stations are deleted.

### For your reference

If all stations have already been entered, "FULL" message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 4-5.

### To recall presets

Press and hold **PRESET +/- (▲▼)** until the desired preset number appears or press it repeatedly

## Listening to the Radio

1. Press **TUNER/BAND** to select the frequency (AM (optional) or FM) you want.  
The last received station is tuned in.
2. Press **PRESET-/+** (▲/▼) repeatedly to select the preset station you want.  
- Each time you press the button, the unit tunes in one preset station at a time.
3. Adjust the volume by pressing **VOLUME (-/+)** repeatedly.

## To turn off the radio

Press (⏻) **POWER** to turn the unit off or select another function mode (DVD/CD, USB, PORTABLE, AM(optional)/FM).

## RDS Operation -Optional

This unit is equipped with RDS (Radio Data System), which brings a wide range of information to FM radio. RDS, now being used in many countries, is a system for transmitting station call signs or network information, a description of station programme type text message about the station or specifics of musical selection and the correct time.

### RDS TUNING

When a FM station is tuned in and it contains RDS data, the unit will automatically display the station's call sign and the RDS indicator will light in the Display Window as well as indicators for the RDS services programme (PS), programme type recognition (PTY), Radio text (RT) and Clock Time (CT) if transmitted by the station.

### RDS DISPLAY OPTIONS

The RDS system is capable of transmitting a wide variety of information in addition to the initial call sign that appears when a station is first tuned. In normal RDS operation the display will indicate the station name, broadcast network or call letters. Pressing **RDS** on the remote control enables you to cycle through the various data types in the sequence:

**(PS → FREQUENCY → PTY → RT → CT)**

- **PS (Programme Service name)**- The name of the channel is shown in the Display Window.
- **PTY (Programme type recognition)**- The name of the programme type is shown in the Display Window.
- **RT (Radio text)**- A "text" message contains special information from the broadcast station. Note that this message may scroll across the display to permit message.
- **CT (Time controlled by the channel)**- Enables the unit to receive the actual time and show it in the Display Window.

### Note :

Some RDS stations may not choose to include some of these additional features. If the data required for the selected mode is not being transmitted, the Display Window will show a **PTY NONE, RT NONE, CT NONE, or PS NONE** message.

## Programme Search (PTY)

A major benefit of RDS is its ability to encode broadcasts with Programme Type (PTY) codes that indicate the type of material being broadcast. The following list shows the abbreviations used to indicate each PTY along with an explanation of the PTY.

|          |                                 |
|----------|---------------------------------|
| NEWS     | News                            |
| AFFAIRS  | Current Affairs                 |
| INFO     | Information                     |
| SPORT    | Sports                          |
| EDUCATE  | Educational                     |
| DRAMA    | Drama                           |
| CULTURE  | Culture                         |
| SCIENCE  | Science                         |
| VARIED   | Varied Speech Programme         |
| POP M    | Popular Music                   |
| ROCK M   | Rock Music                      |
| EASY M   | Easy Listening Music            |
| LIGHT M  | Light Music                     |
| CLASSICS | Classical Music                 |
| OTHER M  | Other Music                     |
| WEATHER  | Weather Information             |
| FINANCE  | Financial Programmes            |
| CHILDREN | Children's Programmes           |
| SOCIAL   | Social Affairs Programmes       |
| RELIGION | Religious Broadcasts            |
| PHONE IN | Phone-In Programmes             |
| TRAVEL   | Travel and Touring              |
| LEISURE  | Leisure and Hobby               |
| JAZZ     | Jazz Music                      |
| COUNTRY  | Country Music                   |
| NATION M | National Music                  |
| OLDIES   | Oldies Music                    |
| FOLK M   | Folk Music                      |
| DOCUMENT | Documentary Programmes          |
| TEST     | Station Alarm Test Message      |
| ALARM !  | Emergency Broadcast Information |

You may search for a specific Programme Type (PTY) by following these steps:

1. Press **TUNER/ BAND** to select the FM mode.
2. Press **PTY** on the remote control, the display will show the last PTY in use.
3. Press **PTY** repeatedly to select a desired PTY.
4. When the PTY is selected, press **TUN.(-/+)**.The unit will go into an automatic search mode.When a station is tuned, the search will stop.

## Reference

### Language Codes

Use this list to input your desired language for the following initial settings:  
Disc Audio, Disc Subtitle, Disc Menu.

| Language        | Code | Language         | Code | Language       | Code | Language   | Code |
|-----------------|------|------------------|------|----------------|------|------------|------|
| Abkhazian       | 6566 | Fiji             | 7074 | Lingala        | 7678 | Singhalese | 8373 |
| Afar            | 6565 | Finnish          | 7073 | Lithuanian     | 7684 | Slovak     | 8375 |
| Afrikaans       | 6570 | French           | 7082 | Macedonian     | 7775 | Slovenian  | 8376 |
| Albanian        | 8381 | Frisian          | 7089 | Malagasy       | 7771 | Somali     | 8379 |
| Ameharic        | 6577 | Galician         | 7176 | Malay          | 7783 | Spanish    | 6983 |
| Arabic          | 6582 | Georgian         | 7565 | Malayalam      | 7776 | Sudanese   | 8385 |
| Armenian        | 7289 | German           | 6869 | Maltese        | 7784 | Swahili    | 8387 |
| Assamese        | 6583 | Greek            | 6976 | Maori          | 7773 | Swedish    | 8386 |
| Aymara          | 6588 | Greenlandic      | 7576 | Marathi        | 7782 | Tagalog    | 8476 |
| Azerbaijani     | 6590 | Guarani          | 7178 | Moldavian      | 7779 | Tajik      | 8471 |
| Bashkir         | 6665 | Gujarati         | 7185 | Mongolian      | 7778 | Tamil      | 8465 |
| Basque          | 6985 | Hausa            | 7265 | Nauru          | 7865 | Tatar      | 8484 |
| Bengali; Bangla | 6678 | Hebrew           | 7387 | Nepali         | 7869 | Telugu     | 8469 |
| Bhutani         | 6890 | Hindi            | 7273 | Norwegian      | 7879 | Thai       | 8472 |
| Bihari          | 6672 | Hungarian        | 7285 | Oriya          | 7982 | Tibetan    | 6679 |
| Breton          | 6682 | Icelandic        | 7383 | Panjabi        | 8065 | Tigrinya   | 8473 |
| Bulgarian       | 6671 | Indonesian       | 7378 | Pashto, Pushto | 8083 | Tonga      | 8479 |
| Burmese         | 7789 | Interlingua      | 7365 | Persian        | 7065 | Turkish    | 8482 |
| Byelorussian    | 6669 | Irish            | 7165 | Polish         | 8076 | Turkmen    | 8475 |
| Cambodian       | 7577 | Italian          | 7384 | Portuguese     | 8084 | Twi        | 8487 |
| Catalan         | 6765 | Japanese         | 7465 | Quechua        | 8185 | Ukrainian  | 8575 |
| Chinese         | 9072 | Javanese         | 7487 | Rhaeto-Romance | 8277 | Urdu       | 8582 |
| Corsican        | 6779 | Kannada          | 7578 | Rumanian       | 8279 | Uzbek      | 8590 |
| Croatian        | 7282 | Kashmiri         | 7583 | Russian        | 8285 | Vietnamese | 8673 |
| Czech           | 6783 | Kazakh           | 7575 | Samoan         | 8377 | Volapük    | 8679 |
| Danish          | 6865 | Kirghiz          | 7589 | Sanskrit       | 8365 | Welsh      | 6789 |
| Dutch           | 7876 | Korean           | 7579 | Scots Gaelic   | 7168 | Wolof      | 8779 |
| English         | 6978 | Kurdish          | 7585 | Serbian        | 8382 | Xhosa      | 8872 |
| Esperanto       | 6979 | Laothian         | 7679 | Serbo-Croatian | 8372 | Yiddish    | 7473 |
| Estonian        | 6984 | Latin            | 7665 | Shona          | 8378 | Yoruba     | 8979 |
| Faroese         | 7079 | Latvian, Lettish | 7686 | Sindhi         | 8368 | Zulu       | 9085 |

### Area Codes

Choose a area code from this list.

| Area           | Code | Area                       | Code | Area                 | Code | Area            | Code |
|----------------|------|----------------------------|------|----------------------|------|-----------------|------|
| Afghanistan    | AF   | Ethiopia                   | ET   | Malaysia             | MY   | Saudi Arabia    | SA   |
| Argentina      | AR   | Fiji                       | FJ   | Maldives             | MV   | Senegal         | SN   |
| Australia      | AU   | Finland                    | FI   | Mexico               | MX   | Singapore       | SG   |
| Austria        | AT   | France                     | FR   | Monaco               | MC   | Slovak Republic | SK   |
| Belgium        | BE   | Germany                    | DE   | Mongolia             | MN   | Slovenia        | SI   |
| Bhutan         | BT   | Great Britain              | GB   | Morocco              | MA   | South Africa    | ZA   |
| Bolivia        | BO   | Greece                     | GR   | Nepal                | NP   | South Korea     | KR   |
| Brazil         | BR   | Greenland                  | GL   | Netherlands          | NL   | Spain           | ES   |
| Cambodia       | KH   | Heard and McDonald Islands | HM   | Netherlands Antilles | AN   | Sri Lanka       | LK   |
| Canada         | CA   | Hong Kong                  | HK   | New Zealand          | NZ   | Sweden          | SE   |
| Chile          | CL   | Hungary                    | HU   | Nigeria              | NG   | Switzerland     | CH   |
| China          | CN   | India                      | IN   | Norway               | NO   | Taiwan          | TW   |
| Colombia       | CO   | Indonesia                  | ID   | Oman                 | OM   | Thailand        | TH   |
| Congo          | CG   | Israel                     | IL   | Pakistan             | PK   | Turkey          | TR   |
| Costa Rica     | CR   | Italy                      | IT   | Panama               | PA   | Uganda          | UG   |
| Croatia        | HR   | Jamaica                    | JM   | Paraguay             | PY   | Ukraine         | UA   |
| Czech Republic | CZ   | Japan                      | JP   | Philippines          | PH   | United States   | US   |
| Denmark        | DK   | Kenya                      | KE   | Poland               | PL   | Uruguay         | UY   |
| Ecuador        | EC   | Kuwait                     | KW   | Portugal             | PT   | Uzbekistan      | UZ   |
| Egypt          | EG   | Libya                      | LY   | Romania              | RO   | Vietnam         | VN   |
| El Salvador    | SV   | Luxembourg                 | LU   | Russian Federation   | RU   | Zimbabwe        | ZW   |

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

| Symptom  | Cause  | Correction   |
|--|--|--|
| No power.  | <ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>  | <ul style="list-style-type: none"> <li>Plug the power cord into the wall outlet securely.</li> </ul>   |
| The power is on, but the unit does not work.               | <ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>   | <ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD or, audio CD indicator in the DVD display is lit.)</li> </ul>                    |
| No picture.  | <ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>  | <ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>   | <ul style="list-style-type: none"> <li>Connect the video cable into the jacks securely.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>  | <ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>  |
| There is no sound or only a very low-level sound is heard. | <ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul>                        | <ul style="list-style-type: none"> <li>Select the correct input mode of the audio so you can listen to the sound from the unit.</li> </ul>                 |
|  | <ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>   | <ul style="list-style-type: none"> <li>Connect the audio cable into the jacks securely.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>                                     | <ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The audio connecting cord is damaged.</li> </ul>  | <ul style="list-style-type: none"> <li>Replace it with new one.</li> </ul>   |
| The playback picture is poor.                              | <ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>   | <ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>  |
| The unit does not start playback.                          | <ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>   | <ul style="list-style-type: none"> <li>Insert a disc. (Check that the DVD, or audio CD indicator in the DVD display is lit.)</li> </ul>                    |
|  | <ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>  | <ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system and Regional code.)</li> </ul>                           |
|  | <ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>  | <ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>   | <ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>   | <ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>A menu is on the TV screen.</li> </ul>  | <ul style="list-style-type: none"> <li>Press the SETUP button to turn off the menu screen.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>   | <ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>   |
| Severe hum or noise is heard.                              | <ul style="list-style-type: none"> <li>The plugs and jacks are dirty.</li> </ul>   | <ul style="list-style-type: none"> <li>Wipe them with a cloth slightly moistened with alcohol.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>   | <ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The speakers and components are connected poorly.</li> </ul>  | <ul style="list-style-type: none"> <li>Connect the speakers and components securely.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>The unit is located with too close to the TV.</li> </ul>  | <ul style="list-style-type: none"> <li>Move your TV away from the audio components.</li> </ul>   |
| Radio stations cannot be tuned in.                         | <ul style="list-style-type: none"> <li>The antenna is positioned or connected poorly.</li> </ul>   | <ul style="list-style-type: none"> <li>Connect the antenna securely.</li> <li>Adjust the antennas and connect an external antenna if necessary.</li> </ul> |
|  | <ul style="list-style-type: none"> <li>The signal strength of the stations is too weak (when tuning in with automatic tuning).</li> </ul>                      | <ul style="list-style-type: none"> <li>Tune in the station manually.</li> </ul>  |
|  | <ul style="list-style-type: none"> <li>No stations have been preset or preset stations have been cleared (when tuning by scanning preset stations).</li> </ul> | <ul style="list-style-type: none"> <li>Preset the stations.</li> </ul>   |
| The remote control does not work properly.                 | <ul style="list-style-type: none"> <li>The remote control is not pointed at the remote sensor of the unit.</li> </ul>  | <ul style="list-style-type: none"> <li>Point the remote control at the remote sensor of the unit.</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>The remote control is too far from the unit.</li> </ul>   | <ul style="list-style-type: none"> <li>Operate the remote control within about 23 ft (7 m).</li> </ul>   |
|  | <ul style="list-style-type: none"> <li>There is an obstacle in the path of the remote control and the unit.</li> </ul>   | <ul style="list-style-type: none"> <li>Remove the obstacle.</li> </ul>   |

**MP3 / WMA disc compatibility with this player is limited as follows:**

- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)
- File extensions: ".mp3" / ".wma"
- CD-ROM file format: ISO9660
- We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.
- The total number of characters for file name: maximum 8 characters (excluding file extensions like mp3/wma)
- They should not contain special letters such as / ? \* : " < > | etc.
- The total number of files on the disc should be less than 999.

**Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.**

**JPEG disc compatibility with this player is limited as follows:**

- Image file size: less than 2M pixels (2760 x 2048 pixels) recommended (It may take longer to display a larger than 2M pixel size files)
- Maximum files : Under 999.

- Some discs may not operate due to a different recording format or the condition of disc.

- File extensions: ".jpg"

**DivX disc compatibility with this player is limited as follows:**

- Available resolution: within 800x600 (W x H) pixels
- The file name of the DivX subtitle is available by 45 characters.
- If there is impossible code to express in the DivX file, it may be displayed as " \_ " mark on the display.
- **Frame rate : less than 30 fps**
- **If the video and audio structure of recorded files is not interleaved, either video or audio is out-putted.**
- **Playable DivX file:** ".avi ", ".mpg ", ".mpeg ", ".divx"
- **Playable Subtitle format:** SubRip(\*.srt/\*.txt), SAMI(\*.smi), SubStation Alpha(\*.ssa/\*.txt), MicroDVD(\*.sub/\*.txt), SubViewer 2.0(\*.sub/\*.txt), VobSub(\*.sub)
- **Playable Codec format:** DIVX3.xx ", "DIVX4.xx ", "DIVX5.xx ", "MP43 ", "3IVX "
- **Playable Audio format:** "AC3 ", "PCM ", "MP3 ", "WMA "
- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)

## Specifications

### General

|                                 |                          |
|---------------------------------|--------------------------|
| Power supply                    | Refer to the main label. |
| Power consumption               | Refer to the main label. |
| Net Weight                      | 1.5 kg                   |
| External dimensions (W x H x D) | 150 X 150 X 205 mm       |

### Tuner/Amplifier

|                       |                                 |   |
|-----------------------|---------------------------------|---|
| FM                    | Tuning Range                    | 87.5 - 108.0 MHz or 65 -74 MHz, 87.5 -108.0 MHz |
|                       | Intermediate Frequency          | 10.7 MHz  |
|                       | Signal to Noise Ratio           | 60/55 dB (Mono/Stereo)                          |
|                       | Frequency Response              | 140 - 10000 Hz                                  |
| AM (optional)         | Tuning Range                    | 522 - 1620 kHz or 520 - 1720 kHz                |
|                       | Intermediate Frequency          | 450 kHz   |
|                       | Signal to Noise Ratio           | 30 dB   |
|                       | Frequency Response              | 140 - 1800 Hz                                   |
| Output Power          | Front: 5 W + 5 W (6Ω, THD 10 %) |   |
| Frequency Response    | 30 - 20000 Hz                   |   |
| Signal-to-noise ratio | 75 dB                           |   |

### Speakers

|                            |                          |
|----------------------------|--------------------------|
| Speaker Name(L/R)          | XBS12V                   |
| Type                       | Bass Reflex1Way 1Speaker |
| Impedance                  | 6 Ω                      |
| Net Dimensions (W x H x D) | 150 X 150 X 150 mm       |
| Net Weight                 | 1.05 kg                  |

**Designs and specifications are subject to change without notice for improvement.**