



PLASMA TV OWNER'S MANUAL

PLASMA TV MODELS

42PT8*

50PT8*

Please read this manual carefully before operating your set.


Retain it for future reference.

Record model number and serial number of the set.


See the label attached on the back cover and quote this information to your dealer when you require service.

ACCESSORIES

Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the product.

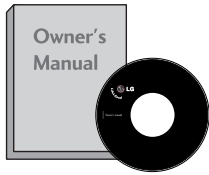


Owner's Manual

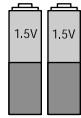 

Batteries



Power Cord

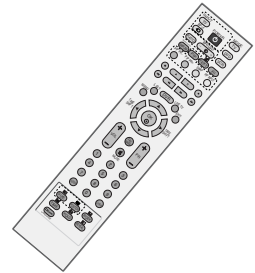

Remote Control

This feature is not available for all models.



2-Wall brackets



2-eye-bolts



Polishing Cloth
Polish the screen with the cloth

**Slightly wipe stained spot on the exterior only with the cleansing cloths for the product exterior if there is stain or fingerprint on surface of the exterior.*

.....
Do not wipe roughly when removing stain. Please be cautious of that excessive power may cause scratch or discoloration.

CONTENTS

ACCESSORIES	1
-------------------	---


PREPARATION

Home Menu	4
Front Panel Controls	5
Back Panel Information	6
Attaching the TV to a Wall	7
Back Cover for Wire Arrangement	8
Desktop Pedestal Installation	9
Wall Mount: Horizontal installation	9
Antenna Connection.....	10

EXTERNAL EQUIPMENT SETUP

HD Receiver Setup.....	11
DVD Setup.....	14
VCR Setup	17
Other A/V Source Setup	20
External Stereo Setup.....	21
USB in Setup	22
PC Setup.....	23
- Screen Setup for PC Mode.....	26

WATCHING TV / PROGRAMME CONTROL

Remote Control Key Functions.....	30
Turning on the TV	32
Programme Selection	32
Volume Adjustment	32
On Screen Menus Selection and Adjustment.....	33
Auto Programme Tuning.....	34
Manual Programme Tuning	35
Fine Tuning	36
Assigning a Station Name	37
Booster	38
Programme Edit	39
Favourite Programme	40
Calling the Programme Table	41
Input Source Selection.....	42
Key lock.....	43
 SIMPLINK	44

DVR (DIGITAL VIDEO RECORDER)

TimeShift Mode(Pause & Replay of Live TV).....	46
Format hard disk	49
Instant Recording	50
Manual Record	52
Schedule List.....	53
Record Quality	53
To use the USB device.....	54
Recorded TV Programme List.....	56
USB Backup	59
Photo List.....	62
Music List.....	66
Movie List	69
Subtitle	71
DivX Registration Code	72

PICTURE CONTROL

Watching PIP(Picture-in-Picture)	73
Picture Size (Aspect Ratio)Control	75
Preset Picture Settings	
- Picture Mode-Preset.....	77
- Auto Colour Tone Control(Warm/Medium/Cool)	78
Manual Picture Adjustment	
- Picture Mode-User option.....	79
- Colour Tone - User option.....	80
XD - Picture Improvement Technology	81
XD Demo	82
Advanced - Cinema	83
Advanced - Black(Darkness) Level.....	84
Picture Reset.....	85
Image Sticking Minimization(ISM) Method	86
Low-Power Picture Mode.....	87

SOUND & LANGUAGE CONTROL

Auto Volume Leveler	88
Preset Sound Settings - Sound Mode.....	89
Sound Setting Adjustment - User Mode	90
Balance	91
TV Speakers On/Off Setup	92
I/II	
- Stereo/Dual Reception.....	93
- NICAM Reception	94
- Speaker Sound Output Selection.....	94
On-Screen Menu Language /Country Selection.....	95

TIME SETTING

Clock Setup.....	96
Auto On/Off Timer Setting.....	97
Sleep Timer Setting.....	98
Auto Shut-off Setting	99

TELETEXT

Switch On/Off	100
SIMPLE Text	100
TOP Text	101
FASTEXT	101
Special Teletext Functions.....	102

APPENDIX



Troubleshooting.....	103
Maintenance	105
Product Specifications	106
Programming the Remote Control	107
IR Codes	110
External Control Device Setup	112

PREPARATION

HOME MENU


This menu is a contents guide.

In Home Menu, you enter the Recorded list of DVR, Manual Recording of the DVR, Schedule List ,Photo List, Music List, Movie List or TV Menu.

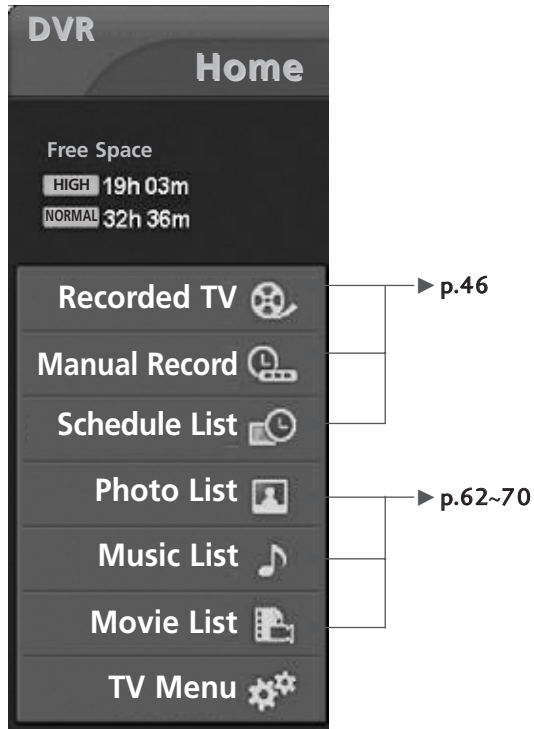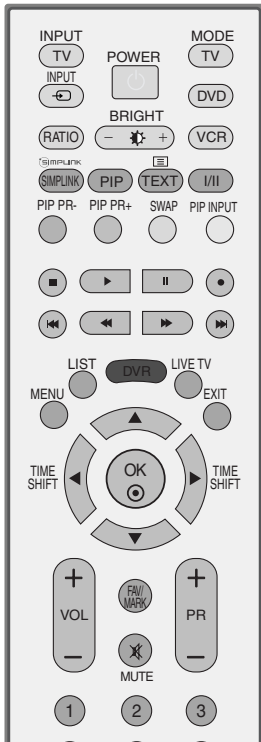

FRONT PANEL CONTROLS


- This is a simplified representation of the front panel. Here shown may be somewhat different from your TV.
- If your product has a protection film attached, remove the film and then wipe the product with a polishing cloth.

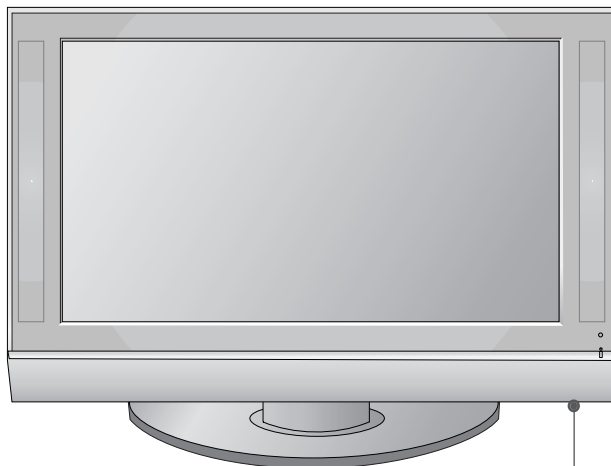

Remote Control Sensor

Power/Standby Indicator


- illuminates red in standby mode.
- illuminates green when the set is switched on.
- illuminates orange when the set is switched off during recording.

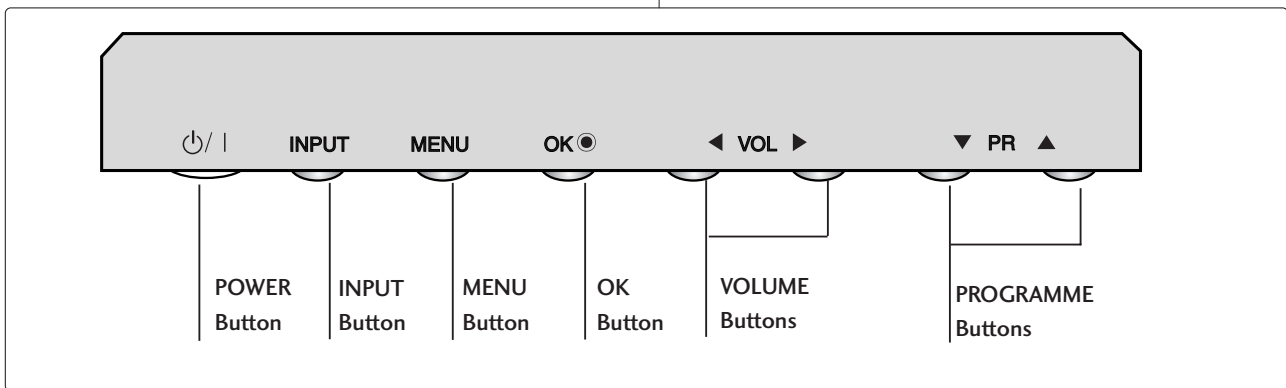

PREPARATION

BACK PANEL INFORMATION


■ This is a simplified representation of the back panel. Here shown may be somewhat different from your TV.

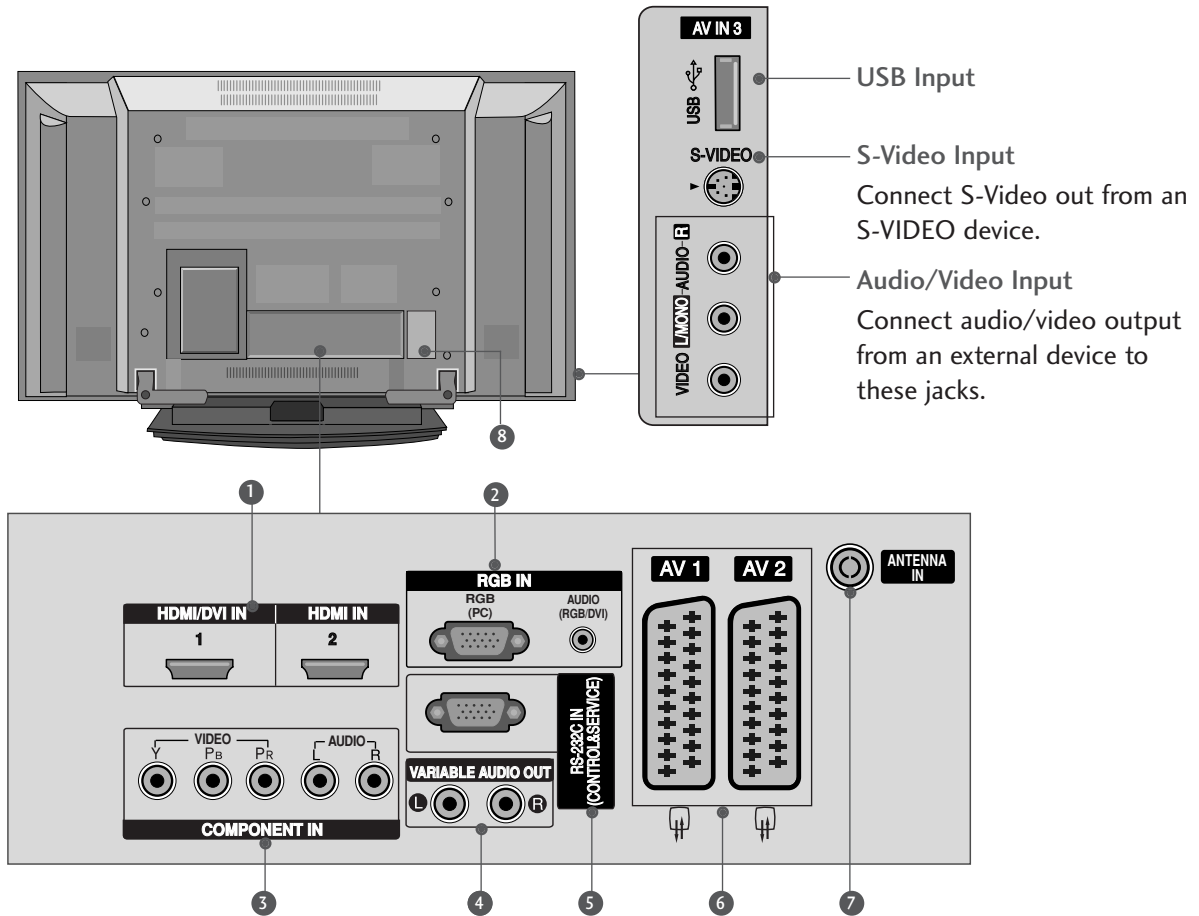

- 1 **HDMI/DVI1, HDMI2 Input**
Connect a HDMI signal to HDMI IN.
Or DVI(VIDEO)signal to HDMI/DVI port with DVI to HDMI cable.
- 2 **RGB/Audio Input**
Connect the monitor output from a PC to the appropriate input port.
- 3 **Component Input**
Connect a component video/audio device to these jacks.
- 4 **Variable Audio Output**
Connect an external amplifier or add a subwoofer to your surround sound system.
- 5 **RS-232C Input(CONTROL&SERVICE)Port**
Connect to the RS-232C port on a PC.
- 6 **Euro Scart Socket (AV1/AV2)**
Connect scart socket input or output from an external device to these jacks.
- 7 **Antenna Input**
Connect over-the-air signals to this jack.
- 8 **Power Cord Socket**
This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.


ATTACHING THE TV TO A WALL (This feature is not available for all models.)

- Set it up close to the wall so the product doesn't fall over when it is pushed backwards.
- The instructions shown below is a safer way to set up the product, which is to fix it on the wall so the product doesn't fall over when it is pulled in the forward direction. It will prevent the product from falling for-ward and hurting people. It will also prevent the product from damage caused by fall. Please make sure that children don't climb on or hang from the product.

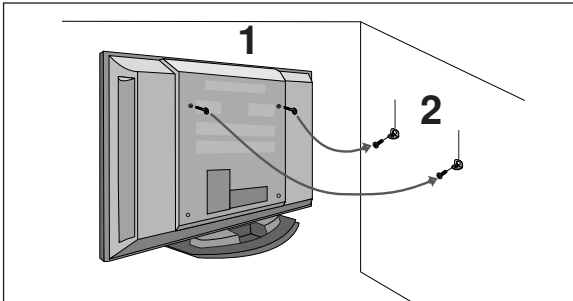

- 1 Use the eye-bolts or TV brackets/bolts to fix the product to the wall as shown in the picture. (If your product has the bolts in the eye-bolts position before inserting the eye-bolts, loosen the bolts.)
* Insert the eye-bolts or TV brackets/bolts and tighten them securely in the upper holes.

- 2 Secure the wall brackets with the bolts (not provided as parts of the product, must purchase separately) on the wall. Match the height of the bracket that is mounted on the wall.

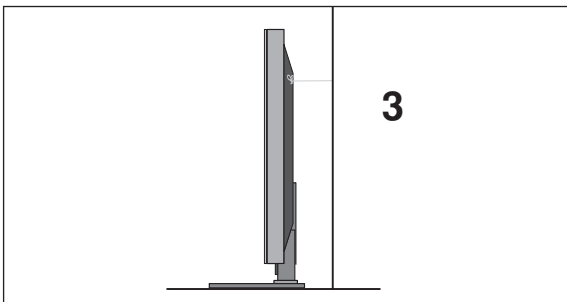

- 3 Use a sturdy rope (not provided as parts of the product, must purchase separately) to tie the product. It is safer to tie the rope so it becomes horizontal between the wall and the product.

! NOTE


- ▶ When moving the product to another place undo the ropes first.
- ▶ Use a product holder or a cabinet that is big and strong enough for the size and weight of the product.
- ▶ To use the product safely make sure that the height of the bracket that is mounted on the wall is same as that of the product.

PREPARATION


BACK COVER FOR WIRE ARRANGEMENT

PREPARATION


- 1 Hold the **CABLE MANAGEMENT** with hands and push it as shown.

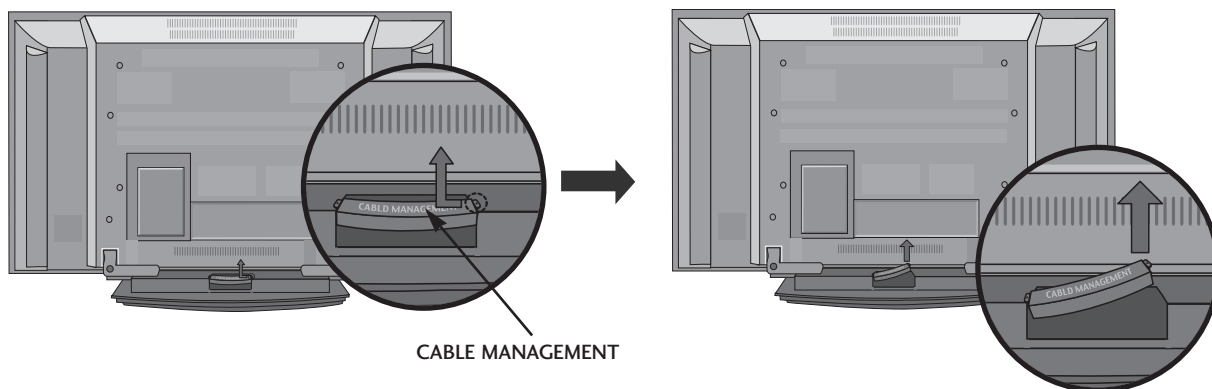

- 2 Connect the cables as necessary.
To connect an additional equipment, see the **External equipment Setup** section.

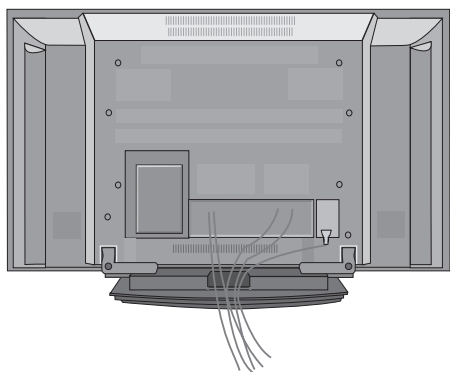

- 3 Reinstall the **CABLE MANAGEMENT** as shown.

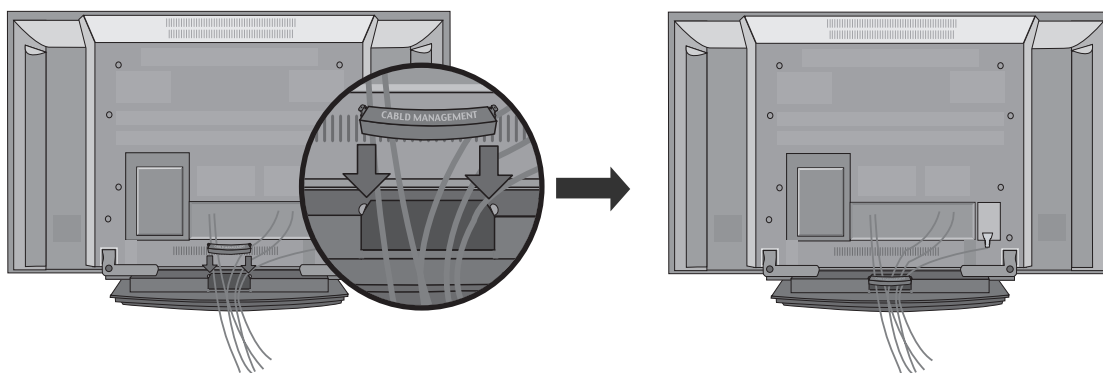


- The TV can be installed in various ways such as on a wall, or on a desktop etc.
- The TV is designed to be mounted horizontally.

GROUNDING



Ensure that you connect the earth ground wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker.

Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

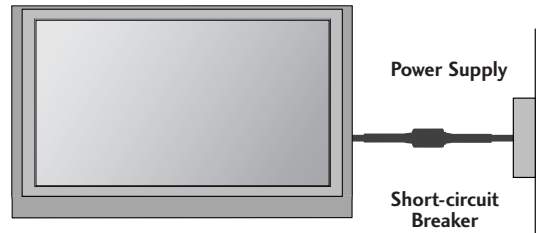



DESKTOP PEDESTAL INSTALLATION

For proper ventilation, allow a clearance of 4" on each side and from the wall.

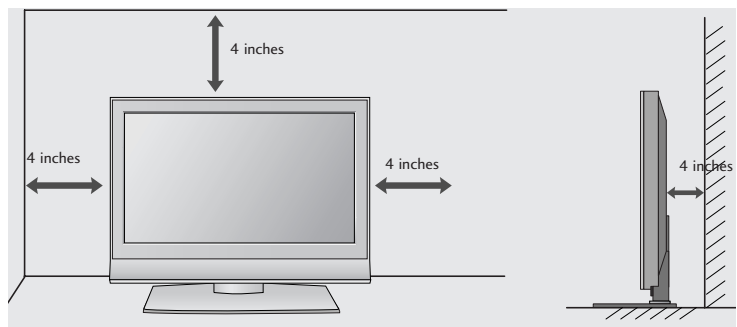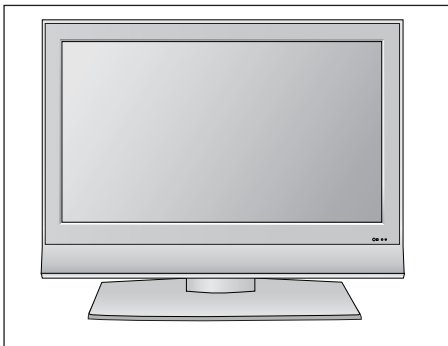

WALL MOUNT: HORIZONTAL INSTALLATION

For proper ventilation, allow a clearance of 4" on each side and from the wall. Detailed installation instructions are available from your dealer, see the optional Tilt Wall Mounting Bracket Installation and Setup Guide.

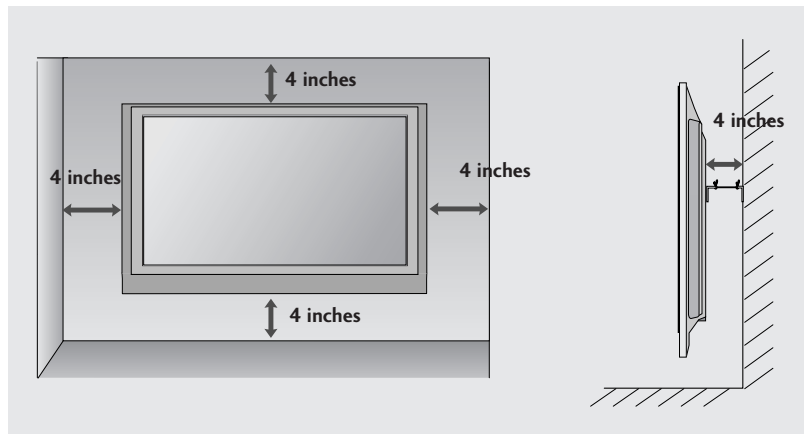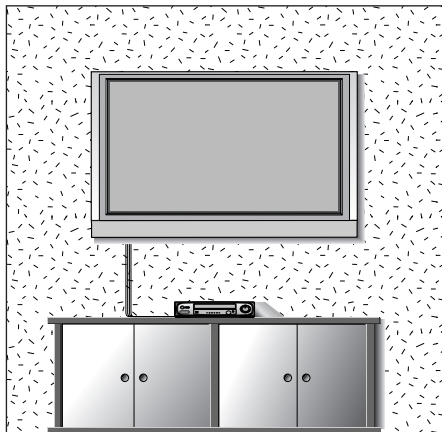


PREPARATION

- To prevent the equipment damage, never plug in any power cords until you have finished connecting all equipment.

ANTENNA CONNECTION

- For optimum picture quality, adjust antenna direction.
- An antenna cable and converter are not supplied.

PREPARATION

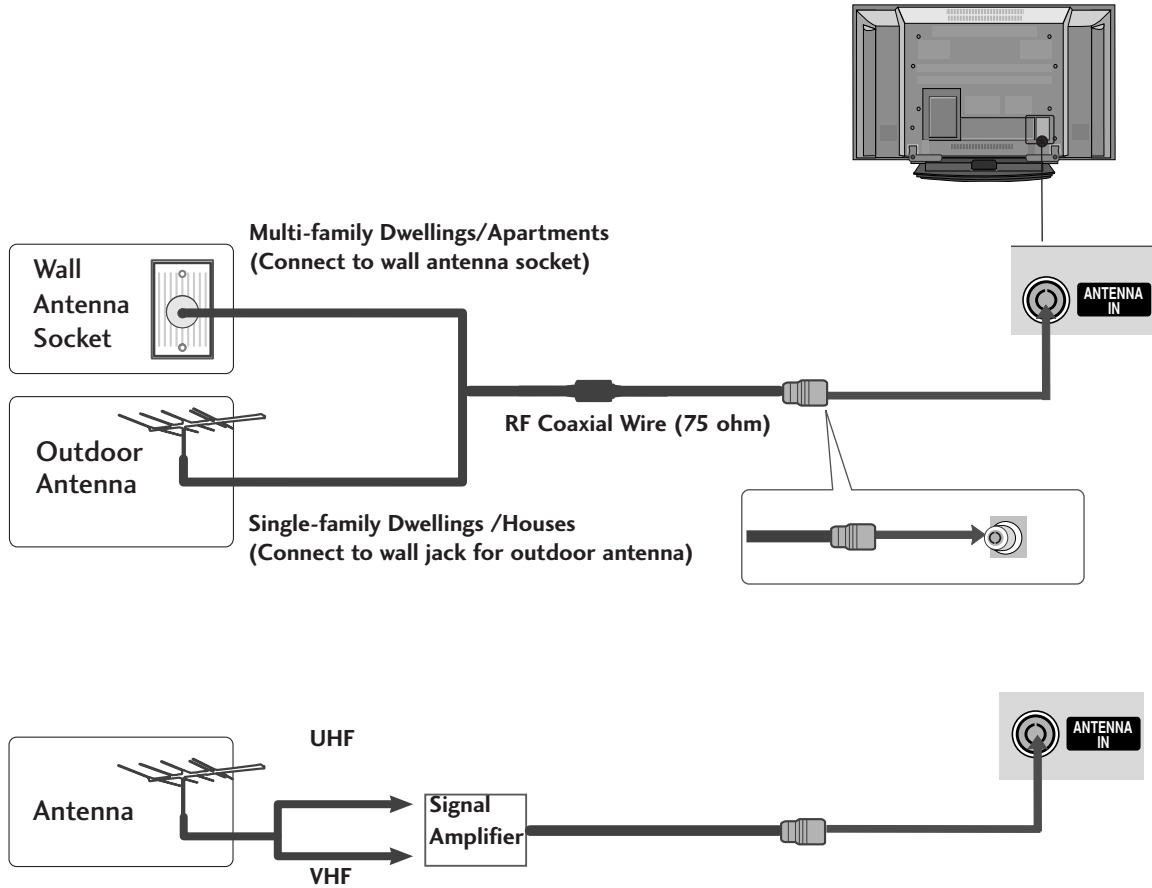

- In poor signal areas, to get better picture quality, install a signal amplifier to the antenna as shown to the right.
- If signal needs to be split for two TVs, use an antenna signal splitter for connection.


EXTERNAL EQUIPMENT SETUP

- To prevent the equipment damage, never plug in any power cords until you have finished connecting all equipment.
- Here shown may be somewhat different from your TV.

HD RECEIVER SETUP

When connecting with a component cable

- 1 Connect the video outputs (Y, PB, PR) of the digital set top box to the **COMPONENT IN VIDEO** jacks on the set.
- 2 Connect the audio output of the digital set-top box to the **COMPONENT IN AUDIO** jacks on the set.
- 3 Turn on the digital set-top box.
(Refer to the owner's manual for the digital set-top box.)
- 4 Select **Component** input source with using the **INPUT** button on the remote control.

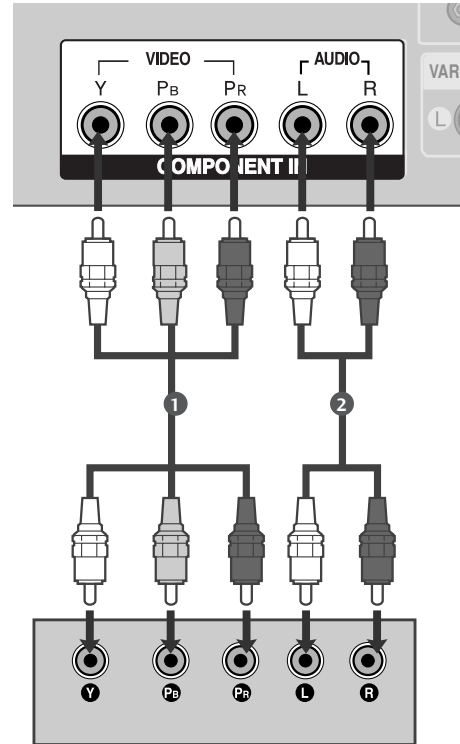


Signal	Component	HDMI1/DVI, HDMI2
480i/576i	Yes	No
480p/576p	Yes	Yes
720p/1080i	Yes	Yes
1080p(50/60Hz)	Yes	Yes


EXTERNAL EQUIPMENT SETUP

When connecting with a HDMI cable

- 1 Connect the HDMI output of the digital set-top box to the **HDMI/DVI IN 1** or **HDMI IN 2** jack on the set.
- 2 Select **HDMI1/DVI** or **HDMI2** input source with using the **INPUT** button on the remote control.
- 3 Turn on the digital set-top box.
(Refer to the owner's manual for the digital set-top box.)

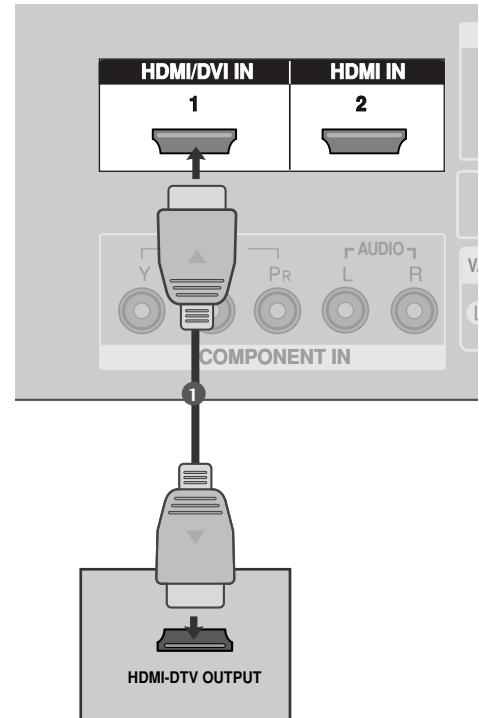

When connecting with a HDMI to DVI cable

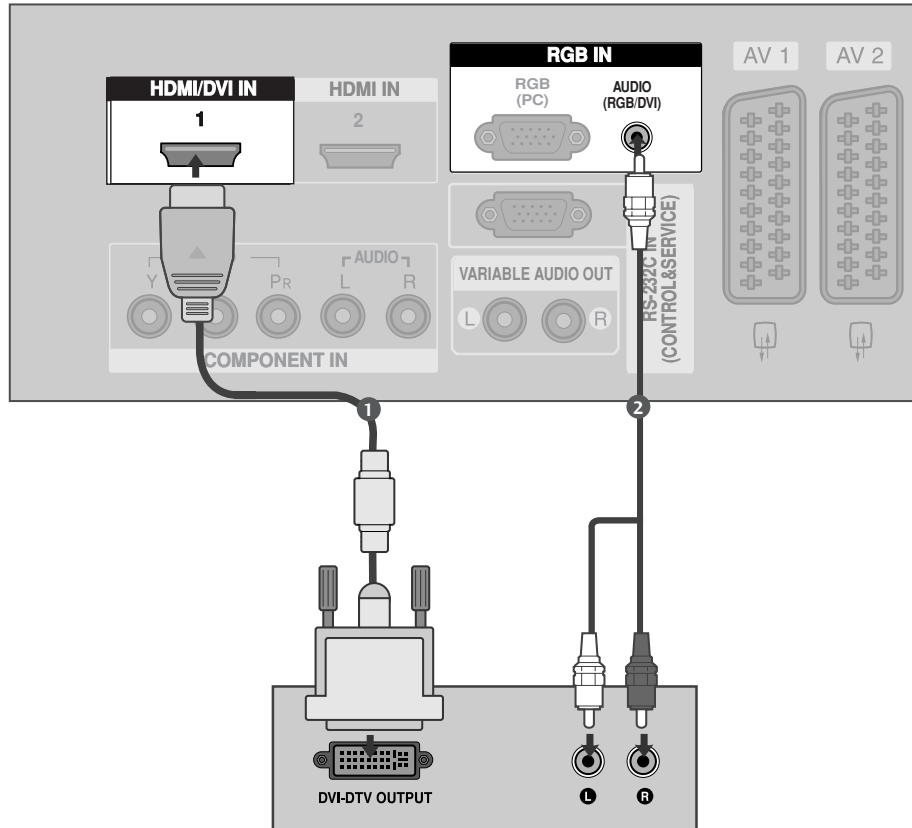

- 1 Connect the DVI output of the digital set-top box to the **HDMI/DVI IN 1** jack on the set.

- 2 Connect the audio output of the digital set-top box to the **AUDIO (RGB/DVI)** jack on the set.

- 3 Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)


- 4 Select **HDMI1/DVI** input source with using the **INPUT** button on the remote control.

EXTERNAL EQUIPMENT SETUP

DVD SETUP

When connecting with a component cable

- 1 Connect the video outputs (Y, Pb, Pr) of the DVD to the **COMPONENT IN VIDEO** jacks on the set.
- 2 Connect the audio outputs of the DVD to the **COMPONENT IN AUDIO** jacks on the set.
- 3 Turn on the DVD player, insert a DVD.
- 4 Select **Component** input source with using the **INPUT** button on the remote control.
- 5 Refer to the DVD player's manual for operating instructions.

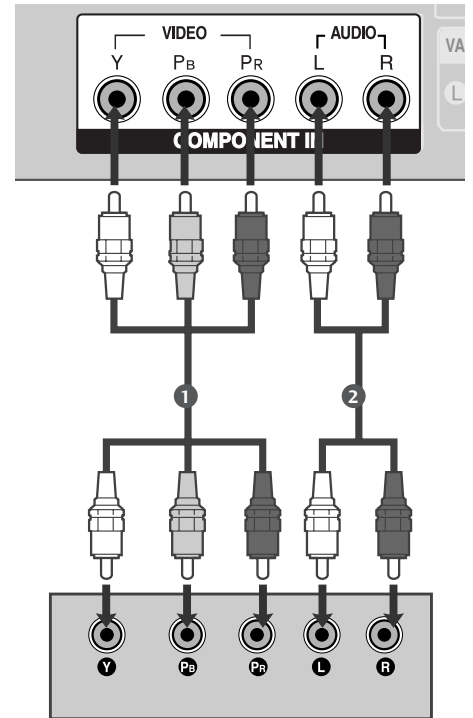


Component Input ports

To get better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the TV	Y	P _B	P _R
Video output ports on DVD player	Y	P _B	P _R
	Y	B-Y	R-Y
	Y	C _b	C _r
	Y	P _b	P _r

When connecting with a Euro Scart

- 1 Connect the Euro scart socket of the DVD to the **AV1** Euro scart socket on the set.
- 2 Turn on the DVD player, insert a DVD.
- 3 Select **AV1** input source with using the **INPUT** button on the remote control.
If connected to **AV2** Euro scart socket, select **AV2** input source.
- 4 Refer to the DVD player's manual for operating instructions.

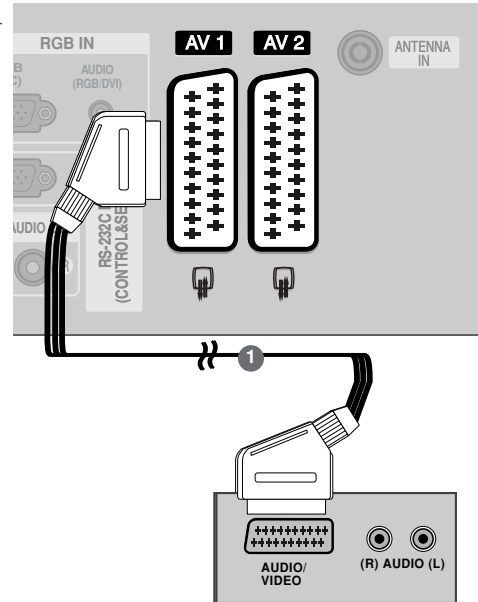


! NOTE

- ▶ Please use the shield scart cable.

When connecting with an S-Video cable

- 1 Connect the S-VIDEO output of the DVD to the **S-VIDEO** input on the set.
- 2 Connect the audio outputs of the DVD to the **AUDIO** input jacks on the set.
- 3 Turn on the DVD player, insert a DVD.
- 4 Select **AV3** input source with using the **INPUT** button on the remote control.
- 5 Refer to the DVD player's manual for operating instructions.

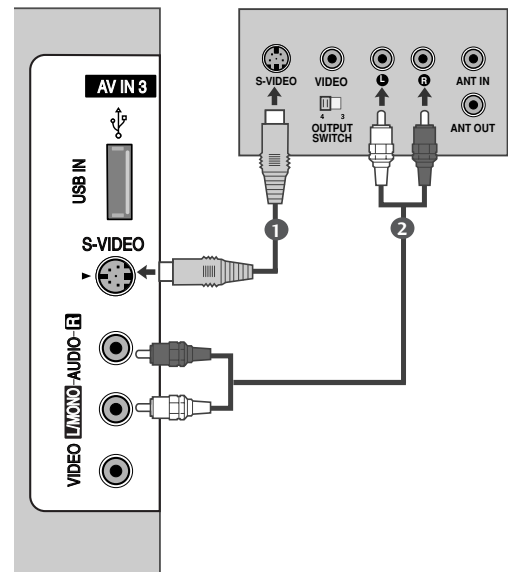


EXTERNAL EQUIPMENT SETUP

When connecting HDMI cable

- 1 Connect the HDMI output of the DVD to the **HDMI/DVI IN 1** or **HDMI IN 2** jack on the set.
- 2 Select **HDMI1/DVI** or **HDMI2** input source with using the **INPUT** button on the remote control.
- 3 Refer to the DVD player's manual for operating instructions.

! NOTE


- ▶ TV can receive the video and audio signal simultaneously with using a HDMI cable.
- ▶ If the DVD does not support Auto HDMI, you need to set the output resolution appropriately.

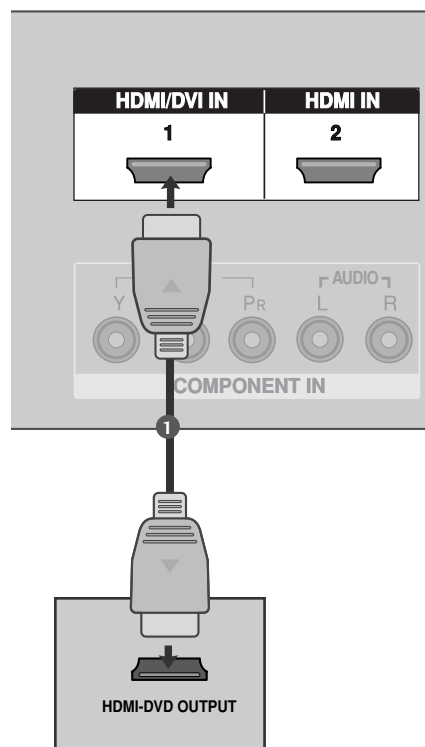

VCR SETUP

- To avoid picture noise (interference), leave an adequate distance between the VCR and TV.
- Typically a frozen still picture from a VCR. If the 4:3 picture format is used; the fixed images on the sides of the screen may remain visible on the screen.

When connecting with an antenna

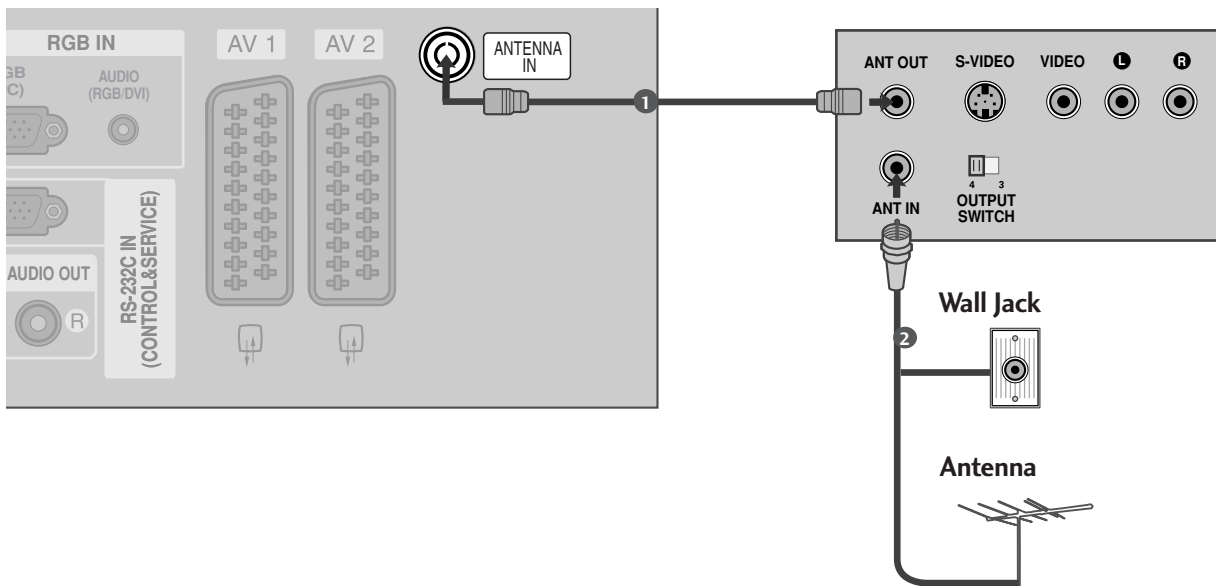


- 1 Connect the **ANT OUT** socket of the VCR to the **ANTENNA IN** socket on the set.
- 2 Connect the antenna cable to the **ANT IN** socket of the VCR.
- 3 Press the **PLAY** button on the VCR and match the appropriate programme between the TV and VCR for viewing.

EXTERNAL EQUIPMENT SETUP

When connecting with a Euro Scart

- 1 Connect the Euro scart socket of the VCR to the **AV1** Euro scart socket on the set.
- 2 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 3 Select **AV1** input source with using the **INPUT** button on the remote control.
If connected to **AV2** Euro scart socket, select **AV2** input source.

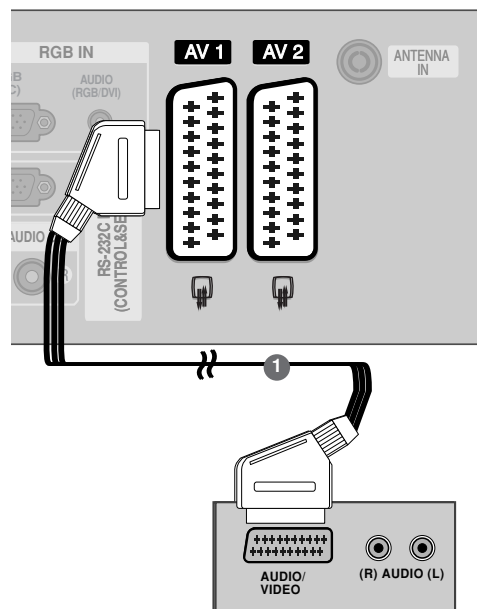

! NOTE


- ▶ If you want to use the EURO scart cable, you have to use the signal shielded Euro scart cable.

When connecting with a RCA cable

- 1 Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colours (Video = yellow, Audio Left = white, and Audio Right = red)
- 2 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 3 Select **AV3** input source using the **INPUT** button on the remote control.

! NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the set.

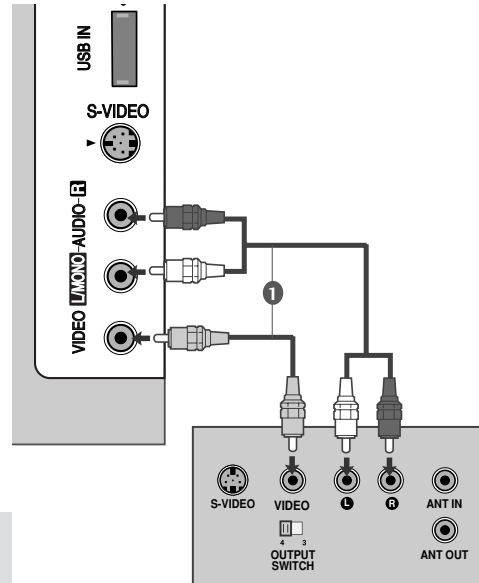


When connecting with an S-Video cable

- 1 Connect the S-VIDEO output of the VCR to the **S-VIDEO** input on the set. The picture quality is improved; compared to normal composite (RCA cable) input.
- 2 Connect the audio outputs of the VCR to the **AUDIO** input jacks on the set.
- 3 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 4 Select **AV3** input source with using the **INPUT** button on the remote control.


! NOTE

- ▶ If both S-VIDEO and VIDEO sockets have been connected to the S-VHS VCR simultaneously, only the S-VIDEO can be received.

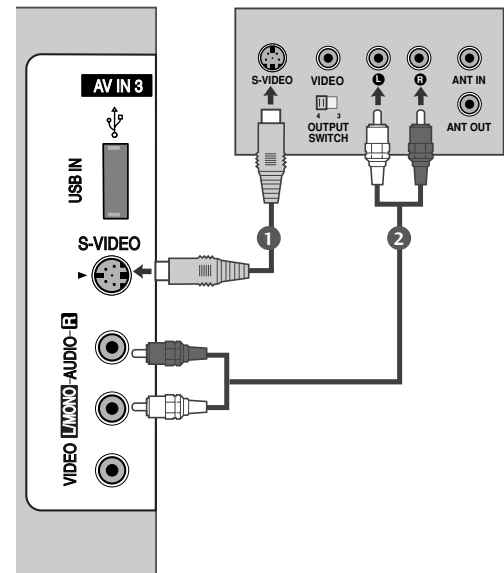

EXTERNAL EQUIPMENT SETUP

OTHER A/V SOURCE SETUP

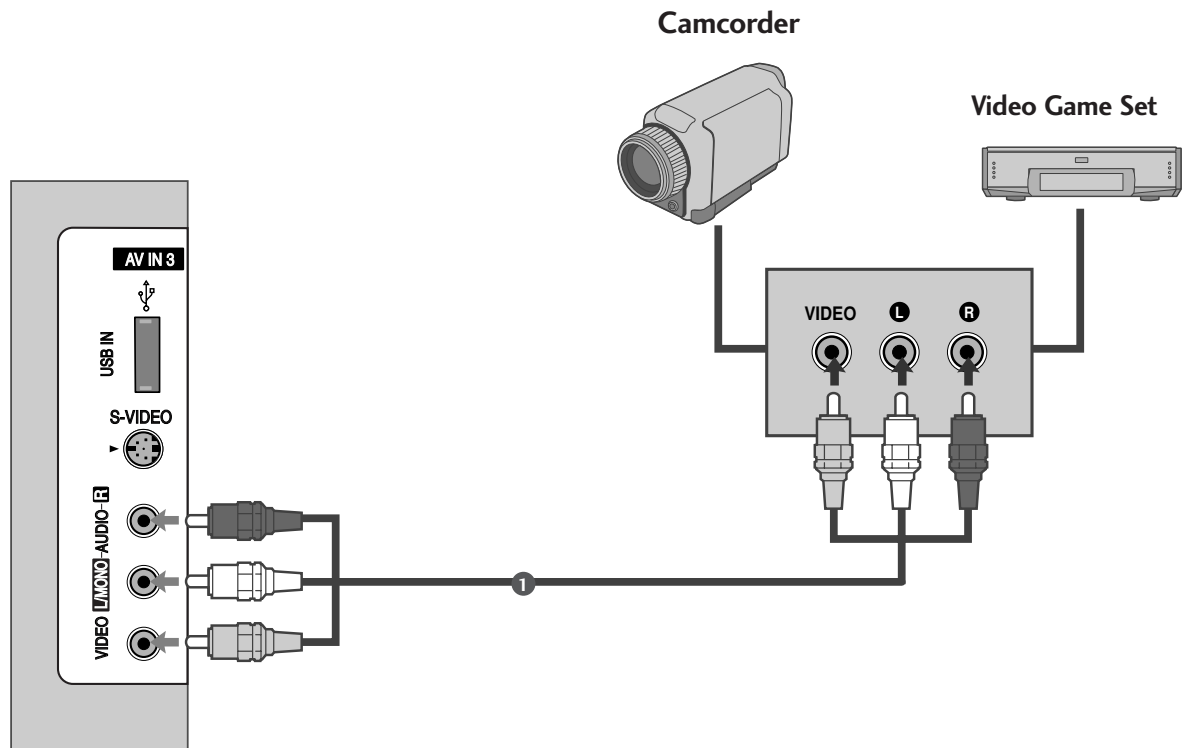

- 1 Connect the **AUDIO/VIDEO** jacks between TV and external equipment. Match the jack colours. (Video = yellow, Audio Left = white, and Audio Right = red)
- 2 Select **AV3** input source with using the **INPUT** button on the remote control.
- 3 Operate the corresponding external equipment. Refer to external equipment operating guide.


EXTERNAL STEREO SETUP

Use to connected either an external amplifier, or add a sub-woofer to your surround sound system.

- 1 Connect the input jack of the stereo amplifier to the **VARIABLE AUDIO OUT** jacks on the set.
- 2 Set up your speakers through your analog stereo amplifier, according to the instructions provided with the amplifier.


! NOTE

- ▶ When connecting with external audio equipments, such as amplifiers or speakers, please turn the TV speakers off. (▶ p.92)

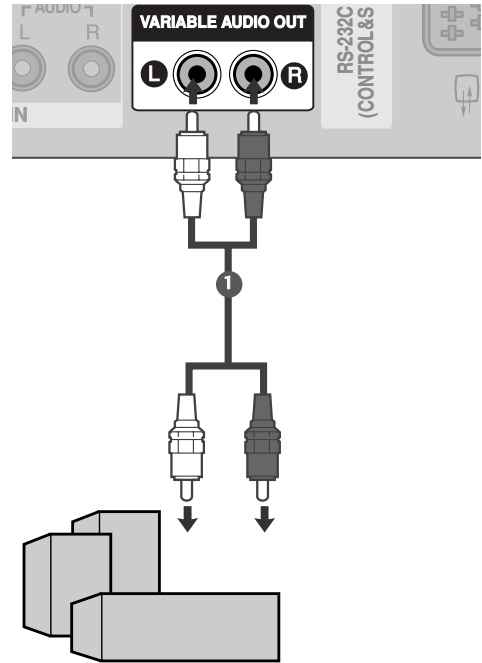

EXTERNAL EQUIPMENT SETUP

USB IN SETUP

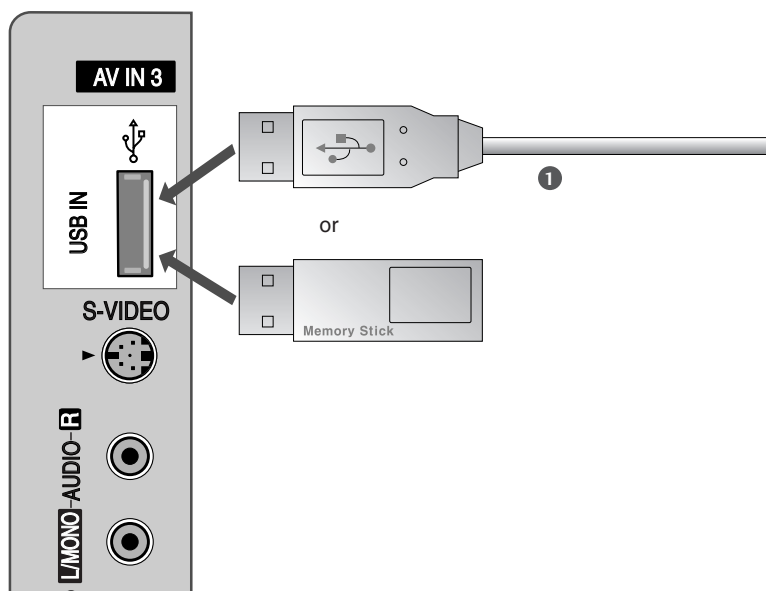


EXTERNAL EQUIPMENT SETUP

- 1 Connect the USB device to the **USB IN** jacks on the side of TV.
- 2 After connecting the **USB IN** jacks, you use the **DVR** function. (▶ p.54)

PC SETUP

This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings.


When connecting with a D-sub 15 pin cable

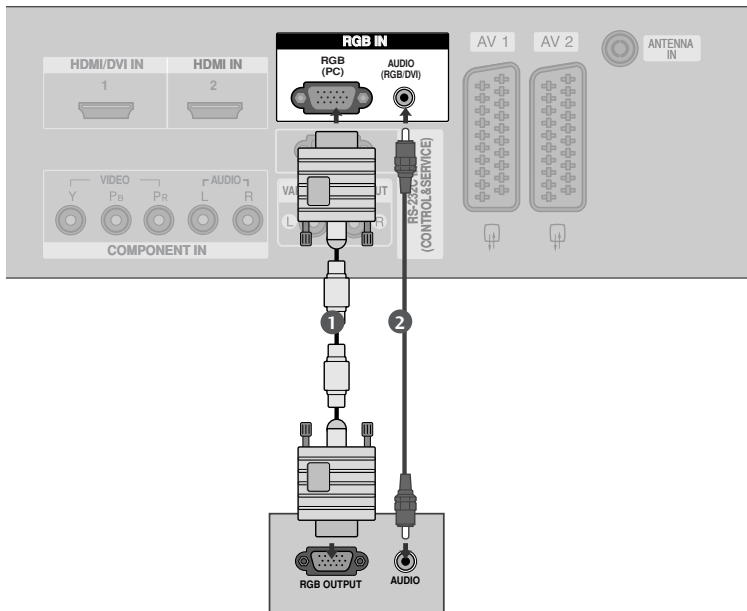

- 1 Connect the RGB output of the PC to the **RGB (PC)** jack on the set.
.....
- 2 Connect the PC audio output to the **AUDIO(RGB/DVI)** jack on the set.
.....
- 3 Turn on the PC and the set.
.....
- 4 Select **RGB** input source with using the **INPUT** button on the remote control.

EXTERNAL EQUIPMENT SETUP

When connecting with a HDMI to DVI cable

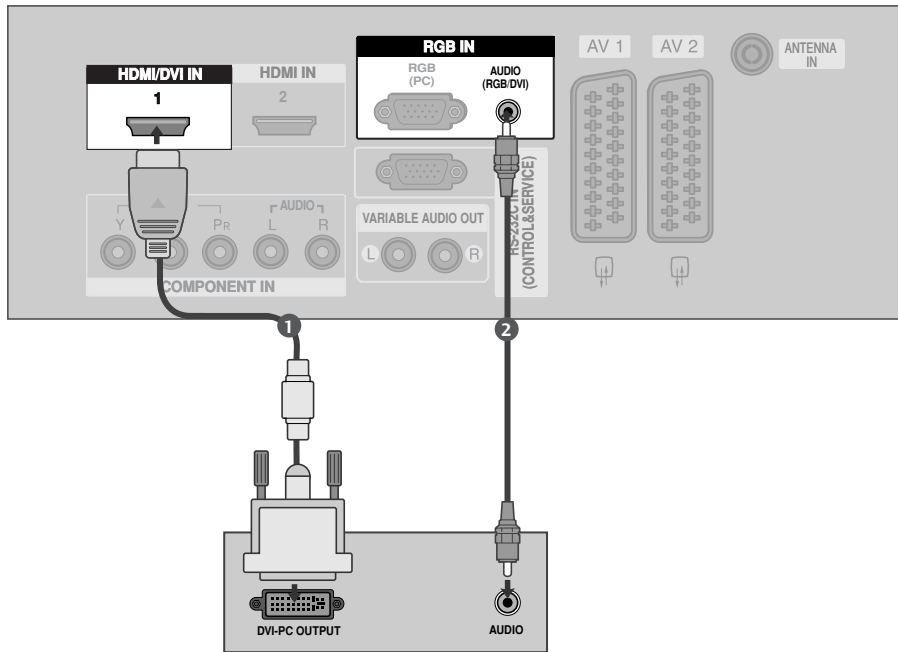

- 1 Connect the DVI output of the PC to the **HDMI/DVI IN 1** jack on the set.
.....
- 2 Connect the PC audio output to the **AUDIO (RGB/DVI)** jack on the set.
.....
- 3 Turn on the PC and the set.
.....
- 4 Select **HDMI1/DVI** input source with using the **INPUT** button on the remote control.

! NOTE

- ▶ If the PC has a DVI output and no HDMI output, a separated audio connection is necessary.
- ▶ If the PC does not support Auto DVI, you need to set the output resolution appropriately.

Supported Display Resolution (RGB /HDMI[PC]mode)

Resolution	Horizontal Frequency(kHz)	Vertical Frequency(Hz)
720x400	31.469	70.08
640x480	31.469	59.94
	37.500	75.00
800x600	37.879	60.31
	46.875	75.00
1024x768	48.363	60.00
	56.476	70.06
	60.023	75.02
1280x768	47.693	59.99
1360x768	47.700	60.00
1366x768	47.700	60.00

! NOTE

- ▶ To enjoy vivid picture and sound, connect a PC to the set.
- ▶ Avoid keeping a fixed image on the set's screen for a long period of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- ▶ Connect PC to the RGB (PC) or HDMI IN (or HDMI/DVI IN) port of the set; change the resolution output of PC accordingly.
- ▶ There might be noise according to some resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode into another resolution or change the refresh rate into another rate or adjust the brightness and contrast on the menu until the picture is clean. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult it to the manufacturer of the PC graphic card.
- ▶ The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- ▶ We recommend using 1024x768, 60Hz (42 inch PLASMA TV models)/ 1360x768, 60Hz (50 inch PLASMA TV models) for the PC mode, they provide the best picture quality.
- ▶ Connect the signal cable from the monitor output port of the PC to the RGB (PC/DTV) port of the set or the signal cable from the HDMI output port of the PC to the HDMI IN (or HDMI/DVI IN) port on the set.
- ▶ Connect the audio cable from the PC to the Audio input on the set. (Audio cables are not included with the set).
- ▶ If using a sound card, adjust PC sound as required.
- ▶ This set uses a VESA Plug and Play Solution. The set provides EDID data to the PC system with a DDC protocol. The PC adjusts automatically when using this set.
- ▶ DDC protocol is preset for RGB (Analog RGB) and HDMI (Digital RGB) mode.
- ▶ If required, adjust the settings for Plug and Play functionally.
- ▶ If graphic card on the PC does not output analog and digital RGB simultaneously, connect only one of either RGB or HDMI IN (or HDMI/DVI IN) to display the PC on the set.
- ▶ If graphic card on the PC does output analog and digital RGB simultaneously, set the set to either RGB or HDMI; (the other mode is set to Plug and Play automatically by the set.)
- ▶ DOS mode may not work depending on video card if you use a HDMI to DVI cable.
- ▶ When you use too long RGB-PC cable, there might be a noise on the screen. We recommend using under 5m of the cable. It provides the best picture quality.

EXTERNAL EQUIPMENT SETUP

Screen Setup for PC mode

Auto Configure (RGB mode only)

Automatically adjusts picture position and minimizes image shaking. After adjustment, if the image is still not correct, your set is functioning properly but needs further adjustment.

Auto configure

This function is for the automatic adjustment of the screen position, clock, and phase. The displayed image will unstable for a few seconds while the auto configuration is in progress.

1 Press the **MENU** button and then use **▲ / ▼** button to select the **PICTURE** menu.

2 Press the **▶** button and then use **▲ / ▼** button to select **Screen**.



3 Press the **▶** button and then use **▲ / ▼** button to select **Auto Config.**

4 Press the **▶** button to start **Auto Config.**

- When **Auto config.** has finished, **OK** will be shown on screen.
- If the position of the image is still not correct, try Auto adjustment again.

- If picture needs to be adjusted more after Auto adjustment in RGB, you can adjust the **Manual Config.**


5 Press the **EXIT** button to return to TV viewing.

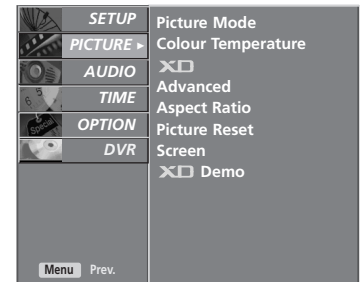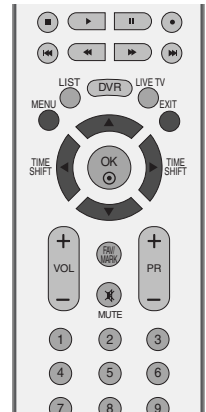

1



2

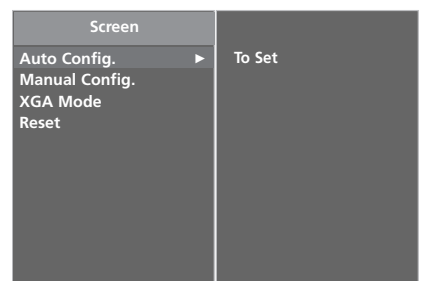

3 4

Adjustment for screen Phase, Clock, Position

If the picture isn't clear after auto adjustment and especially if characters are still trembling, adjust the picture phase manually.



To correct the screen size, adjust **Clock**.

This function works in the following mode : RGB, COMPONENT (480p/576p/720p/1080i/1080p), HDMI (480p/576p/720p/1080i/1080p).

It's not available to use Phase, Clock function in COMPONENT (480p/576p/720p/1080i/1080p), HDMI (480p/576p/720p/1080i/1080p).

Clock This function is to minimize any vertical bars or stripes visible on the screen background. And the horizontal screen size will also change.

Phase This function allows you to remove any horizontal noise and clear or sharpen the image of characters.

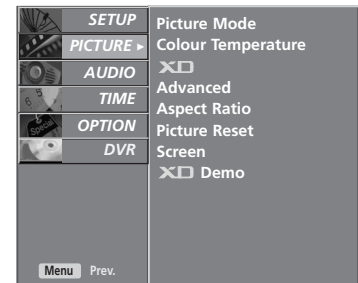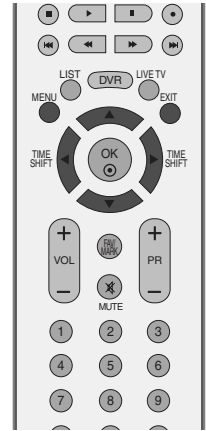

1

1 Press the **MENU** button and then use ▲ / ▼ button to select the **PICTURE** menu.


2 Press the ► button and then use ▲ / ▼ button to select **Screen**.

3 Press the ► button and then use ▲ / ▼ button to select **Manual Config..**


4 Press the ► button and then use ▲ / ▼ button to select **Phase, Clock, H-Position** or **V-Position**.

5 Press the ◀ / ▶ button to make appropriate adjustments.

6 Press the **EXIT** button to return to TV viewing.

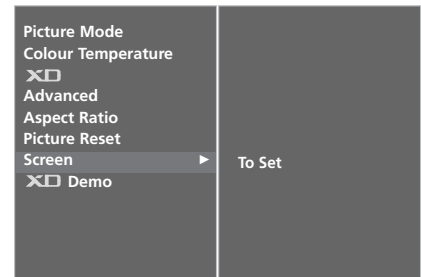

2

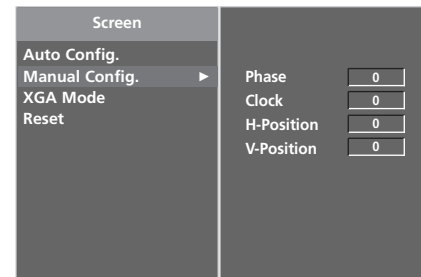


3 4 5

EXTERNAL EQUIPMENT SETUP


Selecting Wide XGA mode

To see a normal picture, match the resolution of RGB mode and selection of XGA mode.

This function works in the following mode: RGB mode.

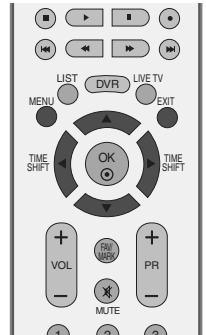

1 Press the **MENU** button and then use ▲ / ▼ button to select the **PICTURE** menu.

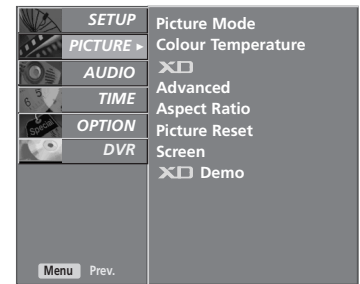


2 Press the ► button and then use ▲ / ▼ button to select **Screen**.



3 Press the ► button and then use ▲ / ▼ button to select **XGA Mode**.

4 Press the ► button and then use ▲ / ▼ button to select the desired XGA resolution.

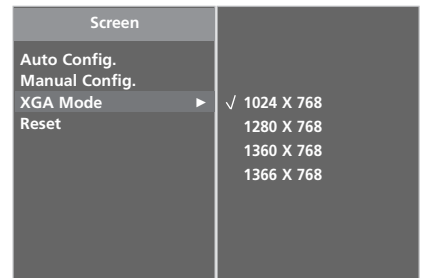


5 Press the **EXIT** button to return to TV viewing.

Initializing (Reset to original factory settings)


This function operates in current mode.
To initialize the adjusted value




- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **PICTURE** menu.
- 2 Press the ► button and then use ▲ / ▼ button to select **Screen**.
- 3 Press the ► button and then use ▲ / ▼ button to select **Reset**.
- 4 Press the ► button.
- 5 Press the **EXIT** button to return to TV viewing.

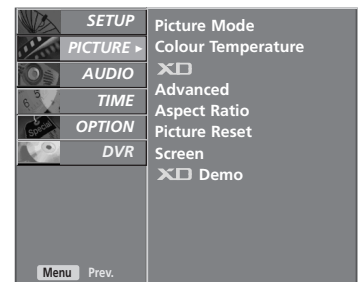

1

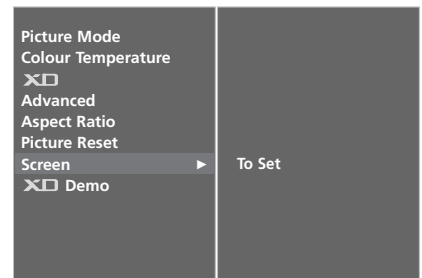

2

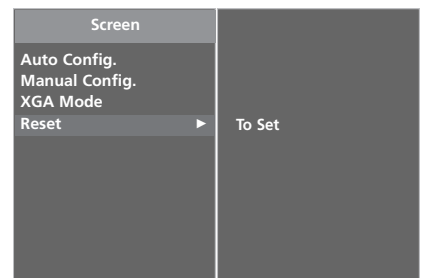

3 4

WATCHING TV / PROGRAMME CONTROL

REMOTE CONTROL KEY FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.



WATCHING TV / PROGRAMME CONTROL

POWER Switches the set on from standby or off to standby.

TV INPUT Returns to the TV viewing from any mode. Switches the set on from standby.

INPUT If you press the button once, the input source OSD will appear on screen as shown. Press the ▲ / ▼ button and then OK button to select the desired input source (TV, AV1, AV2, AV3, Component, RGB, HDMI1/DVI or HDMI2).

RATIO Selects your desired picture format.

Brightness adjustment Adjusts screen brightness. It returns to the default settings brightness by changing mode source.

1 PIP Switches the sub picture PIP, DW mode.

PIP PR - / + Selects a programme for the sub picture.

SWAP Exchanges the main/sub images in PIP/Double window.

PIP INPUT Selects the input source for the sub picture in PIP/DW picture mode.

SIZE Adjusts the sub picture size.

POSITION Moves the sub picture.

DVR/VCR/DVD control buttons Controls some video cassette recorders or DVD players when you have already selected DVD or VCR mode button. Control connected AV devices by pressing the ▲ / ▼ / ◀ / ▶, OK buttons and buttons for play, stop, pause, fast reverse, fast forward, chapter skip. (The ● button does not provide such functions.) Use for DVR record or trick play.

MENU Selects a menu.


LIST Displays the programme list.

DVR Brings up the Home menu.

LIVE TV In Delayed mode, the screen returns to Live programme from TV, AV1, AV2, AV3 and Component modes.

EXIT Clears all on-screen displays and returns to TV viewing from any menu.

2 DivX Selects a DivX Audio Language or Subtitle Language

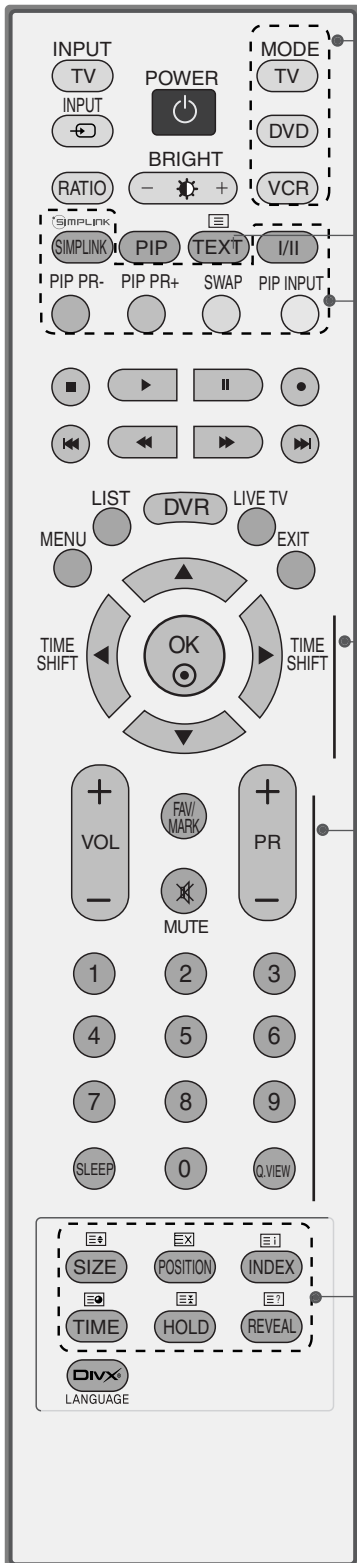

MODE Selects the remote operating modes.

3 TELETEXT BUTTONS These buttons are used for teletext. For further details, see the 'Teletext' section.

SIMPLINK See a list of AV devices connected to TV. When you toggle this button, the Simplink menu appears at the screen. (▶ p.44)

I/II Selects the sound output.

Coloured buttons These buttons are used for teletext (only **TELETEXT** models) or **Programme edit**.

THUMBSTICK Allows you to navigate the on-screen menus and adjust the system settings to your preference. (Up/Down/Left Right) (TIME SHIFT)

OK Accepts your selection or displays the current mode.

VOLUME UP/DOWN Adjusts the volume.

FAV Displays the selected favourite programme.

MARK Check and un-check programmes in the recorded TV menu.

MUTE Switches the sound on or off.


Programme UP/DOWN Selects a programme.

0~9 number buttons Selects a programme. Selects numbered items in a menu.

SLEEP Sets the sleep timer.

Q.VIEW Returns to the previously viewed programme.

Installing Batteries

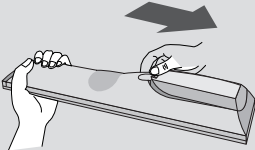


- Open the battery compartment cover on the back side and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AA batteries. Don't mix old or used batteries with new ones.
- Close cover.

WATCHING TV / PROGRAMME CONTROL

TURNING ON THE TV

If your TV will be turned on, you will be able to use its features.

- 1 First, connect power cord correctly.
At this moment, the TV switches to standby mode.
 - In standby mode to turn TV on, press the $\phi/|$, **INPUT**, **PR ▲ / ▼** button on the TV or press the **POWER**, **TV**, **INPUT**, **PR + / -**, **Number(0~9)** button on the remote control and then the TV will switch on.

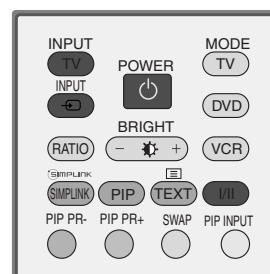

PROGRAMME SELECTION

- 1 Press the **PR + / -** or **NUMBER** buttons to select a programme number.


VOLUME ADJUSTMENT

- 1 Press the **VOL + / -** button to adjust the volume.
- 2 If you want to switch the sound off, press the **MUTE** button.
- 3 You can cancel the Mute function by pressing the **MUTE**, **VOL + / -** or **I/II** button.

ON SCREEN MENUS SELECTION AND ADJUSTMENT

Your TV's OSD (On Screen Display) may differ slightly from what is shown in this manual.

- 1 Press the **MENU** button and then **▲** / **▼** button to display each menu.
- 2 Press the **▶** button and then **▲** / **▼** button to select a menu item.
- 3 Change the setting of an item in the sub or pull-down menu with **◀** / **▶** button.
You can move to the higher level menu by pressing the **OK** or **MENU** button.

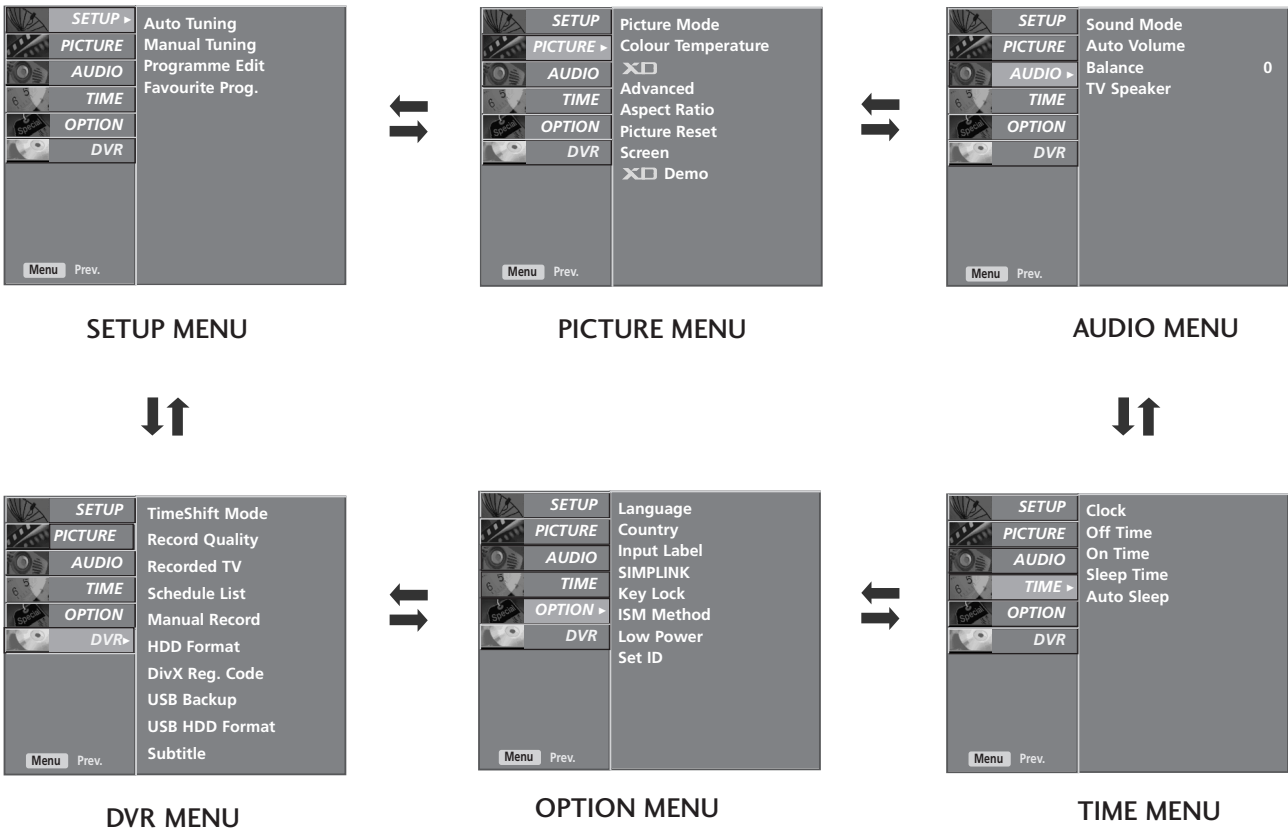

NOTE

- ▶ The OSD (On Screen Display) function enables you to adjust the screen status conveniently since it provides graphical presentation.
- ▶ In this manual, the OSD (On Screen Display) may be different from your TV's because it is just example to help the TV operation.
- ▶ In the teletext mode, menus are not displayed
- ▶ It's not available to use **SETUP** menu on playing recorded programme.

WATCHING TV / PROGRAMME CONTROL

AUTO PROGRAMME TUNING

Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the PR + / - or NUMBER buttons to scan the stations you have programmed.

Stations can be tuned using automatic or manual modes.

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

It's not available to use this function on recording programme.



1 Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.

2 Press the **▶** button and then **▲ / ▼** button to select **Auto Tuning**.

3 Press the **▶** button and then **▲ / ▼** button to select **System**.

4 Press the **◀ / ▶** button to select a TV system menu;
 BG : PAL B/G, SECAM B/G (Europe / East Europe / Asia / NewZealand / M.East / Africa / Australia)
 I : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
 DK : PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)
 L : SECAM L/L' (France)
 M : (USA / Korea / Philippines) (option)

5 Press the **▲ / ▼** button to select **Storage From**.

6 Press the **◀ / ▶** button or NUMBER buttons to select the beginning programme number. If you use NUMBER buttons, any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.


7 Press the **▲ / ▼** button to select **Start**.

8 Press the **▶** button to begin auto tuning. All receivable stations are stored. The station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or TELETEXT data. If no station name can be assigned to a station, the channel number is assigned and stored as C (V/UHF 01-69) or S (Cable 01-47), followed by a number.


To stop auto tuning, press the **MENU** button.

When auto tuning is completed, the Programme edit menu appears on the screen. See the Programme edit section to edit the stored programme.

9 Press the **EXIT** button to return to normal TV viewing.

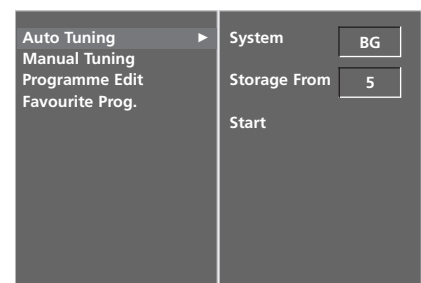

2 3 4 5 6 7

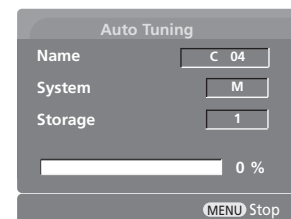

MANUAL PROGRAMME TUNING


Manual programme lets you manually tune and arrange the stations in whatever order you desire.

It's not available to use this function in TimeShift Mode On mode.

It's not available to use this function on recording programme.



- 1 Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.
- 2 Press the **▶** button and then **▲ / ▼** button to select **Manual Tuning**.
- 3 Press the **▶** button and then **▲ / ▼** button to select **Storage**.
- 4 Press the **◀ / ▶** button or **NUMBER** buttons to select the desired programme number (0 to 99). If you use **NUMBER** buttons, any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
- 5 Press the **▲ / ▼** button to select **System**.
- 6 Press the **◀ / ▶** button to select a TV system menu;
 - BG: PAL B/G, SECAM B/G (Europe / East Europe / Asia / NewZealand / M.East / Africa / Australia)
 - I : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)
 - DK: PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)
 - L : SECAM L/L' (France)
 - M : (USA / Korea / Philippines) (option)
- 7 Press the **▲ / ▼** button to select **Band**.
- 8 Press the **▶** button and then **◀ / ▶** button to select **V/UHF** or **Cable**.
- 9 Press the **▲ / ▼** button to select **Channel**.
- 10 You can select the desired programme number with the **◀ / ▶** button or number buttons. If possible, select the programme number directly with the number buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
- 11 Press the **▲ / ▼** button to select **Search**.
- 12 Press the **◀ / ▶** button to commence searching. If a station is found the search will stop.
- 13 Press the **OK** button to store it.
- 14 To store another station, repeat steps 3 to 13.
- 15 Press the **EXIT** button to return to normal TV viewing.

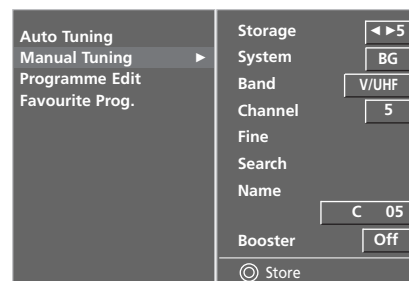

WATCHING TV / PROGRAMME CONTROL

FINE TUNING

Normally fine tuning is only necessary if reception is poor.



1 Press the **MENU** button and then ▲ / ▼ button to select the **SETUP** menu.



2 Press the ► button and then ▲ / ▼ button to select **Manual Tuning**.

3 Press the ► button and then ▲ / ▼ button to select **Fine**.

4 Press the ◀ / ▶ button to fine tune for the best picture and sound.

5 Press the **OK** button to store it.

6 Press the **EXIT** button to return to normal TV viewing.

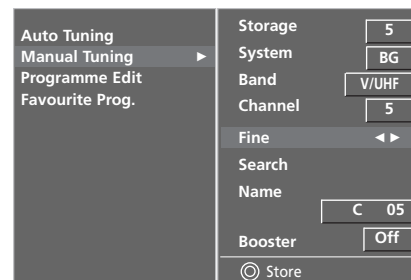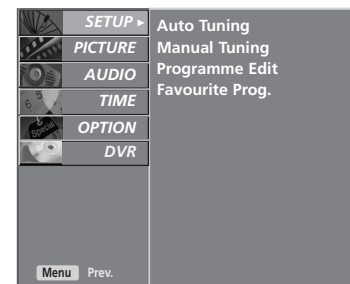

2 3 4 5

ASSIGNING A STATION NAME

You can assign a station name with five characters to each programme number.



- 1 Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.

- 2 Press the **▶** button and then **▲ / ▼** button to select **Manual Tuning**.



- 3 Press the **▶** button and then **▲ / ▼** button to select **Name**.

- 4 Press the **▶** button and then **▲ / ▼** button. You can use a blank, **+**, **-**, the number **0** to **9** and the alphabet **A** to **Z**.

- 5 Press the **◀ / ▶** button to select the position and make your choice of the second character, and so on.

- 6 Press the **OK** button to store it.

- 7 Press the **EXIT** button to return to normal TV viewing.

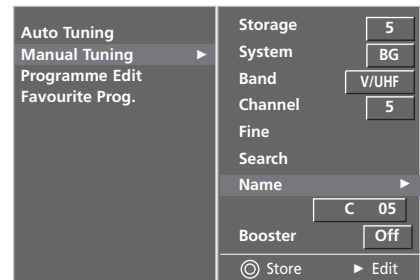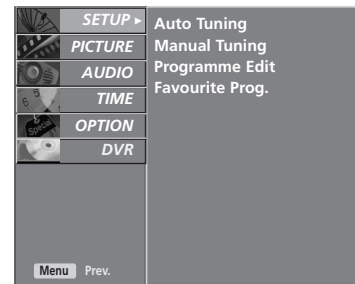

② ③ ④ ⑤ ⑥

WATCHING TV / PROGRAMME CONTROL

BOOSTER

In some models, **Booster** is an optional function. Only a set with **Booster** can perform this function.

If the reception is poor at the fringe area of TV signal, select **Booster to On**.



1 Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.

2 Press the **▶** button and then **▲ / ▼** button to select **Manual Tuning**.


3 Press the **▶** button and then use **▲ / ▼** button to select **Booster**.

4 Press the **▶** button and then use **◀ / ▶** button to select **On** or **Off**.

5 Press the **EXIT** button to return to normal TV viewing.



1

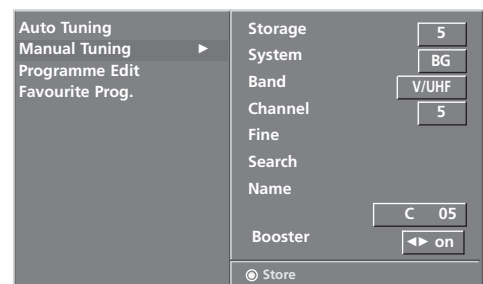

2 3

PROGRAMME EDIT

This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or copy a blank station data into the selected programme number.

It's not available to use this function on recording programme.

1 Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.

2 Press the **▶** button and then **▲ / ▼** button to select **Programme Edit**.

3 Press the **▶** button to display the Programme edit menu.

■ Deleting a programme

1. Select a programme to be deleted with the **▲ / ▼ / ◀ / ▶** button.

2. Press the **RED** button twice.

The selected programme is deleted, all the following programmes are shifted up one position.

■ Copying a programme

1. Select a programme to be copied with the **▲ / ▼ / ◀ / ▶** button.

2. Press the **GREEN** button.

All the following programmes are shifted down one position.

■ Moving a programme

1. Select a programme to be moved with the **▲ / ▼ / ◀ / ▶** button.

2. Press the **YELLOW** button.

3. Move the programme to the desired programme number with the **▲ / ▼ / ◀ / ▶** button.

4. Press the **YELLOW** button again to release this function.


■ Skipping a programme number

1. Select a programme number to be skipped with the **▲ / ▼ / ◀ / ▶** button.

2. Press the **BLUE** button. The skipped programme turns to blue.

3. Press the **BLUE** button again to release the skipped programme.


When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.

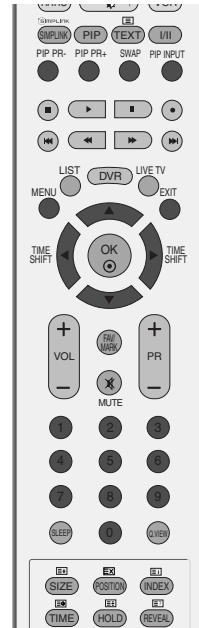

1



2

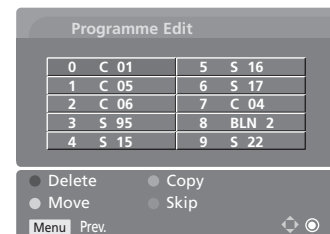

3

4 Press the **EXIT** button to return to normal TV viewing.

WATCHING TV / PROGRAMME CONTROL

FAVOURITE PROGRAMME

This function lets you select your favourite programmes directly.

Repeatedly press the **FAV** button to select stored favourite programmes.

1 Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.

2 Press the **▶** button and then **▲ / ▼** button to select **Favourite Prog..**


3 Press the **▶** button.

4 Press the **▲ / ▼** button to select - - - - -.

5 Select a desired programme with the **◀ / ▶** button or **NUM-BER** buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.

6 To store another programme, repeat steps **4** to **5**. You can store up to 8 programmes.

7 Press the **EXIT** button to return to normal TV viewing.

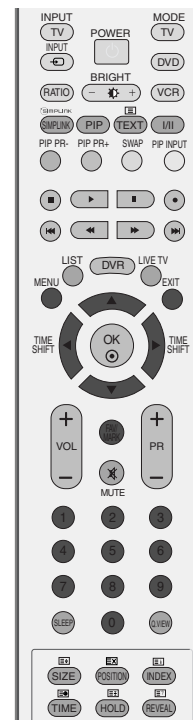

1



2 3 4 5

CALLING THE PROGRAMME TABLE

You can check the programmes stored in the memory by displaying the programme Table.



■ Displaying programme Table

Press the **LIST** button to display the Programme Table menu.

The programme list appears on the screen.

One programme list contains ten programmes as shown.

! NOTE

- You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.
- Some programmes with the channel number shown in the programme list indicate there is no station name assigned.

Programme List

0	-----	5	S 02
1	C 01	6	S 04
2	C 04	7	C 08
3	C 05	8	S 11
4	BLN 2	9	S 28

■ Selecting a programme in the programme Table

Select a programme with the **▲ / ▼ / ◀ / ▶** button.

Then press the **OK** button. The set switches to the chosen programme number.

■ Paging through a programme Table


There are 10 programme list pages in which contain 100 programmes. Pressing the **▲ / ▼ / ◀ / ▶** button repeatedly turns the pages.

Press the **LIST** button to return to normal TV viewing.

WATCHING TV / PROGRAMME CONTROL

INPUT SOURCE SELECTION

Sets a label to each input source which is not in use.

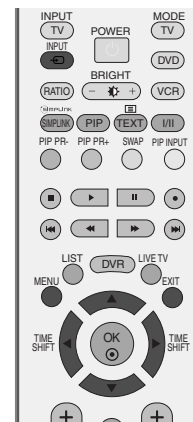


1 Press the **MENU** button and then use ▲ / ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ / ▼ button to select **Input Label**.


3 Press the ► button and then use ▲ / ▼ button to select the source: AV1, AV2, AV3, Component, RGB, HDMI1/DVI or HDMI2.

4 Press the ► button and then use ▲ / ▼ button to select the label.


5 Press **EXIT** button to return to normal TV viewing.

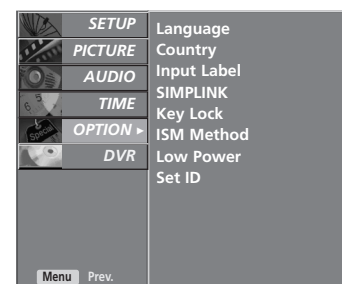

1

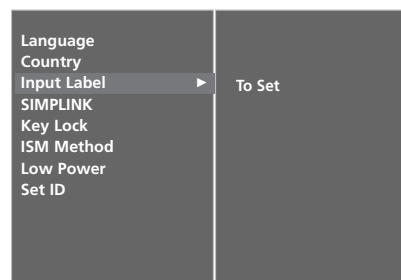

2

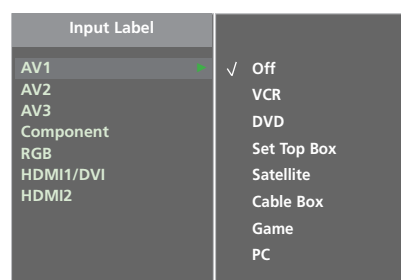


3

KEY LOCK

The TV can be set so that the remote control is needed to control it.

This feature can be used to prevent unauthorized viewing.

This set is programmed to remember which option it was last set to even if you turn the set off.

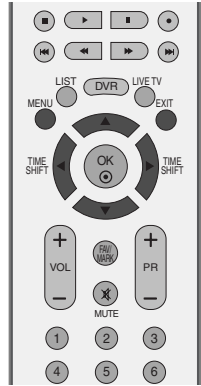


1 Press the **MENU** button and then **▲ / ▼** button to select the **OPTION** menu.


2 Press the **▶** button and then **▲ / ▼** button to select **Key Lock**.

3 Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.

4 Press the **EXIT** button to return to normal TV viewing.

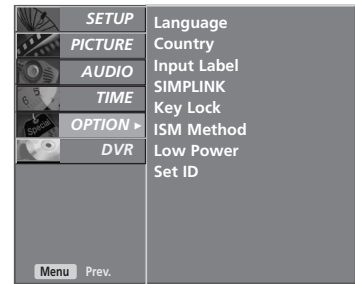

1

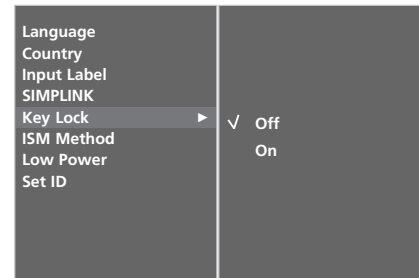

2 3

NOTE

- ▶ In **Key Lock 'On'**, if the set is turned off, press the **⏻ / I**, **INPUT**, **PR ▲ / ▼** button on the set or **POWER**, **INPUT**, **TV**, **PR +/-** or **NUMBER** buttons on the remote control then the set will be turned on.
- ▶ With the **Key Lock On**, the display **⚠ Key Lock On** appears on the screen if any button on the front panel is pressed while viewing the set.


WATCHING TV / PROGRAMME CONTROL



This operates only for the devices with the SIMPLINK logo.
Please check the SIMPLINK logo.

This allows you to control and play other AV devices connected to the display through HDMI cable without additional cables and settings.

If you do not want SIMPLINK menu, select "Off".

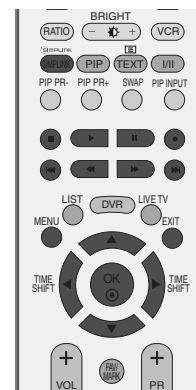

1 Press the **MENU** button and then **▲ / ▼** button to select the **OPTION** menu.


2 Press the **▶** button and then **▲ / ▼** button to select **SIM-PLINK**.

3 Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.

4 Press the **EXIT** button to return to normal TV viewing.



1

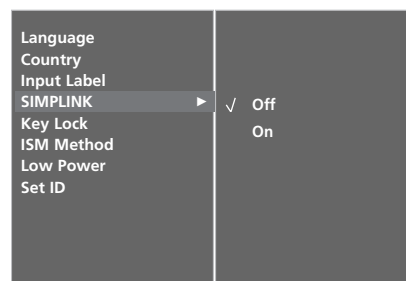

2 3

SIMPLINK Functions

Disc playback

Control connected AV devices by pressing the ▲ / ▼ / ◀ / ▶, OK buttons and buttons for play, stop, pause, fast reverse, fast forward, chapter skip. (The ⏻ button does not provide such functions)

Direct Play

After connecting AV devices to TV, you can directly control the devices and play media without additional settings.

Select AV device

Enables you to select one of AV devices connected to TV and play it.

Power off all devices

When you power off TV, all connected devices are turned off.

Switch audio-out

Offers an easy way to switch audio-out.

* A device, which is connected to TV through HDMI cable but does not support Simplink, does not provide this function.

SIMPLINK Menu

Press the ▲ / ▼ / ◀ / ▶ button and then OK button to select the desired SIMPLINK source.

- 1 **TV viewing** : Switch to the previous TV programme regardless of the current mode.
- 2 **DISC playback** : Select and play discs. When multiple discs are available, the titles of the discs are conveniently displayed at the bottom of the screen.
- 3 **VCR playback** : Play and control the connected VCR.
- 4 **HDD Recordings playback** : Play and control recordings stored in HDD.
- 5 **Audio Out to Home theater/Audio Out to TV** : Select Home theater or TV speaker for Audio Out.



! NOTE

- ▶ Connect the HDMI/DVI IN or HDMI IN terminal of the TV to the rear terminal (HDMI terminal) of the SIMPLINK device with the HDMI cable.
- ▶ After connecting the HDMI terminal for the home theater with SIMPLINK function in the above method, connect the VARIABLE AUDIO OUT terminal on the back of the TV to the VARIABLE AUDIO IN terminal on the back of the SIMPLINK device with the VARIABLE AUDIO OUT cable.
- ▶ When operating the external device with SIMPLINK, press the TV button among the MODE button on the remote controller.
- ▶ When you switch the Input source with the INPUT button on the remote controller, you can stop the operation of device controlled by SIMPLINK.
- ▶ When you select or operate the media device with home theater function, the speaker automatically switches to home theater speaker (HT speaker).
- ▶ If the SIMPLINK is operated, the keys such as stop / play / pause / fast reverse / fast forward / chapter skip are used for driving the SIMPLINK device, but not used for the DVR feature.

DVR (DIGITAL VIDEO RECORDER)

TIMESHIFT MODE(PAUSE & REPLAY OF LIVE TV)

This function allows the unit to automatically record live TV and make it available for reviewing at any time.

With Timeshift turned on, you may pause and rewind normal TV viewing at any time without missing any of the live broadcast.


(TimeShift Mode and Recording functions might not work if the signal strength is weak.)



- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.
- 2 Press the ► button and then use ▲ / ▼ button to select the **TimeShift Mode**.
- 3 Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.
- 4 Press the **EXIT** button to return to normal TV viewing.



1

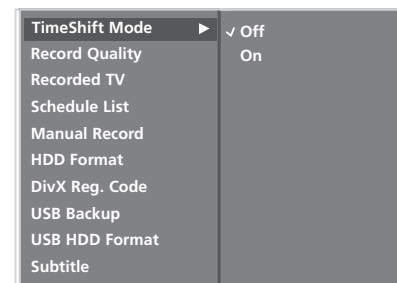

2 3

Using the TimeShift Mode function



1 After selecting the **TimeShift Mode On**, press the **OK** button.

- As soon as Timeshift starts, a progress bar indicating the current recording status is displayed in the bottom of the screen.
- Press the **EXIT** button to hide the 'Progress Bar' or press the **OK** button to display the 'Progress Bar'.
- This function is preserved even change a programme on progressing the Timeshift.

The 'Progress Bar'?

This function indicates a possible DVR reshewing section ,a current on-screen and real live broadcasting position.

- ① Status of current displayed video.
- ② Current save time.
- ③ 15 minute intervals from TimeShift Mode start time. (Total - one hour).
- ④ Indicates current TimeShift Mode position.

2 When finishing the Timeshift function, enter the **DVR** menu and turn **TimeShift Mode Off**.

! NOTE

- ▶ DVR (Digital Video Recorder) : A device which records and plays broadcast programme contents onto a hard disk in set or SET TOP BOX.
- ▶ In order to save hard-disk space, nothing is saved when there is no signal.
- ▶ The total storage space of the hard-disk is 80 GB. 4 GB minimum is reserved for TimeShift Mode.
- ▶ When turning power on, it may take up to a maximum of 3 minutes to initialize the HDD.
- ▶ The Recording function will not initiate for a copy-protected programme.
- ▶ Because an analog broadcast is transferred to a digital signal, video that contains rapid movement may show "cross stripes". This happens when the analog signal is compressed and then restored in the digital signal. The unit will attempt to reduce this excessive picture noise.
- ▶ When using the PIP/DW mode, Timeshift is stopped.
- ▶ TimeShift Mode is available in TV, AV1, AV2, AV3, Component(480i/480p/576i/576p/720p/1080i) mode.
- ▶ TimeShift Mode is not available for Audio only channels.
- ▶ Maximum recording file size is up to 16GB(4Hr).

DVR (DIGITAL VIDEO RECORDER)

Using the TimeShift Mode function, play


- When in timeshift mode, the following options are available.



Indicates that the current broadcast and displayed video differ.



■ When pressing the ● button delaying Timeshift, Timeshift is dumped. And delayed time is recording.

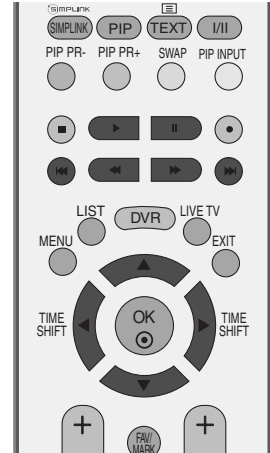


Using the remote control

You can shift playback to any point within the recorded programme

◀◀ / ▶▶	<p>When playing,</p> <p>repeatedly, press the REW(◀◀) button to speed up ◀◀ -> ◀◀◀◀ -> ◀◀◀◀◀◀ -> ◀◀◀◀◀◀◀◀ -> ◀◀◀◀◀◀◀◀◀◀◀◀ .</p> <p>repeatedly, press the FF(▶▶) button to speed up ▶▶-> ▶▶▶▶ -> ▶▶▶▶▶▶ -> ▶▶▶▶▶▶▶▶ -> ▶▶▶▶▶▶▶▶▶▶ .</p> <p>■ Pressing these buttons repeatedly increases the fast forward/reverse speed.</p>
◀◀ / ▶▶	<p>Press the ▶▶ button to jump about 20 seconds forward.</p> <p>■ Pressing the ◀◀ button to jump about 8 seconds backward.</p>
	<p>During playback, press the Pause() button.</p> <p>■ Still screen is displayed.</p> <p>■ Repeatedly press the Pause() button to advance frame by frame.</p> <p>■ Press the Pause() button and then use the FF(▶▶) button for slow motion (the ▶ icon is displayed.)</p> <p>■ Press the Pause() button and then use the FF(◀◀) button for slow motion (the ◀ icon is displayed.)</p>
◀ / ▶	<p>■ When using the ◀ or ▶ button during playback a cursor indicating the position can be viewed on the screen.</p>
PLAY (▶)	<p>Press the PLAY(▶) button to return to normal playback.</p>
LIVE TV	<p>If you want to return to the current live broadcast, press the LIVE TV button.</p>

FORMAT HARD DISK

Erases all programmes and initializes the hard disk.

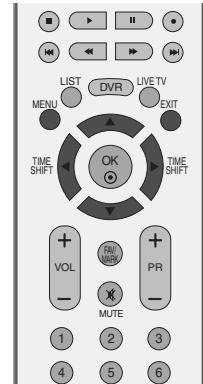

- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.
- 2 Press the ► button and then use ▲ / ▼ button to select **HDD Format**.
- 3 Press the ► button to start **HDD Format**.




1

- if you press the ► button, this message is displayed.

Do you want to format HDD?
- if you select Yes, this message is displayed.

HDD formatting is started
- When completing, this message is displayed.

HDD formatting is completed.

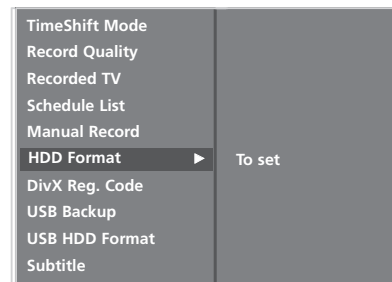

2 3

- 4 Press the **EXIT** button to return to normal TV viewing.


DVR (DIGITAL VIDEO RECORDER)

INSTANT RECORDING

Use this function to record the programme you are watching on the main screen.


Instant Record


This function records the currently displayed programme.

- 1 Select the programme you wish to record and then press the ● button. During recording  is displayed. Use this feature to record up to 2 hours of programming.


- 2 If you want to stop recording, press the ■ button.

- While recording, if you press the ■ button less than 10 seconds after recording started, this message is displayed.
- If you press the ■ button more than 10 seconds after recording started, this message is displayed.

 Recording is not completed.
Recording time must exceed 10 seconds.



 Recording is completed.

- 3 You can increase or decrease recording time by pressing the ● button while recording. After pressing the ● button, press the ◀ / ▶ buttons repeatedly to increase or decrease the recording time. Each time you press ◀ / ▶ button the recording duration changes as shown below.

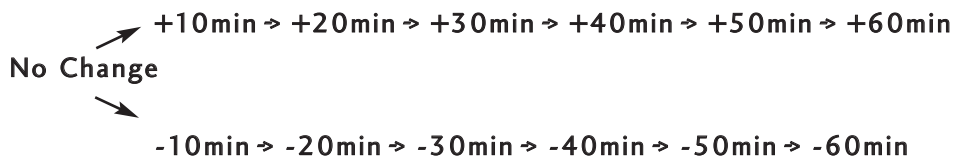

The extra recording time added to existing setting equals the final recording time.

- 4 After adjusting the recording time, select **OK**. The Status bar will be displayed.

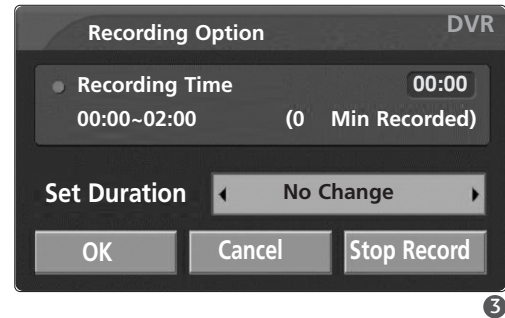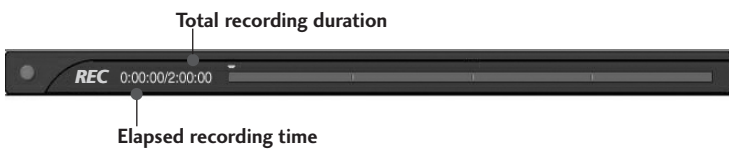


- Press the **EXIT** button to hide the Status bar. Press the **OK** button to display the Status bar.

- 5 Recording stops when the selected duration is reached or when you press the **■** button. Although recording has stopped, the Timeshift feature remains active.

NOTE

 - ▶ When recording, if the available storage space becomes low, the recording will be automatically stopped.
- ▶ Recordings of less than 10 seconds will not be saved.
- ▶ To save disk space while recording broadcasts, no data will be saved if there is no signal.
- ▶ The recording function will not initiate for a copy-protected programme.
- ▶ The displayed time may differ slightly from the actual time.
- ▶ In there is no signal or a film source is being viewed, the displayed time may differ slightly from the actual time.
- ▶ Timeshift recording is not possible with copy-protected programmes.

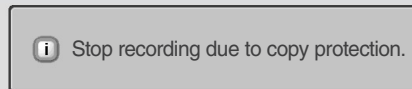

- ▶ When a poor quality external source is recorded (old VHS tape for example) the quality of the recording will not be as good as it could be.
- ▶ Programmes are stored separately according to the colour system that they are using. e.g. PAL/NTSC.
- ▶ Manual Recording available time is maximum 4 hours and minimum 5 minutes.


DVR (DIGITAL VIDEO RECORDER)

MANUAL RECORD

This function is easy to register to reserved recording.

This function is available to use in DVR menu.

When Manual Record, it's stored the default sound of the set.

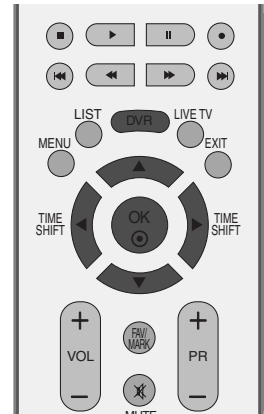


- 1 Press the **DVR** button to display **Home** menu. Use the **▲ / ▼** button to select the **Manual Record** and then use the **OK** or **▶** button.


- 2 **Manual Record** screen is displayed as shown below. Use the **▲ / ▼ / ◀ / ▶** button to set the **Input, PR, Date, Time, Duration, Frequency** .

- ▶ **Input** : Select the input source from the TV, AV1, AV2, AV3,Component(480i/576i).
- ▶ **PR** : Select either the current programme or a scanned programme.
- ▶ **Date** : You can select a date up to one month in the future.
- ▶ **Time /Duration** : Ensure you have set correctly.
- ▶ **Frequency** : Choose among Once, Daily and Weekly.

- 3 After setting the **Manual Record** , press the **OK** button.

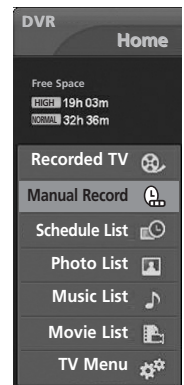

1

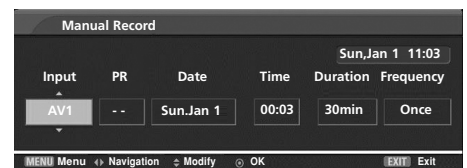


2



SCHEDULE LIST

This function is used to show scheduled recordings.
This function is available to use in DVR menu.

You can store up to 8 programmes.

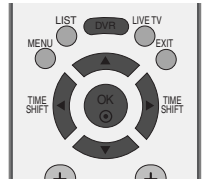

- 1 Press the **DVR** button to display **Home** menu. Use the ▲ / ▼ button to select the **Schedule List** and then use the **OK** or ► button.
- 2 **Schedule List** screen is displayed as shown below. Use the ▲ / ▼ button to select recorded programme.

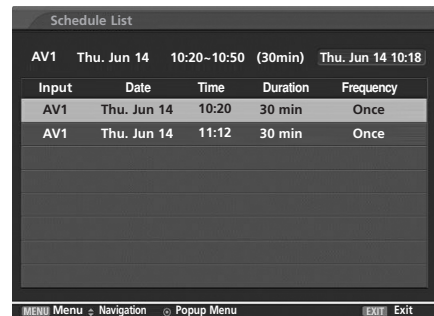
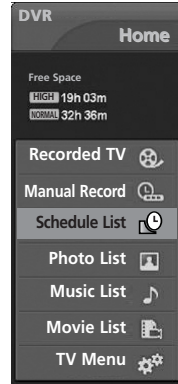


RECORD QUALITY

When recording analogue broadcasts and external input signals, the Record Quality can be selected.

This function is not available while a recording is taking place.

- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.
- 2 Press the ► button and then use ▲ / ▼ button to select **Record Quality**.
- 3 Press the ► button and then use ▲ / ▼ button to select **High** or **Normal**.
- 4 Press the **EXIT** button to return to normal TV viewing.

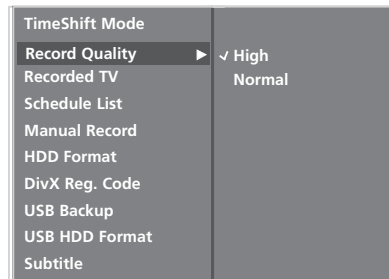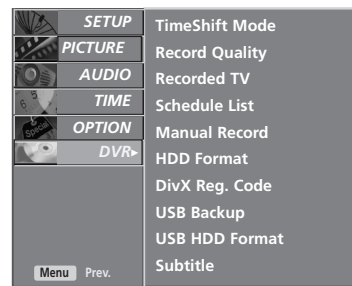

DVR (DIGITAL VIDEO RECORDER)

TO USE THE USB DEVICE

Precautions when using the USB device



- ▶ Only a USB storage device is recognizable.
- ▶ If the USB storage device is connected through a USB hub, the device is not recognizable.
- ▶ A USB storage device using an automatic recognition programme may not be recognized.
- ▶ A USB storage device which uses its own driver may not be recognized.
- ▶ In case of a card reader, up to four memory cards are concurrently recognizable.
- ▶ The recognition speed of a USB storage device may depend on each device.
- ▶ Please do not turn off the TV or unplug the USB device when the connected USB storage device is working. When such device is suddenly separated or unplugged, the stored files or the USB storage device may be damaged.
- ▶ Please do not connect the USB storage device which was artificially maneuvered on the PC. The device may cause the product to malfunction or fail to be played. Never forget to use only a USB storage device which has normal music files or image files.
- ▶ Please use only a USB storage device which was formatted as a FAT32 file system provided with the Windows operating system. In case of a storage device formatted as a different utility programme which is not supported by Windows, it may not be recognized.
- ▶ Please connect power to a USB storage device which requires an external power supply. If not, the device may not be recognized.
- ▶ Please connect a USB storage device with cable is offered by USB maker. If connected with cable is not offered by USB maker or an excessively long cable, the device may not be recognized.
- ▶ Some USB storage devices may not be supported or operated smoothly.
- ▶ If the name of a folder or file is too long, it will not be displayed or recognized.
- ▶ Please backup the important file because a data of USB device may be damaged. Data management is consumer's responsibility and in consequence the manufactures does not cover the product bearing data damage.
- ▶ Supported maximum external HDD size is up to 400GB.
- ▶ Supported maximum USB memory stick size is up to 32GB.

When connecting the USB device


Enjoy the recorded media, photo, music and Movie stored in the USB device. When you connect a USB device, this screen is displayed, automatically.

In USB device, you can not add a new folder or delete the existing folder.

- 1 Connect the USB device to the **USB IN** jacks on the side of TV.
- 2 Press the **▲ / ▼** button to select the desired item.
- 3 Press the **OK** button.

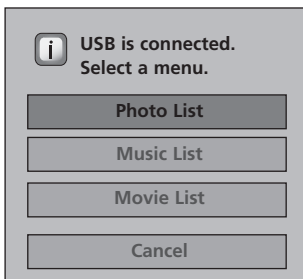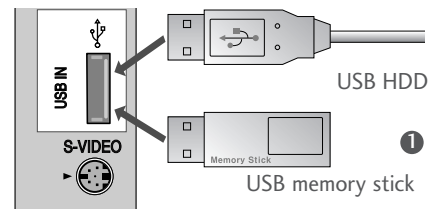


For the case when the USB which contains photo, music, and movie files is connected

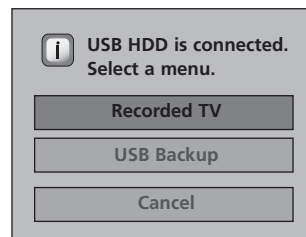

For the case when the USB which defaulted to backup use of the record list

To use the recorded list with USB storage device

- 1 Connect the USB device to the **USB IN** jacks on the side of TV.

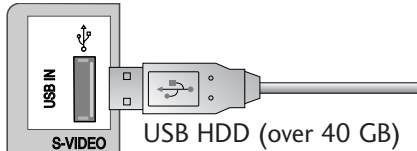


- Only USB HDD that are over 40 GB and 1 partition can be used for USB Backup.


- 2 To use the USB storage device (over 40 GB) for USB Backup, execute the “USB HDD Format”

- It initialises the HDD connected to the USB as disk mode for backup.
- It is activated only when the USB HDD available for backup is connected.
- When “USB HDD Format” is executed, all the data stored in the USB storage device is deleted.
- While performing “USB HDD Format”, do not remove the USB storage device. It may cause error on the TV and the storage device.

- 1 Press the **MENU** button and then use **▲ / ▼** button to select the **DVR** menu.
- 2 Press the **▶** button and then use **▲ / ▼** button to select **USB HDD Format**.
- 3 Press the **▶** button to start **USB HDD Format**.

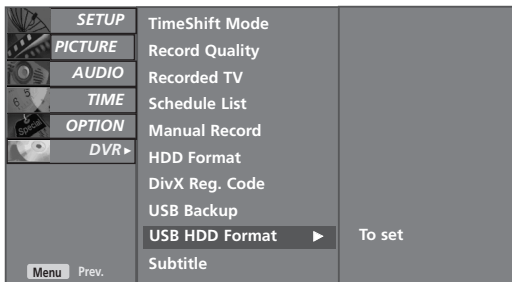

 - if you press the **▶** button, this message is displayed.

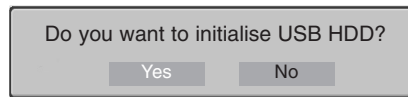

When ‘Yes’ is selected, a pop-up notice appears containing a message to initialise the connected USB HDD.


When initialisation is complete, a pop-up notice of completion is displayed and the connected USB HDD is available for backup.

- Depending on the capacity of the USB storage device, the initialisation time may vary.
- The initialised USB storage device only operates in the “Recorded List”.
- The initialised USB storage device is not recognised by the PC.
- When a USB storage device of less than 40 GB is connected, the “USB HDD Format” is not activated.
- Supported maximum external HDD size for back-up is up to 400GB.

! NOTE

- ▶ When attempting to access the USB Backup of the DVR menu after the initialisation, an alert message is displayed and access is blocked because there are no backed up items.
- ▶ When even a single backed up file exists through ‘Copy to USB HDD’ from the ‘Recorded TV’ of the DVR menu, the access to USB Backup is allowed.


- 3 Press the **DVR** button to display **HOME** menu.
Use the **▲ / ▼** button to select **Recorded TV** and then use the **OK** or **▶** button.

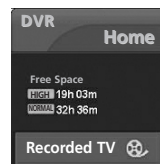

DVR (DIGITAL VIDEO RECORDER)

RECORDED TV PROGRAMME LIST

You can view the recorded programme list at a glance.
This function is also available in DVR menu.

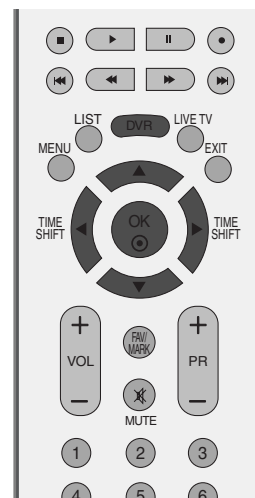


- 1 Press the **DVR** button to display **HOME** menu.
Use the **▲** / **▼** button to select **Recorded TV** and then use the **OK** or **▶** button.



Screen Components


- 1 Usable HDD space
- 2 Current page/Total pages
- 3 Marked title or programme
- 4 Corresponding buttons on the remote control

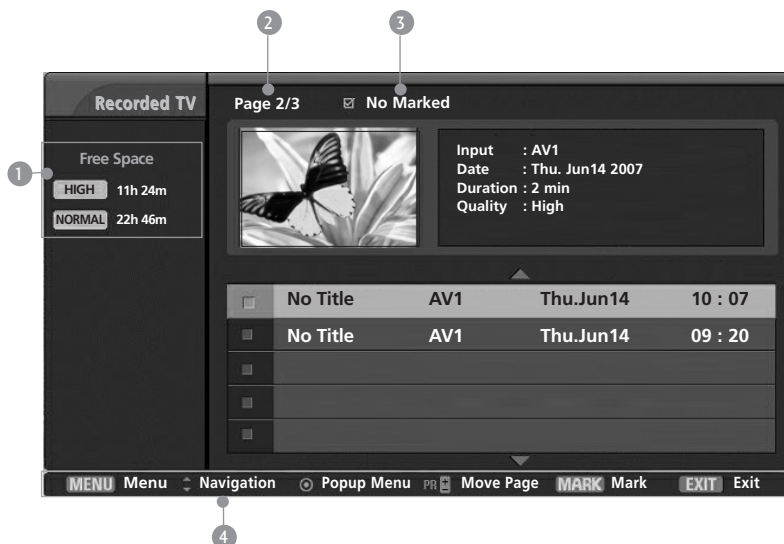

Recorded programme Selection and Popup Menu

The recorded programme stored in the internal HDD or the USB storage device can be played.


The preview recorded list is shown above.

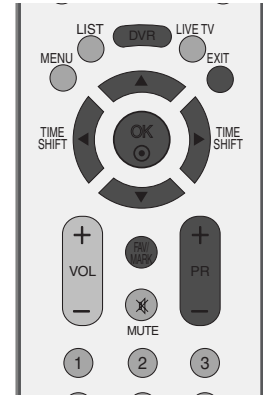

1 Use the **PR +/-** button for page up/down navigation.

2 Use the **MARK** button to delete from the list. A is displayed next to the preview window if an item is marked.


3 Use **▲ / ▼** button to navigation the appropriate Recorded programme, then press the **OK** button to open the Pop-up Menu.

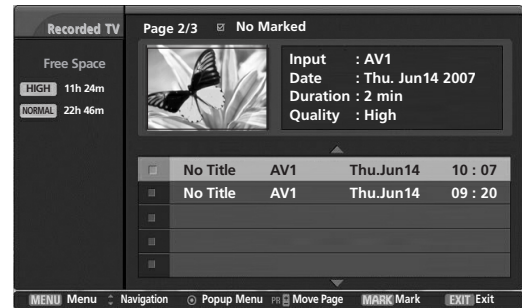



1

- ▶ **Play** : Begin playback of selected recorded programme.
- ▶ **Mark All** : mark all recorded programmes on the screen.
- ▶ **Unmark All** : Change marked recorded programmes to unmarked recorded programmes.
- ▶ **Delete** : Delete the selected recorded programmes.
- ▶ **Rename** : Edit recorded programme title.
- ▶ **Copy to USB HDD** : Copies the recorded programme in the internal HDD to the USB storage device. It is activated only when a USB HDD available for backup is connected.

<HDD Backup process screen>

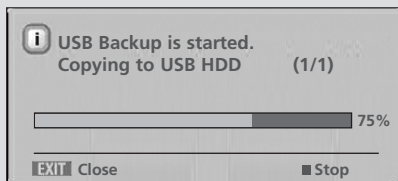

 ■ if you press the **■** button, this message is displayed.

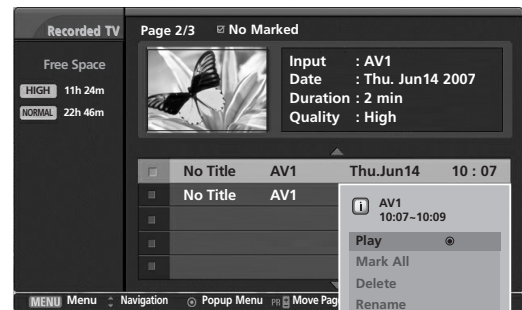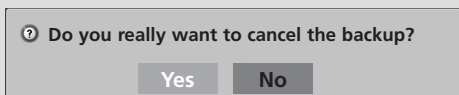

2 3

DVR (DIGITAL VIDEO RECORDER)


- When 'Yes' is selected, the backup is cancelled and is converted back to input mode. If more than two files are transferred, the transferred file is stored, and the backup operations on the files in progress of transferring and scheduled for backup are cancelled.
- When 'No' is selected, returns to the backup process screen.



While backup is being performed in the background, the status of the copy progress can be checked by pressing the 'OK' button.

▶ **Cancel** : Close the Pop-up menu.


- 4 Repeatedly, press **EXIT** button to return to TV viewing or press **DVR** button to return to the **Home** menu.
 - If the HDD has a problem performing a recording related function, this message is displayed.
 - If the temperature is below zero (0°), a warning message is displayed and you will not be able to use the DVR functions.

 HDD initialisation is in progress.


 Cannot operate DVR at low temperature.

USB BACKUP

- When the Recorded List is stored exceeding the capacity of the internal HDD, the USB backup feature allows the backup of Recorded List of the internal HDD to the external HDD for backup connected through USB.
- To use USB backup function, be sure to initialize the USB HDD using DVR menu-USB HDD format.
- To use USB Backup, USB HDD is necessary more than 40 GB, 1 partition disk, and FAT32 system.
- It only supports file backup features; therefore, playback of the Recorded List directly from the current OSD is not allowed. In order to play the recorded contents, the files must be moved to the internal HDD through the 'Copy to Recorded List' from the popup menu.
- View the list of the backed up recorded programme by using the 'Copy to USB HDD' from the 'Recorded TV'.
- It moves to the external HDD list for backup connected by USB.

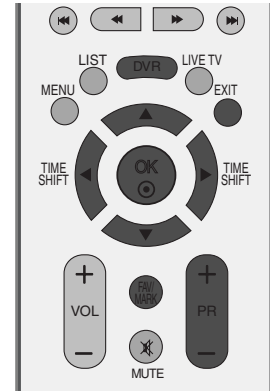


- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.
- 2 Press the ► button and then use ▲ / ▼ button to select **USB Backup**.
- 3 Press the ► button to start **USB Backup**.
- 4 **Recorded TV** screen is displayed as shown. Use the **PR +/-** button to navigation in the recorded programme.

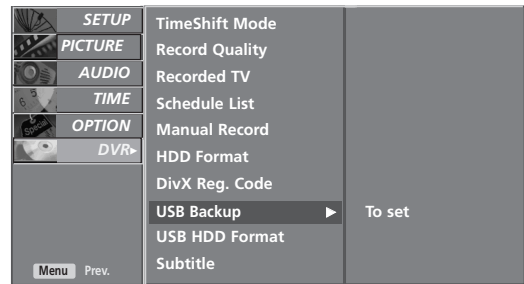

1 2 3


Use **MARK** button to mark or unmark a recorded programme.

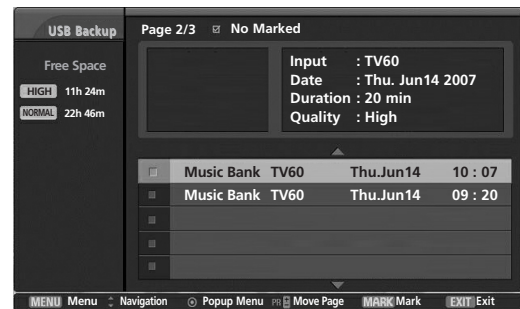

4

Use ▲ / ▼ button to navigation the appropriate recorded programme, then press the **OK** button to show up the pop-up menu.

- ▶ **Mark All** : mark all recorded programmes on the screen.
- ▶ **Unmark All** : Change marked recorded programmes to unmarked recorded programmes.
- ▶ **Delete** : Delete the selected recorded programmes.

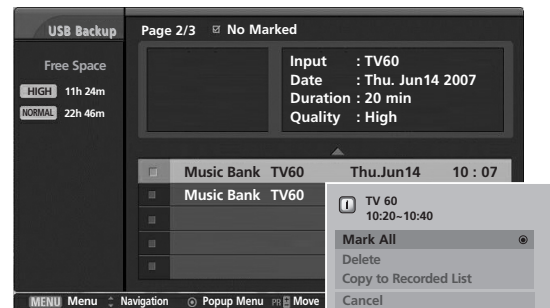


4


DVR (DIGITAL VIDEO RECORDER)

- ▶ **Copy to Recorded List** :Restores the Recorded Programme to the internal HDD.


<HDD Backup process screen>

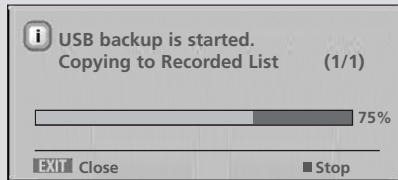

 - if you press the **■** button, this message is displayed.

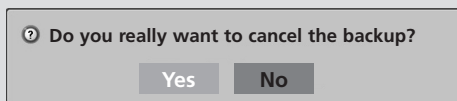

- When 'Yes' is selected, the backup is cancelled and is converted back to input mode. If more than two files are transferred, the transferred file is stored, and the backup operations on the files in progress of transferring and scheduled for backup are cancelled.
- When 'No' is selected, returns to the backup process screen.

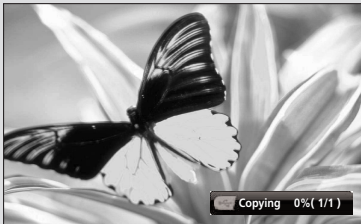

While backup is being performed in the background, the status of the copy progress can be checked by pressing the 'OK' button.

 
- ▶ **Cancel** : Close the pop-up menu.

- 5 Repeatedly, press **EXIT** button to return to TV viewing or press the **DVR** button to return to the **Home** menu.


⚠ CAUTION

- ▶ If you turn the power off on Copying or recording, this message is displayed as shown below.

<copying>

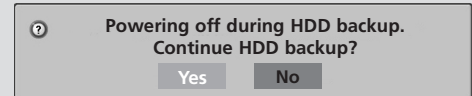

<Copying and recording>

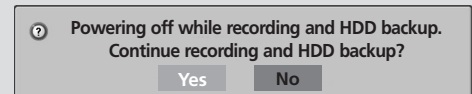 

- ▶ If you selects No, Copying stops and then power is off.
- ▶ If you selects Yes, Copying continues and the power is turned off.
- ▶ If you press the **EXIT** button to disappear this message.

! NOTE

 
- ▶ When even a single back up file exists in the initialised USB HDD (from the USB HDD Format menu) through 'Copy to USB HDD' from the 'Recorded TV', the access to the USB Backup is allowed.
- ▶ If Manual or Instant Record operates while a recorded programme is transferring from USB HDD to Recorded TV, Copying will pause.
Then, press the OK button, and '--%' will be displayed in Record message, and after recording is completed, Copying will continue again.
- ▶ Playback is not available while recording along with USB Backup.

Playing recorded programmes

- You can play the selected programme in the recorded programme list.

- 1 Play a recorded programme.
- 2 While playing, You will see a playback screen as shown below.

- To stop displaying the recorded programmes icon, press the **EXIT** button.



The 'Progress Bar'?

This function indicates a possible DVR reshewing section, a current on-screen and real on-broadcasting position, a section of section-recording.

- 1 Indicates movement of recorded programme.
- 2 Indicates status of recorded programme.
- 3 Indicates elapsed playback time.
- 4 Indicates total playback time.
- 5 Indicates a quarter of programme runtime.
- 6 Indicates current playback position.

Using the remote control

You can shift playback to any point within playing the recorded programme.

◀◀ / ▶▶	<p>When playing, repeatedly, press the REW(◀◀) button to speed up ◀◀ -> ◀◀◀◀ -> ◀◀◀◀◀◀ -> ◀◀◀◀◀◀◀◀ -> ◀◀◀◀◀◀◀◀◀◀◀◀ .</p> <p>repeatedly, press the FF(▶▶) button to speed up ▶▶-> ▶▶▶▶ -> ▶▶▶▶▶▶ -> ▶▶▶▶▶▶▶▶ -> ▶▶▶▶▶▶▶▶▶▶ .</p> <ul style="list-style-type: none"> ▪ Pressing these buttons repeatedly increases the fast forward/reverse speed.
◀◀ / ▶▶	<p>Press the ▶▶ button to jump about 20 seconds forward.</p> <ul style="list-style-type: none"> ▪ Pressing the ◀◀ button to jump about 8 seconds backward.
	<p>During playback, press the Pause() button.</p> <ul style="list-style-type: none"> ▪ Still screen is displayed. ▪ Repeatedly press the Pause() button to advance frame by frame. ▪ Press the Pause() button and then use the FF(▶▶) button for slow motion (the ▶ icon is displayed.) ▪ Press the Pause() button and then use the FF(◀◀) button for slow motion (the ◀ icon is displayed.)
◀ / ▶	<ul style="list-style-type: none"> ▪ When using the ◀ or ▶ button during playback a cursor indicating the position can be viewed on the screen.
PLAY(▶)	<p>Press the PLAY(▶) button to return to normal playback.</p>
LIVE TV	<p>Press the LIVE TV button to jump at the front of the programme.</p>
STOP(■)	<ul style="list-style-type: none"> ▪ If you press the STOP(■) button, you can watch set.

DVR (DIGITAL VIDEO RECORDER)

PHOTO LIST

It's available to playback the photo file(*.jpg) in the USB device.


The On Screen Display may be different from your set. Images are an example to assist with the TV operation.

Supports up to four drives.

PHOTO(*.JPEG) supporting file


Baseline: width<=4800, height is no limit

- You can play JPEG files only.
- Only baseline scan is supported among JPEG.
- Non-supported files are displayed in the form of icon.

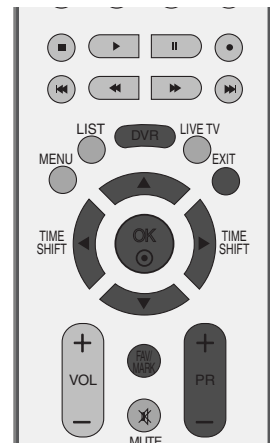

Screen Components

- Press the **DVR** button and then use **▲ / ▼** button to select the **Photo List** menu.

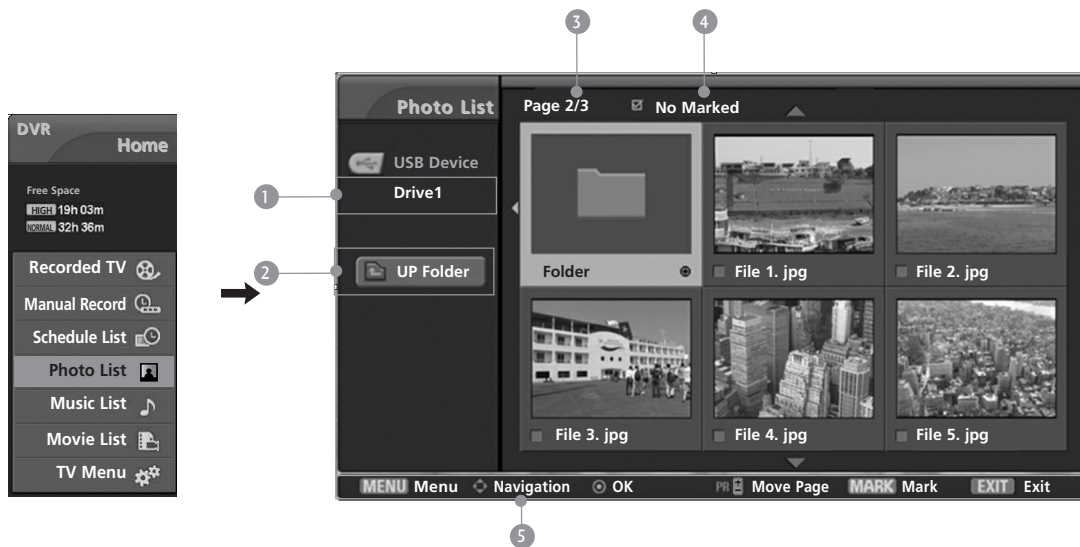

- ① Displays the selected drive
- ② Moves to upper level file
- ③ Current page/Total pages
- ④ Total number of marked thumbnail photos
- ⑤ Corresponding buttons on the remote control


Photo Selection and PopUp Menu

As shown, up to 6 thumbnail photos are listed per page.

- 1 Use ▲ / ▼ / ◀ / ▶ buttons to select the target folder or drive then press **OK**.
- 2 Use the **PR +/-** button to navigation in the thumbnail photo page.
- 3 Use the **MARK** button to mark or unmark a photo. When one or more photos are marked, you can view individual photos or a slide show of the marked photos. If no photos are marked, you can view all photos individually or all photos in the folder in a slide show.
- 4 Use ▲ / ▼ / ◀ / ▶ button to navigation the appropriate thumbnail photos, then press the **OK** button to show the PopUp menu.

- ▶ **View** : Display the selected item.
- ▶ **Mark All** : Mark all photos on the screen.
- ▶ **Unmark All** : Deselect all marked photos.
- ▶ **Cancel** : Close the pop-up menu.

- 5 Repeatedly, press **EXIT** button to return to TV viewing or press the **DVR** button to return to the **Home** menu.

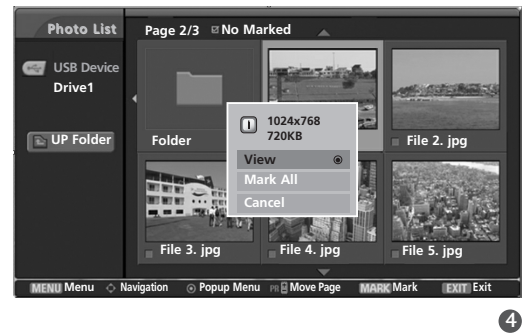

DVR (DIGITAL VIDEO RECORDER)

Set up the menu in Full-Sized Screen

You can change the settings to display photos stored on a USB device, on a full-sized screen.

Detailed operations are available on full-sized photo view screen.

- 1 Use ▲ / ▼ / ◀ / ▶ buttons to select the target folder or drive then press **OK**.
- 2 Use the **PR +/-** button to navigation the thumbnail photo page.
- 3 Use ▲ / ▼ / ◀ / ▶ button to navigation the appropriate thumbnail photos, then press the **OK** button to show the PopUp menu.
- 4 Use ▲ / ▼ button to Move to the **View** menu, then press the **OK** button.
- 5 The selected photo is displayed in full size.

▶ **Slide Show** : When no picture is selected, all photos in the current folder are displayed during slide show. When selected, the selected photos are displayed during slide show. To start slide show, press **OK** button on **Slideshow** .

- Set the time interval of the slide show in **Option**.

▶ **BGM** : Listen to music while viewing photos in full size. To start BGM, press **OK** button on **BGM** .

- Set the BGM device and album in **Option** .

▶ **⤴ (Rotate)** : Rotate photos.

- Rotates the photo 90° clockwise upon **OK** button on **⤴ (Rotate)**.



1 2 3 4




5



The aspect ratio of a photo may change the size of the photo displayed on the screen in full size.

5

- ▶ **Option** : Set values for **Slide Speed** and **Music folder**. Use ◀ / ▶ button to select **Option** and press **OK** button.
 - Use ◀ / ▶ button and **OK** button to set values. Then go to **Ok** and press **OK** to save the settings.
 - You cannot change **Music Folder** while BGM is playing.
- ▶ **Hide** : Hide the menu on the full-sized screen. Use ◀ / ▶ button to select **Hide** and press **OK** button.
 - To see the menu again on the full-sized screen, press **OK** button to display.

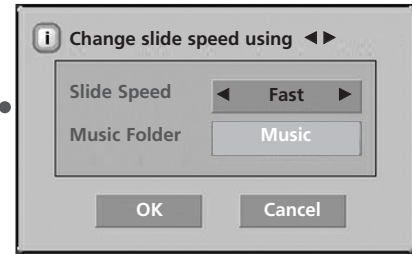

- 6 Use ▲ / ▼ / ◀ / ▶ button to select the previous or next photo.
Use ▲ / ▼ / ◀ / ▶ button to select and control the menu on the full-sized screen.
- 7 Use **EXIT** button to go back to the photo list from the full-sized screen.
- 8 Repeatedly, press **EXIT** button to return to TV viewing or press the **DVR** button to return to the **Home** menu.

! NOTE

- ▶ If it is Progressive JPEG format, some photos may be not decoded.

DVR (DIGITAL VIDEO RECORDER)

MUSIC LIST

Purchased music files(*.MP3) may contain copyright restrictions. Playback of these files may not be supported by this model. Music file on your USB device can be played by this unit.

The On Screen Display may be different from your set. Images are an example to assist with the TV operation.

Supports up to four drives.



MUSIC(*.MP3) supporting file

Bitrate range 8Kbps ~ 320Kbps

•Sampling rate


MPEG1 : 32000, 44100, 48000Hz

MPEG2 : 16000, 24000, 22050Hz

MPEG2.5 : 8000, 11025, 12000Hz

Screen Components

- Press the **DVR** button and then use ▲ / ▼ button to select the **Music List** menu.

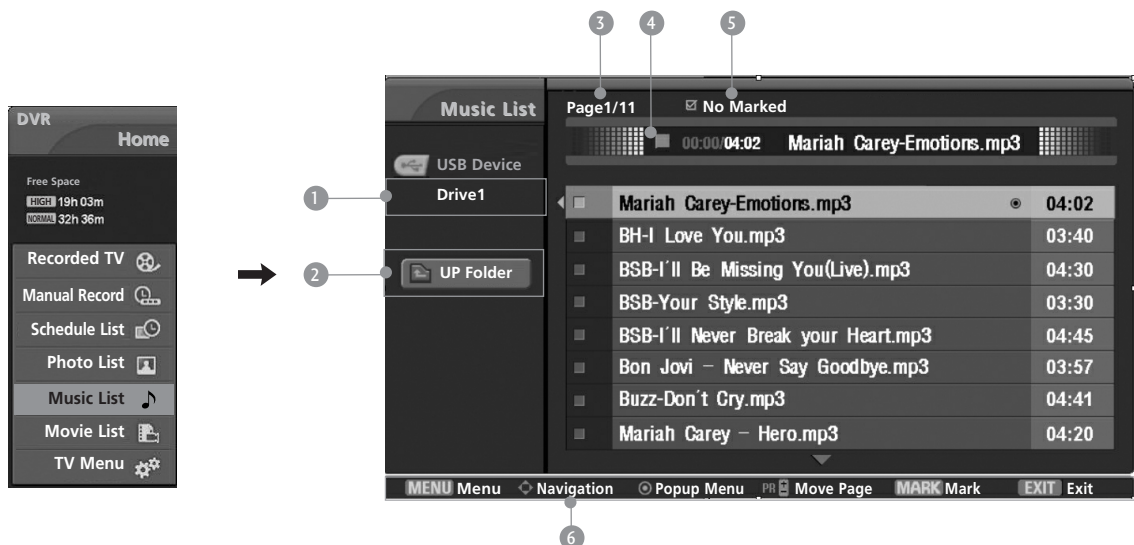

- Displays the selected drive
- Moves to upper level file
- Current page/Total pages
- Current playing time/Total playing time
- Total number of marked musics
- Corresponding buttons on the remote control

Music Selection and PopUp Menu

As shown , up to 8 music titles are listed per page.

- 1 Use ▲ / ▼ / ◀ / ▶ buttons to select the target folder or drive then press **OK**.
- 2 Use the **PR +/-** button to navigation in the music titles page.
- 3 Use **MARK** button to mark or unmark a music. When one or more music files are marked, the marked musics will be played in sequence. For example, if you want to listen to only one music repeatedly, just mark the music only and play it. If no music is marked, all the music in the folder will be played in sequence.
- 4 Use ▲ / ▼ button to navigation the appropriate musics, then press the **OK** button to show up the pop-up menu.

- ▶ **Play** (During stop) : Play the selected musics. Once a music finishes playing, the next selected one will be played. When there are no selected musics to play, the next one in the current folder will be played. If you go to a different folder and press the **OK** button, the current music in playback will stop.
- ▶ **Play Marked** : Play the selected musics. Once a music finishes playing, the next selected one will be played automatically.
- ▶ **Stop Play** (During playback) : Stop the playing musics.
- ▶ **Play With Photo** : Start playing the selected musics and then move to the Photo List.
- ▶ **Mark All** : Mark all musics in the folder.
- ▶ **Unmark All** : Deselect all marked musics.
- ▶ **Cancel** : Close the pop-up menu.

- 5 Repeatedly, press **EXIT** button to return to TV viewing or press the **DVR** button to return to the **Home** menu.



1 2






3 4

DVR (DIGITAL VIDEO RECORDER)

- If you don't press any button for a while during the playing, the play information box (as shown in the below) will float as a screen saver.
- The 'Screen Saver'?
Screen saver is to prevent screen pixel damage due to a fixed image remaining on the screen for a extended period of time.



! NOTE

- ▶ When music is playing,  is displayed in front of the music title.
- ▶ A damaged or corrupted music does not play but displays 00:00 in playtime.
- ▶ A music downloaded from a paid service with copyright protection does not start but displays inappropriate information in playtime.
- ▶ If you press **OK**, , **EXIT** buttons, screen saver is stopped.
- ▶ The **PLAY**(▶), **Pause**(||), , **I<<<**, **>>>I** buttons on the remote control are also available in this mode.

MOVIE LIST

The movie list is activated once USB is detected. It is used when playing movie files on TV.


Displays the movies in the USB folder and supports Play.

Allows playback of all movies in the folder and user desired files.

Editing such as delete and add is not allowed.

It is a movie list that displays folder information and Divx file.

Supports up to four drives.

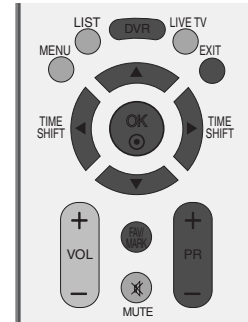

MOVIE(*.avi/*.Divx) supporting file

Video format : DivX3.xx, DivX4.xx, DivX5.xx , XVID1.1.1, XVID1.1.2, XVID1.1.3 , 3IV1, 3IV2, FVFW, DMK2, RMP4, DIV3, DIV4, DIV5, DIV6, MP43, COL1, AP41, nAVI, DX50

Audio format : Mpeg, Mp3, PCM, AC3

Sampling frequency : within 8~48 khz(MP3)


Bit rate : within 8~320 kbps(MP3)

Subtitle format : *.smi/ *.srt/ *.sub(microsub, svsub)/ *.ass/ *.ssa/*.txt(subtext, dvdss)

- DivX may not be played depending on its types or recording methods.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- Max bitrate of playable DivX is 4 M.
- Maximum FPS (Frame Per Second) can be reached only at SD level. FPS is 25 FPS (720*576) or 30 FPS (720*480) depending on Resolution.
- Files of 25 FPS or 30 FPS of higher may not be played properly.
- If the file is recorded with GMC, the unit supports only 1 point of recorded level.
(GMC is the acronym for Global Motion Compensation, a technique used to compensate MPEG Video files.)

Screen Components

- Press the **DVR** button and then use **▲ / ▼** button to select the **Movie List** menu.

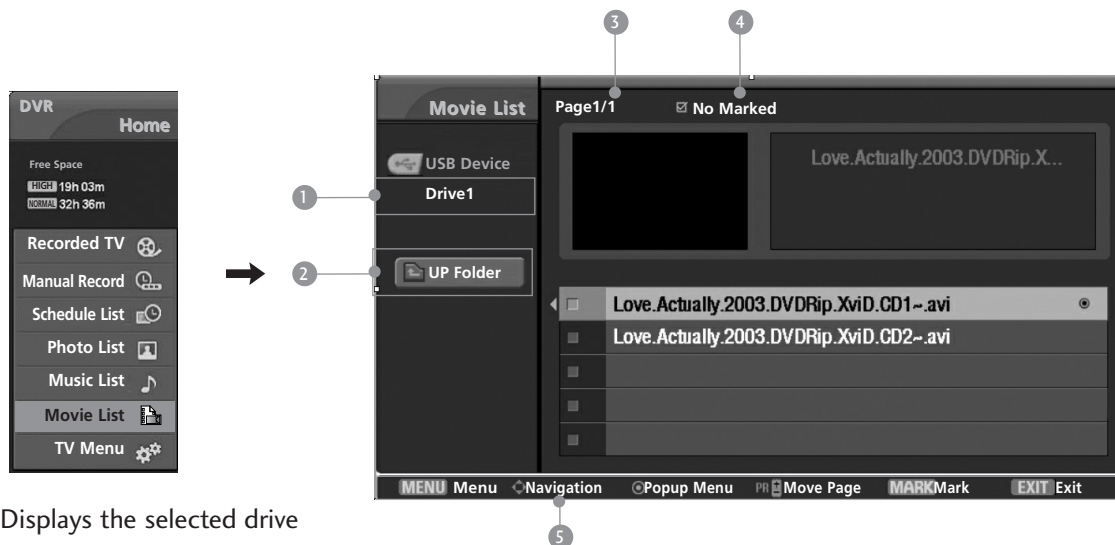

- 1 Displays the selected drive
- 2 Moves to upper level file
- 3 Current page/Total pages
- 4 Total number of marked movies
- 5 Corresponding buttons on the remote control


DVR (DIGITAL VIDEO RECORDER)

Movie Selection and PopUp Menu


- 1 Use ▲ / ▼ / ◀ / ▶ buttons to select the target folder or drive then press **OK**.
- 2 Use the **PR +/-** button to navigation in the movie titles page.
- 3 Use **MARK** button to mark or unmark a movie. When one or more movie files are marked, the marked movies will be played in sequence.
- 4 Use ▲ / ▼ button to navigation the appropriate movies, then press the **OK** button to show up the pop-up menu.

- ▶ **Preview**: Displays the preview video of the current file.
- ▶ **Play**: Play the selected movie.
Divx Play is executed while screen changes.
- ▶ **Mark All**: Mark all Movie in the folder.
- ▶ **Unmark All**: Deselect all marked Movies.
- ▶ **Cancel**: Close the pop-up menu.

- 5 Repeatedly, press **EXIT** button to return to TV viewing or press the **DVR** button to return to the **Home** menu.

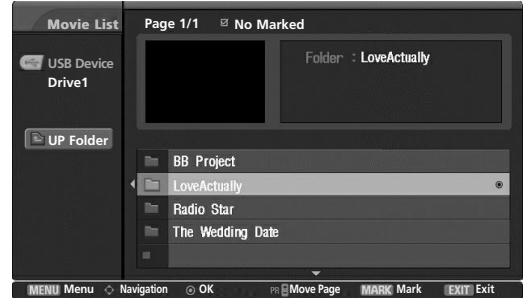

1 2

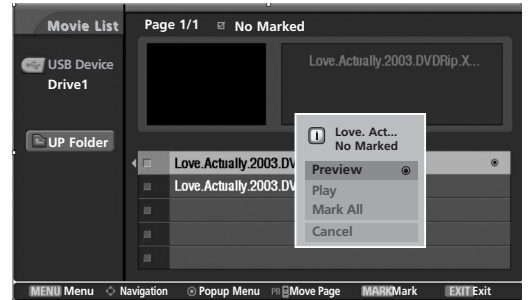


3 4

NOTE

- ▶ In the case of files not supported, a message regarding non-supported file is displayed.

DivX Audio Language & Subtitle Language

- ▶ When DivX is playing, if you press the **DivX** button, this message is displayed.

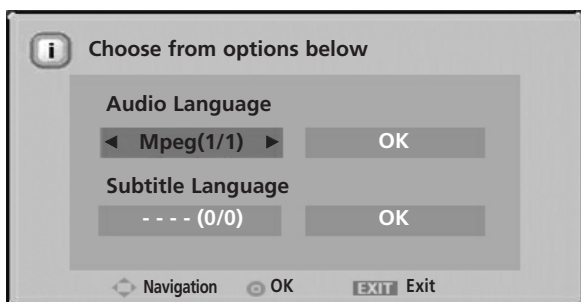


Press the ▲ / ▼ / ◀ / ▶ button to select the desired option.


Supports up to Mpeg, Mp3, PCM, AC3 file.

SUBTITLE


Turns the subtitle control during movie play.

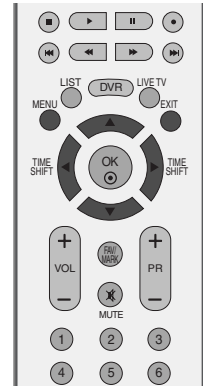

- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.
- 2 Press the ► button and then use ▲ / ▼ button to select **Subtitle**.
- 3 Press the ► button to start **Subtitle**.
- 4 Press the ▲ / ▼ / ◀ / ▶ button to select the desired subtitle option.

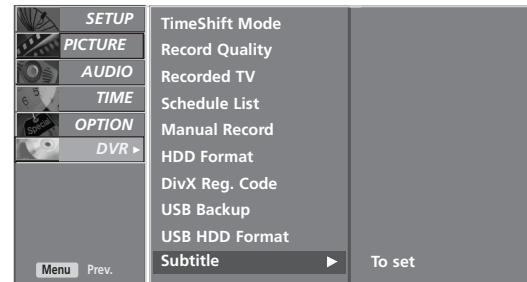

1 2 3

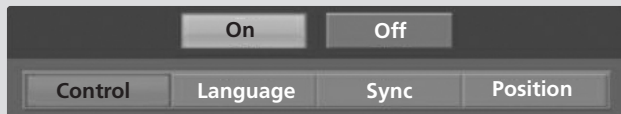 

- **Control** : Turns the position of the subtitle on and off during movie play.
- **Language** : Changes the Language Group of the subtitle during movie play.
- **Sync** : Adjusts the time synchronisation of the subtitle from -10 secs ~ +10 secs by steps of 1 secs during movie play.
- **Position** : Changes the position of the subtitle either up or down during movie play.

DVR (DIGITAL VIDEO RECORDER)

DIVX REGISTRATION CODE

Confirm the DivX registration code number of the TV. Using the registration number, movies can be rented or purchased at www.divx.com/vod.


 
With a DivX registration code from other TV, playback of rented or purchased DivX file is not allowed. (Only DivX files matched with the registration code of the purchased TV are playable.)



1 Press the **MENU** button and then use ▲ / ▼ button to select the **DVR** menu.

2 Press the ► button and then use ▲ / ▼ button to select **DivX Reg. Code**.

3 Press the ► button to start **DivX Reg. Code**.

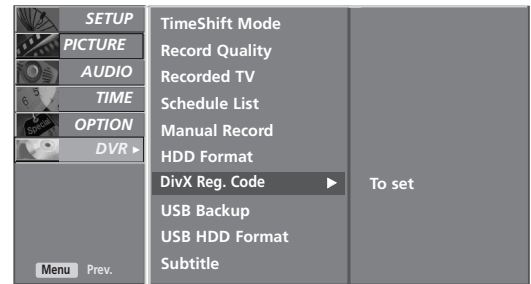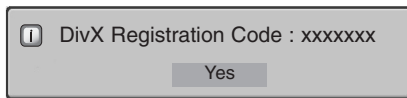

1 2 3

4 Press the **EXIT** button to return to normal TV viewing.




- Official DivX® Certified Product
- Plays all version of DivX® video (including DivX® 6) with standard playback of DivX® media files
- "DivX, DivX Certified, and associated logos are trademarks of DivX, and are under license."

PICTURE CONTROL

WATCHING PIP(PICTURE-IN-PICTURE)

It's not available to use this function on recording programme.


PIP lets you view 2 different inputs (sources) on your TV screen at the same time. One source will be large, and the other source will show a smaller inset image.

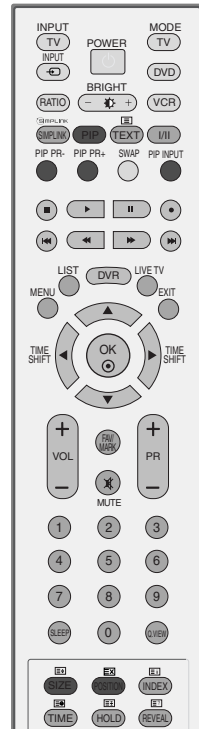

Watching PIP/Double Window

Press the **PIP** button to access the sub picture.

Each press of PIP changes the PIP options as shown below.

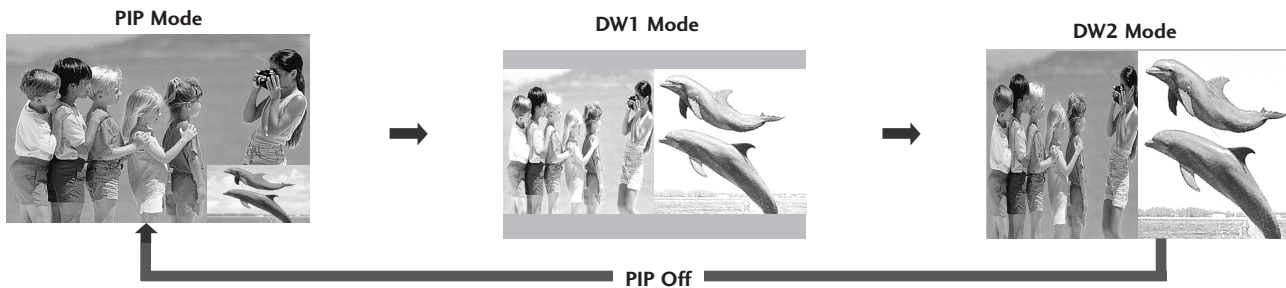

Programme Selection for Sub Picture

Press the **PIP PR +/-** button to select a programme for the sub picture.

The selected programme number is displayed just below the programme number of main picture.

PICTURE CONTROL

Input Source Selection for Sub Picture


Press the **PIP INPUT** button to select the input source for the sub picture.
Each press of **PIP INPUT** button is pressed, each input source for the sub picture is displayed.

Sub Picture Size Adjustment (PIP mode only)

Press the **SIZE** button to adjust the sub picture size.
With **SIZE** button in PIP mode, sub picture is adjusted.

Moving the Sub Picture (PIP mode only)

Press the **POSITION** button.
Repeatedly press the **POSITION** button then sub picture moves left.

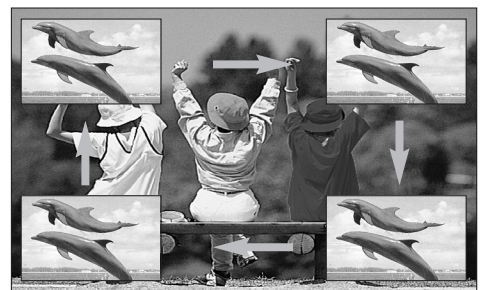


PICTURE SIZE (ASPECT RATIO)CONTROL

You can watch the screen in various picture formats; **16:9**, **Original**, **4:3**, **14:9** and **Zoom1/2**.

If a fixed image is displayed on the screen for a long time, that fixed image may become imprinted on the screen and remain visible.

You can adjust the enlarge proportion using **▲ / ▼** button.


This function works in the following signal.

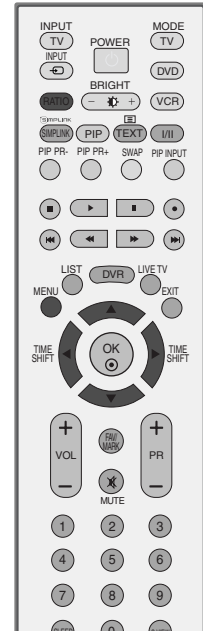

- 1 Press the **RATIO** button repeatedly to select the desired picture format.
You can also adjust **Aspect Ratio** in the **PICTURE** menu.


• 16:9

Following selection will lead you to adjust the picture horizontally, in a linear proportion, to fill the entire screen (useful for viewing 4:3 formatted DVDs).

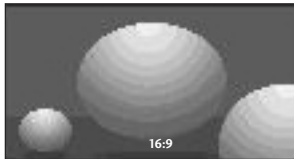


• Original

When your TV receives the wide screen signal, it will be automatically changed to the picture format to be sent.

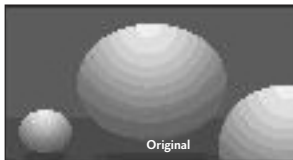

• 4:3

Following selection will lead you to view a picture with an original 4:3 aspect ratio, with gray bars appearing at both the left and right sides.

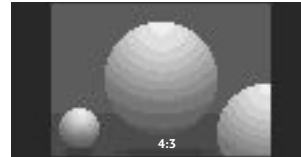

• 14:9


You can enjoy the picture format of 14:9 or general TV programme through the 14:9 mode. The screen 14:9 is viewed just like that the screen 4:3 is magnified to the left / right.



PICTURE CONTROL


• Zoom1

Following selection will lead you to view the picture without any alteration, while filling the entire screen. However, the top and bottom portions of the picture will be cropped.

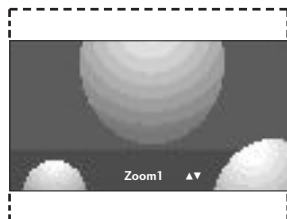

• Zoom2

Choose Zoom2 when you want the picture to be altered, both horizontally extended and vertically cropped. The picture taking a halfway trade off between alteration and screen coverage.

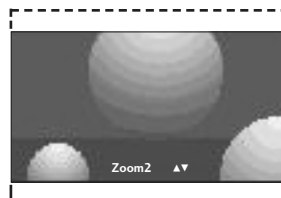


! NOTE

- ▶ You can only select **16:9 (Wide)**, **4:3**, **Zoom 1/2** in Component, HDMI(DTV) mode.
- ▶ You can only select **16:9 (Wide)**, **4:3**, in RGB/HDMI(PC) mode only.
- ▶ You can select **4:3**, **16:9**, **Zoom1**, **Zoom2** in Recorded TV, Movie List, Play back mode only.
- ▶ In Timeshift Delay/Recording Delay function, TV displays the aspect ratio of previous input mode.
- ▶ It's available 16:9 when viewing a jpeg file in photo list.

PRESET PICTURE SETTINGS

Picture Mode-Preset

- Dynamic** Select this option to display with a sharp image.
- Standard** The most general and natural screen display status.
- Mild** Select this option to display with a mild image.
- User 1/2** Select this option to use the user-defined setting.

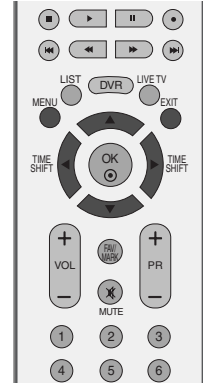


1 Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.

2 Press the ► button and then ▲ / ▼ button to select **Picture Mode**.


3 Press the ► button and then ▲ / ▼ button to select **Dynamic, Standard, Mild, User 1** or **User 2**.

4 Press the **EXIT** button to return to normal TV viewing.

- Picture Mode adjusts the TV for the best picture appearance. Select the preset value in the **Picture Mode** menu based on the programme category.
- Dynamic, Standard and Mild are programmed for optimum picture reproduction at the factory and cannot be changed.

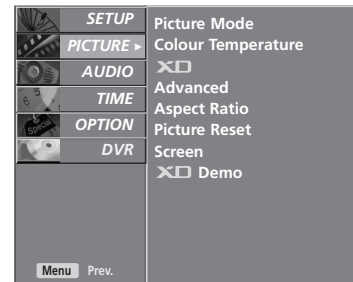

1

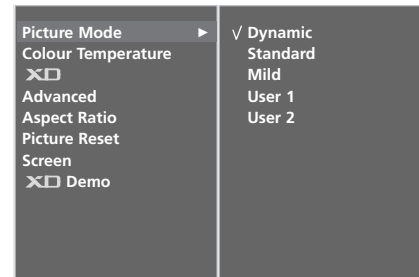

2 3


PICTURE CONTROL

Auto Colour Tone Control(Warm/Medium/Cool)

To initialize values (reset to default settings), select the Cool option.

Choose one of three automatic colour adjustments. Set to warm to enhance hotter colours such as red, or set to cool to see less intense colours with more blue.

It's available to use this function in "User1/2" of **Picture mode** only.

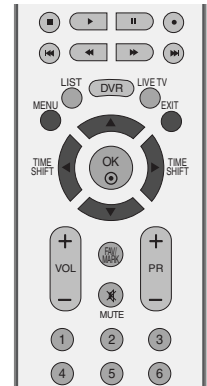


1 Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.


2 Press the ► button and then ▲ / ▼ button to select **Colour Temperature**.

3 Press the ► button and then ▲ / ▼ button to select either **Cool, Medium, Warm** or **User**.

4 Press the **EXIT** button to return to normal TV viewing.

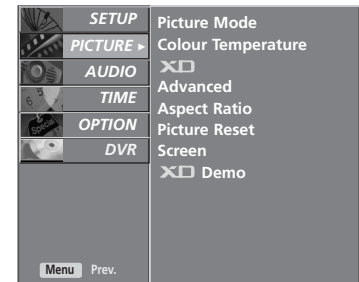

1

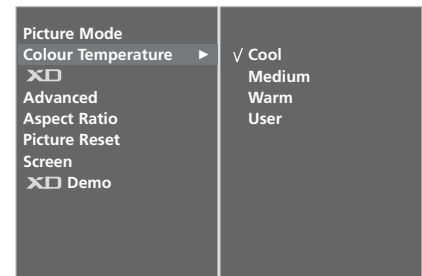

2 3

PICTURE CONTROL

Colour Tone - User option

To adjust red, green, blue to any colour temperature you prefer.

It's available to use this function in “**User1/2**” of **Picture mode** only.



1 Press the **MENU** button and then **▲ / ▼** button to select the **PICTURE** menu.


2 Press the **▶** button and then **▲ / ▼** button to select **Colour Temperature**.

3 Press the **▶** button and then **▲ / ▼** button to select **User**.


4 Press the **▶** button and then **▲ / ▼** button to select **Red**, **Green** or **Blue**.

5 Press the **◀ / ▶** button to make appropriate adjustments.


6 Press the **EXIT** button to return to normal TV viewing.

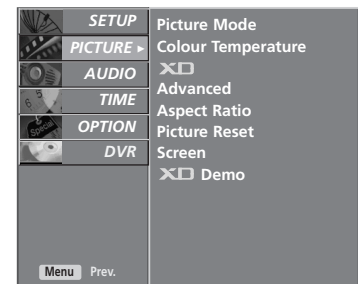

1

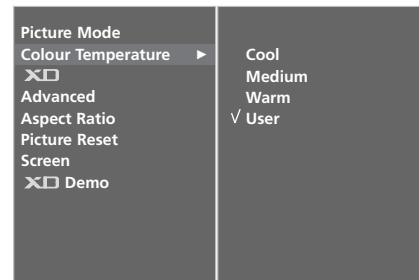

2 3

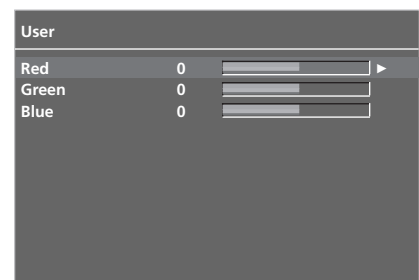


4 5

XD - PICTURE IMPROVEMENT TECHNOLOGY

XD is LG electronic's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.

It's not available to use this function in RGB/HDMI-PC mode.

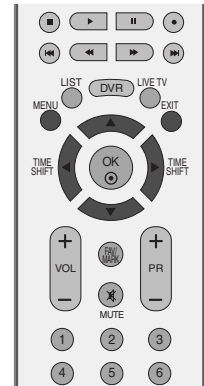


- 1 Press the MENU button and then ▲ / ▼ button to select the **PICTURE** menu.
- 2 Press the ► button and then ▲ / ▼ button to select **XD**.
- 3 Press the ► button and then ▲ / ▼ button to select **Auto** or **Manual**.
- 4 Press the EXIT button to return to TV viewing.

* Selecting the Manual


This menu is activated after selecting the **User1** or **User2** of **Picture Mode**.

- 1 Press the ► button and then ▲ / ▼ button to select **XD Contrast, XD Colour** or **XD NR**.
- 2 Press the ► button and then ▲ / ▼ button to select **On** or **Off**.
- 3 Press the EXIT button to return to normal TV viewing.

- **XD Contrast** : Optimizing the contrast automatically according to the brightness of the reflection.
- **XD Colour** : Adjusting the colours of the reflection automatically to reproduce as closely as possible to the natural colours.
- **XD NR** : Removing the noise up to the point where it does not damage the original picture.

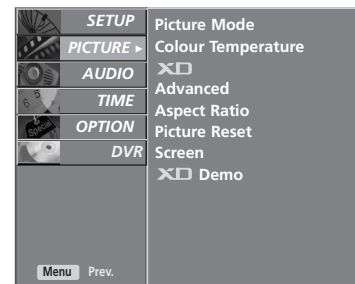

1

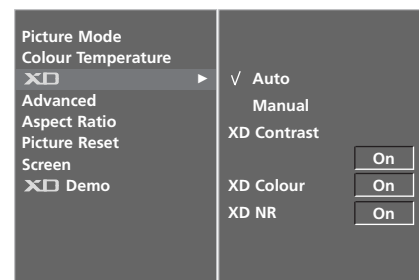


2 3

PICTURE CONTROL


XD DEMO

Use it to see the difference between XD Demo on and XD Demo off.


It's not available to use this function in RGB/HDMI-PC mode.

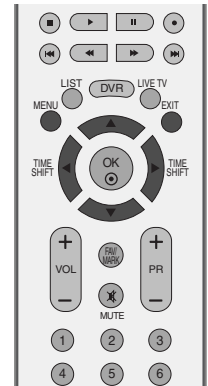

- 1 Press the MENU button and then ▲ / ▼ button to select the **PICTURE** menu.
- 2 Press the ► button and then ▲ / ▼ button to select **XD Demo**.
- 3 Press the ► button to begin **XD Demo**.
- 4 To stop **XD Demo**, press the MENU button.

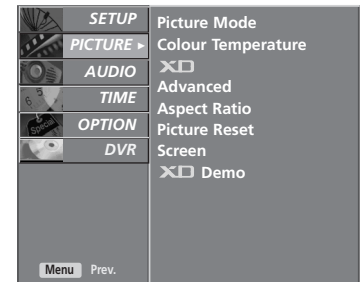

1

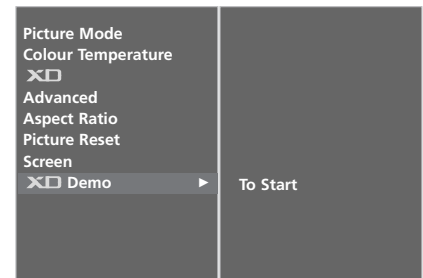

2 3


• XD Demo



ADVANCED - CINEMA

Set up the TV for the best picture appearance for viewing movies.

This feature operates only in Analog TV, AV and Component 480i/576i mode.

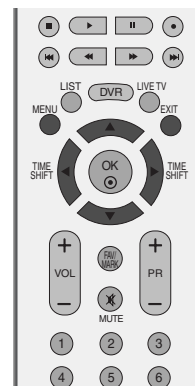


1 Press the **MENU** button and then ▲ / ▼ button to select the **PICTURE** menu.

2 Press the ► button and then ▲ / ▼ button to select **Advanced**.


3 Press the ► button and then ▲ / ▼ button to select **Cinema**.

4 Press the ► button and then ▲ / ▼ button to select **On** or **Off**.


5 Press the **EXIT** button to return to normal TV viewing.

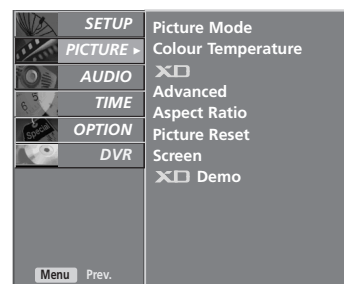

1

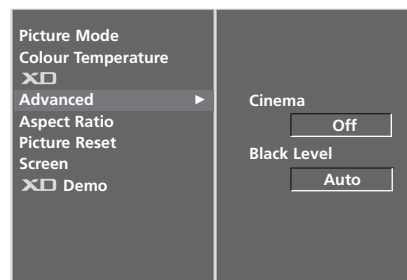

2 3

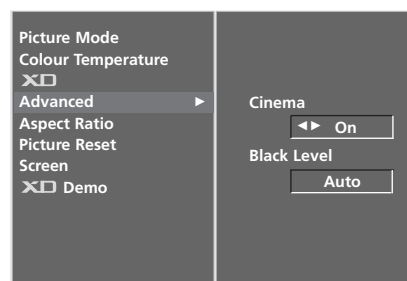


4

PICTURE CONTROL

ADVANCED - BLACK(DARKNESS) LEVEL

When you watch the movie, this function adjusts the set to the best picture appearance. Adjusting the contrast and the brightness of the screen using the black level of the screen.

This function works in the following mode: AV (NTSC-M) or HDMI.

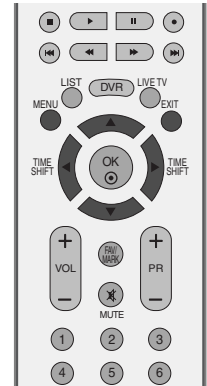

1 Press the **MENU** button and then **▲ / ▼** button to select the **PICTURE** menu.


2 Press the **▶** button and then **▲ / ▼** button to select **Advanced**.

3 Press the **▶** button and then **▲ / ▼** button to select **Black Level**.


4 Press the **▶** button and then **▲ / ▼** button to select **Low** or **High**.

- **Low** : The reflection of the screen gets darker.
- **High** : The reflection of the screen gets brighter.


5 Press the **EXIT** button to return to normal TV viewing.

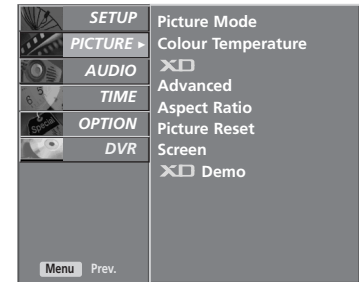

1

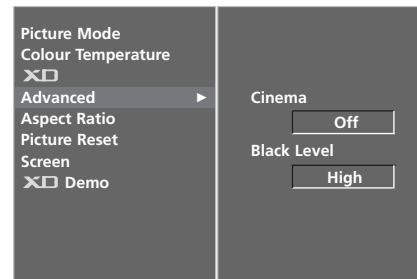

2 3

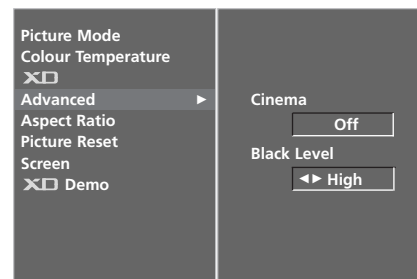

4


! NOTE

■ Auto


Realizing the black level of the screen and set it to High or Low automatically.

PICTURE RESET


Returns to the default settings Picture Mode, Colour Temperature, XD, Advanced, Aspect Ratio at the factory.

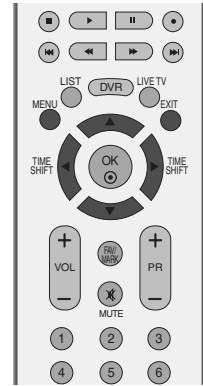

- 1 Press the **MENU** button and then **▲ / ▼** button to select the **PICTURE** menu.
- 2 Press the **▶** button and then **▲ / ▼** button to select **Picture Reset**.
- 3 Press the **▶** button to initialize the adjusted value.
- 4 Press the **EXIT** button to return to normal TV viewing.

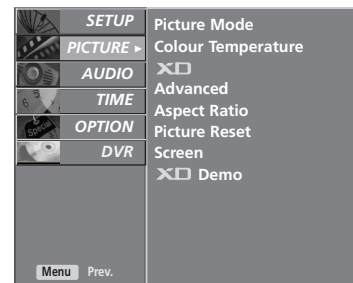

1

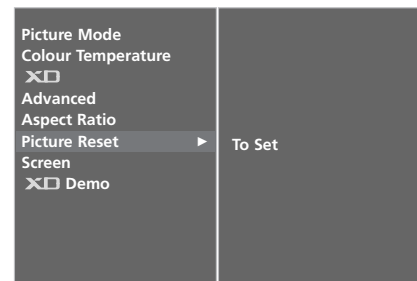

2 3

PICTURE CONTROL

IMAGE STICKING MINIMIZATION(ISM)METHOD

A frozen of still picture from a PC/video game displayed on the screen for prolonged periods will result in a ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the set's screen for a long period of time.

White wash

White wash removes permanent images from the screen.



Note: An excessive permanent image may be impossible to clear entirely with White Wash.

Orbiter


Orbiter may help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.

Inversion

This is the function to invert the panel colour of the screen. The panel colour is automatically inverted every 30 minutes.

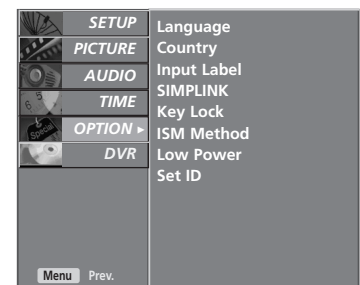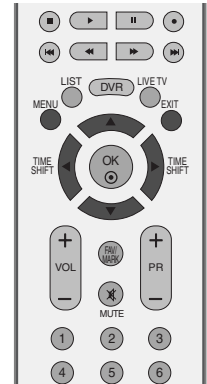

1

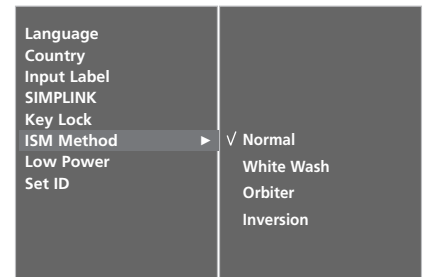

2 3

1 Press the **MENU** button and then **▲ / ▼** button to select the **OPTION** menu.


2 Press the **▶** button and then **▲ / ▼** button to select **ISM Method**.

3 Press the **▶** button and then **▲ / ▼** button to select either **Normal**, **White Wash**, **Orbiter** or **Inversion**. If you unnecessary to set this function, set **Normal**.

4 Press the **EXIT** button to return to TV viewing.

LOW-POWER PICTURE MODE

This is the function to reduce the power consumption of the set.

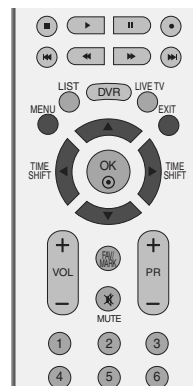

1 Press the **MENU** button and then ▲ / ▼ button to select the **OPTION** menu.


2 Press the ► button and then ▲ / ▼ button to select **Low Power**.

3 Press the ► button and then ▲ / ▼ button to select **On** or **Off**.

4 Press the **EXIT** button to return to TV viewing.



1

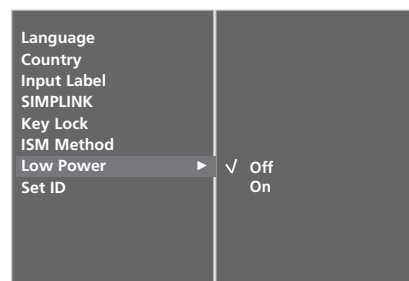


2 3


SOUND & LANGUAGE CONTROL

AUTO VOLUME LEVELER


Auto Volume automatically keeps on an equal volume level even if you change programmes.

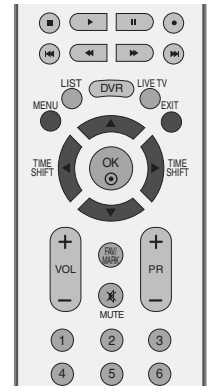

- 1 Press the **MENU** button and then **▲ / ▼** button to select the **AUDIO** menu.
- 2 Press the **▶** button and then **▲ / ▼** button to select **Auto Volume**.
- 3 Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.
- 4 Press the **EXIT** button to return to normal TV viewing.

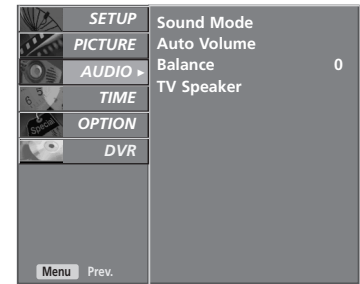

1

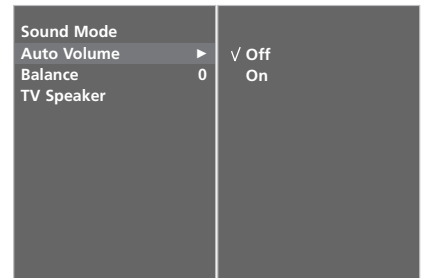

2 3

PRESET SOUND SETTINGS-SOUND MODE

You can select your preferred sound setting; SRS TSXT, Standard, Music, Movie or Sports and you can also adjust the sound frequency of the equalizer.

Sound Mode lets you enjoy the best sound without any Special adjustment because the TV sets the appropriate sound options based on the programme content.

SRS TSXT, Standard, Music, Movie, and Sports are preset for good sound quality at the factory and are not adjustable.

SRS TSXT Select this option to sound realistic.


Standard The most commanding and natural audio.

Music Select this option to enjoy the original sound when listening to the music.


Movie Select this option to enjoy sublime sound.

Sports Select this option to watch sports broadcasting.

User Select this option to use the user-defined audio settings.

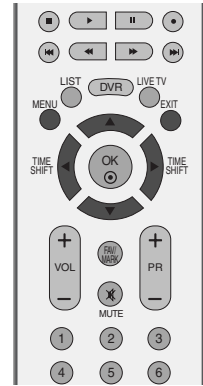

1

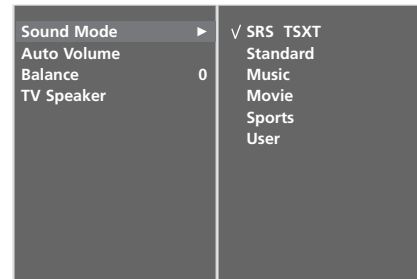

2 3

1 Press the **MENU** button and then **▲ / ▼** button to select the **AUDIO** menu.

2 Press the **▶** button and then **▲ / ▼** button to select **Sound Mode**.

3 Press the **▶** button and then **▲ / ▼** button to select **SRS TSXT, Standard, Music, Movie, Sports** or **User**.


4 Press the **EXIT** button to return to normal TV viewing.

▶ **SRS** is a trademark of SRS Labs, Inc.
 ▶ TruSurround XT technology is incorporated under license from SRS Labs, Inc.

SOUND & LANGUAGE CONTROL

SOUND SETTING ADJUSTMENT -USER MODE

Adjust the sound equalizer.

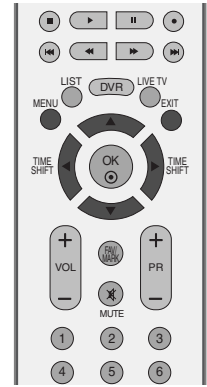

1 Press the **MENU** button and then ▲ / ▼ button to select the **AUDIO** menu.


2 Press the ► button and then ▲ / ▼ button to select **Sound Mode**.

3 Press the ► button and then ▲ / ▼ button to select **User**.


4 Press the ► button.

5 Select a sound band by pressing the ◀ / ▶ button. Make appropriate sound level with the ▲ / ▼ button.


6 Press the **EXIT** button to return to normal TV viewing.

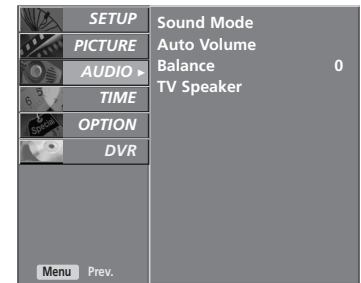

1

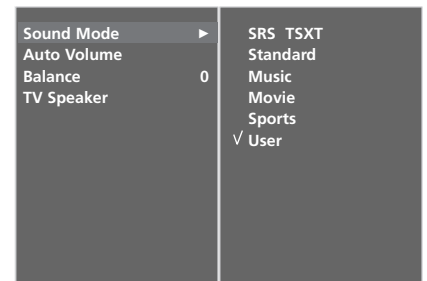


2 3 4

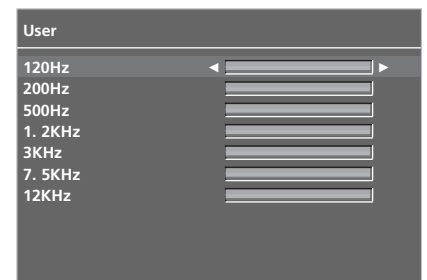

5

BALANCE

You can adjust the sound balance of speaker to the levels you prefer.

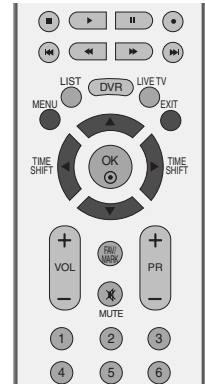


1 Press the **MENU** button and then ▲ / ▼ button to select the **AUDIO** menu.


2 Press the ► button and then ▲ / ▼ button to select **Balance**.

3 Press the ► button and then ◀ / ▶ button to make desired adjustment.

4 Press the **EXIT** button to return to normal TV viewing.

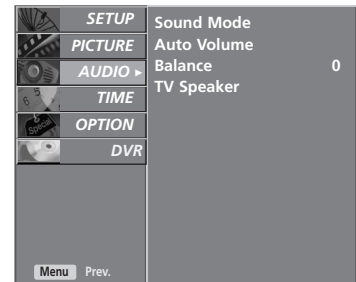

1

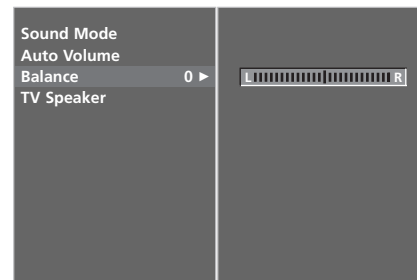

2 3

SOUND & LANGUAGE CONTROL

TV SPEAKER ON/OFF SETUP

You can adjust the internal speaker status.

In AV, COMPONENT, RGB and HDMI mode, internal speaker audio can be outputted even though there is no video signal.

If you want to use your external hi-fi stereo system, turn off the internal speakers of the set.




1 Press the **MENU** button and then **▲ / ▼** button to select the **AUDIO** menu.


2 Press the **▶** button and then **▲ / ▼** button to select **TV Speaker**.

3 Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.

4 Press the **EXIT** button to return to normal TV viewing.

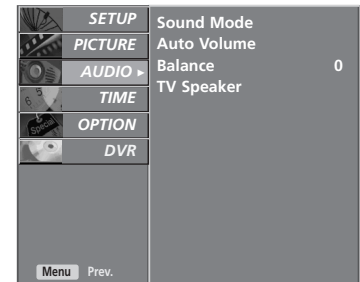

1

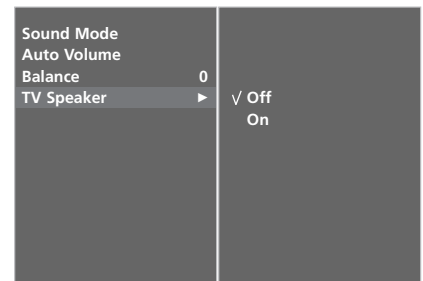


2 3

I/II

Stereo/Dual Reception

When a programme is selected, the sound information for the station appears after the programme number and station name disappear.

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I

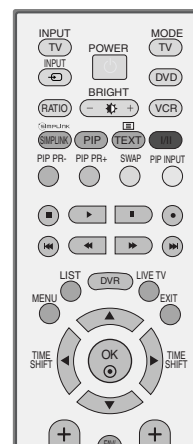

■ Mono sound selection

If the stereo signal is weak in stereo reception, you can switch to mono by pressing the I/II button twice. In mono reception, the depth of sound is improved. To switch back to stereo, press the I/II button twice again.

■ Language selection for dual language broadcast

If a programme received two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the I/II button repeatedly.

- DUAL I** Sends the primary broadcast language to the loudspeakers.
- DUAL II** Sends the secondary broadcast language to the loudspeakers.
- DUAL I+II** Sends a separate language to each loudspeaker.

SOUND & LANGUAGE CONTROL

NICAM Reception

If the set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the I/II button repeatedly.

-
- 1 When **NICAM mono** is received, you can select **NICAM MONO** or **FM MONO**.
 - 2 When **NICAM stereo** is received, you can select **NICAM STEREO** or **FM MONO**.
If the stereo signal is weak, switch to **FM MONO**.
 - 3 When **NICAM dual** is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**.
-

Speaker Sound Output Selection

In AV, Component, RGB and HDMI mode, you can select output sound for the left and right loudspeakers.

Repeatedly press the I/II button to select the sound output.

L+R: Audio signal from audio L input is sent to the left loudspeaker and audio signal from audio R input is sent to the right loudspeaker.

L+L: Audio signal from audio L input is sent to left and right loudspeakers.

R+R: Audio signal from audio R input is sent to left and right loudspeakers.

ON-SCREEN MENU LANGUAGE / COUNTRY SELECTION

Installation guide menu appears on TV screen when it is turned on for the first time.

- 1 Press the ▲ / ▼ / ◀ / ▶ button and then, **OK** button to select your desired language.
- 2 Press the ▲ / ▼ / ◀ / ▶ button and then, **OK** button to select your country.

* If you want to change Language/ Country selection

- 1 Press the **MENU** button and then use ▲ / ▼ button to select the **OPTION** menu.
- 2 Press the ▶ button and then use ▲ / ▼ button to select **Language**.
The menus can be shown on the screen in the selected language.
Or, Press the ▶ button and then use ▲ / ▼ button to select **Country**.
- 3 Press the ▶ button and then use ▲ / ▼ button to select your desired language or country.
- 4 Press the **OK** button.
- 5 Press the **EXIT** button to return to normal TV viewing.



! NOTE

- ▶ If you don't finish set up **Installation Guide** by pressing **EXIT** button or time out of OSD (On Screen Display) display, it will continuously appear until completing set up whenever the set is turned on.
- ▶ If you select wrong local country, the teletext may not appear correctly on the screen and some problem may happen during teletext operation.

TIME SETTING

CLOCK SETUP

You must set the time correctly before using on/off time function.

If current time setting is erased by a power failure or the set is unplugged, reset the clock.



1 Press the **MENU** button and then ▲ / ▼ button to select the **TIME** menu.

2 Press the ► button and then ▲ / ▼ button to select **Clock**.


3 Press the ► button and then ◀ / ▶ button to select either the year, date, or time option.

4 Once selected, use the ▲ / ▼ button to set the year, date, and time options.

5 Press the **EXIT** button to return to normal TV viewing.



1

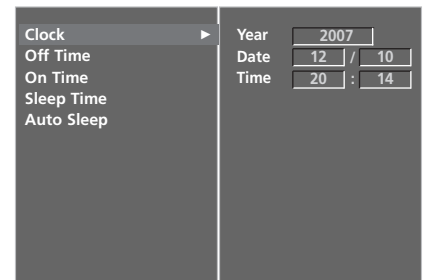

2 3 4

AUTO ON/OFF TIMER SETTING

The Off Time automatically switches the set to standby at the preset time.

Two hours after the set is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed.

Once the on time/off time is set, these functions operate daily at the preset time.

Off Time function overrides On Timer function if they are set both to the same time.

The set must be in standby mode for the On Timer to work.



1 Press the **MENU** button and then ▲ / ▼ button to select the **TIME** menu.

2 Press the ► button and then ▲ / ▼ button to select **On/Off Time**.

3 Press the ► button and then ▲ / ▼ button to select **On**.
• To cancel **On/Off Time** function, select **Off**.

4 Press the ► button and then ▲ / ▼ button to set the hour.

5 Press the ► button and then ▲ / ▼ button to set the minutes.


6 **For only On Time function**

- **Programme:** Press the ► button and then ▲ / ▼ button to select the programme.
- **Volume:** Press the ► button and then ▲ / ▼ button to adjust volume level at turn-on.

7 Press the **EXIT** button to return to normal TV viewing.



1

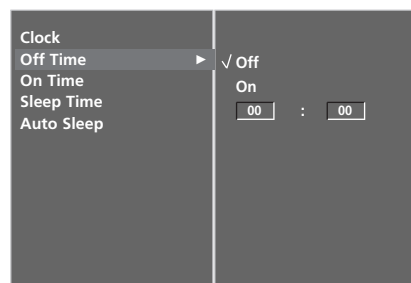

2 3




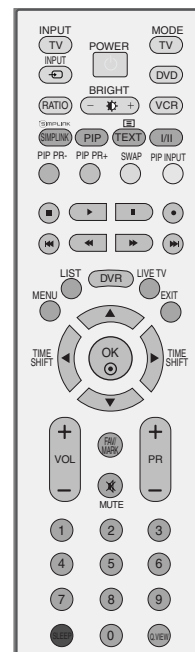
4 5 6

TIME SETTING


SLEEP TIMER SETTING

You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time has elapsed.


- 1 Press the **SLEEP** button repeatedly to select the number of minutes. The display '  - - -Min ' will appear on the screen, followed by 10, 20, 30, 60, 90, 120, 180 and 240.
- 2 When the number of minutes you want is displayed on the screen, the timer begins to count down from the number of minutes selected.



■ You can also set up the Sleep Time in the **TIME** menu.

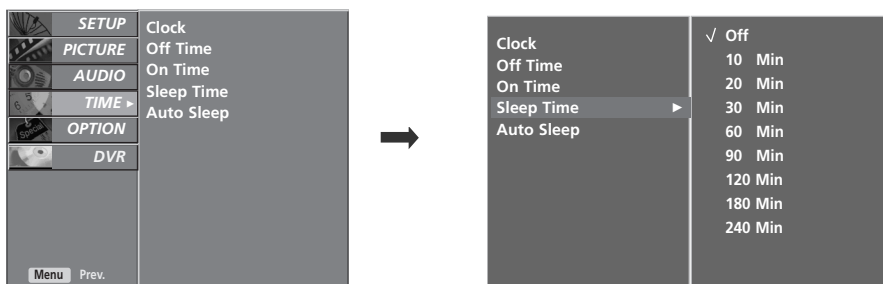


! NOTE

- ▶ To view the remaining sleep time, press the **SLEEP** button once.
- ▶ To cancel the sleep time, repeatedly press the **SLEEP** button until the display '  - - -Min ' appears.
- ▶ When you switch the set off, the set releases the preset sleep time.

AUTO SHUT-OFF SETTING

If set to on and there is no input signal, the TV turns off automatically after 10 minutes.

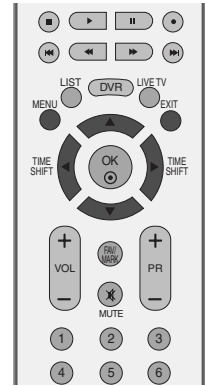

1 Press the **MENU** button and then **▲ / ▼** button to select the **TIME** menu.

2 Press the **▶** button and then **▲ / ▼** button to select **Auto Sleep**.

3 Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.

4 Press the **EXIT** button to return to normal TV viewing.



TELETEXT

This feature is not available in all countries.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

SWITCH ON/OFF

Press the **TEXT** button to switch to teletext. The initial page or last page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** or **EXIT** button to switch off teletext. The previous mode reappears.

SIMPLE TEXT

■ Page selection

- 1 Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
- 2 The **PR +/-** button can be used to select the preceding or following page.

TOP TEXT

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

■ Block / group / page selection

- ① With the blue button you can progress from block to block.
- ② Use the yellow button to proceed to the next group with automatic overflow to the next block.
- ③ With the green button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the **PR +** button can be used.
- ④ The red button permits to return to previous selection. Alternatively the **PR -** button can be used.


■ Direct page selection

Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

■ Page selection

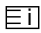- ① Press the  button to select the index page.
- ② You can select the pages which are colour coded along the bottom line with the same coloured buttons.
- ③ Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
- ④ The **PR +/-** button can be used to select the preceding or following page.

SPECIAL TELETEXT FUNCTIONS



■ REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.
Press this button again to remove the information from the display.



■ SIZE

Selects double height text.
Press this button to enlarge the top half of the page.
Press this button again to enlarge the bottom half of the page.
Press this button again to return to the normal display.



■ UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The display will appear at the top left hand corner of the screen. When the updated page is available then display will change to the page number.
Press this button to view the updated teletext page.



■ TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen.
Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/GREEN, PR +/- or NUMBER buttons.
Press again to exit this function.



■ HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited. To continue press this button again.

APPENDIX

TROUBLESHOOTING

The operation does not work normally.

The remote control doesn't work

- Check to see if there is any object between the product and the remote control causing obstruction.
- Are batteries installed with correct polarity (+ to +, - to -)?
- Correct remote operating mode set: TV, VCR etc.?
- Install new batteries.

Power is suddenly turned off

- Is the sleep timer set?
- Check the power control settings. Power interrupted
- No broadcast on station tuned with Auto off activated.

The video function does not work.

No picture & No sound

- Check whether the product is turned on.
- Try another channel. The problem may be with the broadcast.
- Is the power cord inserted into wall power outlet?
- Check your antenna direction and/or location.
- Test the wall power outlet, plug another product's power cord into the outlet where the product's power cord was plugged in.

Picture appears slowly after switching on

- This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.

No or poor colour or poor picture

- Adjust Colour in menu option.
- Keep a sufficient distance between the product and the VCR.
- Try another channel. The problem may be with the broadcast.
- Are the video cables installed properly?
- Activate any function to restore the brightness of the picture.

Horizontal/vertical bars or picture shaking

- Check for local interference such as an electrical appliance or power tool.

Poor reception on some channels

- Station or cable product experiencing problems, tune to another station.
- Station signal is weak, reorient antenna to receive weaker station.
- Check for sources of possible interference.

Lines or streaks in pictures

- Check antenna (Change the direction of the antenna).

APPENDIX

The audio function does not work.

Picture OK & No sound	<ul style="list-style-type: none">■ Press the VOL(or Volume) button.■ Sound muted? Press MUTE button.■ Try another channel. The problem may be with the broadcast.■ Are the audio cables installed properly?
No output from one of the speakers	<ul style="list-style-type: none">■ Adjust Balance in menu option.
Unusual sound from inside the product	<ul style="list-style-type: none">■ A change in ambient humidity or temperature may result in an unusual noise when the product is turned on or off and does not indicate a fault with the product.

There is a problem in PC mode. (Only PC mode applied)

The signal is out of range.	<ul style="list-style-type: none">■ Adjust resolution, horizontal frequency, or vertical frequency.■ Check the input source.
Vertical bar or stripe on background & Horizontal Noise & Incorrect position	<ul style="list-style-type: none">■ Work the Auto configure or adjust clock, phase, or H/V position.
Screen colour is unstable or single colour	<ul style="list-style-type: none">■ Check the signal cable.■ Reinstall the PC video card.

MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the Screen

- 1 Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- 2 Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Please be sure not to use a wet cloth.

Extended Absence

CAUTION

- ▶ If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord to protect against possible damage from lightning or power surges.

APPENDIX

PRODUCT SPECIFICATIONS

MODELS		42PT8*	50PT8*
		42PT81-ZB	50PT81-ZB
Dimensions (Width x Height x Depth)	with stand	1130.0 x 768.1 x 310.4 mm 44.5 x 30.2 x 12.2 inches	1308.0 x 906.1 x 370.0mm 51.5 x 35.7 x 14.6 inches
	without stand	1130.0 x 715.0 x 85.0 mm 44.5 x 28.1 x 3.3 inches	1308.0x 845 x 89.5 mm 51.5 x 33.2 x 3.5 inches
Weight	with stand	31.05kg / 68.5 lbs	42.72kg / 94.2 lbs
	without stand	2705kg / 59.6lbs	38.02kg / 83.8lbs
Power requirement		AC100-240V~ 50/60Hz 3.5A	AC100-240V~ 50/60Hz 4.5A
Power Consumption		330W	450W
Television System		PAL/SECAM B/G/D/K, PAL I/II, SECAM L/L'	
Program Coverage		VHF: E2~E12, UHF: E21 ~ E69, CATV: S1 ~ S20, HYPER: S21 ~ S47	
External Antenna Impedance		75 Ω	
Environment condition	Operating Temperature	0 ~ 40°C / 32 ~ 104°F	
	Operating Humidity	Less than 80%	
	Storage Temperature	-20 ~ 60°C / -4 ~ 140°F	
	Storage Humidity	Less than 85%	

- The specifications shown above may be changed without prior notice for quality improvement.

PROGRAMMING THE REMOTE CONTROL

The remote is a multi-brand or a universal remote. It can be programmed to operate most remote-controllable devices of other manufacturers.

Note that the remote may not control all models of other brands.

Programming a code into a remote mode

- 1** Test your remote control.
To find out whether your remote control can operate the component without programming, turn on the component such as a VCR and press the corresponding mode button (such as a **DVD** or **VCR**) on the remote control, while pointing at the component. Test the **POWER** and **PR + / -** buttons to see if the component responds properly. If not, the remote requires programming to operate the device.
- 2** Turn on the component to be programmed, then press the corresponding mode button (such as a **DVD** or **VCR**) on the remote control. The remote control button of desired device is lighted.
- 3** Press the **MENU** and **MUTE** buttons simultaneously, the remote control is ready to be programmed for the code.
- 4** Enter a code number using the number buttons on the remote control. Programming code numbers for the corresponding component can be found on the following pages. Again, if the code is correct, the device will turn off.
- 5** Press the **MENU** button to store the code.
- 6** Test the remote control functions to see if the component responds properly. If not, repeat from step 2.

APPENDIX

VCR

Brand	Codes	Brand	Codes	Brand	Codes
AIWA	034	MAGNAVOX	031 033 034 041	SAMSUNG	032 040 102 104
AKAI	016 043 046 124 125 146		067 068		105 107 109 112
AMPRO	072	MARANTZ	012 031 033 067 069		113 115 120 122 125
ANAM	031 033 103	MARTA	101	SANSUI	022 043 048 135
AUDIO DYNAMICS	012 023 039 043	MATSUI	027 030	SANYO	003 007 010 014
BROKSONIC	035 037 129	MEI	031 033		102 134
CANON	028 031 033	MEMOREX	003 010 014 031 033 034 053 072 101 102 134 139	SCOTT	017 037 112 129 131
CAPEHART	108			SEARS	003 008 009 010 013 014 017 020 031 042 073 081 101
CRAIG	003 040 135	MGA	045 046 059	SHARP	031 054 149
CURTIS MATHES	031 033 041	MINOLTA	013 020	SHINTOM	024
DAEWOO	005 007 010 064 065 108 110 111 112 116 117 119	MITSUBISHI	013 020 045 046 049 051 059 061 151	SONY	003 009 031 052 056 057 058 076 077 078 149
DAYTRON	108	MTC	034 040	SOUNDESIGN	034
DBX	012 023 039 043	MULTITECH	024 034	STS	013
DYNATECH	034 053	NEC	012 023 039 043 048	SYLVANIA	031 033 034 059 067
ELECTROHOME	059	NORDMENDE	043	SYMPHONIC	034
EMERSON	006 017 025 027 029 031 034 035 036 037 046 101 129 131 138 153	OPTONICA	053 054	TANDY	010 034
FISHER	003 008 009 010	PANASONIC	066 070 074 083 133 140 145	TATUNG	039 043
FUNAI	034	PENTAX	013 020 031 033 063	TEAC	034 039 043
GE	031 033 063 072 107 109 144 147	PHILCO	031 034 067	TECHNICS	031 033 070
GO VIDEO	132 136	PHILIPS	031 033 034 054 067 071 101	TEKNIKA	019 031 033 034 101
HARMAN KARDON	012 045	PILOT	101	THOMAS	034
HITACHI	004 018 026 034 043 063 137 150	PIONEER	013 021 048	TMK	006
INSTANTREPLAY	031 033	PORTLAND	108	TOSHIBA	008 013 042 047 059 082 112 131
JCL	031 033	PULSAR	072	TOTEVISION	040 101
JCPENNY	012 013 015 033 040 066 101	QUARTZ	011 014	UNITECH	040
JENSEN	043	QUASAR	033 066 075 145	VECTOR RESEARCH	012
JVC	012 031 033 043 048 050 055 060 130 150 152	RCA	013 020 033 034 040 041 062 063 107 109 140 144 145 147	VICTOR	048
KENWOOD	014 034 039 043 047 048	REALISTIC	003 008 010 014 031 033 034 040 053 054 101	VIDEO CONCEPTS	012 034 046
LG (GOLDSTAR)	001 012 013 020 101 106 114 123			VIDEOSONIC	040
LLOYD	034	RICO	058	WARDS	003 013 017 024 031 033 034 040 053 054 131
LXI	003 009 013 014 017 034 101 106	RUNCO	148	YAMAHA	012 034 039 043
MAGIN	040	SALORA	014	ZENITH	034 048 056 058 072 080 101

DVD

Brand	Codes	Brand	Codes	Brand	Codes
APEX DIGITAL	022	mitsubishi	002	RCA	005 006
DENON	020 014	NAD	023	SAMSUNG	011 015
GE	005 006	ONKYO	008 017	SONY	007
HARMAN KARDON	027	PANASONIC	003 009	THOMPSON	005 006
JVC	012	PHILIPS	013	TOSHIBA	019 008
LG	001 010 016 025	PIONEER	004 026	YAMAHA	009 018
MAGNAVOX	013	PROCEED	021	ZENITH	010 016 025
MARANTZ	024	PROSCAN	005 006		

IR CODES


1. How to Connect

- Connect your wired remote control to the Remote Control port on the TV.

2. Remote Control IR Codes

■ Output waveform


Single pulse, modulated with 37.917KHz signal at 455KHz

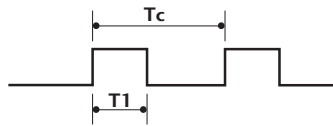


Carrier frequency
 $FCAR = 1/TC = fOSC/12$
 Duty ratio = $T1/TC = 1/3$

■ Configuration of frame

 
1st frame

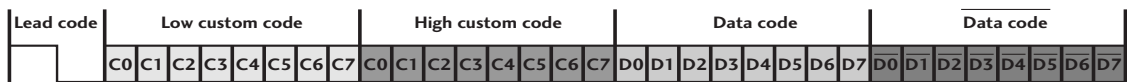


Repeat frame

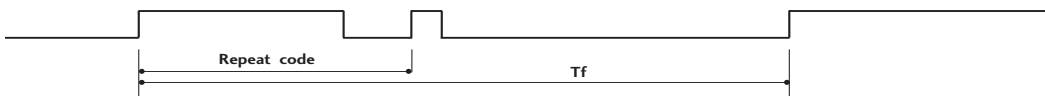 

■ Lead code

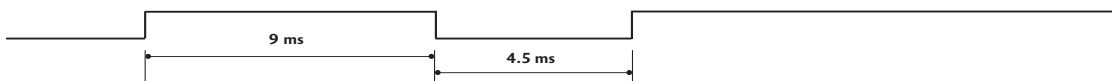 

■ Repeat code

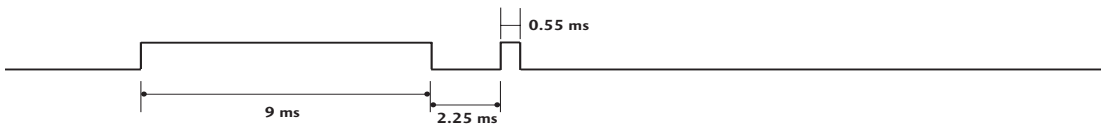


■ Bit description



■ Frame interval: Tf

 The waveform is transmitted as long as a key is depressed.

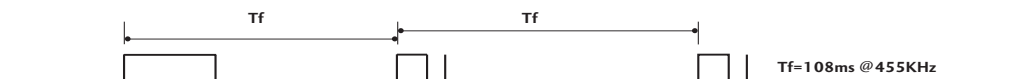

Code (Hexa)	Function	Note
0F	TV	R/C BUTTON
08	POWER	R/C BUTTON(POWER ON/OFF)
0B	INPUT	R/C BUTTON
79	RATIO	R/C BUTTON
E0	BRIGHTNESS +	R/C BUTTON
E1	BRIGHTNESS -	R/C BUTTON
7E	SIMPLINK	R/C BUTTON
60	PIP	R/C BUTTON
20	TEXT	R/C BUTTON
0A	I/II	R/C BUTTON
72	PIP PR-(RED)	R/C BUTTON
71	PIP PR+(GREEN)	R/C BUTTON
63	SWAP(YELLOW)	R/C BUTTON
61	PIP INPUT(CYAN)	R/C BUTTON
B1	DVR STOP(■)	R/C BUTTON
B0	DVR PLAY(▶)	R/C BUTTON
BA	DVR PAUSE(II)	R/C BUTTON
BD	DVR REC(●)	R/C BUTTON
B2	I◀◀	R/C BUTTON
8F	◀◀	R/C BUTTON
8E	▶▶	R/C BUTTON
B3	▶▶I	R/C BUTTON
43	MENU	R/C BUTTON
53	LIST	R/C BUTTON
C8	DVR	R/C BUTTON
9E	LIVE TV	R/C BUTTON
5B	EXIT	R/C BUTTON
40	UP(▲)	R/C BUTTON
41	DOWN(▼)	R/C BUTTON
07	LEFT(◀)	R/C BUTTON
06	RIGHT(▶)	R/C BUTTON
44	OK(◎)	R/C BUTTON
02	VOL +	R/C BUTTON
03	VOL -	R/C BUTTON
00	PR +	R/C BUTTON
01	PR -	R/C BUTTON
1E	FAV/MARK	R/C BUTTON
09	MUTE	R/C BUTTON
11	Number Key 1	R/C BUTTON
12	Number Key 2	R/C BUTTON
13	Number Key 3	R/C BUTTON
14	Number Key 4	R/C BUTTON
15	Number Key 5	R/C BUTTON
16	Number Key 6	R/C BUTTON
17	Number Key 7	R/C BUTTON
18	Number Key 8	R/C BUTTON
19	Number Key 9	R/C BUTTON
10	Number Key 0	R/C BUTTON
0E	SLEEP	R/C BUTTON
1A	Q.VIEW	R/C BUTTON
64	SIZE	R/C BUTTON
62	POSITION	R/C BUTTON
70	INDEX	R/C BUTTON
26	TIME	R/C BUTTON
65	HOLD	R/C BUTTON
2A	REVEAL	R/C BUTTON
91	DviX	R/C BUTTON

APPENDIX

EXTERNAL CONTROL DEVICE SETUP


It's not available to use this function in DVR mode.

Connect the RS-232C input jack to an external control device (such as a computer or an A/V control system) and control the TV's functions externally.

Connect the serial port of the control device to the RS-232C jack on the TV back panel.


RS-232C connection cables are not supplied with the TV.

RS-232C Setup

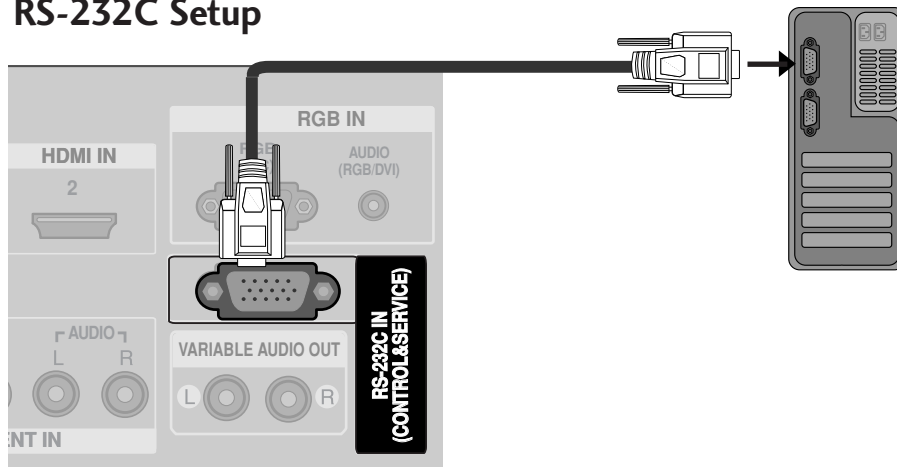

Type of Connector; D-Sub 9-Pin Male

No.	Pin Name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

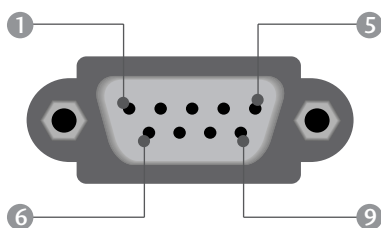

RS-232C Configurations

Please make sure the RS-232C configuration below.

If you use different kind of RS-232C cable, system error may occur.

3-Wire Configurations			
	PC		TV
RXD	2	● ——— ●	3
TXD	3	● ——— ●	2
GND	5	● ——— ●	5
DTR	4		6
DSR	6		4
RTS	7		7
CTS	8		8
	D-Sub 9		D-Sub 9

Set ID

Use this function to specify a set ID number.

Refer to 'Real Data Mapping' 1. See page p.117


1 Press the **MENU** button and then use ▲ / ▼ button to select the **OPTION** menu.

2 Press the ► button and then use ▲ / ▼ button to select **Set ID**.


3 Press the ► button and then use ◀ / ▶ button to adjust **Set ID** to choose the desired TV ID number.

- The adjustment range of SET ID is 1~99.

4 Press **EXIT** button to return to normal TV viewing.

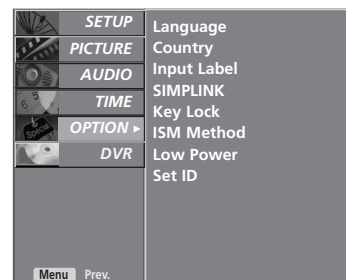

1

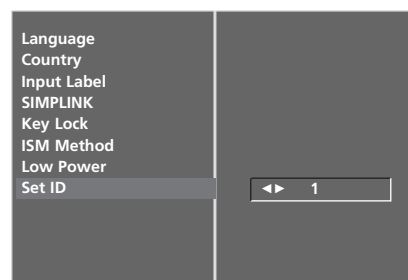

2 3

APPENDIX

Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

Command Reference List

	COMMAND 1	COMMAND 2	DATA (Hexadecimal)
01. Power	k	a	0 ~ 1
02. Aspect Ratio	k	c	*
03. Screen Mute	k	d	0 ~ 1
04. Volume Mute	k	e	0 ~ 1
05. Volume Control	k	f	0 ~ 64
06. Contrast	k	g	0 ~ 64
07. Brightness	k	h	0 ~ 64
08. Colour	k	i	0 ~ 64
09. Tint	k	j	0 ~ 64
10. Sharpness	k	k	0 ~ 64
11. OSD Select	k	l	0 ~ 01
12. Remote control lock mode	k	m	0 ~ 01
13. PIP/DW	k	n	*
14. PIP Position	k	q	0 ~ 03
15. Balance	k	t	0 ~ 64
16. Colour Temperature	k	u	0 ~ 3
17. Red Adjustment	k	v	0 ~ 50
18. Green Adjustment	k	w	0 ~ 50
19. Blue Adjustment	k	\$	0 ~ 50
20. Tune Command	m	a	Refer to p. 117
21. Abnormal Status	k	z	FF
22. ISM Method	j	p	0 ~ 3
23. Low Power	j	q	0 ~ 1
24. Auto Configure	j	u	1
25. Key	m	c	Key Code
26. Input select (Main)	x	b	*
27. Input select (PIP)	x	y	*

Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

- * [Command 1] : First command to control the set.
(j, k, m or x)
- * [Command 2] : Second command to control the set.
- * [Set ID] : You can adjust the set ID to choose desired monitor ID number in option menu.
Adjustment range is 1 ~ 99.
When selecting Set ID '0', every connected the set is controlled.
Set ID is indicated as decimal (1~99) on menu and as Hexa decimal (0x0~0x63) on transmission/receiving protocol.
- * [DATA] : To transmit command data.
Transmit 'FF' data to read status of command.
- * [Cr] : Carriage Return
ASCII code '0x0D'
- * [] : ASCII code 'space (0x20)'

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

- * The set transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

- * The set transmits ACK (acknowledgement) based on this format when receiving abnormal data from non-viable functions or communication errors.

- Data 1: Illegal Code
2: not support function
3: Wait more time

01. Power (Command 2 : a)

- ▶ To control Power On/Off of the set.

Transmission

```
[k][a][ ][Set ID][ ][Data][Cr]
```

Data 0 : Power Off 1 : Power On

Ack

```
[a][ ][Set ID][ ][OK][Data][x]
```

- ▶ To show Power On/Off.

Transmission

```
[k][a][ ][Set ID][ ][FF][Cr]
```

Ack

```
[a][ ][Set ID][ ][OK][Data][x]
```

* In like manner, if other functions transmit '0xFF' data based on this format, Acknowledgement data feed back presents status about each function.

02. Aspect Ratio (Command2:c)

- ▶ To adjust the screen format. (Main picture format)
You can also adjust the screen format using the ARC (Aspect Ratio Control) button on remote control or in the PICTURE menu.

Transmission

```
[k][c][ ][Set ID][ ][Data][Cr]
```

Date 1: Normal screen (4:3)	5: Zoom2
2: Wide screen (16:9)	6: Original
4: Zoom1	7: 14:9

Ack

```
[c][ ][Set ID][ ][OK][Data][x]
```

* Using the PC input, you select either 16:9 or 4:3 screen aspect ratio.

03. Screen Mute (Command 2 : d)

- ▶ To select screen mute on/off.

Transmission

```
[k][d][ ][Set ID][ ][Data][Cr]
```

Data 0 : Screen mute off (Picture on)

1 : Screen mute on (Picture off)

Ack

```
[d][ ][Set ID][ ][OK][Data][x]
```

04. Volume Mute (Command2:e)

To control volume mute on/off.

You can also adjust mute using the MUTE button on remote control.

Transmission [k][e][][Set ID][][Data][Cr]

Data 0 : Volume mute on (Volume off)

Data 1 : Volume mute off (Volume on)

Acknowledgement [e][][Set ID][][OK][Data][x]

05. Volume Control (Command 2 : f)

- ▶ To adjust volume.
You can also adjust volume with the VOLUME buttons on remote control.

Transmission

```
[k][f][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 117.

Ack

```
[f][ ][Set ID][ ][OK][Data][x]
```

06. Contrast (Command 2 : g)

- ▶ To adjust screen contrast.
You can also adjust contrast in the PICTURE menu.

Transmission

```
[k][g][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 117.

Ack

```
[g][ ][Set ID][ ][OK][Data][x]
```

07. Brightness (Command 2 : h)

- ▶ To adjust screen brightness.
You can also adjust brightness in the PICTURE menu.

Transmission

```
[k][h][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 117.

Ack

```
[h][ ][Set ID][ ][OK][Data][x]
```

08. Colour (Command 2 : i)

- ▶ To adjust the screen colour.
You can also adjust colour in the PICTURE menu.

Transmission

```
[k][i][ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 64

* Refer to 'Real data mapping 1'. See page 117.

Ack

```
[i][ ][Set ID][ ][OK][Data][x]
```

9. Tint (Command 2 : j)

- ▶ To adjust the screen tint.
You can also adjust tint in the PICTURE menu.

Transmission

```
[k][j][ ][Set ID][ ][Data][Cr]
```

Data Red : 0 ~ Green : 64

* Refer to 'Real data mapping 1'. See page 117.

Ack

```
[j][ ][Set ID][ ][OK][Data][x]
```

10. Sharpness (Command 2 : k)

- ▶ To adjust the screen sharpness.
You can also adjust sharpness in the PICTURE menu.

Transmission

[k][k][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 64
* Refer to 'Real data mapping 1'. See page 117.

Ack

[k][][Set ID][][OK][Data][x]

11. OSD Select (Command 2 : l)

- ▶ To select OSD (On Screen Display) on/off when controlling remotely.

Transmission

[k][l][][Set ID][][Data][Cr]

Data 0 : OSD off 1 : OSD on

Ack

[l][][Set ID][][OK][Data][x]

12. Remote control lock mode (Command 2 : m)

- ▶ To lock the front panel controls on the monitor and remote control.

Transmission

[k][m][][Set ID][][Data][Cr]

Data 0 : Lock off 1 : Lock on

Ack

[m][][Set ID][][OK][Data][x]

- * If you're not using the remote control, use this mode.
When main power is on/off, external control lock is released.

13. PIP / DW (Command2:n)

- ▶ To control the PIP (Picture In picture)/DW.
You can also control the PIP/DW using the PIP button on the remote control or in the PIP/DW menu.

Transmission

[k][n][][Set ID][][Data][Cr]

Data 0: PIP/DW off 2: DW1
1: PIP 3: DW2

Ack

[n][][Set ID][][OK][Data][x]

14. PIP Position (Command2:q)

- ▶ To select sub picture position for PIP.
You can also adjust the sub picture position using POSITION button on the remote control or in the PIP/DW menu.

Transmission

[k][q][][Set ID][][Data][Cr]

Data 0: Right down on screen
Data 1: Left down on screen
Data 2: Left up on screen
Data 3: Right up on screen

Ack

[q][][Set ID][][OK][Data][x]

15. Balance (Command 2 : t)

- ▶ To adjust balance.
You can also adjust balance in the AUDIO menu.

Transmission

[k][t][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 64
* Refer to 'Real data mapping 1'. See page 117.

Ack

[t][][Set ID][][OK][Data][x]

16. Colour Temperature (Command 2 : u)

- ▶ To adjust colour temperature. You can also adjust Colour Temperature in the PICTURE menu.

Transmission

[k][u][][Set ID][][Data][Cr]

Data 0: Cool 1: Medium 2: Warm 3: User

Ack

[u][][Set ID][][OK][Data][x]

17. Red Adjustment (Command 2 : v)

- ▶ To adjust red in colour temperature.

Transmission

[k][v][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 50
* Refer to 'Real data mapping 2'. See page 117.

Ack

[v][][Set ID][][OK][Data][x]

18. Green Adjustment (Command 2 : w)

- ▶ To adjust green in colour temperature.

Transmission

[k][w][][Set ID][][Data][Cr]

Data Min : 0 ~ Max : 50
* Refer to 'Real data mapping 2'. See page 117.

Ack

[w][][Set ID][][OK][Data][x]

19. Blue Adjustment (Command 2 : \$)

► To adjust blue in colour temperature.

Transmission

```
[k][$] [ ][Set ID][ ][Data][Cr]
```

Data Min : 0 ~ Max : 50

* Refer to 'Real data mapping 2'. See page 117.

Ack

```
[$][ ][Set ID][ ][OK][Data][x]
```

20. Tune Command/Channel Tuning (Command 1:m, Command 2:a)

► To select a programme for the main picture.

Transmission

```
[m][a][ ][Set ID][ ][Data0][ ][Data1][ ][Data2][Cr]
```

Data 0: Min: 0 ~ Max: 63 (0~C7, 200 Pr is on)

Refer to 'Real data mapping 1'.

1: Don't care

2: 0 : Main

1 : Sub

Ack

```
[$][ ][Set ID][ ][OK][Data][x]
```

21. Abnormal State (Command 2 : z)

► To recognize an abnormal state.

This feature is not available for all models.

Transmission

```
[k][z][ ][Set ID][ ][FF][ ][Cr]
```

Data FF : Read

Ack

```
[z][ ][Set ID][ ][OK][Data][x]
```

Data 0: Normal (Power on and signal exist)

1: No signal (Power on)

2: Turn the TV off by remote control

3: Turn the TV off by sleep time function

4: Turn the TV off by RS-232C function

5: 5V down

6: AC down

7: Turn the TV off by Fan Alarm function

8: Turn the TV off by Off time function

9: Turn the TV off by Auto sleep function

a: Turn the TV off by AV board detect

* This function is "read only".

22. ISM Method

(Command 1 : j, Command 2 : p)

► To control the ISM method. You can also adjust ISM Method in OPTION menu.

Transmission

```
[j][p][ ][Set ID][ ][Data][Cr]
```

Data 0: Normal

1: White wash

2: Orbiter

3: Inversion

Ack

```
[p][ ][Set ID][ ][OK/NG][Data][x]
```

23. Low Power

(Command 1 : j, Command 2 : q)

► To reduce the power consumption of the set. You can also adjust Low Power in OPTION menu.

Transmission

```
[j][q][ ][Set ID][ ][Data][ ][Cr]
```

Data 0 : Off

1 : On

Ack

```
[q][ ][Set ID][ ][OK/NG][Data][x]
```

24. Auto Configure

(Command 1 : j, Command 2 : u)

► To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.

Transmission

```
[j][u][ ][Set ID][ ][Data][Cr]
```

Data 1: To set

Ack

```
[u][ ][Set ID][ ][OK/NG][Data][x]
```

* Real data mapping 1

```
0 : Step 0
⋮
A : Step 10 (Set ID 10)
⋮
F : Step 15 (Set ID 15)
10 : Step 16 (Set ID 16)
⋮
64 : Step 100
⋮
6E : Step 110
⋮
73 : Step 115
74 : Step 116
⋮
C7 : Step 199
⋮
FE : Step 254
FF : Step 255
```

* Real data mapping 2

```
0 : -40
1 : -39
2 : -38
⋮
28 : 0
⋮
4E : +38
4F : +39
50 : +40
```

APPENDIX

25. Key (Command1:m, Command2:c)

► To send IR remote key code.

Transmission

[m][c][][Set ID][][Data][Cr]

Data Key code - Refer to page 111.

Ack

[c][][Set ID][][OK][Data][x]


26. Input select (Command1:x, Command2:b) (Main Picture Input)

► To select input source for set.

Transmission

[x][b][][Set ID][][Data][Cr]

Data Structure

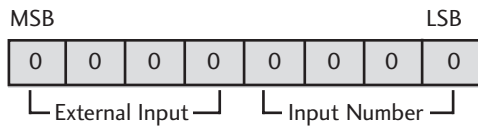

External Input				Data
0	0	0	1	Analog
0	0	1	0	AV
0	1	0	0	Component
0	1	1	0	RGB-PC
1	0	0	1	HDMI

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4

Ack

[b][][Set ID][][OK][Data][x]


27. PIP Input select (Command1:x, Command2:y)

► To adjust input source for sub picture in PIP mode

Transmission

[x][y][][Set ID][][Data][Cr]

Data Structure

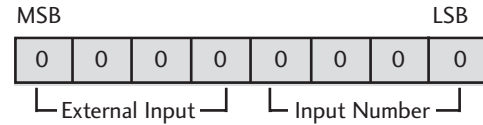

External Input				Data
0	0	0	1	Analog
0	0	1	0	AV
0	1	0	0	Component
0	1	1	0	RGB-PC
1	0	0	1	HDMI

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4

Ack

[y][][Set ID][][OK][Data][x]

LG Electronics Inc.