



## 2.1CH Home Theater System

### OWNER'S MANUAL

MODEL: J10D

SPEAKERS: J10D-SF/J10D-SA



**USB**



 
Before connecting, operating or adjusting this product,  
please read this instruction booklet carefully and  
completely.



**CAUTION: THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU ARE QUALIFIED TO DO SO.**



**Caution: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.**



**CAUTION:**  
CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED AVOID EXPOSURE TO THE BEAM.



**CAUTION: This product employs a Laser System.**

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference. Should the unit require maintenance, contact an authorized service center.

Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. **DO NOT STARE INTO BEAM.**



**WARNING: Do not install this equipment in a confined space such as a bookcase or similar unit.**



This product is manufactured to comply with the EEC DIRECTIVE 2004/108/EC and 2006/95/EC.

The main label is attached on the exterior of the bottom of the apparatus.

## CAUTION concerning the Power Cord

**Most appliances recommend they be placed upon a dedicated circuit;**

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

## SERIAL NUMBER:

You can find the serial number on the bottom of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_



## Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS 2.0" are trademarks of Digital Theater Systems, Inc.

## Contents

<b>Introduction</b>	<b>4-9</b>
Symbol Used in this Manual	4
Notes on Discs	4
Playable Discs	5
Regional Code	5
Playing media files using the USB feature	6
Main Unit	7
Active Subwoofer	8
Remote Control	9
Remote Control Operation	9
<b>Hookup and Settings</b>	<b>10-16</b>
Making system connections	10-11
HDMI connection	12
Using the Home Menu	13
Initial Settings	13
General Settings	13
TV Aspect	13
Display Mode	13
PBC (Version 2.0)	14
Initialization	14
Language Settings	14
Audio Settings	14
DRC (Dynamic Range Control)	14
Vocal	14
HD AV Sync	14
2.1 Speaker Setup	14
Lock (Parental Control) Settings	15
Set Password / Rating / Area Code	15
DivX Registration Code	15
Displaying Disc Information on-screen	16
<b>Playback</b>	<b>17-25</b>
General Playback Features	17-19
Playing a DivX Movie File	20
Playing an Audio CD or MP3/WMA file	21
Program Playback with Audio CD and MP3/WMA file	22
Viewing a JPEG File	23-24
AUX/MOBILE/SCART/OPTICAL (Listening to an external source)	25
Using Apple iPod	25

<b>Reference</b>	<b>26-31</b>
Additional Information	26
Presetting the Radio Stations	26
Listening to the Radio	26
RDS Operation	27
Programme Search (PTY)	27
Sleep	28
Dimmer	28
XTS pro	28
Virtual sound	28
Controlling Your TV with the Supplied Remote Control	28
Language Codes	29
Area Codes	29
Troubleshooting	30
Specifications	31

## Copyright

- Recording equipment should be used only for lawful copying and you are advised to check carefully what is lawful copying in the area in which you are making a copy. Copying of copyright material such as films or music is unlawful unless permitted by a legal exception or consented to by the rights owner.
- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision corporation. Reverse engineering or disassembly is prohibited.
- CONSUMERS SHOULD NOTE THAT NOT ALL HIGH DEFINITION TELEVISION SETS ARE FULLY COMPATIBLE WITH THIS PRODUCT AND MAY CAUSE ARTIFACTS TO BE DISPLAYED IN THE PICTURE. IN CASE OF 625 PROGRESSIVE SCAN PICTURE PROBLEMS, IT IS RECOMMENDED THAT THE USER SWITCH THE CONNECTION TO THE 'STANDARD DEFINITION' OUTPUT. IF THERE ARE QUESTIONS REGARDING OUR TV SET COMPATIBILITY WITH THIS MODEL 625p UNIT, PLEASE CONTACT OUR CUSTOMER SERVICE CENTER.

# Introduction

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference.

This manual provides information on the operation and maintenance of your unit. Should the unit require service, contact an authorized service location.

## Symbol Used in this Manual



The lightning flash symbol alerts you to the presence of dangerous voltage within the product enclosure that may constitute a risk of electric shock.



The exclamation point alerts you to the presence of important operating and maintenance / servicing instructions.



Indicates hazards likely to cause harm to the unit itself or other material damage.

### Note:

Indicates special notes and operating features.


### Tip:

Indicates tips and hints for making the task easier.

A section whose title has one of the following symbols are applicable only to the disc represented by the symbol.

<b>ALL</b>	All discs and file listed below
<b>DVD</b>	DVD and finalized DVD±R/RW
<b>VCD</b>	Video CDs
<b>ACD</b>	Audio CDs
<b>DivX</b>	DivX files
<b>MP3</b>	MP3 files
<b>WMA</b>	WMA files
<b>JPEG</b>	JPEG files

 
## About the Symbol Display

" " may appear on your TV display during operation and indicates that the function explained in this owner's manual is not available on that specific media.

## Notes on Discs

### Handling Discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints do not get on the surface. Never stick paper or tape on the disc.





### Storing Discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat and never leave it in a parked car exposed to direct sunlight.

### Cleaning Discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

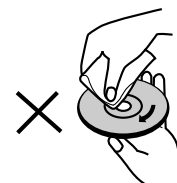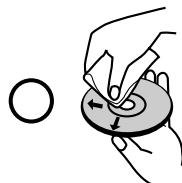

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

## Moisture Condensation

Never operate this product immediately after moving it from a cold location to a warm location. Leave it for two or three hours without operating it. If you use this product in such a situation, it may damage discs and internal parts.

## Playable Discs



### DVD (8 cm / 12 cm disc)

- Discs such as movies that can be purchased or rented



### Video CD (VCD) (8 cm / 12 cm disc)

- VIDEO CDs or CD-Rs/CD-RWs in VIDEO CD/Super VIDEO CD format



### Audio CD (8 cm / 12 cm disc)

- Music CDs or CD-Rs/CD-RWs in music CD format that can be purchased



### CD-R/CD-RW (8 cm / 12 cm disc)

- CD-R/CD-RW discs that contain audio titles, DivX, MP3, WMA, or JPEG files.

### Notes:

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). Doing so may result in malfunctions.
- Depending on the recording software & the finalization, some recorded discs (CD-R/RW or DVD±R/RW) may not be playable.
- DVD-R/RW, DVD+R/RW and CD-R/RW discs recorded using a personal computer or a DVD or CD Unit may not play if the disc is damaged or dirty, or if there is dirt or condensation on the Unit's lens.
- If you record a disc using a personal computer, even if it is recorded in a compatible format, there are cases in which it may not play because of the settings of the application software used to create the disc. (Check with the software publisher for more detailed information.)
- This unit requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback.
- Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

## Regional Code

This unit has a regional code printed on the bottom of the unit. This unit can play only DVD discs labeled same as the bottom of the unit or "ALL".

### Notes on Regional Codes

- Most DVD discs have a globe with one or more numbers in it clearly visible on the cover. This number must match your unit's regional code or the disc cannot play.
- If you try to play a DVD with a different regional code from the unit, the message "Incorrect region code. Can't play back" appears on the TV screen.

## Playing media files using the USB feature

You can enjoy the media files such as pictures (JPEG), movies (DivX) and tunes (MP3/WMA) saved in an MP3 player or USB memory by connecting the storage device to the USB port of this unit.

1. Connect the USB device to the USB port of the unit.
2. Press HOME on the remote control.
3. Select [MUSIC], [PHOTO] or [MOVIE] option.  
Details for the options are on page 13.




### Compatible Devices

1. Devices which require additional program installation when you have connected it to a computer, are not supported.
2. MP3 Player: Flash type MP3 player.
  - The MP3 player requiring installation of a driver is not supported.
3. USB Flash Drive: Devices that support USB2.0 or USB1.1.

### Notes:

- **Do not extract the USB device in operating (play, copy, move, etc.).**
- A back up demands to prevent a data damage.
- If you use a USB extension cable or USB hub, the USB device might not be recognized.
- This unit can support USB 2.0 or USB 1.1.
- A device using NTFS file system is not supported. (Only FAT (16/32) file system is supported.)
- The USB function of this unit does not support all USB devices.
- Digital camera and mobile phone are not supported.
- This unit is not supported when the total number of files is 1000 or more.
- DivX playback on USB may not be perfect for high bit rate content.
- When resetting this unit, remove the USB device from the USB port of this unit (see page 30.)

## Main Unit

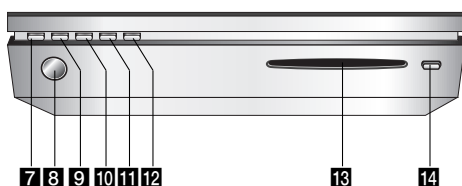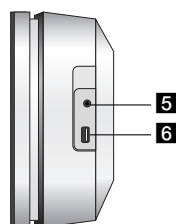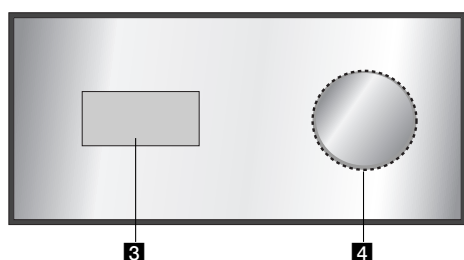

### 1 HDMI Connector (Type A)

HDMI output providing a high quality interface for digital audio and video.

### 2 SYSTEM Connector

Connect the main unit to the active subwoofer.

### 3 Display window

### 4 \* Touch pad

You can point to, select, and scroll objects on the display window.

You can also change the volume by moving your finger around the touch wheel.

### 5 PHONES

3.5 mm headphone jack.

#### Tips:

- Adjust the volume to a moderate level before you plug in the headphones.
- Connecting headphones will switch off the speakers.

### 6 USB

Connect to a USB port of multimedia (USB memory etc.)

### 7

Switches the unit ON or OFF.

### 8 Remote Sensor

Point the unit remote control here.

### 9 HOME

Accesses or removes the HOME menu.

### 10 PLAY

Starts playback.

### 11 STOP

Stops playback.

### 12 PAUSE

Pauses playback temporarily.

### 13 CD slot loader

#### Notes:

- Do not push a disc forcibly into the CD slot.
- Do not pull or push a disc while a disc is ejected.
- Press EJECT again to reinsert the disc after ejecting it.

### 14 EJECT


 
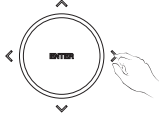




Ejects or inserts a disc from the slot loader.

### \* Touch pad


This unit has touch sensitive controls that respond to the touch of your fingers.

#### Notes:

- Do not place objects on the top panel of the main unit.
- Do not touch the touch pad hard to make it work.
- Slowly and lightly touch the touch pad.
- Touch the touch pad with bare hands and do not touch the touch pad with wet hands.

Action			
Description	Move your finger around the touch wheel	Tap ENTER	Tap  ,  ,  , or 
Function	Adjust the volume	Select a menu item	Move up, down, left, or right

### Active Subwoofer

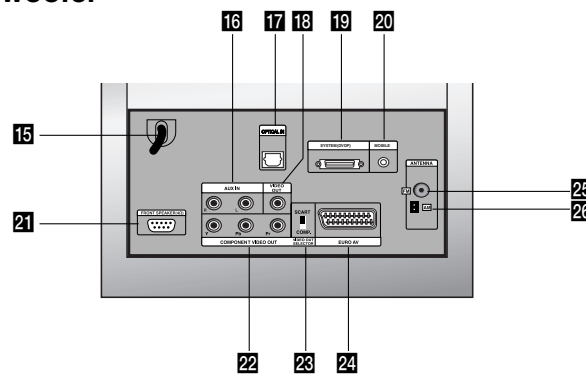

#### 15 AC Power Cord

Plug into the power source.

#### 16 AUX IN

Connect an auxiliary audio input source.

#### 17 OPTICAL IN

Connect an optical output of digital device.

#### 18 VIDEO OUT

Connect to a Video Input on TV.

#### 19 SYSTEM (DVDP)

Connect the active subwoofer to the main unit.

#### 20 MOBILE

Connect an external device (e.g. Portable audio devices)

#### 21 FRONT SPEAKER (4Ω)

A speaker system can be connected to this terminal.

#### 22 COMPONENT VIDEO OUT (Y Pb Pr)

Connect to a TV with Y Pb Pr inputs.

#### 23 VIDEO OUT SELECTOR

Select either COMPONENT or RGB signal of EURO AV terminal depending on how you connect the unit to the TV.

#### 24 EURO AV

Connect to a TV with SCART jack.

#### 25 FM ANTENNA


Connect the FM antenna to this terminal.

#### 26 AM ANTENNA

Connect the AM antenna to this terminal.



## Remote Control

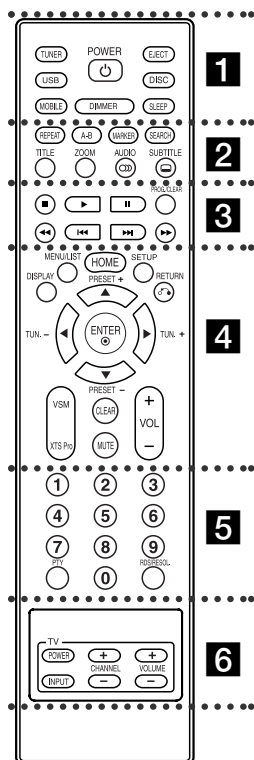

..... **1** .....  
**TUNER:** Selects an FM or AM broadcast.  
**USB:** Selects a USB mode.  
**MOBILE:** Selects a MOBILE mode.  
**POWER:** Switches the unit ON or OFF.

**DIMMER:** Press to change brightness of the display window on the top panel during power-on status.

**EJECT:** Ejects or inserts disc from the slot loader.

**DISC:** Selects a DISC mode.

**SLEEP:** Set the system to turn off automatically at a specified time.

..... **2** .....  
**REPEAT:** Repeat chapter, track, title or all.

**A-B:** Repeats sequence between two points (A and B)

**MARKER:** Marks any point during playback.

**SEARCH:** Displays Marker Search menu.

**TITLE:** Displays the disc's Title menu, if available.

**ZOOM:** Enlarges video image.

**AUDIO:** Selects an audio language or audio channel. Selects STEREO or MONO (Radio).

**SUBTITLE:** Selects a subtitle language.

..... **3** .....  
**■ (STOP):** Stops playback.

**▶ (PLAY):** Starts playback.

**⏸ (PAUSE):** Pause playback temporarily.

**PROG./CLEAR:** Accesses or removes program menu. Stores a radio station's frequency in the tuner's memory.

**◀◀ / ▶▶ (SCAN):** Search backward or forward.

**⏮ / ⏭ (SKIP):** Go to next or previous chapter or track.

..... **4** .....  
**DISPLAY:** Accesses On-Screen Display.

**MENU/LIST:** Accesses menu on a DVD disc.

**HOME:** Accesses or removes the HOME menu.

**SETUP:** Accesses or removes the Setup menu.

**RETURN (↩):** Removes the menu.

**PRESET(+/-):** Select programme of Radio.

**TUN.(+/-):** Tunes in the desired radio station.

**◀ / ▶ / ▲ / ▼ (left/right/up/down):** Selects an option in the menu.

**ENTER:** Confirms menu selections.

**VSM:** Selects the virtual sound.

**XTS Pro:** To enjoy more natural and realistic sound.

**CLEAR:** Removes a mark on the Marker Search menu.

**MUTE:** Turns the sound on and off temporarily.

**VOLUME (+/-):** Adjusts speaker volume.

..... **5** .....  
**0-9 numerical buttons:** Selects numbered options in a menu.

**PTY:** To start a search for a specific PTY type.


**RDS/RESOL.:** To view the various displays of the RDS options. Sets the output resolution for HDMI.

..... **6** .....  
**TV Control Buttons:** See page 28.

## Remote Control Operation

 Point the Remote Control at the remote sensor and press the buttons.

## Remote Control Battery Installation



Remove the battery cover on the rear of the Remote Control, and insert two (size AA) batteries with **+** and **-** matched correctly.



### Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

# Hookup and Settings

## Making system connections

Turn off your unit before you set the VIDEO OUT SELECTOR. When using the COMPONENT VIDEO OUT jacks, set the VIDEO OUT SELECTOR to COMP. When using the SCART jack, set the VIDEO OUT SELECTOR to SCART.



### Caution


Do not plug the active subwoofer into an AC power(mains) outlet until all the components are connected.

## Connecting the active subwoofer to the unit

Connect one end of the system cable (S1) into the **SYSTEM** jack on the rear of the unit. Connect the other end of the system cable (S1) into the **SYSTEM (DVDP)** jack on the rear of the active subwoofer. Tighten both screws on the connector.


### Note:

The jacks for the system cable are keyed so that the cable connectors only connect in one way.

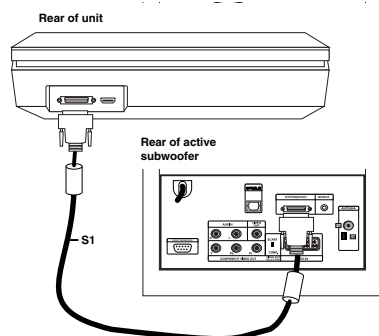


## Connecting the speakers to the active subwoofer

1. Connect one end of the speaker cable (S2) into the **FRONT SPEAKER (4Ω)** jack on the rear of the active subwoofer. Tighten both screws on the connector.

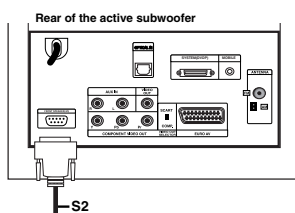

2. Connect the **L** (left) speaker cable (S2) into the rear jack of the left speaker. Connect the **R** (right) speaker cable (S2) into the rear jack of the right speaker.

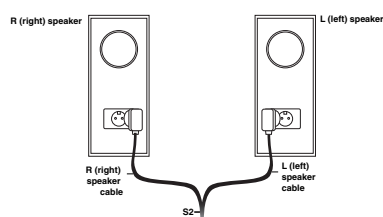

### Note:

Make sure cable connectors are fully inserted and seated firmly in the speaker jacks.


## Connecting the supplied antennas

The rear of the active subwoofer provides jacks for the AM and FM antennas included with your system.

### Note:

An outdoor antenna may be used in place of the supplied indoor antennas. To add an outdoor antenna, consult a qualified installer.

Follow all safety instructions supplied with the antenna.

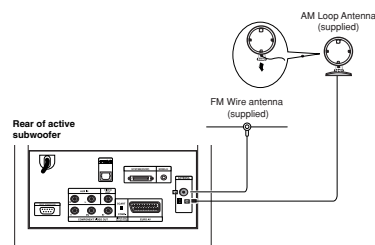


## FM antenna

Connect the FM antenna into the **FM** jack on the rear of the active subwoofer. Spread out the antenna arms and move them around to establish optimum FM reception. Extend the antenna as far from the unit and other equipment as possible.

## AM antenna

Connect the AM loop antenna into the **AM** jack on the rear of the active subwoofer. Place the antenna loop away from the unit and other equipment as possible. Stand it on the supplied base or mount it to a wall.

## Connecting Your TV to the active subwoofer

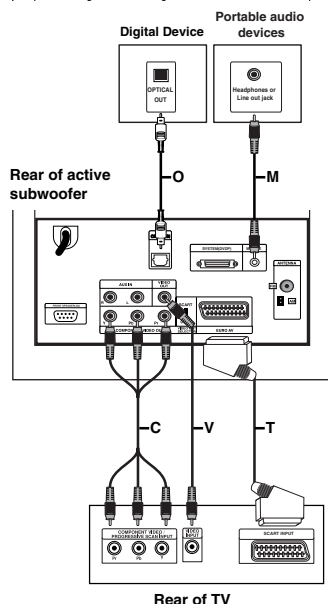

### Video connection

Connect the **VIDEO OUT** jack on the rear of the active subwoofer into the video input jack on your TV using the video cable (**V**).

### Component video connection

Connect the **COMPONENT VIDEO OUT** jacks on the rear of the active subwoofer into the corresponding input jacks on your TV using a component video cable (**C**). If your television is a high-definition or "digital ready" television, you may take advantage of the unit's progressive scan output for the highest video resolution possible. If your TV does not accept the progressive scan format, the picture will appear scrambled if you try progressive scan on the unit. Set the resolution to 576P using RDS/RESOL. button for progressive signal.

#### Note:

Progressive scan does not work with the analog video connection (yellow VIDEO OUT jack).

### SCART connection

Connect the **EURO AV** scart jack on the rear of the active subwoofer into the corresponding input jack on your TV using the scart cable (**T**).

### Optical digital connection

Connect an optical output of digital device into the **OPTICAL IN** jack on the rear of the active subwoofer using optical cable (**O**).



#### Caution

When you use HDMI connection, the **VIDEO OUT** and **EURO AV** connections are not available.

### Connecting an additional appliance

There are two options for connecting an additional appliance to the unit.

- Option A: **AUX IN (L/R)** jacks (e.g. VCR, Laser disc player)
- Option B: **MOBILE** jack (e.g. Portable audio devices)

#### Option A: **AUX IN (L/R)** jacks

1. Connect the red plug of the red/white audio cables to the red jack **AUX IN R** and white plug to the white jack **AUX IN L**.
2. Connect the other end of the audio cables to audio output jacks of the additional appliance.

#### Note:

If the connected device has only a single audio output jack, connect it to the **AUX IN L** jack.

#### Option B: **MOBILE** jack

1. Connect one end of an audio cable (M) with a 3.5 millimeter stereo miniplug into the **MOBILE** jack on the rear of the active subwoofer.
2. Connect the other end of an audio cable (M) with a 3.5 millimeter stereo miniplug into the headphone jack (or line out jack) of the additional appliance.


## HDMI connection

If you have a HDMI TV or monitor, you can connect it to this unit using a HDMI cable.

1. Connect the HDMI jack on the unit to the HDMI jack on a HDMI compatible TV or monitor (H).
2. Set the TV's source to HDMI (refer to TV's Owner's manual).

### Notes:

- The arrow on the cable connector body should face up for correct alignment with the connector on the unit.

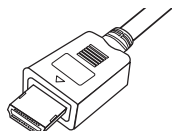

(Type A)

- If there is noise or lines on the screen, please check the HDMI cable.
- If you press RDS/RESOL. in tuner (RADIO) mode, the resolution is not changed.


### Tip :

When you use HDMI connection, you can change the resolution (576p, 720p, or 1080i) for the HDMI output using RDS/RESOL. button.



### Caution

Changing the resolution when the unit is connected with HDMI connector may result in malfunctions. To solve the problem, turn off the unit and then turn it on again.

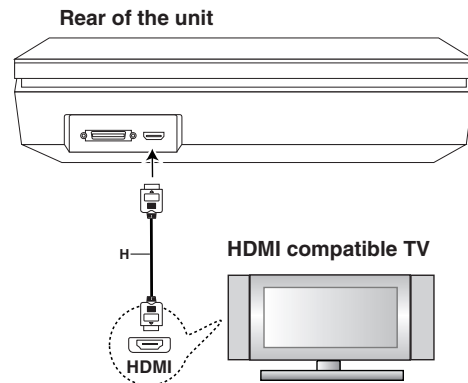

### About HDMI

HDMI (High Definition Multimedia Interface) supports both video and audio on a single digital connection for use with DVD Players, Set-Top Boxes, and other AV devices.

HDMI was developed to provide the technologies of HDCP (High Definition Contents Protection). HDCP is used to protect digital content transmitted and received.

HDMI has the capability to support standard, enhanced, or high-definition video plus standard to multi-channel surround-sound audio. HDMI features include uncompressed digital video, a bandwidth of up to 5 gigabytes per second, one connector (instead of several cables and connectors), and communication between the AV source and AV devices such as DTVs.

*HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.*

 
### Additional Information for HDMI

- When you connect a HDMI or DVI compatible device make sure of the followings:
  - Try switching off the HDMI/DVI device and this unit. Next, switch on the HDMI/DVI device and leave it for around 30 seconds, then switch on this unit.
  - The connected device's video input is set correctly for this unit.
  - The connected device is compatible with 720x576p, 1280x720p, or 1920x1080i video input.
- Not all HDCP-compatible DVI devices will work with this unit.
  - The picture will not be displayed properly with non-HDCP device.
  - When the connected TV cannot accept the resolution you selected, you may not see normal picture on the TV screen.

## Using the Home Menu

From the Home Menu screen you can access all the Media for playback and recording of the unit.

1. Press HOME to display the Home Menu screen.
2. Use the ◀ / ▶ buttons to select a main option you want. Sub options appears.
3. Use the ▲ / ▼ and ENTER buttons to select the sub option you want.



4. To exit the HOME menu, press HOME.

### MOVIE

#### ● DISC:

- Displays [DivX] menu for DivX disc. (See page 20)
- Plays back Video CD or DVD-Video disc. (See page 17-19)

- **USB DivX:** Displays the [Movie List] for USB device. (See page 20)

### PHOTO (See page 23-24)

- **DISC:** Displays [Photo List] menu for disc.
- **USB:** Displays the [Photo List] for USB device.

### SETUP (See page 13)

- **Start:** Displays Setup menu.

### Easy Menu

- **AUX:** Selects an auxiliary mode. (See page 25)
- **SCART:** Selects SCART mode. (See page 25)
- **OPTICAL:** Selects OPTICAL mode. (See page 25)

### RADIO

- **Listen:** Selects a Radio mode.

### MUSIC (See page 21-22)

- **DISC:** Displays [Music List] (or Audio CD) menu for disc.
- **USB:** Displays the [Music List] for USB device.

## Initial Settings

In this menu system, there are several ways to customize the settings provided. Most menus consist of three levels to set up the options, but some require greater depth for the variety of settings.

## General Operation

1. Press SETUP or select SETUP from the HOME Menu screen and the setup menu appears.
2. Use ▲ / ▼ to select the desired option.
3. While the desired item is selected, press ▶ to move to the second level.
4. Use ▲ / ▼ to select the second desired option.
5. Press ▶ to move to the third level.
6. Use ▲ / ▼ to select the desired setting then press ENTER to confirm your selection. Some items require additional steps.
7. Press SETUP or RETURN (↵) repeatedly to exit the Setup menu.

### Note:

Press ◀ to go back to the previous level.

## General Settings



### TV Aspect

Selects the aspect ratio of the connected TV (4:3 standard or wide).

- **[4:3]** Select this when connecting to a 4:3 screen TV. When you select [4:3], set [Display Mode] below.
- **[16:9]** Select this when connecting to a wide-screen TV or TV with a wide mode function.

### Display Mode

Selects how to display a wide picture on the screen when [4:3] is selected in [TV Aspect].

- **[Letter Box]** Displays a wide picture with bands on the upper and lower portions of the screen.
- **[Pan Scan]** Automatically displays a wide picture on the entire screen and cuts off the portions that do not fit.

### Note:

When you set the resolution to 720p or 1080i, TV Aspect and Display Mode are disabled.

### PBC (Version 2.0)

PBC stands for Playback Control and refers to special menus and navigation features that are available on some Video CDs.

- [ON] Video CDs are played according to the PBC, if available.
- [OFF] Video CDs are played the same way as Audio CDs.

### Initialization

You can reset the unit to its original factory settings.

[Factory Set] If you need to, you can reset the unit to all its factory settings. Some options cannot be reset. (Rating, Password, and Area Code)

1. Select [Initialization] option then press ►.
2. Press ▲ / ▼ to select the desired option then press ENTER.  
The confirm message will appear.
3. Use ◀ / ▶ to select [Ok] or [Cancel] then press ENTER.

### Language Settings



#### Display Menu

Select a language for the Setup menu and on-screen display.

#### Disc Menu/Audio/Subtitle

- [Original] Refers to the original language in which the disc was recorded.
- [Others] To select another language, press number buttons then ENTER to enter the corresponding 4-digit number according to the language code list in the reference chapter (see page 29). If you enter the wrong language code, press ◀.
- [OFF] (for Disc Subtitle) : Turn off Subtitle.

### Audio Settings



#### DRC (Dynamic Range Control)

With the DVD format, you can hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set DRC to [ON] for this effect.

#### Vocal

Set Vocal to [ON] only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into normal stereo sound.

#### HD AV Sync

When using Digital TV;

Sometimes AV signal could not be transmitted simultaneously because of later transmission of video signal compared to audio signal.

Because it takes some time to convert analog video signal to digital one in the Digital TV.

And it means that you may not enjoy picture on the screen and sound from speaker at the same time even though it is one scene.

In the HD AV Sync menu, you could adjust delay time to audio signal for simultaneous AV signal transmission


- Delay time could be set up with 10msec unit. (0 ~ 300msec)
- Delay time is different with each TV Brand. So you need to adjust optimal delay time complying with your TV.

#### 2.1 Speaker Setup

Make the following settings for the built-in 2.1 channel surround decoder.

1. Select [2.1 Speaker Setup] option then press ►.
2. Press ► to select a speaker that you want to adjust.  
(L: Left speaker/R: Right speaker/W: Active subwoofer)
3. Press ▲ / ▼ to adjust the output level of the selected speaker.
4. Press ENTER to store the setting.

## Lock (Parental Control) Settings

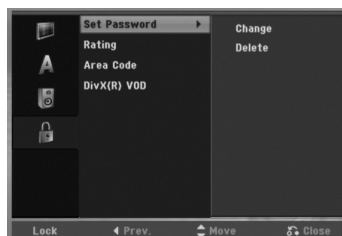

### Set Password

1. Select [Set Password] option then press ►.
2. To access the Rating, Password and Area Code features, you must input the 4-digit password you created.  
If you have not yet entered a password you are prompted to do so. Input a 4-digit password and press ENTER. Enter it again and press ENTER to verify. If you make a mistake before pressing ENTER, press ◀.  
To change the password, select the [Change], press ENTER and input the old 4-digit password then press ENTER.  
And input the new 4-digit password then press ENTER. Input it again to verify then press ENTER.  
To delete the password, select [Delete] then press ENTER.  
Input the 4-digit password you created and press ENTER.

### If you forget your 4-digit password

If you forget your password, to clear the current password, follow the procedure below.

1. Display Setup menu then select an 1 level icon.
2. Use the Number buttons to enter the 6-digit number "210499".
3. Select [Yes] then press ENTER. The 4-digit password is cleared. Enter a new password.

### Rating

Blocks playback of rated DVDs based on their content. Not all discs are rated.

1. Select [Rating] option then press ►.
2. Follow step 2 as shown "Set Password".
3. Select a rating using the ▲ / ▼ buttons.  
[1] - [8]: Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.  
[No Limit]: If you select [No Limit], parental control is not active and the disc plays in full.
4. Press ENTER to confirm your rating selection.

### Note:

If you set a rating for the unit, all disc scenes with the same rating or lower are played. Higher rated scenes are not played unless an alternate scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback stops. You must enter the 4-digit password or change the rating level in order to play the disc.

### Area Code

Enter the code of an area whose standards were used to rate the DVD video disc, referring to the list (See "Area Codes", page 29.).

1. Select [Area Code] option then press ►.
2. Follow step 2 as shown "Set Password".
3. Select the first character using the ▲ / ▼ buttons.
4. Shift the cursor using ► buttons and select the second character using ▲ / ▼ buttons.
5. Press ENTER to confirm your area code selection.

### DivX Registration Code

We provide you the DivX® VOD (Video On Demand) registration code that allows you to rent and purchase videos using the DivX® VOD service. For more information, visit [www.divx.com/vod](http://www.divx.com/vod).

1. Select [DivX(R) VOD] option then press ►.
2. Press ENTER and the registration code will appear.
3. Use the registration code to purchase or rent the videos from Divx® VOD service at [www.divx.com/vod](http://www.divx.com/vod). Follow the instructions and download the video onto a disc for playback on this unit.


### Note:

All the downloaded videos from DivX® VOD can only be played back on this unit.

## Displaying Disc Information on-screen

You can display various information about the disc loaded on-screen.

1. Press DISPLAY to show various playback information.  
The items displayed differ depending on the disc type or playing status.

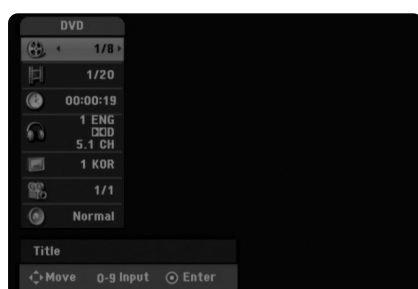

2. You can select an item by pressing ▲ / ▼ and change or select the setting by pressing ◀ / ▶. For details about each item, see the pages in parentheses.
  - [Title]: Current title (or track) number/total number of titles (or tracks)
  - [Chapter]: Current chapter number/total number of chapters.
  - [Time]: Elapsed playing time (See page 19)
  - [Audio]: Selected audio language (DVD VIDEO only) or audio channel (See page 18)
  - [Subtitle]: Selected subtitle (See page 18)
  - [Angle]: Selected angle/total number of angles (See page 19)
  - [Sound]: Selected sound mode (See page 19)

### **Note:**

If no button is pressed for 10 seconds, the on-screen display disappears.



# Playback

## General Playback Features






1. Insert your chosen disc into CD loader, with the playback side down.
2. Starts playback using HOME menu (see page 13).
3. To stop the playback, press ■ (STOP).  
The unit records the stopped point, depending on the disc. "■■■" appears on the screen briefly.  
Press ► (PLAY) to resume playback (from the scene point). If you press ■ (STOP) again or eject the disc ("■" appears on the screen.), the unit will clear the stopped point.
4. Press EJECT to remove the disc.

### Note:

If Parental Control is set and the disc is not within the Rating settings (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see "Rating", on page 15).

Buttons	Operations	Discs
EJECT	Ejects or inserts a disc.	ALL
■ (PAUSE)	During playback, press ■ to pause playback. Press ■ repeatedly to play Frame-by-Frame.	ALL DVD VCD DivX
◀◀ / ▶▶ (SKIP)	During playback, press ◀◀ or ▶▶ to return to the beginning of the current chapter/track or to go to the next chapter/track. Press ◀◀ twice briefly to step back to the previous chapter/track. <b>Tips:</b> <ul style="list-style-type: none"> <li>• To go directly to any chapter during DVD playback, press DISPLAY and press ▲ / ▼ to select the chapter icon. Then, input the chapter number or use ◀ / ▶.</li> <li>• On an Audio CD, to go directly to any track, enter the track number using the numbered buttons (0-9) during playback.</li> </ul>	ALL
◀◀ / ▶▶ (SCAN)	During playback, press ◀◀ or ▶▶ repeatedly to select the required scan speed. DVD, DivX ; 4 steps Video CD, Audio CD; 3 steps  While the playback is paused, press ◀◀ or ▶▶ repeatedly to play in slow motion. DVD; 4 steps DivX; 4 steps (Forward only) Video CD; 3 steps (Forward only)	DVD VCD DivX ACD DVD VCD DivX
ZOOM	During playback or pause mode, press ZOOM to enlarge the video image. (x1 size → x2 size → x4 size → x1 size (normal size)) You can move through the zoomed picture using ◀ ▶ ▲ ▼ buttons.	DVD VCD

## General Playback Features (Continued)

Buttons	Operations	Discs
REPEAT	<p>During playback, press REPEAT repeatedly to select a desired repeat mode.</p> <p>DVD (Title/Chapter/Off) Video CD, DivX (Title/ALL/Off) Audio CD, MP3/WMA (TRACK/ALL/(OFF))</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>On a Video CD with PBC, you must set PBC to [OFF] in the Setup menu to use the Repeat function. See page 14.</li> <li>If you press ►► once during Repeat Chapter (Track) playback, the repeat playback cancels.</li> </ul>	<p><b>DVD VCD ACD</b></p> <p><b>MP3 WMA DivX</b></p>
A-B	<p>During playback, each press of A-B button to select point A and point B and repeats a sequence from point A (Starting point) to point B (End point).</p>	<p><b>DVD VCD ACD</b></p> <p><b>MP3 WMA DivX</b></p>
TITLE	<p>If the current DVD title has a menu, the title menu appears on the screen. Otherwise, the disc menu may appears.</p>	<b>DVD</b>
MENU/LIST	<p>The disc menu appears on the screen.</p>	<b>DVD</b>
SUBTITLE (  )	<p>During playback, press SUBTITLE (  ) then press ◀ / ▶ repeatedly to select a desired subtitle language.</p>	<b>DVD DivX</b>
AUDIO (  )	<p>Press AUDIO (  ) then press ◀ / ▶ repeatedly to hear a different audio language or audio track.</p> <p>Press AUDIO (  ) then press ◀ / ▶ repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).</p>	<p><b>DVD DivX</b></p> <p><b>VCD</b></p>

## If a menu screen is displayed **DVD VCD**

The menu screen may be displayed first after loading a DVD or Video CD which contains a menu.

### **DVD**

Use the ◀ / ▶ / ▲ / ▼ buttons to select the title/chapter you want to view, then press ENTER to start playback.

Press TITLE or MENU/LIST to return to the menu screen.

### **VCD**

- Use the number buttons to select the track you want to view.  
Press RETURN (↵) to return to the menu screen.
- Menu setting and the exact operating procedures for using the menu may differ depending on the disc. Follow the instructions on the each menu screen. You may also set PBC to [OFF] under Setup menu (see page 14).

## Moving to another TITLE **DVD DivX VCD**

When a disc has more than one title, you can move to another title as follows:

- Press DISPLAY during playback then use ▲ / ▼ to select the title icon. Then, press the appropriate numbered button (0-9) or ◀ / ▶ to select a title number.

### **Note:**

On a Video CD with PBC, you must set PBC to OFF in the Setup menu. See page 14

## Time Search **DVD DivX VCD**

To start playing at any chosen time on the disc:

1. Press DISPLAY during playback. The time search box shows the elapsed playing time.
2. Press ▲ / ▼ to select the time icon and "--:--:--" appears.
3. Input the required start time in hours, minutes, and seconds from left to right.  
To cancel the inputting, press CLEAR.
4. Press ENTER to confirm. Playback starts from the selected time.

### **Note:**

On a Video CD with PBC, you must set PBC to OFF in the Setup menu. See page 14

## Marker Search **DVD VCD DivX**

### **To enter a Marker**

You can start playback from up to nine memorized points. To enter a marker, press MARKER at the desired point on the disc during playback. The Marker icon appears on the TV screen briefly. Repeat to enter up to nine markers.

## **To Recall or Clear a Marked Scene**

1. During disc playback, press SEARCH. The marker search menu appears on the screen.
2. Within 5 seconds, press ◀ / ▶ to select a marker number that you want to recall or clear.
3. Press ENTER and playback starts from the marked scene. Or, press CLEAR and the marker number is erased from the list.

## Camera Angle **DVD**

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.

1. Press DISPLAY during playback.  
The On-Screen Display appears on the TV screen.
2. Use ▲ / ▼ to select the Angle icon in the On-Screen Display.
3. Use ◀ / ▶ to select a desired angle.  
The number of the current angle appears on the TV screen.

## Virtual Surround **DVD DivX**

This unit can produce a Virtual Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a home theater system.

1. Press DISPLAY during playback. The On-Screen Display appears on the TV screen.
2. Use ▲ / ▼ to select the Sound icon in the On-Screen Display.
3. Use ◀ / ▶ to select "VIRTUAL".  
To turn off the Virtual Surround effect, select "Normal".

You can also set the Virtual Surround by pressing VSM repeatedly.

## Last Condition Memory **DVD VCD**

This unit memorizes the user settings for the last disc that you have viewed. Settings remain in memory even if you remove the disc from the unit. If you load a disc that had its settings memorized, the latest stop position is automatically recalled.

### **Note:**

Settings are stored in memory for use any time.

## Playing a DivX Movie File

The unit can play Divx files. Before playing DivX files, read "DivX file requirement" on right.

1. Press HOME then select [MOVIE] option.
2. Select a media that contains Divx file(s) then press ENTER.  
The [Movie List] menu appears on the TV screen.



3. Press ▲ / ▼ to select a folder, and press ENTER.  
A list of files in the folder appears. If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight [Back] and press ENTER.
4. If you want to view a divx movie file, press ▲ / ▼ to highlight a file and press ► (PLAY).  
You can use variable playback functions.  
Refer to pages 17-19.
5. Press ■ (STOP) to stop the playback. The [Movie List] menu appears.

### Notice for displaying the DivX subtitle

If the subtitle does not display properly, please follow the steps below.

1. Press ■ when the subtitle appears.
2. Press and hold SUBTITLE about 5 seconds.  
The language code will appear.
3. Press SUBTITLE to select another language code until the subtitle is displayed properly.
4. Press ► (PLAY) to continue playback.

### Movie List menu options

1. Press ▲ / ▼ to select a folder/file on the [Movie List] menu then press ENTER.  
[Movie List] menu options appear.  
The menu options displayed differ depending on the selected media.
2. Press ▲ / ▼ / ◀ / ▶ to select an option, and press ENTER.
  - [Play] Start playback the selected title.
  - [Open] Opens the folder and a list of files in the folder appears.

### DivX file requirement

**Available resolution size:** 720x576 (W x H) pixel

**DivX file extensions:** ".avi", ".divx"

**Playable DivX subtitle:** ".smi", ".srt", ".ssa", ".sub (Micro DVD format)", ".txt (Micro DVD format)"

**Playable Codec format:** "DIV3", "DIVX", "DX40", "DX50", "3ivx", "MP4V2", "MP4V3"

**Playable Audio format:** "AC3", "PCM", "MP3", "DTS"

- Sampling frequency:  
within 16 - 48 kHz (MP3)
- Bit rate:  
within 32 - 320kbps (MP3)

**CD-R Format:** ISO 9660 and JOLIET.

**DVD±R/RW Format:** ISO 9660 (UDF Bridge format)

**Maximum Files/Disc:** Less than 999 (total number of files and folders)

### Notes on DivX format

- If the number of the screen frame is over 29.97 frames per second, this unit may not operate normally.
- If the video and audio structure of recorded file is not interleaved, returns to the menu screen.

## Playing an Audio CD or MP3/WMA file

The unit can play audio CDs and MP3/WMA files.  
Before playing MP3/WMA files, read "MP3/WMA audio file requirement" on right.

1. Press HOME.  
The HOME menu appears.
2. Select [MUSIC] option.
3. Select a media that contains MP3/WMA or audio title then press ENTER.  
The [Music List] menu appears on the TV screen.



4. Use ▲/▼ to select a track then press ► (PLAY).  
Playback starts.  
You can use variable playback functions.  
Refer to pages 17-18.

### Tips:

- If you want to move to the upper directory, use the ▲ / ▼ to highlight and press ENTER.
- Press and hold ▲ to move to the previous page.  
Press and hold ▼ to move to the next page.
- 5. To stop playback at any time, press STOP.

## Audio CD and Music menu options

1. Press ▲ / ▼ to select a folder/file on the Audio CD or Music menu then press ENTER.  
The menu options appear.  
The menu options displayed differ depending on the selected media.
2. Press ▲ / ▼ / ◀ / ▶ to select an option, and press ENTER.
  - [Play] Start playback the selected title.
  - [Random] Start or cancel random playback.
  - [Open] Opens the folder and a list of files in the folder appears.
  - [Prog. add] Adds the track(s) to Program list. (page 22)

## Random

1. Press ▲ / ▼ to select a file then press ENTER.  
The menu options appear.
2. Press ▲ / ▼ to select [Random] option then press ENTER.  
The unit automatically begins random playback and "RANDOM" appears on the menu screen.
3. To return to normal playback, select [Random] option again then press ENTER.

### Tip:

By pressing ►► during Random playback, the unit selects another track and resumes Random playback.

## MP3/WMA audio file requirement

### File extensions

".mp3", ".wma".

### Sampling frequency:

within 16 - 48 kHz (MP3), within 8 - 48kHz (WMA)

### Bit rate:

within 32 - 320kbps (MP3), 5 - 192kbps (WMA)

### CD-R Format:

ISO 9660 and JOLIET.

### DVD±R/RW Format:

ISO 9660 (UDF Bridge format)

### Maximum Files/Disc:

Less than 999 (total number of files and folders)

## Program Playback with Audio CD and MP3/WMA file

Program Playback enables you to make custom playlists of Audio CD or MP3/WMA tracks. Programs can contain up to 99 Audio CD tracks or 256 MP3/WMA files.

1. Use ▲ / ▼ to select a track/file (or folder) on the Audio CD or Music menu.

### Selecting multiple files/tracks (folders)

1. Press MARKER.

A check mark appears on the file/track or folder. Press MARKER again to cancel the marked file/track or folder.

2. Repeat step 1 to mark additional file/track (folders).
2. Press ENTER.  
The options appear on the left side of the menu.
3. Use ▲ / ▼ to select the [Prog. add] option then press ENTER.
4. Repeat steps 1-3 to mark additional tracks.

### Note:

If you select a folder for Programmed Playback, all tracks/files in the folder are added to the Program List.




5. Use ► to move to the Program list.  
The programmed track you selected last is highlighted on the Program list.
6. Use ▲ / ▼ to select the track you want to start playing.
7. Press ► (PLAY) to start.  
Playback stops after playing the last programmed track in the Program list.
8. To exit Program Playback and resume normal playback, select a track on the original list by pressing ◀ and ▲ / ▼ and press ► (PLAY).

### Tips:

- You can access or remove the Program list screen by pressing MENU/LIST.
- You can not remove the Program list screen during the programmed playback and the programmed

## Program list menu options

1. Press ▲ / ▼ to select a track/file on the Program list then press ENTER.  
The menu options appear.

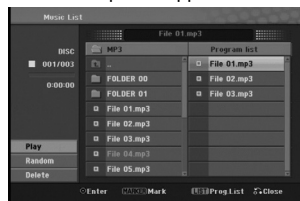

2. Use ▲ / ▼ to select an option then press ENTER to confirm your selection.
  - [Play] Playback begins in the order in which you programmed the tracks from the selected track.
  - [Random] Start or cancel random playback.
  - [Delete] Deletes the track(s) from the Program list menu.

## Repeat Programmed Tracks

Press REPEAT to select the desired Repeat mode.

- [TRACK] Repeats the current track.
- [ALL] Repeats all tracks on the Program List.
- [OFF] Cancels Repeat mode (no display).

## Erasing a Track from the Program list

1. Select the track you wish to erase from the Program list. Use MARKER button to select multiple tracks.
2. Press ENTER. The menu options appears
3. Select [Delete] option then press ENTER.

## Viewing a JPEG File

This unit can play JPEG files. Before playing JPEG recordings, read "Photo file requirement" on right.


1. Press HOME.  
The HOME menu appears.
2. Select [PHOTO] option.
3. Select a media that contains JPEG file then press ENTER.  
The [Photo List] menu appears on the TV screen.



4. Use ▲ / ▼ to select a file, then press ENTER.  
The menu options appear on the left side of the menu.

### Tips:

- If you want to move to the upper directory, use the ▲ / ▼ to highlight [ ] and press ENTER.
  - You can also display HOME menu to select another media by pressing HOME.
5. Use ▲ / ▼ to select [Full Screen] then press ENTER.  
The selected image is displayed in full screen.  
Depending upon the size and number of JPEG files, it could take a long time for the unit to read the files.

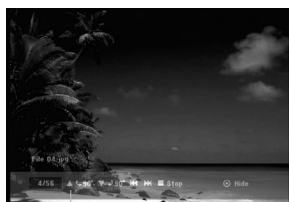

Press ENTER to appear or disappear this menu during viewing the full screen.

6. To stop viewing at any time, press STOP.  
The [Photo List] menu appears.

## Photo List menu options

1. Press ▲ / ▼ to select a file on the [Photo List] menu then press ENTER.  
The menu options appear.  
The menu options displayed differ depending on the selected media.

### Selecting multiple files (folders)

1. Press MARKER.  
*A check mark appears on the file or folder.  
Press MARKER again to cancel the marked file or folder.*
  2. Repeat step 1 to mark additional file (folders).
2. Use ▲ / ▼ to select an option then press ENTER to confirm your selection.
    - [Open] Opens the folder and a list of files in the folder appears
    - [Full Screen] Shows the selected file as full screen.
    - [Slide Show] Displays Slide Show menu.

## Photo file requirement

### File extensions

“.jpg”

### Photo size:

Less than 4MB recommended

### CD-R Format:

ISO 9660 and JOLIET.

### DVD±R/RW Format:

ISO 9660 (UDF Bridge format)

### Maximum Files/Disc:

Less than 999 (total number of files and folders)

### Notes on JPEG file

Progressive and lossless compression JPEG image files are not supported.

### Skip Images

While viewing a picture, press ◀◀ or ▶▶ once to return to the previous file or advance to the next file.

### Rotate Images


Use ▲ / ▼ while viewing a picture to flip the picture counterclockwise or clockwise.

### View Slide Shows

Slide show will automatically go to next picture at a specified interval.

1. Select [Slide Show] option on the [Photo List] menu.
2. Press ENTER.

The Slide Show menu appears.

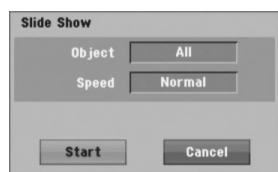

3. Use ◀ / ▶ / ▲ / ▼ to set the options.

[Object] option:

- [Selected] Views slide show only selected files with MARKER button. Use the MARKER button to select multiple files.
- [All] Views slide show all files.

[Speed] option:

Sets the Slide Show speed to [Slow], [Normal], or [Fast].

4. Select the [Start] option then press ENTER to start the Slide Show.
5. Press STOP to stop the Slide Show and returns to the [Photo List] menu.

### To Pause the Slide Show

1. Press || to pause slide show.
2. When you want to continue slide show, press || or ▶ (PLAY).



## AUX/MOBILE/SCART/OPTICAL (Listening to an external source)

You can listen to the sound of the connected external device through your unit.

1. Check the external device has been properly connected. (See **Connecting an additional appliance** on page 11.)
2. Press MOBILE on the remote control to select MOBILE mode. (If you are in any menu mode, remove it completely by pressing RETURN or HOME repeatedly.)

or

Press HOME and ◀ or ▶ to select Easy Menu, and then select AUX, SCART or OPTICAL.

3. To avoid noise distortion, turn down the volume on your external device.
4. Press PLAY on the connected device to start playback.
5. To adjust the sound and volume, use the sound controls on your external device and this unit.

### **Note:**

In MOBILE mode, ► (PLAY), ■, ◀◀ and ▶▶ buttons operate only on the connected Apple iPod through an Apple iPod universal dock with a built-in infrared (IR) receiver. To release the MOBILE mode, press mode button (TUNER, DISC, USB) you want, or press HOME.

## Using Apple iPod

You can perform the basic operations of your iPod using the supplied remote control with this unit.

### **Notes:**

- You need an Apple iPod universal dock with a built-in infrared (IR) receiver and an audio cable with a 3.5 millimeter stereo miniplug.
- It works with all iPod models that have a dock connector.
- Depending on the type of iPod, you may need to insert one of the dock adapters into the dock slot before you station your iPod.
- Adjust the volume to a moderate level before you connect your iPod and this unit.

1. Station your iPod in the dock.
  2. Connect one end of an audio cable with a 3.5 millimeter stereo miniplug into the **MOBILE** jack on the rear of the active subwoofer.
  3. Connect the other end of an audio cable with a 3.5 millimeter stereo miniplug into the dock line out jack.
  4. Press MOBILE on the remote control to select MOBILE mode.
  5. Point the supplied remote control with this unit at the front of the dock.
  6. Press ► (PLAY), ■, ◀◀ or ▶▶ on the supplied remote control with this unit to turn iPod on.
  7. You can control play (►), pause (■) and skip (◀◀/▶▶).
- You can turn iPod off by pressing and holding ► (PLAY) or ■ on the supplied remote control with this unit.

# Reference

## Additional Information

### Presetting the Radio Stations

You can preset 50 stations for FM and AM (MW). Before tuning, make sure that you have turned down the volume.

1. Press TUNER on the remote control. (If you are in any menu mode, remove it completely by pressing RETURN or HOME repeatedly.)  
or  
On the home menu screen, select RADIO and then press ENTER.
2. And then every time you press TUNER, FM and AM (MW) changes alternately.
3. Press and hold TUN.- or TUN.+ on the remote control for about three seconds until the frequency indication starts to change, then release. Scanning stops when the unit tunes in a station.
4. Press PROG./CLEAR on the remote control. A preset number will flash in the display window.
5. Press PRESET + or PRESET - on the remote control to select the preset number you want.
6. Press PROG./CLEAR on the remote control. The station is stored.
7. Repeat steps 3 to 6 to store other stations.

### To tune in a station with a weak signal

Press TUN.- or TUN.+ repeatedly in step 3 to tune in the station manually.

### To clear all the stored stations

Press and hold PROG./CLEAR for about five seconds and "ERASE ALL" is appeared in the display window and then press PROG./CLEAR again, the stations are cleared.

- If you have accidentally entered into the "ERASE ALL" mode and you do not wish to clear the memory, do not press any key. After a few seconds "ERASE ALL" will go off by itself and change to normal mode.

### Note:

If all stations have already been entered, the FULL message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 5-6 as above.

## Listening to the Radio

Preset radio stations in the unit's memory first (see "Presetting the radio stations" on the left).

1. Press TUNER until AM (MW) or FM appears in the display window.  
The last received station is tuned in.
2. Press PRESET + or PRESET - repeatedly on the remote control to select the preset station you want.  
Each time you press this button, the unit tunes in one preset station at a time.
3. Adjust the volume by pressing VOL + or VOL- on the remote control repeatedly.

### To turn off the radio

Press POWER to turn the unit off or select another function mode (MOBILE, DISC, USB).

### To listen to non-preset radio stations

- Use manual or automatic tuning.
- For manual tuning, press TUN.- or TUN.+ on the remote control repeatedly.
- For automatic tuning, press and hold TUN.- or TUN.+ on the remote control for about three seconds on the remote control.

### To select a preset radio station directly

You can use the number buttons on the remote control to select a preset radio station directly. For example, to listen to the preset station 4, press 4 on the remote control. To listen to the preset station 19, press 1 and then 9 (within 3 seconds).

## For your reference

### • If an FM program is noisy

Press AUDIO repeatedly on the remote control so that "STEREO" disappears in the display window. There will be no stereo effect, but the reception will improve. Press this button repeatedly again to select "STEREO".

### • To improve reception

Reorient the supplied antennas.

## RDS Operation

This unit is equipped with RDS (Radio Data System), which brings a wide range of information to FM radio. Now in use in many countries, RDS is a system for transmitting station call signs or network information, a description of station programme type text message about the station or specifics of musical selection and the correct time.

### RDS Tuning

When a FM station is tuned in and it contains RDS data, the unit will automatically display the station's call sign as well as indicators for the RDS services programme (PS), programme type recognition (PTY), Radiotext (RT) and Clock Time (CT) if transmitted by the station.

### RDS Display Options

The RDS system is capable of transmitting a wide variety of information in addition to the initial call sign that appears when a station is first tuned. In normal RDS operation the display will indicate the station name, broadcast network or call letters.

Pressing **RDS/RESOL.** and **▲** or **▼** enables you to cycle through the various data types:

- **PTY (Programme type recognition)**- The name of the programme type is shown in the Display Window.
- **RT (Radiotext)**- A "text" message contains special information from the broadcast station. Note that this message may scroll across the display to permit message.
- **CT (Time controlled by the channel)**- Enables the unit to receive the actual time and show it in the Display Window.
- **PS (Programme Service name)**- The name of the channel is shown in the Display Window.

#### Note:

Some RDS stations may not choose to include some of these additional features. If the data required for the selected mode is not being transmitted, the Display Window will show a **PTY NONE**, **RT NONE**, **CT NONE**, **PS NONE** message.

## Programme Search (PTY)

A major benefit of RDS is its ability to encode broadcasts with Programme Type (PTY) codes that indicate the type of material being broadcast. The following list shows the abbreviations used to indicate each PTY along with an explanation of the PTY.

News	News
Affairs	Current Affairs
Info	Information
Sport	Sports
Educate	Educational
Drama	Drama
Culture	Culture
Science	Science
Varied	Varied Speech Programme
Pop M	Popular Music
Rock M	Rock Music
Easy M	Easy Listening Music
Light M	Classical Music
Classics	Serious Classical Music
Other M	Other Music
Weather	Weather Information
Finance	Financial Programmes
Children	Children's Programmes
Social	Social Affairs Programmes
Religion	Religious Broadcasts
Phone In	Phone-In Programmes
Travel	Travel and Touring
Leisure	Leisure and Hobby
Jazz	Jazz Music
Country	Country Music
Nation M	National Music
Oldies	Oldies Music
Folk M	Folk Music
Document	Documentary Programmes
TEST	Station Alarm Test Message
Alarm !	Emergency Broadcast Information

You may search for a specific Programme Type (PTY) by following these steps:


1. Press **TUNER** to select FM mode.
2. Press **PTY** on the remote control, the display will show the last PTY in use.
3. Press **▲** or **▼** to select a desired PTY.
4. When the desired the PTY is selected, press **◀** or **▶**.  
The unit will go into an automatic search mode.  
When a station is tuned, the search will stop.

## Sleep

You can set a certain period of time after which the unit will switch to standby.

1. On the remote control, press SLEEP repeatedly to select the desired time period options (in minutes):
  - Display shows the selected option briefly and returns to its previous status.
2. To view the time countdown to the standby mode, press SLEEP again.  
To deactivate the sleep timer, press SLEEP until previous status is displayed.

or

Press POWER to switch the unit to standby (or  on the front of the unit).

## Dimmer

This function will change the brightness of the display window on the top panel during in power-on status. Press DIMMER repeatedly.

## XTS pro

Each time you press **XTS pro** the setting changes in the following order.

NORMAL ↔ XTS-P ON

- **XTS-P ON**  
The unique sound quality of the LG Technology creates the optimum sound for you to play the perfect playback of the original sound and to feel the living sound source.
- **NORMAL**  
XTS-P mode tune off

## Virtual sound

Press **VSM** to set the virtual sound.

Source	Display	Effect
2.1 ch.	VIRTUAL ON	3D STEREO
5.1 ch	VIRTUAL ON	Virtual sound


- **3D STEREO**  
Realtime 3D positioned sound rendering technology with stereo sources, optimized for stereo speakers. Listeners may experience amazing virtual surround effects with their own multimedia players.
- **Virtual sound**  
A pending downmix technology converts 5.1 channel to 2 channel sound having directional information of audio. And it makes a 2 channel or 2.1 channel feel 5.1 channel sound.

## Controlling Your TV with the Supplied Remote Control

You can control the sound level, input source, and power switch of your LG/GoldStar TV with the supplied remote.

1. While holding down TV POWER button, press CHANNEL + or -.
2. Release TV POWER button.

You can control your TV using the buttons below.

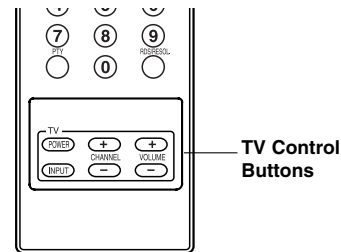

By pressing	You can
POWER	Turn the TV on or off.
INPUT	Switch the TV's input source between the TV and other input sources.
CHANNEL +/-	Scans up or down through memorized channels.
VOLUME +/-	Adjust the volume of the TV.

### Note:

When you replace the batteries of the remote, you may have reset the remote control.

## Language Codes

Use this list to input your desired language for the following initial settings:  
Disc Audio, Disc Subtitle, Disc Menu.

Language	Code	Language	Code	Language	Code	Language	Code
Abkhazian	6566	Fiji	7074	Lingala	7678	Singhalese	8373
Afar	6565	Finnish	7073	Lithuanian	7684	Slovak	8375
Afrikaans	6570	French	7082	Macedonian	7775	Slovenian	8376
Albanian	8381	Frisian	7089	Malagasy	7771	Somali	8379
Ameharic	6577	Galician	7176	Malay	7783	Spanish	6983
Arabic	6582	Georgian	7565	Malayalam	7776	Sudanese	8385
Armenian	7289	German	6869	Maltese	7784	Swahili	8387
Assamese	6583	Greek	6976	Maori	7773	Swedish	8386
Aymara	6588	Greenlandic	7576	Marathi	7782	Tagalog	8476
Azerbaijani	6590	Guarani	7178	Moldavian	7779	Tajik	8471
Bashkir	6665	Gujarati	7185	Mongolian	7778	Tamil	8465
Basque	6985	Hausa	7265	Nauru	7865	Tatar	8484
Bengali; Bangla	6678	Hebrew	7387	Nepali	7869	Telugu	8469
Bhutani	6890	Hindi	7273	Norwegian	7879	Thai	8472
Bihari	6672	Hungarian	7285	Oriya	7982	Tibetan	6679
Breton	6682	Icelandic	7383	Panjabi	8065	Tigrinya	8473
Bulgarian	6671	Indonesian	7378	Pashto, Pushto	8083	Tonga	8479
Burmese	7789	Interlingua	7365	Persian	7065	Turkish	8482
Byelorussian	6669	Irish	7165	Polish	8076	Turkmen	8475
Cambodian	7577	Italian	7384	Portuguese	8084	Twì	8487
Catalan	6765	Japanese	7465	Quechua	8185	Ukrainian	8575
Chinese	9072	Javanese	7487	Rhaeto-Romance	8277	Urdu	8582
Corsican	6779	Kannada	7578	Rumanian	8279	Uzbek	8590
Croatian	7282	Kashmiri	7583	Russian	8285	Vietnamese	8673
Czech	6783	Kazakh	7575	Samoan	8377	Volapük	8679
Danish	6865	Kirghiz	7589	Sanskrit	8365	Welsh	6789
Dutch	7876	Korean	7579	Scots Gaelic	7168	Wolof	8779
English	6978	Kurdish	7585	Serbian	8382	Xhosa	8872
Esperanto	6979	Laotian	7679	Serbo-Croatian	8372	Yiddish	7473
Estonian	6984	Latin	7665	Shona	8378	Yoruba	8979
Faroeese	7079	Latvian, Lettish	7686	Sindhi	8368	Zulu	9085

## Area Codes

Choose an area code from this list.

Area	Code	Area	Code	Area	Code	Area	Code
Afghanistan	AF	Ethiopia	ET	Malaysia	MY	Saudi Arabia	SA
Argentina	AR	Fiji	FJ	Maldives	MV	Senegal	SN
Australia	AU	Finland	FI	Mexico	MX	Singapore	SG
Austria	AT	France	FR	Monaco	MC	Slovak Republic	SK
Belgium	BE	Germany	DE	Mongolia	MN	Slovenia	SI
Bhutan	BT	Great Britain	GB	Morocco	MA	South Africa	ZA
Bolivia	BO	Greece	GR	Nepal	NP	South Korea	KR
Brazil	BR	Greenland	GL	Netherlands	NL	Spain	ES
Cambodia	KH	Heard and McDonald Islands	HM	Netherlands Antilles	AN	Sri Lanka	LK
Canada	CA	Hungary	HU	New Zealand	NZ	Sweden	SE
Chile	CL	India	IN	Nigeria	NG	Switzerland	CH
China	CN	Indonesia	ID	Norway	NO	Thailand	TH
Colombia	CO	Israel	IL	Oman	OM	Turkey	TR
Congo	CG	Italy	IT	Pakistan	PK	Uganda	UG
Costa Rica	CR	Jamaica	JM	Panama	PA	Ukraine	UA
Croatia	HR	Japan	JP	Paraguay	PY	United States	US
Czech Republic	CZ	Kenya	KE	Philippines	PH	Uruguay	UY
Denmark	DK	Kuwait	KW	Poland	PL	Uzbekistan	UZ
Ecuador	EC	Libya	LY	Portugal	PT	Vietnam	VN
Egypt	EG	Luxembourg	LU	Romania	RO	Zimbabwe	ZW
El Salvador	SV			Russian Federation	RU		

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Solution
No power.	<ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the power cord into the wall outlet securely.</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive unit signal output.</li> <li>The video cable is not connected securely.</li> <li>The connected TV power is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.</li> <li>Connect the video cable securely.</li> <li>Turn on the TV.</li> </ul>
Sound cannot be heard or is of poor quality.	<ul style="list-style-type: none"> <li>The volume is minimized.</li> <li>The headphones are connected.</li> <li>The MUTE button is switched on.</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the volume.</li> <li>Disconnect the headphones.</li> <li>Switch off MUTE.</li> </ul>
The playback picture is poor.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
The unit does not start playback.	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> <li>The disc is placed upside down.</li> <li>The disc is dirty.</li> <li>The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system, and regional code.)</li> <li>Place the disc with the playback side down.</li> <li>Clean the disc.</li> <li>Cancel the Rating function or change the rating level.</li> </ul>
Radio reception is poor	<ul style="list-style-type: none"> <li>The signal is too weak.</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the antenna or connect an external antenna for better reception.</li> </ul>
The remote control does not work properly.	<ul style="list-style-type: none"> <li>The remote control is not pointed at the remote sensor of the unit.</li> <li>The remote control is too far from the unit.</li> <li>There is an obstacle in the path of the remote control and the unit.</li> <li>The batteries in the remote control are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Point the remote control at the remote sensor of the unit.</li> <li>Operate the remote control within 7 m.</li> <li>Remove the obstacle.</li> <li>Replace the batteries with new ones.</li> </ul>
The display window is dim, and the light on the touch pad and the active subwoofer are turned off.	<ul style="list-style-type: none"> <li>The dimmer function is activated.</li> </ul>	<ul style="list-style-type: none"> <li>Switch off DIMMER.</li> </ul>
► (PLAY), II, I◀◀ and ▶▶I buttons do not operate.	<ul style="list-style-type: none"> <li>This unit is in MOBILE mode.</li> </ul>	<ul style="list-style-type: none"> <li>To release the MOBILE mode, press mode button (TUNER, DISC, USB) you want, or press HOME.</li> </ul>

### Resetting the unit

#### If you observe any of the following symptoms...

- The unit is plugged in, but the power will not turn on or off.
- The unit is not operating normally.

#### ...you can reset the unit as follows:

- Press and hold the POWER button for at least five seconds. This will force the unit to power off then turn the unit back on.
- Unplug the power cord, wait at least five seconds, and then plug it in again.

Specifications

General

Dimensions (approx.)	326 X 215 X 78 mm (w x h x d) without foot
Mass (approx.)	2.3kg
Operating temperature	5°C to 35°C
Operating humidity	5 % to 90 %

Audio recording format

Sampling frequency	44.1kHz
Compression format	MP3
Sampling bitrate	128Kbps

Playback

Frequency response	DVD (PCM 48 kHz): 20 Hz to 20 kHz, CD: 20 Hz to 20 kHz DVD (PCM 96 kHz): 20 Hz to 44 kHz
Signal-to-noise ratio	More than 85 dB (SPEAKER OUT)
Harmonic distortion	Less than 0.007% (SPEAKER OUT)
Dynamic range	More than 85 dB (SPEAKER OUT)

Inputs

Audio input (optical audio)	3 V (p-p), 75 Ω, Optical connector x 1
VIDEO IN	1.0 Vp-p 75 ohms, sync negative, SCART x 1
AUDIO IN	0 dBm more than 47 kohms, RCA jack (L, R) x 1/ SCART x 1

Outputs

VIDEO OUT	1 Vp-p 75 Ω, sync negative, RCA jack x 1/ SCART x 1
COMPONENT VIDEO OUT	(Y) 1.0 V (p-p), 75 Ω, negative sync, RCA jack x 1 (Pb)/(Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2
HDMI video/audio output	19 pin (HDMI standard, Type A)

Amplifier

Output power	Front: 75W + 75W (4Ω at 1 kHz, THD 10 %) Subwoofer: 150W (3Ω at 60 Hz, THD 10 %)
--------------	---

Tuner Specifications

Tuning Range (FM)	87.5 - 108 MHz
Intermediate Frequency (FM)	10.7 MHz
Signal-to-noise ratio	60 dB (Mono)
Tuning Range (AM)	522 - 1,620 kHz
Intermediate Frequency (AM)	450 kHz
Antenna	Wire antenna (FM) Loop antenna (AM)

Speakers

Front (J10D-SF)

Type:	2 Way 3 Speaker
Impedance:	4 Ω
Frequency Response:	100 - 20,000 Hz
Sound Pressure Level:	82 dB/W (1m)
Max. Input Power:	150W
Net Dimensions (WxHxD):	104 x 328 x 216 mm
Net Weight:	2.9 kg

Active Subwoofer (J10D-SA)

Power requirements:	AC 200-240V, 50/60 Hz
Power consumption:	75W
Type:	1 Way 1 Speaker
Impedance:	3 Ω
Frequency Response:	65 - 1,500 Hz
Sound Pressure Level:	80 dB/W (1m)
Max. Input Power:	300W
Net Dimensions (WxHxD):	216x 328 x 317 mm
Net Weight:	8.3 kg

- Designs and specifications are subject to change without notice for improvement.



P/NO : MFL38591079