



## **SXS** REFRIGERATOR (TV)- p 2 User's Guide

Please read this guide thoroughly before operating and keep it handy for reference at all times.

## **SXS** KJØLESKAP (TV)- p 29 Brukerhåndbok

Les håndboken grundig innen du betjener apparatet og oppbevar den på et tilgjengelig sted for senere oppslag.

## KYLSKÅP (TV) **SXS** - p 56 Bruksanvisning

Läs denna bruksanvisning noga innan du använder apparaten och spara den för framtida bruk.

## KØLESKAB (TV) **SXS** - p 83 Brugervejledning

Læs venligst denne vejledning før ibrugtagning, og hav den parat som hjælp, når det behøves.

## **SXS** JÄÄKAAPPI (TV) - p 110 Käyttöohje

Lue tämä käyttöohje huolellisesti ennen tuotteen käyttöä ja pidä se aina saatavilla myöhempää tarvetta varten.

---

# Contents

---

<b>Installation</b>	<b>3</b>
<b>Location and function of controls</b>	<b>4-6</b>
Front panel	
Remote control handset	
Battery installation	
<b>Connection to External equipment</b>	<b>7-8</b>
Antenna/Cable Connection	
Connecting a VCR	
Cable TV Connections	
Connecting a DVD	
<b>Basic operation</b>	<b>9</b>
On and Off	
Programme selection	
Volume adjustment	
Quick view	
Mute function	
On screen language selection (option)	
<b>On screen menus</b>	<b>10</b>
<b>Setting up TV stations</b>	<b>11-15</b>
Auto programme tuning	
Manual programme tuning	
Programme edit	
Calling the programme table	
<b>Picture adjustment</b>	<b>16-17</b>
CSM (Color Status Memory)	
PSM (Picture Status Memory)	
Manual Picture Control	
<b>Sound adjustment</b>	<b>18-20</b>
SSM (Sound Status Memory)	
Balance	
AVL (Auto Volume Leveler)	
Stereo/Dual/NICAM reception	
<b>Time Menu</b>	<b>21-22</b>
Clock	
On/Off Time	
Auto sleep	
Sleep timer	
<b>Radio Menu</b>	<b>23-24</b>
Basic Operation	
Radio Channel Manually Search	
Radio Channel Auto Search	
Favourite Channel Memory	
Stereo Broadcasts Setup	
<b>Teletext (option)</b>	<b>25-27</b>
<b>Troubleshooting check list</b>	<b>28</b>

---

---

# Installation

---

## Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or powercuts, please pull out the aerial and mains plugs.

## Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture. Do not rub or strike the Active Matrix LCD with anything hard as this may scratch, mar, or damage the Active Matrix LCD permanently.

## Service


Never remove the back cover of the set as this can expose you to high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

## Aerial

Connect the aerial cable to the socket marked 1175  $\Omega$  on the back. For the best reception an outdoor aerial should be used.

## Cleaning

Unplug the set before cleaning the face of the LCD Screen. Dust the set by wiping the screen and the cabinet with a soft, clean cloth. If the screen requires additional cleaning, use a clean, damp cloth. Do not use liquid cleaners or aerosol cleaners.

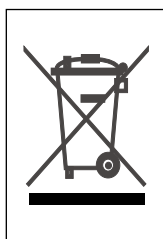

### DISPOSAL OF YOUR OLD APPLIANCE


1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European directive 2002/96/EU.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

---

# Location and function of controls

---

## Front panel

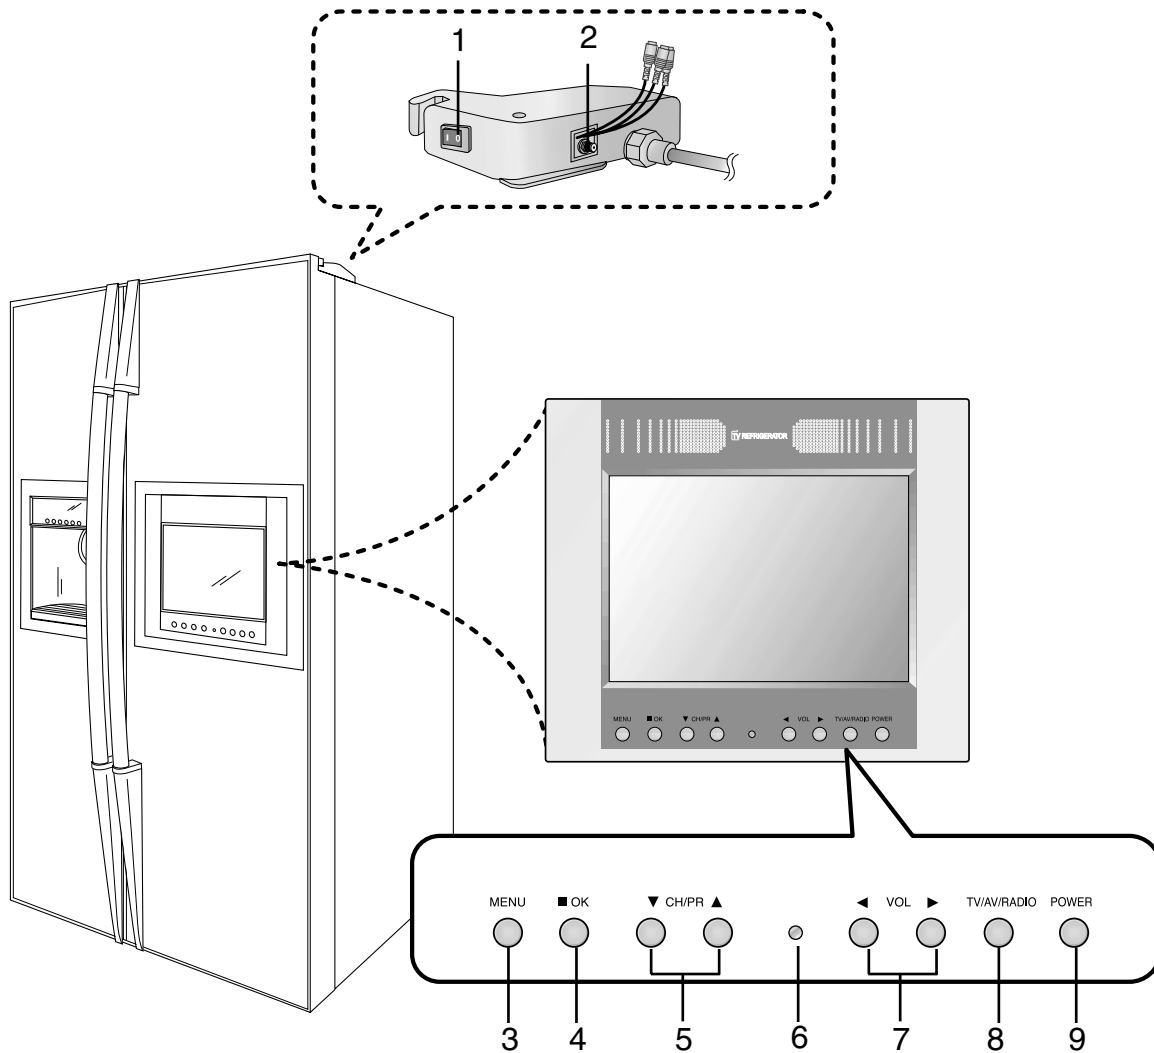

1. **MAIN POWER** Button
2. **Aerial Socket**
3. **MENU** Button
4. **OK** Button
5. **CH/PR** Down / Up Button
6. **REMOTE CONTROL SENSOR**


7. **VOLUME** Down / Up Button
8. **TV/AV/RADIO** Button
9. **POWER**  
switches the set on from standby or off to standby.

# Location and function of controls

## Remote control handset

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the panel of the set. Only the remote control handset supplied will operate this set.

Before you use the remote control handset, please install the batteries. See the next page.

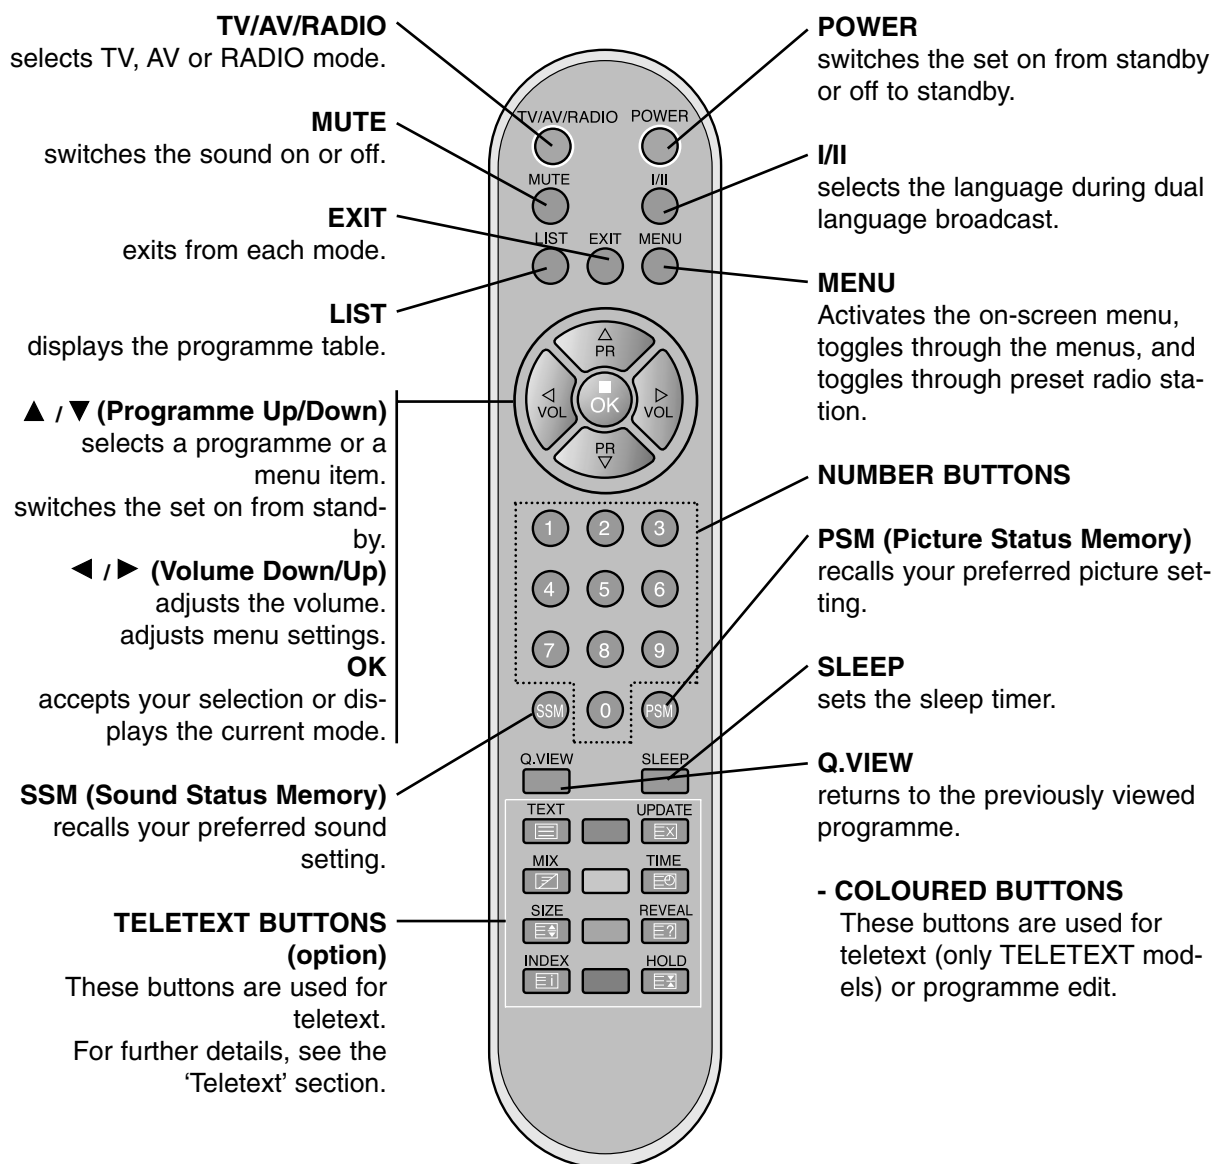

---

## Location and function of controls


---

### Battery installation

- Your remote control handset is powered by two AAA type batteries.


**1**

To insert batteries, turn the remote control handset over and remove the battery cover.

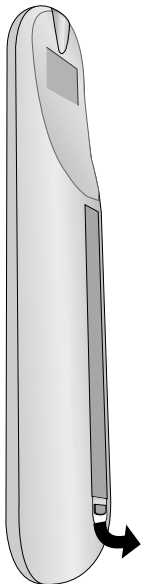


**2**

Put the two batteries into the compartment observing battery polarity.

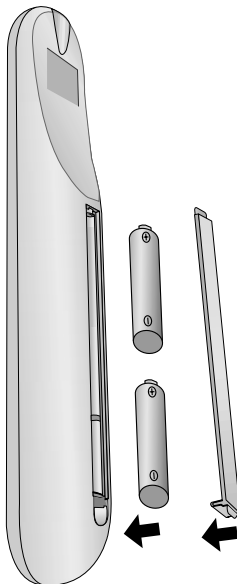

**3**

Replace the cover.

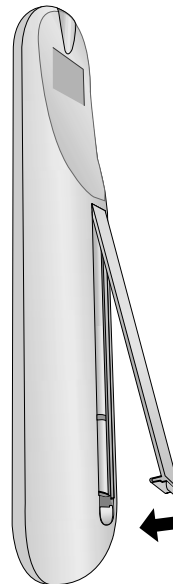



**Note :**

*To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period time. Do not use batteries of differing age or type. Always discard of batteries safely.*

# Connection to External equipment

## 1 Antenna/Cable Connection

- For optimum picture quality, adjust antenna direction if needed.

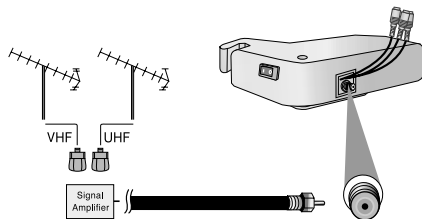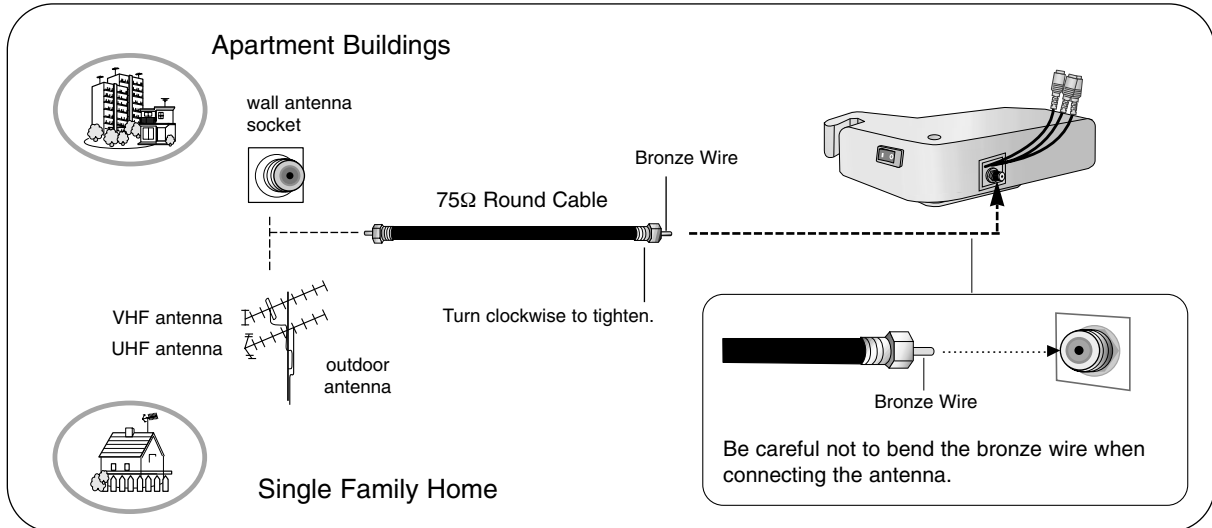

- In a poor signal area to improve picture quality, purchase and install a signal amplifier.
- If the antenna is not installed properly, contact your dealer for assistance.


## 2 Connecting a VCR

### Connection

1. Connect the audio/video out sockets of the VCR to audio/video in sockets of the set.
2. Press the **TV/AV/RADIO** button to select **AV**.
3. Press the **PLAY** button on the VCR.  
The VCR playback picture appears on the screen.

### Note :

- a If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** socket of the set.
- b When connecting the set to an external source, match the colours of AUDIO/VIDEO input jacks on the set with the output jacks on the audio/video equipment: Video = yellow, Audio (Left) = white, Audio (Right) = red.

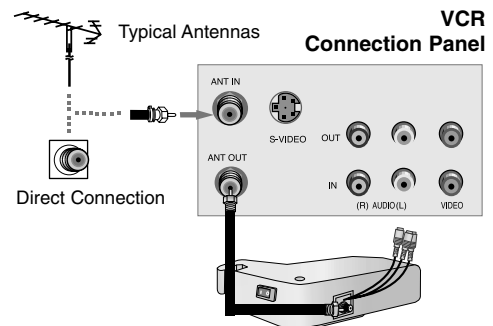

---

## Connection to External equipment


---

### 3 Cable TV Connections

- After subscribing to a local cable TV service and installing a converter, you can watch cable TV programming.
- For further cable TV information, contact a local cable service provider.

#### Connection

1. Use the **TV/AV/RADIO** button on the remote control to select **TV**.
2. Tune to cable service provided channels using the cable box.

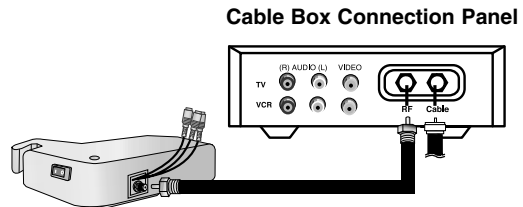


### 4 Connecting a DVD

#### Connection

1. Connect the audio/video out sockets of the DVD to audio/video in sockets of the set.
2. Press the **TV/AV/RADIO** button to select **AV**.
3. Press the **PLAY** button on the DVD.  
The DVD playback picture appears on the screen.

**Note :** When connecting the set to an external source, match the colours of AUDIO/VIDEO input jacks on the set with the output jacks on the audio/video equipment: Video = yellow, Audio (Left) = white, Audio (Right) = red.

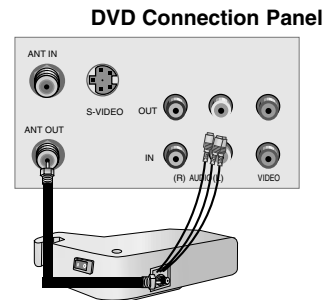



---

## Basic operation

---

### 1 On and off

1. Press the **POWER, PR (▲ / ▼)** buttons to switch it on fully.
2. Press the **POWER** button. The set reverts to standby mode.
3. Pull out mains plugs to switch the set off.

*Note : If, while the set is switched on, the mains plug is disconnected the set will switch to standby or power on when the mains plug is replaced in the mains power socket.*

### 2 Programme selection

You can select a programme number with the **▲ / ▼** or **NUMBER** buttons.

### 3 Volume adjustment

Press the **◀ / ▶** button to adjust the volume.

### 4 Quick view

Press the **Q.VIEW** button to view the last programme you were watching.

### 5 Mute function

Press the **MUTE** button. The sound is switched off and the display  appears. You can cancel it by pressing the **MUTE**, **◀ / ▶**, **I/II**, or **SSM** button.

### 6 On screen language selection (option)

The menu can be displayed on the screen in your desired language. First select your language.

1. Press the **MENU** button and then **▲ / ▼** button to select the **SETUP** menu.
2. Press the **▶** button to select **Language**.
3. Press the **OK** button.
4. Press the **▲ / ▼** button to select your desired language.  
All the on screen displays will appear in the selected language.
5. Press the **OK** button.
6. Press the **EXIT** button to return to normal TV viewing.

---

## On screen menus

---

- The dialogue between you and your set takes place on screen with an operator menu.
- The buttons required for the operating steps are also displayed.

1

Press the **MENU** button and then use **▲ / ▼** button to display each menu.

2


Press the **▶** button and then use **▲ / ▼** button to select a menu item.

Press the **▶** button to display the sub menu or the pull-down menu.

3

Change the setting of an item in the sub or pull-down menu with **◀ / ▶** or **▲ / ▼**.

You can move to the higher level menu with **◀** button and to move to the lower level menu press the **▶** button.

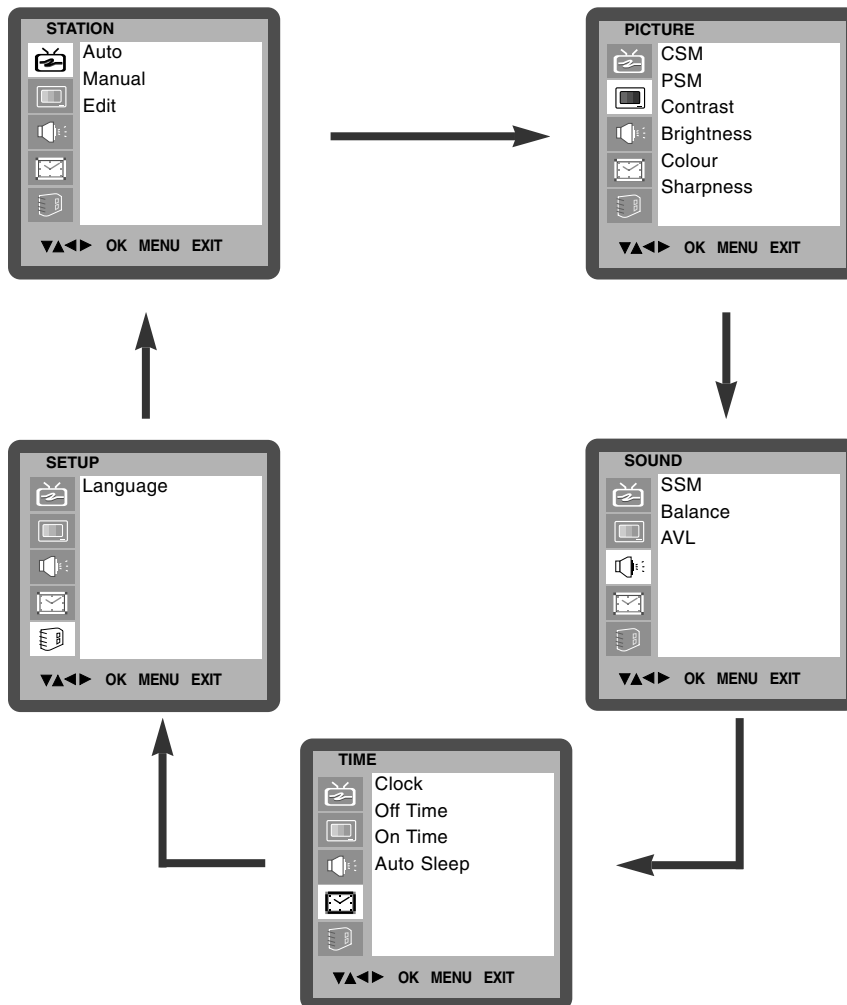


## Setting up TV stations

- Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the ▲ / ▼ or NUMBER buttons to scan the stations you have programmed.

### Auto programme tuning

- Stations can be tuned using automatic or manual modes.
1. Press the **MENU** button and then use ▲ / ▼ button to select the **STATION** menu.
  2. Press the ► button and then use ▲ / ▼ button to select **Auto**.
  3. Press the ► button to display the **Auto** menu.
  4. Press the ► button. Select a TV system with the ◀ / ▶ button on the **System** pull-down menu;

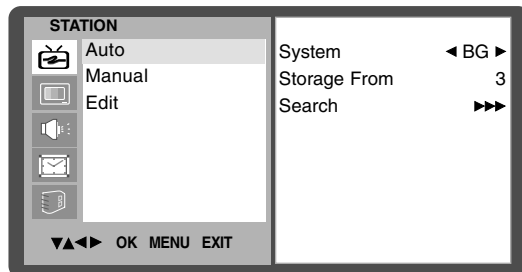


**BG** : PAL B/G, SECAM B/G (Europe/East Europe)

**I** : PAL I (U.K./Ireland)

**DK** : PAL D/K, SECAM D/K (East Europe)

**L** : SECAM L/L' (France)

5. Press the ▲ / ▼ button to select **Storage From**.
6. Select the beginning programme number with the ◀ / ▶ button on the **Storage From** pull-down menu.
7. Press the ▲ / ▼ button to select **Search**.
8. Press the ► button to begin auto programming.

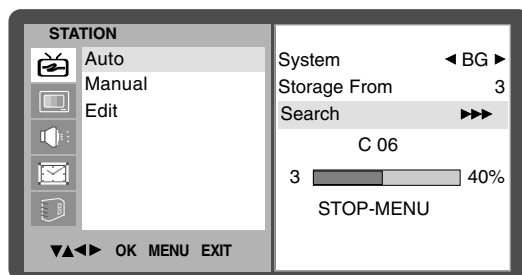

All receivable stations are stored.

The station name is stored for stations which broadcast VPS (Video Programme Service), PDC (Programme Delivery Control) or TELETEXT data. If no station name can be assigned to a station, the channel number is assigned and stored as **C** (V/UHF 01-69) or **S** (Cable 01-47), followed by a number.

To stop auto programming, press the **MENU** button.

When auto programming is completed, the **Edit** menu appears on the screen. See the 'Programme edit' section to edit the stored programme.

9. Repeatedly press the **MENU** button to return to normal TV viewing.


# Setting up TV stations




## Manual programme tuning

- Manual programme lets you manually tune and arrange the stations in whatever order you desire.
- Also you can assign a station name with five characters to each programme number.

1. Press the **MENU** button and then use  $\blacktriangle / \blacktriangledown$  button to select the **STATION** menu.
2. Press the  $\blacktriangleright$  button and then use  $\blacktriangle / \blacktriangledown$  button to select **Manual**.
3. Press the  $\blacktriangleright$  button to display the **Manual** menu.
4. Press the  $\blacktriangle / \blacktriangledown$  button to select **Storage**.

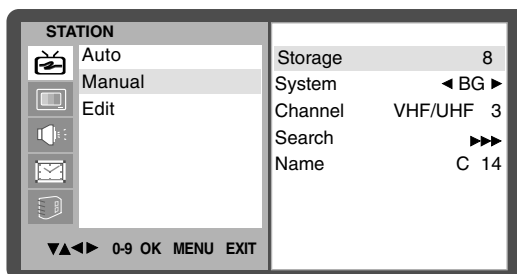

5. Press the  $\blacktriangleleft / \blacktriangleright$  button to select the programme number.
6. Press the  $\blacktriangle / \blacktriangledown$  button to select **System**.
7. Select a TV system with the  $\blacktriangleleft / \blacktriangleright$  button on the **System** pull-down menu;

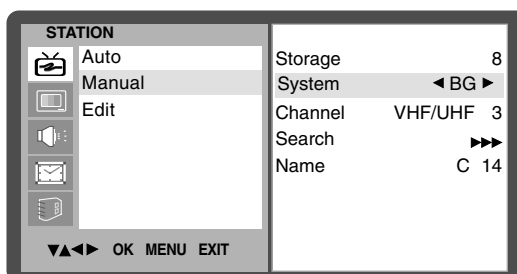

**BG** : PAL B/G, SECAM B/G (Europe/East Europe)

**I** : PAL I (U.K./Ireland)



**DK** : PAL D/K, SECAM D/K (East Europe)

**L** : SECAM L/L' (France)

8. Press the  $\blacktriangle / \blacktriangledown$  button to select **Channel**.
9. Press the  $\blacktriangleleft / \blacktriangleright$  button to select **VHF/UHF** or **Cable** on the **Channel** pull-down menu.

## Setting up TV stations


10. Press the ▲ / ▼ button to select **Search**.

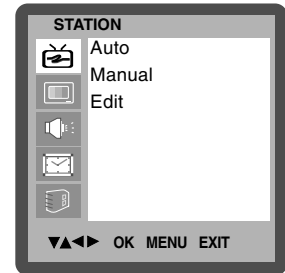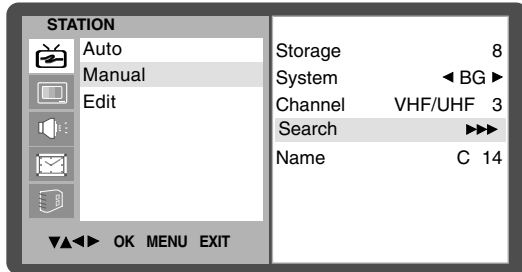

11. Press the ◀ / ▶ button to commence searching on the **Search** pull-down menu. If a station is found the search will stop.

12. If this station is the one required, press the **OK** button to store it.

13. Press the ▲ / ▼ button to select **Name**.

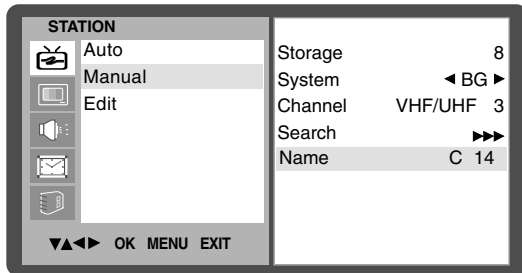

14. Press the ▶ button on the **Name** pull-down menu.

15. Press the ▲ button. You can use a blank, +, -, the numeric **0** to **9** and the alphabet **A** to **Z**.

With the ▼ button you can select in the opposite direction.

Select the position by pressing the ◀ / ▶ button and then take your choice of the second character, and so on.

16. Press the **OK** button.

17. Repeatedly press the **MENU** button to return to normal TV viewing.

---

# Setting up TV stations


---



## Programme edit

- This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or insert a blank station data into the selected programme number.

1. Press the **MENU** button and then use **▲ / ▼** button to select the **STATION** menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **Edit**.
3. Press the **▶** button to display the **Edit** menu.

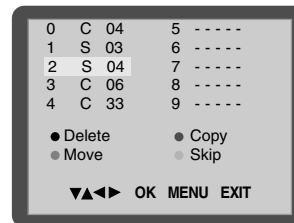

## Deleting a programme

1. Select a programme to be deleted with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **RED** button twice.  
The selected programme is deleted, all the following programmes are shifted up one position.

## Copying a programme

1. Select a programme to be copied with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **GREEN** button.  
All the following programmes are shifted down one position.

## Moving a programme

1. Select a programme to be moved with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **YELLOW** button.
3. Move the programme to the desired programme number with the **▲ / ▼** or **◀ / ▶** button.
4. Press the **YELLOW** button again to release this function.

## Skipping a programme number

1. Select a programme number to be skipped with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **BLUE** button.  
The skipped programme turns to blue.
3. Press the **BLUE** button again to release the skipped programme.  
When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

---

# Setting up TV stations


---

## Calling the programme table

- You can check the programmes stored in the memory by displaying the programme table.

## Displaying programme table

Press the **LIST** button to display the **Programme table** menu.  
The programme table appears on the screen. One programme table contains ten programmes as below.

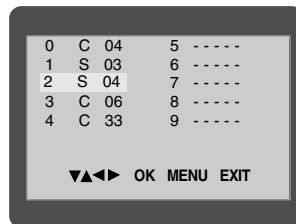

0	C	04	5	-----
1	S	03	6	-----
2	S	04	7	-----
3	C	06	8	-----
4	C	33	9	-----

▼▲◀▶ OK MENU EXIT

You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.  
Some programmes with the channel number shown in the programme table indicate there is no station name assigned.

## Selecting a programme in the programme table

Select a programme with the ▲ / ▼ or ◀ / ▶ button.  
Then press the **OK** button.  
The set switches to the chosen programme number.

## Paging through a programme table

There are 10 programme table pages which contain 100 programmes.  
Pressing the ▲ / ▼ or ◀ / ▶ button repeatedly turns the pages.

Repeatedly press the **MENU** button to return to normal TV viewing.

---

## Picture adjustment


---



### CSM (Color Status Memory)

- To initialize values (reset to default settings), select the **Normal** option.


1. Press the **MENU** button and then **▲ / ▼** button to select the PICTURE menu.
2. Press the **▶** button and then **▲ / ▼** button to select **CSM**.

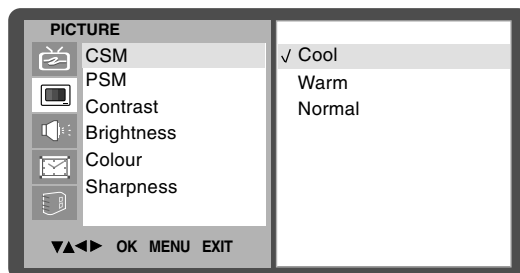

3. Press the **▶** button and then **▲ / ▼** button to select the desired colour temperature.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

### PSM (Picture Status Memory)

1. Press the **MENU** button and then use **▲ / ▼** button to select the PICTURE menu.
2. Press the **▶** button and then use **▲ / ▼** button to select **PSM**.

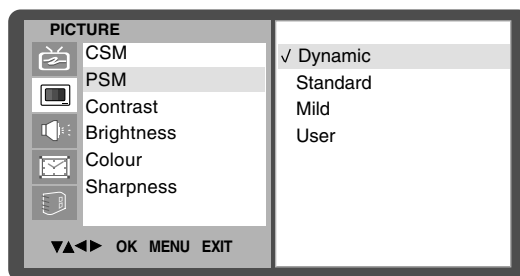

3. Press the **▶** button and then use **▲ / ▼** button to select a picture setting on the **PSM** pull-down menu.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

You can also recall a desired picture (**Dynamic**, **Standard**, **Mild** or **User**) with **PSM** button on the remote control. The picture **Dynamic**, **Standard**, **Mild** are programmed for good picture reproduction at the factory and cannot be changed.



---

# Picture adjustment

---

## Manual Picture Control

1. Press the **MENU** button and then use ▲ / ▼ button to select the **PICTURE** menu.
2. Press the ► button and then use ▲ / ▼ button to select the desired picture option.




3. Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

You can adjust picture contrast, brightness, colour, sharpness and tint (NTSC input only) to the levels you prefer.

---


# Sound adjustment

---

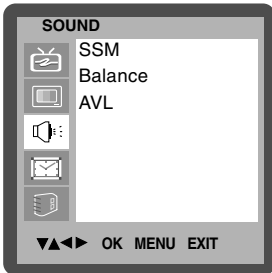

## SSM (Sound Status Memory)


1. Press the **MENU** button and then use ▲ / ▼ button to select the **SOUND** menu.
2. Press the ► button and then use ▲ / ▼ button to select **SSM**.

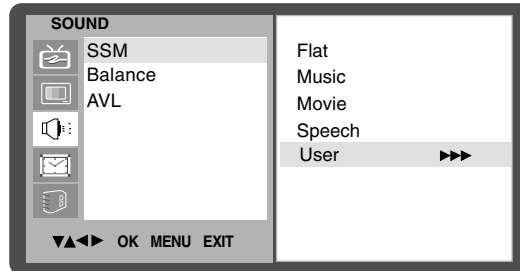

3. Press the ► button and then use ▲ / ▼ button to select a sound setting on the **SSM** pull-down menu.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

## Sound Frequency Adjustment

- a. Press the ► button in **User**.

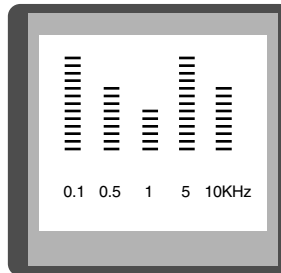

- b. Select a sound band by pressing the ◀ / ▶ button.
- c. Make appropriate sound level with the ▲ / ▼ button.
- d. Press the **OK** button to store it for the sound **User**.

You can also recall a desired sound (**Flat**, **Music**, **Movie**, **Speech** or **User**) with **SSM** button on the remote control. The sound **Flat**, **Music**, **Movie** and **Speech** are programmed for good sound reproduction at the factory and cannot be changed.



---

# Sound adjustment

---

## Balance


1. Press the **MENU** button and then use ▲ / ▼ button to select the **SOUND** menu.
2. Press the ► button and then use ▲ / ▼ button to select the desired sound item.

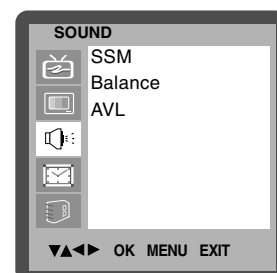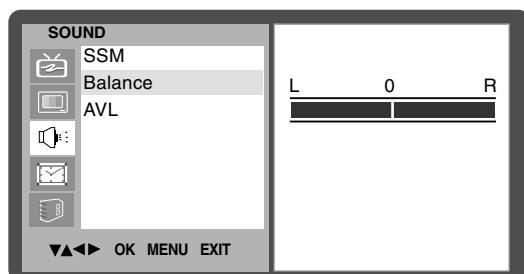

3. Press the ► button and then use ◀ / ▶ button to make appropriate adjustments.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

## AVL (Auto Volume Leveler)

1. Press the **MENU** button and then use ▲ / ▼ button to select the **SOUND** menu.
2. Press the ► button and then use ▲ / ▼ button to select **AVL**.

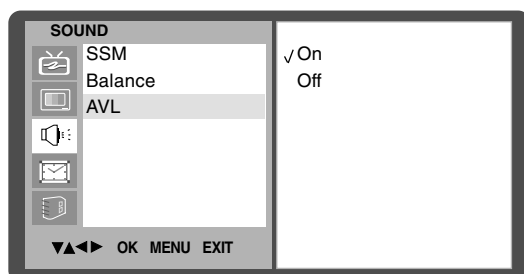

3. Press the ► button and then use ▲ / ▼ button to select **On** or **Off**.
4. Repeatedly press the **MENU** button to return to normal TV viewing.

This feature maintains an equal volume level; even if you change channels.

---

# Sound adjustment

---

## Stereo/Dual/NICAM reception

In AV mode, you can select output sound for the left and right loudspeakers. Repeatedly press the **I/II** button to select the sound output.

**L+R** : Audio signal from audio L input is sent to left loud-speaker and audio signal from audio R input is sent to right loudspeaker.

**L+L** : Audio signal from audio L input is sent to left and right loudspeakers.

**R+R** : Audio signal from audio R input is sent to left and right loud-speakers.

## Mono sound selection

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the **I/II** button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the **I/II** button twice again.

## Language selection for dual language broadcast

If a programme received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II** button repeatedly.

**DUAL I** sends the primary broadcast language to the loudspeakers.

**DUAL II** sends the secondary broadcast language to the loudspeakers.

**DUAL I+II** sends a separate language to each loudspeaker.

If your set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II** button repeatedly.

When NICAM mono is received, you can select **NICAM MONO** or FM MONO.

When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.

When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**. When FM mono is selected the display **MONO** appears on the screen.

---


# Time Menu

---

## Clock

- You must set the time correctly before using on/off time function.

1. Press the **MENU** button and then ▲ / ▼ button to select the TIME menu.
2. Press the ► button and then ▲ / ▼ button to select **Clock**.

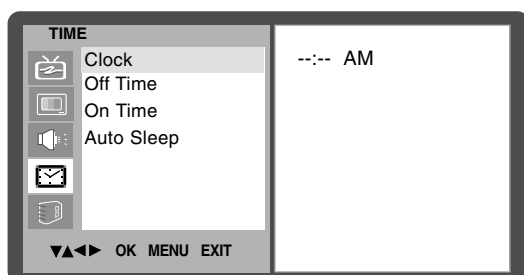


3. Press the ► button and then ▲ / ▼ button to adjust the hour.
4. Press the ► button and then ▲ / ▼ button to adjust the minute.
5. Press the **MENU** or **OK** button to save.

## On/Off Time

- The off timer automatically switches the set to standby at the preset time.

1. Press the **MENU** button and then ▲ / ▼ button to select the TIME menu.
2. Press the ► button and then ▲ / ▼ button to select **Off Time** or **On Time**.

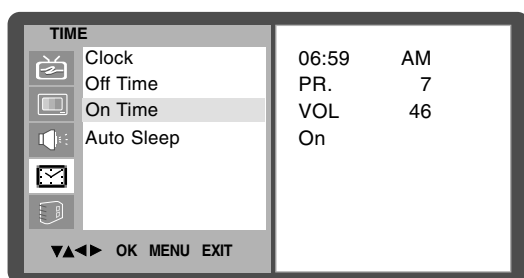

3. Press the ► button and then ▲ / ▼ button to select **On**.
4. To cancel **Off/On Time** function, press the ▲ / ▼ button to select **Off**.
5. Press the ► button and then ▲ / ▼ button to adjust the hour.
6. Press the ► button and then ▲ / ▼ button to adjust the minute.
7. **Only On time function** ; Press the ► button and then ▲ / ▼ button to adjust volume level and programme number.
8. Press the **MENU** or **OK** to save.

### Note :

- a. In the event of power interruption (disconnection or power failure), the clock must be reset.
- b. Two hours after the set is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed.

---

## Time Menu

---



c. Once the on or off time is set, these functions operate daily at the preset time.


d. Off Timer function overrides On Timer function if they are set to the same time.

e. The set must be in standby mode for the On Timer to work.

### Auto sleep

- If you select **On** on the **Auto Sleep** menu, the set will automatically switch itself to standby mode approximately ten minutes after a TV station stops broadcasting.

1. Press the **MENU** button and then **▲ / ▼** button to select the TIME menu.
2. Press the **▶** button and then **▲ / ▼** button to select **Auto Sleep**.

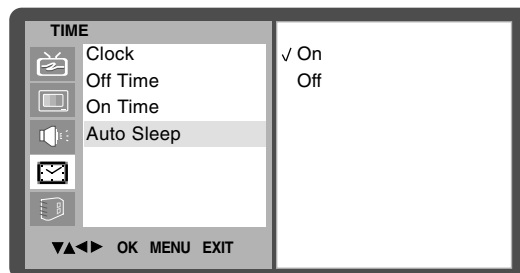


3. Press the **▶** button and then **▲ / ▼** button to select **On** or **Off**.
4. Press the **MENU** or **OK** button to save.


### Sleep timer

You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time has elapsed.

Press the **SLEEP** button to select the number of minutes.

The display '  --- min ' will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240**. The timer begins to count down from the number of minutes selected.

#### Note :

- a. To view the remaining sleep time, press the **SLEEP** button once.
- b. To cancel the sleep time, repeatedly press the **SLEEP** button until the display '  --- min ' appears.
- c. When you switch the set off, the set releases the preset sleep time.

---

# Radio Menu

---

## Basic Operation

- Be sure to select the **Radio** with **TV/AV/RADIO** button of remote control before operation.
- Increases or decreases the sound level with volume (◀ / ▶) button of remote control.



## Radio Channel Manually Search

1. Press the **MENU** button.
2. Press the ▲ / ▼ button to select **Favorite Programme**.



3. Use the ◀ / ▶ button to select your favorite program selection.
4. Press the ▲ / ▼ button to select **Storage**.
5. Use the ◀ / ▶ button to select **Memory** or **Erase**.
6. Press the ▲ / ▼ button to select **Frequency**.



7. Use the ◀ / ▶ button to search the radio channel.  
When pressing the channel (◀ / ▶) button one time, it will search 50Khz.

## Radio Channel Auto Search


1. Press the ▲ / ▼ button to select **Auto program**.
2. Press the ▶ button to begin the channel search.




---

# Radio Menu

---

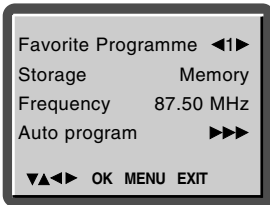

## Favourite Channel Memory

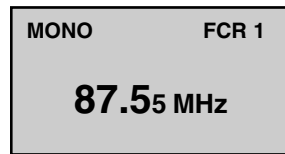

- Favourite channel memory is a convenient feature that lets you quickly scan up to five channels of your choice without having to wait for the radio to scan through all the in-between channels.

1. Press the **MENU** button and then select your desired radio channel.
2. Press the **■ OK** button to memory it as the favorite channel.
3. To tune a favourite channel, press the **MENU** button repeatedly.

## Stereo Broadcasts Setup

Press the **III** button repeatedly.





---

## Teletext (option)

---

Teletext (or TOP text) is an optional function, therefore only a set with the teletext system can receive the teletext broadcast.

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

### Switch on/off

Press the **TEXT** button to switch to teletext. The initial page or last page appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** button to switch off teletext. The previous mode reappears.

### SIMPLE text

#### Page selection

1. Enter the desired page number as a three digit number with the **NUMBER** buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
2. The **▲ / ▼** button can be used to select the preceding or following page.

---

## Teletext (option)

---

### TOP text (option)

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

#### Block / group / page selection

1. With the blue button you can progress from block to block.
2. Use the yellow button to proceed to the next group with automatic overflow to the next block.
3. With the green button you can proceed to the next existing page with automatic overflow to the next group.  
Alternatively the ▲ button can be used.
4. The red button permits to return to previous selection. Alternatively the ▼ button can be used.


#### Direct page selection

Corresponding to the SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

### FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

#### Page selection

1. Press the  button to select the index page.
2. You can select the pages which are colour coded along the bottom line with the same coloured buttons.
3. Corresponding to the SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
4. The ▲ / ▼ button can be used to select the preceding or following page.

---

# Teletext (option)

---

## Special teletext functions



### REVEAL

Press this button to display concealed information, such as solutions of riddles or puzzles.

Press this button again to remove the information from the display.



### SIZE

Selects double height text.



Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.



### UPDATE

Displays the TV picture on the screen while waiting for the new teletext page. The display  will appear at the top left hand corner of the screen. When the updated page is available then display  will change to the page number.

Press this button to view the updated teletext page.



### HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inhibited.

To continue press this button again.



### MIX

Displays the teletext pages superimposed on the TV picture.

To switch the TV picture off press this button again.



### TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/GREEN, ▲ / ▼ or NUMBER buttons.

Press again to exit this function.

