 
Remove Packaging



 
- The appliance is fitted with transit bolts to prevent internal damage during transport. Be careful, heavy load!
- Packing and all transit bolts must be removed before using the washing machine.
- When unpacking the base, be sure to remove the additional packing support in the middle of the base packing.
- Store original packing for future move. Dispose of packing material according to local regulations.





 












along with the rubber

bungs by slightly

twisting the bung.

Requirements for installation site



Level floor: Permissible floor gradient under entire washing machine

Power socket: Must be within 100 cm of either side of location of washing machine. Do not overload the socket with more than one

Additional Clearance: For wall, floor and door space is needed. (10cm; rear / 2cm; right & left side). Do not place or store laundry products on top of the washing machine at any times. They can damage the finish or controls of the machine.

- . Do not use an extension cord or double adapter.
- 2. Have damaged supply cords replaced by the manufacturer or its service agents or a similarly qualified person
- ays unplug the machine and turn off the water supply after use. 4. Connect the machine to an earthed socket in accordance with current wiring regulations.
- 5. The appliance must be positioned so that the plug is easily accessible.
 Repairs to the washing machine must only be carried out by qualified personnel. Repairs carried out by inexpe-
- Do not install your washing machine in rooms where temperature below freezing may occur. Frozen hoses may burst under pressure. The electronic control unit may become unreliable at temperatures below freezing point.
 If the appliance is delivered in the winter months and temperatures are below freezing: Leave the washing machine standing at room temperature for a few bours before putting it into operation.
- standing at room temperature for a few hours before putting it into operation.

Connecting water supply hose

The hose supplied with the machine must be used. Old hoses may not be reused



Water supply pressure must be between 1.0-10 bar (100kPa~1000kPa)

Don't strip or crossthread when connecting inlet hose to the valve.

If the water supply pressure is more than 1000kPa, a decompression device should be installed.











- Two rubber seals are supplied with the water inlet hoses. They are used for preventing water leaks.
- Make sure the connection to taps is tight enough. Periodically check the condition of the hose and
- replace the hose if necessary. Make sure that there is no kink on the hose and that it is not crushed.
- If after completing connection water leaks from the hose, repeat the same steps. Use the most conventional type of tap for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Installation of drain hose

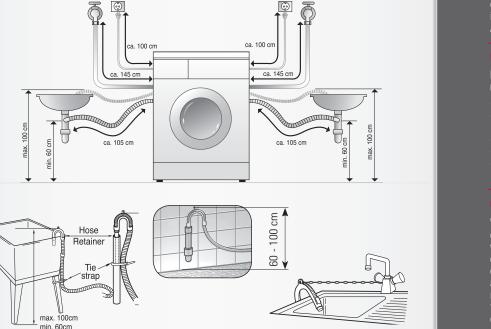

- The drain hose should not be placed higher than 100 cm above the floor.
- Proper securing of the drain hose will protect the floor from damage due to any water leakage.
- If the drain hose is too long do not force back into the washing machine. This will cause unusual noise.

Level adjustment

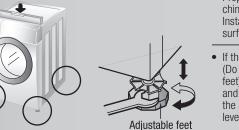

- Proper level-adjustment of the washing machine prevents excessive noise and vibration. Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- If the floor is uneven, adjust feet as required. (Do not insert pieces of wood etc. under the feet). Make sure that all four feet are stable and resting on the floor. Then check that the appliance is perfectly level. (Use a spirit

Install or store appliance where it will not be exposed to sub-zero temperatures or exposed to the weather. Fit ground of th washing machine correctly to conform with all statutory regulations and ordinances. Ensure that the base opening is free from obstruction by carpeting if the washing machine is installed on a carpeted floor. In countries where there is a risk of cockroad infestation or other vermin, pay particular attention to keep the appliance and its surroundings in a clean condition at all time Any damage which may be caused by cockroaches or other vermin is not covered by the appliance guarantee.

Install the washing machine on a flat hard floor. Make sure that air circulation around the washing machine is

- Never try to correct any unevenness in the floor using pieces of wood, cardboard or similar materials under the washing machine
- If it is not possible to position the washing machine away from a gas cooker or coal burning stove, an insulation pa (85x60cm) covered with aluminum foil on the side facing the cooker or stove, must be inserted between the two appliances.
- The washing machine must not be installed in rooms where the temperature may drop below 0°C.
- Please ensure that when the washing machine is installed an engineer can gain easy access in the event of a breakdown.
 Adjust all four feet using the transit bolt spanner provided to ensure that the appliance is stable, with 20mm clearnace between the top of the washing machine and underside of the worktop.

We recommend connecting most appliances to a dedicated circuit. That is, a single outlet supplying power only to the appliance concerned, without any additional outlets or branch circuits. Check the specifications of this owner's manual. Do not overload wall sockets. Overloaded wall sockets, loose or damaged wall sockets or extension cords, frayed power cords, damaged cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, squashed in a jamb of a door, or walked upon. Pay particular attei tion to plugs, wall outlets, and the point where the cord exits the appliance. We recommend to use a residual current oper device in the mains supply. 🛜

This equipment is not designed for maritime use or for use mobile installations such as caravans, aircraft etc. Turn off the sto cock if the machine is to be left for any length of time (e.g. if you are going on holiday), especially if there is no floor drain (gu in the immediate vicinity. If relocating the appliance use the original packing material. Disable the door lock to prevent you children becoming trapped inside. Packaging material (e.g. plastic film, Styrofoam) can be dangerous for children. There is a ris of suffocation! Keep all packaging well away from children.

X Technical Specification

Power supply 220-240 V~. 50 H

Size WxDxH mm: 600 x 590 x 850

- The installation surface must be clean, dry and level.
- The washing machine must be perfectly level and firmly in position
- It must not "see-saw" across corners under load.
 The installation surface must be clean, free from floor wax and other lubricant coatings.
- Do not allow the feet of the washing machine to get wet. If feet of the washing machine get wet, slipping may occur.

iine	Max. Watt	2100 W (Wash) / 1100 W (Steam)
	Wash capacity	8 kg
	Water consumption	52 I (6.5I / kg)
	Darminoible weter pressure	1 0 10 har (100 1000kDa)



A Safety instructions for use

Read all instructions and explanations of the installation before use. Follow the instructions carefully. Keep the operating instructions handy for later use. If the appliance is sold or passed on then ensure that the new owner always receives these operating instructions. The following warnings must be strictly observed for safety reasons. They must be read before installing the appliance and putting it into operation.

- Intended use: This appliance has been designed exclusively for use in dry-interior households. Use the appliance only with cold drinking water and only for washing textiles with washing detergents designed for washing machines. Every other use is improper and may lead to injuries, whereby the liability of the manufacturer will cease. • This appliance may only be used by adults. Do not allow children to touch the controls or to play with the product.
- Never modify the appliance on your own, as this is dangerous.
- This appliance is heavy. Transporting with care.
- Remove all packaging and transport bolts before using the appliance. Otherwise serious damage may result.
- All installation work must be carried out by a qualified fitter or technician.
- Have electrical connections done by a qualified electrician.
- Never place the appliance on the power cord.
- If the appliance is placed on a carpet then place the feet so that air can circulate underneath the appliance.
- Always unplug the machine and turn off the water supply after use. Disconnect appliance by pulling only the plug never disconnect by pulling the power cord. Never touch the plug with wet fingers or hands.
- Do not overload the appliance.
- Wash only machine-washable textiles. If you have doubts regarding this, then observe the markings on the label. Never place electrical heaters, candles etc. in the vicinity of the appliance. They could cause the appliance to ignite or
- Protect the appliance from wet and damp. Otherwise, there is danger of electric shock and fire.
- Connect the appliance to a suitable wall socket for 220-240V. Never use an extension cord or double adapter.
- Empty all pockets. Hard or sharp objects such as coins, needles, nails, screws or stones may cause serious damage. Unbalanced mass may create heavy vibrations. If heavy vibrations remain also without load, call for an authorized
- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.). This may result in fire
- Never insert products coated with mineral oils (e.g. nylon coating, plastic belts, etc.) into the machine. If a stain remover has been used then make sure that the solvent has been carefully washed out before inserting the clothes into the appliance. Oil may remain in the tub after a whole cycle resulting in fire during drying. So, do not load oily clothes.
- Do not operate the appliance at locations where flammable substances are present such as oil, benzene or highly inflammable gas. Such materials may cause fire or explosion. Never use combustible detergents.
- Only add the prescribed amount of softener. Excessive amounts may damage the clothes.
- After washing, keep the drum door open to protect the door seal.
- Make sure that all water has run off before opening the door. Never open the door if water still remains. Danger of
- Animals and children may get into the washing machine. So always check the appliance before using it.
- During washing, the glass door becomes very hot. Keep children away from the appliance when in operation. Never try to repair the machine yourself. Incorrect repairs may result in injuries and/or serious defects to the machine.
- The product should be serviced and repaired only by the authorised customer service using original replacement parts. When disposing of your old machine, the power cable must be capped and the door lock must be made unusable in order to
- When placing on a carpeted floor, make sure that the opening in the socket is not blocked.
- If the appliance has been under water then contact the customer service. There is danger of electric shock and fire. The cover cup of the filter as well as the dispenser drawer may not be opened during the operation.
- Keep all washing powder and detergents away from children. Danger of poisoning



- All electrical and electronic products should be disposed of separately from municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- The correct disposal of your old appliance will help prevent potential adverse consequences for the environment and human health.
- For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Thumping sound

Vibrating noise


Excessive suds

Door does not open

Washing machine won't spin

Water leaks.

Water supply is not adequate in area

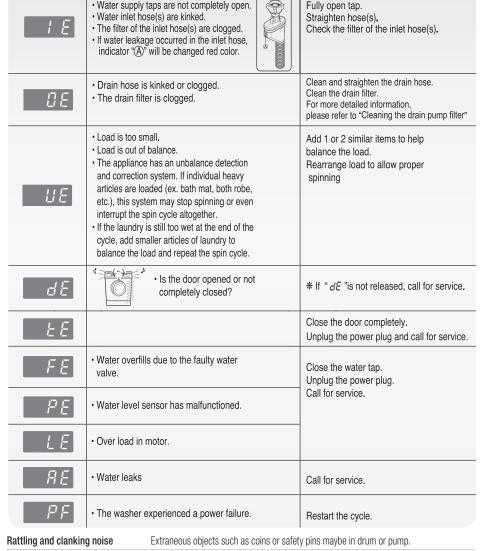

Heavy wash loads may produce a thumping sound. This is usually normal.

Have all transit bolts and packing been removed?

Too much detergent or unsuitable detergent

Contact plumber if necessary.

Check that the door is firmly shut.

locking mechanism time to release.

Washing machine does not start Power cord may not be plugged in or connection may be loose.

Check and tighten hose connections. Unclog drain pipe.

Once started, the door can not be opened for safety reasons.

Wait one or two minutes before opening the door to allow the electric

Check another tap in the house.

Before use please read carefully the safety instructions!

Please read this owner's manual carefully, it provides instructions on safe installation, use and maintenance. Keep it handy for future reference of this machine. Make a note of the model and serial numbers of your washing machine.

P/No.:MFL59755511









Thank you for buying an LG fully automatic washing machine.



Never use a defective machine! In case of any failure, first unplug the machine and turn off the

Luke warm ironing

Washing program table

Color fast garments (shirts, Cotton nightdresses, pajamas...)and

lightly soiled white cotton

Cotton, underwear, pillow covers, bed sheets,

Delicate laundry easily

Colored laundry which is lightly

Cotton mixed, Polyester mixed

Intensive: If the laundry is heavily soiled "Intensive" option is effective.

Crease Care: If you want to prevent creasing, select Crease Care option.

Cotton Lightly soiled clothing and

Synthetic Polyamide, Acrylic, Polyester

Baby Care Lightly soiled baby wear

baby wear

/Wool and wool laundry

Hand Wash "Hand wash" marked delicate



WATER CONNECTION

CHECKING THE MACHINE

Turn on the water tap



HANG UP WASTE WATER HOSE

Hose elbow connection e.g. attach to water tap



INSERT PLUS INTO THE MAINS SOCKET Never touch the plug with wet hands!

Never remove the plug from the socket by pulling on the cord.

DOING LAUNDRY AND USING MACHINE WITH CARE

- empty all pockets - remove all metal parts
- place the delicate textiles into the laundry net



LAUNDRY WITH DIFFERENT AMOUNTS OF - wash new textiles separately



lightly - do not prewash - pretreat dirty spots - pre wash

WATER TREATMENT

- with hardness III water use water softening agent



DRUM CARE

- leave door open to dry the drum - check the rubber seals regularly



use short program if possible

Washing symbols Do not tumble dry

- Time Delay

- Steam Wash

- Intensive

- Pre Wash

- Crease Care

- Medic Rinse

- Crease Care

- Medic Rinse

- Time Delay

Crease Care

No Choose - Steam Default 3 items

Pre Wash: If the laundry is heavily soiled, "Pre Wash" Cotton is recommended. Pre Wash is available in the Cotton, Cotton Quick, Synthetic and Baby Care program.

Water Temperature: Select water temperature to suit wash cycles. Always follow garment manufacture's care label or instructions when washing.

Medic Rinse: For best results or for cleaner rinsing, you can choose Medic Rinse option. Medic Rinse is set by default in the Baby Care program.

WOOLMARK washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine M0806.

Neutral detergent is recommended. The wool cycle features gentle tumbling and low-speed spin for garment care.

Warning: Keep all washing powder and detergents away from children. Danger of poisoning

Set program at "Cotton 60°C + Steam Wash + Intensive" option for test in accordance or in conformity with IEC60456 and EN60456.

- Rinse+Spin Less than 2.0kg

- Rinse+Spin

For very dirty clothes fill 1/4 of the Do not exceed the MAX-Level. For normal dirty clothes use a small

portion of detergent in here and Highly densed softeners are to amount of detergent. Don't pre wash.

(Cold, 30°C,

40°C, 95°C)

40°C (Cold,

30°C, 60°C)

(Cold, 40°C)

(Cold, 30°C)

(Cold, 40°C)

select a prewashing programm be diluted with some water. Mount the level plate to use fluid detergents

(c) Handy to bleach

Less than 6.0kg

Less than 4.0kg

Less than 4.5kg

Less than 4.0kg

Fill the drum

Sort the laundry

Check the folds of the flexible gasket (grey) and remove any small articles, if any. Check inside of the drum and remove any left in items for next wash cycle.



















 












Remove laundry

Remove the laundry

Jnplug machine

Turn the machine off

- Leave door open to

allow drum to dry

Power button Program Cycle Start / Pause Options

Additional programs

Time Delay

Setting "Time Delay" determines when machine stops.

How to set "Time Delay"

Press **Power** button.

- Turn the **Program** dial to select the program you require. Press **Time Delay** button and set time required.
- Press the **Start/Pause** button.

Intensive

If the laundry is heavily soiled "Intensive" option is effective.

- By selecting the Intensive option, the washing duration may be extended,

Medic Rinse

For best results or for cleaner rinsing, select the "Medic Rinse" option.

Available in the Cotton, Cotton Quick, Synthetic, Baby Care and Allergy Care programs. The respective temperature indicator will light up.

Steam Washing and Refresh cycle



Steam Washing features enhance washing performance with low energy consumption. Refresh cycle reduces creases in clothes.

When Steam Function is selected, Steam wash (Steam wash) LED lights up.

Steam Wash is

- Steam Wash is available with the Cotton, Cotton Quick, Synthetic, Baby Care and Allergy Care programs.

and close the door required and correct number of items is displayed

Do not load delicates such as wool, silk, and easily discolored clothes.

Program Temperature Cold, 30°C, 40°C, 60°C, 95°C Baby Care 40°C, 60°C, 95°C Cotton Quick Cold, 30°C, 40°C, 60°C Refresh No choose Synthetic Cold, 30°C, 40°C, 60°C Allergy Care 60°C

How to use Refresh Cycle







Child Lock Select this function to lock the buttons on the control panel and to prevent tampering.



Empty the drum Add anti-limescale

completly and close (Calgon) to the main Then press and

wash compartment. hold Rinse and





Power ON with (9)

Close the disp. drawer Temp. button Clean process

TUB CLEAN is special cycle to clean the inside of the washing machine. Tub Clean

A higher water level is used in this cyle at higher spin speed. Perform this cycle regularly.



Start/ Pause

The Beep on/off function can be set by pressing and

he Beep on/off function can be set at any time and it is

The Beep on/off function also works when power is off.

holding the Option and Rinse button simultaneously.

 
automatically cancelled in the event of a power cut.

button to start Tub door open to dry



complete, leave the










Cleaning the drain pump filter

 Cleaning the water inlet filter







warning: Before cleaning the washing machine interior, unplug the electrical power cord to avoid the risk of electric shock.









Clean the dispenser Clean inside the dispenser drawer drawer under flow- recess with an old drawer ing water toothbrush

Cleaning in general Important: Do not use methylated spirits, solvents or similar products.

outside of the machine can be cleaned with warm water and a neutral opening, flexible gasket and door glass. non-abrasive household detergent. Immediately wipe off any spillage. Run washing machine through a complete Wipe with damp cloth. Avoid striking the surface with sharp objects. Never cycle using hot water. Repeat process if hose down the machine!

Proper care of your washing machine can extend its service life. The Dry around the washing machine door

