

# User's Guide Specification

담당

관리자

SUNG KJ  
08.04.11

KIM JO  
08.04.11

## 1. Model Description

MODEL	26/32/37/ 42/47LG3RC-TA	BRAND	LG	Part No.	MFL41410110 (0810-REV02)
SUFFIX	H5-Commercial	Product Name	26/32/37/42/47LG3RC		

## 2. Printing Specification

1. Trim Size (Format) : 185mm x 260mm
2. Printing Colors
  - Cover : 1 COLOR
  - Inside : 1 COLOR (BLACK)
3. Stock (Paper)
  - Cover : Uncoated paper, 백상지 60 g/m<sup>2</sup>
  - Inside : Uncoated paper, 백상지 60 g/m<sup>2</sup>
4. Printing Method : Off-set
5. Bindery : Saddle stitch
6. Language : English (1)
7. Number of pages : 96

### Notes

“This part contain Eco-hazardous substances (Pb, Cd, Hg, Cr6+, PBB, PBDE, etc.) within LG standard level, Details should be followed Eco-SCM management standard[LG(56)-A-2524]. Especially, Part should be followed and controlled the following specification.  
 (1) Eco-hazardous substances test report should be submitted when Part certification test and First Mass Production.  
 (2) Especially, Don't use or contain lead(Pb) and cadmium(Cd) in ink.

## 3. Special Instructions

### (1) Origin Notification

- \* LGEDI : Printed in Indonesia
- \* LGESP : Printed in Brazil
- \* LGENT : Printed in China
- \* LGEMA : Printed in Poland
- \* LGEWA : Printed in U.K.
- \* LGEMX : Printed in Mexico
- \* LGEIL : Printed in India

## 4. Changes

10				
9				
8				
7				
6				
5				
4				
3				
2	10/22/08	SUNG.G.J.	S8-32876	Added the Protective Bracket and Bolt for Power Cord (only commercial mode).
1	06/19/08	SUNG.G.J.	S8-23360	Updated the contents
REV. NO.	MM/DD/YY	SIGNATURE	CHANGE NO.	CHANGE CONTENTS

# Pagination sheet

P/NO. MFL41410110  
Total pages : 96 pages

Front cover

<b>LG (EN)</b>
<b>P/NO.</b>

<b>Blank page</b>	<b>1</b>
-----------------------	----------

...	...
-----	-----

<b>Blank page</b>	<b>Blank page</b>
-----------------------	-----------------------

Back cover

--



# LCD TV OWNER'S MANUAL

## LCD TV MODELS

26LG3\*\*\*

32LG3\*\*\*

37LG3\*\*\*

42LG3\*\*\*

47LG3\*\*\*

Please read this manual carefully before operating your set.  
Retain it for future reference.


Record model number and serial number of the set.  
Refer to the label on the back cover and quote this  
information.

To your dealer when requiring service.



# ACCESSORIES


Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the product.

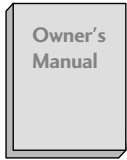


Owner's Manual



Batteries

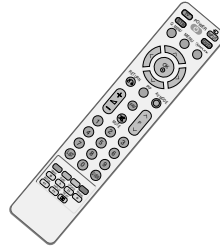

Remote Control

 

Power Cord



 
**Bolts for stand assembly**  
(Refer to p.6)  
(Only 26/32/37/42LG3\*\*\*)



or  
protection cover

(Only  
26/32/37/42LG3\*\*\*)


**Screw for stand fixing**  
(Refer to P. 9)



**Polishing Cloth**  
Polishing cloth for use  
on the screen  
This feature is not  
available  
for all models.

**\*Lightly wipe any stains or fingerprints on the surface of the TV with the polishing cloth.**

 **Do not use excessive force. This may cause scratching or discolouration.**



**Protective Bracket and Bolt for Power Cord**  
(Refer to P.8)

# CONTENTS

## ACCESSORIES ..... 1

### PREPARATION


Front Panel Controls.....	4
Back Panel Information .....	5
Stand Installation .....	6
Please set it up carefully so the product does not fall over. ....	7
Back Cover for Wire Arrangement.....	8
Swivel Stand .....	9
Desktop Pedestal Installation.....	10
Wall Mount: Horizontal installation.....	11
Not using the desk-type stand.....	11
Antenna Connection .....	12

### EXTERNAL EQUIPMENT SETUP


HD Receiver Setup .....	13
DVD Setup.....	16
VCR Setup.....	19
Other A/V Source Setup .....	22
PC Setup.....	23
- Screen Setup for PC Mode.....	26

### WATCHING TV / PROGRAMME CONTROL

Remote Control Key Functions.....	30
Turning on the TV .....	32
Programme Selection .....	32
Volume Adjustment.....	32
Quick Menu.....	33
On Screen Menus Selection and Adjustment .....	34

Auto Programme Tuning.....	35
Manual Programme Tuning .....	36
Fine Tuning .....	37
Assigning a Station Name .....	38
Booster .....	39
Programme Edit .....	40
Favorite Programme .....	41
Selecting the Programme List .....	42
 SIMPLINK .....	43
Key lock.....	45
AV Mode .....	46

### PICTURE CONTROL

Watching PIP(Picture-in-Picture) .....	47
Picture Size (Aspect Ratio)Control.....	48
Preset Picture Settings	
- Picture Mode-Preset.....	50
- Auto Colour Tone Control(Cool/Medium/Warm)	51
Manual Picture Adjustment	
- Picture Mode-User Option.....	52
- Colour Tone - User Option.....	53
 XD - Picture Improvement Technology.....	54
Advanced - Gamma.....	55
Advanced - Film Mode .....	56
Advanced - Black(Darkness) Level.....	57
Advanced - Eye Care .....	58
Picture Reset.....	59
Power Indicator .....	60
Factory Reset .....	61

**SOUND & LANGUAGE CONTROL**

Auto Volume Leveler .....	62
Preset Sound Settings - Sound Mode .....	63
Sound Setting Adjustment - User Mode .....	64
Balance .....	65
TV Speakers On/Off Setup .....	66
I/II	
- Stereo/Dual Reception .....	67
- NICAM Reception .....	68
- Speaker Sound Output Selection.....	68
On-Screen Menu Language Selection .....	69

**TIME SETTING**

Clock Setup.....	70
Auto On/Off Timer Setting .....	71
Sleep Timer Setting.....	72
Auto Shut-off Setting.....	73

**TELETEXT**

Switch On/Off .....	74
SIMPLE Text.....	74
TOP Text .....	75
FASTEXT .....	75
Special Teletext Functions.....	76

**APPENDIX**


Troubleshooting.....	77
Maintenance .....	79
Product Specifications .....	80
Programming the Remote Control .....	81
IR Codes .....	83
External Control Through RS-232C .....	85

# PREPARATION

## FRONT PANEL CONTROLS

- This is a simplified representation of the front panel. Image shown may differ from your TV.
- If your product has a protection film attached, remove the film and then wipe the product with a polishing cloth.

PREPARATION

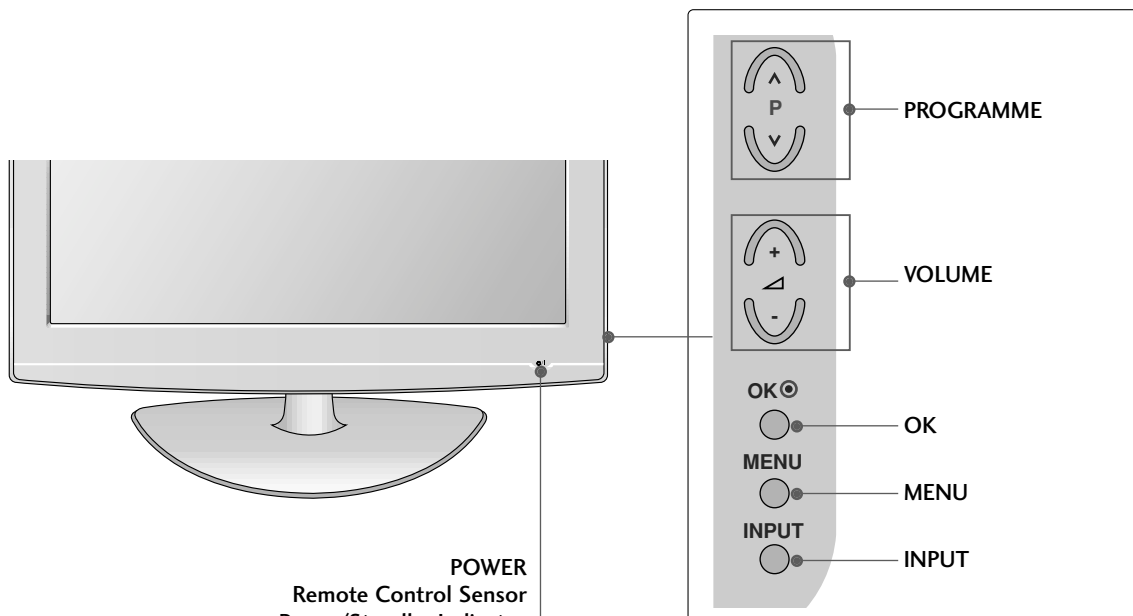

**POWER**  
Remote Control Sensor  
Power/Standby Indicator


- illuminates red in standby mode.
- illuminates blue when the TV is switched on.

Note: You can adjust **Power Indicator** in the **Option** menu.



# BACK PANEL INFORMATION

■ Image shown may differ from your TV.

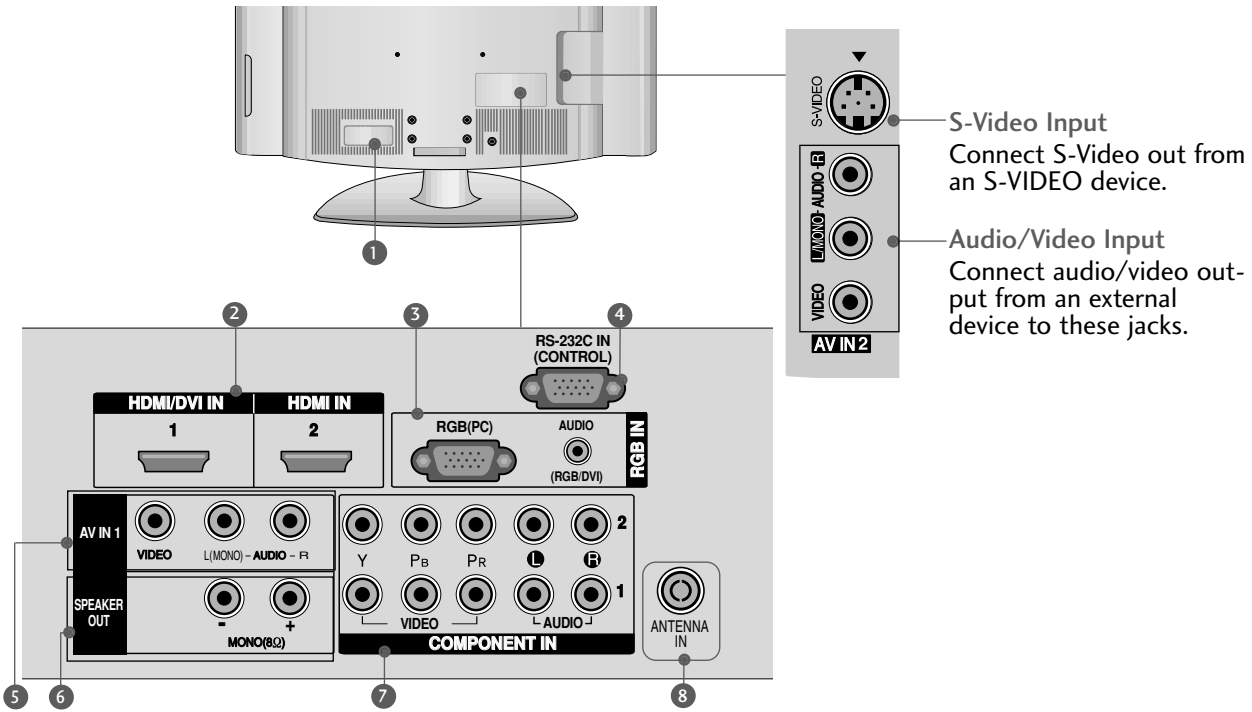

**S-Video Input**  
Connect S-Video out from an S-VIDEO device.

**Audio/Video Input**  
Connect audio/video output from an external device to these jacks.

- 1 Power Cord Socket**  
This TV operates on an AC power. The voltage is indicated on the Specifications page. Never attempt to operate the TV on DC power.
- 2 HDMI Input**  
Connect a HDMI signal to HDMI IN.  
Or DVI(VIDEO)signal to HDMI/DVI port with DVI to HDMI cable.
- 3 RGB/Audio Input**  
Connect the monitor output from a PC to the appropriate input port.
- 4 RS-232C Input (CONTROL) Port**  
Connect the serial port of the control devices to the RS-232C jack.  
(This feature is not available for all models.)
- 5 Audio/Video Input (AV IN 1)**  
Connect audio/video output from an external device to these jacks.
- 6 SPEAKER OUTPUT**  
Audio out for a external speaker system.
- 7 Component Input**  
Connect a component video/audio device to these jacks.
- 8 Antenna Input**  
Connect RF antenna to this jack.


# PREPARATION

## STAND INSTALLATION


26/32/37/42LG3\*\*\*

- Image shown may differ from your TV
- When assembling the desk type stand, check whether the bolt is fully tightened. (If not tightened fully, the product can tilt forward after the product installation.) If you tighten the bolt with excessive force, the bolt can deviate from abrasion of the tightening part of the bolt.


**1** Carefully place the TV screen side down on a cushioned surface to protect the screen from damage.

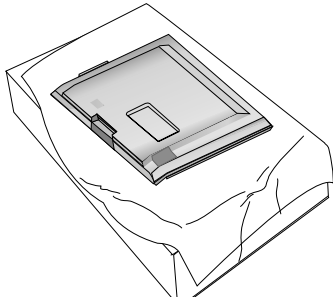


**2** Assemble the parts of the **Stand Body** with the **Cover Base** of the TV.

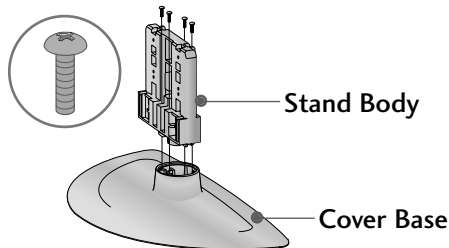

**3** Assemble the TV as shown.

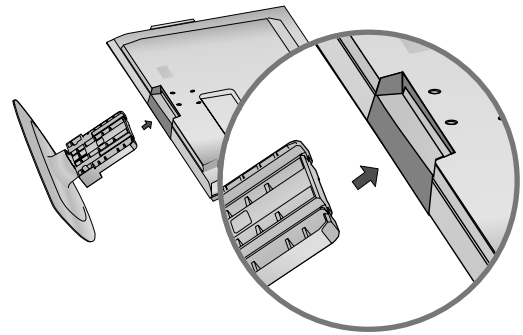


**4** Fix the 4 bolts securely using the holes in the back of the TV.

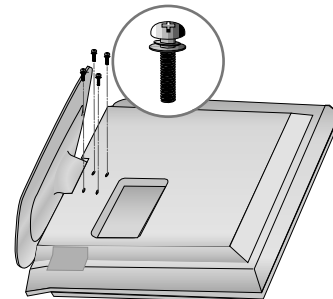


## PLEASE SET IT UP CAREFULLY SO THE PRODUCT DOES NOT FALL OVER.

- You should purchase necessary components to fix the TV to the wall on the market.
- Position the TV close to the wall to avoid the possibility of it falling when pushed.
- The instructions shown below are a safer way to set up the TV, which is to fix it to the wall, avoiding the possibility of it falling forwards if pulled. This will prevent the TV from falling forward and causing injury. This will also prevent the TV from damage. Ensure that children do not climb or hang from the TV.

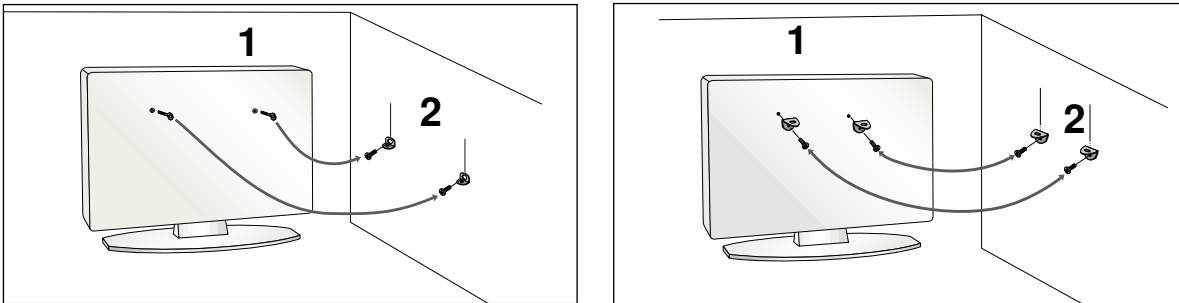

- 1** Use the eye-bolts or TV brackets/bolts to fix the product to the wall as shown in the picture. (If your TV has bolts in the eyebolts, loosen then bolts.)  
\* Insert the eye-bolts or TV brackets/bolts and tighten them securely in the upper holes.

- 2** Secure the wall brackets with bolts to the wall. Ensure that both brackets are even.

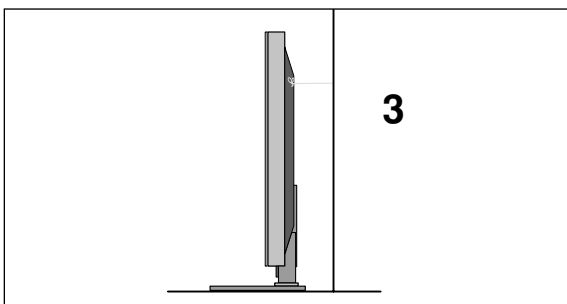


- 3** Use a strong cord to secure the TV. Secure the cord in such a way that it becomes taut when the TV is in position.

### ! NOTE


- ▶ When moving the TV undo the cords first.
- ▶ Use a platform or cabinet string and large enough to support the size and weight of the TV.
- ▶ To use the TV safely make sure that the height of the bracket on the wall and on the TV is the same.

# PREPARATION


- 1** Connect the cables as necessary.  
To connect additional equipment, see the **External Equipment Setup** section of the manual.  
Secure the power cable with the **PROTECTIVE BRACKET** and the screw as shown. It will help prevent the power cable from being removed by accident.

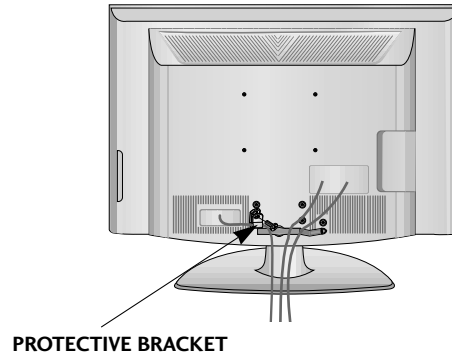

- 2** Open the **CABLE MANAGEMENT CLIP** as shown and manage the cables.

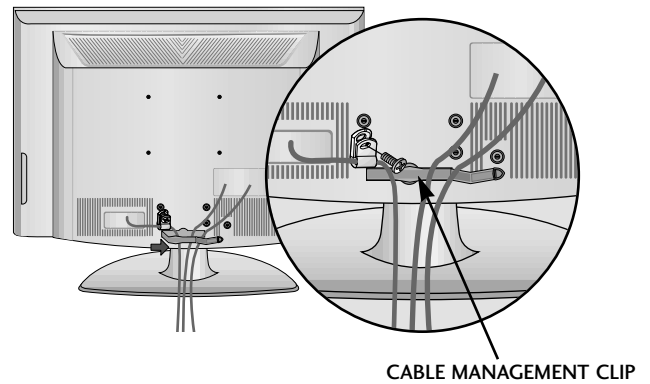

- 3** Fit the **CABLE MANAGEMENT CLIP** as shown.

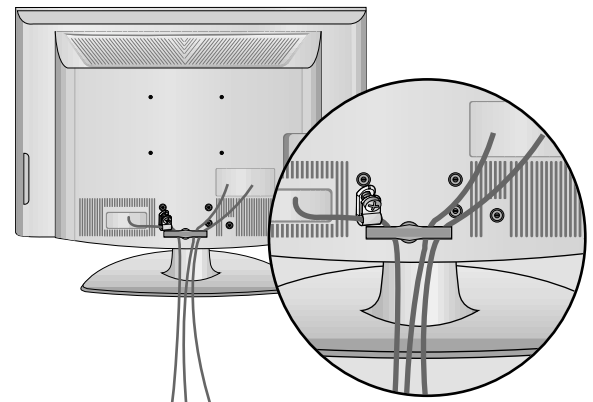


## ! NOTE

- ▶ Do not use the **CABLE MANAGEMENT CLIP** to lift the TV.
- If the TV is dropped, you may be injured or the TV may be damaged.

## SWIVEL STAND


This feature is not available for all models.

After installing the TV, you can adjust the TV manually to the left or right direction by 20 degrees to suit your viewing position.

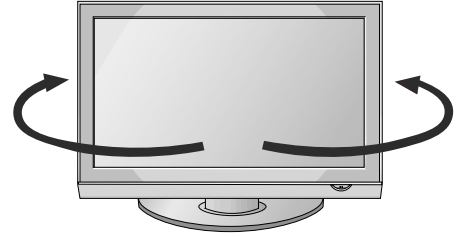


## Attaching the TV to a desk (Only 26/32/37/42LG3\*\*\*)

The TV must be attached to desk so it cannot be pulled in a forward/backward direction, potentially causing injury or damaging the product. Use only an attached screw.

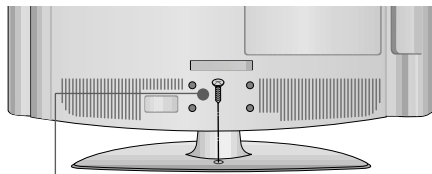

1-Screw  
(provided as parts of the product)

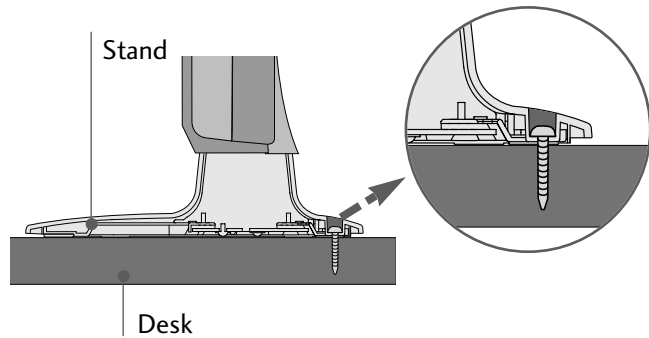


### ! WARNING

- ▶ To prevent TV from falling over, the TV should be securely attached to the floor/wall per installation instructions. Tipping, shaking, or rocking the machine may cause injury.

# PREPARATION

- The TV can be installed in various ways such as on a wall, or on a desktop etc.
- The TV is designed to be mounted horizontally.

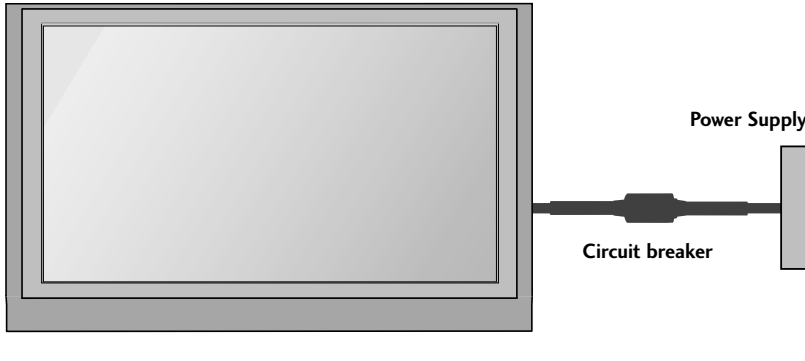


## EARTHING

Ensure that you connect the earth wire to prevent possible electric shock. If grounding methods are not possible, have a qualified electrician install a separate circuit breaker.

Do not try to earth the TV by connecting it to telephone wires, lightening rods or gas pipes.



## DESKTOP PEDESTAL INSTALLATION

For adequate ventilation allow a clearance of 4" (10cm) all around the TV .

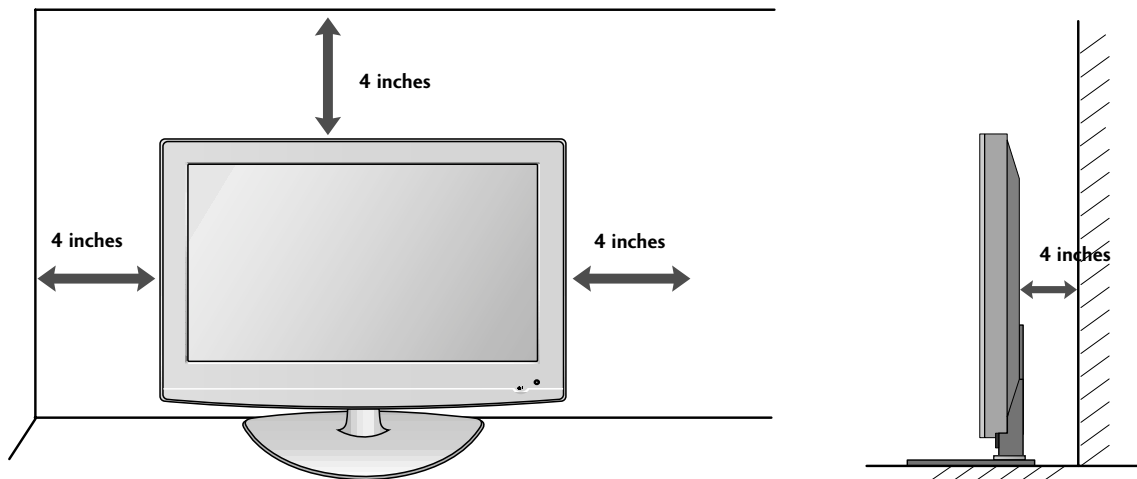


## WALL MOUNT: HORIZONTAL INSTALLATION

For adequate ventilation allow a clearance of 4" (10cm) all around the TV. We recommend that you use a wall mounting bracket of LG brand when mounting the TV to a wall.

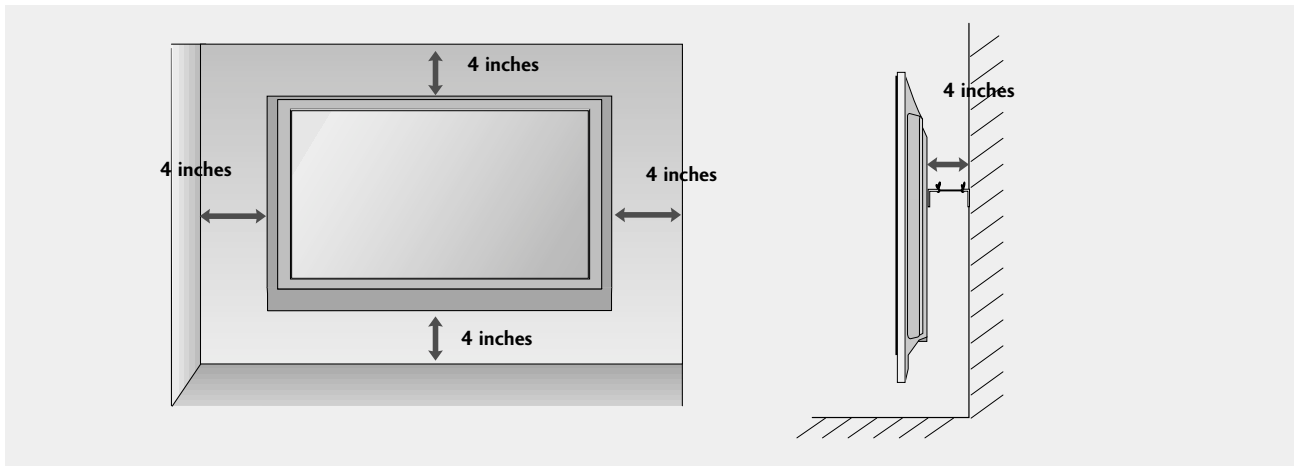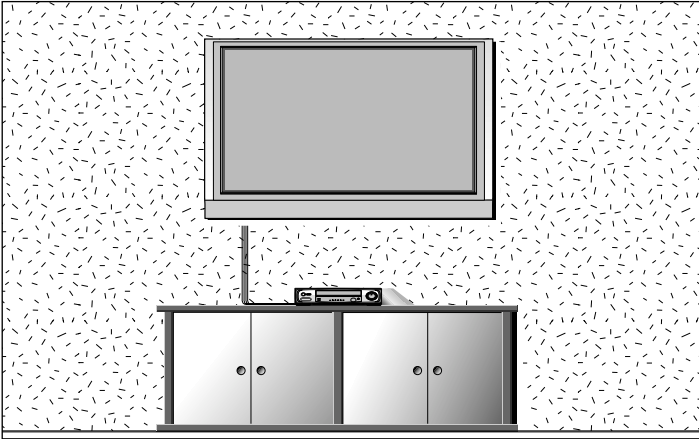


## NOT USING THE DESK-TYPE STAND

When installing the wall-mounted unit, use the protection cover for desk-type stand installation.

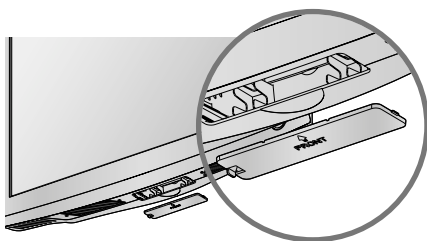

or

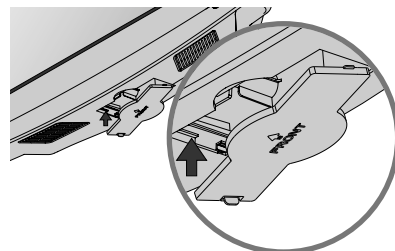



# PREPARATION

- To prevent damage do not connect to the mains outlet until all connections are made between the devices.

## ANTENNA CONNECTION

- For optimum picture quality, adjust antenna direction.
- An antenna cable and converter are not supplied.

PREPARATION

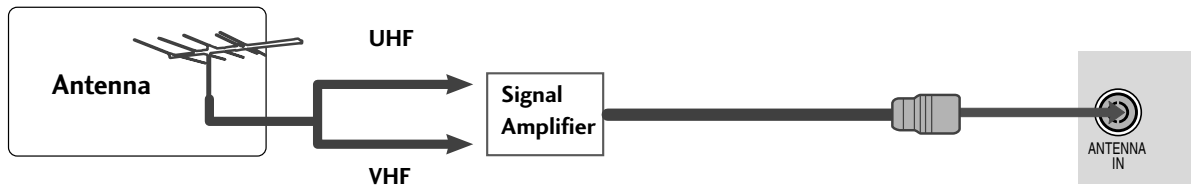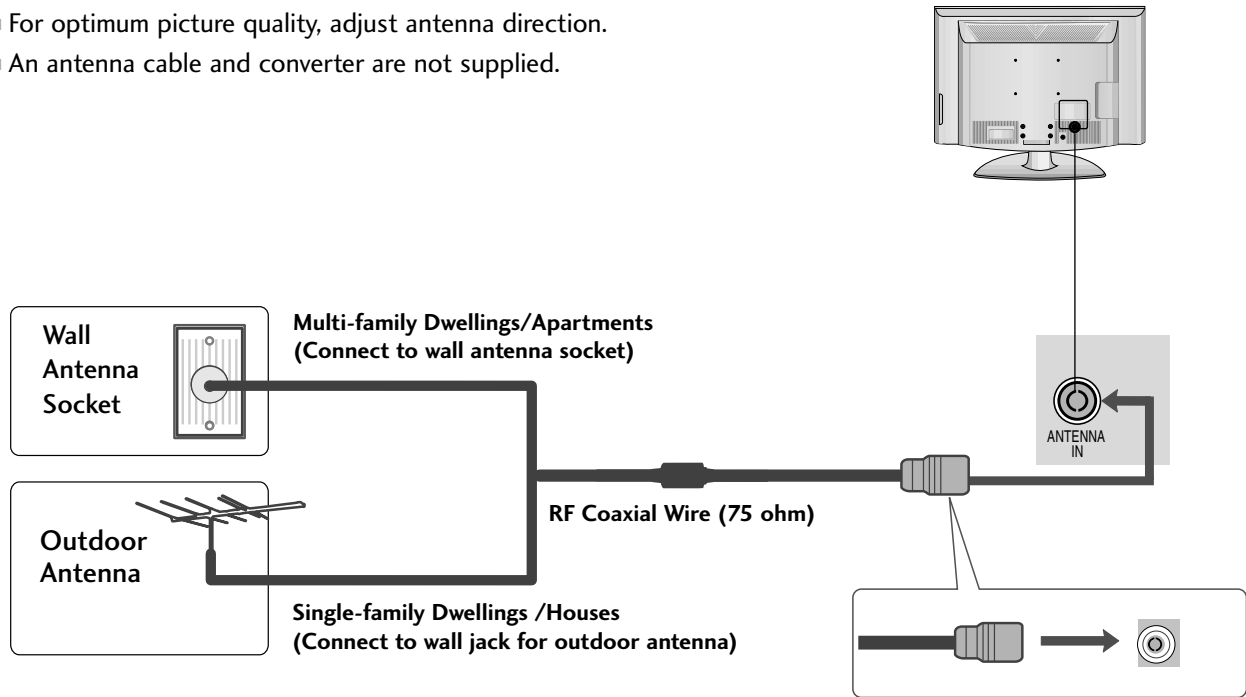

- In poor signal areas, to achieve better picture quality it may be necessary to install a signal amplifier to the antenna as shown above.
- If signal needs to be split for two TVs, use an antenna signal splitter for connection.




# EXTERNAL EQUIPMENT SETUP

- To avoid damaging any equipment, never plug in any power cords until you have finished connecting all equipment.
- Image shown may differ from your TV.

## HD RECEIVER SETUP

### Connecting with a component cable

- 1 Connect the video outputs (Y, Pb, Pr) of the digital TV top box to the **COMPONENT IN VIDEO** jacks on the TV.
- 2 Connect the audio output of the digital set-top box to the **COMPONENT IN AUDIO** jacks on the TV.
- 3 Turn on the digital set-top box.  
(Refer to the owner's manual for the digital set-top box.)
- 4 Select **Component1** input source using the **INPUT** button on the remote control.  
If connected to **COMPONENT IN2**, select **Component2** input source.

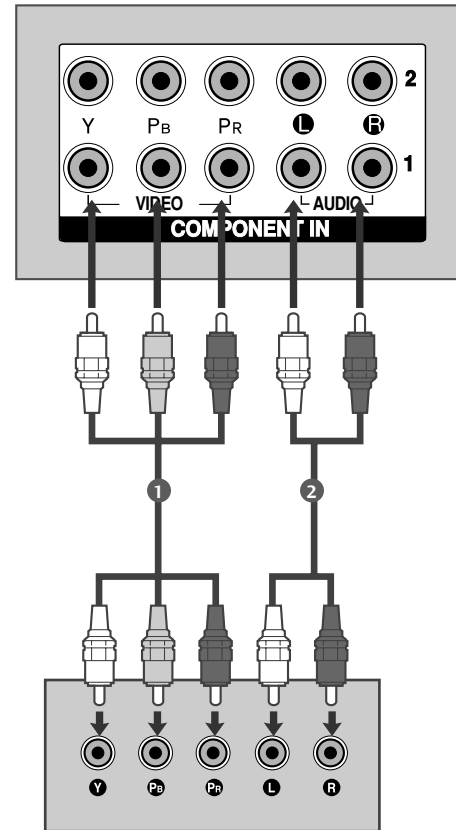


Signal	Component	HDMI1/DVI, HDMI2
480i/576i	Yes	No
480p/576p	Yes	Yes
720p/1080i	Yes	Yes
1080p	Yes	Yes
	(Only 50Hz, 60Hz)	(24Hz, 30Hz, 50Hz, 60Hz)

# EXTERNAL EQUIPMENT SETUP

## Connecting a set-top box with a HDMI cable


- 1 Connect the HDMI output of the digital set-top box to the **HDMI/DVI IN 1** or **HDMI IN 2** jack on the TV.
- 2 Select **HDMI1/DVI** or **HDMI2** input source using the **INPUT** button on the remote control.
- 3 Turn on the digital set-top box.  
(Refer to the owner's manual for the digital set-top box.)

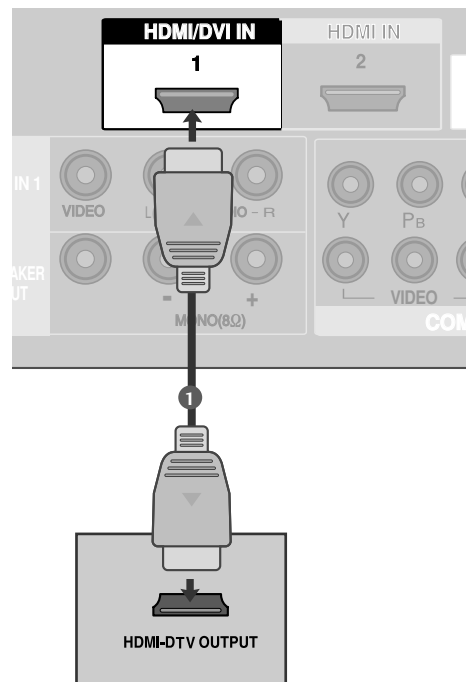

### ! NOTE

- ▶ TV can receive the video and audio signal simultaneously with using a HDMI cable.
  - ▶ If the digital set-top box supports Auto HDMI function, the output resolution of the source device will be automatically TV to 1280x720p.
  - ▶ If the digital set-top box player does not support Auto HDMI, you need to TV the output resolution appropriately.
- To get the best picture quality, adjust the output resolution of the source device to 1280x720p.

## Connecting with a HDMI to DVI cable

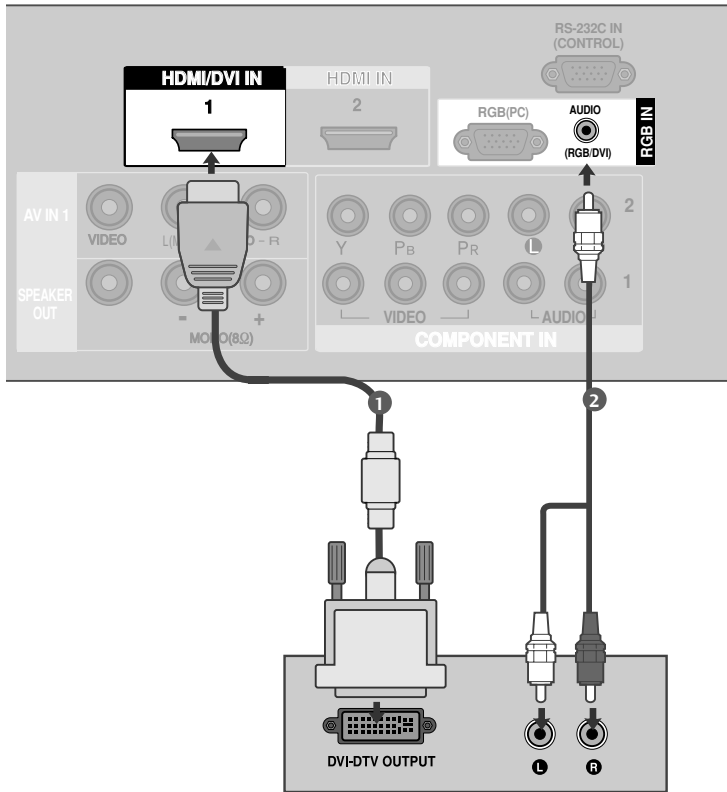

- 1 Connect the DVI output of the digital set-top box to the **HDMI/DVI IN 1** jack on the TV.  
.....
- 2 Connect the audio output of the digital set-top box to the **AUDIO (RGB/DVI)** jack on the TV.  
.....
- 3 Turn on the digital set-top box. (Refer to the owner's manual for the digital set-top box.)  
.....
- 4 Select **HDMI1/DVI** input source using the **INPUT** button on the remote control.

### ! NOTE


- ▶ HDMI2 source does not support DVI source.
- ▶ If the Set-Top Box has a DVI output and no HDMI output, a separated audio connection is necessary.
- ▶ If the Set-Top Box does not support Auto DVI, you need to set the output resolution appropriately.

# EXTERNAL EQUIPMENT SETUP

## DVD SETUP

### Connecting with a component cable

- 1 Connect the video outputs (Y, PB, PR) of the DVD to the **COMPONENT IN VIDEO** jacks on the TV.
- 2 Connect the audio outputs of the DVD to the **COMPONENT IN AUDIO** jacks on the TV.
- 3 Turn on the DVD player, insert a DVD.
- 4 Select **Component 1** input source using the **INPUT** button on the remote control.  
If connected to **COMPONENT IN2**, select **Component 2** input source.
- 5 Refer to the DVD player's manual for operating instructions.

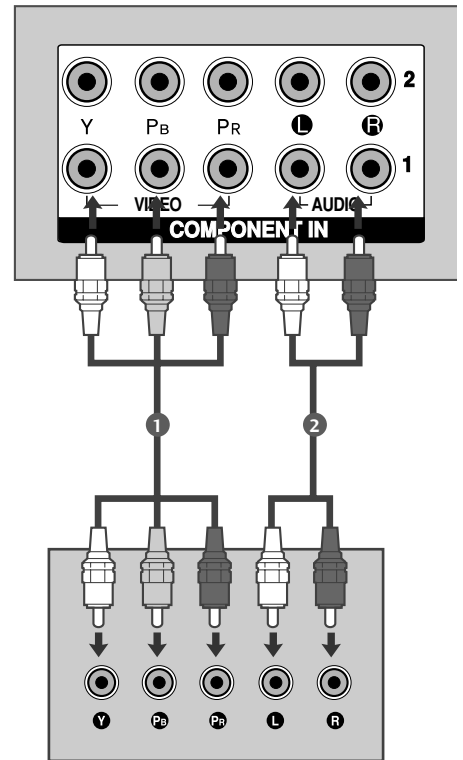


### Component Input ports

To achieve better picture quality, connect a DVD player to the component input ports as shown below.

Component ports on the TV	Y	P <sub>B</sub>	P <sub>R</sub>
Video output ports on DVD player	Y	P <sub>B</sub>	P <sub>R</sub>
	Y	B-Y	R-Y
	Y	C <sub>b</sub>	C <sub>r</sub>
	Y	P <sub>b</sub>	P <sub>r</sub>

## Connecting with a S-Video cable

- 1 Connect the S-VIDEO output of the DVD to the **S-VIDEO** input on the TV.
- 2 Connect the audio outputs of the DVD to the **AUDIO** input jacks on the TV.
- 3 Turn on the DVD player, insert a DVD.
- 4 Select **AV2** input source using the **INPUT** button on the remote control.
- 5 Refer to the DVD player's manual for operating instructions.

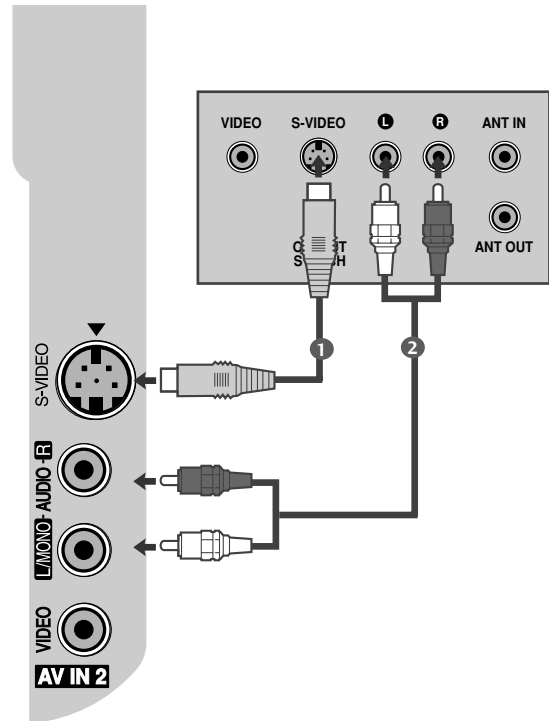


# EXTERNAL EQUIPMENT SETUP

## Connecting with a HDMI cable

- 1 Connect the HDMI output of the DVD to the **HDMI/DVI IN 1** or **HDMI IN 2** jack on the TV.
- 2 Select **HDMI1/DVI** or **HDMI2** input source using the **INPUT** button on the remote control.
- 3 Refer to the DVD player's manual for operating instructions.

### ! NOTE


- ▶ The TV can receive video and audio signals simultaneously when using a HDMI cable.
  - ▶ If the DVD player supports Auto HDMI function, the output resolution of the source device will be automatically TV to 1280x720p.
  - ▶ If the DVD player does not support Auto HDMI, you must TV the output resolution appropriately.
- To get the best picture quality, adjust the output resolution of the source device to 1280x720p.

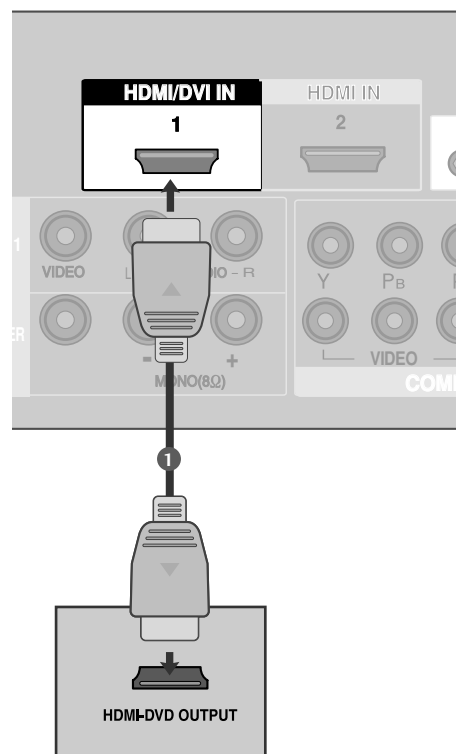

## VCR SETUP

- To avoid picture noise (interference), allow adequate distance between the VCR and TV.
- Typically a frozen still picture from a VCR. If 4:3 picture format is used for an extended period the fixed images on the sides of the screen may remain visible.


### Connecting with a RF cable

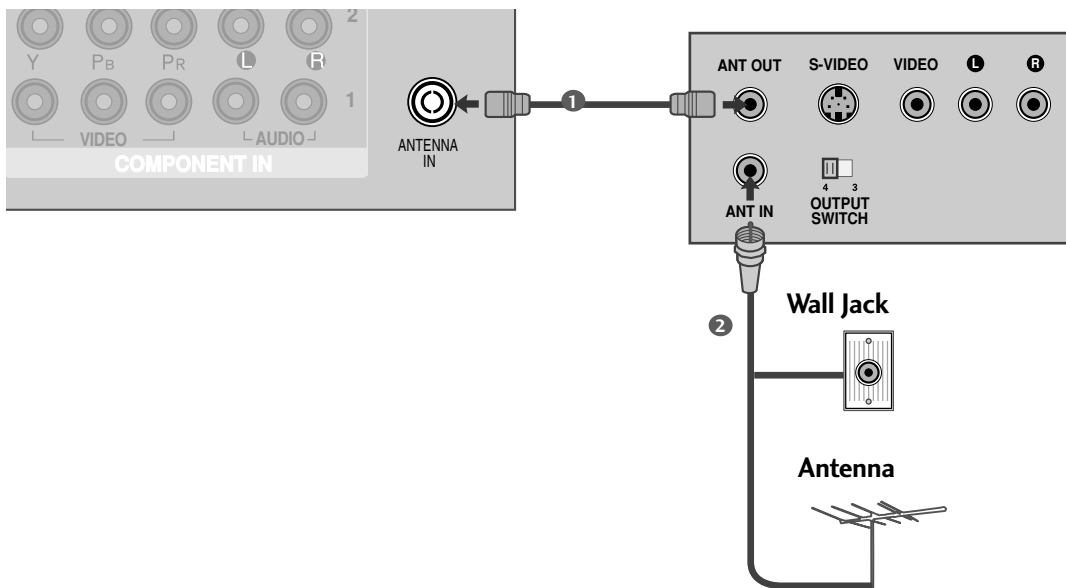

- 1 Connect the **ANT OUT** socket of the VCR to the **ANTENNA IN** socket on the TV.  
.....
- 2 Connect the antenna cable to the **ANT IN** socket of the VCR.  
.....
- 3 Press the **PLAY** button on the VCR and match the appropriate programme between the TV and VCR for viewing.

# EXTERNAL EQUIPMENT SETUP

## Connecting with a RCA cable

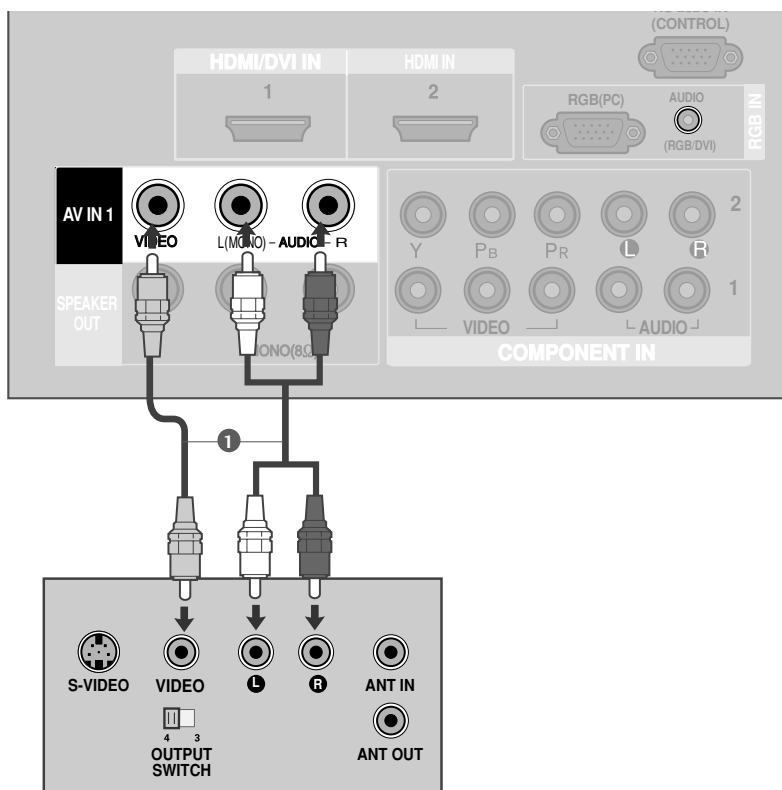

- 1 Connect the **AUDIO/VIDEO** jacks between TV and VCR. Match the jack colours (Video = yellow, Audio Left = white, and Audio Right = red)
- 2 Insert a video tape into the VCR and press PLAY on the VCR. (Refer to the VCR owner's manual.)
- 3 Select **AV1** input source using the **INPUT** button on the remote control. If connected to **AV IN2**, select **AV2** input source.


### ! NOTE

- ▶ If you have a mono VCR, connect the audio cable from the VCR to the **AUDIO L/MONO** jack of the TV.



## Connecting with a S-Video cable

- 1 Connect the S-VIDEO output of the VCR to the **S-VIDEO** input on the TV. The picture quality is improved; compared to normal composite (RCA cable) input.
- 2 Connect the audio outputs of the VCR to the **AUDIO** input jacks on the TV.
- 3 Insert a video tape into the VCR and press **PLAY** on the VCR. (Refer to the VCR owner's manual.)
- 4 Select **AV2** input source using the **INPUT** button on the remote control.

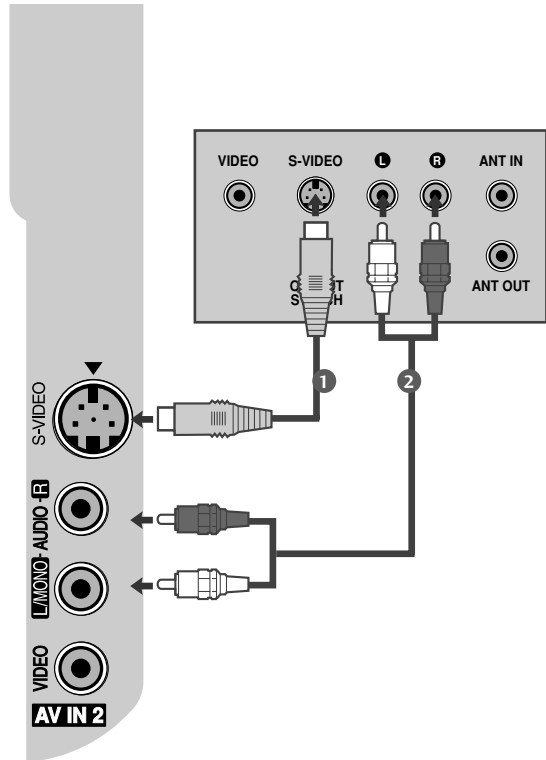


### ! NOTE

- ▶ If both S-VIDEO and VIDEO sockets have been connected to the S-VHS VCR simultaneously, only the S-VIDEO can be received.

# EXTERNAL EQUIPMENT SETUP

## OTHER A/V SOURCE SETUP

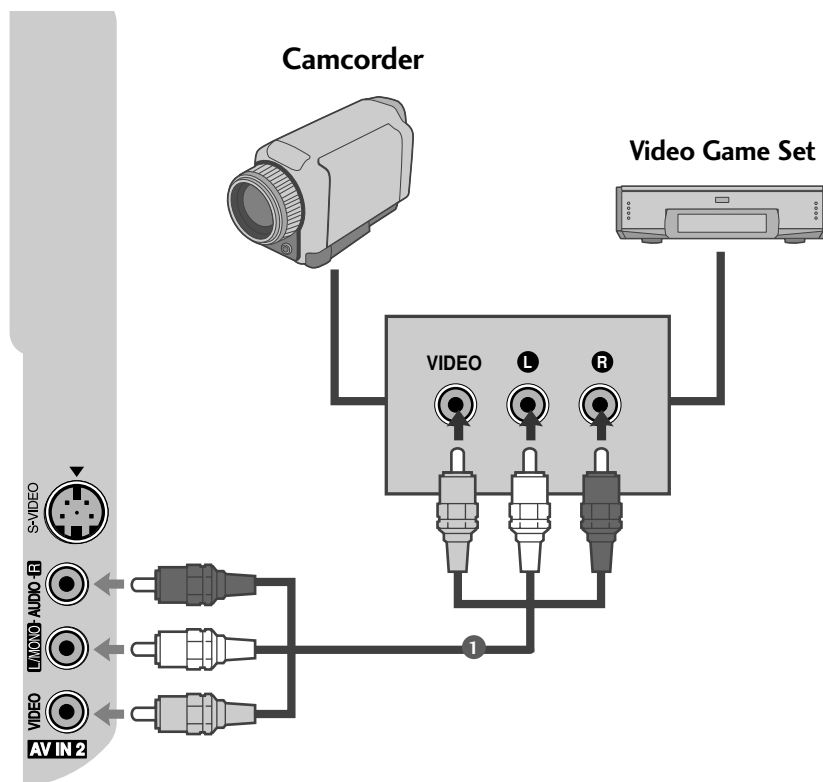


- 1 Connect the **AUDIO/VIDEO** jacks between TV and external equipment. Match the jack colours. (Video = yellow, Audio Left = white, and Audio Right = red)
- 2 Select **AV2** input source using the **INPUT** button on the remote control. If connected to **AV IN1**, select **AV1** input source.
- 3 Operate the corresponding external equipment. Refer to external equipment operating guide.

## PC SETUP

This TV provides Plug and Play capability, meaning that the PC adjusts automatically to the TV's settings.

### Connecting with a D-sub 15 pin cable

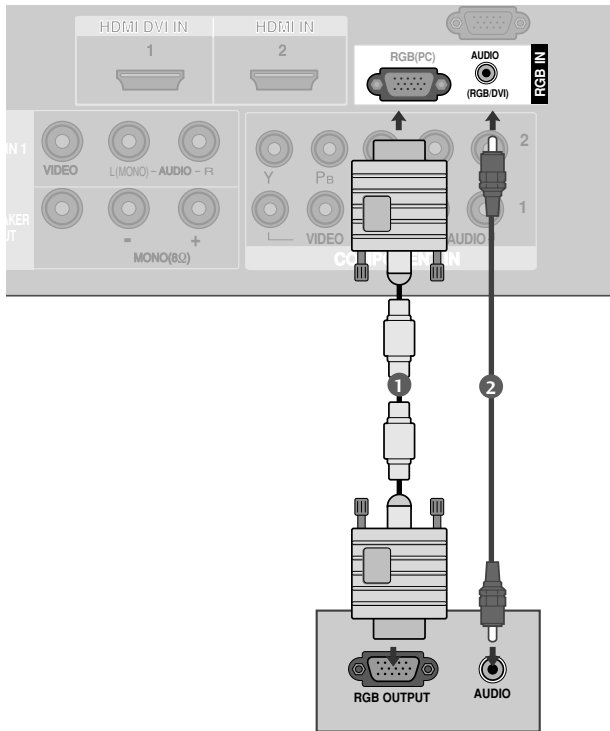

- 1 Connect the RGB output of the PC to the **RGB(PC)** jack on the TV.  
.....
- 2 Connect the PC audio output to the **AUDIO (RGB/DVI)** jack on the TV.  
.....
- 3 Turn on the PC and the TV.  
.....
- 4 Select **RGB PC** input source using the **INPUT** button on the remote control.

# EXTERNAL EQUIPMENT SETUP

## ! NOTE

- ▶ To enjoy vivid picture and sound, connect the PC to the TV.
- ▶ Avoid keeping a fixed image on the TV's screen for prolonged periods of time. The fixed image may become permanently imprinted on the screen; use a screen saver when possible.
- ▶ Connect the PC to the RGB (PC) port of the TV; change the resolution output of PC accordingly.
- ▶ There may be interference relating to resolution, vertical pattern, contrast or brightness in PC mode. Change the PC mode to another resolution or change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.
- ▶ The synchronization input waveform for Horizontal and Vertical frequencies are separate.
- ▶ If the resolution of PC is over SXGA, there will be no picture on the TV. (Only HD Models)
- ▶ Connect the audio cable from the PC to the Audio input on the TV. (Audio cables are not included with the TV).
- ▶ If you use too long an RGB-PC cable, there may be interference on the screen. We recommend using under 5m of the cable. This provides the best picture quality.

## Supported Display Resolution

### RGB-PC mode

Resolution	Horizontal Frequency(kHz)	Vertical Frequency(Hz)
640x350	31.468	70.09
720x400	31.469	70.09
640x480	31.469	59.94
800x600	37.879	60.317
1024x768	48.363	60.004
1280x768	47.776	59.87
1360x768	47.720	59.799
1366x768	47.700	60.00

### HDMI-DTV mode

Resolution	Horizontal Frequency(kHz)	Vertical Frequency(Hz)
720x480	31.47	59.94
	31.50	60.00
720x576	31.25	50.00
1280x720	44.96	59.94
	45.00	60.00
	37.50	50.00
1920x1080i	33.72	59.94
	33.75	60.00
	28.125	50.00
1920x1080p	67.432	59.94
	67.5	60
	56.25	50
	27	24
	33.75	30

# EXTERNAL EQUIPMENT SETUP

## Screen Setup for PC mode


### Auto Configure (RGB [PC] mode only)

Automatically adjusts picture position and minimizes image instability. After adjustment, if the image is still not correct, your TV is functioning properly but needs further adjustment.


#### Auto configure

This function is for automatic adjustment of the screen position, clock, and phase. The displayed image will be unstable for a few seconds while the auto configuration is in progress.

- 1 Press the **MENU** button and then use  $\wedge/\vee$  button to select the **Picture** menu.
- 2 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Screen**.
- 3 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Auto Config..**
- 4 Press the  $\triangleright$  button to start **Auto Config..**
  - When Auto config. has finished, OK will be shown on screen.
  - If the position of the image is still not correct, try Auto adjustment again.
- 5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

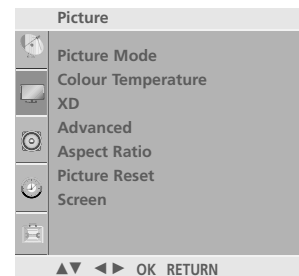

1

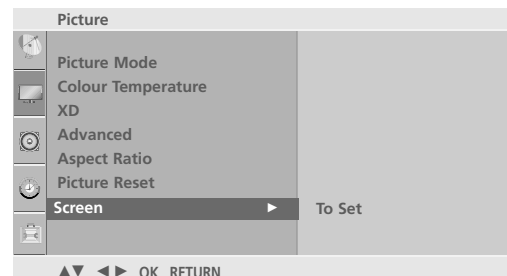

2



3 4

## Manual Configure (Adjustment for screen Phase, Clock, Position) (RGB [PC] mode only)


If the picture is not clear after auto adjustment and especially if characters are still trembling, adjust the picture phase manually.

It's not available to use Phase, Clock function in COMPONENT (480i/480p/576i/576p/720p/1080i/1080p), HDMI (480p/576p/720p/1080i/1080p).


**Clock** This function is to minimize any vertical bars or stripes visible on the screen background the horizontal screen size will also change.

**Phase** This function allows you to remove any horizontal noise and clear or sharpen the image of characters.


- 1 Press the **MENU** button and then use  $\wedge/\vee$  button to select the **Picture** menu.
- 2 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Screen**.
- 3 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Manual Config.**.
- 4 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Phase, Clock, H-Position** or **V-Position**.
- 5 Press the  $\triangleleft/\triangleright$  button to make appropriate adjustments.
- 6 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

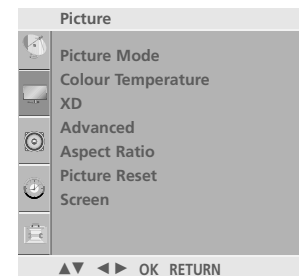

1

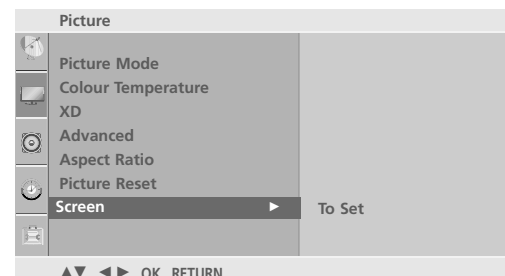

2

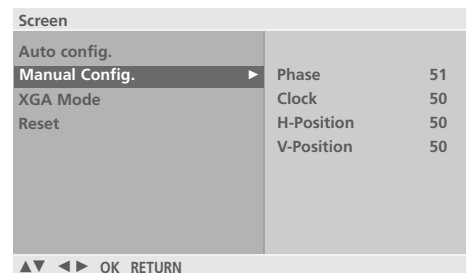

3 4 5

# EXTERNAL EQUIPMENT SETUP


## Selecting XGA mode

This feature is not available for all models.


To view a normal picture, match the resolution of RGB mode and selection of XGA mode.

This function works in the following mode: RGB[PC] mode.


- 1 Press the **MENU** button and then use  $\wedge / \vee$  button to select the **Picture** menu.
- 2 Press the  $\triangleright$  button and then use  $\wedge / \vee$  button to select **Screen**.
- 3 Press the  $\triangleright$  button and then use  $\wedge / \vee$  button to select **XGA Mode**.
- 4 Press the  $\triangleright$  button and then use  $\wedge / \vee$  button to select the desired XGA resolution.
- 5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

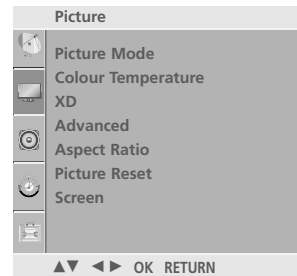

1

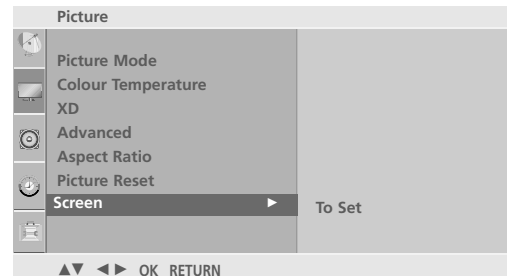

2

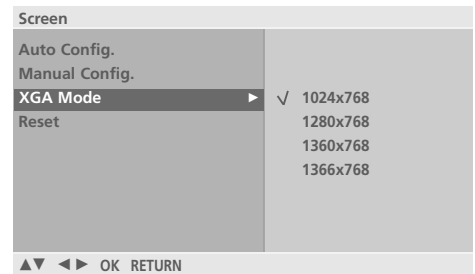


3 4




## Initializing (Reset to original factory settings)

This function operates in current mode.  
To initialize the adjusted value

- 1 Press the **MENU** button and then use  $\wedge/\vee$  button to select the **Picture** menu.
- 2 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Screen**.
- 3 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Reset**.
- 4 Press the  $\triangleright$  button.
- 5 Press the **MENU** button to return to normal TV viewing.  
Press the **RETURN** button to move to the previous menu screen.

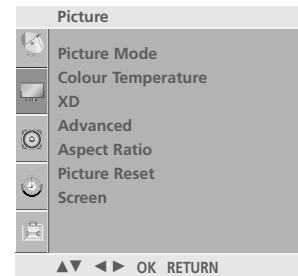

1

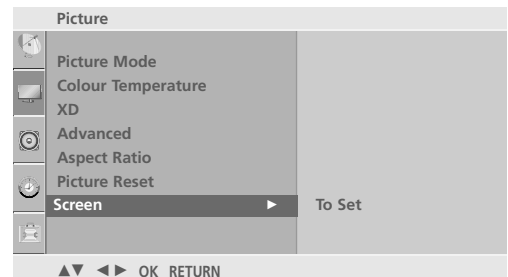

2



3 4

# WATCHING TV / PROGRAMME CONTROL

## REMOTE CONTROL KEY FUNCTIONS

When using the remote control, aim it at the remote control sensor on the TV.



**1** **MODE** Selects the remote operating modes.

**POWER** Switches the TV on from standby or off to standby.

**INPUT** External input mode rotate in regular sequence. Switches the TV on from standby.

**Q. MENU** Select the desired quick menu source.

**MENU** Selects a menu. Clears all on-screen displays and returns to TV viewing from any menu.

**SIMPLINK** See a list of AV devices connected to TV. When you toggle this button, the Simplink menu appears at the screen.

**RETURN** Allows the user to move return one step in an interactive application or other user interaction function.

**PIP** Switches the sub picture PIP, DW mode.

**AV MODE** It helps you select and set images and sounds when connecting AV devices.

**Coloured buttons** These buttons are used for teletext (on **TELETEXT** models only) , **Programme edit**.

**TELETEXT BUTTONS** These buttons are used for teletext. For further details, see the 'Teletext' section.



**THUMBSTICK** (Up/Down/Left/Right) Allows you to navigate the on-screen menus and adjust the system settings to your preference.

**OK** Accepts your selection or displays the current mode.

**VOLUME +/-** Adjusts the volume.

**FAV** Displays the selected favourite programme.

**MUTE** Switches the sound on or off.

**Programme** ^ / ∨ Selects a programme.


**0~9 number button** Selects a programme.  
Selects numbered items in a menu.

**LIST** Displays the programme table.

**Q.VIEW** Returns to the previously viewed programme.

**VCR/DVD control buttons** Controls some video cassette recorders or DVD players. Control connected AV devices by pressing the ^ / ∨ / < / > , OK buttons and buttons for ►, ■, ||, ◀◀ and ▶▶. (The ● button does not provide such functions.)

## Installing Batteries

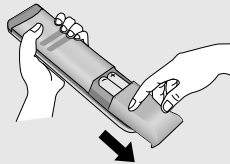
 





- Open the battery compartment cover on the back and install the batteries matching correct polarity (+with +,-with -).
- Install two 1.5V AAA batteries. Do not mix old or used batteries with new ones.
- Close cover.

# WATCHING TV / PROGRAMME CONTROL
 
## TURNING ON THE TV

When your TV is turned on, you will be able to use its features.

- 1 Firstly, connect the power cord correctly.  
At this stage, the TV switches to standby mode.
  - In standby mode to turn TV on, press the  / I , **INPUT**, **P**  /  button on the TV or press the **POWER**, **INPUT**, **P**  /  , **NUMBER(0~9)** buttons on the remote control and the TV will switch on.

### Initializing Guide

If the OSD (On Screen Display) is displayed on the screen after turning on the TV, you can adjust the **Language**, **Auto Tuning**.


**Note:**

*It will automatically disappear after approx. 40 seconds unless a button is pressed.*

## PROGRAMME SELECTION

- 1 Press the **P**  /  or **NUMBER** buttons to select a programme number.

## VOLUME ADJUSTMENT


- 1 Press the  +/- button to adjust the volume.
- 2 If you wish to switch the sound off, press the **MUTE** button.
- 3 You can cancel the Mute function by pressing the **MUTE** or  +/- button.

## QUICK MENU

Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.

Q.Menu (Quick Menu) is a menu of features which users might use frequently.

- **Aspect Ratio**: Selects your desired picture format.  
For Zoom Setting, select 14:9, Zoom1 and Zoom2 in Ratio Menu. After completing Zoom Setting, the display goes back to Q.Menu.
- **Backlight**: Adjusts screen brightness. It returns to the default settings brightness by changing mode source.
- **Picture Mode**: Selects your desired Picture Mode.
- **Sound Mode**: It is a feature to automatically set the sound combination which it deems the best for the images being watched. Selects your desired Sound Mode.
- **Multi Audio**: Selects the sound output.
- **Programme Edit**: Adjusts the stored programmes by delete, copy, move or skip.
- **Sleep Timer**: Selects the sleep timer.

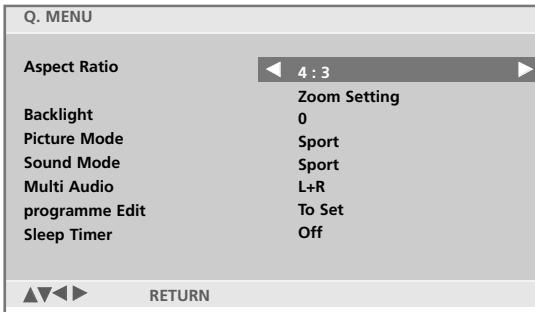


- 1 Press the **Q.MENU** button and then  $\wedge / \vee$  button to display each menu.  
.....
- 2 Press the  $< / >$  button to select your desired Source.  
.....
- 3 Press the **Q.MENU** button to return to normal TV viewing.

# WATCHING TV / PROGRAMME CONTROL


## ON SCREEN MENUS SELECTION AND ADJUSTMENT

Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.


- 1 Press the **MENU** button and then  $\wedge / \vee$  button to display each menu.
- 2 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select a menu item.
- 3 Change the setting of an item in the sub or pull-down menu with  $\triangleleft / \triangleright$  button.  
You can move to a higher level menu by pressing the **OK** button.

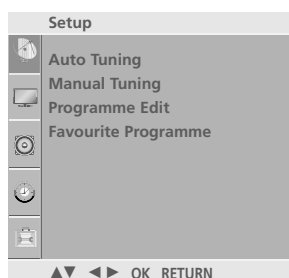


Setup MENU

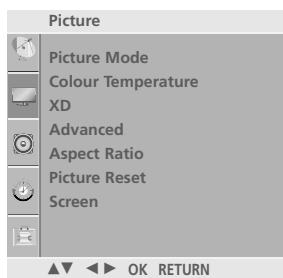


Picture MENU

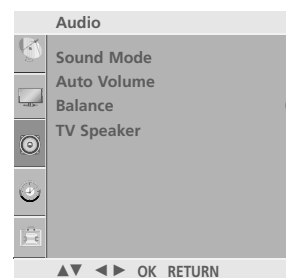

Audio MENU

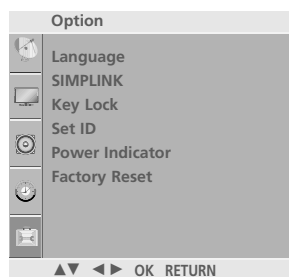

Option MENU

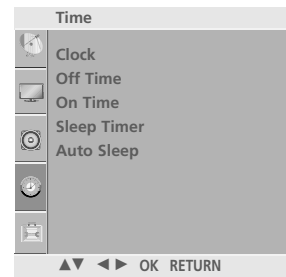

Time MENU

### ! NOTE


- a. The OSD (On Screen Display) function enables you to adjust the screen status conveniently since it provides graphical presentation.
- b. In this manual, the OSD (On Screen Display) may be different from your TV's because it is just example to help the TV operation.
- c. In the teletext mode, menus are not displayed.

# AUTO PROGRAMME TUNING


Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the P  $\wedge$  /  $\vee$  or NUMBER buttons to scan the stations you have programmed. Stations can be tuned using automatic or manual modes.

All stations which can be received are stored by this method. It is recommended that you use Auto tuning during installation of this TV.


- 1 Press the **MENU** button and then  $\wedge$  /  $\vee$  button to select the **Setup** menu.
  - 2 Press the  $\>$  button and then  $\wedge$  /  $\vee$  button to select **Auto Tuning**.
  - 3 Press the  $\>$  button and then  $\wedge$  /  $\vee$  button to select **System**.
  - 4 Press the  $\wedge$  /  $\vee$  button to select a TV system menu;  
 BG: PAL B/G, SECAM B/G (Europe / East Europe / Asia / NewZealand / M.East / Africa / Australia)  
 I : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)  
 DK: PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)  
 M : (USA / Korea / Philippines)
  - 5 Press the  $\wedge$  /  $\vee$  button to select **Storage From**.
  - 6 Press the  $\leftarrow$  /  $\rightarrow$  button or NUMBER buttons to select the initial programme number. If you use NUMBER buttons, any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
  - 7 Press the  $\wedge$  /  $\vee$  button to select **Search**.
  - 8 Press the  $\>$  button to begin auto tuning. All receivable stations are stored.
- To stop auto tuning, press the **RETURN** button. When auto tuning is complete, the Programme edit menu appears on the screen. See the Programme edit section to edit the stored programme.
- 9 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

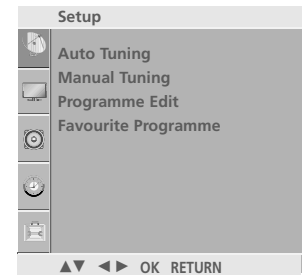


1

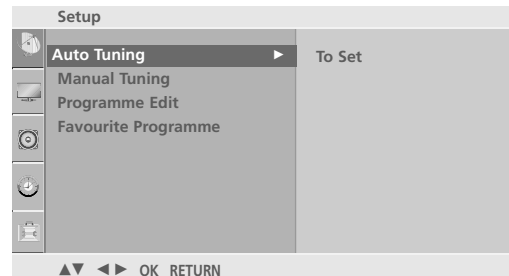

2

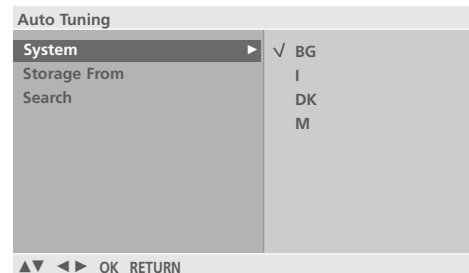

3 4 5 6 7

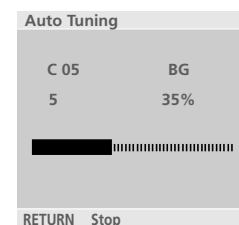


8

## MANUAL PROGRAMME TUNING

Manual programme lets you manually tune and arrange the stations in whatever order you desire.


- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Setup** menu.
- 2 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Manual Tuning**.
- 3 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Storage**.
- 4 Press the  $\lt;/\gt$  button or NUMBER buttons to select the desired programme number (0 to 99). If you use NUMBER buttons, any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
- 5 Press the  $\wedge/\vee$  button to select **System**.
- 6 Press the  $\wedge/\vee$  button to select a TV system menu;  
 BG: PAL B/G, SECAM B/G (Europe / East Europe / Asia / NewZealand / M.East / Africa / Australia)  
 I : PAL I/II (U.K. / Ireland / Hong Kong / South Africa)  
 DK: PAL D/K, SECAM D/K (East Europe / China / Africa / CIS)  
 M : (USA / Korea / Philippines)
- 7 Press the  $\wedge/\vee$  button to select **Band**.
- 8 Press the  $\>$  button and then  $\wedge/\vee$  button to select **V/UHF** or **Cable**.
- 9 Press the  $\wedge/\vee$  button to select **Channel**.
- 10 You can select the desired programme number with the  $\lt;/\gt$  button or NUMBER buttons. If possible, select the programme number directly with the number buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
- 11 Press the  $\wedge/\vee$  button to select **Search**.
- 12 Press the  $\lt;/\gt$  button to commence searching. If a station is found the search will stop.
- 13 Press the **OK** button to store it.
- 14 To store another station, repeat steps 3 to 13.
- 15 Press the **MENU** button to return to normal TV viewing.  
 Press the **RETURN** button to move to the previous menu screen.

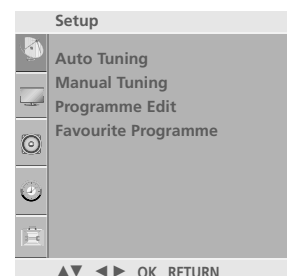

1



2

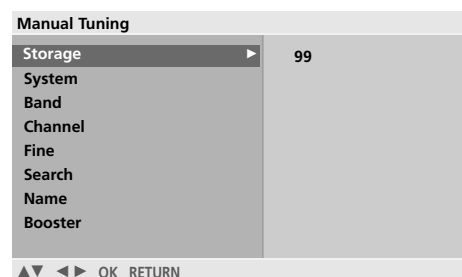

3 4 5 6 7  
8 9 10 11 12



## FINE TUNING

Normally fine tuning is only necessary if reception is poor.

- 1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Setup** menu.

---

- 2 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Manual Tuning**.

---

- 3 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Fine**.

---

- 4 Press the  $\triangleright$  button and then  $\triangleleft / \triangleright$  button to fine tune for the best picture and sound.

---

- 5 Press the **OK** button to store it.


---

- 6 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.


---




1

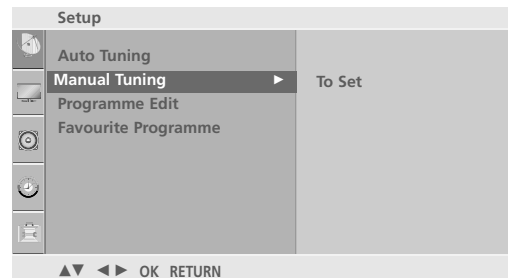

2

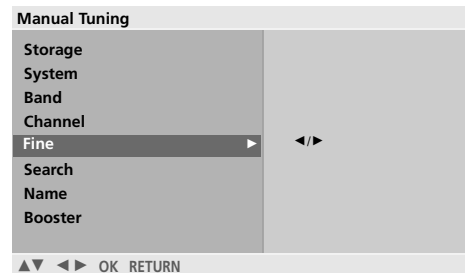

3 4 5

# WATCHING TV / PROGRAMME CONTROL

## ASSIGNING A STATION NAME

You can assign a station name up to five characters to each programme number.

- 1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Setup** menu.

- 2 Press the  $>$  button and then  $\wedge / \vee$  button to select **Manual Tuning**.

- 3 Press the  $>$  button and then  $\wedge / \vee$  button to select **Name**.

- 4 Press the  $>$  button and then  $\wedge / \vee$  button. You can use a blank, +, -, the number **0** to **9** and the alphabet **A** to **Z**.

- 5 Press the  $< / >$  button to select the position and make your choice of the second character, and so on.

- 6 Press the **OK** button to store it.

- 7 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.



1



2



3 4 5 6

# BOOSTER

In some models, **Booster** is an optional function. Only a set with **Booster** can perform this function.

If reception is poor, select **Booster** to **On**.  
When the signal is strong, select "OFF".


1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Setup** menu.

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Manual Tuning**.


3 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **Booster**.

4 Press the  $\triangleright$  button and then use  $\wedge/\vee$  button to select **On** or **Off**.


5 Press the **MENU** button to return to normal TV viewing.  
Press the **RETURN** button to move to the previous menu screen.

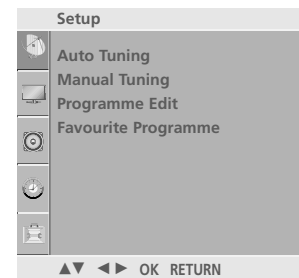

1

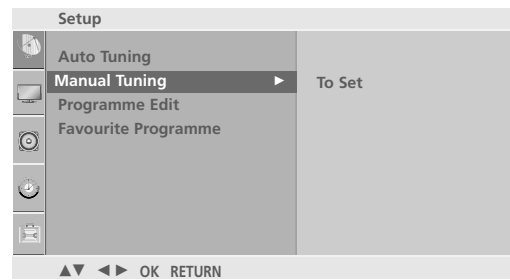

2

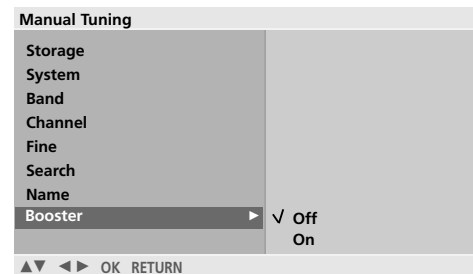

3 4 5 6

# WATCHING TV / PROGRAMME CONTROL

## PROGRAMME EDIT

This function enables you to delete or skip stored programmes. Also you can move some stations to other programme numbers or copy a blank station data into the selected programme number.

1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Setup** menu.

2 Press the  $\gt$  button and then  $\wedge / \vee$  button to select **Programme Edit**.

3 Press the  $\gt$  button to display the Programme edit menu.

### ■ Deleting a programme

1. Select a programme to be deleted with the  $\wedge / \vee / \lt / \gt$  button.

2. Press the RED button twice.

The selected programme is deleted, all the following programmes are shifted up one position.

### ■ Copying a programme

1. Select a programme to be copied with the  $\wedge / \vee / \lt / \gt$  button.

2. Press the GREEN button.

All the following programmes are shifted down one position.

### ■ Moving a programme

1. Select a programme to be moved with the  $\wedge / \vee / \lt / \gt$  button.

2. Press the YELLOW button.

3. Move the programme to the desired programme number with the  $\wedge / \vee / \lt / \gt$  button.

4. Press the YELLOW button again to release this function.

### ■ Skipping a programme number


1. Select a programme number to be skipped with the  $\wedge / \vee / \lt / \gt$  button.

2. Press the BLUE button. The skipped programme turns to blue.


3. Press the BLUE button again to release the skipped programme.

When a programme number is skipped it means that you will be unable to select it using the  $\wedge / \vee$  button during normal TV viewing. If you wish to select the skipped programme, directly enter the programme number with the NUMBER buttons or select it in the programme edit or table menu.


4 Press the **MENU** button to return to normal TV viewing.  
Press the **RETURN** button to move to the previous menu screen.

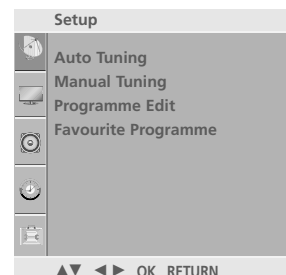

1

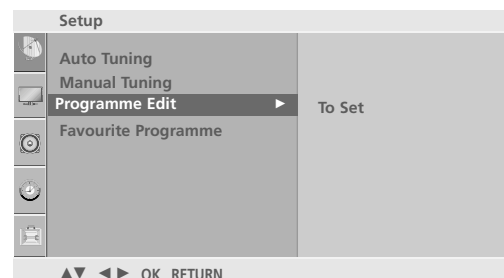

2

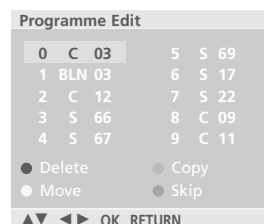

3

## FAVOURITE PROGRAMME

This function lets you select your favourite programmes directly.

Repeatedly press the FAV button to select stored favourite programmes.

---

**1** Press the **MENU** button and then  $\wedge / \vee$  button to select the **Setup** menu.

---

**2** Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Favourite Programme**.

.....

**3** Press the  $\triangleright$  button.

.....

**4** Press the  $\wedge / \vee$  button to select - - - - -.

.....

**5** Select a desired programme with the  $\triangleleft / \triangleright$  button or **NUMBER** buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.

.....

**6** To store another programme, repeat steps **4** to **5**. You can store up to 8 programmes.


---

**7** Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

---



**1**

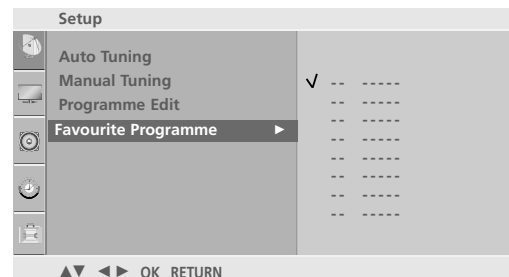

**2 3 4 5**

## SELECTING THE PROGRAMME LIST

You can check which programmes are stored in the memory by displaying the programme list.

### ■ Displaying programme list

Press the **LIST** button to display the Programme list menu.

The programme list appears on the screen.

One programme list contains ten programmes as shown.

### ! NOTE

- You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.
- Some programmes with the channel number shown in the programme list indicate there is no station name assigned.

### ■ Selecting a programme in the programme list

Select a programme with the  $\wedge / \vee / \lt / \gt$  button.

Then press the **OK** button. The TV switches to the chosen programme number.

### ■ Paging through a programme list

There are 10 programme table pages in which contain 100 programmes. Pressing the  $\wedge / \vee / \lt / \gt$  button repeatedly turns the pages.

Press the **LIST** button to return to normal TV viewing.

0	C	03	5	S	69
1	BLN	03	6	S	17
2	C	12	7	S	22
3	S	66	8	C	09
4	S	67	9	C	11

◀▶ ▲▼ OK



This function operates only with devices with the SIMPLINK logo.  
Please check the SIMPLINK logo.

The product might not function properly when using it with other products with HDMI-CEC function.

This allows you to control and play other AV devices connected to the display through HDMI cable without additional cables and settings.

If you do not require the SIMPLINK menu, select "Off".

---

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Option** menu.

---

2 Press the  $\gt$  button and then  $\wedge/\vee$  button to select **SIMPLINK**.


---

3 Press the  $\gt$  button and then  $\wedge/\vee$  button to select **On** or **Off**.


---

4 Press the **MENU** button to return to normal TV viewing.  
Press the **RETURN** button to move to the previous menu screen.

---

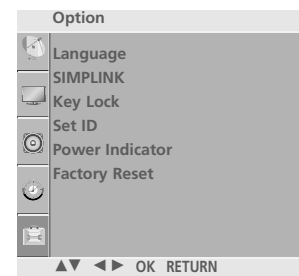

1

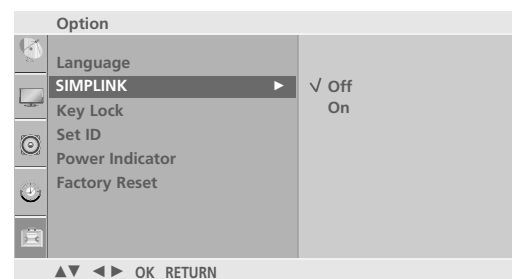

2 3

# WATCHING TV / PROGRAMME CONTROL

## SIMPLINK Functions

### Disc playback

Control connected AV devices by pressing the  $\wedge / \vee / < / >$ , OK,  $\blacktriangleright$ ,  $\blacksquare$ ,  $\text{II}$ ,  $\blacktriangleleft$  and  $\blacktriangleright$  buttons. (The  $\bullet$  button does not provide such functions)

### Direct Play

After connecting AV devices to the TV, you can directly control the devices and play media without additional settings.

### Select AV device

Enables you to select one of the AV devices connected to the TV and operate it.

### Power off all devices

When you switch off the TV, all connected devices are turned off.

### Switch audio-out

Offers an easy way to switch audio-out.

-Sync Power on : The television set will change automatically to turn on mode, after the Player with Simplink function start to reproduce through connection HDMI.

\* **A device, which is connected to the TV through a HDMI cable but does not support SIMPLINK, does not provide this function.**

## SIMPLINK Menu

Press the  $\wedge / \vee / < / >$  button and then OK button to select the desired SIMPLINK source.


① **TV viewing** : Switch to the previous TV programme regardless of the current mode.

② **DISC playback** : Select and play discs. When multiple discs are available, the titles of the discs are conveniently displayed at the bottom of the screen.

③ **VCR playback** : Control the connected VCR.

④ **HDD Recordings playback** : Control recordings stored in HDD.

⑤ **Audio Out to Home theater/Audio Out to TV** : Select Home theater or TV speaker for Audio Out.

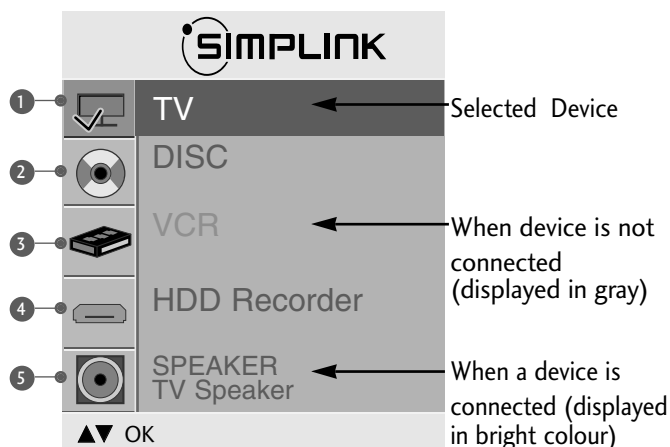

### ! NOTE

- ▶ Connect the HDMI/DVI IN or HDMI IN terminal of the TV to the rear terminal and Side terminal (HDMI terminal) of the SIMPLINK device with the HDMI cable.
- ▶ After connecting the HDMI terminal for the home theatre with SIMPLINK function using the above method, connect the VARIABLE AUDIO OUT terminal on the back of the TV to the VARIABLE AUDIO IN terminal on the back of the SIMPLINK device with the VARIABLE AUDIO OUT cable.
- ▶ When operating an external device with SIMPLINK, press the TV button from the MODE button on the remote control.
- ▶ When you switch the Input source using the INPUT button on the remote control, you can stop the operation of a device controlled by SIMPLINK.
- ▶ When you select or operate a media device with home theatre function, the speaker automatically switches to home theatre speaker (HT speaker).




## KEY LOCK

The TV can be set so that the remote control is needed to control it.


This feature can be used to prevent unauthorized viewing.

This TV is programmed to remember which option it was last set to even if you turn the TV off.

- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Option** menu.
- 2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Key Lock**.
- 3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **On** or **Off**.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

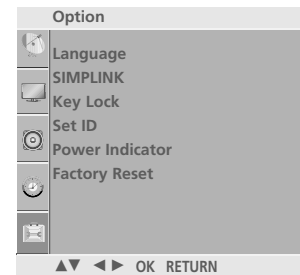

1

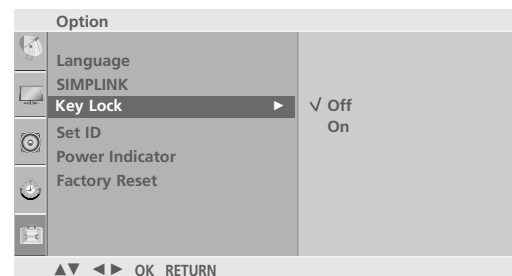

2 3


### ! NOTE

- ▶ In **Key Lock 'On'**, if the TV is turned off, press the  $\text{⏻}$  / **I**, **INPUT**, **P**  $\wedge/\vee$  button on the TV or **POWER**, **INPUT**, **TV**, **P**  $\wedge/\vee$  or **NUMBER** buttons on the remote control.
- ▶ With the **Key Lock On**, the display 'Key Lock On' appears on the screen if any button on the front panel is pressed while viewing the TV.

# WATCHING TV / PROGRAMME CONTROL

## AV MODE

You can select the optimal images and sounds when connecting AV devices to external input.

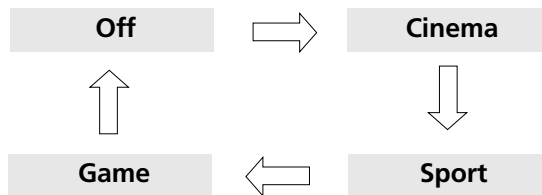

- 
- 1 Press the **AV MODE** button repeatedly to select the desired source.
- 

- If you select Cinema Mode in AV mode, Cinema mode will be selected both for Picture Mode and Sound Mode in Picture menu and Audio menu respectively.

---

- If you select "Off" in AV mode, the picture and image which you initially set will be selected.

---

- 2 Press the **RETURN** button to return to normal TV viewing.
-

# PICTURE CONTROL


## WATCHING PIP(PICTURE-IN-PICTURE)

PIP lets you view 2 different inputs (sources) on your TV screen at the same time.

One source will be large, and the other source will show a smaller inset image.


PIP function is available in the Component, RGB, HDMI mode.

(For Full HD, it can support TV, AV1, AV2 mode.)

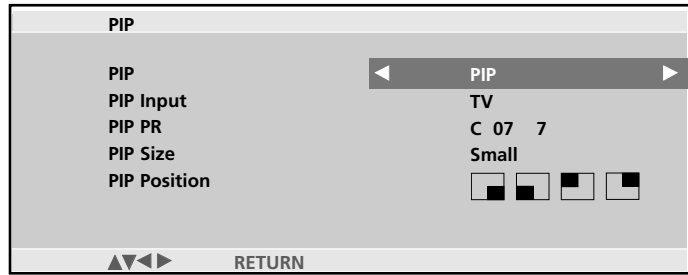

### Watching PIP/Double Window

Press the **PIP** button and then press the  $\wedge / \vee / < / >$  button to change the PIP options as shown below.

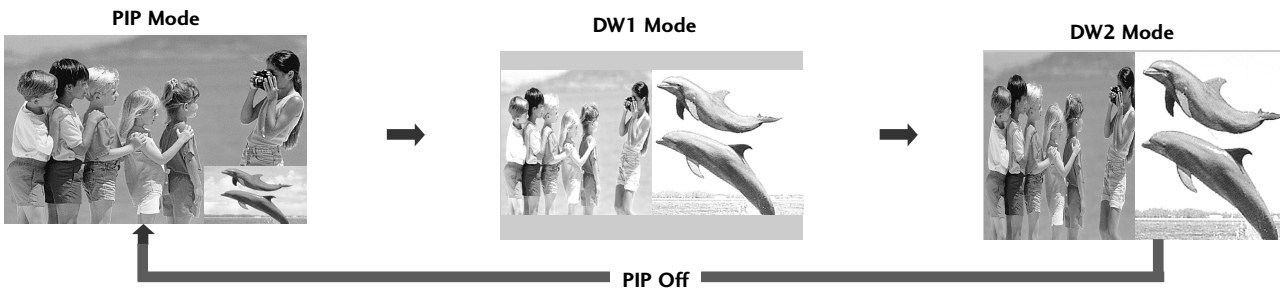

### Programme Selection for Sub Picture

Press the **PIP** button and then press the  $\wedge / \vee / < / >$  button to select a programme for the sub picture. The selected programme number is displayed just below the programme number of main picture.

### Input Source Selection for Sub Picture

Press the **PIP** button and then press the  $\wedge / \vee / < / >$  button to select the PIP Input source for the sub picture. (Sub picture can be selected only TV, AV1, AV2)

### Sub Picture Size Adjustment (PIP mode only)

Press the **PIP** button and then press the  $\wedge / \vee / < / >$  button to adjust the sub picture size.

### Moving the Sub Picture (PIP mode only)

Press the **PIP** button and then press the  $\wedge / \vee / < / >$  button to adjust the sub picture position.

# PICTURE CONTROL

## PICTURE SIZE (ASPECT RATIO)CONTROL

You can watch the screen in various picture formats; **16:9**, **Original**, **4:3**, **14:9**, **Zoom1/2** and **Just Scan**.

Just Scan works in the following mode:

Component (720p/1080i/1080p), HDMI (720p/1080i/1080p)

If a fixed image is displayed on the screen for a long time, that fixed image may become imprinted on the screen and remain visible.

You can adjust the enlarge proportion using  $\wedge \vee$  button.

This function works in the following signal.

---

**1** You can adjust **Aspect Ratio** in the **Picture** menu.

---


- **16:9**

The following selection will allow you to adjust the picture horizontally, in linear proportion, to fill the entire screen (useful for viewing 4:3 formatted DVDs).



- **4:3**

The following selection will allow you to view a picture with an original 4:3 aspect ratio, grey bars will appear on both the left and right hand of the screen.

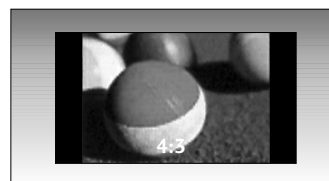

- **Original**

When your TV receives a wide screen signal it will automatically change to the picture format to be broadcast.




- **14:9**

You can view a picture format of 14:9 or a general TV programme in the 14:9 mode. The 14:9 screen is viewed in the same way as in 4:3, but is magnified to the left and right.




- **Zoom1**

The following selection will allow you to view the picture without any alteration, while filling the entire screen. However, the top and bottom of the picture will be cropped.

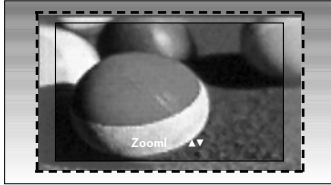

- **Zoom2**

Choose Zoom 2 when you wish the picture to be altered, both horizontally extended and vertically cropped. The picture adopting a compromise between alteration and screen coverage.

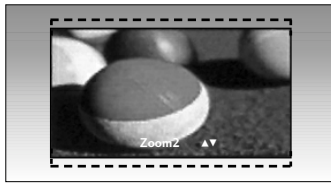

- **Just Scan**

Following Selection will lead to you view the picture of best quality without loss of original picture in high resolution image.

**! NOTE**

- ▶ You can only select 4:3,16:9 (Wide) in Component, HDMI, RGB(PC) mode.
- ▶ In HDMI/Component (over 720p)mode,) Just Scan is available.

# PICTURE CONTROL

## PRESET PICTURE SETTINGS

### Picture Mode-Preset

Picture Mode adjusts the TV for the best picture appearance. Select the preset value in the **Picture Mode** menu based on the programme category.

**Cable**, **Vivid**, **Standard**, **Cinema**, **Sport** and **Game** are programmed for optimum picture reproduction at the factory and cannot be changed.


Cable works in the following mode: AV1, AV2

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.


2 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Picture Mode**.

3 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Cable**, **Vivid**, **Standard**, **Cinema**, **Sport**, **Game**, **User1** or **User2**.

4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

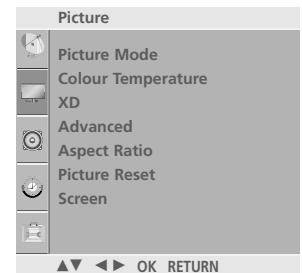

1

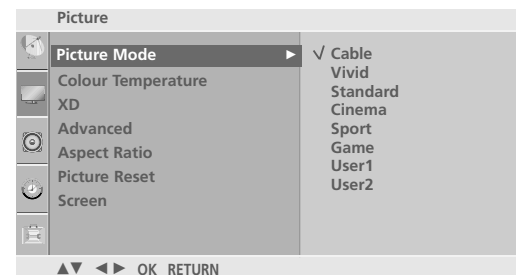

2 3

## Auto Colour Tone Control(Cool/Medium/Warm)

To initialize values (reset to default settings), select the Cool option.

Choose one of three automatic colour adjustments. Set to warm to enhance hotter colours such as red, or set to cool to see less intense colours with more blue.

This menu is activated after selecting “User1” or “User2” in the Picture Mode.

- 1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Picture** menu.

---


- 2 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Colour Temperature**.

---


- 3 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select either **Cool, Medium, Warm** or **User**.

---

- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

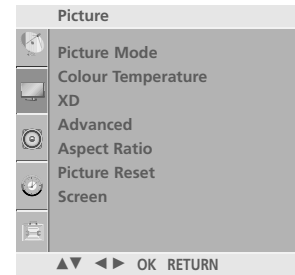

1

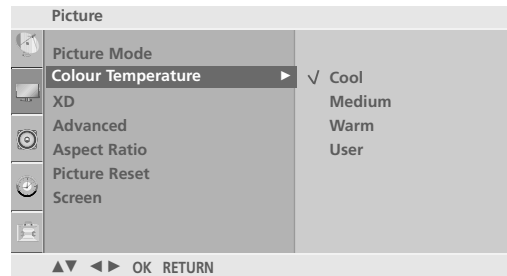

2 3

# PICTURE CONTROL

## MANUAL PICTURE ADJUSTMENT

### Picture Mode-User Option

- Backlight** To control the brightness of the screen, adjust the brightness of LCD panel.
- Contrast** Adjusts the difference between light and dark levels in the picture.
- Brightness** Increases or decreases the amount of white in the picture.
- Colour** Adjusts intensity of all colours.
- Sharpness** Adjusts the level of crispness in the edges between the light and dark areas of the picture. The lower the level, the softer the image.
- Tint** Adjusts the balance between red and green levels.

1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Picture** menu.


2 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Picture Mode**.

3 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **User1** or **User2**.


4 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select the desired picture option (**Backlight**, **Contrast**, **Brightness**, **Colour**, **Sharpness** and **Tint**).

5 Press the  $\triangleleft / \triangleright$  button to make appropriate adjustments.


6 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

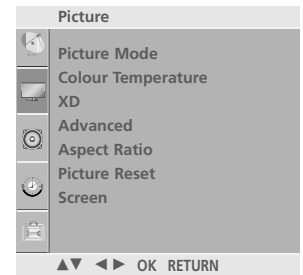

1

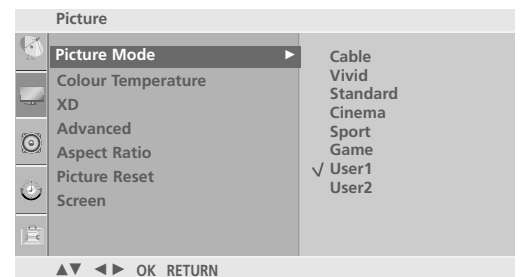

2 3

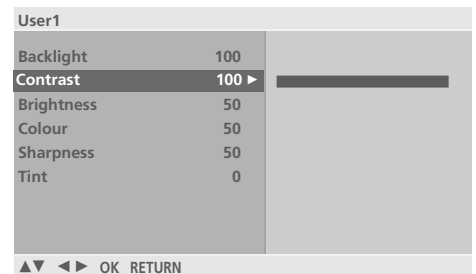

4 5



### ! NOTE

- ▶ You cannot adjust colour, sharpness and tint in the RGB-PC mode.



## Colour Tone - User Option

To adjust red, green, blue to any colour temperature you prefer.

This menu is activated after selecting “User1” or “User2” in the Picture Mode.

- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.

---

- 2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Colour Temperature**.

---

- 3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **User**.

---


- 4 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Red, Green or Blue**.

---


- 5 Press the  $\triangleleft/\triangleright$  button to make appropriate adjustments.

---


- 6 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

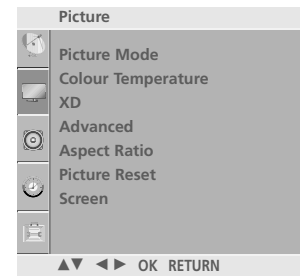

1

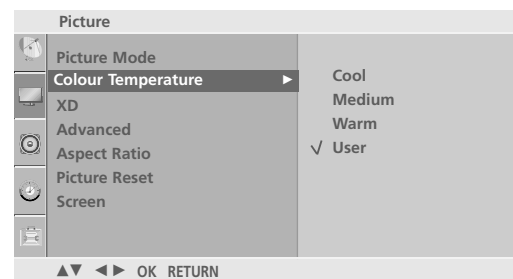

2 3

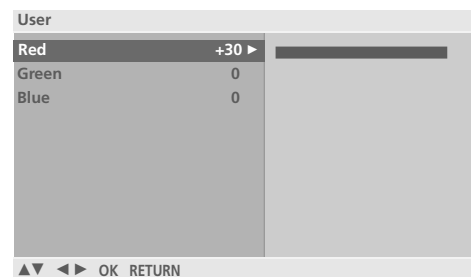

4 5



# PICTURE CONTROL

## XD - PICTURE IMPROVEMENT TECHNOLOGY

XD is LG electronic's unique picture improving technology to display a real HD source through an advanced digital signal processing algorithm.

It is not possible to use this function in RGB-PC mode.


- 1 Press the MENU button and then  $\wedge/\vee$  button to select the **Picture** menu.
- 2 Press the  $\>$  button and then  $\wedge/\vee$  button to select **XD**.
- 3 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Auto** or **Manual**.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

\* Manual Selection


This menu is activated after selecting the **User1** or **User2** of **Picture Mode**.

- 1 Press the  $\>$  button and then  $\wedge/\vee$  button to select **XD Contrast**, **XD Colour** or **XD NR**.
- 2 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Off**, **Low** or **High**.  
Select **Off**, **Low**, **High** or **Adaptive** (Only **XD NR**).
- 3 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

- **XD Contrast** : Optimises the contract automatically according to the brightness of the reflection.
- **XD Colour** : Adjusts the colour of the reflection automatically to reproduce as close as possible to natural colours.
- **XD NR** : Removes interference up to the point where it does not damage the original picture.

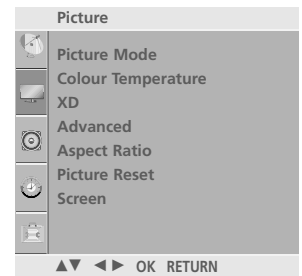

1

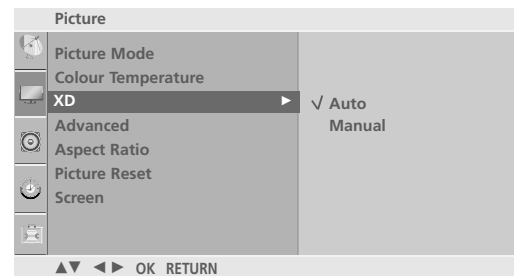

2 3



1 2

# ADVANCED - GAMMA


High gamma values display whitish images and low gamma values display high contrast images.

It's not possible to use this function in RGB-PC mode.

---

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.


---

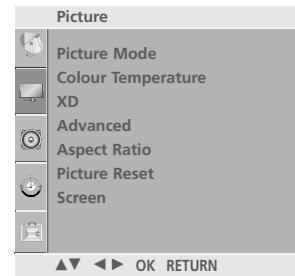

1

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Advanced**.

---

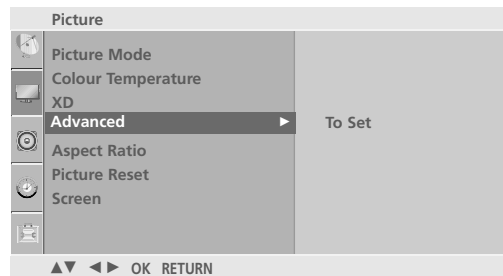

2 3

3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Gamma**.

---



4

4 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Low**, **Medium** or **High**.

---

5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

---

# PICTURE CONTROL

## ADVANCED - Film Mode

To set the TV up for the best picture quality for viewing films.

This feature operates only in Analog TV, AV, S-video and Component 480i/576i mode.


1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Advanced**.


3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Film Mode**.

4 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **On** or **Off**.


5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

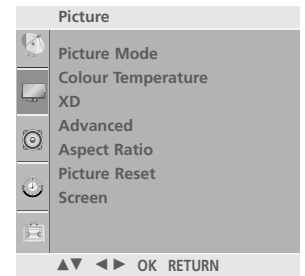

1

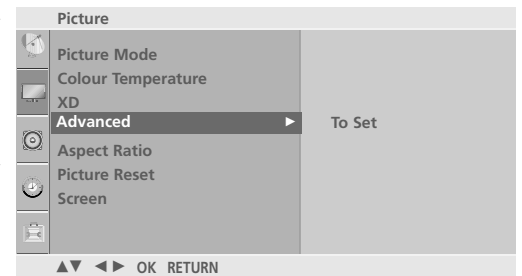

2 3

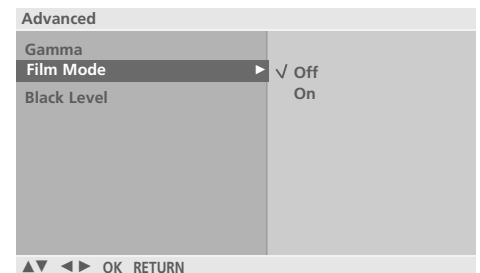

4

## ADVANCED - BLACK(DARKNESS) LEVEL

When you view a film this function adjust the TV to best picture quality. Adjusting the contrast and the brightness of the screen using the black level of the screen.

This function works in the following mode:  
 RF(NTSC-M), AV, S-Video(NTSC-M, NTSC 4.43),  
 COMPONENT or HDMI.

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.


2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Advanced**.

3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Black Level**.


4 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Low** or **High**.

- **Low** : The reflection of the screen gets darker.
- **High** : The reflection of the screen gets brighter.


5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

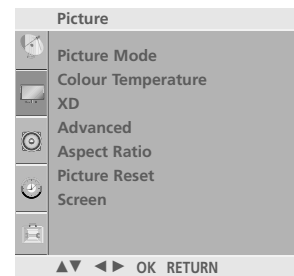

1

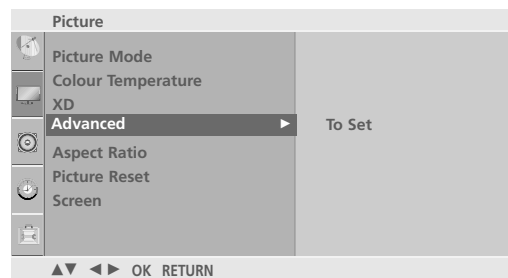

2 3

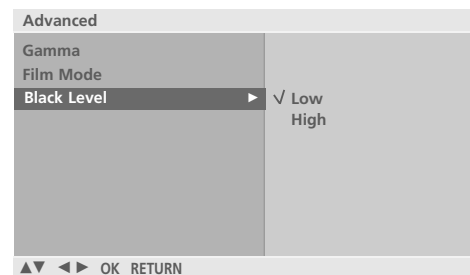

4

# PICTURE CONTROL

## ADVANCED - Eye Care

This feature is not available for all models.

It helps you adjust brightness when the screen is too bright to prevent dazzling.

When selecting Picture Mode (Standard, Game, Sport, User1 and User2), you can operate this function.


1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Advanced**.


3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Eye Care**.

4 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **On** or **Off**.


5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

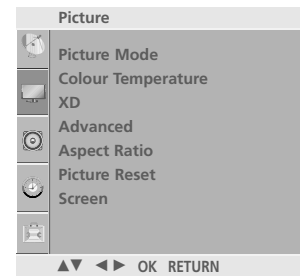

1

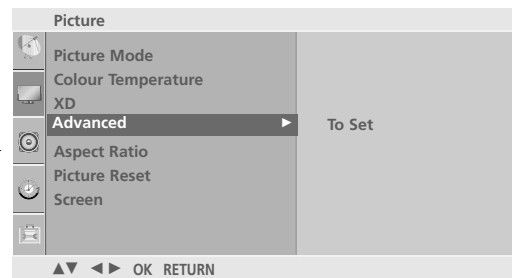

2 3

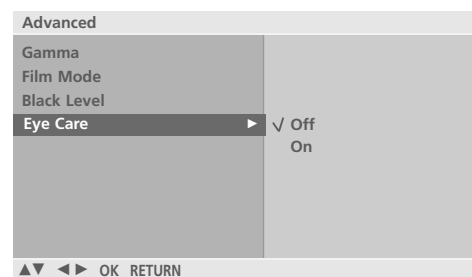


4


# PICTURE RESET

Returns to the default factory setting for Picture Mode, Colour Temperature, XD, Advanced, Aspect Ratio.

- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Picture** menu.
- 2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Picture Reset**.
- 3 Press the  $\triangleright$  button to initialize the adjusted value.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

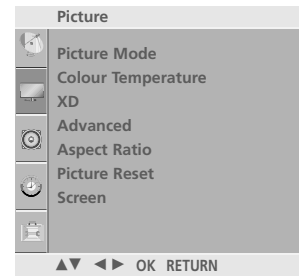

1

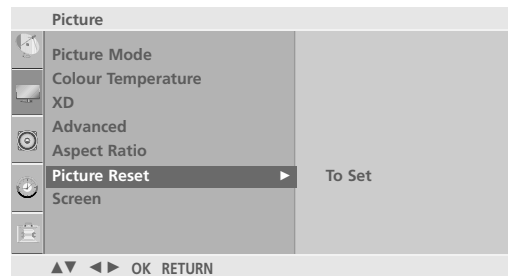



2 3

# PICTURE CONTROL

## POWER INDICATOR

It helps you adjust the brightness of moving LED when power is turned on.

- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Option** menu.
- 2 Press the  $\gt$  button and then  $\wedge/\vee$  button to select **Power Indicator**.
- 3 Press the  $\gt$  button and then  $\wedge/\vee$  button to select either **Standby Light** or **Power Light**.
- 4 Press the  $\gt$  button and then  $\wedge/\vee$  button to select **On** or **Off**.
- 5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

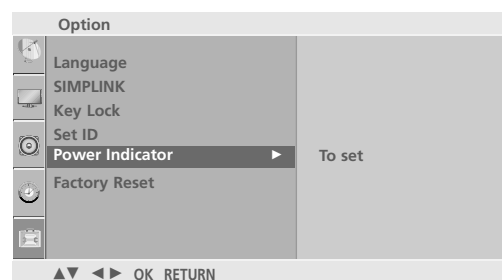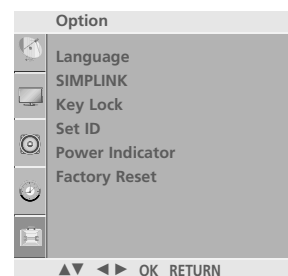

2 3




# FACTORY RESET


Use to quickly reset all the menu options to their original factory preset values.

This function deletes all TV programmes.


- 1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Option** menu.
- 2 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Factory Reset**.
- 3 Press the  $\triangleright$  button and then  $\triangleleft / \triangleright$  button to select **Yes** or **No**.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

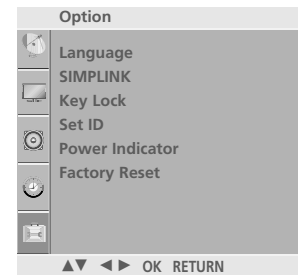

1

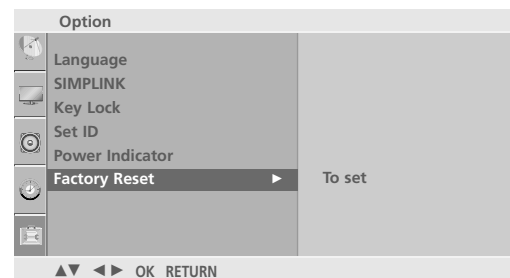

2 3

 

# SOUND & LANGUAGE CONTROL

## AUTO VOLUME LEVELER

Auto Volume automatically remains on the same level of volume if you change programmes.

---

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Audio** menu.

---

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Auto Volume**.


---

3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **On** or **Off**.


---

4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

---

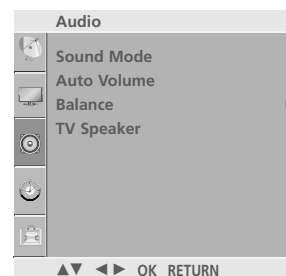

1

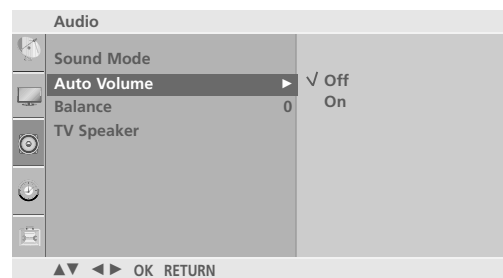


2 3

## PRESET SOUND SETTINGS-SOUND MODE

You can select your preferred sound setting; SRS TSXT, Clear Voice, Standard, Music, Cinema, Sport or Game and you can also adjust the frequency of the equalizer.

Sound Mode lets you enjoy the best sound without any Special adjustment as the TV sets the appropriate sound options based on the programme content.

**SRS TSXT, Clear Voice, Standard, Music, Cinema, Sport** and **Game** are preset for optimum sound quality at the factory and are not adjustable.

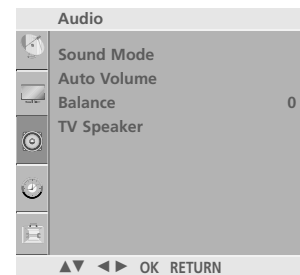


1

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Audio** menu.

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Sound Mode**.

3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **SRS TSXT, Clear Voice, Standard, Music, Cinema, Sport, Game** or **User**.

4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

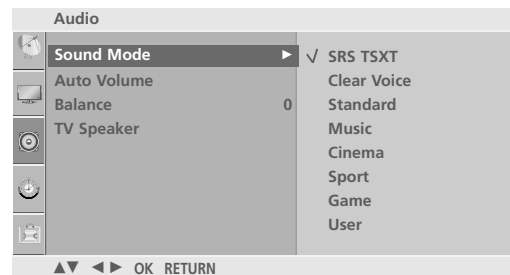

2 3

# SOUND & LANGUAGE CONTROL

## SOUND SETTING ADJUSTMENT -USER MODE

Adjusting the audio equalizer.

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Audio** menu.


2 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Sound Mode**.

3 Press the  $\>$  button and then  $\wedge/\vee$  button to select **User**.


4 Press the  $\>$  button.

5 Select a frequency band by pressing the  $\lt;/\gt$  button. Set the desired sound level with the  $\wedge/\vee$  button.


6 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

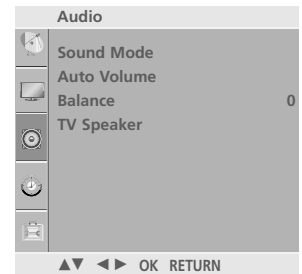

1

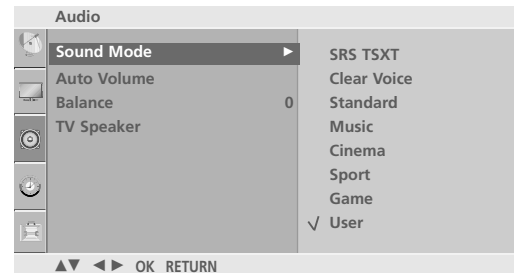

2 3 4

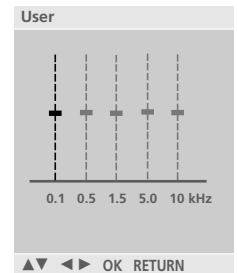


5


# BALANCE

You can adjust the sound balance of the speakers to the preferred levels.

- 1 Press the **MENU** button and then  $\wedge / \vee$  button to select the **Audio** menu.
- 2 Press the  $\triangleright$  button and then  $\wedge / \vee$  button to select **Balance**.
- 3 Press the  $\triangleright$  button and then  $\triangleleft / \triangleright$  button to make desired adjustment.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

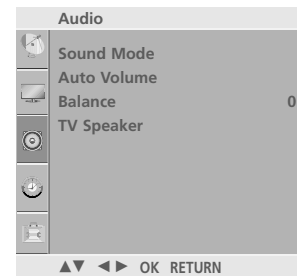

1

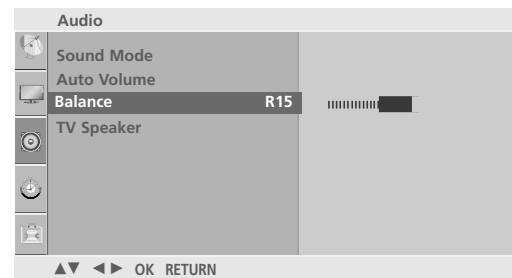

2 3

# SOUND & LANGUAGE CONTROL

## TV SPEAKERS ON/OFF SETUP

You can adjust the internal speaker status.

In TV, AV, COMPONENT, RGB[PC] and HDMI mode, internal speaker audio can be operational even though there is no video signal.

If you wish to use an external hi-fi system, turn off the TV internal speakers.

---

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Audio** menu.

---

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **TV Speaker**.


---

3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **On** or **Off**.


---

4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

---

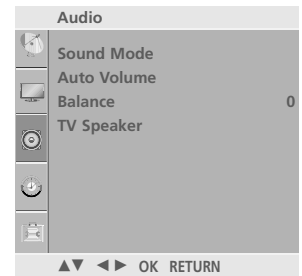

1

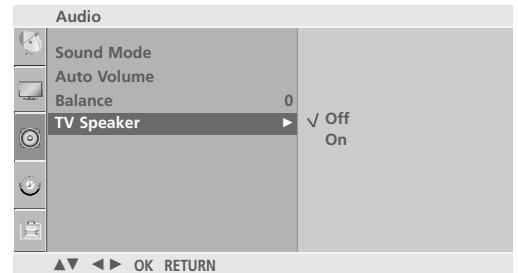

2 3

## Stereo/Dual Reception

When a programme is selected, the sound information for the station appears with the programme number and station name.

---

**1** Press the **Q.MENU** button and then  $\wedge / \vee$  button to select the **Multi Audio** menu.

---

**2** Press the  $< / >$  button to select the sound output.

---

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I, DUAL II, DUAL I+II

### ■ Mono sound selection

If the stereo signal is weak in stereo reception, you can switch to mono. In mono reception, the clarity of sound is improved. To switch back to stereo.

### ■ Language selection for dual language broadcast

If a programme can be received in two languages (dual language), you can switch to DUAL I, DUAL II or DUAL I+II.

- DUAL I Sends the primary broadcast language to the loudspeakers.
- DUAL II Sends the secondary broadcast language to the loudspeakers.
- DUAL I+II Sends a separate language to each loudspeaker.

# SOUND & LANGUAGE CONTROL

## NICAM Reception

If the TV is equipped with a receiver for NICAM reception, high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of broadcast received.

- 
- 1 When **NICAM mono** is received, you can select **NICAM MONO** or **FM MONO**.
  - 2 When **NICAM stereo** is received, you can select **NICAM STEREO** or **FM MONO**.  
If the stereo signal is weak, switch to **FM MONO**.
  - 3 When **NICAM dual** is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **FM MONO**.
- 

## Speaker Sound Output Selection

In AV, Component, RGB and HDMI mode, you can select output sound for the left and right loudspeakers.

Select the sound output.

**L+R:** Audio signal from audio L input is sent to the left loudspeaker and audio signal from audio R input is sent to the right loudspeaker.

**L+L:** Audio signal from audio L input is sent to left and right loudspeakers.

**R+R:** Audio signal from audio R input is sent to left and right loudspeakers.



# ON-SCREEN MENU LANGUAGE SELECTION

The menus can be shown on the screen in the selected language. First select your language.

- 
- 1 Press the **MENU** button and then use  $\wedge / \vee$  button to select the **Option** menu.

---

  - 2 Press the  $\gt$  button and then use  $\wedge / \vee$  button to select **Language**.

---

  - 3 Press the  $\gt$  button and then use  $\wedge / \vee / \lt / \gt$  button to select your desired language.

---

  - 4 Press the **OK** button

---

  - 5 Press the **MENU** button to return to normal TV viewing.  
Press the **RETURN** button to move to the previous menu screen.
-

# TIME SETTING

## CLOCK SETUP

You must set the time correctly before using on/off timer function.

If current time setting is erased by a power failure or the TV is unplugged, reset the clock.

---

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Time** menu.

---

2 Press the  $\>$  button and then  $\wedge/\vee$  button to select **Clock**.

---

3 Press the  $\>$  button and then  $\wedge/\vee$  button to set the hour.



---

4 Press the  $\>$  button and then  $\wedge/\vee$  button to set the minute.

---

5 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

---

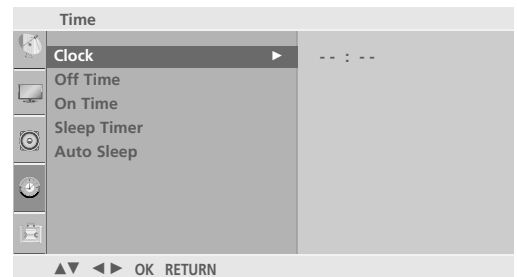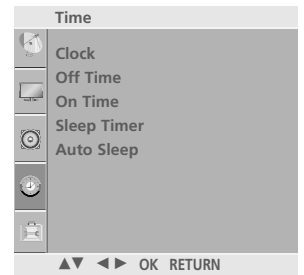

3 4

# AUTO ON/OFF TIMER SETTING

The Off time function automatically switches the TV to standby at a preset time.




Two hours after the TV is switched on by the on time function it will automatically switch back to standby mode unless a button has been pressed.

Once the on time/off time is set, these functions operate daily at the preset time.

The Off time function overrides the On timer function if both are set to the same time.

The TV must be in standby mode for the On timer to work.

- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Time** menu.
- 2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **On/Off Time**.
  - To cancel **On/Off Time** function, select **Off**.
- 3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to set the hour.
- 4 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to set the minutes.
- 5 **For On Time function only**
  - **Programme:** Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select the programme.
  - **Volume:** Press the  $\triangleright$  button and then  $\wedge/\vee$  button to adjust volume level at switch-on.
- 6 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

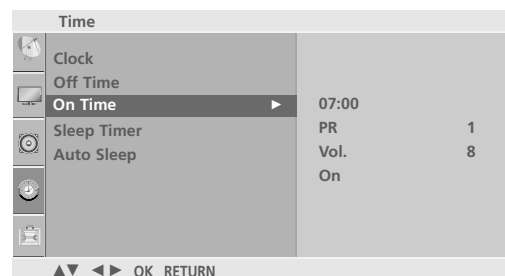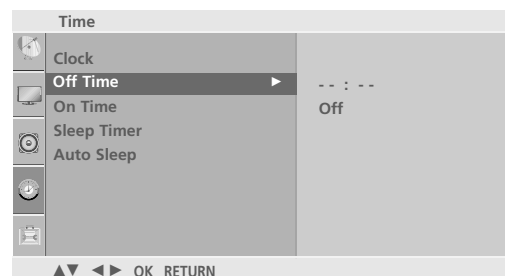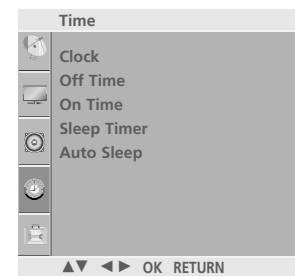

# TIME SETTING

## SLEEP TIMER SETTING



You do not have to remember to switch the TV off before you go to sleep. The sleep timer automatically switches the TV to standby after the preset time has elapsed.

1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Time** menu.

2 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to select **Sleep Timer**.

3 Press the  $\triangleright$  button and then  $\wedge/\vee$  button to set the minute.

4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

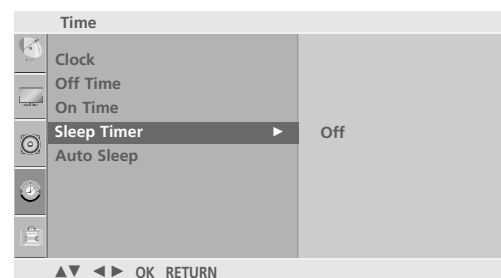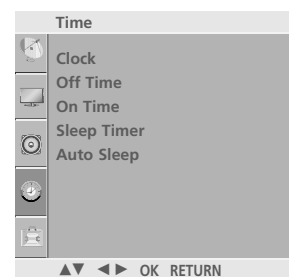

3 4



### ! NOTE

- ▶ When you switch the TV off, the TV releases the preset sleep time.

# AUTO SHUT-OFF SETTING

If the TV set is switched on and there is no input signal, it will switch off automatically after 10 minutes.

- 1 Press the **MENU** button and then  $\wedge/\vee$  button to select the **Time** menu.
- 2 Press the  $\gt$  button and then  $\wedge/\vee$  button to select **Auto Sleep**.
- 3 Press the  $\gt$  button and then  $\wedge/\vee$  button to select **On** or **Off**.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

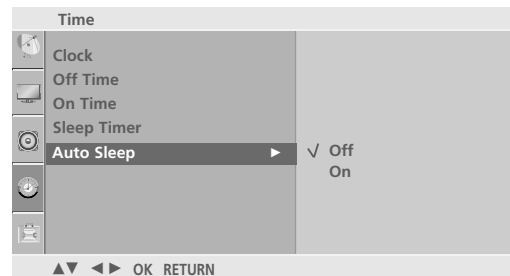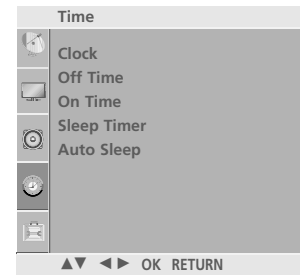

# TELETEXT

**This feature is not available in all countries.**

Teletext is a free service broadcast by most TV stations which gives up-to-the-minute information on news, weather, television programmes, share prices and many other topics.

The teletext decoder of this TV can support the SIMPLE, TOP and FASTEXT systems. SIMPLE (standard teletext) consists of a number of pages which are selected by directly entering the corresponding page number. TOP and FASTEXT are more modern methods allowing quick and easy selection of teletext information.

## SWITCH ON/OFF

Press the **TEXT** button to switch to teletext. The initial page or last page viewed appears on the screen.

Two page numbers, TV station name, date and time are displayed on the screen headline. The first page number indicates your selection, while the second shows the current page displayed.

Press the **TEXT** or **RETURN** button to switch off teletext. The previous mode reappears.

## SIMPLE TEXT

### ■ Page selection

- 1 Enter the desired page number as a three digit number with the NUMBER buttons. If during selection you press a wrong number, you must complete the three digit number and then re-enter the correct page number.
- 2 The **P**  $\wedge$  /  $\vee$  button can be used to select the preceding or following page.

## TOP TEXT

The user guide displays four fields-red, green, yellow and blue at the bottom of the screen. The yellow field denotes the next group and the blue field indicates the next block.

### ■ Block / group / page selection

- ① With the blue button you can progress from block to block.
- ② Use the yellow button to proceed to the next group with automatic overflow to the next block.
- ③ With the green button you can proceed to the next existing page with automatic overflow to the next group. Alternatively the **P** ^ button can be used.
- ④ The red button return to the previous selection. Alternatively the **P** v button can be used.


### ■ Direct page selection

As with SIMPLE teletext mode, you can select a page by entering it as a three digit number using the NUMBER buttons in TOP mode.

## FASTEXT

The teletext pages are colour coded along the bottom of the screen and are selected by pressing the corresponding coloured button.

### ■ Page selection

- ① Press the  button to select the index page.
- ② You can select the pages which are colour coded along the bottom line with corresponding coloured buttons.
- ③ As with SIMPLE teletext mode, you can select a page by entering its three digit page number with the NUMBER buttons in FASTEXT mode.
- ④ The **P** ^ / v button can be used to select the preceding or following page.

## SPECIAL TELETEXT FUNCTIONS



### ■ TIME

When viewing a TV programme, press this button to display the time at the top right hand corner of the screen. Press this button again to remove the display. In the teletext mode, press this button to select a sub page number. The sub page number is displayed at the bottom of the screen. To hold or change the sub page, press the RED/GREEN, P ^ / ∨ or NUMBER buttons.

Press again to exit this function.



### ■ SIZE

Selects double height text.

Press this button to enlarge the top half of the page.

Press this button again to enlarge the bottom half of the page.

Press this button again to return to the normal display.



### ■ UPDATE

Displays the TV picture on the screen while waiting for a new teletext page. The display will appear at the top left hand corner of the screen. When the updated page is available then display will change to the page number. Press this button again to view the updated teletext page.



### ■ REVEAL

Press this button to display concealed information, such as solutions to riddles or puzzles.

Press this button again to remove the information from the display.



### ■ INDEX

Select the each index page.



### ■ HOLD

Stops the automatic page change which will occur if a teletext page consists of 2 or more sub pages. The number of sub pages and the sub page displayed is, usually, shown on the screen below the time. When this button is pressed the stop symbol is displayed at the top left-hand corner of the screen and the automatic page change is inactive. To continue press this button again.



# APPENDIX

## TROUBLESHOOTING

(This feature is not available for all models.)


### The TV does not operate properly

<b>The remote control does not work</b>	<ul style="list-style-type: none"><li>■ Check to see if there is any object between the TV and the remote control causing an obstruction.</li><li>■ Are batteries installed with correct polarity (+ to +, - to -)?</li><li>■ Correct remote operating mode set: TV, STB, DVD etc.?</li><li>■ Install new batteries.</li></ul>
<b>Power is suddenly turned off</b>	<ul style="list-style-type: none"><li>■ Is the sleep time set?</li><li>■ Check the power control settings. Has the Power supply been interrupted.</li><li>■ Is Auto sleep activated on this station.</li></ul>

### The video function does not work.

<b>No picture &amp; No sound</b>	<ul style="list-style-type: none"><li>■ Check whether the TV is switched on.</li><li>■ Try another channel. The problem may be with the broadcast.</li><li>■ Is the power cord inserted correctly into the mains?</li><li>■ Check your antenna direction and/or location.</li><li>■ Test the mains outlet by plugging another TV into the same outlet.</li></ul>
<b>Picture appears slowly after switching on</b>	<ul style="list-style-type: none"><li>■ This is normal, the image is muted during the TV startup process. Please contact your service center, if the picture has not appeared after five minutes.</li></ul>
<b>No or poor colour or poor picture</b>	<ul style="list-style-type: none"><li>■ Adjust Colour in menu option.</li><li>■ Allow a sufficient distance between the TV and the VCR.</li><li>■ Try another channel. The problem may be with the broadcast.</li><li>■ Are the video cables installed properly?</li><li>■ Activate any function to restore the brightness of the picture.</li></ul>
<b>Horizontal/vertical bars or picture shaking</b>	<ul style="list-style-type: none"><li>■ Check for local interference such as an electrical appliance or power tool.</li></ul>
<b>Poor reception on some channels</b>	<ul style="list-style-type: none"><li>■ Station or cable channel experiencing problems, tune to another station.</li><li>■ Station signal is weak, reposition the antenna to receive weaker stations.</li><li>■ Check for sources of possible interference.</li></ul>
<b>Lines or streaks in pictures</b>	<ul style="list-style-type: none"><li>■ Check antenna (Change the position of the antenna).</li></ul>
<b>No picture when connecting HDMI</b>	<ul style="list-style-type: none"><li>■ Check HDMI cable over version 1.3. If the HDMI cables don't support HDMI version 1.3, it can cause flickers or no screen display. In this case use the latest cables that support HDMI version 1.3.</li></ul>

## The audio function does not work.

<p><b>Picture OK &amp; No sound</b></p>	<ul style="list-style-type: none"> <li>■ Press the  + or - button.</li> <li>■ Sound muted? Press <b>MUTE</b> button.</li> <li>■ Try another channel. The problem may be with the broadcast.</li> <li>■ Are the audio cables installed properly?</li> </ul>
<p><b>No output from one of the speakers</b></p>	<ul style="list-style-type: none"> <li>■ Adjust Balance in menu option.</li> </ul>
<p><b>Unusual sound from inside the TV</b></p>	<ul style="list-style-type: none"> <li>■ A change in ambient humidity or temperature may result in an unusual noise when the TV is switched on or off and does not indicate a fault with the TV.</li> </ul>
<p><b>No sound when connecting HDMI or USB</b></p>	<ul style="list-style-type: none"> <li>■ Check HDMI cable over version 1.3.</li> <li>■ Check USB cable over version 2.0.</li> </ul> <p style="text-align: right;">*This feature is not available for all models.</p>

## There is a problem in PC mode. (Only PC mode applied)

<p><b>The signal is out of range.</b></p>	<ul style="list-style-type: none"> <li>■ Adjust resolution, horizontal frequency, or vertical frequency.</li> <li>■ Check the input source.</li> </ul>
<p><b>Vertical bar or stripe on background &amp; Horizontal Noise &amp; Incorrect position</b></p>	<ul style="list-style-type: none"> <li>■ Use Auto configure or adjust clock, phase, or H/V position.</li> </ul>
<p><b>Screen colour is unstable or single colour</b></p>	<ul style="list-style-type: none"> <li>■ Check the signal cable.</li> <li>■ Reinstall the PC video card.</li> </ul>

## There is a problem in PICTURE settings.

<p><b>When the user changes the picture settings, the TV automatically converts back to the initial settings after a certain period of time.</b></p>	<ul style="list-style-type: none"> <li>■ It means that the TV is currently set to <b>In Store</b> mode. To switch to <b>Home</b> mode you should do the followings:  From the TV Menu, choose <b>Opt ion</b> -&gt; <b>Factory Reset</b> -&gt; <b>Yes</b> (wait for a few seconds for the TV to download again) -&gt; Choose <b>Language</b> -&gt; Choose <b>Home</b> -&gt; Press <b>OK</b> button -&gt; OSD "<b>WELCOME</b>" appears -&gt; Press <b>OK</b> button. Program search will begin automatically (You can stop the search by pressing the OK button). Now you have completed switching to the Home mode.</li> </ul>
--	---

# MAINTENANCE

Early malfunctions can be prevented. Careful and regular cleaning can prolong the life of your new TV.

**Caution:** Be sure to switch the power off and unplug the power cord before you begin any cleaning.

## Cleaning the Screen

- 1 A good way to keep the dust off your screen for a while is to wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then use it to wipe the screen.
- 2 Ensure there is no excess water on the screen. Allow any water or dampness to evaporate before switching on.

## Cleaning the Cabinet

- To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth.
- Do not to use a wet cloth.

## Extended Absence

### CAUTION

- ▶ If you expect to leave your TV dormant for prolonged periods (such as a holiday), unplug the power cord to protect against possible damage from lightning or power surges.

# APPENDIX

## PRODUCT SPECIFICATIONS

MODELS		26LG3***	32LG3***	
		26LG3RC-TA	32LG3RC-TA	
Dimensions (Width x Height x Depth)	with stand	663.3 x 508.2 x 2273 mm 26.1 x 20 x 8.9 inches	801.7 x 604.2 x 2273 mm 31.5 x 23.8 x 8.9 inches	
	without stand	663.3 x 449.8 x 80 mm 26.1 x 17.7 x 3.1 inches	801.7 x 544.1 x 79 mm 31.5 x 21.4 x 3.1 inches	
Weight	with stand	10.1 kg / 22.2 lbs	13.35 kg / 29.4 lbs	
	without stand	8.6 kg / 18.9 lbs	11.85 kg / 26.1 lbs	
Power requirement		AC100-240V~ 50/60Hz	AC100-240V~ 50/60Hz	
MODELS		37LG3***	42LG3***	47LG3***
		37LG3RC-TA	42LG3RC-TA	47LG3RC-TA
Dimensions (Width x Height x Depth)	with stand	919.6 x 682.3 x 293.8 mm 36.2 x 26.9 x 11.6 inches	1032.8 x 742.3 x 293.8 mm 40.7 x 29.3 x 11.6 inches	1146 x 805.8 x 342.9 mm 45.1 x 31.7 x 13.5 inches
	without stand	919.6 x 610.3 x 89 mm 36.2 x 24 x 3.5 inches	1032.8 x 670.1 x 92 mm 40.7 x 26.4 x 3.6 inches	1146 x 732.8 x 103 mm 45.1 x 28.8 x 4 inches
Weight	with stand	18.8 kg / 41.4 lbs	23.6 kg / 52 lbs	29.5 kg / 65 lbs
	without stand	16.2 kg / 35.7 lbs	21.0 kg / 46.3 lbs	24.9 kg / 54.9 lbs
Power requirement		AC100-240V~ 50/60Hz	AC100-240V~ 50/60Hz	AC100-240V~ 50/60Hz
Television System		PAL/SECAM B/G/D/K, PAL I/II, NTSC-M		
Programme Coverage		VHF: E2 ~ E12, UHF: E21 ~ E69, CATV: S1 ~ S20, HYPER: S21 ~ S47		
External Antenna Impedance		75 Ω		
Environment condition	Operating Temperature	0 ~ 40°C / 32 ~ 104°F		
	Operating Humidity	Less than 80%		
	Storage Temperature	-20 ~ 60°C / -4 ~ 140°F		
	Storage Humidity	Less than 85%		

# PROGRAMMING THE REMOTE CONTROL

(This feature is not available for all models.)

The remote control is a multi brand or universal remote. It can be programmed to operate most remote controlled devices from other manufacturers.

Note that the remote control may not control all models from other brands.

## Programming a code into a remote mode

- 1 Testing your remote control.  
To find out whether your remote control can operate other components without programming, turn on a component such as a **STB** and press the corresponding mode button (such as a **DVD** or **STB**) on the remote control, while pointing at the component. Test the **POWER** and **P**  $\wedge$  /  $\vee$  buttons to see if the component responds correctly. If the component does not operate correctly, the remote control requires programming to operate the device.
- 2 Switch on the component to be programmed, then press the corresponding mode button (such as a **DVD** or **STB**) on the remote control. The remote control button of the desired device is illuminated.
- 3 Press the **MENU** and **MUTE** buttons simultaneously, the remote control is ready to be programmed with the code.
- 4 Enter a code number using the number buttons on the remote control. Programming code numbers for the corresponding component can be found on the following pages. If the code is correct, the device will turn off.
- 5 Press the **MENU** button to store the code.
- 6 Test the remote control functions to see if the component responds correctly. If not, repeat from step 2.

# APPENDIX

## Programming code

(This feature is not available for all models.)

### DVD

Brand	Codes	Brand	Codes	Brand	Codes
APEX DIGITAL	022	mitsubishi	002	RCA	005 006
DENON	020 014	NAD	023	SAMSUNG	011 015
GE	005 006	ONKYO	008 017	SONY	007
HARMAN KARDON	027	PANASONIC	003 009	THOMPSON	005 006
JVC	012	PHILIPS	013	TOSHIBA	019 008
LG	001 010 016 025	PIONEER	004 026	YAMAHA	009 018
MAGNAVOX	013	PROCEED	021	ZENITH	010 016 025
MARANTZ	024	PROSCAN	005 006		

### HDSTB

Brand	Codes	Brand	Codes	Brand	Codes
ALPHASTAR DSR	123	HOUSTON TRACKER	033 037 039 051	REALISTIC	043 074
AMPLICA	050		057 104	SAMSUNG	123
Astro Philips(ML)	159	HUGHES	068	SATELLITE SERVICE CO	028 035 047 057
Astro Thompson(ML)	160	Humax(SL)	158		085
Astro Nokia(ML)	161	JANIEL	060 147	Samart(TH)	156
BIRDVIEW	051 126 129	JERROLD	061	SCIENTIFIC ATLANTA	032 138
CHANNEL MASTER	013 014 015 018	KATHREIN	108	SONY	103
	036 055	LEGEND	057	STARCAST	041
CHAPARRAL	008 009 012 077	LG	001	SUPER GUIDE	020 124 125
CITOH	054	LUTRON	132	TEECOM	023 026 075 087
CURTIS MATHES	050 145	LUXOR	062 144		088 090 107 130
DRAKE	005 006 007 010	MACOM	010 059 063 064		137
	011 052 112 116		065	TOSHIBA	002 127
	141	MEMOREX	057	True Vision(TH)	155
DX ANTENNA	024 046 056 076	NEXTWAVE	028 124 125	UBC(TH)	153
ECHOSTAR	038 040 057 058	NORSAT	069 070	UBC/SAMART(TH)	154
	093 094 095 096	PACE SKY SATELLITE	143	UNIDEN	016 025 042 043
	097 098 099 100	PANASONIC	060 142		044 045 048 049
	122	PANSAT	121		078 079 080 086
ELECTRO HOME	089	PERSONAL CABLE	117		10 135 136
EUROPLUS	114	PHILIPS	071	VIEWSTAR	115
FUJITSU	017 021 022 027	PICO	105	VTC(VN)	162
	133 134	PRESIDENT	019 102	WINEGARD	128 146
GENERAL INSTRUMENT	003 004 016 029	PRIMESTAR	030 110 111	ZENITH	081 082 083 084
	031 059 101	PROSAT	072		091 120
HITACHI	139 140	PSI(TH)	157		
		RCA	066 106		

# IR CODES


## 1. How to Connect

- Connect your wired remote control to the Remote Control port on the TV.

## 2. Remote Control IR Codes

### ■ Output waveform


Single pulse, modulated with 37.917KHz signal at 455KHz

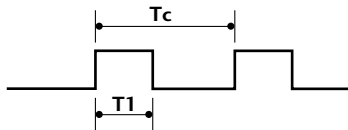


Carrier frequency  
 $FCAR = 1/TC = fOSC/12$   
 Duty ratio =  $T1/TC = 1/3$

### ■ Configuration of frame

 
1st frame




Repeat frame

 

### ■ Lead code

 


### ■ Repeat code

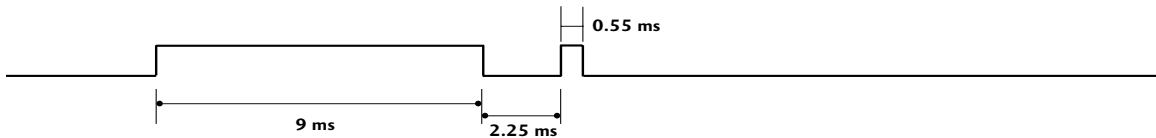


### ■ Bit description

Bit "0"

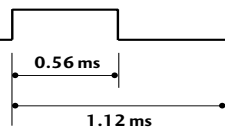


Bit "1"

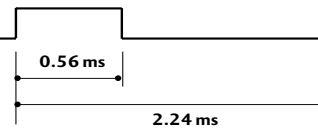

### ■ Frame interval: Tf

 The waveform is transmitted as long as a key is depressed.



# APPENDIX

Code (Hexa)	Function	Note	Code (Hexa)	Function	Note
0B	INPUT	R/C Button	01	P ∨	R/C Button
08	POWER	R/C Button (Power On/Off)	30	AV MODE	R/C Button
60	PIP	R/C Button	09	MUTE	R/C Button
43	MENU	R/C Button	53	LIST	R/C Button
5B	RETURN	R/C Button	10 ~ 19	Number Key 0 ~ 9	R/C Button
07	<	R/C Button	1E	FAV	R/C Button
06	>	R/C Button	1A	Q.VIEW	R/C Button
40	^	R/C Button	20	TEXT	R/C Button
41	∨	R/C Button	7E	SIMPLINK	R/C Button
44	OK	R/C Button	B1	■ Stop/TIME	R/C Button
72	RED	R/C Button	B0	▶ Play/SIZE	R/C Button
71	GREEN	R/C Button	BA	Pause	
63	YELLOW	R/C Button		UPDATE	R/C Button
61	BLUE	R/C Button	8F	◀◀ Rew/INDEX	R/C Button
02	△ +	R/C Button	8E	▶▶ FF/HOLD	R/C Button
03	△ -	R/C Button	45	Q.MENU	R/C Button
00	P ^	R/C Button	BD	●(Record)/REVEAL	R/C Button



# EXTERNAL CONTROL THROUGH RS-232C


(This feature is not available for all models.)

Connect the RS-232C input jack to an external control device (such as a computer or an A/V control system) and control the TV's functions externally.

Connect the serial port of the control device to the RS-232C jack on the TV back panel.


RS-232C connection cables are not supplied with the TV.

## RS-232C Setup

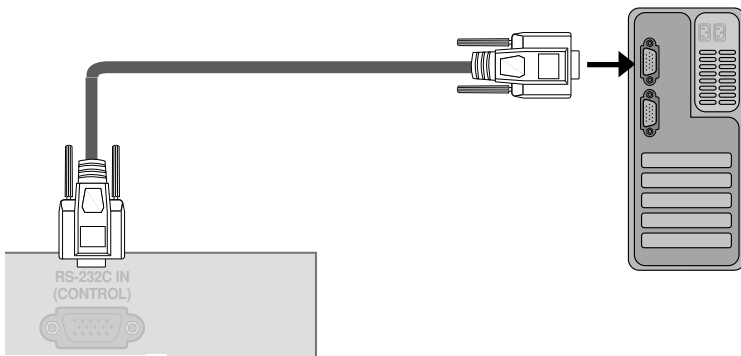

## Type of Connector; D-Sub 9-Pin Male

No.	Pin Name
1	No connection
2	RXD (Receive data)
3	TXD (Transmit data)
4	DTR (DTE side ready)
5	GND
6	DSR (DCE side ready)
7	RTS (Ready to send)
8	CTS (Clear to send)
9	No Connection

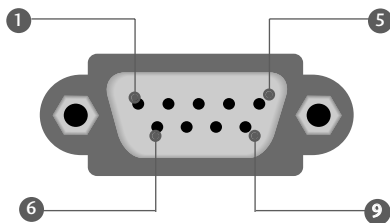

# APPENDIX

## RS-232C Configurations

### 7-Wire Configurations (Standard RS-232C cable)

	PC	TV	
RXD	2	3	TXD
TXD	3	2	RXD
GND	5	5	GND
DTR	4	6	DSR
DSR	6	4	DTR
RTS	7	8	CTS
CTS	8	7	RTS

D-Sub 9                  D-Sub 9

### 3-Wire Configurations (Not standard)


	PC	TV	
RXD	2	3	TXD
TXD	3	2	RXD
GND	5	5	GND
DTR	4	6	DTR
DSR	6	4	DSR
RTS	7	7	RTS
CTS	8	8	CTS

D-Sub 9                  D-Sub 9


## Set ID

- Use this function to specify a set ID number.
- Refer to 'Real Data Mapping 1'. See page 90.

- 1 Press the **MENU** button and then use  $\wedge / \vee$  button to select the **Option** menu.
- 2 Press the  $>$  button and then use  $\wedge / \vee$  button to select **Set ID**.
- 3 Press the  $>$  button and then use  $< / >$  button to adjust **Set ID** to choose the desired TV ID number.
  - The adjustment range of SET ID is 1 ~ 99.
- 4 Press the **MENU** button to return to normal TV viewing. Press the **RETURN** button to move to the previous menu screen.

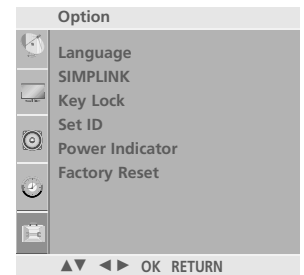

1

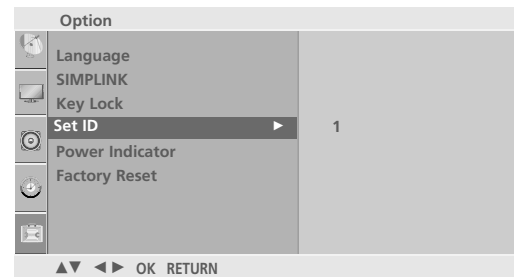

3 2

## Communication Parameters

- Baud rate : 9600 bps (UART)
- Data length : 8 bits
- Parity : None
- Stop bit : 1 bit
- Communication code : ASCII code
- Use a crossed (reverse) cable.

## Command Reference List

	COMMAND1	COMMAND2	DATA (Hexadecimal)		COMMAND1	COMMAND2	DATA (Hexadecimal)
01. Power	k	a	00 ~ 01	16. Colour Temperature	k	u	00 ~ 03
02. Aspect Ratio	k	c	Refer to p.88	17. Red Adjustment	k	v	00 ~ 3C
03. Screen Mute	k	d	00 ~ 01	18. Green Adjustment	k	w	00 ~ 3C
04. Volume Mute	k	e	00 ~ 01	19. Blue Adjustment	k	\$	00 ~ 3C
05. Volume Control	k	f	00 ~ 64	20. Abnormal Status	k	z	FF
06. Contrast	k	g	00 ~ 64	21. Auto Configure	j	u	01
07. Brightness	k	h	00 ~ 64	22. Equalize	j	v	Refer to p.90
08. Colour	k	i	00 ~ 64	23. Tune Command	m	a	Refer to p.90
09. Tint	k	j	00 ~ 64	24. Channel Skip	m	b	00 ~ 01
10. Sharpness	k	k	00 ~ 64	25. Key	m	c	Key Code
11. OSD Select	k	l	00 ~ 01	26. Input select (Main)	x	b	Refer to p.91
12. Remote Control Lock /Key Lock Mode	k	m	00 ~ 01	27. Input select (PIP)	x	y	Refer to p.91
13. PIP/DW	k	n	00 ~ 03	28. Control Back Light	m	g	00 ~ 64
14. PIP Position	k	q	00 ~ 03				
15. Balance	k	t	00 ~ 64				

## Transmission / Receiving Protocol

### Transmission

**[Command1][Command2][ ][Set ID][ ][Data][Cr]**

[Command 1] : First command to control the set.(j, k, m or x)

[Command 2] : Second command to control the set.

[Set ID] : You can adjust the set ID to choose desired TV ID number in Setup menu. Adjustment range is 1 ~ 99. When selecting Set ID '0', every connected TV is controlled. Set ID is indicated as decimal (1 ~ 99) on menu and as Hexa decimal (0x0 ~ 0x63) on transmission/receiving protocol.

[DATA] : To transmit command data.

Transmit 'FF' data to read status of comand.

[Cr] : Carriage Return

ASCII code '0x0D'

[ ] : ASCII code 'space (0x20)'

### OK Acknowledgement

**[Command2][ ][Set ID][ ][OK][Data][x]**

The TV transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

### Error Acknowledgement

**[Command2][ ][Set ID][ ][NG][Data][x]**

TV transmits ACK(acknowledgement) based on this format when receiving abnormal data form non-viable functions or communication errors.

[Command 2] : use as command.

[Set ID]: use the small character, if set ID is 10, TV will send the '0'; 'a'

[Data]: use the small character, if data is 0xab, TV will send the 'a'; 'b'.

[NG]: use the large character.

## 01. Power (Command: k a)

To control Power On/Off of the TV.

*Transmission* [k][a][ ][Set ID][ ][Data][Cr]

Data 00 : Power Off      Data 01 : Power On

*Acknowledgement* [a][ ][Set ID][ ][OK/NG][Data][x]

To show Power On/Off.

*Transmission* [k][a][ ][Set ID][ ][FF][Cr]

*Acknowledgement* [a][ ][Set ID][ ][OK/NG][Data][x]

\* If there is the time delay between command and ack message during power on sequence, It should be described like "Note: In this model, TV will send the Acknowledge after power on processing completion. There might be a time delay between command and acknowledge."

## 02. Aspect Ratio (Command: k c) (Main picture size)

To adjust the screen format. (Main picture format)

You can adjust the screen format using the Aspect Ratio in the Picture menu.

*Transmission* [k][c][ ][Set ID][ ][Data][Cr]

Data 01: Normal screen (4:3)      Data 06: Original

Data 02: Wide screen (16:9)      Data 07: 14:9

Data 04: Zoom1

Data 09: Just Scan

Data 05: Zoom2

*Acknowledgement* [c][ ][Set ID][ ][OK/NG][Data][x]

\* Using the RGB-PC, Component or HDMI input, you select either 16:9 or 4:3 screen aspect ratio.

\* In HDMI/Component (over 720p)mode, Just Scan is available.

## 03. Screen Mute (Command: k d)

To select screen mute on/off.

*Transmission* [k][d][ ][Set ID][ ][Data][Cr]

Data 00 : Screen mute off (Picture on)

Data 01 : Screen mute on (Picture off)

*Acknowledgement* [d][ ][Set ID][ ][OK/NG][Data][x]

## 04. Volume Mute (Command: k e)

To control volume mute on/off.

You can also adjust mute using the MUTE button on remote control.

*Transmission* [k][e][ ][Set ID][ ][Data][Cr]

Data 00 : Volume mute on (Volume off)

Data 01 : Volume mute off (Volume on)

*Acknowledgement* [e][ ][Set ID][ ][OK/NG][Data][x]

## 05. Volume Control (Command: k f)

To adjust volume.

You can also adjust volume with the volume buttons on remote control.

*Transmission* [k][f][ ][Set ID][ ][Data][Cr]

Data Min : 00 ~ Max : 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [f][ ][Set ID][ ][OK/NG][Data][x]

## 06. Contrast (Command: k g)

To adjust screen contrast.

You can also adjust contrast in the Picture menu.

*Transmission* [k][g][ ][Set ID][ ][Data][Cr]

Data Min : 00 ~ Max : 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [g][ ][Set ID][ ][OK][Data][x]

## 07. Brightness (Command: k h)

To adjust screen brightness.

You can also adjust brightness in the Picture menu.

*Transmission* [k][h][ ][Set ID][ ][Data][Cr]

Data Min : 00 ~ Max : 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [h][ ][Set ID][ ][OK/NG][Data][x]

## 08. Colour (Command: k i)

To adjust the screen colour.

You can also adjust colour in the Picture menu.

*Transmission* [k][i][ ][Set ID][ ][Data][Cr]

Data Min : 00 ~ Max : 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [i][ ][Set ID][ ][OK/NG][Data][x]

## 09. Tint (Command: k j)

To adjust the screen tint.

You can also adjust tint in the Picture menu.

*Transmission* [k][j][ ][Set ID][ ][Data][Cr]

Data Red : 00 ~ Green : 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [j][ ][Set ID][ ][OK/NG][Data][x]

**10. Sharpness (Command: k k)**

To adjust the screen sharpness.

You can also adjust sharpness in the Picture menu.

*Transmission* [k][k][ ][Set ID][ ][Data][Cr]

Data Min: 00 ~ Max: 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [k][ ][Set ID][ ][OK/NG][Data][x]

**11. OSD Select (Command: k l)**

To select OSD (On Screen Display) on/off when controlling remotely.

*Transmission* [k][l][ ][Set ID][ ][Data][Cr]

Data 00: OSD off

Data 01: OSD on

*Acknowledgement* [l][ ][Set ID][ ][OK][Data][x]

**12. Remote Control Lock/Key Lock Mode (Command: k m)**

To lock the remote control and the front panel controls on the set.

*Transmission* [k][m][ ][Set ID][ ][Data][Cr]

Data 00: Lock off

Data 01: Lock on

*Acknowledgement* [m][ ][Set ID][ ][OK/NG][Data][x]

**Note.**

Although "Local Key Operation" is set to "NO", Volume+/- and Power key on the front panel can be worked for only Commercial model.

**13. PIP / DW (Command: k n)**

To control the PIP (Picture In picture)/DW.

You can also control the PIP/DW using the PIP button on the remote control or in the PIP/DW menu.

*Transmission* [k][n][ ][Set ID][ ][Data][Cr]

Data 00: PIP/DW off

Data 01: PIP

Data 02: DW1

Data 03: DW2

*Acknowledgement* [n][ ][Set ID][ ][OK/NG][Data][x]

**14. PIP Position (Command: k q)**

To select sub picture position for PIP.

You can also adjust the sub picture position using

PIP button on the remote control or in the PIP/DW menu.

*Transmission* [k][q][ ][Set ID][ ][Data][Cr]

Data 00: Right down on screen

Data 01: Left down on screen

Data 02: Left up on screen

Data 03: Right up on screen

*Acknowledgement* [q][ ][Set ID][ ][OK/NG][Data][x]

**15. Balance (Command: k t)**

To adjust balance.

You can also adjust balance in the Audio menu.

*Transmission* [k][t][ ][Set ID][ ][Data][Cr]

Data Min: 00 ~ Max: 64

Refer to 'Real data mapping 1'. See page 90.

*Acknowledgement* [t][ ][Set ID][ ][OK/NG][Data][x]

**16. Colour Temperature (Command: k u)**

To adjust colour temperature.

You can also adjust Colour Temperature in the Picture menu.

*Transmission* [k][u][ ][Set ID][ ][Data][Cr]

Data 00: Medium 01: Cool 02: Warm 03: User

*Acknowledgement* [u][ ][Set ID][ ][OK/NG][Data][x]

**17. Red Adjustment (Command: k v)**

To adjust red in colour temperature.

*Transmission* [k][v][ ][Set ID][ ][Data][Cr]

Data Min: 00 ~ Max: 3C

Refer to 'Real data mapping 2'. See page 90.

*Acknowledgement* [v][ ][Set ID][ ][OK/NG][Data][x]

**18. Green Adjustment (Command: k w)**

To adjust green in colour temperature.

*Transmission* [k][w][ ][Set ID][ ][Data][Cr]

Data Min: 00 ~ Max: 3C

Refer to 'Real data mapping 2'. See page 90.

*Acknowledgement* [w][ ][Set ID][ ][OK/NG][Data][x]

**19. Blue Adjustment (Command: k \$)**

To adjust blue in colour temperature.

*Transmission* [k][\$][ ][Set ID][ ][Data][Cr]

Data Min: 00 ~ Max: 3C

Refer to 'Real data mapping 2'. See page 90.

*Acknowledgement* [\$][ ][Set ID][ ][OK/NG][Data][x]

## 20. Abnormal State (Command: k z)

To recognize an abnormal state.

*Transmission* [k][z][ ][Set ID][ ][FF][ ][Cr]

Data FF: Read

*Acknowledgement* [z][ ][Set ID][ ][OK/NG][Data][x]

Data 00: Normal (Power on and signal exist)

Data 01: No signal (Power on)

Data 02: Turn the TV off by remote control

Data 03: Turn the TV off by sleep time function

Data 04: Turn the TV off by RS-232C function

Data 05: 5V down

Data 06: AC down

Data 07: Turn the TV off by Fan Alarm function (option)

Data 08: Turn the TV off by Off time function

Data 09: Turn the TV off by Auto off function

Data a: Turn the TV off by AV board detection.

\* This function is "read only".

## 21. Auto Configure (Command: j u)

To adjust picture position and minimize image shaking automatically. It works only in RGB (PC) mode.

*Transmission* [j][u][ ][Set ID][ ][Data][Cr]


Data 01: To set

*Acknowledgement* [u][ ][Set ID][ ][OK/NG][Data][x]

## 22. Equalize(Command: j v)

To adjust equalize.

*Transmission* [j][v][ ][Set ID][ ][Data][Cr]

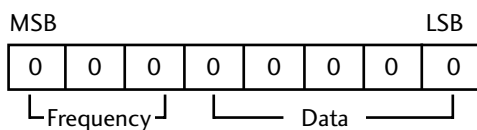

7	6	5	Frequency	4	3	2	1	0	Step
0	0	0	1'st Band	0	0	0	0	0	0(decimal)
0	0	1	2'nd Band	0	0	0	0	1	1(decimal)
0	1	0	3'rd Band	0	0	0	1	0	2(decimal)
0	1	1	4'th Band						...
1	0	0	5'th Band						
1	0	1	6'th Band						
1	1	0	7'th Band	1	1	1	1	0	30(decimal)
1	1	1	8'th Band	1	1	1	1	1	31(decimal)

*Acknowledgement* [v][ ][Set ID][ ][OK/NG][Data][x]

## 23. Tune Command / Channel Tuning (Command: m a)

Tune Channel to following Physical number.

*Transmission* [m][a][ ][Set ID][ ][Data0][ ][Data1][ ][Data2][Cr]

Data 00: 00

Data 01 Min: 00 ~ Max: 63

(\*transmit by Hexadecimal code)

Data02 0 : Main

1 : Sub

*Acknowledgement* [a][ ][Set ID][OK][ ][Data0][Data1][x]  
[a][ ][Set ID][NG][ ][Data0][x]

## 24. Channel Skip(Command: m b)

To set skip status for the current Programme.

*Transmission* [m][b][ ][Set ID][ ][Data][Cr]

Data 00 : Skip 01 : Add

*Acknowledgement* [b][ ][Set ID][ ][OK/NG][Data][x]

## 25. Key (Command: m c)

To send IR remote key code.

*Transmission* [m][c][ ][Set ID][ ][Data][Cr]

Data: Key code - Refer to page 84.

*Acknowledgement* [c][ ][Set ID][ ][OK/NG][Data][x]

### \* Real data mapping 1

00 : Step 0  
⋮  
A : Step 10  
⋮  
F : Step 15  
10 : Step 16  
⋮  
64 : Step 100  
⋮  
6E : Step 110  
⋮  
73 : Step 115  
74 : Step 116  
⋮  
C7 : Step 199  
⋮  
FE : Step 254  
FF : Step 255

### \* Real data mapping 2

00: -30  
01: -29  
02: -28  
⋮  
1E: 0  
⋮  
28: +10  
⋮  
3A: +28  
3B: +29  
3C: +30  
⋮  
4E: N/A  
4F: N/A  
50: N/A


**26. Input select (Command: x b)**

**(Main Picture Input)**

To select input source for TV

*Transmission* [x][b][ ][Set ID][ ][Data][Cr]

Data: Structure

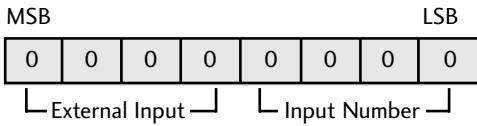

External Input				Data
0	0	0	1	Analog
0	0	1	0	AV
0	1	0	0	Component
0	1	1	0	RGB-PC
1	0	0	1	HDMI

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4

*Acknowledgement* [b][ ][Set ID][ ][OK/NG][Data][x]

**28. Control Back Light (Command: m g)**

To Control the back light.

*Transmission* [m][g][ ][Set ID][ ][Data][Cr]

Data : data Min: 00 ~ Max: 64  
 (\* transmit by Hexadecimal code)


*Acknowledgement* [g][ ][Set ID][ ][OK/NG][Data][x]

**27. PIP Input select (Command: x y)**

To adjust input source for sub picture in PIP mode.

*Transmission* [x][y][ ][Set ID][ ][Data][Cr]

Data: Structure

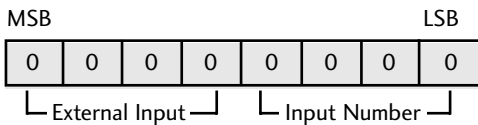

External Input				Data
0	0	0	1	Analog
0	0	1	0	AV

Input Number				Data
0	0	0	0	Input1
0	0	0	1	Input2
0	0	1	0	Input3
0	0	1	1	Input4

*Acknowledgement* [y][ ][Set ID][ ][OK/NG][Data][x]







**LG Electronics Inc.**