



**ANTES DE LLAMAR  
AL TECNICO**



EL DANO	LAS RAZONES
NO FUNCIONA	<ul style="list-style-type: none"> <li>■ VERIFIQUE LA ELECTRICIDAD DE SU CASA</li> <li>■ VERIFIQUE QUE LA TOMA DE CORRIENTE FUNCIONE</li> </ul>
ENFRÍA	<ul style="list-style-type: none"> <li>■ EL CONTROL DE TEMPERATURA NO ESTÁ AJUSTADO CORRECTAMENTE</li> <li>■ EL REFRIGERADOR ESTÁ UBICADO CERCA DEL PUENTE DE ENERGIA DONDE LA TEMPERATURA DE ALREDEDOR ES ALTA</li> <li>■ HAY DENASIADOS ALIMENTOS</li> </ul>
RUIDA ANORMAL	<ul style="list-style-type: none"> <li>■ EL REFRIGERADOR SE ENCUENTRA EN SUPERFICIE BLANDA, DESNIVELADA</li> <li>■ HAY ALGO EN LA PARTE POSTERIOR</li> </ul>
PRODUCE OLOR	<ul style="list-style-type: none"> <li>■ ENVUELVA LOS ALIMENTOS QUE TENGAN UN FUERTE OLOR</li> <li>■ LIMPIE LA PARTE INTERIOR</li> </ul>
SE ECUENTRA ROCÍO EN EL SUPERFICIE	<ul style="list-style-type: none"> <li>■ ES NORMAL DEBIDO A LA TEMPERATURA DEL ALREDEDOR</li> <li>■ MUCHA HUMEDAD</li> <li>■ VERIFIQUE LA PUERTA</li> </ul>

# REFRIGERATOR OWNER'S MANUAL



Please read this Owner's Manual thoroughly before operating your set. Retain it for future reference. Record model name and serial number of the set.

## CONTENTS

 
INSTALLATION .....	2
FEATURE CHART .....	3
OPERATION .....	4
<i>Starting</i>	
<i>Temperature Control</i>	
<i>Ice Making</i>	
<i>Defrosting</i>	
SUGGESTION ON STORING FOOD .....	5
GENERAL CLEANING .....	6
GENERAL INSTRUCTION .....	7
IMPORTANT WARNING .....	7
BEFORE CALLING FOR SERVICE .....	8



**LG Electronics Inc.**


THIS NEW REFRIGERATOR IS MANUFACTURED WITH GREAT CARE AND USING THE LATEST TECHNOLOGY AND WE BELIEVE THAT YOU WILL BE FULLY SATISFIED WITH IT'S PERFORMANCE AND RELIABILITY. BEFORE YOU START YOUR REFRIGERATOR, PLEASE READ THIS BOOKLET CAREFULLY. IT CONTAINS VALUABLE INFORMATION ABOUT PROPER OPERATION THAT WILL ENSURE TROUBLE-FREE USE OF THE REFRIGERATOR FOR MANY YEARS TO COME.

## INSTALLATION

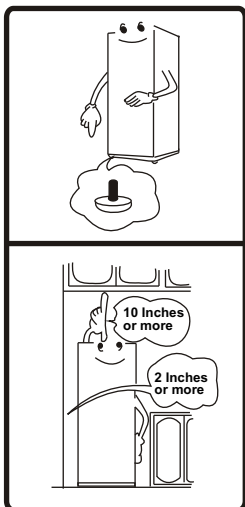


1. SELECT A GOOD LOCATION. PLACE YOUR REFRIGERATOR IN A LOCATION THAT SUITS YOUR WORKING CONVENIENCE
2. AVOID PLACING THE UNIT IN A NARROW RECESS OR NEAR ANY HEAT SOURCES, DIRECT SUNLIGHT OR MOISTURE.
3. YOUR REFRIGERATOR MUST HAVE ADEQUATE AIR CIRCULATION. IF YOUR REFRIGERATOR IS PLACED IN A RECESSED AREA IN THE WALL, ALLOW AT LEAST A CLEARANCE OF 10 INCHES OR MORE ABOVE AND 2 INCH OR MORE DISTANCE FROM THE WALL. THERE MUST BE PROPER AIR CIRCULATION AROUND YOUR REFRIGERATOR TO KEEP IT OPERATING EFFICIENTLY. FOR MAXIMUM CIRCULATION, THE REFRIGERATOR SHOULD BE ELEVATED 2 INCH FROM THE FLOOR, ESPECIALLY WHEN IT CARPETED.

 4. TO AVOID ANY VIBRATIONS, THE UNIT IS TO BE SET LEVELED. IF NEEDED, ADJUST THE LEVELING SCREWS TO COMPENSATE UNEVENNESS OF THE FLOOR. IT SHOULD BE LEVELED SIDE TO SIDE. THE FRONT SHOULD BE SLIGHTLY HIGHER THAN TO REAR TO AID IN DOOR CLOSING. LEVELING SCREWS CAN BE TURNED EASILY TIPPING THE CABINET SLIGHTLY AND ADJUSTMENTS CAN BE MADE WITH YOUR FINGERS TO RAISE OR LOWER THE CABINET.
5. CLEAN YOUR REFRIGERATOR THOROUGHLY AND WIPE OFF ALL DUST ACCUMULATED DURING TRANSPORTATION.
6. FIT UP THE ACCESSORIES SUCH AS ICE TRAY, FREEZER SHELF, ETC. TO THEIR PROPER PLACES, REFERRING TO THE "FEATURE CHART" SECTION. THEY ARE PACKED TOGETHER TO PREVENT POSSIBLE DAMAGES DURING TRANSPORTATION.
7. CONNECT THE POWER SUPPLY CORD (OR PLUG) TO THE OUTLET, DON'T DOUBLE APPLIANCES ON THE SAME OUTLET.
8. LEAVE YOUR REFRIGERATOR FOR AN HOUR OR SO, AND CHECK THE FLOW OF COLD AIR IN THE FREEZER COMPARTMENT. NOW, YOUR REFRIGERATOR IS READY FOR USE.

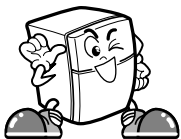

## INSTRUCCIONES GENERALES

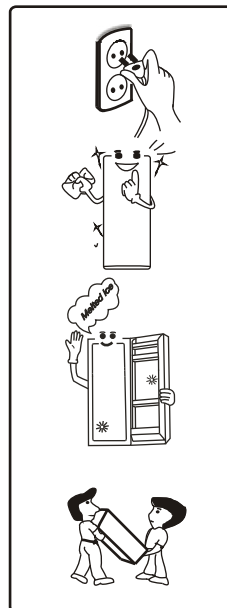 

### QUÉ HACER DURANTE AUSENCIAS PROLONGADAS

Quando se vaya por un tiempo largo, desconecte el refrigerador. Saque toda la comidas. Desenchufe, limpie la parte interior del refrigerador y deje la puerta abierta para evitar el olor desagradable.

### APAGONES

Nprmalmente el dano de los apagones se resuelve en menos de dos horas. En este caso no afectará la temperatura del refrigerador. Evite abrir el refrigeradorlo más posible. Si los apagones duran mas, coloque hielo seco sobre los alimentos que desea mantener congelados.

### MOVER EL REFRIGERADOR

Quite o apriete las partes del refrigerador que no están correctamente apretadas. Para evitar las diferencias de ajustamiento de la artura, destornillar la pata ajustable hacia el piso

## ASPECTOS IMPORTANTES

### NO USE DOBLE ENCHUFE

Conecte el refrigerador en un solo enchufe para evitar el consumo excesivo de energia.

### CAMBIO DEL ECHUFE

Se recomienda cambiar el enchufe en un centro técnico recomendado.

### TOMA TIERRA

En caso de que haya cortocircuito, un toma de tierra reduciria un mayor riesgo al estar conectado a la tierra.

Para evitar riesgos de cortocircuitos se recomienda tener toma de tierra.

La conexión inapropiada del cable a la tierra producirá una gran carga eléctrica.

Consulte al técnico si no comprende las instrucciones y tiene alguna duda sobre la importancia de la conexión.

### PELIGROSO

 
El Refrigerador vacío podría ser peligroso para los niños. Quite la puerta del refrigerador que no funcione, o haga otra cosa para que no sea peligroso.

Tiene que conectarlo a la tierra

**NO ESPERE !  
HAGALO AHORA MISMO !**

**NO GUARDE MATERIAL QUÍMICO  
O INFLAMABLE**

## LIMPIEZA

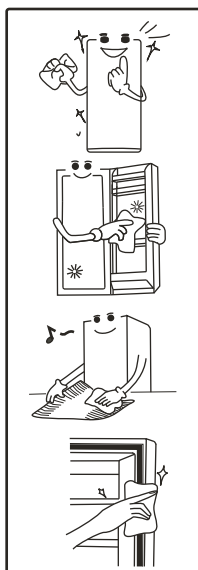

Es aconsejable limpiar el refrigerador periódicamente para evitar el olor desagradable. Seque las manchas de comida que puedan caer lo antes posible porque el ácido de la comida ensucia la superficie del plástico.

Nunca limpie ninguna superficie con cepillo o con otro aparato grueso ni con liquido de alcali.

Recuerde que los productos húmedos se pegan fácilmente en superficies con baja temperatura, por eso no toque las superficies congeladas con las manos mojadas o sucias.

**EXTERIOR** - Para limpiar la parte exterior del refrigerador use liquido de jabón suave o detergente tibio. Limpie con un pano mojado y después séquelo.

**INTERIOR** - Es aconsejable limpiar la parte interior del refrigerador y las partes del mismo. primero desconecte y luego vacíelo completamente.

**AL TERMINAR** - Coloque de nuevo las bandejas en el refrigerador y ajuste la temperatura como desee.

**MARCO MAGNETICO DE LA PUERTA** - Limpie con liquido de soda suave o detergente. Limpie con un pano mojado y después sequelo.


## CUIDADO

 Siempre desconecte antes de limpiar para evitar electrocutarse. Limpie todas las gotas de agua con un pano mojado para evitar que agua o algún liquido cayera al aparato eléctrico lo que podria provocar un cortocircuito. No use liquidos inflamables o ácidos para la limpieza.

Este aparato no está diseñado para uso por personas (incluyendo niños) con deficiencia física, mental o sensorial, o con falta de experiencia y conocimiento, a menos que se les haya dado la supervisión o las instrucciones de utilización del aparato por una persona responsable de su seguridad.

Los niños deben ser supervisados para asegurarse de que no juegan con el aparato.


## FEATURE CHART

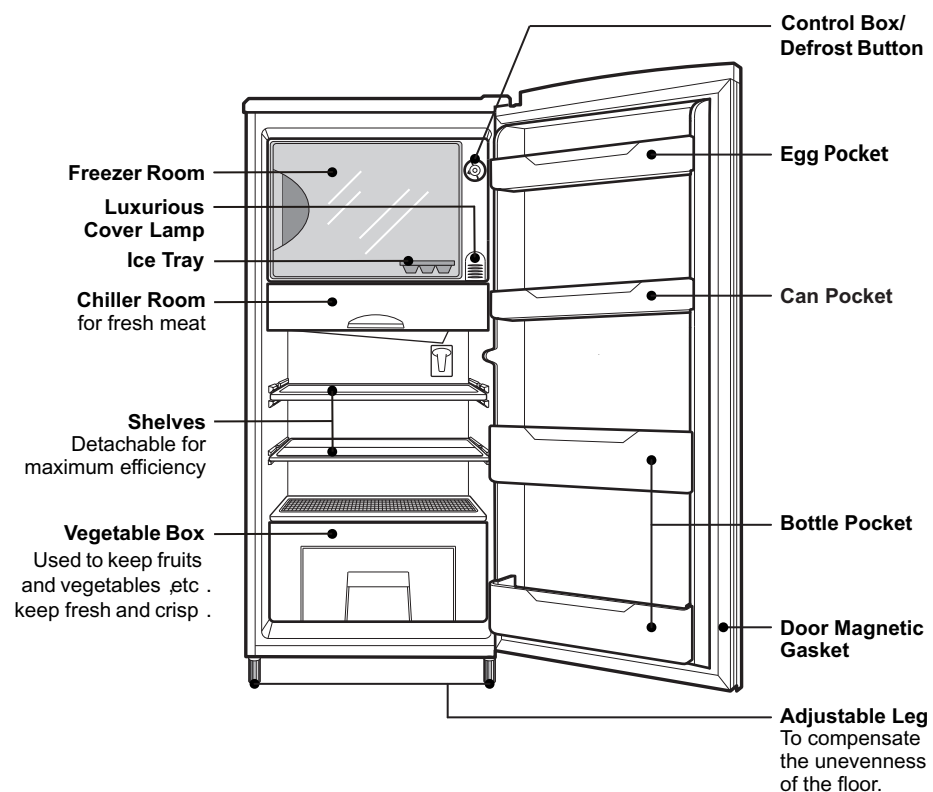

NOTE


•All parts shown may not be included with every model.

## OPERATION

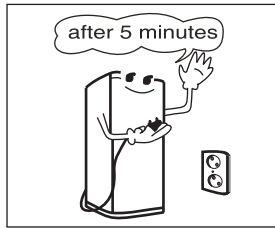 

### STARTING

 Please turn at position 1 for first operation. Let your refrigerator running unloads within 2-3 hours to stabilize the operation temperature. If its interrupted please restart again after a pause for 5 minutes.


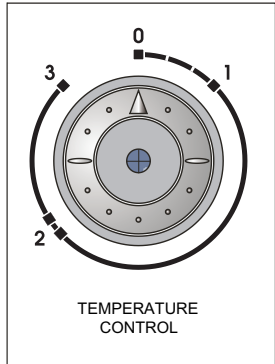


### TEMPERATURE CONTROL

- The default setting of the temperature control knob for the refrigerator compartment is "2".
- For colder temperatures, adjust the control knob to "3", and for warmer temperatures, adjust the control knob to "1" position.

### ICE MAKING

  - ❑ To make ice cubes, fill the ice cube tray with water to slightly below the rim and place it in the freezer.
- ❑ To remove ice cubes, hold the tray at its end and twist gently.

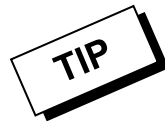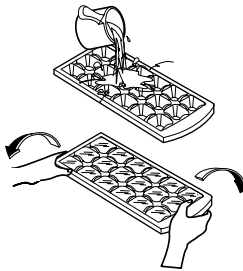

To remove ice cubes easily, run water on the tray before twisting.

### DEFROSTING

- ❑ It is necessary to regularly defrost your refrigerator in order to ensure efficient operation. The frost on the surface of evaporator should not exceed 6 mm before defrosting.
- ❑ To defrost, press the defrosting button.
- ❑ When defrosting complete, defrosting button will return to normal position automatically. Remove the drip tray, empty water, dry and put it back to its normal position.

 
## INSTRUCCIONES PARA CONSERVAR LOS ALIMENTOS

- ❑ Guarde los alimentos frescos en el refrigerador. Es importante para mantener los alimentos frescos.
- ❑ No guarde comida que pueda pudrirse fácilmente a temperatura baja como los plátanos, la pina y el melón.
- ❑ Deje enfriar los alimentos antes de colocarlos en el refrigerador. Poner comida caliente puede hacer dano a los demás alimentos y afecta negativamente en su factura de la electricidad.
- ❑ No guarde las botellas en el congelar porque podrían quebrarse al descongelarlas.
- ❑ Limpie los alimentos antes de guardarlos. Lave las frutas y verduras. sequé la comida envasadas para no afectar otros alimentos

Las siguientes son instrucciones para guardar los alimentos en el refrigerador. sin embargo cuanto más fresco sea el alimento resultará mejor para mantenerlo.


ALIMENTOS FRESCOS	INSTRUCCION	TEMPO MAXIMO DE CONSERVACION
• Carne cortada fresca	Limpie y abra la bolsa	4-5 días
• Carne picada	Quite la tapa	1-2 días
• Carne asada	Coloque en funda anterior	1-2 semanas
• Pescado fresco	Envase con papel de aluminio o bolsas de plástico	1-2 días
• Pescado cocinado	Envuelvalo bien	3-4 días
• Pollo	Limpie la parte interior y abra la bolsa	2 días
• Huevo	Lávelo en el momento de usarlo	2 semanas
• Leche y helado	Manténga empaquetado	3-7 días
• Queso duro	Envuélvalo bien con papel de aluminio o plástico	1 mes
• Queso blando	Manténgalo en su caja	4-7 días
• Fruta y verdura	Mantengalo en su caja tapélo	3-4 días

## INSTRUCCIONES DE USO

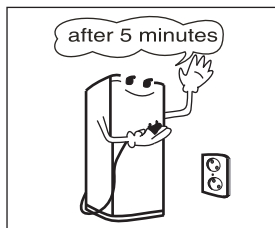

### PARA EMPEZAR

 En el momento de usar el congelador por primera vez, sitúe el control de temperatura en el nivel 1. Déjelo vacío durante 2-3 horas para estabilizar la temperatura. Si no enfriase, déjelo durante 5 minutos y vuelva a enchufarlo de nuevo.


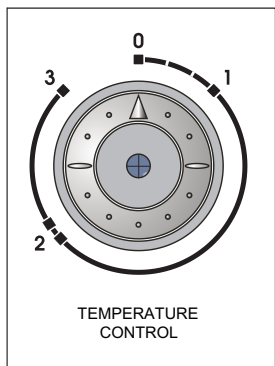


### CONTROL DE TEMPERATURA

- El nivel de estándar de temperatura del refrigerador es "2".
- Para ajustar la temperatura más fría, ajuste el control al nivel "3" y para reducirla, ajuste el control al nivel "1".

### HACER HIELO

  - ❑ Para hacer hielo, llene la bandeja con agua y póngala en el congelador.
- ❑ Si quieres sacar el hielo, tome un punto de la bandeja y tuerza levemente desde el otro extremo.

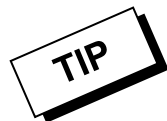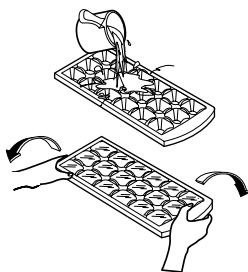

Cómo sacar el hielo rápidamente : el modo mas fácil es echar agua caliente sobre los cubitos.

### DESCONGELACIÓN

- ❑ Para optimizar el funcionamiento del refrigerador debe limpiarse periódicamente. Es aconsejable descongelar antes de que la escarcha llegue a 6 mm de altura.
- ❑ Para limpiarlo, presione el botón de descongelador (defrosting button).
- ❑ La bandeja de la carne (tray meat) funciona también como recipiente de agua descongelada (tray drip). Vacíe este recipiente antes de descongelar.

 
## SUGGESTION ON STORING FOOD

- ❑ Store fresh food in the refrigerator compartment. How food is frozen and thawed is an important factor in keeping freshness & flavor of the food, but what is more important is to store food that are "fresh".
- ❑ Do not store food which may go bad easily in low temperature, like bananas, pineapple, melon and so on.
- ❑ Be sure only to store hot food in the refrigerator after it has been cooled off. Storing hot food in the refrigerator could spoil other store food, and it leads to higher electricity consumption.
- ❑ Do not store bottles in freezing compartment, as the bottle will break when the liquid inside freezes.
- ❑ Store food after in has been thoroughly cleaned. Vegetables and fruits should be washed and wipe, and packed food should be wiped clean, so that adjacent food should not be spoiled.

The following table indicate the good direction to store food on refrigerator. However, the "freshness" of the food is affected storing time.

FRESH FOOD	DIRECTION	STORING TIME
• Fresh meat	Clean and release off the binder	4-5 days
• Chopped meat	Release off the binder	1-2 days
• Smoked meat	Store in original package	1-2 weeks
• Fresh fish	Wrap tightly by aluminum foil or plastic film	1-2 days
• Cooked fish	Wrap tightly	3-4 days
• Chicken	Clean the body cavity and tight of the binder	2 days
• Egg	Clean it before use	2 weeks
• Milk and creamer	Store in original package	3-7 days
• Cheese (hard)	Wrap tightly by aluminum foil or plastic film	1 month
• Cheese (soft)	Store with the container	4-7 days
• Fruits and vegetables	Store with the container Store it tightly	3-4 days

## GENERAL CLEANING

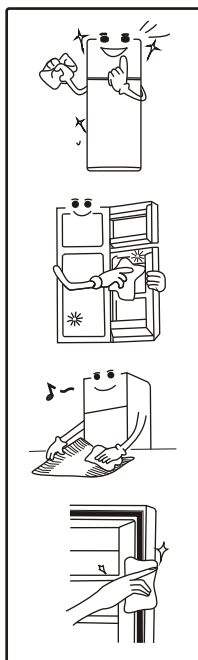

It is important that your refrigerator be kept clean to prevent undesirable odor. Spilled food should be wiped up immediately, since most of them may acidify and stain plastic surface if allowed to settle.

Never use metallic scouring pads, brushes, coarse abrasive cleaners or strong alkaline solutions on any surface.

Before you begin cleaning, however, remember that damp objects will stick or extremely cold surfaces with wet, or damp hands.

**EXTERIOR** - Use a lukewarm solution of mild soap or detergent to clean, the durable finish of your refrigerator. Wipe with a clean, damp cloth and then dry.

**INTERIOR** - Regular cleaning of the interior and interior parts is recommended. If you have the No Frost model which defrosts completely automatically, First, open both doors and leave them open during the entire cleaning process. Disconnect power supply and remove food and all compartment shelves, storage tray etc. was entire freezer-refrigerator compartments with a baking soda solution. Rinse and dry.

**FINAL** - Place all parts and accessories to normal position and re-adjust temperature control to your desired condition.

**MAGNETIC DOOR GASKET** - Wash with soft baking soda or soft detergent or rinse and dry.


### WARNING

 Always remove power cord from the wall outlet cleaning the vicinity of electrical parts (lamp, switches, control, etc.) Wipe up excessive moisture with sponge or cloth to prevent water or liquid from getting into any electrical part and causing an electric shock. Do not use flammable or toxic cleaning liquids.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

## PARTES DEL REFRIGERADOR

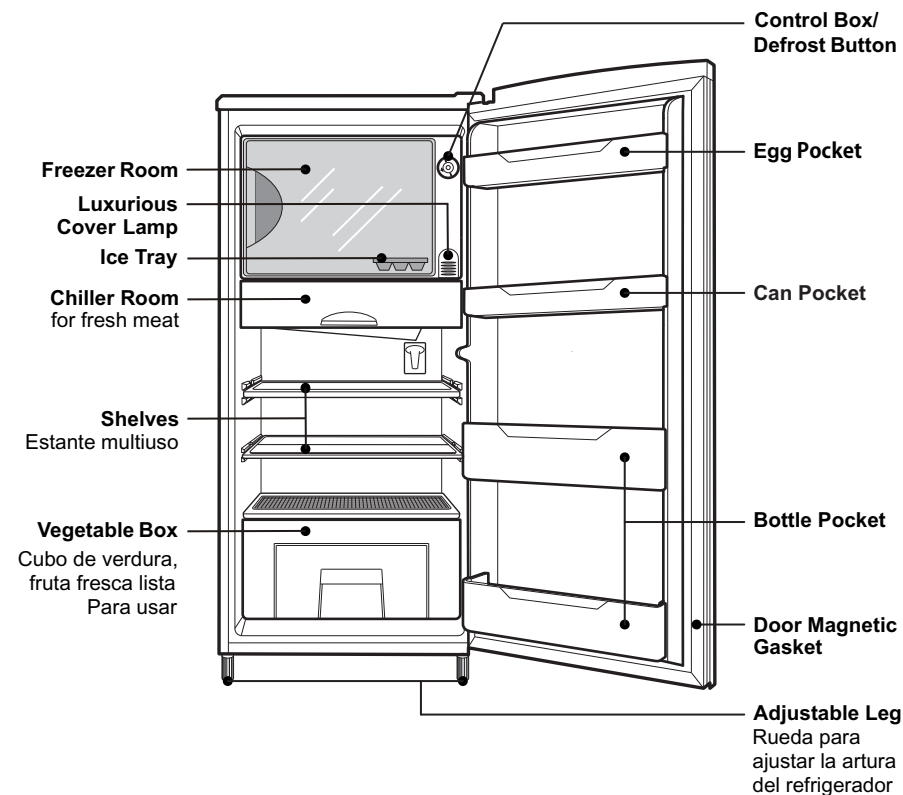


NOTA

• Todas las partes que se muestran pueden no corresponder a su modelo de frigorífico.


BASADA EN UNA AVANZADA TECNOLOGÍA DE ALTA CALIDAD. ESTAMOS SEGUROS DE SU SATISFACCIÓN EN CUANTO A LA CALIDAD QUE LE OFRECEMOS. LEA ESTE MANUAL ATENTAMENTE PARA CONOCER LA UBICACIÓN MÁS ADECUADA DEL APARATO SU USO Y MANTENIMIENTO. INCLUSO PUEDE ENCONTRAR ALGUNAS INSTRUCCIONES EN CASO DE QUE ENCONTRARA ALGUNOS PROBLEMAS.

## UBICACIÓN DEL REFRIGERADOR

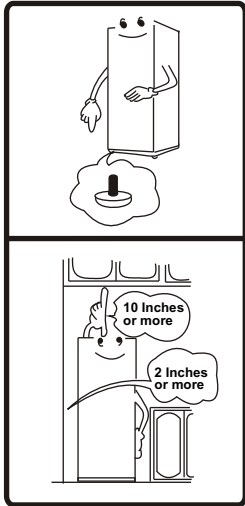 


1. ELIJA UN LUGAR DE FÁCIL ACCESO.
2. NO SITUÉ EL APARATO EN LUGAR HÚMEDO NI CON SOL.
3. ES NECESARIO CIERTA VENTILACIÓN PARA QUE EL REFRIGERADOR FUNCIONE CORRECTAMENTE. SE NECESITA 5 CM DE DISTANCIA ENTRE EL REFRIGERADOR Y EL PARED; 25 CM O MÁS POR LA PARTE SUPERIOR. SE RECOMIENDA QUE LA PARTE FRONTAL SEA MAS ALTA 5 CM QUE DE LA POSTERIOR ESPECIALMENTE SI ESTÁ ENCIMA DE ALFOMBRA.
4. PARA ELIMINAR RUIDO, AJUSTE LA ARTURA. EN CASO DE QUE EL PISO NO ESTÉ PLANO, UTILICE LA PATA AJUSTABLE. NIVELELA DE TAL FORMA QUE LA PARTE FRONTAL SEA MAS ALTA QUE LA POSTERIOR PARA QUE RESULTE MÁS FÁCIL CERRAR LA PUERTA. LEVANTE UN POCO LA PARTE FRONTAL Y GIRE LA PATA AJUSTABLE. GÍRELA A LA DERECHA PARA BAJAR Y A LA IZQUIERDA PARA SUBIR EL APARATO.

 5. LIMPIE CON MUCHO CUIDADO. SAQUE LOS POLVOS DEL EMPAQUETE Y LA ENVÍA.
6. COLOQUE LA BANDEJA DE HIELO, ESTANTES, ETC. EN SU LUGAR
7. ENCHUFE EL APARATO EN LA CORRIENTE. NO PONGA OTRO ENCHUFE EN LA MISMA TOMA DE CORRIENTE.
8. DEJE FUNCIONANDO EL REFRIGERADOR DURANTE 2-3 HORAS ANTES DE COLOCAR LOS ALIMENTOS. VERIFIQUE LA TEMPERATURA DEL CONGELADOR. PODRÁ USARLO CUANDO CONSIDERE QUE HAYA ALCANZADO UNA TEMPERATURA DE FRÍO ADECUADA.

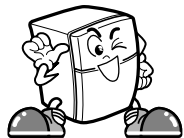

## GENERAL INSTRUCTION

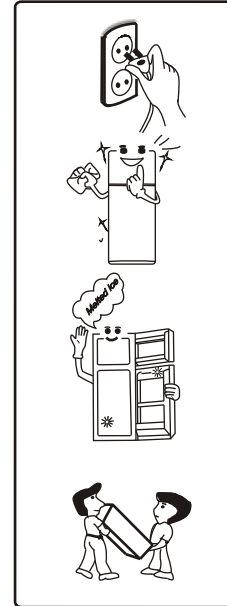 

### VACATIONS

During average of length vacations, you will probably find it best to leave the refrigerator in operation. Place freezable items in freezer for longer life. When you are going to go for an extended period, follow these steps. Remove all food. Disconnect the power supply cord. Clean interior thoroughly. Leave refrigerator and freezer doors OPEN to prevent odor formation.

### POWER FAILURE

Most power failures are corrected in an hour or two and will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.

### IF YOU MOVE

Remove or securely fasten down all loose item inside the refrigerator-freezer. To avoid damaging the leveling screw, turn them all the way into the base.

## IMPORTANT WARNING

### DO NOT USE EXTENSION CORD

If possible, connect the refrigerator to its own individual appliance circuit, so that the other appliances or a heavy load of household lights will not cause an overload, that might interrupt the electrical current. Also a loose connection might result from doubling up with another appliance in the outlet.

### POWER CORD REPLACING

If the supply cord damage, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

### GROUNDING INSTRUCTION

In the event of an electrical short circuit carting reduces the risk of electric shock by providing an escape wire for the electric current.

If this appliance is equipped with a cord having a grounding wire with a grounding plug, you must plug into an outlet that is properly installed and grounded.

If this appliance has no grounding plug but a cord having a grounding wire, appliance must be grounded.

Improper use of the grounding plug can result in a electric shock. Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if you have doubts on whether the appliance is properly grounded.

### VERY DANGEROUS ATTRACTION

An empty refrigerator is a very dangerous attraction to children. Remove either gaskets, latches, lids or door from unused appliance, or take some other action that will make it harmless.

Appliance must be grounded

**DON'T WAIT !  
DO IT NOW !**

**NEVER STORE EXPLOSIVES AND  
CHEMICALS**



**BEFORE CALLING  
FOR SERVICE**



PROBLEMS	POSSIBLE CAUSE
REFRIGERATOR NOT FUNCTIONING	<ul style="list-style-type: none"> <li>■ HAS A HOUSE FUSE BLOWN OR CIRCUIT BREAKER TRIPPED?</li> <li>■ HAS THE POWER CORD PLUG BEEN REMOVED OR LOOSENED FROM THE ELECTRICAL WALL OUTLET?</li> </ul>
NOT COLD	<ul style="list-style-type: none"> <li>■ IS AIR CIRCULATION WITHIN THE CABINET BLOCKED BY OVERCROWDED SHELVES OR BY PAPER OR OTHER COVERING ON THE SHELVES?</li> <li>■ IS THERE AN OBSTRUCTION IN THE OPENING AT THE FRONT OF CABINET BASE?</li> <li>■ IS THE RADIATION HEAT THROUGH TUBE CONDENSER, LOCATED ON THE SIDE OF THE CABINET, OBSTRUCTED IN ANY WAY?</li> <li>■ HAVE THE DOORS BEEN KEPT OPEN MORE THAN NORMALLY NECESSARY?</li> <li>■ IS THE TEMPERATURE CONTROL DIAL SET ON A PROPER POSITION?</li> </ul>
ABNORMAL NOISE	<ul style="list-style-type: none"> <li>■ UNEVENNESS OF THE FLOOR, OR YOU NEED TO LEVELING THE HEIGHT</li> <li>■ THERE IS LEFT GOODS AT BACK SIZE OF REFRIGERATOR</li> </ul>
CABINET HAVE ODOR	<ul style="list-style-type: none"> <li>■ CERTAIN FOOD PRODUCES ODOR, COVER OPEN DISHES OF FOOD</li> <li>■ INTERIOR MAY NEED CLEANING</li> </ul>
DEW ON CABINET SURFACES	<ul style="list-style-type: none"> <li>■ NORMALLY HAPPEN IN HIGH HUMIDITY SURROUNDING</li> <li>■ PLEASE CHECK WHETHER THE DOOR HAS ALREADY BEEN TIGHTLY CLOSED</li> </ul>

# REFRIGERADOR LIBRO MANUAL DE USO



Lea el libro de manual  
De uso con mucha atención antes  
De instalar y encender el aparato.  
Apunte el número  
De modelo y el número de serie.

## ÍNCIDE

UBICACION DEL REFRIGERADOR .....	2
PARTES DEL REFRIGERADOR .....	3
UTILIZACIÓN .....	4
<i>Inicio Y Encendido</i>	
<i>Control De La Temperatura</i>	
<i>Hacer Hielo</i>	
<i>Descongelar</i>	
GUARDAR LOS ALIMENTOS .....	5
LIMPIEZA DEL APARATO .....	6
INSTRUCCIONES GENERALES .....	7
ASPECTOS IMPORTANTES .....	7
ANTES DE LLAMAR AL SERVICIO TÉCNICO .....	8



**LG Electronics Inc.**