



User Guide

HLS34S (HLS34S/ SHS34)

Please read this manual carefully before operating your unit.
Retain it for future reference.



As an ENERGY STAR® Partner, LG has determined that this product or product models meet the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a U.S. registered mark.

P/NO: MFL62596613



The TV is not supplied.

English

DEUTSCH

FRANÇAIS

NEDERLANDS

SLOVENŠČINA

ITALIANO

ESPAÑOL


Ελληνικά


PORTUGUÊS

Safety Precaution



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

 This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING : TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING : Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION : Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION : The apparatus shall not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION : concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit ;


That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service center.

Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance.

To disconnect power from the mains, pull out the mains cord plug. When installing the product, ensure that the plug is easily accessible.

Disposal of your old appliance

- 
1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
 2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
 3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
 4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories.



For Wireless product European Union Notice

Products bearing the CE marking comply with the R&TTE Directive (1999/5/EC), EMC Directive (2004/108/EC), and the Low Voltage Directive (2006/95/EC) issued by the Commission of the European Community. Indoor use only.

European representative :

LG Electronics Service Europe B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
(Tel : +31-036-547-8940)

France Notice

Pour la France métropolitaine

2.400 - 2.4835 GHz (Canaux 1à 13) autorisé en usage intérieur
2.400 - 2.454 GHz (canaux 1 à 7) autorisé en usage extérieur

Pour la Guyane et la Réunion

2.400 - 2.4835 GHz (Canaux 1à 13) autorisé en usage intérieur
2.420 - 2.4835 GHz (canaux 5 à 13) autorisé en usage extérieur

Italy Notice

A general authorization is requested for outdoor use in Italy.

The use of these equipments is regulated by:

1. D.L.gs 1.8.2003, n. 259, article 104 (activity subject to general authorization) for outdoor use and article 105 (free use) for indoor use, in both cases for private use.
2. D.M. 28.5.03, for supply to public of RLAN access to networks and telecom services.

L'uso degli apparati è regolamentato da:

1. D.L.gs 1.8.2003, n. 259, articoli 104 (attività soggette ad autorizzazione generale) se utilizzati al di fuori del proprio fondo e 105 (libero uso) se utilizzati entro il proprio fondo, in entrambi i casi per uso private.
2. D.M. 28.5.03, per la fornitura al pubblico dell'accesso R-LAN alle reti e ai servizi di telecomunicazioni.

Brazil Notice

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Latvia Notice

A license is required for outdoor use for operation in 2.4 GHz band.

Welcome to your New Sound Bar System

Installation	5
Setting up	5
Mounting the main unit to a wall	5
Connection	6
About the	7
Unit	7
Remote Control	7
Enjoying the sound with	8-10
Using HDMI connection	8
Using Digital Audio In Jacks	8
Playing from USB	9
Using Portable In jack	10
Troubleshooting	11
Specifications	11



 
The TV is not supplied.

Installation

Setting up

Install an unit and a speaker as shown in the illustration below.
(Recommended)

The TV is not supplied. For detail on power connection, refer to the page 6.

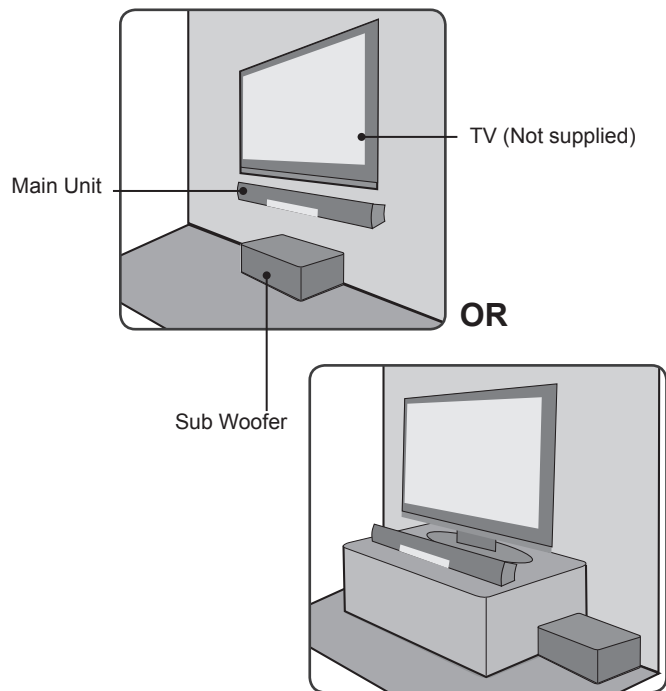


Mounting the main unit to a wall


1 Prepare screws and brackets (supplied) that are suitable for the hook on the back of the unit.

2 A guide sheet is supplied to attach the bracket to the wall. Stick the sheet to the wall and fasten the screws to the bracket.

 - Screw length
Upper: 56 mm
Lower: 42 mm
- Use screws that are suitable for the wall material and strength.


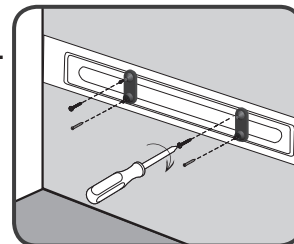


3 Hang the unit onto the brackets.

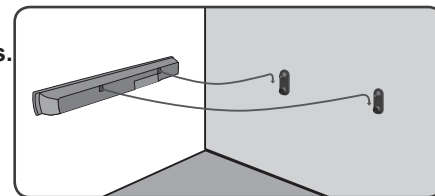 

Connection

  
1 Prepare the AC adaptor.

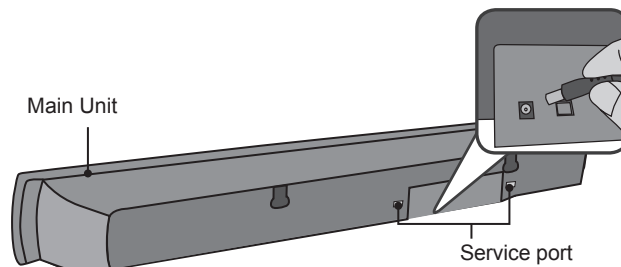

2 Connect one end to the DC IN socket on the main unit.

3 Connect the other end to the wall outlet.

 4 Connect the power plug of the digital wireless subwoofer to the wall outlet.

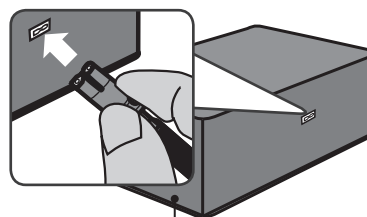

⚠ CAUTION:

- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC adaptor, ensure you have completed all other connections.

 
The wireless subwoofer makes setup simple, too - there are no cables to connect. When you turn on the unit and subwoofer the connection will be completed automatically.

You can set up wireless connection manually, when your connection is not completed. Press and hold **SOUND MODE** on the unit and then **HDMI 1** button on the remote control. And then, re-connect the power cord to the subwoofer. "Pairing!" will be displayed. The wireless connection indicator will blink. If the indicator on the unit and subwoofer is green, the connection is completed.

Tips!

- If the wireless connection fails again, check whether there is any conflict or strong interference (for example, interference from other electronic devices) around your location. After removal of the conflict or strong interference, repeat the above procedures.
- The available length is 20m for wireless connection on open place.

About the unit & remote control

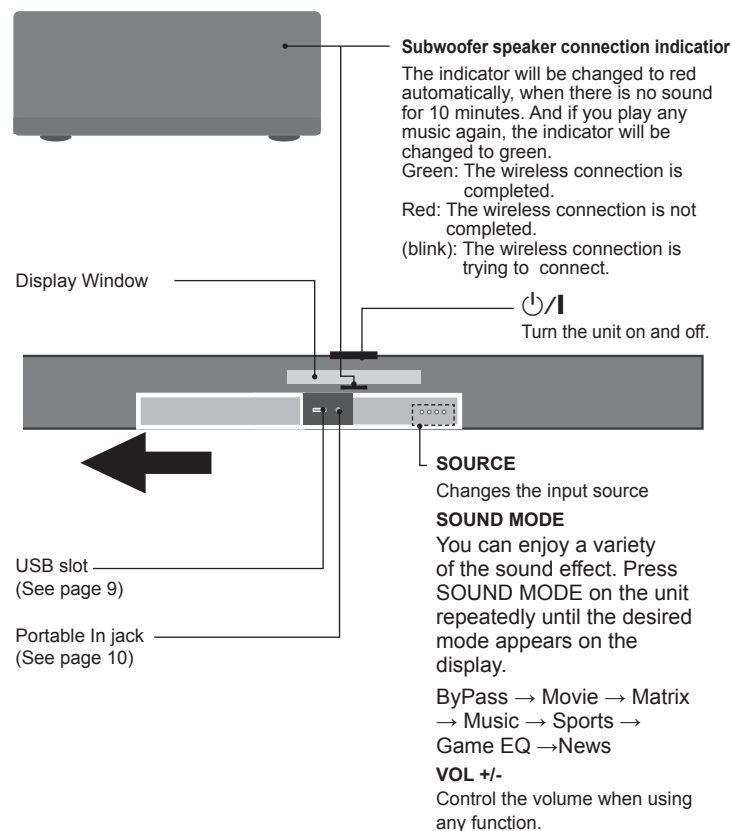

VOLUME

Adjusts speaker volume.

HDMI 1/2

Select HDMI 1/2 function.

PORTABLE

Select PORTABLE function.

OPTICAL

Select OPTICAL function.

COAXIAL

Select COAXIAL function.

USB RANDOM

To select the play mode. (RANDOM)

⏮/⏭ : Skip a file.

 
 
▶/⏸ : Starts or pauses playback.

After you connect the USB, you can play the music directly by pressing this button.

■ : Stops playback.

DISPLAY

Displays the file/ audio source information.

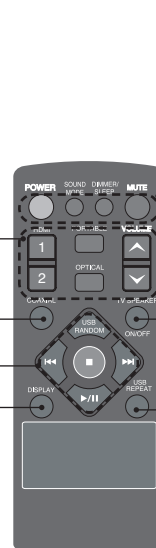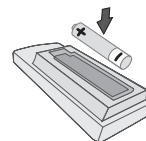

POWER

Turn On/Off.

SOUND MODE

DIMMER/SLEEP

Press repeatedly to select the desired time period options (in minutes):
(Dimmer on -> Sleep timer value -> Dimmer/ Sleep off)

*Dimmer on: The lighting of front panel display is dimmed.

MUTE

To mute the sound.

TV SPEAKER ON/ OFF

When the HDMI 1/2 function:
- ON: Only for TV speaker output
- OFF: Only for unit speaker output



USB REPEAT

To select the play mode. (REPEAT)



Put the battery into the remote control.

Make sure that the + (plus) and - (minus) on the battery (size AAA) match those on the remote control.


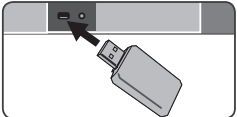
Using HDMI connection

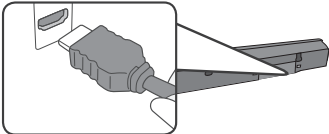	ON UNIT	ON REMOTE
1 Connect HDMI OUT jack of your unit into the TV or Project. 	-	-
2 Connect the HDMI OUT jack of your component into the HDMI IN 1 or 2 jack on the rear panel of this unit.	-	-
3 Turn the power on:		POWER
4 Select the [HDMI IN 1] or [HDMI IN 2] option:	SOURCE	HDMI 1/2
5 Turn down the volume of this unit:	VOL -	VOLUME ▾
6 Turn your component on:	-	-
7 Adjust the volume of this unit:	VOL +/-	VOLUME ▽/▲

Using Optical/ Coaxial in jacks

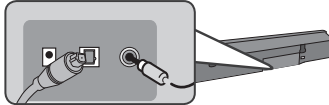	ON UNIT	ON REMOTE
1 Connect the optical or coaxial output jack of your component into the OPTICAL/ COAXIAL in jack on the rear panel of this unit. 	-	-
2 Turn the power on:		POWER
3 Select the [OPTICAL] or [COAXIAL] option:	SOURCE	OPTICAL/ COAXIAL
4 Turn down the volume of this unit:	VOL -	VOLUME ▾
5 Turn your component on:	-	-
6 Adjust the volume of this unit:	VOL +/-	VOLUME ▽/▲

Playing from USB

	ON UNIT	ON REMOTE
1 Open the front slide door. 	-	-
2 Connect a USB device: 	-	-
3 Play:	-	▶/

Playing from USB - more you can do

Skipping to a track

Press ◀◀/▶▶ on the remote control. When ◀◀ button is pressed once midway through a track, the unit returns to the start of that file. When it is pressed again, a file is skipped each time the button is pressed.

Pausing or restarting a playback

Press ▶/|| on the remote control during playback. Press the button again to resume.

Repeat/ Random play

To play repeatedly, press USB REPEAT on the remote control.
To play randomly, press USB RANDOM on the remote control.


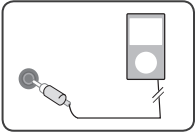

Compatible USB Devices

- MP3 Player : Flash type MP3 player.
- USB Flash Drive : Devices that support USB 2.0 or USB 1.1.
- The USB function may not be available depending on devices.
- Devices which require additional program installation when you have connected it to a computer, are not supported.

Look out for the follows

- Do not extract the USB device while in operation.
- For a large capacity USB, it may take longer than a few minute to be searched.
- To prevent data loss, back up all data.
- If you use a USB extension cable or USB hub, the USB device is not recognized.
- Using NTFS file system is not supported. (Only FAT 16/32 file system is supported.)
- This unit is not supported when the total number of files is 1000 or more.
- External HDD, Locked devices or hard type USB devices are not supported.
- USB port of the unit can not be connected to PC. This unit can not be used as a storage device.
- Only MP3/WMA file system is supported.

Using Portable In Jack

	ON UNIT	ON REMOTE
1 Open the front slide door. 	-	-
2 Connect the portable player to the PORT.IN (PORTABLE IN) connector of the unit. 	-	-
3 Turn the power on.		POWER
4 Select the function: Turn on the portable player and start it playing.	SOURCE	PORTABLE

Troubleshooting

Problem	Cause	Correction
No power.	The power cord is disconnected.	Plug the power cord into the wall outlet securely.
No sound.	The mute is on.	Adjust the volume.
	The power cord is not plugged in.	Ensure that the AC adaptor of the main unit is connected properly.
	TV SPEAKER is on.	Press TV SPEAKER on the remote control to set to "OFF"
No sound on subwoofer	The wireless connection fails.	Set up wireless connection manually. (See the page 6)
The Remote Control does not work properly.	The Remote Control is not pointed at the remote sensor on the main unit.	Point the Remote Control at the remote sensor of the main unit.
	The Remote Control is too far from the main unit.	Operate the Remote Control closer to the main unit.
USB is not supported.	The USB is incompatible with the unit.	Try another one.

Specifications

Main unit

Power supply	AC 200-240 V, 50/60 Hz
Power consumption	30 W
Net Weight	2.4 kg
External dimensions	890 (W) x 97(D) x 92 (H) mm
AC/DC Adaptor	DC 24 V, 2.7A
Operating temperature	5 °C ~ 35 °C
Operating humidity	5 % ~ 85 %
Output power	50 W X 3 ch
[Speakers] Type	1 Way 2 Speakers (Center: parallel)
[Speakers] Impedance	Front: 6 ohm/ Center: 12 ohm
[USB] Bus power supply	DC 5 V --- 500 mA
[HDMI] In (AUDIO)	19 pin (HDMI standard, Type A)
[HDMI] Out (AUDIO)	19 pin (HDMI standard, Type A)

Subwoofer

Type	1 way 1 speaker
Power consumption	25 W
Impedance	4 Ω
Rated Input Power	100 W
Max. Input power	200 W
External Dimension	430 (W) x 226.5 (D) X 187 (H) mm
Net weight	4.8 kg

Designs and specifications are subject to change without prior notice.

