M6503C

Make sure to read the Safety Precautions before using the product. Keep the User's Guide(CD) in an accessible place for future reference.

See the label attached on the product and give the information to your dealer when you ask for service.




Temporary noise is normal when powering ON or OFF this device.


Connecting the Speakers

- Only on some models.

Mount the product onto the speaker by using a screw as shown in the following connect the speaker cable.

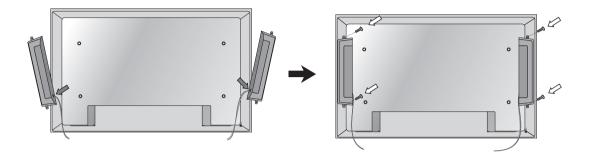


After installing your speakers, use holders and cable ties to organize the speaker cables.

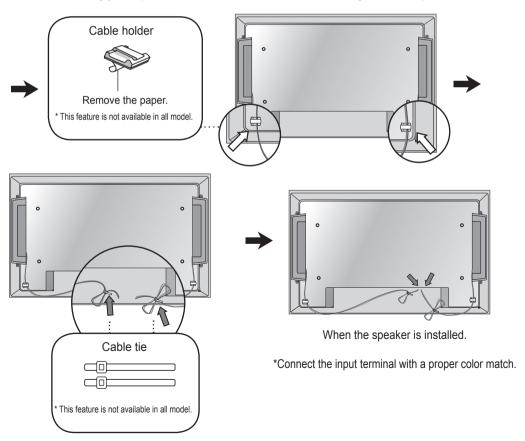

To install Portrait


- Only on some models.

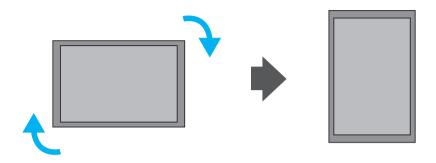


"When installing Portrait, rotate it clockwise based on its front."


Using the Remote Control

Name of the Remote Control Buttons

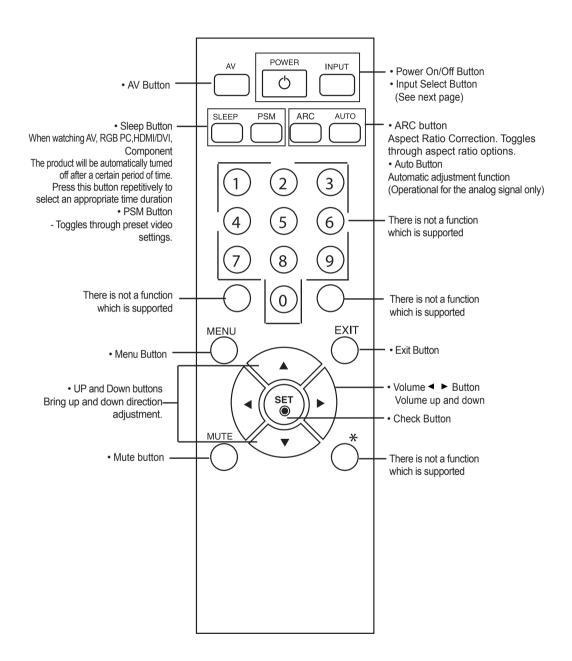

Using the Remote Control

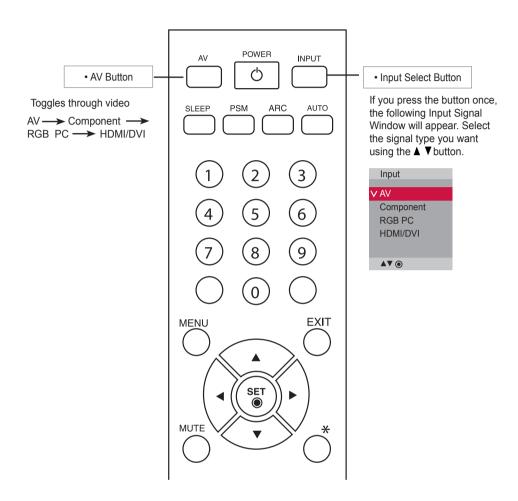


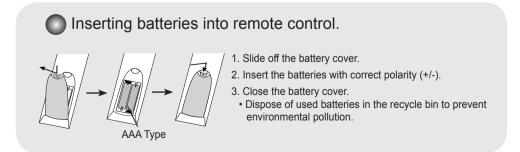


Name and Function of the Parts

  * The product image in the user's guide could be different from the actual image.







- Power Connector : Connect the power cord
- RS-232C Serial Ports
- RGB PC, HDMI/DVI Ports
 -HDMI Supports High Definition input and HDCP (High-bandwidth Digital Content Protection). Some devices require HDCP in order to display HD signals.
- PC Sound Jack : Connect the audio cable to the *LINE OUT jack of the PC sound card.
- **6** Wired Remote Control Port
- 6 AV Ports
- LAN Port
- Speaker Ports


*LINE OUT

A terminal used to connect to the speaker including a built-in amplifier (Amp). Make sure that the connecting terminal of the PC sound card is checked before connecting. If the Audio Out of PC sound card has only Speaker Out, reduce the PC volume.


If the Audio Out of the PC sound card supports both Speaker Out and Line Out, convert to Line Out using the card jumper of the program (Refer to the Sound Card Manual).

When Connecting to your PC

- First of all, see if the computer, product and the peripherals are turned off. Then, connect the signal input cable.
 - (A) When connecting with the D-Sub signal input cable.
 - When connecting with the HDMI to DVI signal input cable (not included).
 * When HDMI PC is used, a compatibility problem might occur.

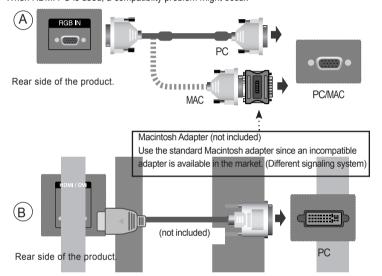

* User must use shielded signal interface cables (D-sub 15 pin cable, DVI cable) with ferrite cores to maintain standard compliance for the product.

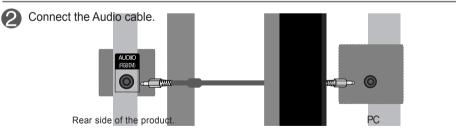

Connect the power cord.

Rear side of the product.

4 1 Turn on power by pressing the power button on the product.



- 2 Turn on the PC.
- Select an input signal.

 
 Press the INPUT button on the remote control to select the input signal.

$$\begin{array}{c} \text{INPUT} \rightarrow \blacktriangledown \blacktriangle \rightarrow \texttt{SET} \end{array}$$

Or, press the SOURCE button on the back of the product.



- When connecting with a D-Sub signal input cable.
 Select RGB PC : 15-pin D-Sub analog signal.
- B When connecting with a HDMI to DVI signal input cable.
 Select HDMI/DVI : HDMI to DVI Digital signal.










- How to connect to two computers.
 Connect the signal cables (HDMI to DVI and D-Sub) to each computer.
 Press the INPUT button on the remote control to select the computer to use.
- Directly connect to a grounded power outlet on the wall or a power bar with a ground wire.

- When using the LAN
- Connect the LAN cable as shown in the below figure .
- (A) Connect PC to Monitor directly.

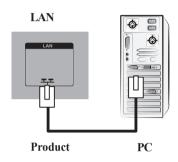

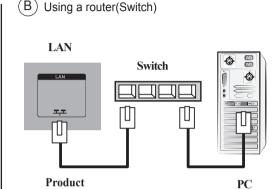

(C) Using the Internet.

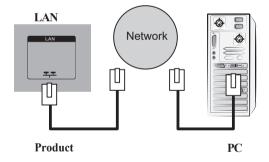

Connect the LAN cable and install the eZ-Net Manager program on the CD-ROM. For more information about the program, please refer to eZ-Net Guide in the enclosed CD-ROM.




 Using LAN establishes communication between your PC and the monitor and enables to use the OSD menus on the PC as well as on the monitor.

Daisy Chain Monitors

Use this function when displaying ANALOG RGB inputs of a PC to the other product.

 To use different products connected to each other Connect one end of the signal input cable(15-pin D-Sub Signal Cable) to the RGB OUT connector of product 1 and connect the other end to the RGB IN connector of other products.

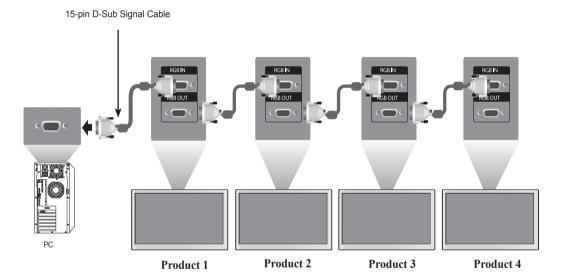




When multi-connecting in/out cascade format, no loss cables are recommended.
 We recommend that you should use cable distributor.


VESA FDMI wall Mounting

This product supports a VESA FDMI compliant mounting interface. These mounts are purchased separately and not available from LG. Refer to the instructions included with wall mount for more info.

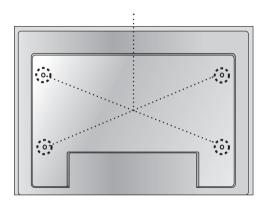


Video Input

- Connect the video cable as shown in the below figure and then connect the power cord (See page 6).
 - When connecting with a BNC cable.
 Connect the input terminal with a proper color match.

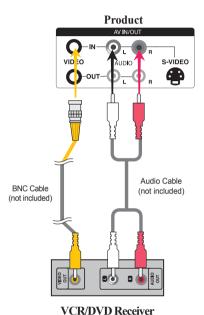

B When connecting with a S-Video cable.

Connect to the S-Video input terminal to watch high image quality movies.

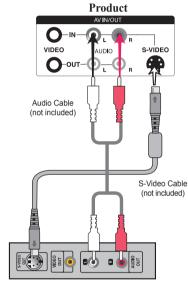

VCR/DVD Receiver

Select an input signal.

Press the INPUT button on the remote control to select the input signal.



Or, press the SOURCE button on the back of the product.




- (A) When connecting with an BNC cable.
 - Select AV.
- (B) When connecting with an S-Video cable.
 - · Select AV.





• When the BNC cable is connected simultaneously with S-Video cable, S-Video input has a priority.

- Component Input (480p/576p/720p/1080p/1080i/480i/576i)
 - Connect the video/audio cable as shown in the below figure and then, connect the power cord (See page 6).
 - Connect the input terminal with a proper color match.

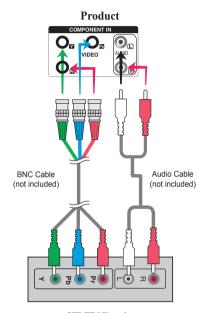

HDTV Receiver

Note

- Some devices may require HDCP in order to display HD signals.
- Component doesn't support HDCP.
- Select an input signal.

 
Press the INPUT button on the remote control to select the input signal.



Or, press the SOURCE button on the back of the product.




Select Component



HDMI Input (480p/576p/720p/1080i/1080p)

-HDMI Supports High Definition input and HDCP (High-bandwidth Digital Content Protection). Some devices require HDCP in order to display HD signals.

Connect the video/audio cable as shown in the below figure and then connect the power cord (See page 6).

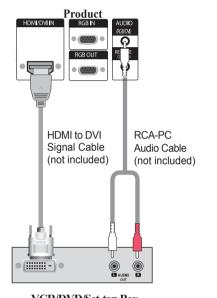


VCR/DVD/Set-top Box

Note: Dolby Digital is not supported.



 VCR/DVD/Set-top Box



Press the INPUT button on the remote control to select the input signal.

 


Or, press the SOURCE button on the back of the product.




When connecting with a HDMI to DVI signal input cable. When connecting with a HDMI signal input cable.

Select HDMI/DVI




Watching AV Outputs

- When using AV input, you can connect the AV Out to other monitors.

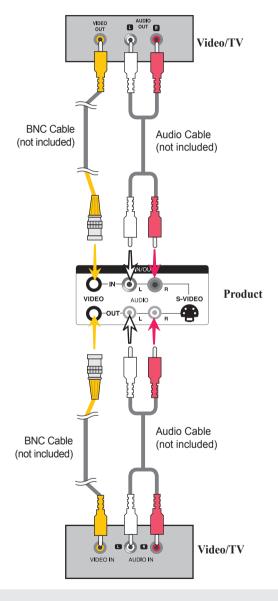



When multi-connecting in/out cascade format, no loss cables are recommended.
 We recommend that you should use cable distributor.

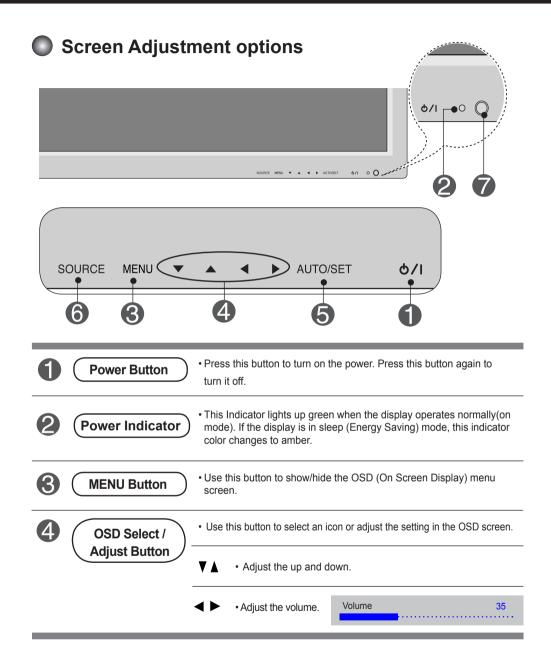





AUTO/SET Button

[For PC Analog signal]

Auto in progress
For optimal display change resolution to 1920x1080

[When XGA Mode is active and 1920 x 1080 is selected]

Auto in progress



SOURCE Button

SOURCE → ▼ ▲ → AUTO/SET


- Toggles between inputs

AV Composite Video, Separate Video

Component HDTV, DVD

RGBPC 15-pin D-Sub analog signal

 HDMI/DVI Digital signal





IR Receiver

· This is where the unit receives signals from the remote control.



OSD Menu


Icon	Function Description				
Picture	Adjusts screen brightness, contrast and color that you prefer.				
Audio	Adjusts the audio options.				
Time	Adjusts the timer options.				
Option	Adjusts the screen status according to the circumstances.				
Information	Adjust Set ID and check Serial No. and SW version and IP address				



OSD(On Screen Display)

The OSD function enables you to adjust the screen status conveniently since it provides graphical presentation.

How to adjust the OSD (On Screen Display) screen

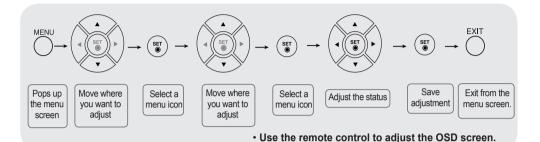

- Press the **MENU** Button, then the main menu of the OSD appears.
- 2 To access a control, use the ▼ ▲ Buttons.
- When the icon you want becomes highlighted, press the **SET** Button.
- 4 Use the ▼ ▲ ► Buttons to adjust the item to the desired level.
- 5 Accept the changes by pressing the **SET** Button.
- 6 Exit the OSD by pressing the **EXIT** Button.

How to adjust the screen automatically

Press the AUTO/SET button (AUTO button on a remote Control) in the PC analog signal. Then optimal screen settings will be selected that fit into the current mode. If adjustment is not satisfactory, you can adjust the screen manually.


[When XGA Mode is active and 1920 x 1080 is selected]

Auto in progress




Adjusting Screen Color

Picture Mode

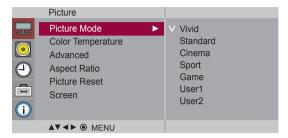

Toggles between screen presets.

- Vivid: Select this option to display with a sharp image.
- Standard : The most general and natural screen display status.
- Cinema : Select this option to lower brightness by one level.
- Sport : Select this option to display with a soft image.
- Game: To enjoy dynamic image when playing a game.
- User1,2: Select this option to use the user-defined settings.

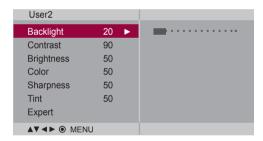

Backlight: To control the brightness of the screen, adjust the brightness of LCD panel.

Contrast: Adjust the difference between the light and dark levels in the picture.

Brightness: To adjust the brightness of the screen.

Color : To adjust the color to desired level. (Function works in the following mode - AV, Component, HDMI/DVI -DTV)

Sharpness: To adjust the clearness of the screen. (Function works in the following mode -AV, Component, HDMI/DVI -DTV)

Tint: To adjust the tint to desired level. (Function works in the following mode - AV, Component, HDMI/DVI -DTV)

Expert : To compensate for each image mode, or adjust image values according to a particular image. (Applied only to User2 menu.) (Function works in the following mode - AV, Component, HDMI/DVI -DTV)




If the 'Picture Mode' setting in the Picture menu is set to Vivid, Standard, Cinema, Sport or Game the subsequent menus will be automatically set.



Adjusting Screen Color

Color Temperature

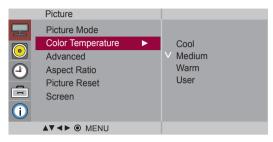

Color Settings

- Cool : Slightly purplish white.
 Medium : Slightly bluish white.
 Warm : Slightly reddish white.
- User: Select this option to use the user-defined settings.




Red / Green / Blue

Set your own color levels.



Adjusting Screen Color

Advanced

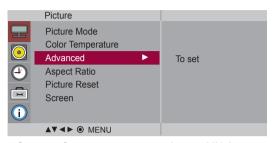


- Gamma : Set your own gamma value. : -50/0/50
 - On the monitor, high gamma values display whitish images and low gamma values display high contrast images.
- Film Mode: (Function works in the following mode AV, Component 480i/576i)
 When you watch a movie, this function adjusts the set to the best picture appearance.
- Black Level: (Function works in the following mode AV(NTSC), HDMI/DVI
 adjusts the contrast and the brightness of the screen using the
 black level of the screen.
 - Low : The reflection of the screen gets brighter.
 - High: The reflection of the screen gets darker.
- NR : Removing the noise up to the point where it does not damage the original picture.



Adjusting Screen Color

Aspect Ratio To select the image size of the screen.

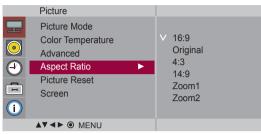

<AV>

16:9 Widescreen mode.

Just Scan Allows you to enjoy the transmitted data fully without any images cut off.

(* This menu is activated only in 720p, 1080p and 1080i in Component mode.)

Original The aspect ratio is not adjusted from the original. It is set by the program

being watched.

4:3 This picture format is 4:3 aspect ratio.

1:1 The aspect ratio is not adjusted from the original. Used in PC mode.

(Only HDMI/ DVI PC, RGB PC)

14:9 14:9 programs are viewed normally in 14:9 with black bars added to the

top and bottom. 4:3 programs are magnified on the top/bottom and left/

right sides.

Zoom1, 2 4:3 programs are magnified until they fill the 16:9 screen. The top and


bottom will be cut off.

MODE	AV	Component	HDMI/DVI		RGB
ARC			DTV	PC	PC
16:9	•	•	•	•	•
Just Scan	×	•	•	X	X
Original	•	X	X	X	X
4:3	•	•	•	•	•
1:1	X	X	X	•	•
14:9	•	×	×	X	×
Zoom1	•	X	X	X	X
Zoom2	•	×	×	X	×




Adjusting Screen Color

Picture Reset Return Picture Mode, Color Temperature, Advanced to the default factory settings.

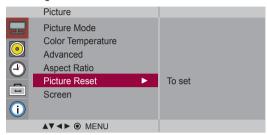

Screen

Adjust the screen video.

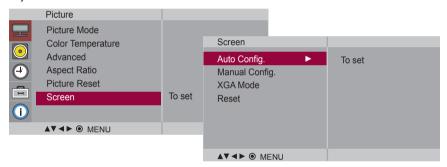

Auto Config. (RGB PC input only): This button is for the automatic adjustment of the screen position, clock and phase. This function is available for analog signals only. **Manual Config.:** If the picture isn't clear after auto adjustment and characters are still trembling, adjust the picture phase manually.

* Phase, Clock function are not available in Component, HDMI/DVI DTV.)

Phase: To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters. This function is available for analog signals only

Clock: To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change. This function is available for analog signals only.

H-Position: Moving the screen position horizontally. **V-Position**: Moving the screen position vertically.

H-Size : Adjust the horizontal size of the screen.

V-Size : Adjust the vertical size of the screen.

XGA Mode (RGB-PC only). : For more improved or better picture quality, select the same mode corresponding to computer resolution.


Reset: Return Manual config. to the default factory settings.




Adjusting the audio function

Sound Mode

The best sound tone quality will be selected automatically depending on the video type that you're currently watching.

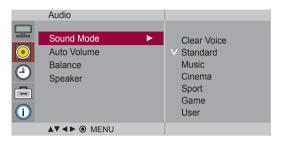

- Clear Voice: By differentiating the human sound range from others, it helps users listen to human voices better.
- Standard: The most commanding and natural audio.
- Music : Select this option to enjoy the original sound when listening to the music.
- Cinema : Select this option to enjoy sublime sound.
- Sport : Select this option to watch sports broadcasting.
- · Game: To enjoy dynamic sound when playing a game.
- User : Select this option to use the user-defined audio settings.

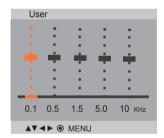

Auto Volume To adjust uneven sound volumes across all channels or signals automatically to the most appropriate level. To use this feature, select On.

Balance Use this function to balance sound from the left and right speakers.

Speaker You can adjust internal speaker status.


If you want to use your external hi-fi stereo system, turn off the internal speakers of the set.

Note

When connected to your computer and the 'Sound Mode' setting in the audio menu is Clear Voice, Standard, Music, Cinema or Sport, the available menus are Balance, Auto Volume, Speaker.



Adjusting the timer function

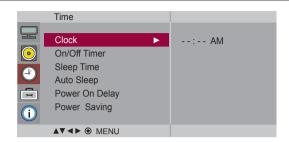

Clock

If the current time is incorrect, reset the clock manually.

- 1) Press the **MENU** button and then use **▼** ▲ button to select the **Time** menu.
- 2) Press the ▶ button and then use ▼ ▲ button to select the Clock menu.
- 3) Press the ▶ button and then use ▼ ▲ button to set the hour(00~23).
- 4) Press the ▶ button and then use ▼ ▲ button to set the minutes(00~59).

On/Off Timer The off time automatically switches the set to standby at the pre-set time.

- 1) Press the **MENU** button and then use **▼** ▲ button to select the **Time** menu.
- Press the
 button and then use
 ∆ button to select On/Off Timer.
- 3) Press the ▶ button and then use ▼ ▲ button to set the hour(00~23).
- 4) Press the ▶ button and then use ▼ ▲ button to set the minutes(00~59).
- Press the button and then use ▼ button to select On or Off.
- 6) Press the ▶ button and then use ▼ ▲ button to select Select input or On Timer

Sleep Time

The power is automatically turned off when the time set by a user is passed.

- Press the MENU button and then use ▼ ▲ button to select the Sleep Time menu.
- 3) Press the ▶ button and then use ▼ ▲ button to set the minutes(00~59).

Auto Sleep

If Auto Sleep is active and there is no input signal, the set switches to off mode automatically after 10 minutes.

- 1) Press the **MENU** button and then use ▼ ▲ button to select the **Auto Sleep** menu.
- 2) Press the ▶ button and then use ▼ ▲ button to select **On** or **Off**.

Power On Delay

When connecting multiple monitors and turning the power on, the monitors are turned on individually to prevent overload.


Note




- In the event of power interruption (disconnection or power failure), the clock must be reset.
- Once the on or off time is set, these functions operate daily at the preset time.
- Off time function overrides On time function if they are set to the same time.
- · When On time is operated, input screen is turned on as it was turned off.



Adjusting the timer function

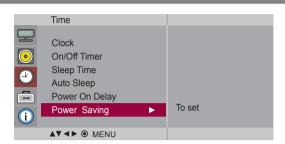

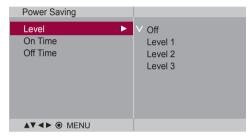

Power Saving


This screen brightness adjusting menu helps you save energy.

- Level: Total 4 screen brightness levels are provided.
- Off: 100% light
- Level 1: 80% light
- Level 2: 60% light
- Level 3: 40% light
- On Time: Enables to automatically turn on the Power Saving option at a scheduled time.
- Off Time: Enables to automatically turn off the Power Saving option at a scheduled time.

^{*}The Power Saving option becomes in effect only during the scheduled time frame. The On Time and Off Time menus become disabled if Level Off is selected.



Selecting the options

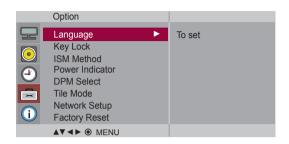

Language

To choose the language in which the control names are displayed.

Key Lock

Use the \bigvee Δ buttons to select **On** or **Off**. The monitor can be set up so that it can only be used with the remote control. This feature can prevent unauthorized viewing.

In order to lock the OSD screen adjustment, set the **Key Lock** tab to the **'On'** position. In order to unlock it, do the following:

• Push the MENU button on the remote control and set Key Lock to the 'Off' position.

ISM Method

A frozen or still picture from a PC/Video game displayed on the screen for prolonged periods could

result in a ghost image remaining even when you change the image. Avoid allowing a fixed image to remain on the screen for a long period of time.

Normal: Leave on normal if you don't foresee image burn in being a problem.

White wash: White wash fills the screen with solid white. This helps removes permanent images burned into the screen. A permanent image may be impossible to clear entirely with white wash.


Orbiter: May help prevent ghost images. However, it is best not to allow any fixed image to remain on the screen. To avoid a permanent image on the screen, the screen will move every 2 minutes.

Inversion: This function inverts the panel color of the screen. The panel color is automatically inverted every 30 minutes.

Dot Wash: This function moves the black dots of the screen. The black dots is automatically moved every 5 second.



Selecting the options

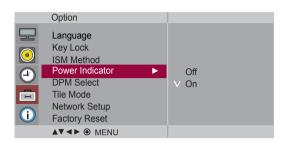

Power Indicator Use this function to set the power indicator on the front side of the product to On or Off. If you set Off, i will go Off. If you set On at any time, the power indicator will automatically be turned on.


DPM Select A user can choose to turn the power saving mode on / off.



Selecting the options

- · To use this function
- Must be displayed with various other products.
- Must be in a function that can be connected to RS-232C or RGB Out

Tile mode

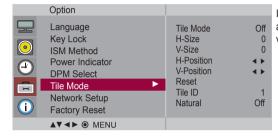

It is used to enlarge the screen and also used with several products to view screen.


· Tile Mode

Tile mode and choose Tile alignment and set the ID of the current product to set location

- * Only after pressing the SET button the adjustments made to the settings will be saved.
- Tile mode : column x row (c = 1, 2, 3, 4,5 r = 1, 2, 3, 4,5)
- 5 x 5 available.
- Configuration of an integration screen is also available as well as configuration of One by one Display.




- Tile mode (product 1 ~ 4): c(2) x r(2)

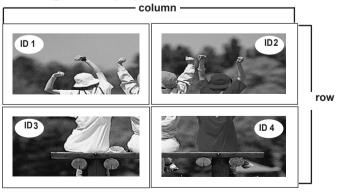




Selecting the options


- Tile mode (product 1 ~ 9) : c(3) x r(3)

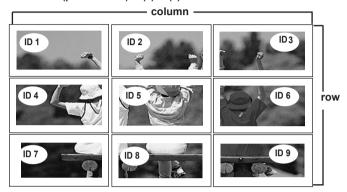

 - Tile mode (product 1 ~ 2) : c(2) x r(1)




- Tile mode (product 1 ~16) : c(4) x r(4)

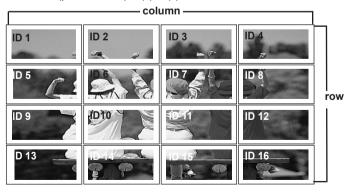



Selecting the options

Tile mode

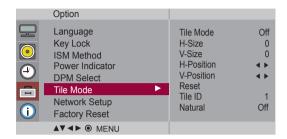

• **H-Size** Adjust the horizontal size of the screen taking into account the size of the bezel.

• V-Size Adjust the vertical size of the screen taking into account the size of the bezel.

• H-Position Moving the screen position horizontally.

• V-Position Moving the screen position vertically.

Reset Function to initialize and release Tile.

All Tile setting are released when selecting Tile recall and the screen returns

to Full screen.

• Tile ID Select the location of the Tile by setting an ID.

• Natural The image is omitted by the distance between the screens to be naturally shown.




Selecting the options

Network Setup Sets up network information.

DHCP

Manual

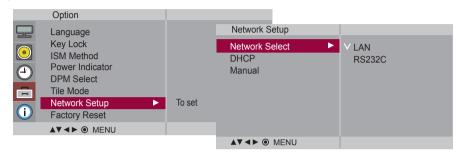


 Network Select Sets up network connections.

> -LAN: Enables communication via Ethernet. - RS-232C: Enables communication via Serial.

Allocates and sets up IP automatically.

Sets up IP address, Gateway, Subnet Mask, Primary DNS and Secondary DNS. The setup process is complete when you select Execute, and "IP Setup Completed" is displayed at the bottom of the screen. While "Wait for IP Setup" is displayed, you cannot use the local keys and remote control. "Wait for IP Setup" is displayed for up to 40 seconds.

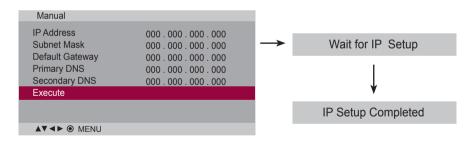

*If Network Select is set to Serial, DHCP and Manual are disabled.

Factory Reset Select this option to return to the default factory settings.



Adjust Set ID and check Serial No. and SW version.



Set ID You can assign a unique Set ID NO (name assignment) to each product when several

Product Control Program.

Serial No. This menu shows the serial number of the product.

SW Version This menu shows the software version.

IP Address Displays a selected network's IP address.

Troubleshooting

No image is displayed

- Is the product power cord connected?
- Is the power indicator light on?
- Power is on, power indicator is Green but the screen appears extremely dark.
- The power indicator amber?
- Does the 'Out of range' message appear?

Does the 'Check signal cable' message appear?

- See if the power cord is properly connected to the outlet
- · See if the power switch is turned on.
- May need service.
- · Adjust brightness and contrast again.
- Backlight may need repair.
- If the product is in power saving mode, move the mouse or press any key.
- Turn both devices off and then back on.
- The signal from the PC (video card) is out of the vertical or horizontal frequency range of the product. Adjust the frequency range by referring to the Specifications in this manual.

* Maximum resolution RGB: 1920 x 1080 @60Hz HDMI/DVI: 1920 x 1080 @60Hz

- The signal cable between PC and product is not connected. Check the signal cable.
- Press the 'INPUT' menu in the remote Control to check the input signal.

'Unknown Product' message appears when the product is connected.

- Did you install the driver?
- Install the product driver, which is provided with the product, or download it from the web site. (http://www.lqe.com)
- See if the plug&play function is supported by referring to the video card user manual.

' Key Lock On' message appears.

- The 'Key Lock On' message appears when pressing the Menu button.
- The control locking function prevents unintentional OSD setting change due to careless usage. To unlock the controls, simultaneously press the Menu button and ▶ button for several seconds. (You cannot set this function using the remote control buttons. You can set this function in the product only.)



- * Vertical frequency: To enable the user to watch the product display, screen image should be changed tens of times every second like a fluorescent lamp. The vertical frequency or refresh rate is the times of image display per second. The unit is Hz.
- * Horizontal frequency: The horizontal interval is the time to display one vertical line. When 1 is divided by the horizontal interval, the number of horizontal lines displayed every second can be tabulated as the horizontal frequency. The unit is kHz.

Troubleshooting

The screen image looks abnormal.

- Is the screen position wrong?
- D-Sub analog signal Press the "AUTO" button in the remote control to automatically select the optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Position OSD menu.
- See if the video card resolution and frequency are supported by the product. If the frequency is out of range, set to the recommended resolution in the Control Panel "Display" Setting menu.
- Do thin lines appear on the background screen?
- D-Sub analog signal Press the "AUTO" button in the remote control to automatically select an optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Clock OSD menu.
- Horizontal noise appears or the characters look blurred.
- D-Sub analog signal Press the "AUTO" button in the remote control to automatically select an optimal screen status that fits into the current mode. If adjustment is not satisfactory, use the Phase OSD menu.
- The screen is displayed abnormally.
- The proper input signal is not connected to the signal port. Connect the signal cable that matches with the source input signal.

After-image appears on the product.

- After-image appears when the product is turned off.
- If you use a fixed image for a long time, the pixels may be damaged quickly. Use the screen-saver function.

Troubleshooting

The audio function does not work.

No sound?

- See if the audio cable is connected properly.
- Adjust the volume.
- See if the sound is set properly.
- Select the appropriate equalize sound.
- Adjust the volume.

Sound is too dull.

Sound is too low.

Screen color is abnormal.

- Screen has poor color resolution (16 colors).
- Set the number of colors to more than 24 bits (true color)
 Select Control Panel - Display - Settings - Color Table menu in Windows.
- Screen color is unstable or monocolored.
 - Or, re-insert the PC video card.
- Do black spots appear on the screen?
- Several pixels (red, green, white or black color) may appear on the screen, which can be attributable to the unique characteristics of the LCD panel. It is not a malfunction of the LCD.

· Check the connection status of the signal cable.

The operation does not work normally.

- The power suddenly turned off.
- Is the sleep timer set?
- Check the power control settings.
 Power interrupted.
- "CAUTION! FAN STOP!"
 If the power is turned off after this message appears, it means that the fan is out of order.
 In this case, contact your local service center.

Specifications

The product specifications can change without prior notice for product improvement.

M6503C

LCD Panel	64.53 inches Visible diagonal (163.9 cm)TFT (Thin Film Transistor) LCD (Liquid Crystal Display) Panel 0.744 mm x 0.744 mm (Pixel Pitch)	
Power	Rated Voltage AC 100-240V~ 50/60Hz 5.5A Power Consumption On Mode : 550W Typ. Sleep Mode : ≤ 1W (RGB) / 2W(HDMI/DVI) (If LAN OFF is selected) Off Mode : ≤ 1W	
Dimensions &Weight		
		_
	Width x Height x Depth [1] 153.54 cm (60.45 inches) x 90.76 cm (35.73 inches) x 13.67 cm (5.38 inches) [2] 153.54 cm (60.45 inches) x 90.76 cm (35.73 inches) x 13.67 cm (5.38 inches)	
	Net [1] 52 kg (114.64 lbs) [2] 53.48 kg (117.89 lbs)	

NOTE

■ Information in this document is subject to change without notice.

Specifications

The product specifications can change without prior notice for product improvement.

Video Signal	Max. Resolution	RGB: 1920 X 1080 @60Hz HDMI/DVI: 1920 X 1080 @60Hz - It may not be supported depending on the OS or video card type
	Recommended Resolution	RGB: 1920 X 1080 @60Hz HDMI/DVI: 1920 X 1080 @60Hz - It may not be supported depending on the OS or video card type.
	Horizontal Frequency	RGB : 30 - 83 kHz HDMI/DVI : 30 - 83 kHz
	Vertical Frequency	RGB : 56 - 75 Hz HDMI/DVI : 56 - 60 Hz
	Synchronization Type	Composite/Separate/Digital
Input Connector		15-pin D-Sub type, HDMI (Digital), S-Video, Composite Video, Component, RS-232C, LAN
Environmental Conditions	Operational Condition Storage Condition	Temperature: $0^{\circ}\text{C} \sim 40^{\circ}\text{C}$, Humidity: $10\% \sim 80\%$ Temperature: $-20^{\circ}\text{C} \sim 60^{\circ}\text{C}$, Humidity: $5\% \sim 90\%$

* Applicable only for models that support the speakers

Audio RMS Audio Output Input Sensitivity Speaker Impedance	10W+10W(R+L) 0.7Vrms 8Ω
--	-------------------------------

NOTE

Information in this document is subject to change without notice.

Specifications

PC Mode - Preset Mode

F	Preset mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	F	Preset mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)
1 2 *3 4 *5 6 7 *8 9	640 x 350 720 x 400 640 x 480 640 x 480 800 x 600 800 x 600 832 x 624 1024 x 768 1024 x 768 1280 x 720	31.469 31.468 31.469 37.5 37.879 46.875 49.725 48.363 60.123 44.772	70.8 70.8 59.94 75 60.317 75 74.55 60 75.029 59.855	*11 *12 *13 *14 15 *16 *17	1280 x 768 1360 x 768 1366 x 768 1280 x 1024 1280 x 1024 1680 x 1050 1920 x 1080	47.7 47.72 47.7 63.981 79.98 65.290 67.5	60 59.799 60 60.02 75.02 59.954 60

1~17: RGB Mode
*: HDMI/DVI mode

DTV Mode

	Component	HDMI/DVI(DTV)
480i	0	x
576i	0	x
480p	0	o
576p	0	o
720p	0	o
1080i	0	o
1080p	0	0

Power Indicator

Mode	Product
On Mode	Green
Sleep Mode	Amber
Off Mode	-

NOTE

■ DTV/PC selection on RGB and HDMI/DVI inputs is available for PC resolutions : 640 X 480/60Hz, 1280 X 720/60Hz, 1920 X 1080/60Hz and DTV resolutions : 480p, 720p, 1080p.


Controlling the Multiple Product

Use this method to connect several products to a single PC. You can control several products at a time by connecting them to a single PC.

Connecting the cable

Connect the RS-232C cable as shown in the picture.

* The RS-232C protocol is used for communication between the PC and product. You can turn the product on/off, select an input source or adjust the OSD menu from your PC.

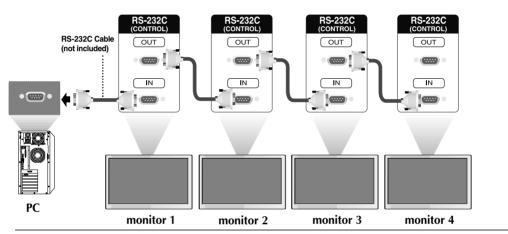

RS-232C Configurations

7-Wire Co	nfigurations (Standard RS-23	32C cable)
	PC	Monitor	
RXD TXD GND DTR DSR RTS CTS	2	3 2 5 6 4 8 7	TXD RXD GND DSR DTR CTS RTS
	D-Sub 9 (Female)	D-Sub 9 (Female)	

3-Wi	ire Configur	ations (Not Stand	ard)
	PC	Monitor	
RXD TXD GND DTR DSR RTS CTS	2 •— 3 •— 5 •— 4 6 7	3 2 5 6 4 7	TXD RXD GND DTR DSR RTS CTS
	D-Sub 9 (Female)	D-Sub 9 (Female)	

Communication Parameter

▶ Baud Rate : 9600buad Rate (UART)

▶ Data Length : 8bits
▶ Parity Bit : None
▶ Stop Bit : 1bit
▶ Flow Control : None

▶ Communication Code : ASCII code▶ Use a crossed (reverse) cable

Controlling the Multiple Product

Command Reference List

01. Power		COMMAND2	DATA1	DATA2	DATA3
01.1 OWG	k	а	00H - 01H		
02. Input Select	k	b	02H - 09H		
03. Aspect Ratio	k	С	01H - 09H		
04. Screen Mute	k	d	00H - 01H		
05. Volume Mute	k	е	00H - 01H		
06. Volume Control	k	f	00H - 64H		
07. Contrast	k	g	00H - 64H		
08. Brightness	k	h	00H - 64H		
09. Color	k	i	00H - 64H		
10. Tint	k	j	00H - 64H		
11. Sharpness	k	k	00H - 64H		
12. OSD Select	k	I	00H - 01H		
13. Remote Lock/ key Lock	k	m	00H - 01H		
14. Balance	k	t	00H - 64H		
15. Color Temperature	k	u	00H - 03H		
16. Abnormal state	k	Z	FFH		
17. ISM mode	j	р	00H - 10H		
18. Auto configuration	į	u u	01H		
19. Key	m	С	Key Code		
20. Tile Mode	d	d	00Ĥ - 55H		
21. Tile H Position	d	е	00H - 64H		
22. Tile V Position	d	f	00H - 64H		
23. Tile H Size	d	g	00H - 64H		
24. Tile V Size	d	h	00H - 64H		
25. Tile ID Set	d	i :	00H - 19H		
26. Natural Mode (In Tile mode) 27. Picture mode(PSM)	d d	j	00H - 01H 00H - 06H		
28. Sound mode	d d	X	00H - 06H		
29. Fan Fault check	d	y w	FFH		
30. Elapsed time return	d	Ĭ	FFH		
31. Temperature value	ď	n n	FFH		
32. Lamp fault check	ď	p	FFH		
33. Auto Volume	d	u	00H - 01H		
34. Speaker	d	V	00H - 01H		
35. Time	f	a	00H - 06H	00H - 17H	00 - 3BH
36. On Timer (On/Off Timer) On, Off	f	b	00H, FFH	00H - FFH	00 00
37. Off Timer (On/Off Timer) On, Off	f	C	00H, FFH	00H - FFH	
38. On Timer (On/Off Timer) Time	f	d	00H - 07H	00H - 17H	00 - 3BH
39. Off Timer (On/Off Timer) Time	f	е	00H - 07H	00H - 17H	00 - 3BH
40. Sleep Time	f	f	00H - 08H		
41. Auto Sleep	f	g	00H - 01H		
42. Power On Delay	f	h	00H - 64H		
43. Language	f	į :	00H - 09H		
44. DPM Select	f	J	00H - 01H		
45. Reset	f	k	00H - 02H		

Controlling the Multiple Product

	COMMAND1	COMMAND2	DATA1	DATA2	DATA3
46. Power Saving 47. Power Indicator 48. H Position 49. V Position 50. H Size 51. V Size 52. Scheduling input select 53. Serial no. 54. S/W Version 55. Input Select	COMMAND1 f f f f f f f f x	COMMAND2 I O q r s t u y z b	DATA1 00H - 03H 00H - 01H 00H - 64H 00H - 64H 00H - 64H 00H - 64H 20H - 64H 00H - 64H 00H - 64H 00H - 64H 00H - 64H	DATA2 OOH - FEH	DATA3

Controlling the Multiple Product



Transmission / Receiving Protocol

Transmission

[Command1][Command2][][Set ID][][Data][Cr]

- * [Command 1]: First command. (k, j, m, d, f,x)
- * [Command 2]: Second command.(a ~ u)
- * [Set ID]: Set up the Set ID number of product.

range: 01H~63H. by setting '0', server can control all products.

* In case of operating with more than 2 sets using set ID as '0' at the same time, it should not be checked the ack message.

Because all sets will send the ack message, so it's impossible the check the whole ack messages.

* [DATA]: To transmit command data.

Transmit 'FF' data to read status of command.

* [Cr]: Carriage Return

ASCII code '0x0D'

* []: ASCII code Space (0x20)'

OK Acknowledgement

[Command2][][Set ID][][OK][Data][x]

* The Product transmits ACK (acknowledgement) based on this format when receiving normal data. At this time, if the data is data read mode, it indicates present status data. If the data is data write mode, it returns the data of the PC computer.

Error Acknowledgement

[Command2][][Set ID][][NG][Data][x]

* If there is error, it returns NG

Controlling the Multiple Product

Transmission / Receiving Protocol

01. Power(Command: a)

► To control Power On/Off of the Set.

Transmission

[k][a][][Set ID][][Data][Cr]

Data 0 : Power Off 1 : Power On

Acknowledgement

[a][][Set ID][][OK][Data][x]

▶To show the status of Power On/Off.

Transmission

[k][a][][Set ID][][FF][Cr]

Acknowledgement

[a][][Set ID][][OK][Data][x]

Data 0 : Power Off 1 : Power On

02. Input Select (Command : b) (Main Picture Input)

▶ To select input source for the Set.

You can also select an input source using the INPUT button on the remote control.

Transmission

[k][b][][Set ID][][Data][Cr]

Data 2: AV

4: Component

7: RGB (PC)

8: HDMI (DTV)

9: HDMI (PC)

<u>Acknowledgement</u>

[b][][Set ID][][OK][Data][x]

Data 2: AV

4: Component

7: RGB (PC)

8: HDMI (DTV)

9: HDMI (PC)

Controlling the Multiple Product

Transmission / Receiving Protocol

03. Aspect Ratio(Command : c) (Main picture format)

▶ To adjust the screen format.

You can also adjust the screen format using the ARC (Aspect Ratio Control) button on remote control or in the Screen menu.

Transmission

[k][c][][Set ID][][Data][Cr]

Data 1: Normal Screen (4:3)

2: Wide Screen (16:9)

4: Zoom1 (AV)

5 : Zoom2 (AV)

6 : Original (AV) 7 :14:9 (AV)

9: Just Scan(HD DTV), 1:1 (RGB PC, HDMI/DVI PC)

Acknowledgement

[c][][Set ID][][OK][Data][x]

04. Screen Mute(Command : d)

To select screen mute on/off.

Transmission

[k][d][][Set ID][][Data][Cr]

Data 0 : Screen mute off (Picture on)

1: Screen mute on (Picture off)

Acknowledgement

[d][][Set ID][][OK][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

05. Volume Mute(Command: e)

▶ To control On/Off of the Volume Mute.

Transmission

[k][e][][Set ID][][Data][Cr]

Data 0 : Volume Mute On (Volume Off) 1 : Volume Mute Off (Volume On)

Acknowledgement

[e][][Set ID][][OK][Data][x]

Data 0 : Volume Mute On (Volume Off) 1 : Volume Mute Off (Volume On)

06. Volume Control(Command: f)

► To adjust Volume .

Transmission

[k][f][][Set ID][][Data][Cr]

Data Min: 00H ~ Max: 64H (Hexadecimal code)

Acknowledgement

[f][][Set ID][][OK][Data][x]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' page A8.

Controlling the Multiple Product

Transmission / Receiving Protocol

07. Contrast(Command: g)

► To adjust screen contrast.

You can also adjust the contrast in the Picture menu.

Transmission

[k][g][][Set ID][][Data][Cr]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' as shown below.

Acknowledgement

[g][][Set ID][][OK][Data][x]

* Real data mapping

0: Step 0

A : Step 10

:

F : Step 15

10 : Step 16

64: Step 100

08. Brightness(Command : h)

► To adjust screen brightness.

You can also adjust the brightness in the Picture menu.

Transmission

[k][h][][Set ID][][Data][Cr]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' as shown below.

Acknowledgement

[h][][Set ID][][OK][Data][x]

* Real data mapping

0 : Step

A : Step 10

F : Step 15

10 : Step 16

. 64 : Step 100

Controlling the Multiple Product

T

Transmission / Receiving Protocol

09. Color(Command : i) (Video Timing only)

▶ To adjust the screen color.

You can also adjust the color in the Picture menu.

Transmission

[k][i][][Set ID][][Data][Cr]

Data Min: 00H ~ Max: 64H (Hexadecimal code)

• Refer to 'Real data mapping' page A8.

Acknowledgement

[i][][Set ID][][OK][Data][x]

Data Min: 00H ~ Max: 64H

10. Tint(Command : j) (Video Timing only)

▶ To adjust the screen tint.

You can also adjust the tint in the Picture menu.

Transmission

[k][j][][Set ID][][Data][Cr]

Data Red: 00H ~ Green: 64H (Hexadecimal code)

• Refer to 'Real data mapping' page A8.

<u>Acknowledgement</u>

[i][][Set ID][][OK][Data][x]

Data Red: 00H ~ Green: 64H

* Tint Real data mapping

0: Step 0 - Red

•

64: Step 100 - Green

Controlling the Multiple Product

Transmission / Receiving Protocol

11. Sharpness(Command: k) (Video Timing only)

▶ To adjust the screen Sharpness.

You can also adjust the sharpness in the Picture menu.

Transmission

[k][k][][Set ID][][Data][Cr]

Data Min: 00H ~ Max: 64H

(Hexadecimal code)

• Refer to 'Real data mapping' page A8.

<u>Acknowledgement</u>

[k][][Set ID][][OK][Data][x]

Data Min: 00H ~ Max: 64H

12. OSD Select(Command: I)

▶ To control OSD on/off to the set.

Transmission

[k][I][][Set ID][][Data][Cr]

Data 0: OSD Off 1: OSD On

Acknowledgement

[I][][Set ID][][OK][Data][x]

Data 0: OSD Off 1: OSD On

13. Remote Lock /Key Lock (Command : m)

➤ To control Remote Lock on/off to the set.

This function, when controlling RS-232C, locks the remote control and the local keys.

Transmission

[k][m][][Set ID][][Data][Cr]

Data 0: Off 1: On

<u>Acknowledgement</u>

[m][][Set ID][][OK][Data][x]

Data 0 : Off 1 : On

Controlling the Multiple Product

Transmission / Receiving Protocol

14 Balance(Command:t)

▶ To adjust the sound balance.

Transmission

[k][t][][Set ID][][Data][Cr]

Data Min: 00H ~ Max: 64H

(Hexadecimal code)

• Refer to 'Real data mapping' page A8.

Acknowledgement

[t][][Set ID][][OK][Data][x]

Data Min: 00H ~ Max: 64H

* Balance : L50 ~ R50

15. Color Temperature (Command : u)

▶ To adjust the screen color temperature.

Transmission

[k][u][][Set ID][][Data][Cr]

Data 0: Medium

1: Cool

2: Warm

3: User

<u>Acknowledgement</u>

[u][][Set ID][][OK][Data][x]

Data 0: Medium

1: Cool

2: Warm

3: User

• Running the Color Temperature command changes the Picture Mode settings to User1.

Controlling the Multiple Product

Transmission / Receiving Protocol

16. Abnormal state (Command : z)

▶ Abnormal State : Used to Read the power off status when Stand-by mode.

Transmission

[k][z][][Set ID][][Data][Cr]

Data FF: Read

0: Normal (Power on and signal exist)

1: No signal (Power on)

2: Turn the monitor off by remote control

3 : Turn the monitor off by sleep time function

4: Turn the monitor off by RS-232C function

8 : Turn the monitor off by off time function

 $\boldsymbol{9}$: Turn the monitor off by auto off function

Acknowledgement

[z][][Set ID][][OK][Data][x]

17. ISM mode(Command: j p)

▶ Used to select the afterimage preventing function.

Transmission

[j][p][][Set ID][][Data][Cr]

Data 1H: Inversion

2H : Orbiter 4H : White Wash

8H : Normal 10H : Dot Wash

Acknowledgement

[p][][Set ID][][OK][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

18. Auto Configure(Command: j u)

► To adjust picture position and minimize image shaking automatically. it works only in RGB(PC) mode.

Transmission

[j][u][][Set ID][][Data][Cr]

Data 1: To set

<u>Acknowledgement</u>

[u][][Set ID][][OK][Data][x]

19. Key(Command: m c)

▶ To send IR remote key code.

Transmission

[m][c][][Set ID][][Data][Cr]

Data Key code: Refer to page A34.

Acknowledgement

[c][][Set ID][][OK][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

20. Tile Mode(Command : d d)

► Change a Tile Mode.

Transmission

[d][d][][Set ID][][Data][x]

Data	Description
00 or 11	Tile mode is off.
12	1 x 2 mode(column x row)
13	1 x 3 mode
14	1 x 4 mode
55	5 x 5 mode

^{*} The data can not be set to 0X or X0 except 00.

Acknowledgement

[d][][00][][OK/NG][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

21. Tile H Position(Command : d e)

▶To set the Horizontal position.

Transmission

[d][e][][Set ID][][Data][x]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' page A8.

Acknowledgement

[e][][Set ID][][OK/NG][Data][x]

22. Tile V Position(Command : d f)

▶To set the Vertical position.

Transmission

[d][f][][Set ID][][Data][x]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' page A8.

<u>Acknowledgement</u>

[f][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

23. Tile H Size(Command : d g)

▶To set the Horizontal size.

Transmission

[d][g][][Set ID][][Data][x]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' page A8.

Acknowledgement

[g][][Set ID][][OK/NG][Data][x]

24. Tile V Size(Command : d h)

▶To set the Vertical size.

Transmission

[d][h][][Set ID][][Data][x]

Data Min: 00H ~ Max: 64H

• Refer to 'Real data mapping' page A8.

<u>Acknowledgement</u>

[h][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

25. Tile ID Set(Command : d i)

▶ To assign the Tile ID for Tiling function .

Transmission

[d][i][][Set ID][][Data][x]

Data Min: 00H ~ Max: 19H (Hexadecimal code)

Acknowledgement

[i][][Set ID][][OK/NG][Data][x]

26 Natural Mode (In Tile mode) (Command: dj)

▶ To assign the Tile Natural mode for Tiling function .

Transmission

[d][j][][Set ID][][Data][x]

Data 0 : Natural Off 1 : Natural On ff : Read Status

<u>Acknowledgement</u>

[j][][Set ID][][OK/NG][Data][x]

27. Picture Mode (Command : d x)

▶ To adjust the picture mode.

Transmission

[d][x][][Set ID][][Data][x]

Data Structure

Data(Hex)	MODE
00	Vivid
01	Standard
02	Cinema
03	Sport
04	Game
05	User1
06	User2

Acknowledgement

[x][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

28. Sound Mode (Command: dy)

▶ To adjust the Sound mode.

Transmission

[d][y][][Set ID][][Data][x]

Data Structure

Data(Hex)	Mode						
00	Clear Voice						
01	Standard						
02	Music						
03	Cinema						
04	sport						
05	Game						
06	User						

Acknowledgement

[y][][Set ID][][OK/NG][Data][x]

29. Fan Fault check (Command : d w)

▶ To check the Fan fault of the TV.

Transmission

[d][w][][Set ID][][Data][x]

* The data is always FF(in Hex).

Data ff: Read Status

<u>Acknowledgement</u>

 $[w][][Set\ ID][][OK/NG][Data][x] \\$

* Data is the status value of the Fan fault.

Data 0: Fan fault

1: Fan OK

2: N/A(Not Avaliable)

Controlling the Multiple Product

Transmission / Receiving Protocol

30. Elapsed time return(Command : d I)

▶ To read the elapsed time.

Transmission

[d][l][][Set ID][][Data][x]

* The data is always FF(in Hex).

Acknowledgement

[I][][Set ID][][OK/NG][Data][x]

* The data means used hours. (Hexadecimal code)

31. Temperature value (Command : d n)

▶ To read the inside temperature value.

Transmission

[d][n][][Set ID][][Data][x]

* The data is always FF(in Hex).

<u>Acknowledgement</u>

[n][][Set ID][][OK/NG][Data][x]

* The data is 1 byte long in Hexadecimal.

32. Lamp fault Check(Command : d p)

▶ To check lamp fault.

Transmission

[d][p][][Set ID][][Data][x]

* The data is always FF(in Hex).

<u>Acknowledgement</u>

[p][][Set ID][][OK/NG][Data][x]

Data 0 : Lamp Fault 1: Lamp OK

Controlling the Multiple Product



33. Auto volume (Command : d u)

▶ Automatically adjust the volume level.

Transmission

[d][u][][Set ID][][Data][x]

Data 0 : Off 1 : On

<u>Acknowledgement</u>

[u][][Set ID][][OK/NG][Data][x]

34. Speaker (Command : d v)

▶ Turn the speaker on or off.

Transmission

[d][v][][Set ID][][Data][x]

Data 0 : Off 1 : On

<u>Acknowledgement</u>

[v][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product



Transmission / Receiving Protocol

35. Time (Command: fa)

▶ Set the current time.

Transmission

[f][a][][Set ID][][Data1][][Data2][][Data3][Cr]

[Data1]

- 0 : Monday
- 1: Tuesday
- 2: Wednesday
- 3 : Thursday
- 4 : Friday
- 5 : Saturday
- 6: Sunday

[Data2]

0H~17H (Hours)

[Data3]

00H~3BH (Minutes)

Acknowledgement

[a][][Set ID][][OK/NG][Data1][Data2][Data3][x]

*When reading data, FFH is inputted for [Data1], [Data2] and [Data3]. In other cases, all are treated as NG.

Controlling the Multiple Product

Transmission / Receiving Protocol

36. On Timer (On/Off Timer) On, Off (Command: Fb)

▶ Set days for On Timer.

Transmission

[f][b][][Set ID][][Data1][][Data2][Cr]

[Data1] 0 (Write), FFH(Read)

[Data2] 00H~FFH

bit0: Monday On Timer On(1), Off(0)
bit1: Tuesday On Timer On(1), Off(0)
bit2: Wednesday On Timer On(1), Off(0)
bit3: Thursday On Timer On(1), Off(0)
bit4: Friday On Timer On(1), Off(0)
bit5: Saturday On Timer On(1), Off(0)
bit6: Sunday On Timer On(1), Off(0)
bit7: Everyday On Timer On(1), Off(0)

Acknowledgement

[b][][Set ID][][OK/NG][Data1][Data2][x]

37. Off Timer (On/Off Timer) On, Off (Command : f c)

▶ Set days for Off Timer.

Transmission

[f][c][][Set ID][][Data1][][Data2][Cr]

[Data1]

0 (Write), FFH(Read)

[Data2] 00H~FFH

bit0: Monday Off Timer On(1), Off(0) bit1: Tuesday Off Timer On(1), Off(0) bit2: Wednesday Off Timer On(1), Off(0) bit3: Thursday Off Timer On(1), Off(0) bit4: Friday Off Timer On(1), Off(0) bit5: Saturday Off Timer On(1), Off(0) bit6: Sunday Off Timer On(1), Off(0)

bit7: Everyday Off Timer On(1), Off(0)

<u>Acknowledgement</u>

[c][][Set ID][][OK/NG][Data1][Data2][x]

^{*} Ignore from bit6 to bit0 when bit7(Everyday) is 1.



^{*} Ignore from bit6 to bit0 when bit7(Everyday) is 1.

Controlling the Multiple Product



38. On Timer (On/Off Timer) Time (Command : f d)

▶ Set On Timer.

Transmission

[f][d][][Set ID][][Data1][][Data2][Data3][Cr]

[Data1]

- 0: Monday
- 1: Tuesday
- 2: Wednesday
- 3: Thursday
- 4 : Friday
- 5: Saturday
- 6: Sunday
- 7: Everyday

[Data2]

00H~17H (Hours)

[Data3]

00H~3BH (Minutes)

Acknowledgement

[d][][Set ID][][OK/NG][Data1][Data2][Data3][x]

*When reading data, FFH is inputted for [Data2], [Data3]. In other cases, all are treated as NG.

Controlling the Multiple Product



Transmission / Receiving Protocol

39. Off Timer (On/Off Timer) Time (Command : f e)

▶ Set Off Timer.

Transmission

[f][e][][Set ID][][Data1][][Data2][][Data3][Cr]

[Data1]

- 0: Monday
- 1: Tuesday
- 2: Wednesday
- 3: Thursday
- 4: Friday
- 5 : Saturday
- 6: Sunday
- 7: Everyday

[Data2]

00H~17H (Hours)

[Data3]

00H~3BH (Minutes)

Acknowledgement

[e][][Set ID][][OK/NG][Data1][Data2][Data3][x]

^{*}When reading data, FFH is inputted for [Data2], [Data3]. In other cases, all are treated as NG.

Controlling the Multiple Product



40. Sleep Time (Command: ff)

▶ Set Sleep Time.

Transmission

[f][f][][Set ID][][Data][Cr]

Data

- 0: Off
- 1:10
- 2:20
- 3:30
- 4:60
- 5:90
- 6:120
- 7:180
- 8:240

(Orderly)

Acknowledgement

[f][][Set ID][][OK/NG][Data][x]

41. Auto Sleep (Command: fg)

▶ Set Auto Sleep.

Transmission

[f][g][][Set ID][][Data][Cr]

Data 0 : Off

1: On

Acknowledgement

[g][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product

Transmission / Receiving Protocol

42. Power On Delay (Command: fh)

▶ Set the schedule delay when the power is turned on (Unit: second).

Transmission

[f][h][][Set ID][][Data][Cr]

Data: 00H ~ 64H (Data value)

• Refer to 'Real data mapping' page A8.

Acknowledgement

[h][][Set ID][][OK/NG][Data][x]

43. Language (Command: fi)

▶ Set the OSD language.

Transmission

[f][i][][Set ID][][Data][Cr]

Data

- 0: English
- 1: French
- 2: German
- 3: Spanish
- 4: Italian
- 5 : Portuguese
- 6 : Chinese
- 7: Japanese
- 8: Korean
- 9: Russian

<u>Acknowledgement</u>

[i][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product



Transmission / Receiving Protocol

44. DPM Select (Command: fj)

▶ Set the DPM (Display Power Management) function.

Transmission

[f][j][][Set ID][][Data][Cr]

Data 0 : Off

1: On

Acknowledgement

[j][][Set ID][][OK/NG][Data][x]

45. Reset (Command: fk)

▶ Execute the Picture, Screen and Factory Reset functions.

Transmission

[f][k][][Set ID][][Data][Cr]

Data

0: Picture Reset

1: Screen Reset

2: Factory Reset

Acknowledgement

[k][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product



46. Power saving(Command: fl)

▶ To set the Power saving mode.

Transmission

[f][I][][Set ID][][Data][Cr]

Data 0: Off

1: (static level 1)

2: (static level 2)

3: (static level 3)

Acknowledgement

[I][][Set ID][][OK/NG][Data][x]

47. Power Indicator (Command : f o)

▶ To set the LED for Power Indicator

Transmission

[f][o][][Set ID][][Data][Cr]

Data 0 : Off 1: On

Acknowledgement

[o][][Set ID][][OK/NG][Data][x]

48. H Position (Command: f q)

▶ To set the Horizontal position

Transmission

[f][q][][Set ID][][Data][Cr]

- * The data range is from 00 to 64(in Hex)
- Refer to 'Real data mapping' page A8.

Acknowledgement

[q][][Set ID][][OK/NG][Data][x]

Controlling the Multiple Product



Transmission / Receiving Protocol

49. V Position (Command: fr)

▶ To set the Horizontal position

Transmission

[f][r][][Set ID][][Data][Cr]

- * The data range is from 00 to 64(in Hex)
- Refer to 'Real data mapping' page A8.

Acknowledgement

[r][][Set ID][][OK/NG][Data][x]

50. H Size (Command: fs)

▶ To set the Horizontal size.

Transmission

[f][s][][Set ID][][Data][Cr]

- * The data range is from 00 to 64(in Hex)
- Refer to 'Real data mapping' page A8.

Acknowledgement

[s][][Set ID][][OK/NG][Data][x]

* H Size Real Data Mapping

[Data1]

0x00: Step 0

0x0A: Step 10

0x14: Step 20

0x1E: Step 30

0x28: Step 40

0x32: Step 50

0x3C: Step 60

0x46: Step 70

0x50: Step 80

0x5A: Step 90

0x64: Step 100

Controlling the Multiple Product

Transmission / Receiving Protocol

51. V Size (Command: ft)

▶ To set the Vertical size

Transmission

[f][t][][Set ID][][Data][Cr]

- * The data range is from 00 to 64(in Hex)
- Refer to 'Real data mapping' page A8.

Acknowledgement

[t][][Set ID][][OK/NG][Data][x]

* V Size Real Data Mapping

[Data1]

0x00: Step 0

0x0A: Step 10

0x14: Step 20

0x1E: Step 30

0x28: Step 40

0x32: Step 50

0x3C: Step 60

0x46: Step 70

0x50: Step 80

0x5A: Step 90

0x64: Step 100

Controlling the Multiple Product

Transmission / Receiving Protocol

52. Scheduling Input select (Command: f u) (Main Picture Input)

▶ To select input source for TV depending on day.

Transmission

[f][u][][Set ID][][Data1][][Data2][Cr]

Data 1 Structure

Min: 0~Max:7(0:Monday, 1: Tuesday, 2: Wednesday, 3: Thursday, 4: Friday 5: Saturday, 6: Sunday, 7: Everyday)

Data 2 Structure

Data(Hex)	INPUT
02	AV
04	Component
07	RGB-PC
08	HDMI/DVI-DTV
09	HDMIDVI-PC
FE	No change

Acknowledgement

[u][][Set ID][][OK/NG][Data 1][Data 2][x]

53. Serial no.Check (Command: fy)

► To read the serial numbers

Transmission

[f][y][][Set ID][][Data][Cr]

Data FF (to read the serial numbers)

Acknowledgement

[y][][Set ID][][OK/NG][Data1] ~ [Data13] [x]

^{*} The data format is ASCII Code.

Controlling the Multiple Product



54. S/W Version (Command: fz)

▶ Check the software version.

Transmission

[f][z][][Set ID][][Data][Cr]

Data FFH: Read

<u>Acknowledgement</u>

[z][][Set ID][][OK/NG][Data][x]

55. Input Select (Command: x b)

▶ To select input source for the Set.

Transmission

[x][b][][Set ID][][Data][Cr]

Data 20H: AV

40H: Component 60H: RGB (PC) 90H: HDMI/DVI (DTV) A0H: HDMI/DVI (PC)

Acknowledgement

[b][][Set ID][][OK][Data][x]

Data 20H: AV

40H: Component 60H: RGB (PC) 90H: HDMI/DVI (DTV) A0H: HDMI/DVI (PC)

IR Codes

 
How to connect

▶ Connect your wired remote control to Remote Control port on the Product.

Remote Control IR Code

▶ Output waveform

single pulse, modulated with 37.917KHz signal at 455KHz



▶ Configuration of frame


• 1st frame


Lead code	- 1	Low custom code				High custom code								Data code						İ	Data code												
		C0	C1	C2	СЗ	C4	C5	C6	C7	C0	C1	C2	СЗ	C4	C5	C6	C7	D0	D1	D2 I	23	D4	D5 [)6 I	D7 İ	D0 [D1	D2	DЗ	D4	D5	D6 [)7

· Repeat frame




  ▶ Lead code





▶ Bit description

 

Frame interval : Tf

• The waveform is transmitted as long as a key is depressed.



IR Codes

Code(Hex)	Function	Note
00	A	R/C Button
01	▼	R/C Button
02	VOL(▶)	R/C Button
03	VOL(∢)	R/C Button
08	POWER ON/OFF	R/C Button (Power On/Off)
C4	POWER ON	Discrete IR Code(Only Power On)
C5	POWER OFF	Discrete IR Code(Only Power Off)
09	MUTE	R/C Button
98	AV	R/C Button
0B	INPUT	R/C Button
0E	SLEEP	R/C Button
43	MENU	R/C Button
5B	EXIT	R/C Button
6E	PSM	R/C Button
44	SET	R/C Button
10	Number Key 0	R/C Button
11	Number Key 1	R/C Button
12	Number Key 2	R/C Button
13	Number Key 3	R/C Button
14	Number Key 4	R/C Button
15	Number Key 5	R/C Button
16	Number Key 6	R/C Button
17	Number Key 7	R/C Button
18	Number Key 8	R/C Button
19	Number Key 9	R/C Button
5A	AV	Discrete IR Code(Input AV Selection)
BF	COMPONENT	Discrete IR Code(Input COMPONENT Selection)
D5	RGB PC	Discrete IR Code(Input RGB PC Selection)
C6	HDMI/DVI	Discrete IR Code(Input HDMI/DVI Selection)
79	ARC	R/C Button
76	ARC (4:3)	Discrete IR Code(Only 4:3 mode)
77	ARC (16:9)	Discrete IR Code(Only 16:9 mode)
AF	ARC (ZOOM)	Discrete IR Code(Only ZOOM1, ZOOM2 mode)
99	AUTO CONFIG	Discrete IR Code

CHILD SAFETY:

It Makes A Difference How and Where You Use Your Flat Panel Display

Congratulations on your purchase! As you enjoy your new product, please keep these safety tips in mind:



THE ISSUE

- The home theater entertainment experience is a growing trend and larger flat panel displays are popular purchases. However, flat panel displays are not always supported on the proper stands or installed according to the manufacturer's recommendations.
- Flat panel displays that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests or carts may fall over and cause injury.

THIS MANUFACTURER CARES!

• The consumer electronics industry is committed to making home entertainment enjoyable and safe.

TUNE INTO SAFETY

- One size does NOT fit all. Follow the manufacturer's recommendations for the safe installation and use of your flat panel display.
- Carefully read and understand all enclosed instructions for proper use of this product.
- Don't allow children to climb on or play with furniture and television sets.
- Don't place flat panel displays on furniture that can easily be used as steps, such as a chest of drawers.
- Remember that children can become excited while watching a program, especially on a "larger than life" flat panel display. Care should be taken to place or install the display where it cannot be pushed, pulled over, or knocked down.
- Care should be taken to route all cords and cables connected to the flat panel display so that they cannot be pulled or grabbed by curious children.

WALL MOUNTING: IF YOU DECIDE TO WALL MOUNT YOUR FLAT PANEL DISPLAY, ALWAYS:

- Use a mount that has been recommended by the display manufacturer and/or listed by an independent laboratory (such as UL, CSA, ETL).
- Follow all instructions supplied by the display and wall mount manufacturers.
- If you have any doubts about your ability to safely install your flat panel display, contact your retailer about professional installation.
- Make sure that the wall where you are mounting the display is appropriate.
 Some wall mounts are not designed to be mounted to walls with steel studs or old cinder block construction. If you are unsure, contact a professional installer.
- A minimum of two people are required for installation. Flat panel displays can be heavy.





P/NO: 3840TRL098E (0801-REV00)