 
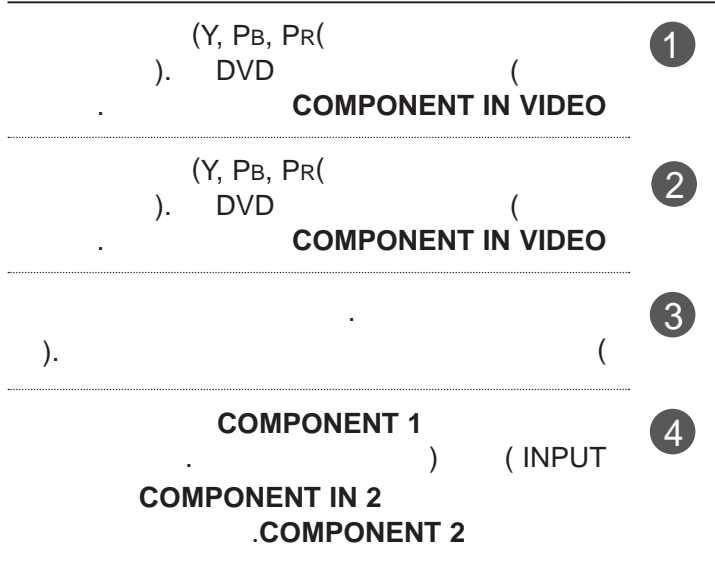 


42/50PJ3\*\*\*

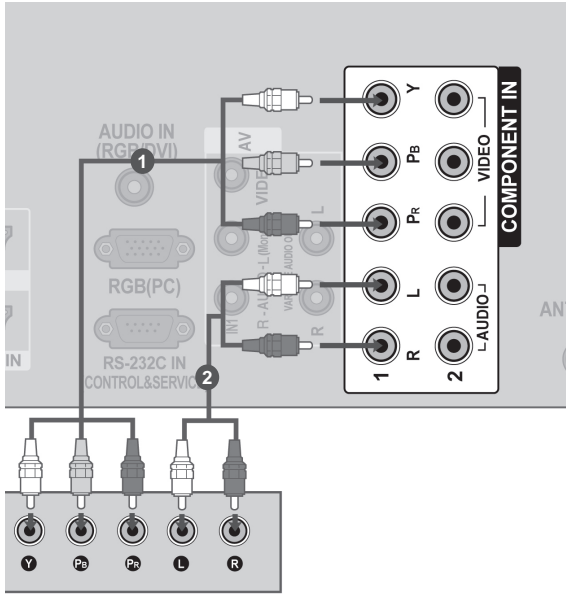


HDMI			
X		O	480i/576i
O		O	480p/576p
O		O	720p/1080i
O		O	1080p
50/30/24( )	60/60( )		

DVD

P <sub>R</sub>	P <sub>B</sub>	Y	
P <sub>R</sub>	P <sub>B</sub>	Y	DVD
R-Y	B-Y	Y	
Cr	Cb	Y	
Pr	Pb	Y	


# HDMI

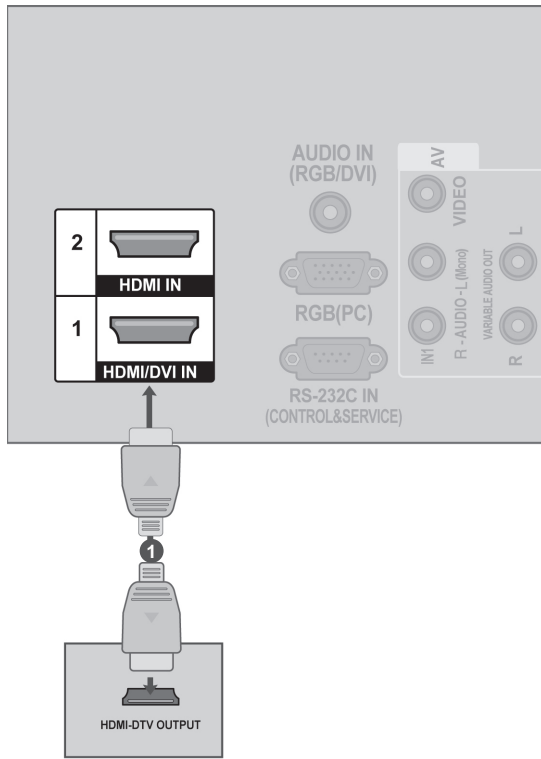 

HDMI/ ( ) DVD	HDMI	1
( HDMI IN 3 HDMI IN 2 (DVI)1 DVI IN	(42/50PJ2***	2
HDMI3 HDMI2 HDMI1	(42/50PJ2***	3
INPUT	) (	


.HDMI	HDMI 1.3	1.3	HDMI	1.3	HDMI	!
.PCM	.STB	DVD	Dolby/DTS/Bitstream	. 10	HDMI	
		)	HDMI( Auto HDMI	DVD		

# DVI HDMI

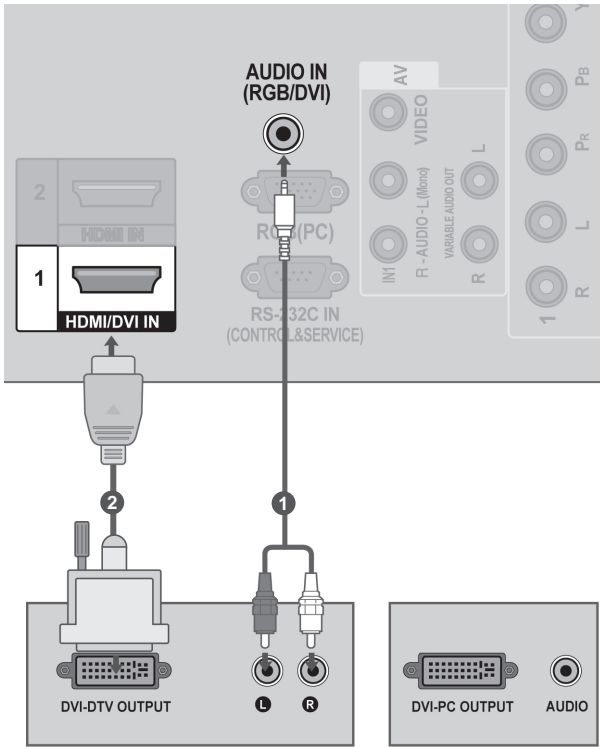 

DVI (DVI)1 HDMI/DVI IN	1
(RGB/DVI) AUDIO IN	2
	3
INPUT HDMI1	4



## USB

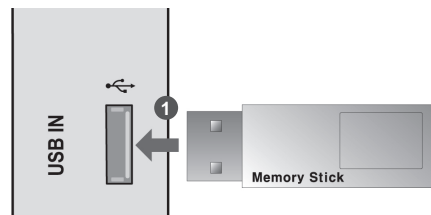 


USB	USB	1
(31. ( .USB	USB	2






# RCA

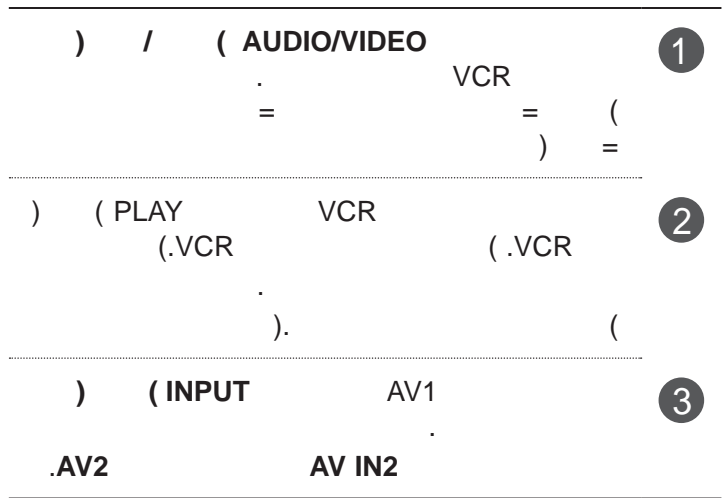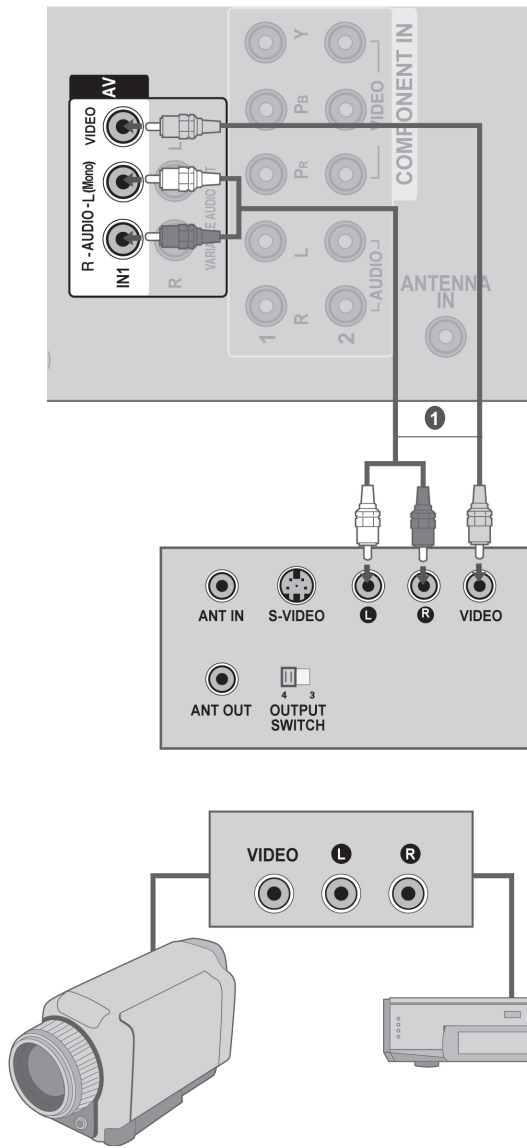  

# RF

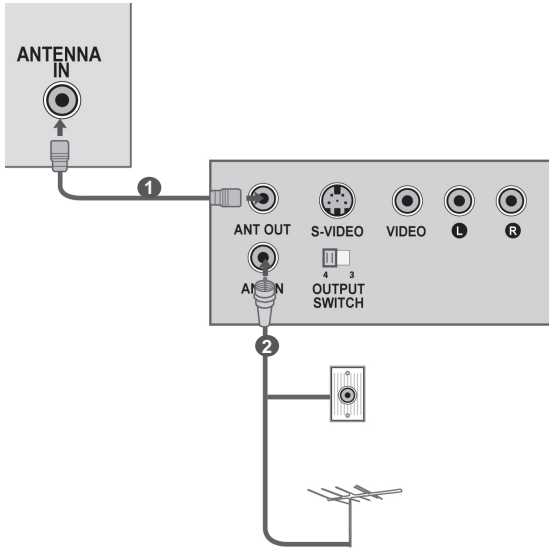 

VCR

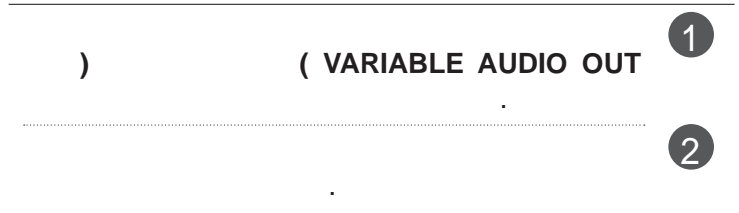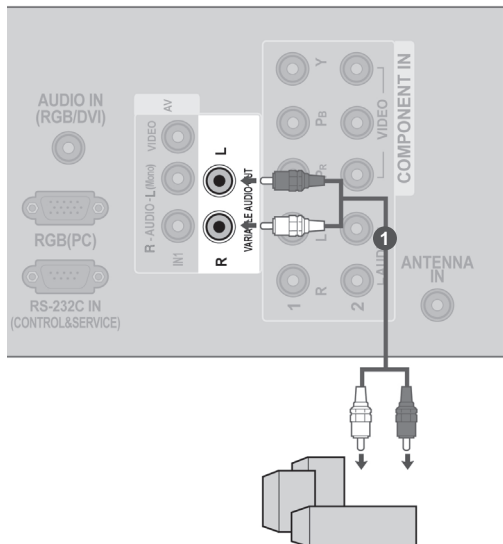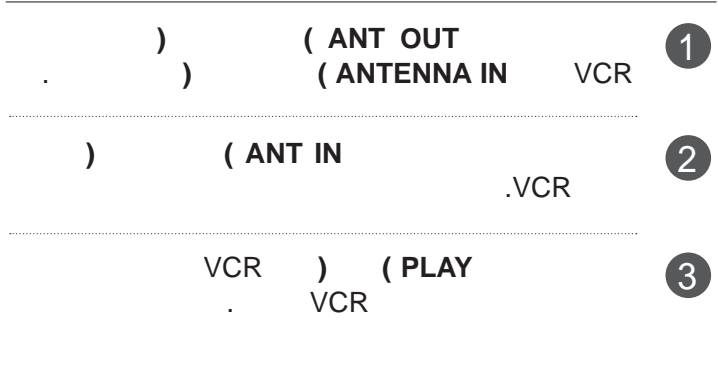   


(67. (

# 15
 
# D-SUB

(42/50PJ2\*\*\*

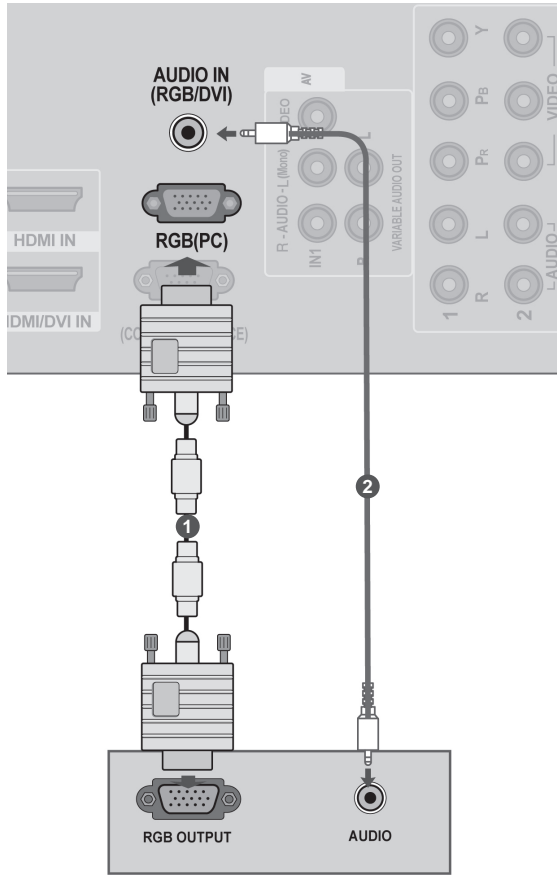

RGB	RGB	1
)	( RGB ( )PC( IN	2
AUDIO IN	)RGB/DVI(	3
)	( INPUT RGB	4

HDMI/DTV

Vertical )Hz(Frequency ) ( )	Horizontal )kHz(Frequency ) ( )	Resolution ) (
59.94	31.47	720x480
60.00	31.50	720x480
50.00	31.25	720x576
59.94	44.96	1280x720
60.00	45.00	1280x720
50.00	37.50	1280x720
59.94	33.72	1920x1080
60.00	33.75	1920x1080
50.00	28.125	1920x1080
59.94	67.432	1920x1080
60.00	67.50	1920x1080
50.00	56.25	1920x1080
24.00	27.00	1920x1080
30.00	33.75	1920x1080

)42/50PJ2\*\*\*

( RGB-PC

Vertical )Hz(Frequency ) ( )	Horizontal )kHz(Frequency ) ( )	Resolution ) (
70.09	31.468	640x350
70.09	31.469	720x400
59.94	31.469	640x480
60.317	37.879	800x600
60.004	48.363	1024x768
59.87	47.776	1280x768
59.799	47.720	1360x768
59.895	63.668	1280x1024
59.934	66.587	1920x1080

50PJ3\*\*\* 50PJ5\*\*\* 50PJ6\*\*\*

50/60PK5\*\*\*

SXGA

RGB-PC

5

)50/60PK5\*\*\* ( 60 1920x1080  
 50PJ5\*\*\* 50PJ3\*\*\* ( 60 1360x768  
 42PJ3\*\*\* ( 60 1024x768 )50PJ6\*\*\*  
 )42PJ6\*\*\* 42PJ5\*\*\*

 
 
(42/50PJ2\*\*\*







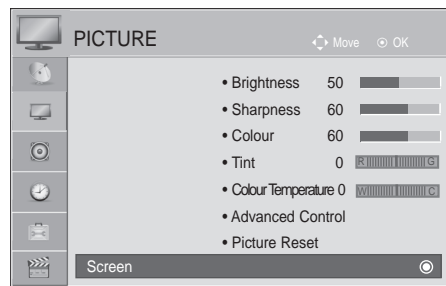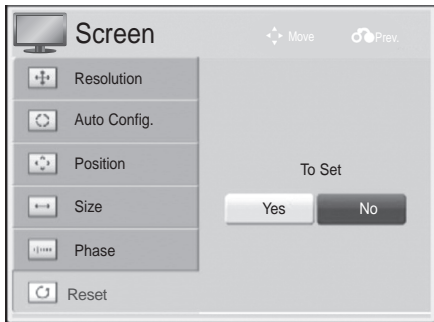


(

)

### ( SCREEN RESET

.RGB )576i 480i ( :

 
 


- .) ( PICTURE   1
- .) ( Screen   2
- .) ( Reset   3
- .) ( Yes   4
- .) ( Reset  5

- ) / ( MENU/EXIT •
- ) ( BACK •

) ] [ RGB (

) ( Auto Configure

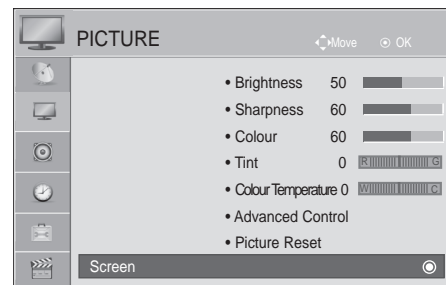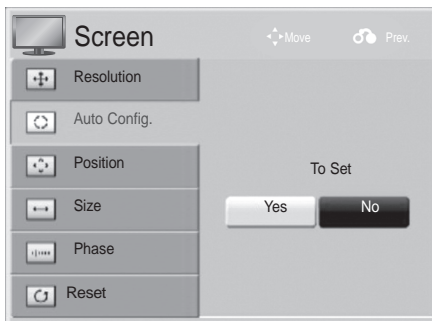

Position ) ( RGB  
 .) ( Phase ) ( Size ) (

) ( PICTURE   1

) ( Screen   2

) (.Auto Config   3

 
 
) ( Yes   4

 
 
 
 

) (.Auto Config  5

) / ( MENU/EXIT •  
 ) ( BACK •

RGB




(1360x768 1280x768 1024x768( RGB[PC] :

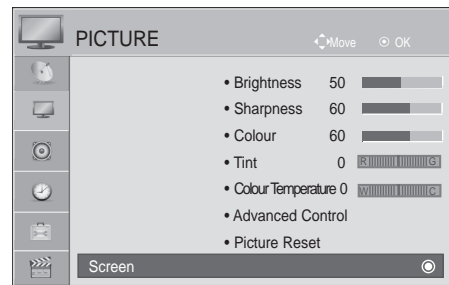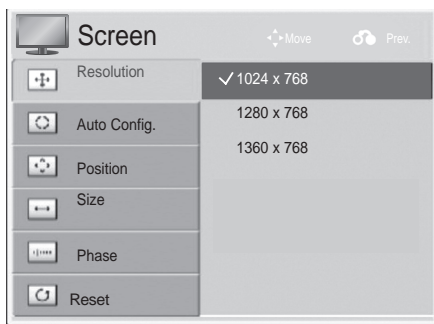

- .) ( PICTURE 
- .) ( Screen 
- .) ( Resolution 
- .) 
- .) 

- ) / ( MENU/EXIT •
- ) ( BACK •

   .(576i 480i ( RGB ) ( Position  
 . RGB ) ( Phase ) ( Size

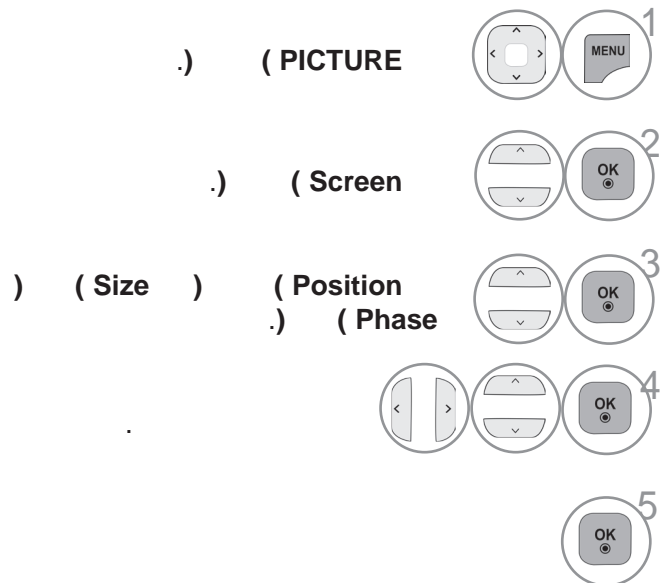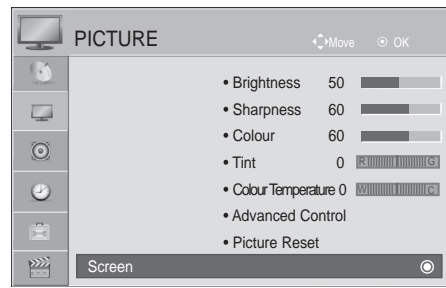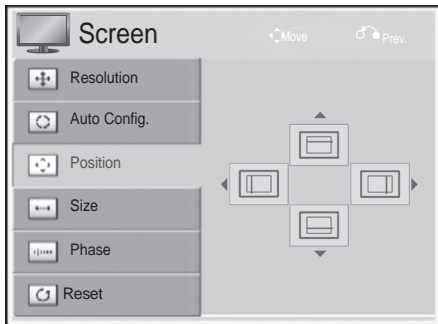

) / ( MENU/EXIT )  
 ) ( BACK )



/

1

P ) ( I, INPUT / ⏻ ) ( NUMBER P ) ( POWER, INPUT

2

) ( Mode Setting ) ( Language ) ( Auto Tuning

1

) ( "Store Demo" ) ( "Home Use" ) ( "Store Demo" ) ( "Store Demo" ) ( Mode Setting ) ( OPTION

) ( NUMBER P 1

- + ▴ 1

) ( MUTE

) ( AV - + ▴ ) ( MUTE

/

( Q.Menu )

( Aspect Ratio • )

( Zoom 14:9 4:3 ) ( Original 16:9 ) / ( Zoom Setting )

( Ratio Menu ) / ( Cinema Zoom )

( Picture Mode • )

( Sound Mode • )

 
( Audio • )

( Sleep Timer • )


( Favourite • )

( USB Eject • )



(42/50PJ2\*\*\* ( .USB ) ( "Eject" : ) USB

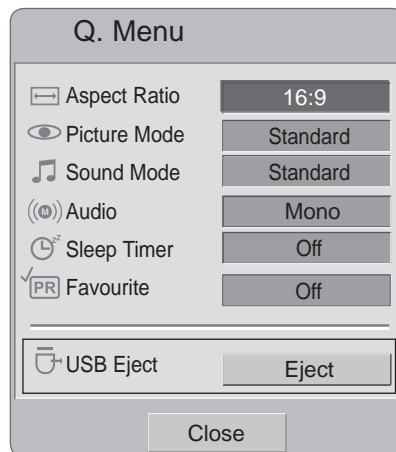

42/50PJ2\*\*\*

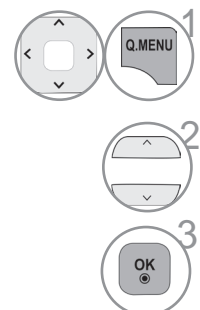 


( Q.MENU )

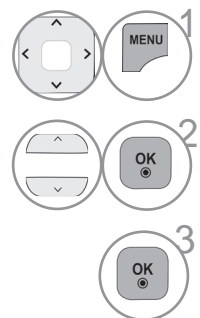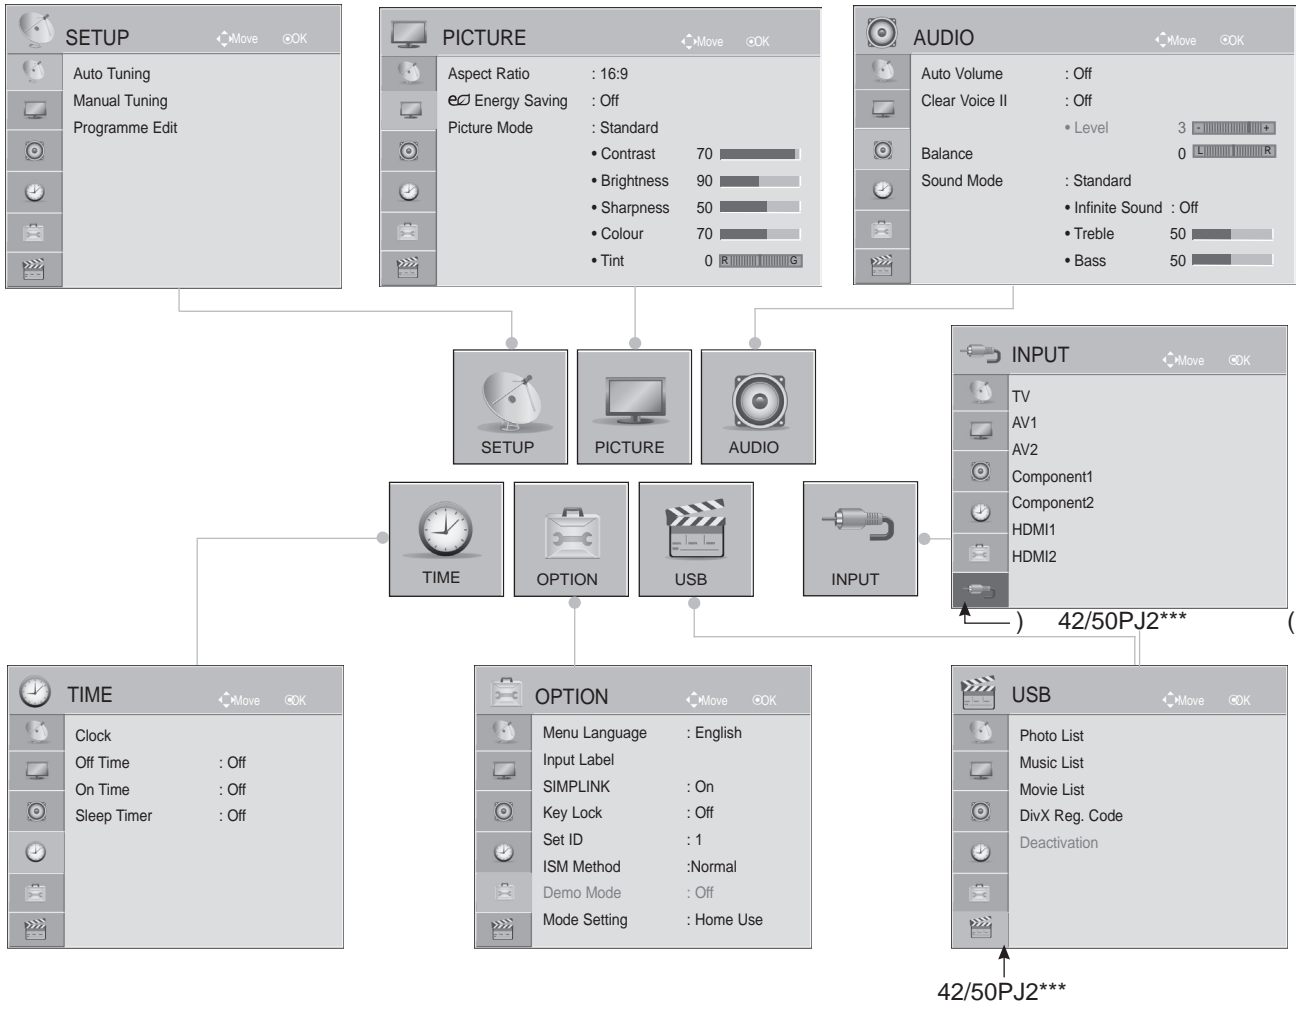  


- ) / ( MENU/EXIT •
- ) ( BACK •

 /




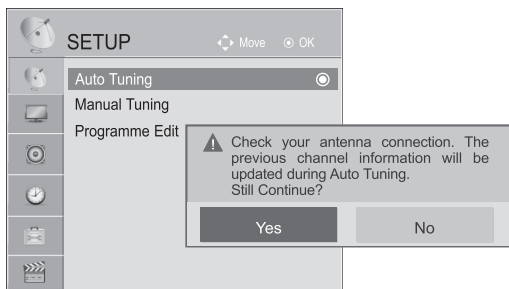


.) ( No ) ( Yes  
 .) ( OK .> <

 .)

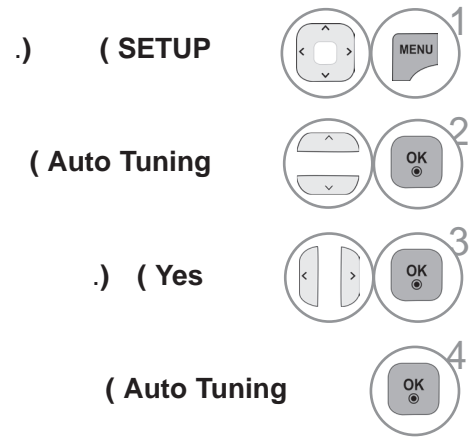






- ) / ( MENU/EXIT •
- ) ( BACK •

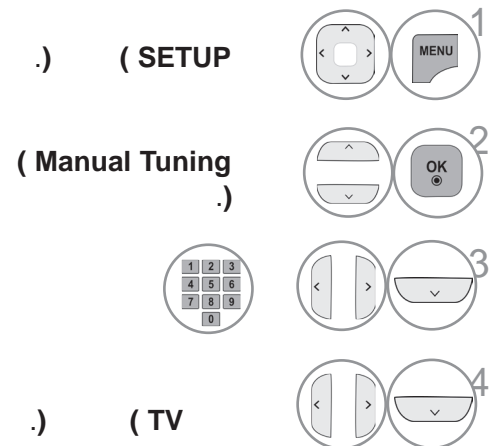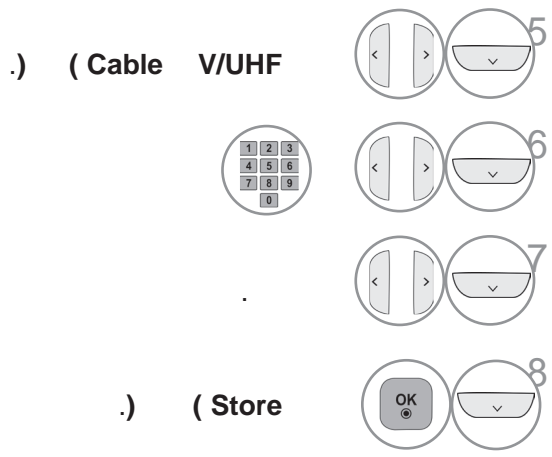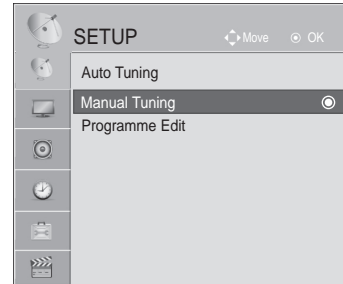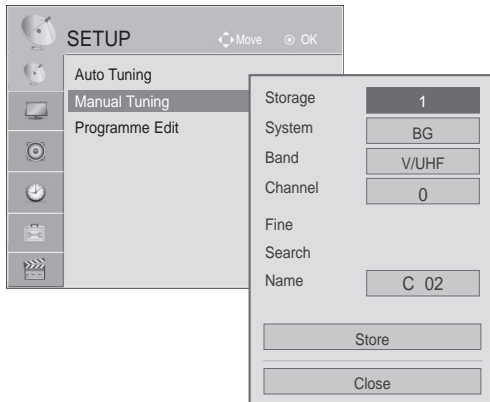    

) ( MENU •  
 ) ( RETURN •

) / / / / / / /	( SECAM B/G PAL B/G : <b>BG</b> •
) / / / / / / /	( PAL I/II : <b>I</b>
( CIS / / / / / / /	( :SECAM D/K PAL D/K : <b>DK</b>
) ( PAL-M ) / / / / / / /	( NTSC-M : <b>M</b>
.8 3	•

     /

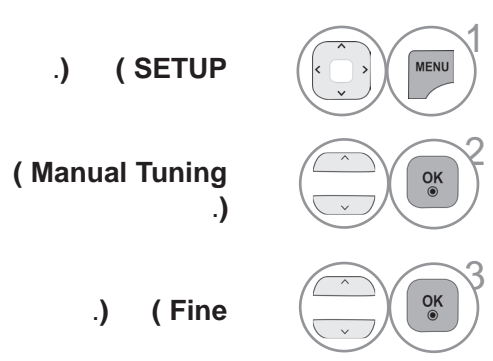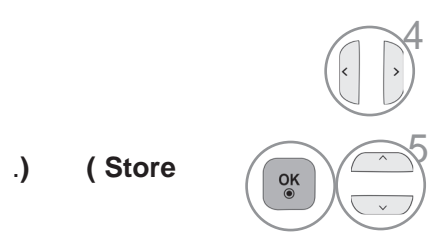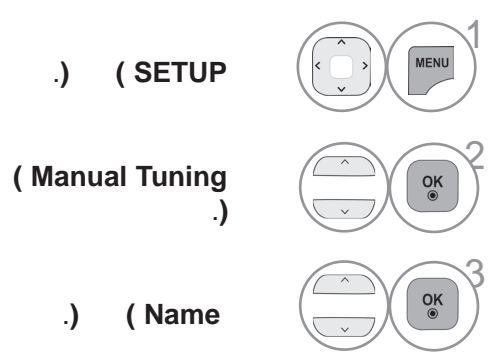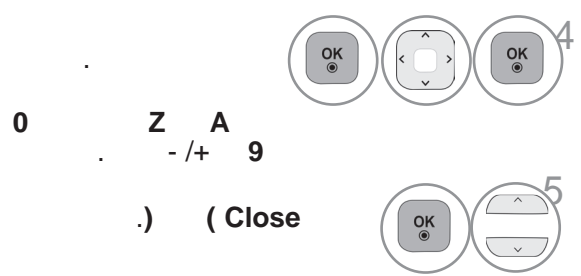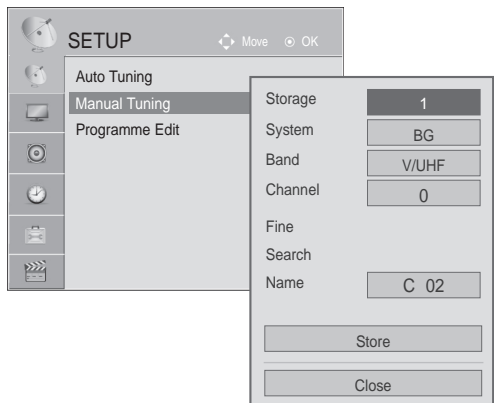

) / ( MENU/EXIT  
) ( BACK

)



# ( PROGRAMME EDIT

  P


Programme

) ( NUMBER


.) ( Edit

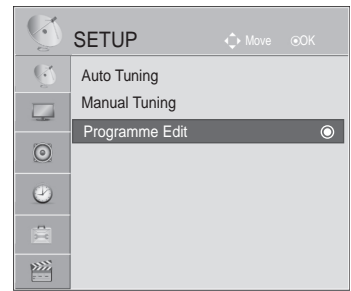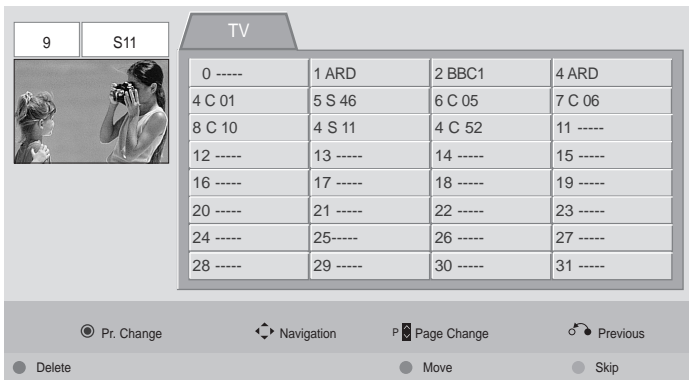

.) ( SETUP

 

.) ( Programme Edit

 


.) ( Programme Edit



) / ( MENU/EXIT  
) ( BACK

/

 ---

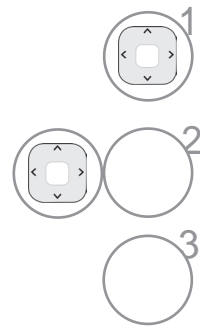

---

P

 
NUMBER

Programme Edit                    ) (

  .) (







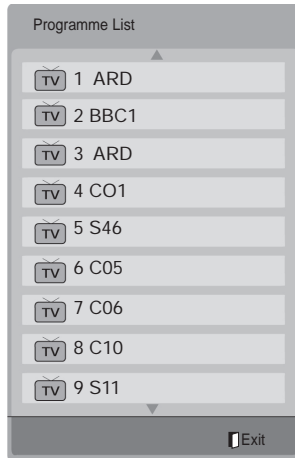


.)

 ( Programme List



/

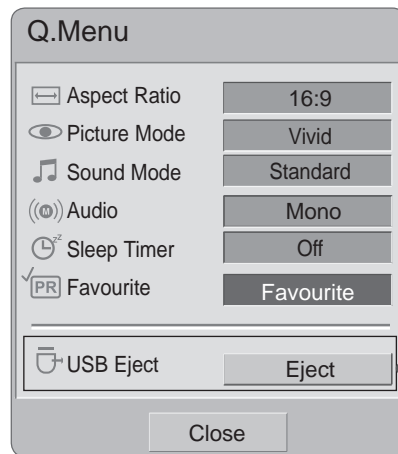 
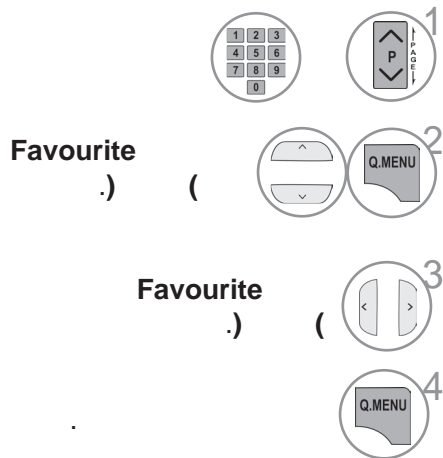 


42/50PJ2\*\*\*




 
 
**Favourite Programme List**  
) (



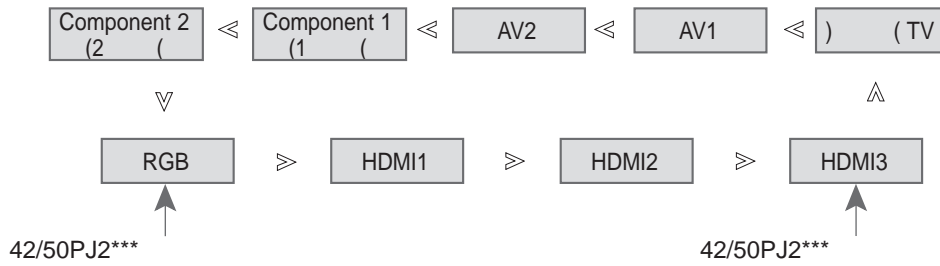

	:	)	( TV •
VCR	:	)	( AV •
DVD	:		Component •
	:		RGB •
DVD	:		HDMI •

   / ) ( INPUT LABEL

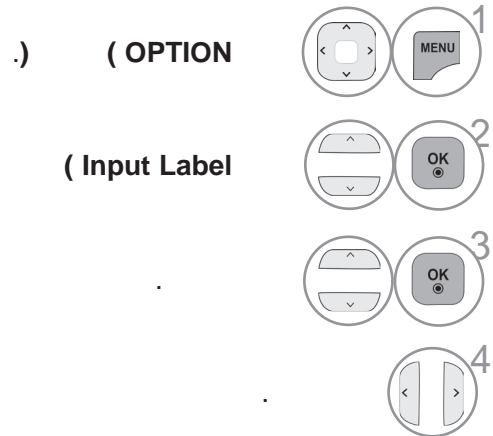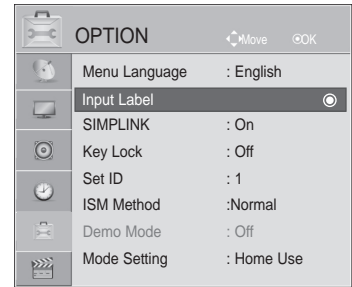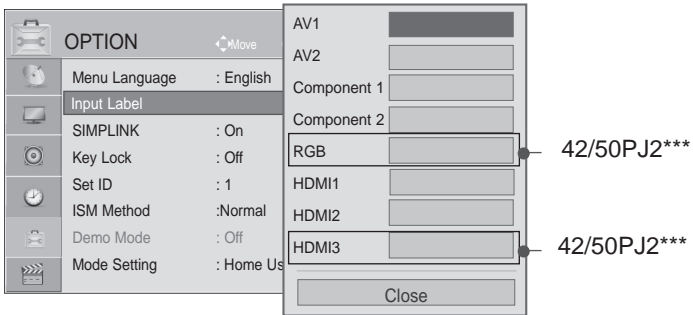

) / ( MENU/EXIT

) ( BACK

# SIMPLINK

.SIMPLINK

.SIMPLINK

.HDMI-CEC

 
 
HDMI

AV


.)

("Off"


SIMPLINK

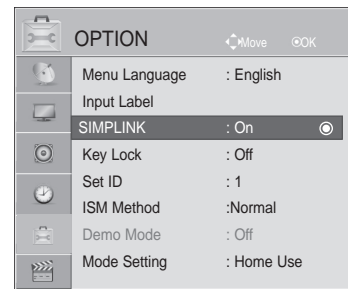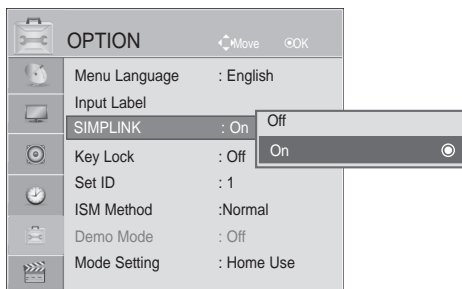

.) ( OPTION

 

.SIMPLINK

 

.)

 
("Off"

( On



- ) / ( MENU/EXIT •
- ) ( BACK •

/

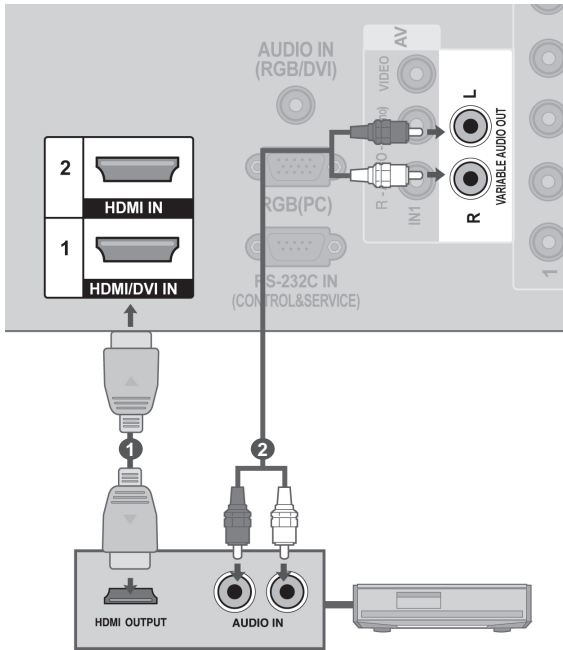**.SIMPLINK**

HDMI IN 2    HDMI/DVI IN 1  
 (42/50PJ2\*\*\*    ( HDMI IN 3  
 HDMI  
 .HDMI

①

②

)    ( Home Theater  
 .SIMPLINK    )    ( Speaker

③

.(HT    (

SIMPLINK    )HDMI    (

HDMI IN    HDMI/DVI IN

.HDMI

)    ( INPUT

.SIMPLINK

)    ( Variable Out

SIMPLINK

!

**SIMPLINK**

) ( Disc playback  
 AV  
 ) ( Direct Play  
 AV  
 ) ( Select AV device  
 AV  
 ) ( Power off all devices  
 ) ( Switch audio-out  
 ) ( Sync Power on  
 HDMI  
 Simplink

**SIMPLINK**      **HDMI**      \*

:CEC\*( .CEC\*      1.3      HDMI      SIMPLINK :

**SIMPLINK**

SIMPLINK      ) ( OK      > <

:) ( TV viewing ①  
 :) ( DISC playback ②  
 VCR : )VCR ( VCR playback ③  
 ( HDD Recordings playback ④  
 :)  
 Audio Out to Home theater/Audio Out to ⑤  
 / ( TV  
 :)

/

 
)

( AV MODE

AV


.AV

- ) ( Off
- ) ( Cinema
- ) ( Sport
- ) ( Game

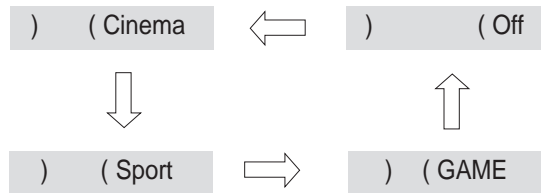

)

 ( AV MODE





Picture	) ( Cinema	AV	) ( Cinema	•
) ( PICTURE	)	( Sound Mode	) ( Mode	
		) ( AUDIO		
		AV	) ("Off"	•




)

(

  
) ( Initial Setting

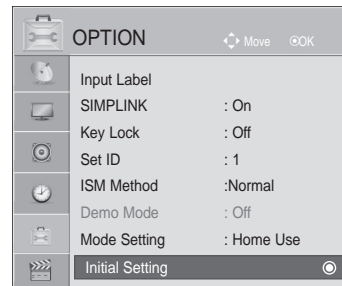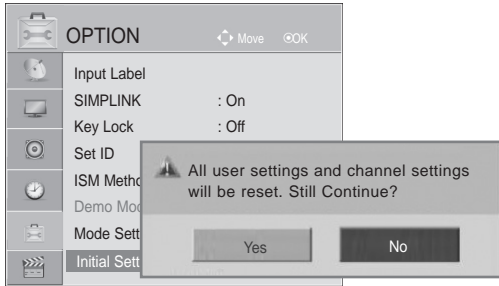


) ( OPTION

 

) ( Initial Setting

 

) ( Yes

 


) ( Initial Reset




) / ( MENU/EXIT

) ( BACK

# / ) ( KEY LOCK

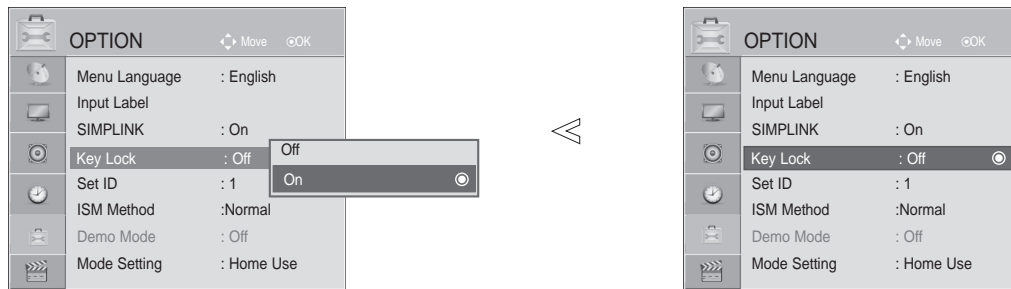 

 P ) ( On ) ( Key Lock •  
 P ) ( INPUT  
 ) ( POWER INPUT ) ( NUMBER  
 Key Lock (X) ' ) ( On •

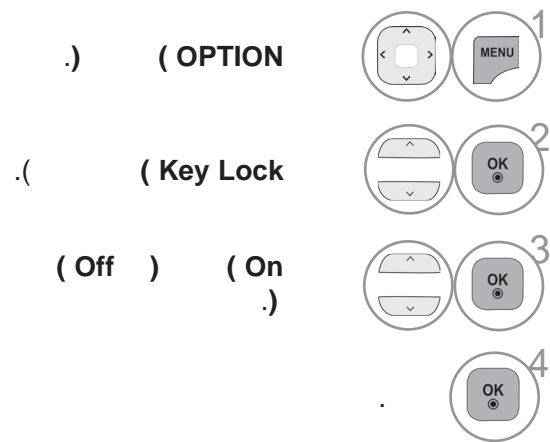

) / ( MENU/EXIT •  
 ) ( BACK •

# USB

.42/50PJ2\*\*\*

USB

# USB

USB

" "

 
 
USB

.SD DivX MP3 JPEG •

USB

USB


1

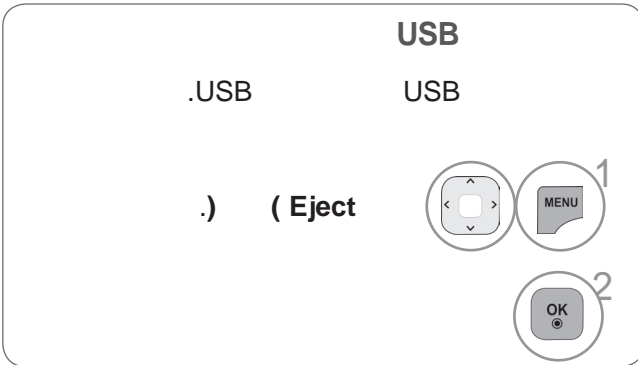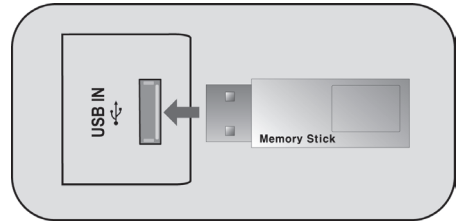

MUSIC )  
MOVIE )


( PHOTO LIST

 ( LIST  
(LIST




USB

# USB

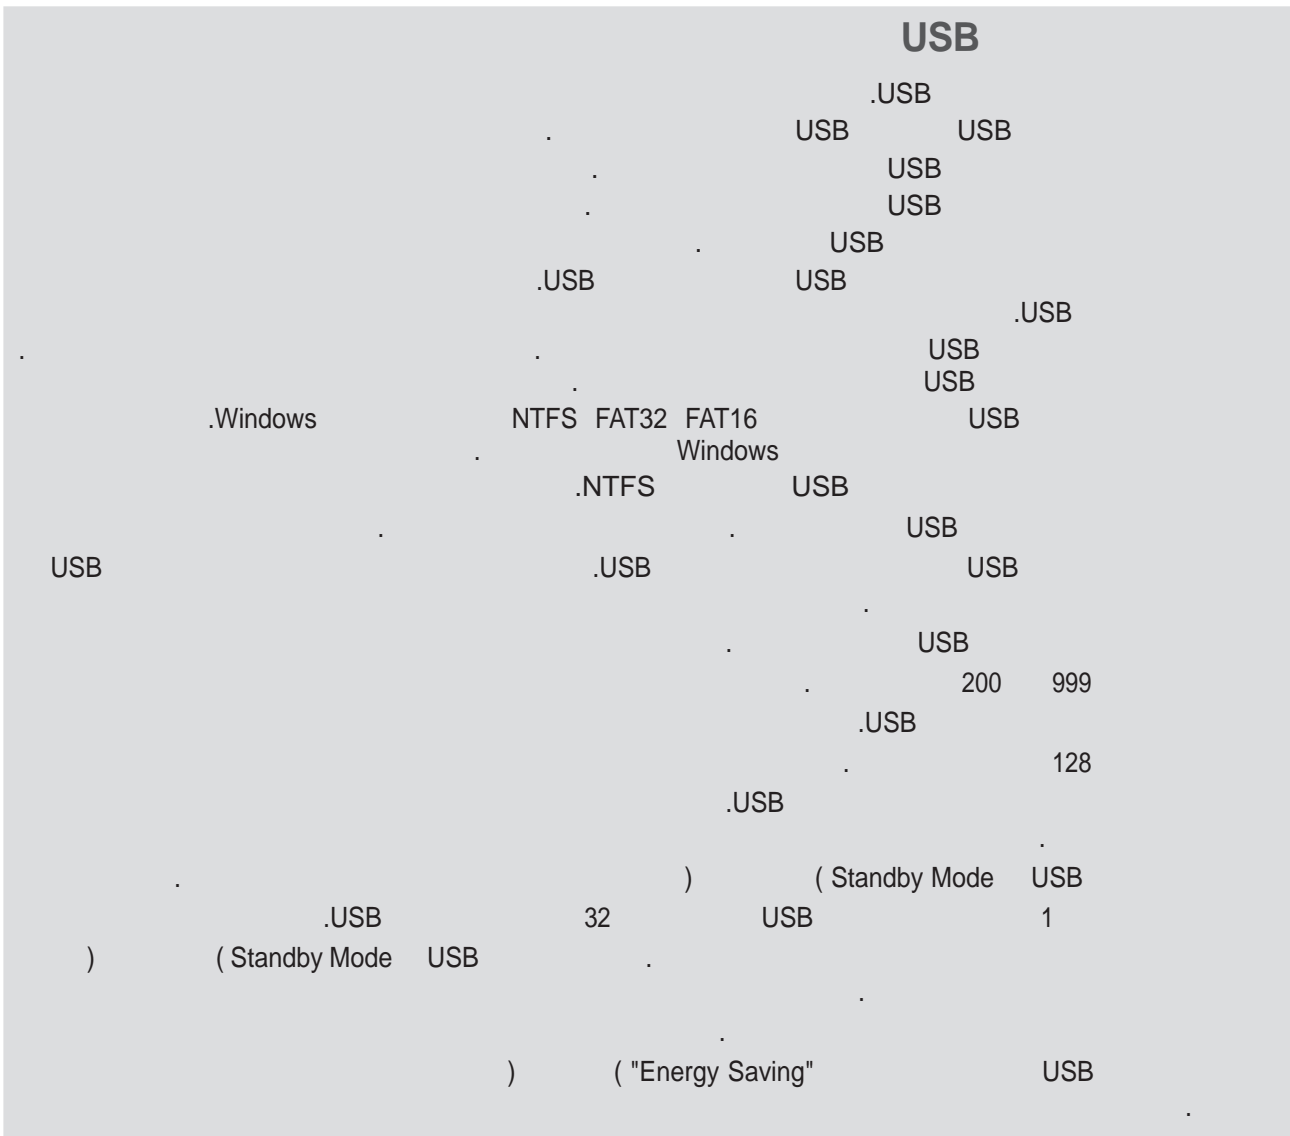 


USB

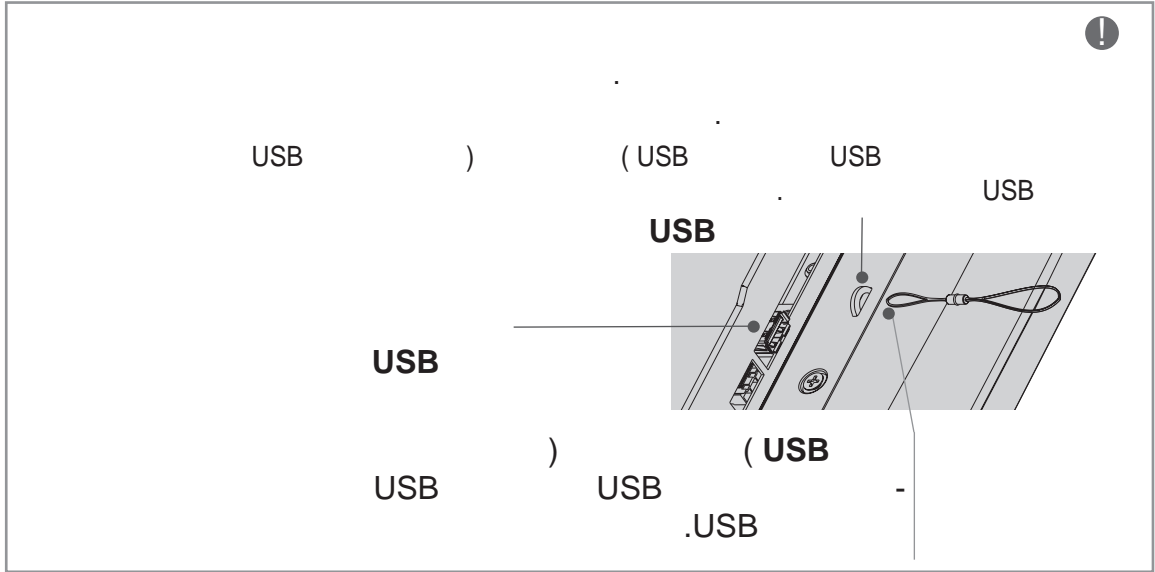 






.USB  
) ( On Screen Display  
( Photo List

(\*).JPEG(  
4800 x no limit.  
: 64 X 64  
jpeg  
•  
•  
•  
•  
.) SOF1 SOF0( JPEG  
.bitmap

 USB

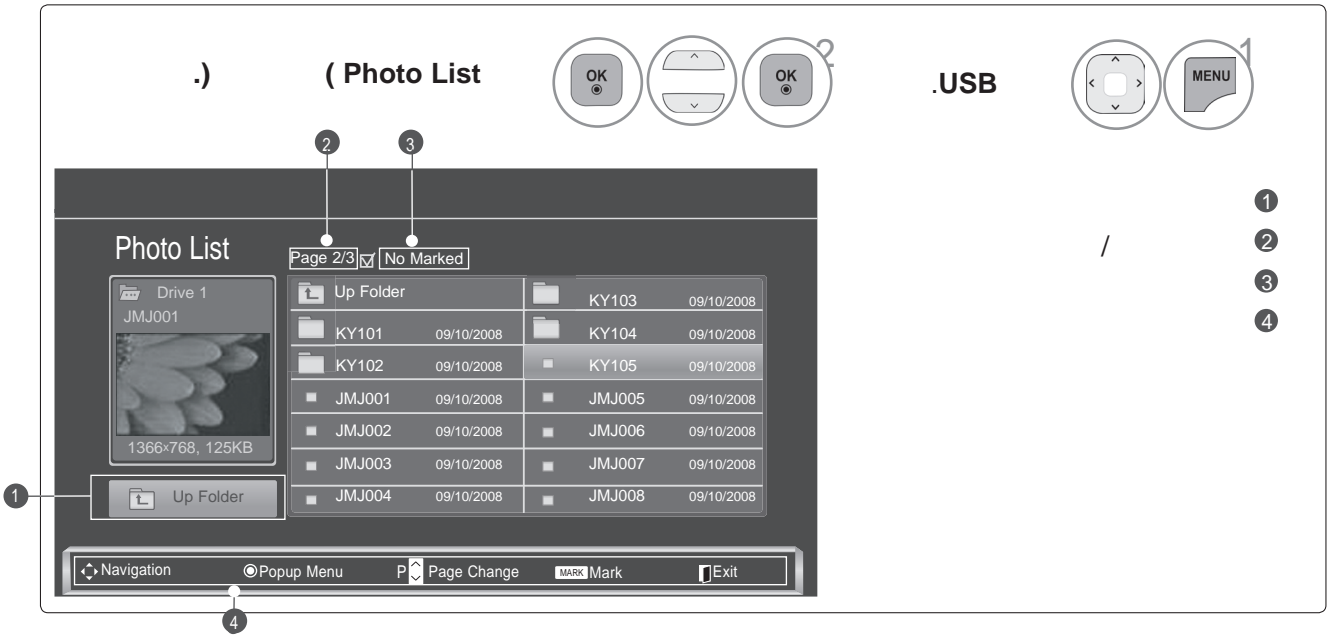



# USB

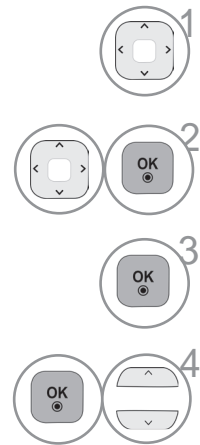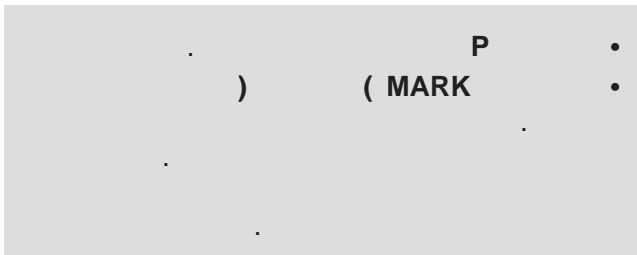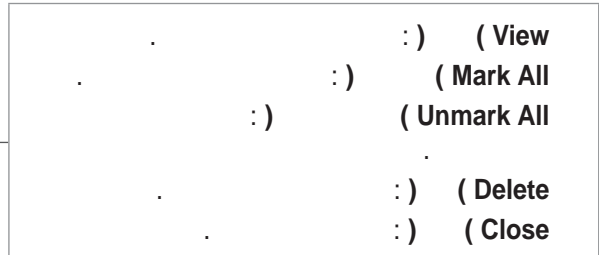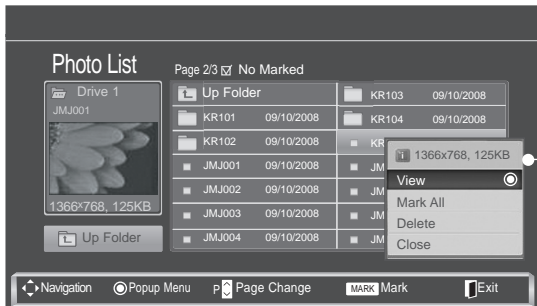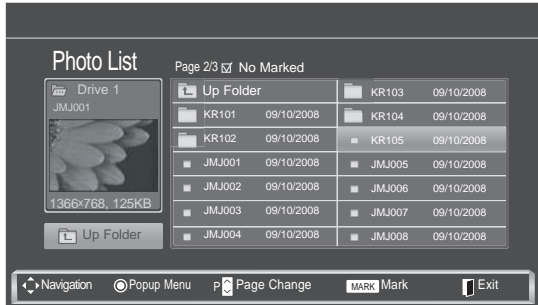     

) ( BACK


USB

   USB

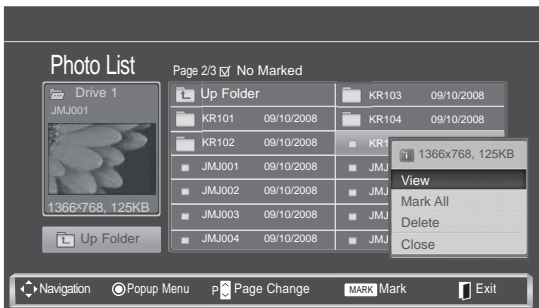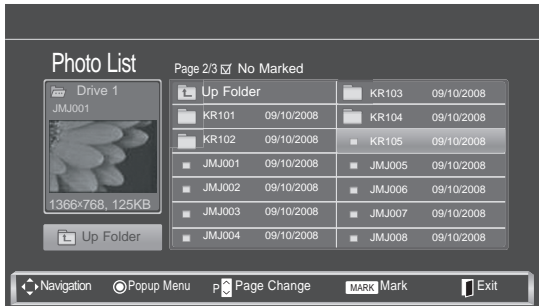



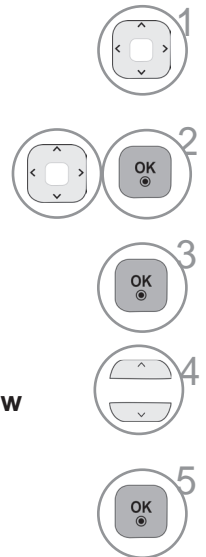

) ( EXIT


USB




) ( View

# USB

 
 
**BGM** ) ( Slideshow  
 ) ( )Rotate(  ) (    6  
 .) ( Hide ) ( Delete




:) ( Slideshow  
 .) ( Option  
 ) ( Options ) ( BGM :)  
 ( BGM :)  
 .) ( Rotate(  )  
 360 °270 °180 °90  
 .) ( Delete  
 .) ( Hide  
 .) ( OK

  USB





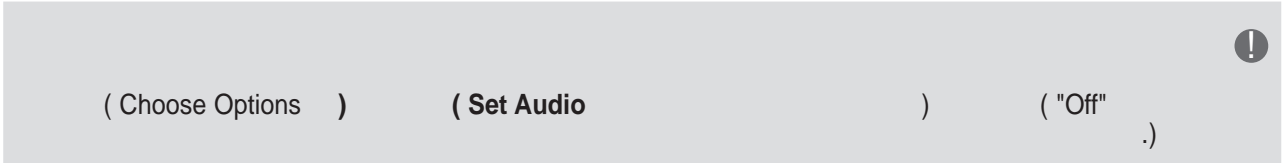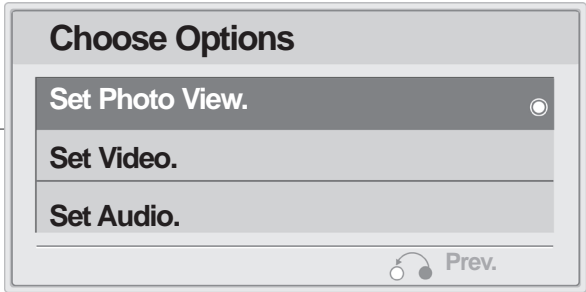

USB

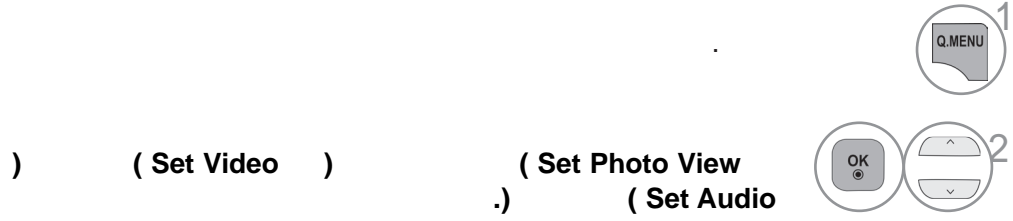 


  .) (Set Photo View  
( Music Folder  
( BGM )

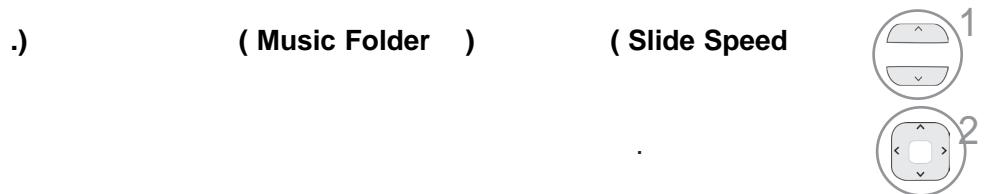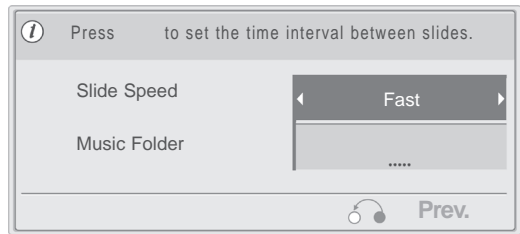

# USB

 .) ( Set Video

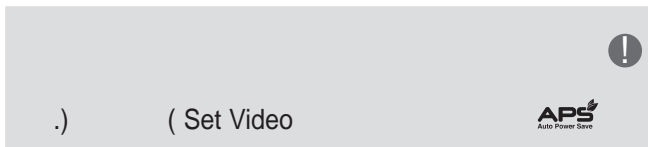


**Set Video.**

- Picture Mode ◀ Vivid ▶
- Contrast 100
- Brightness 50
- Sharpness 70
- Colour 70
- Tint 0
- Colour Temperature 0
- Noise Reduction Off
- Picture Reset

Prev.

 (58 55 53 (.



USB

.) ( Set Audio

**Set Audio.**

- Sound Mode ◀ Cinema ▶
- Auto Volume Off
- Clear Voice II Off
- Balance 0

Prev.

)

( Auto Volume )  
.) ( Balance )II

( Sound Mode )  
( Clear Voice II )



(66 62 (.

























































































































