



LG

Life's Good

PLASMA TV OWNER'S MANUAL

PLASMA TV MODELS

42PJ2*** **50PJ6*****
50PJ2*** **50PK5*****
42PJ3*** **60PK5*****
50PJ3***
42PJ5***
50PJ5***
42PJ6***

Please read this manual carefully before operating your TV.

Retain it for future reference.

Record the model number and serial number of the TV.

Refer to the label on the back cover and quote this information.

To your dealer when requiring any service.



HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

CONTENTS

PREPARATION

PLASMA TV Models : 42PJ5***, 42/50PJ3***,
42/50PJ6***, 42/50PJ2***, 50/60PK5***, A-1

EXTERNAL EQUIPMENT SETUP

Antenna Connection.....	1
Connectiing With a Component cable	2
Connecting with an HDMI cable	3
Connecting with an HDMI to DVI cable	4
USB setup.....	4
Connecting with a RCA cable	5
Connecting with a RF Cable	6
External Stereo Setup.....	6
Connecting with a D-sub 15 pin cable.....	7
Supported Display Resolution.....	8
Screen Setup for PC mode.....	9

WATCHING TV / PROGRAMME CONTROL

Turning on the TV	13
Initializing Setup	13
Programme Selection.....	13
Volume Adjustment	13
Quick Menu	14
On Screen Menus Selection and Adjustment... ..	15
Auto Programme Tuning	16
Manual Programme Tuning.....	17
Programme Edit	19
Selecting the Programme List.....	21
Favourite Programme Setup.....	22
Input List.....	23
Input Label	24
SIMPLINK.....	25
AV Mode.....	28
Initializing (Reset to Original Factory Settings) ...	29
Key Lock.....	30

TO USE A USB DEVICE

When Connecting a USB Device.....	31
Photo List	33
Music List	39
Movie List.....	42
DivX Registration Code.....	48
Deactivation.....	49

PICTURE CONTROL

Picture Size (Aspect Ratio) Control	50
Energy Saving.....	52
Preset Picture Settings	53
Manual Picture Adjustment	54
Picture Improvement Technology.....	55
Advanced - Black(Darkness) Level.....	56
Advanced - Film Mode	57
Picture Reset.....	58
Image Sticking Minimization (ISM) Method	59
Demo Mode.....	60
Mode Setting	61

SOUND & LANGUAGE CONTROL

Auto Volume Leveler	62
Clear Voice II.....	63
Preset Sound Settings-Sound Mode	64
Sound Setting Adjustment -User Mode	65
Infinite Sound	65
Balance	66
TV Speakers On/ Off Setup	67
Audio Reset.....	68
I/II	
Stereo/Dual Reception (In Analogue Mode Only)...	69
NICAM Reception	70
Speaker Sound Output Selection	70
On-Screen Menu Language Selection.....	71

CONTENTS

TIME SETTING

Clock Setup	72
Auto On/Off Time Setting	73
Sleep Timer Setting.....	74

TELETEXT

Switch On/Off	75
SIMPLE Text.....	75
TOP Text.....	75
FASTEXT	76
Special Teletext Functions	76

APPENDIX

Troubleshooting.....	77
Maintenance.....	79
Product Specifications	80
IR Codes	82
External Control Device Setup.....	83


PREPARATION

PLASMA TV Models : 42PJ5*, 42/50PJ3***, 42/50PJ6***, 42/50PJ2***, 50/60PK5***.**


ACCESSORIES

Ensure that the following accessories are included with your TV. If an accessory is missing, please contact the dealer where you purchased the TV.


Here shown may differ from your TV.

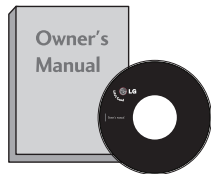


Owner's Manual

 


Batteries (AAA)

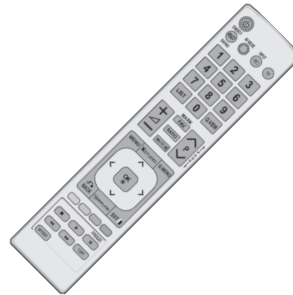


Remote Control

 

Power Cord

 

 M5X14 x 3 M4X28 x 4
Bolts for stand assembly
(Except for 60PK5***)



Protection Cover




Cable Holder

Wall Mounting Bracket (Separate purchase)

AW-50PG60MS

AW-60PG60MS
(Only 60PK5***)

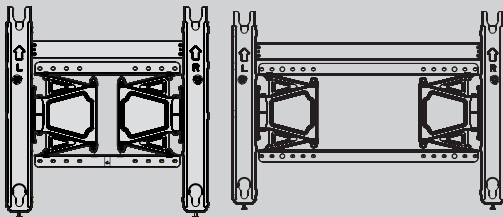

This item is not included for all models.



Polishing Cloth

Polishing cloth for use on the screen.

* Lightly wipe any stains or fingerprints on the surface of the TV with the polishing cloth.

Do not use excessive force. This may cause scratching or discolouration.

